


Wicker Chaise Lounge Chair

Installation Instructions

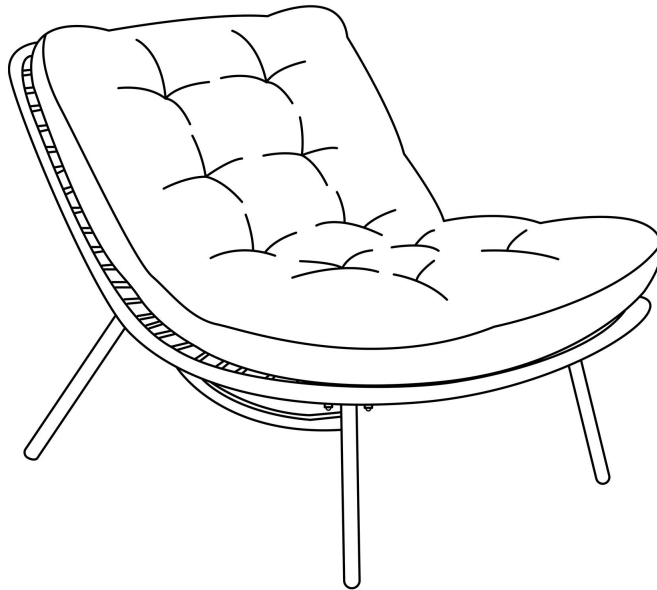


Scan to get a quick assembly guide,
dedicated support, plus member
access to exclusive perks
& extended warranty.

Parts List							
Accessories							
	A	1	B	1	C-left	C-right	D
Tools					 		
	M6*30mm	4	M8*20mm	8	Wrench		Hexwrench
Tips: Confirm all components are present before installation							

Step 1: Assemble Seat Frame

Attach seat parts (A & B) with 4 screws (M6*30 mm).

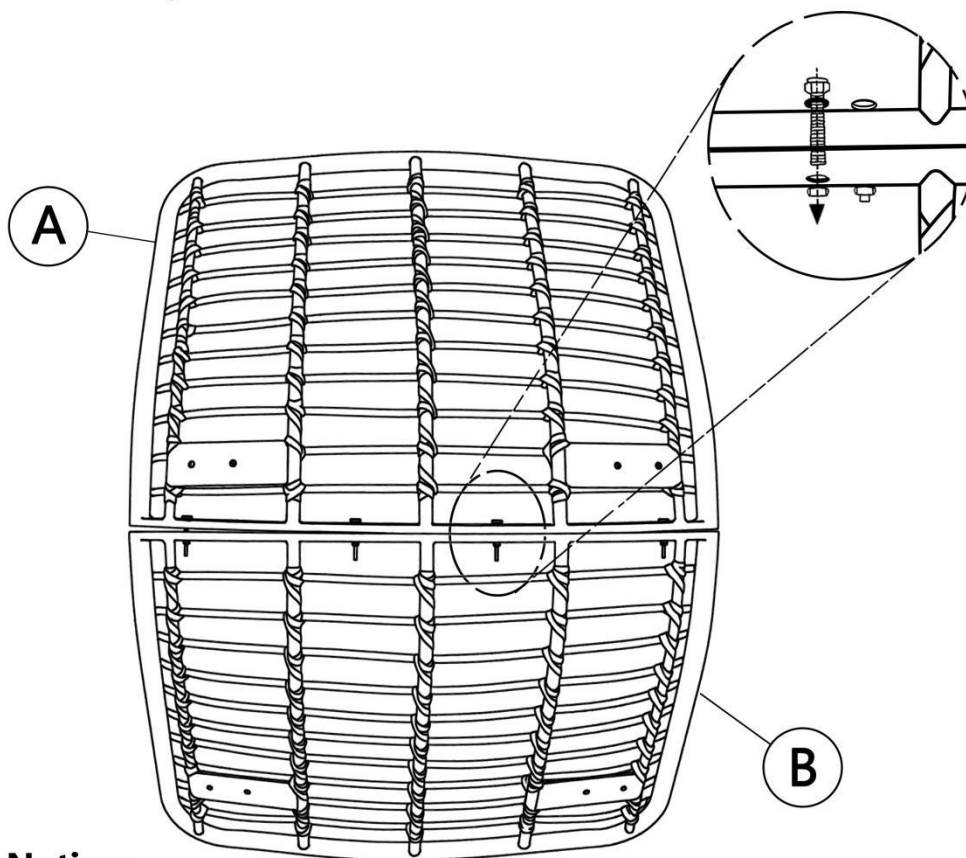


Notice:

Make sure the screws are fully tightened.

Step 2: Distinguish Accessories


Position parts (C) upright on the ground.

Make sure its left-right placement is correct.

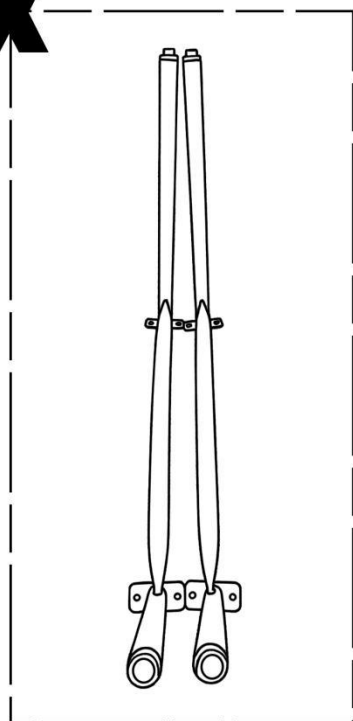

Wrong version

The chair legs are facing inward

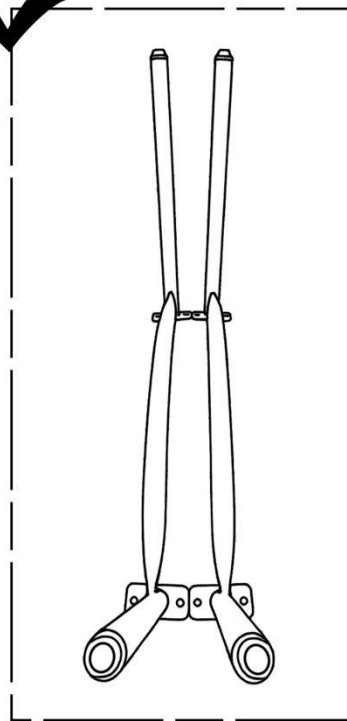


Correct version

The chair legs are facing outward

Step 3: Install Backrest & Supports



Secure parts (C) to the seat frame with 8 screws (M8*20 mm).

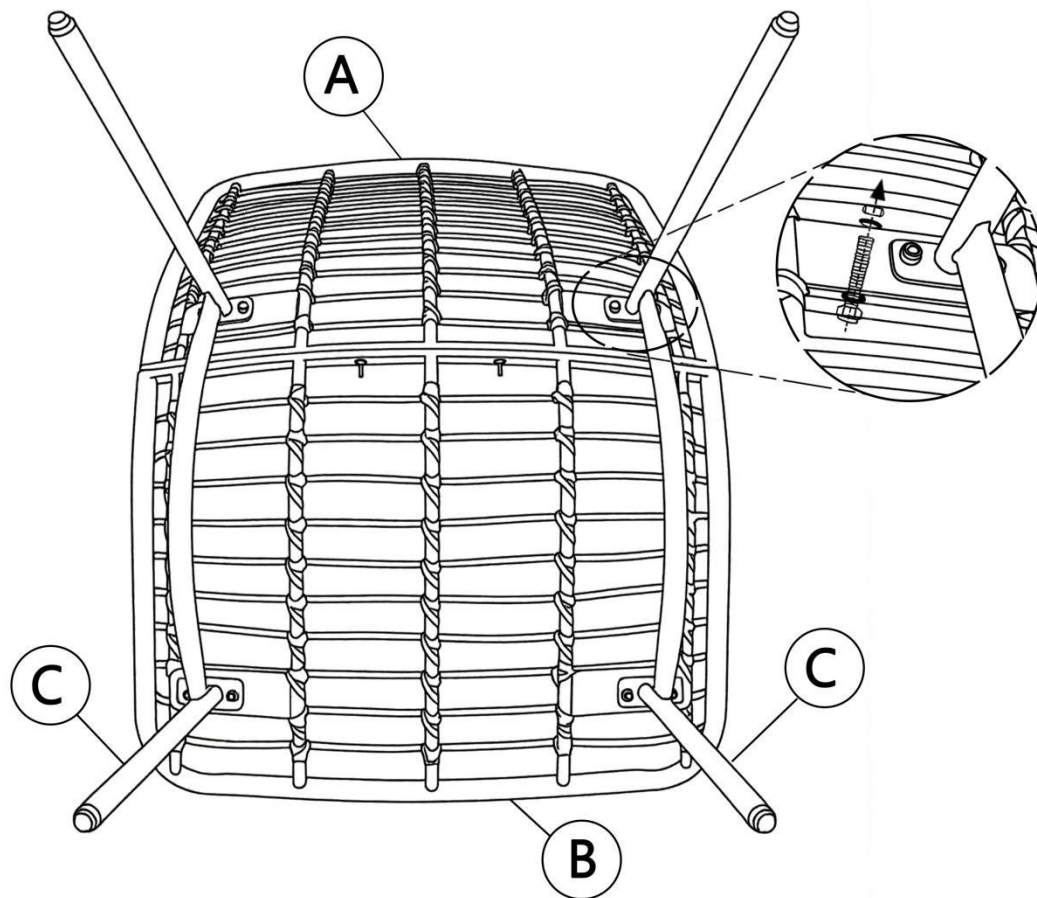

Step 4: Installation completed

Tighten all the screws.

Place accessory (D) on the chair.

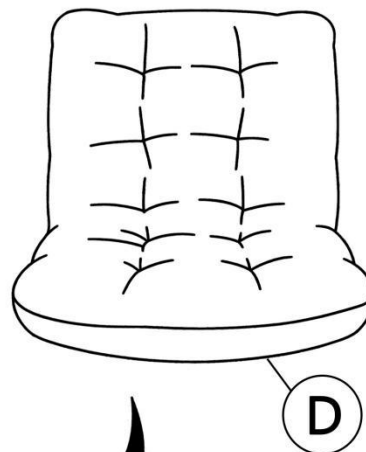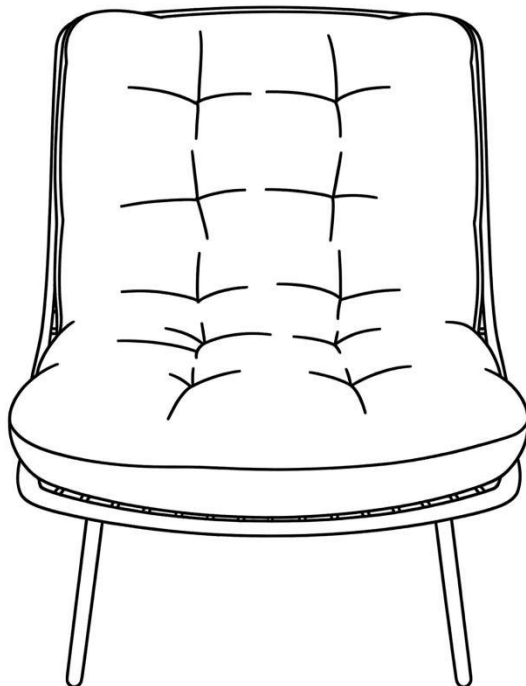

Wicker Chaise Lounge Chair



ONLINE SUPPORT

Please read the installation guide carefully before installation
If you have any questions during the installation process
you can contact us and we will provide you a detailed guidance

Online Support: outdoorservice@kannelfurniture.com