 


**As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully**

# Before You Start

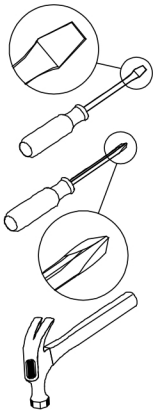

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

# Helpful Hints

 
## PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




# Board Identification


Not actual size

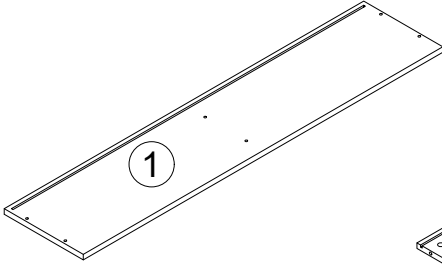


Middle Shelf Panel  
Qty:1

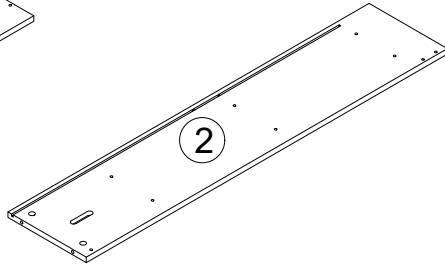 

 
Bottom Left Cabinet  
Left Side Panel  
Qty:1

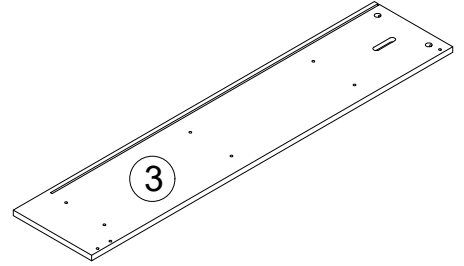

 
Bottom Left Cabinet  
Right Side Panel  
Qty:1

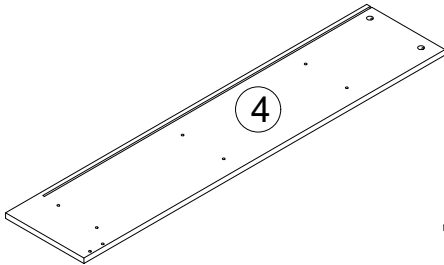

 
Bottom Right Cabinet  
Right Side Panel  
Qty:1

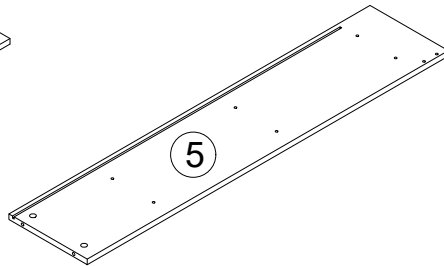

 
Bottom Right Cabinet  
Left Side Panel  
Qty:1

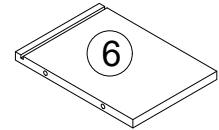


Bottom Cabinet Bottom Panel  
Qty:2

 


Bottom Cabinet Skirtboard  
Qty:2

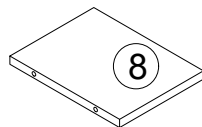 


Bottom Cabinet Fixed Shelf  
Qty:3

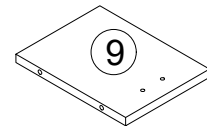 


Bottom Cabinet Fixed Shelf  
Qty:1

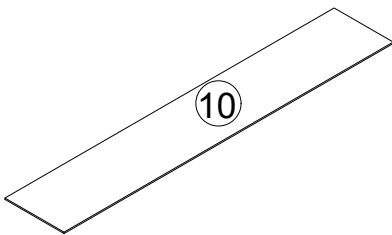 

Bottom Cabinet Back Panel  
Qty:2

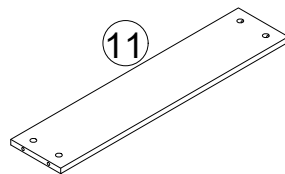 


Bottom Cabinet Connective Panel  
Qty:1

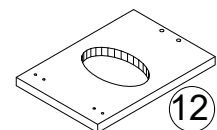 


Bottom Cabinet Door Panel  
Qty:1

# Board Identification

 
Not actual size

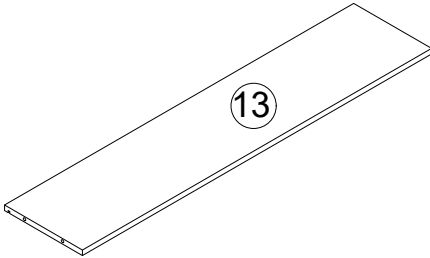


UP Cabinet Top panel  
Qty:1

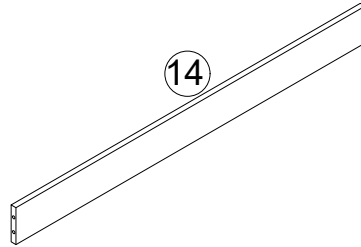 


UP Cabinet Back rail  
Qty:1

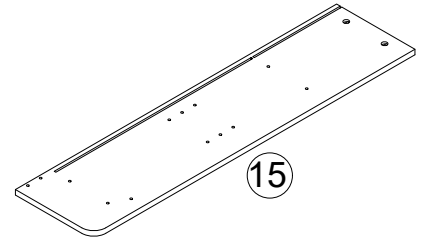 


UP Cabinet Left Side Panel  
Qty:1

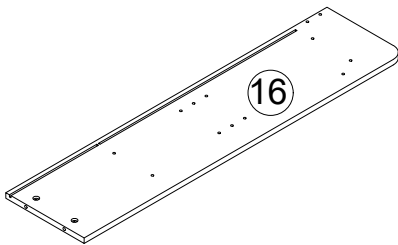 


UP Cabinet Right Side Panel  
Qty:1

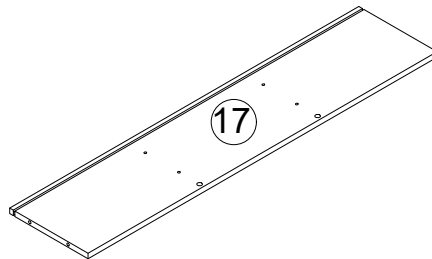 


UP Cabinet Fixed Shelf Panel  
Qty:1

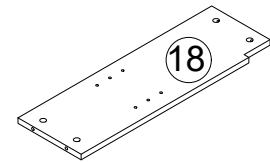 


UP Cabinet Left Partition Panel  
Qty:1

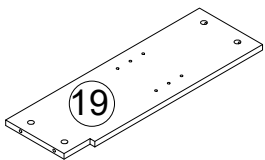 

 
UP Cabinet Right Partition Panel  
Qty:1

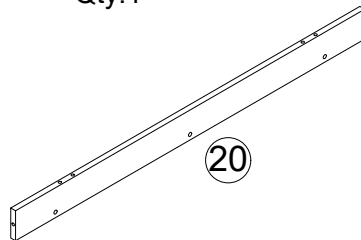


UP Cabinet Front rail  
Qty:1

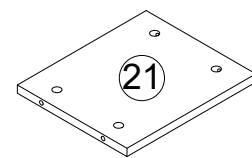 


UP Cabinet Support Panel  
Qty:1

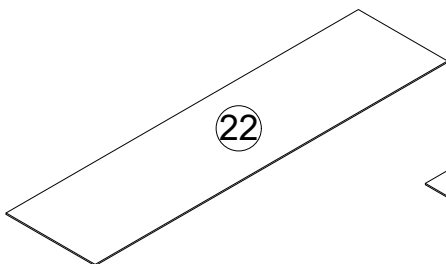 

UP Cabinet bottom Back Panel  
Qty:1

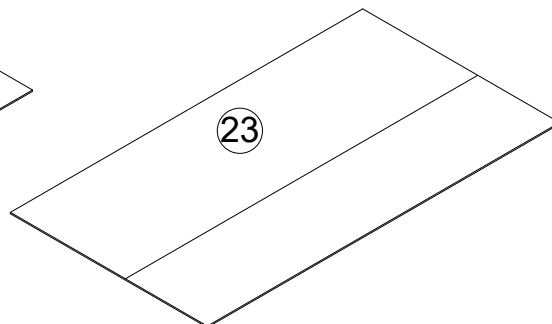 


UP Cabinet Up Back Panel  
Qty:1

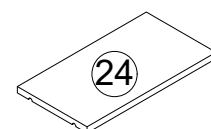 


UP Cabinet Adustable Panel  
Qty:3

# Board Identification

 
Not actual size

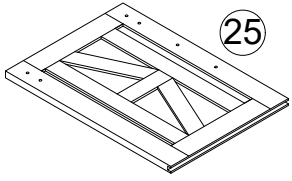

UP Cabinet Left Door  
Qty:1

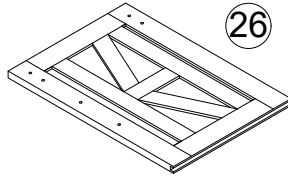 


UP Cabinet Right Door  
Qty:1

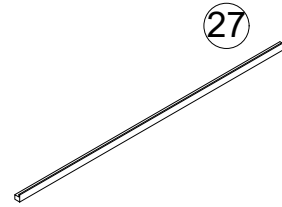 


Metal Sliding Rail  
Qty:1


# Part List

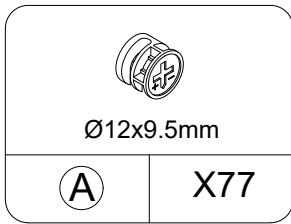 


CAM LOCK  
spare: 3

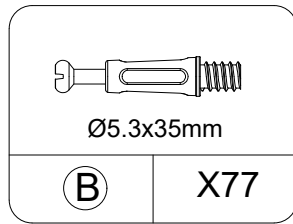 


SMALL CAM LOCK  
spare: 3

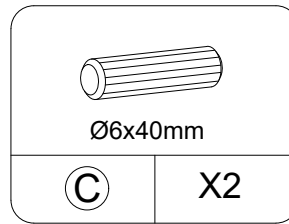 


WOOD DOWEL

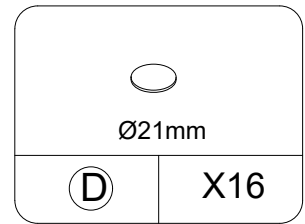 


COVER  
Spare:2

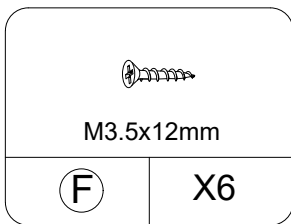 


SCREW

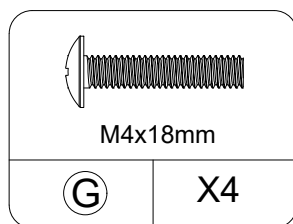 


SCREW

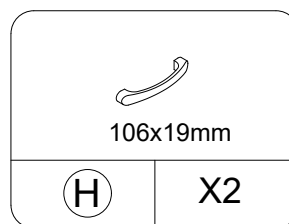 


HANDLE

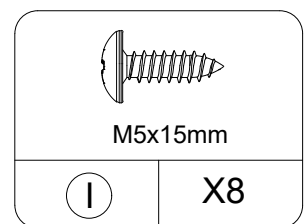 


SCREW

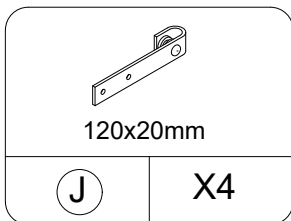 


METAL

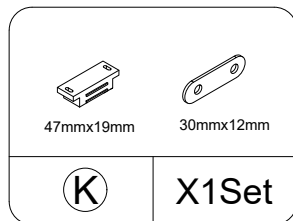 


MAGNET AND  
METAL PLATE

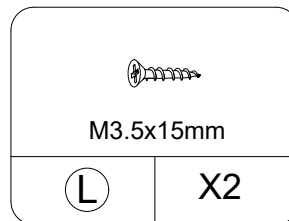 


SCREW

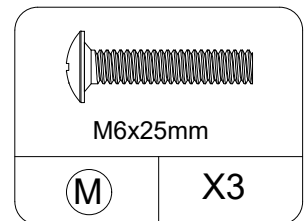 


BOLT

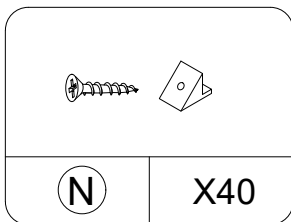 


BRACKET  
spare:4

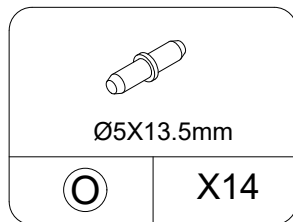 


SHELF HOLDER

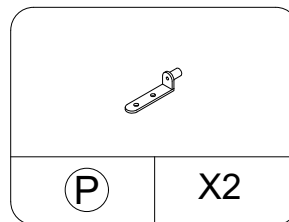 


REVOLUTION AXLE

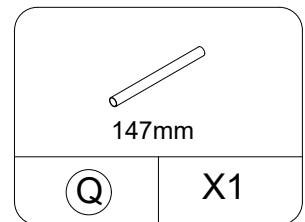 

METAL

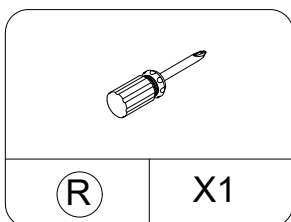 

SCREWDRIVERL

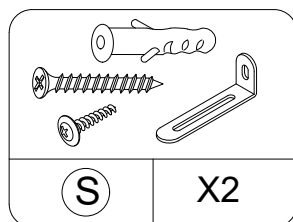 

TIPPING RESTRAINT  
HARDWARE KIT


# Part List
 
# Part List


## Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it .


1

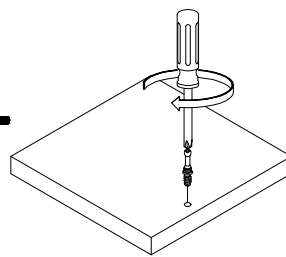

2

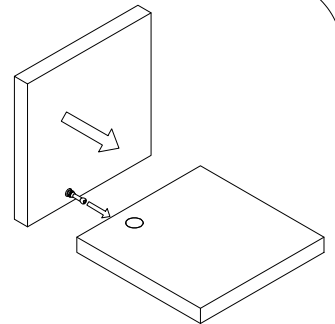 


3

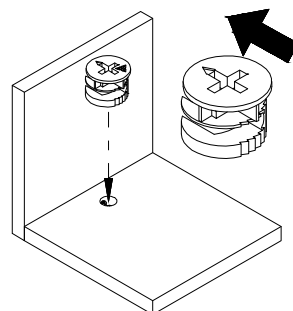 


The opening must point toward the edge of board

 4






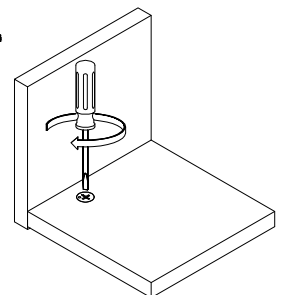


# Board Identification












 
Not actual size

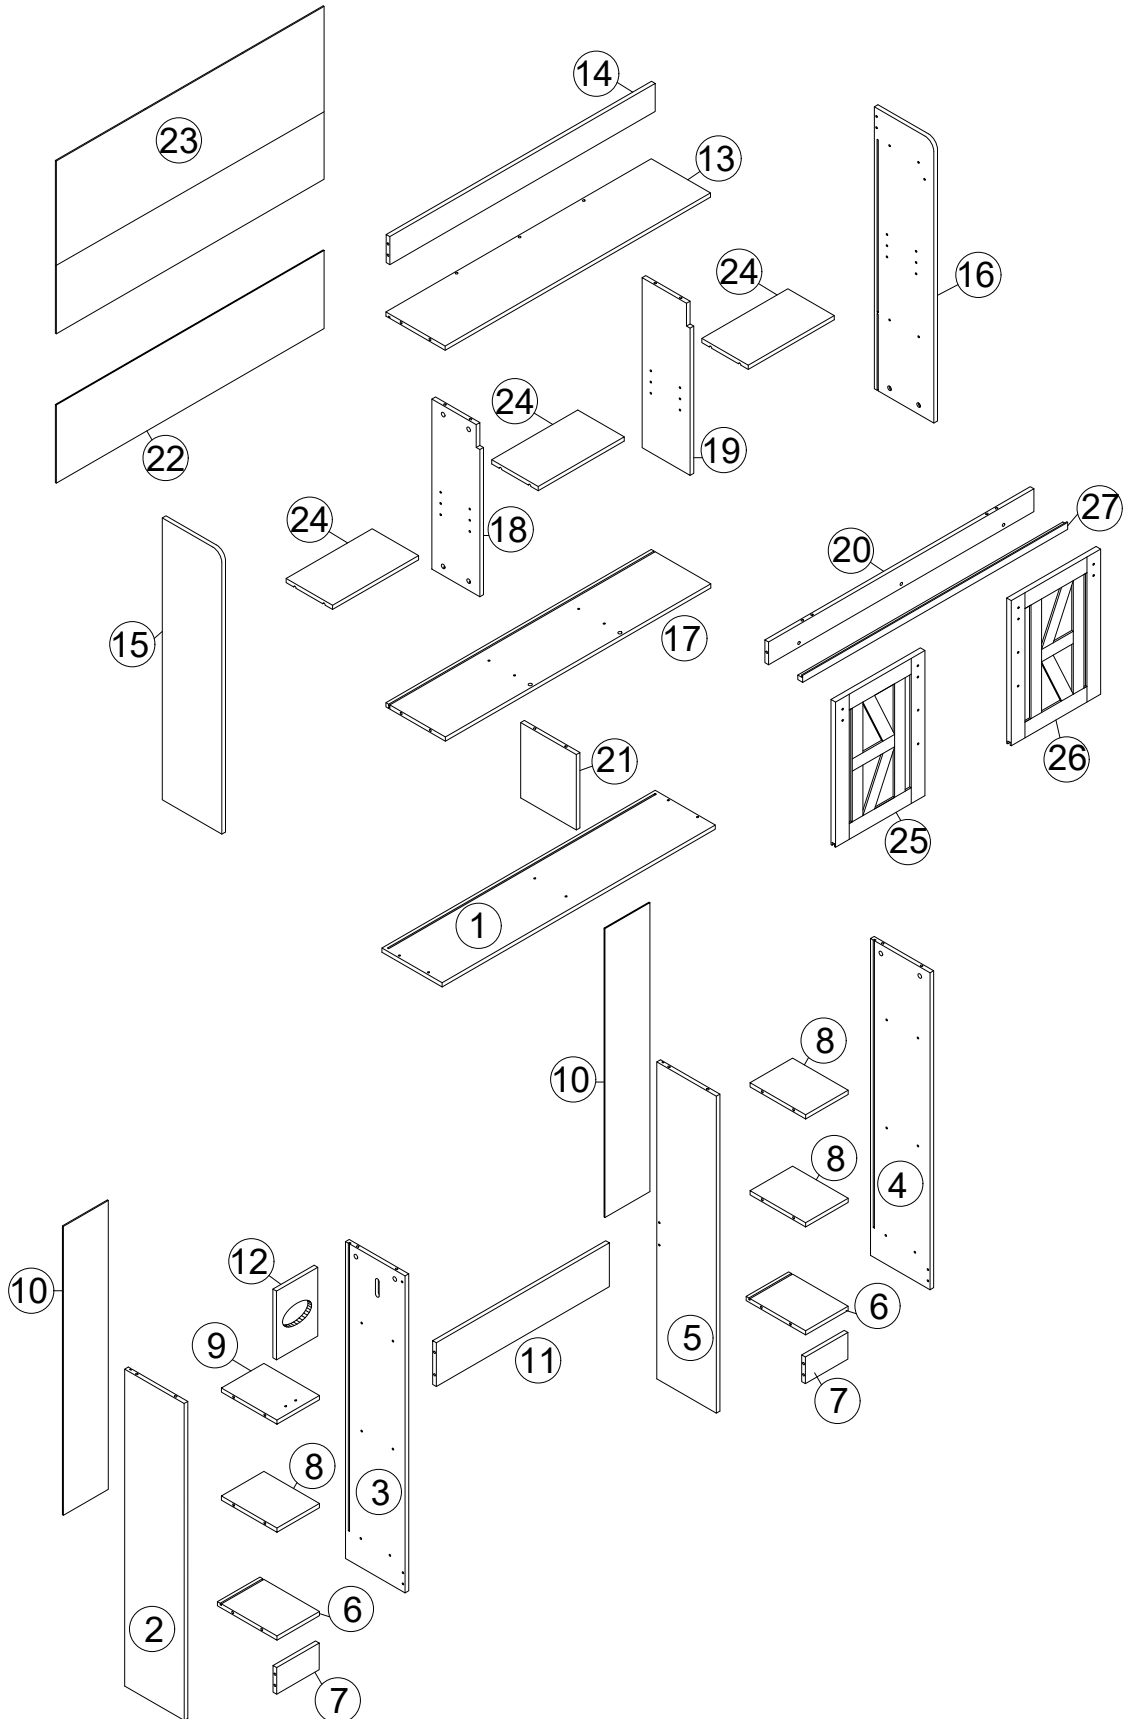









# STEP 1

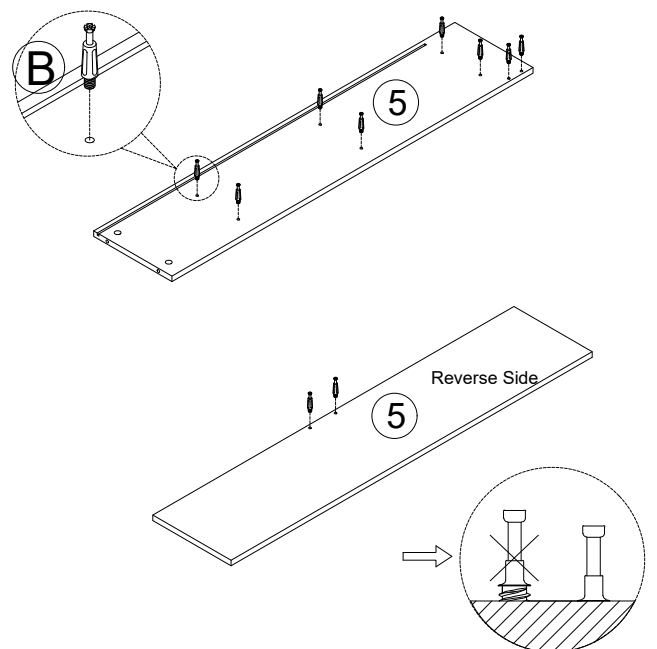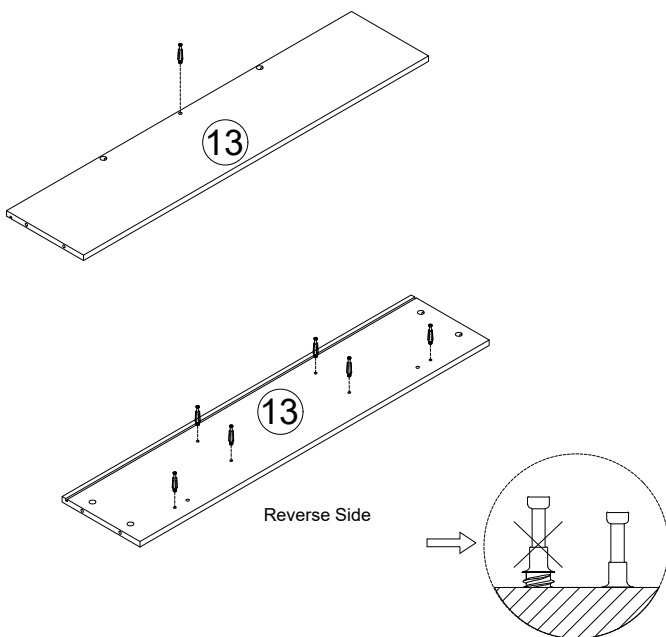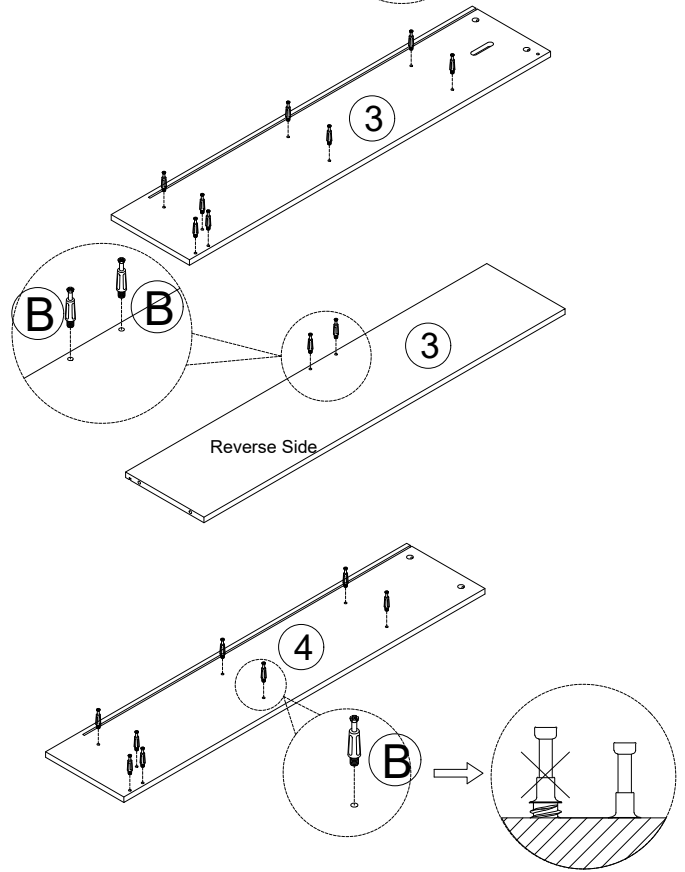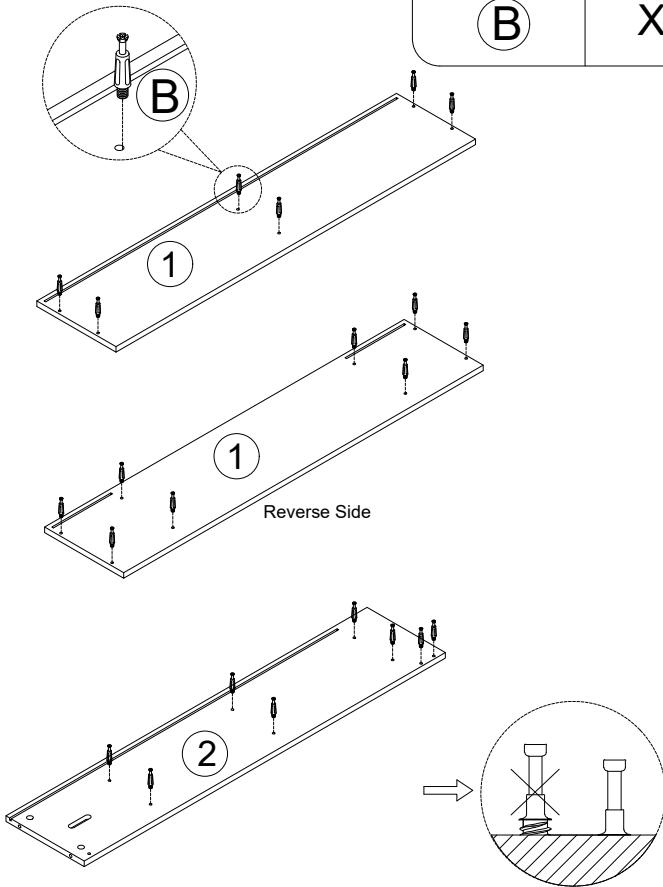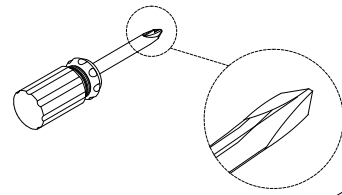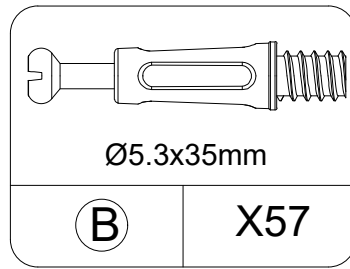      







# STEP 2

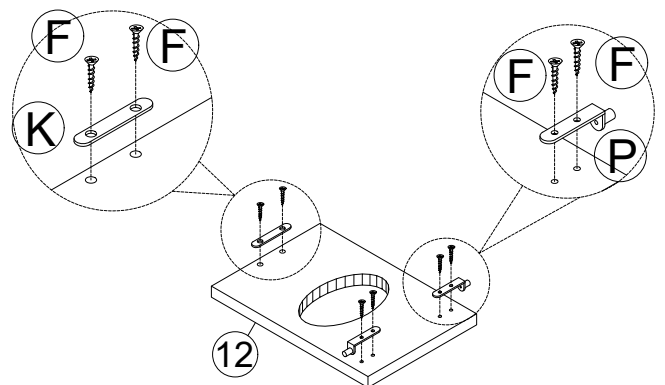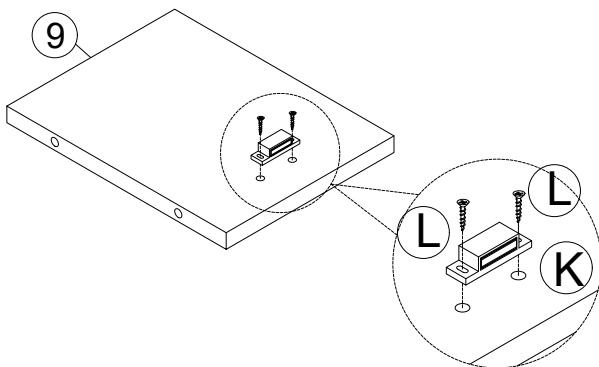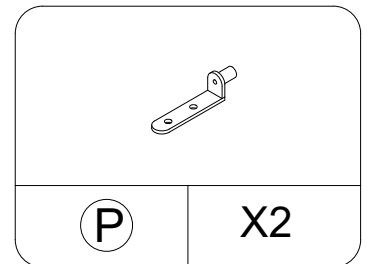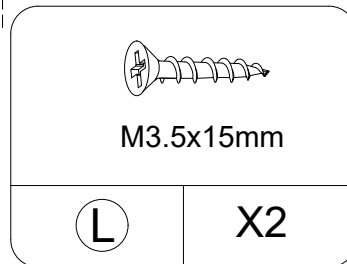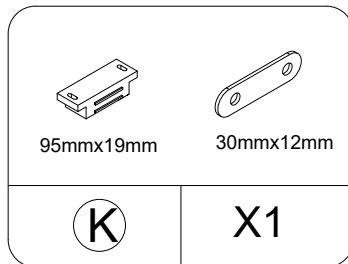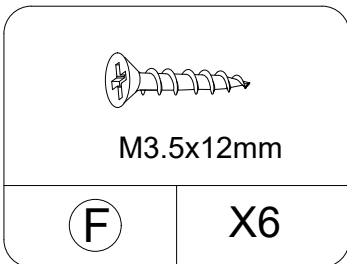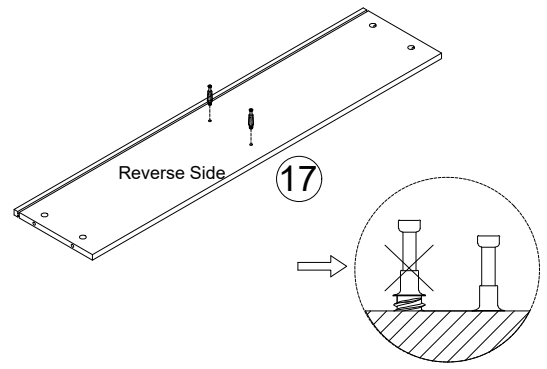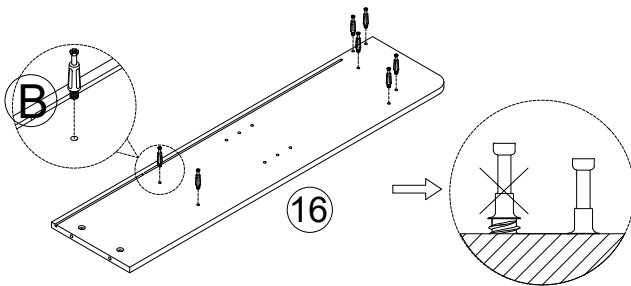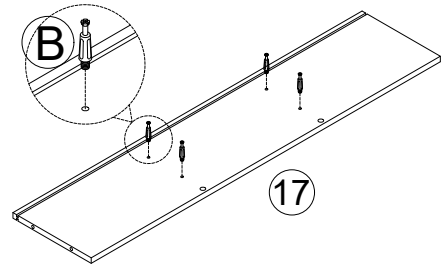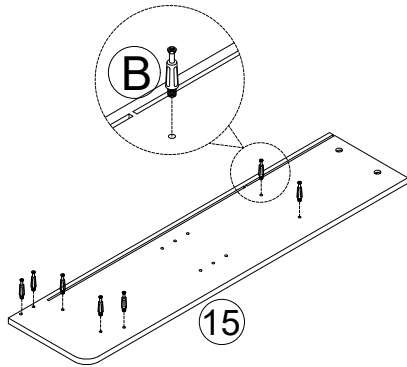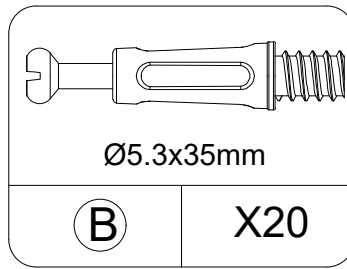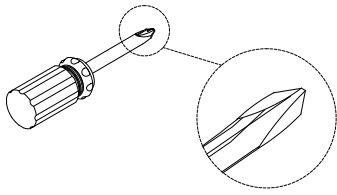            

# STEP 3

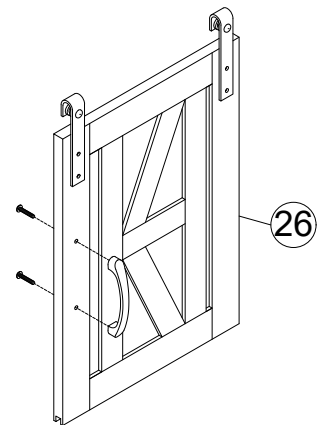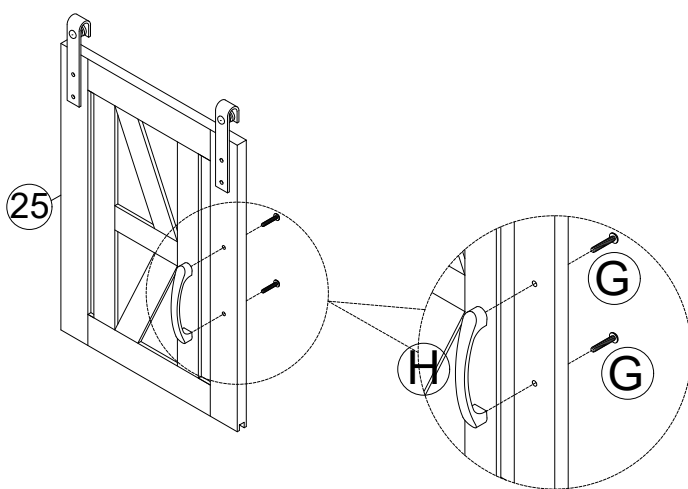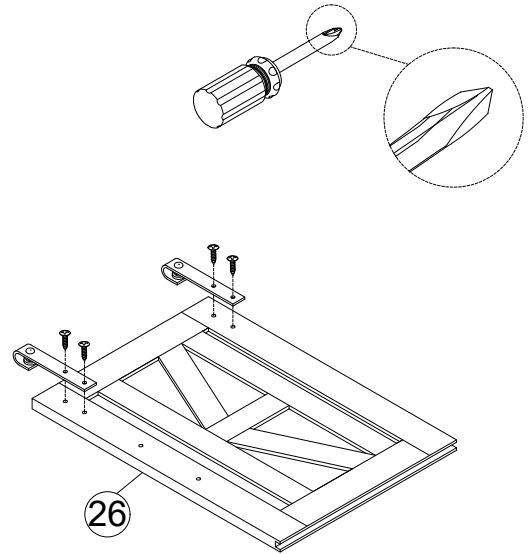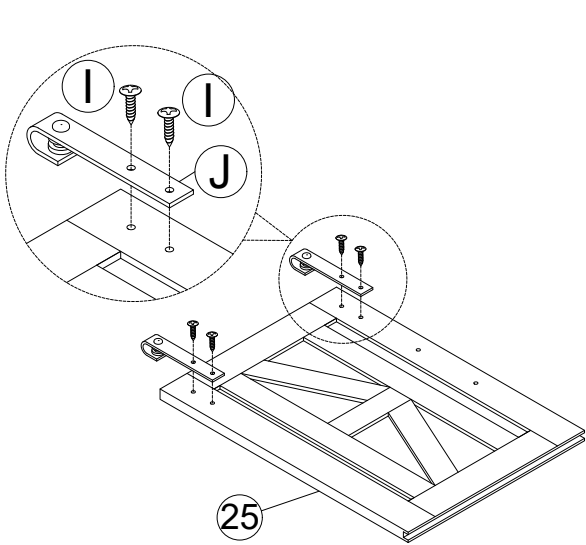    
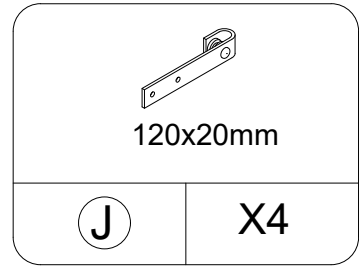 
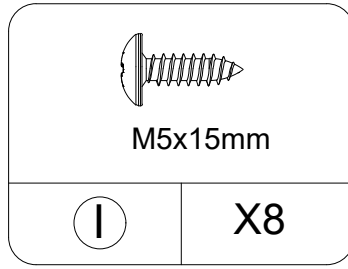 
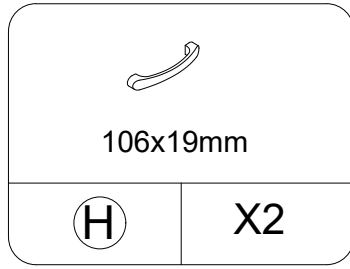 
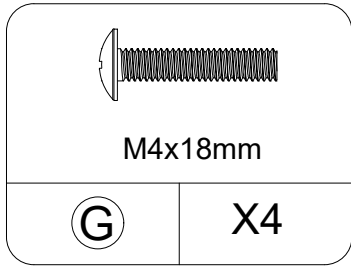 


# STEP 4

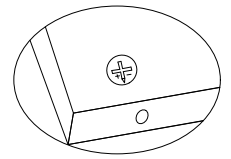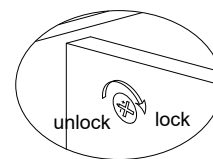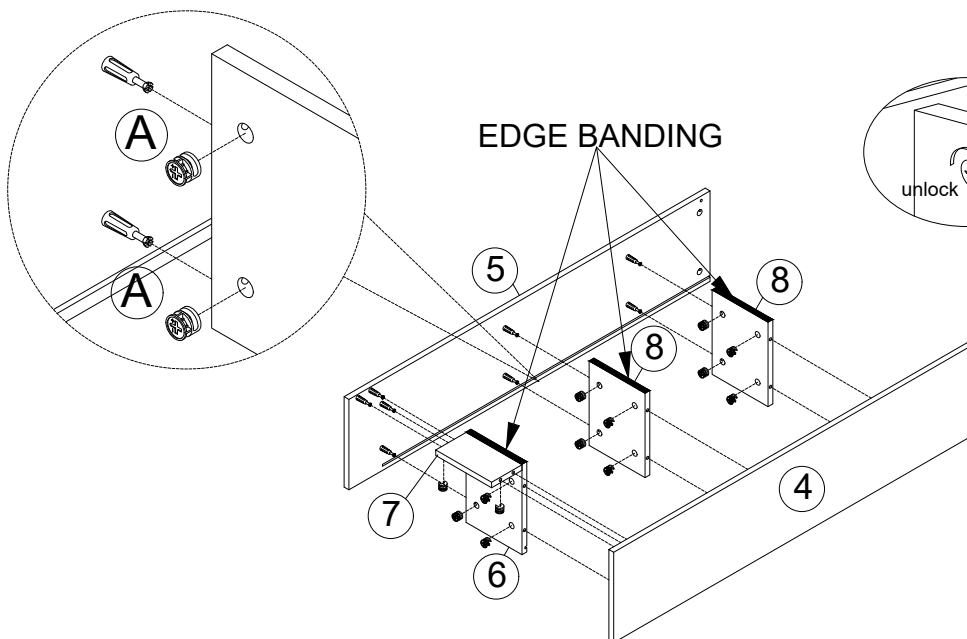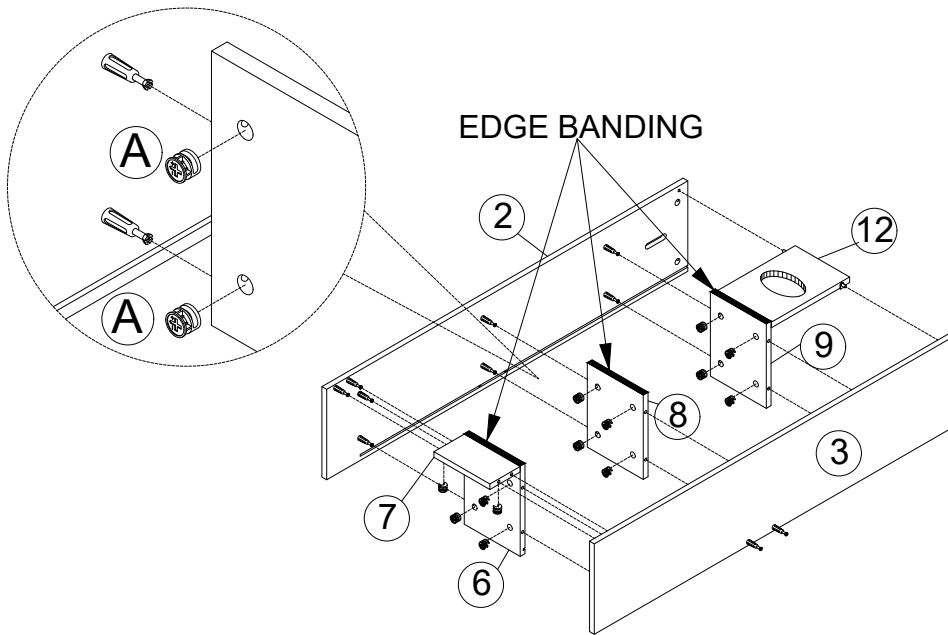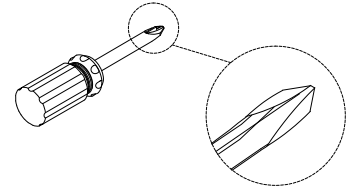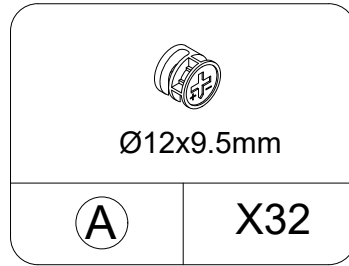      









Proper Orientation of CAM LOCK

# STEP 5

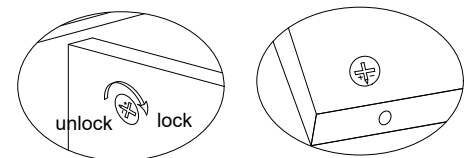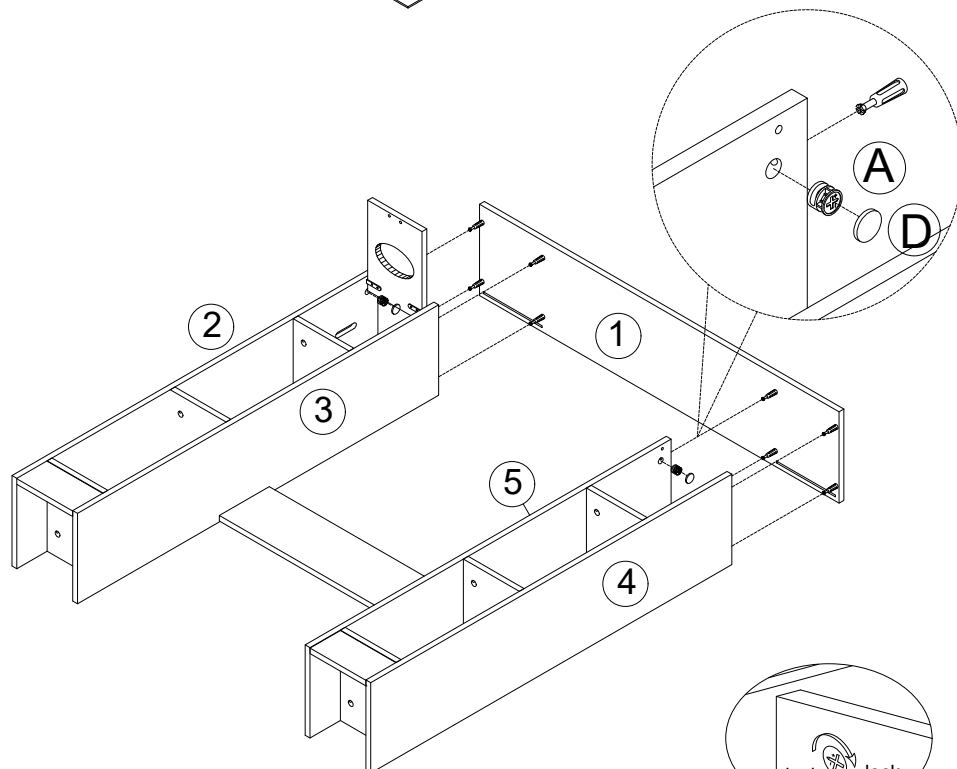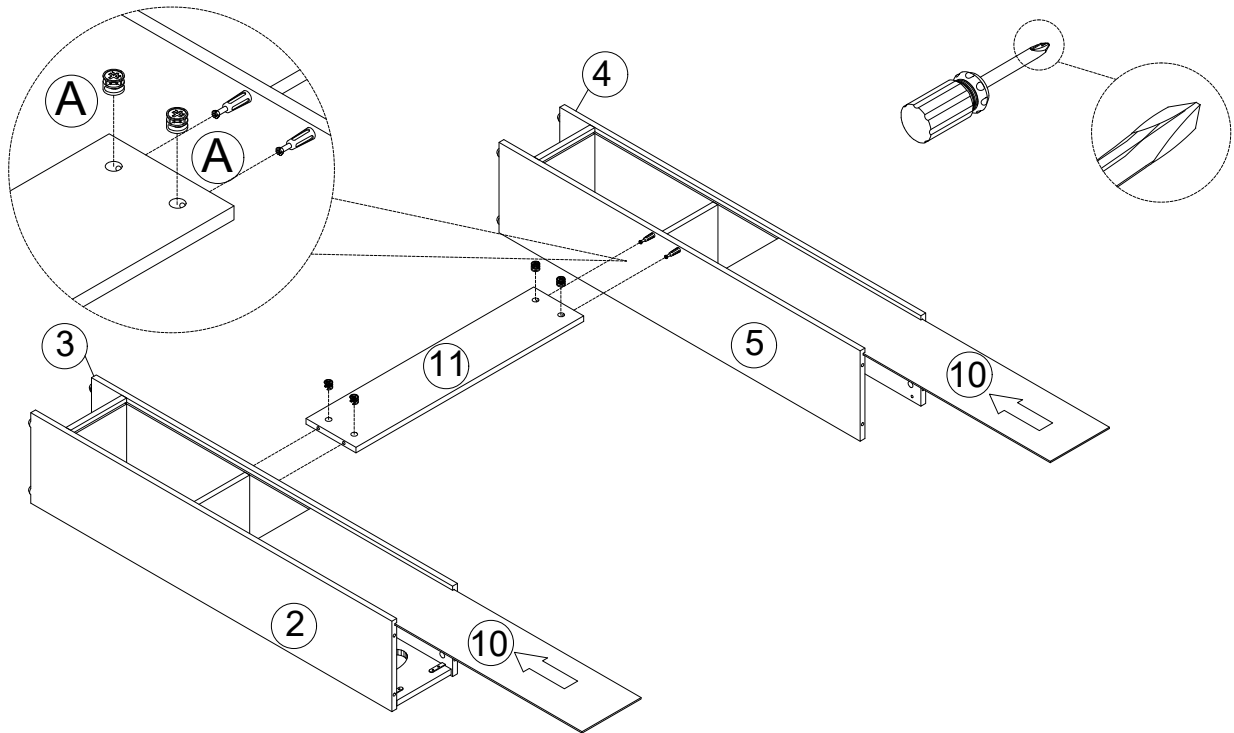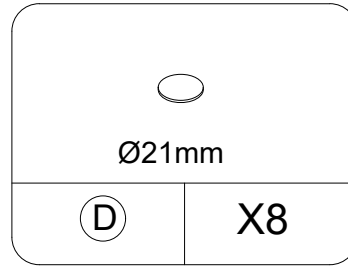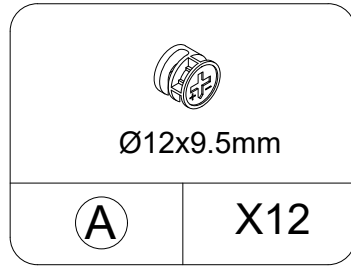     










Proper Orientation of CAM LOCK

# STEP 6

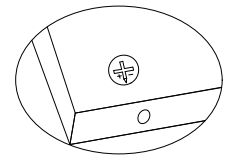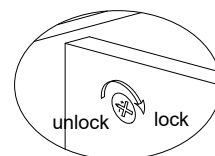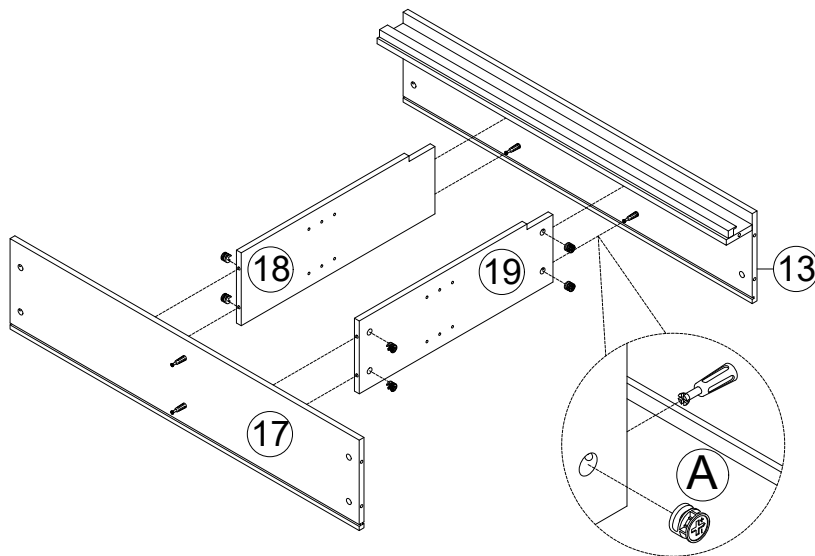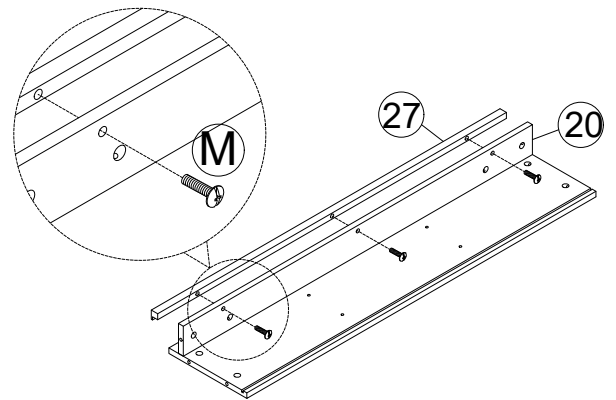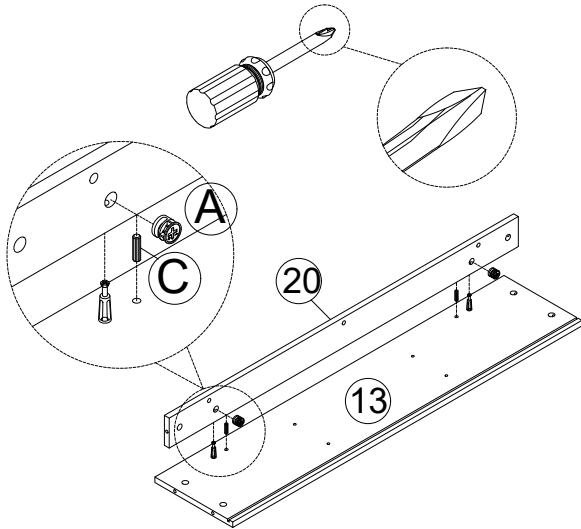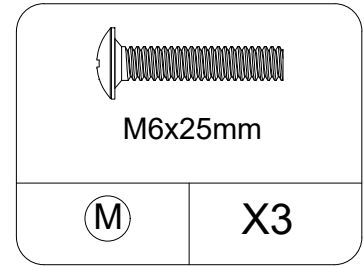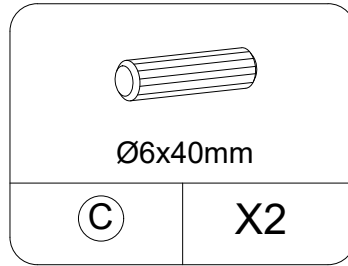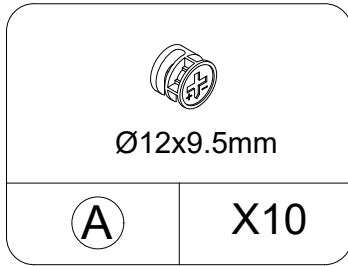        






Proper Orientation of CAM LOCK

# STEP 7

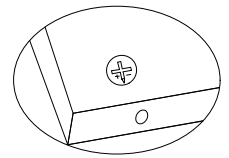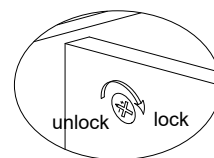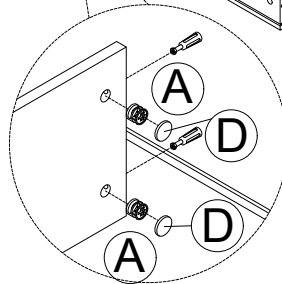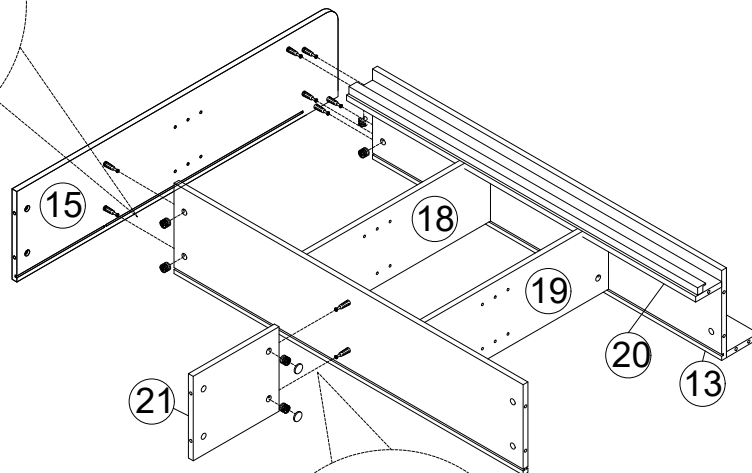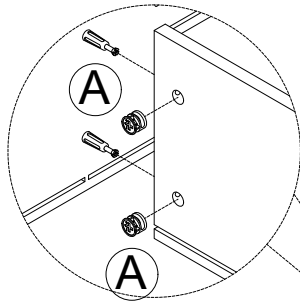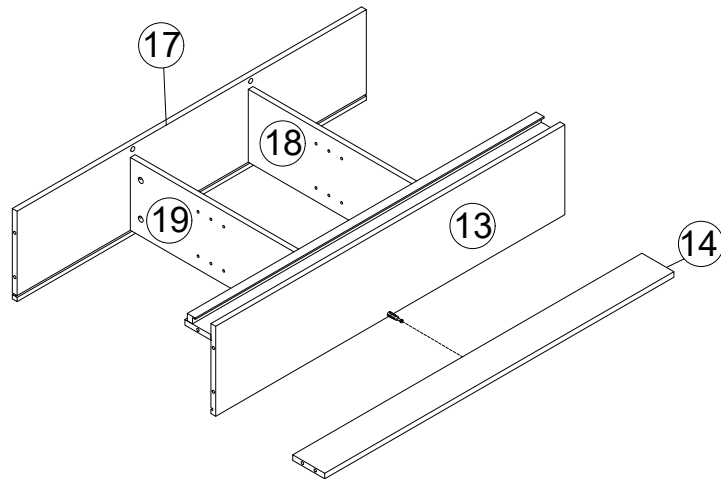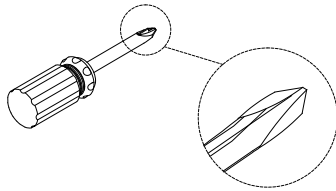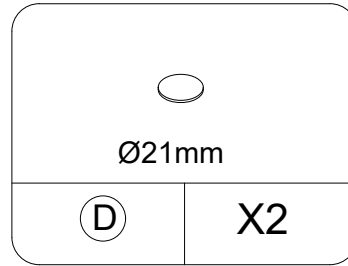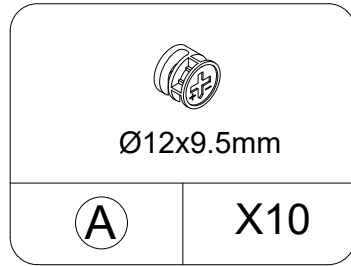         








Proper Orientation of CAM LOCK

# STEP 8

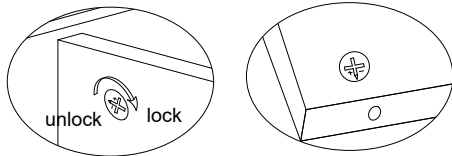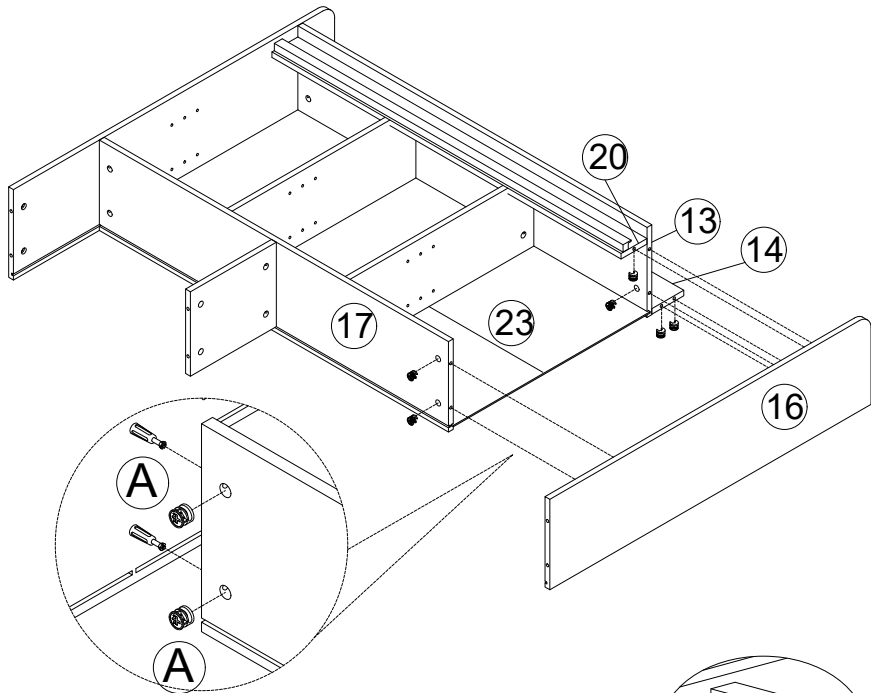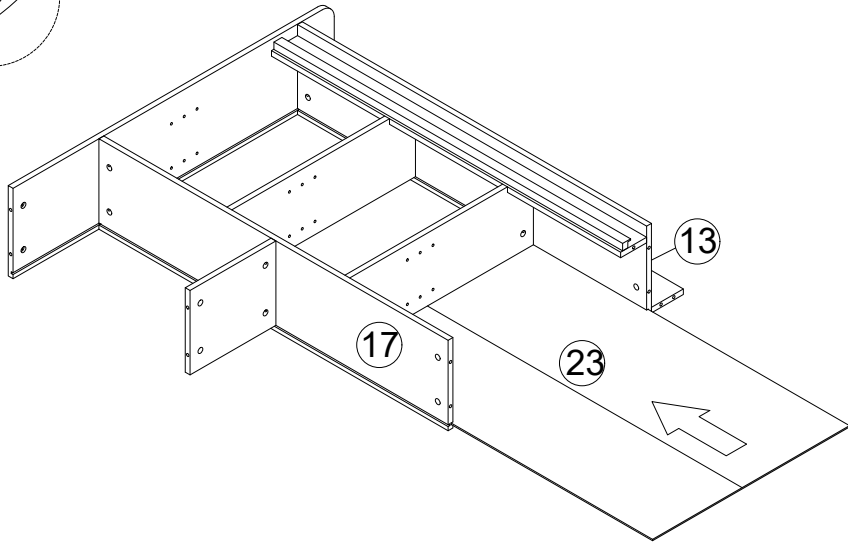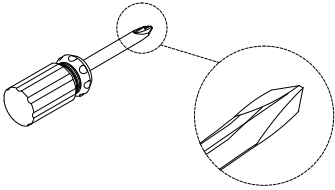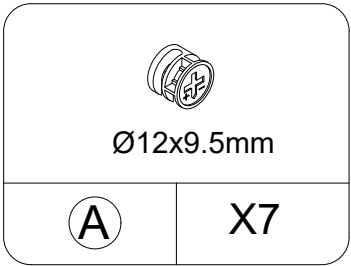     







Proper Orientation of CAM LOCK

# STEP 9

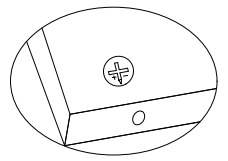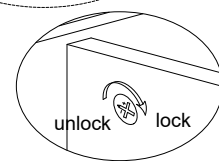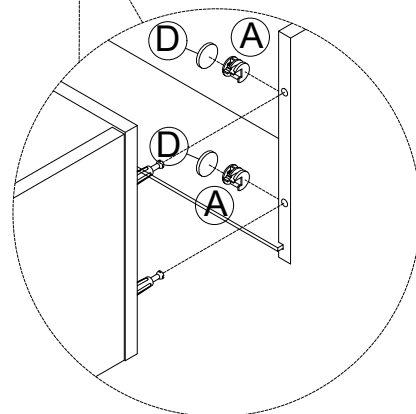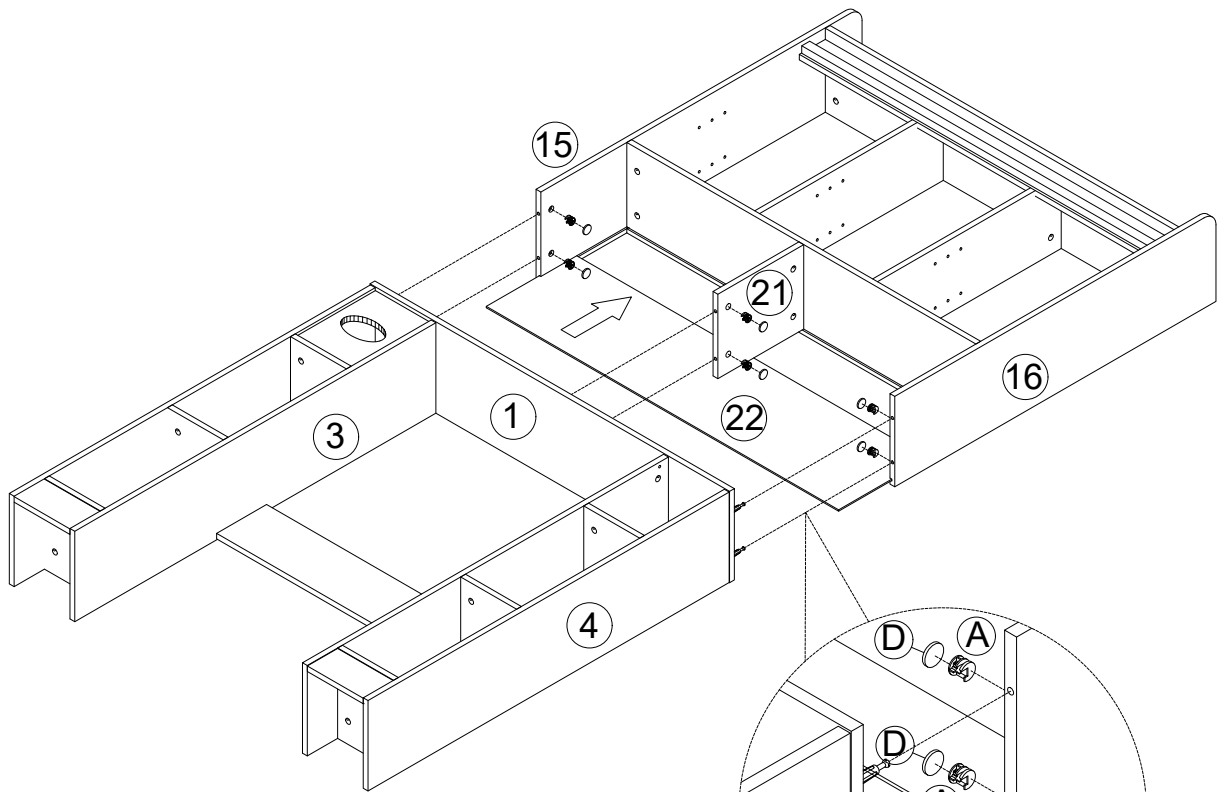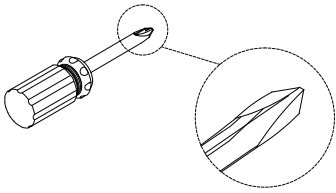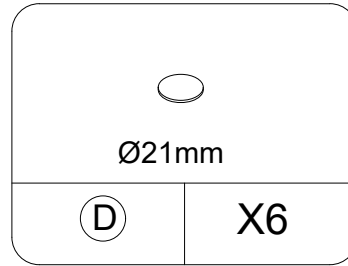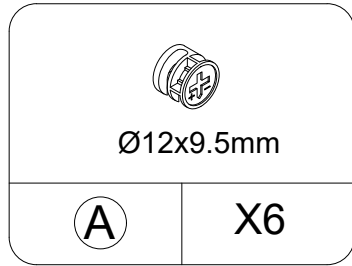       


Proper Orientation of CAM LOCK





# STEP 10

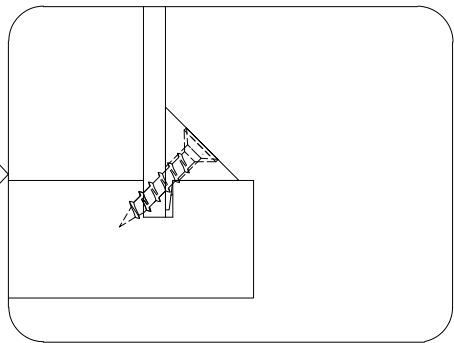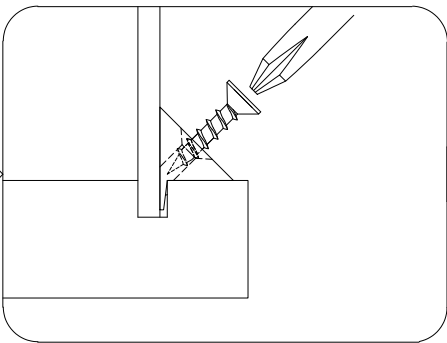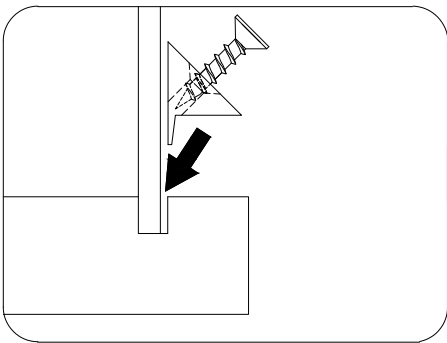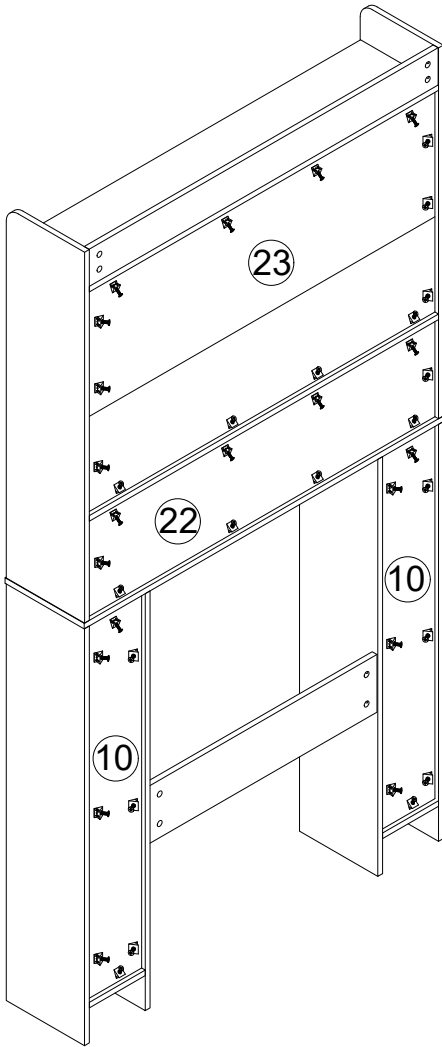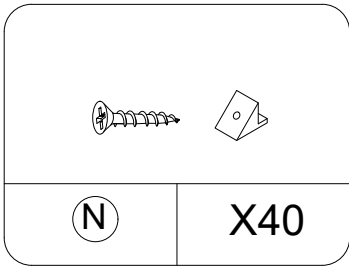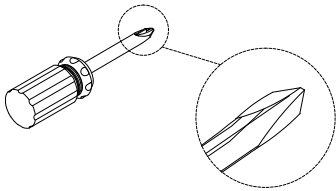      

# STEP 11

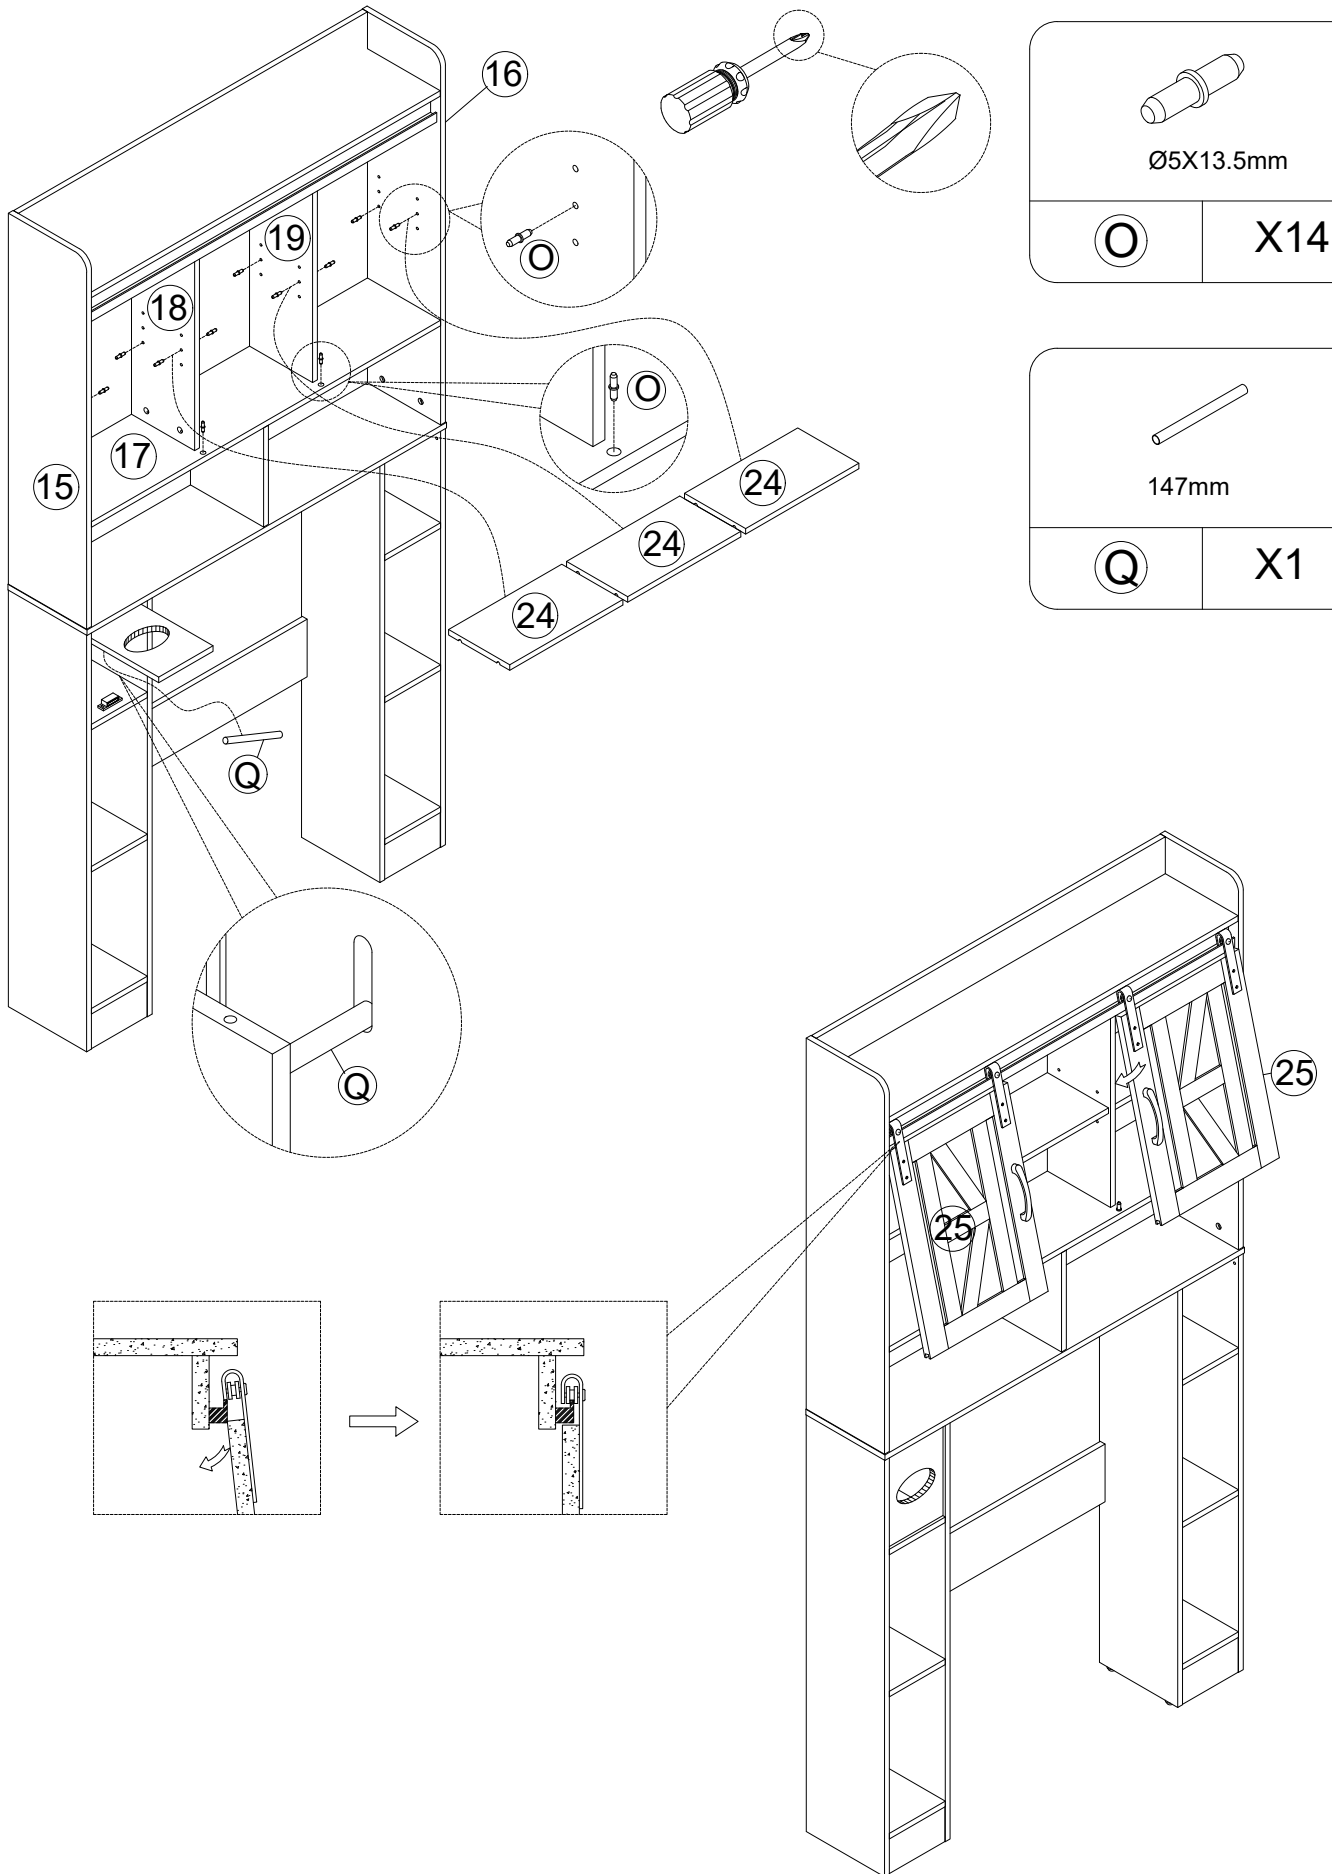 


# STEP 12

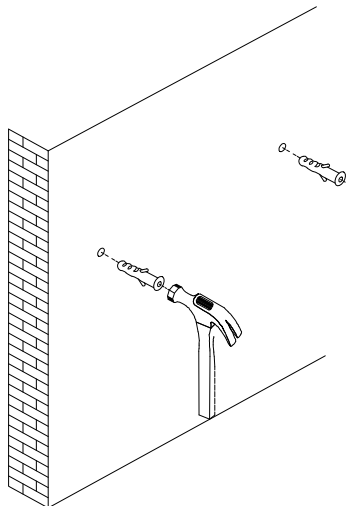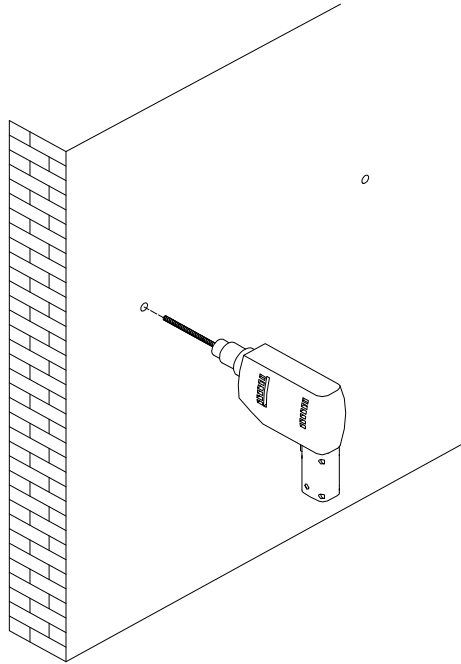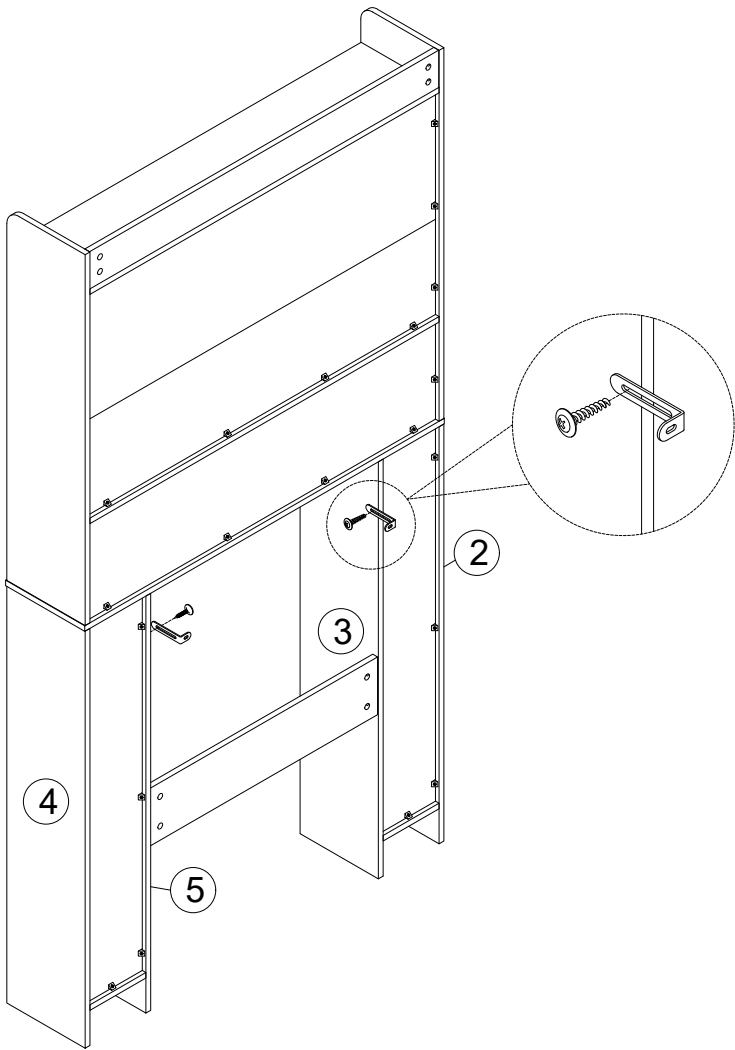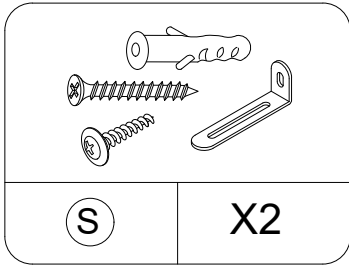    

# STEP 13

 ---

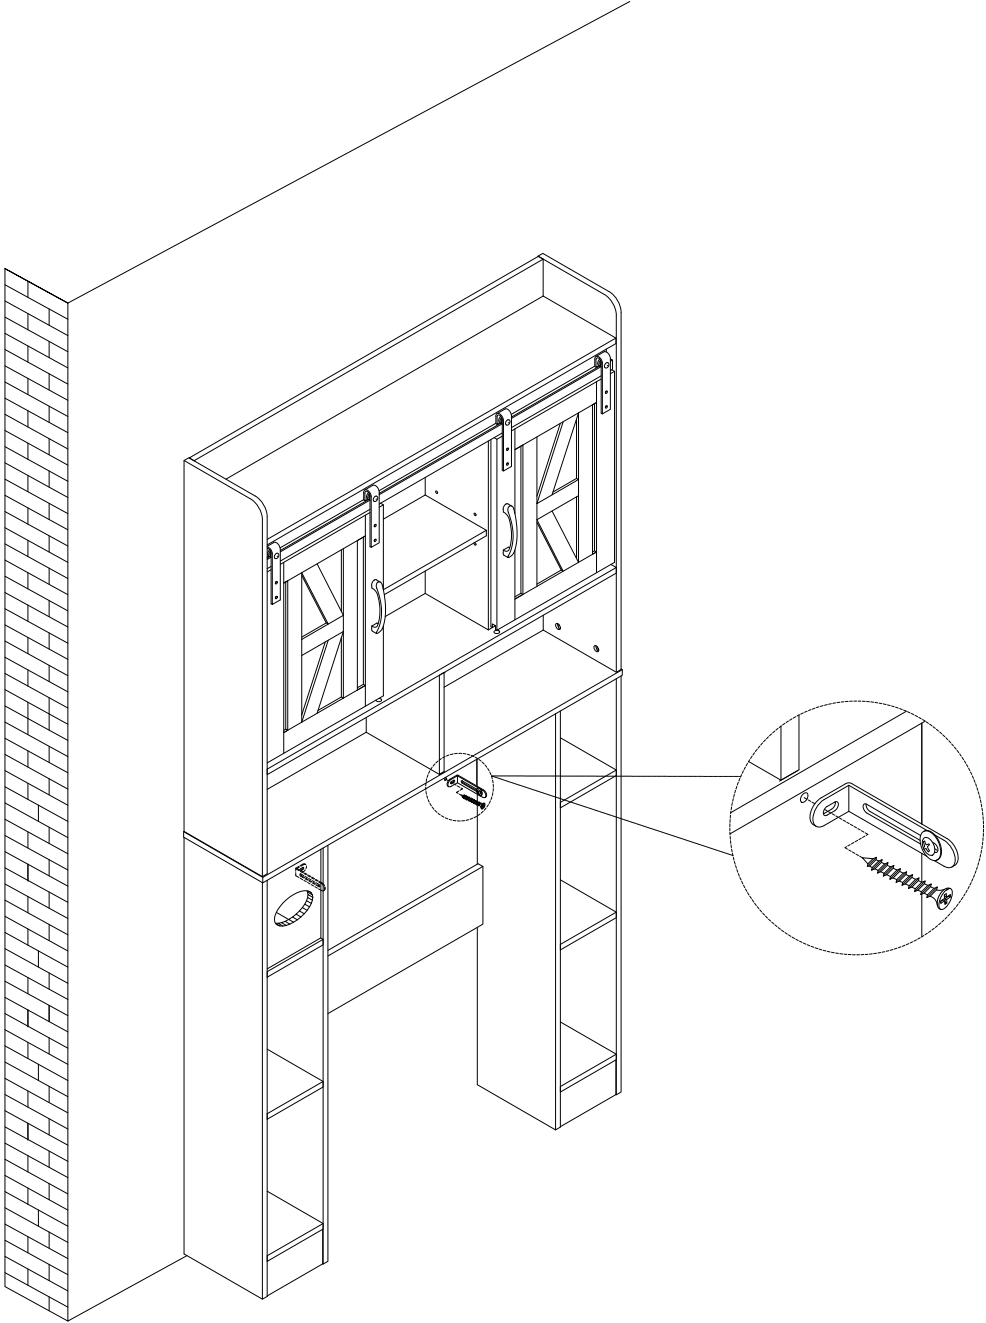

## ⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

## ⚠ ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

## ⚠ WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!