

INSTALLATION

 
Product Manual

Version: 150228-00-24A-PF




IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

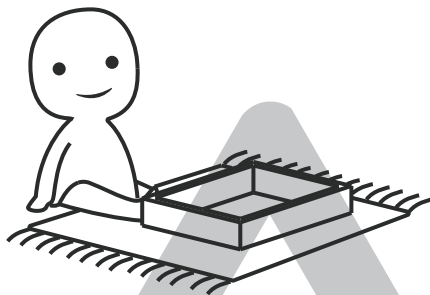



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

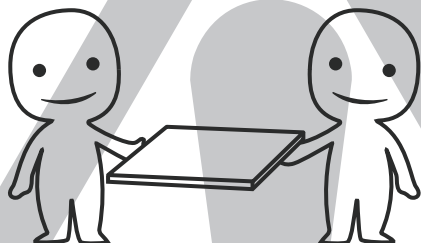

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

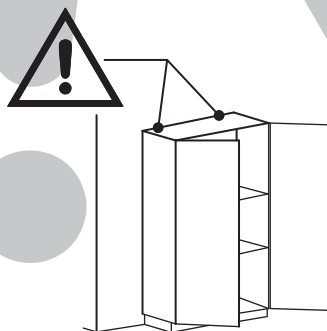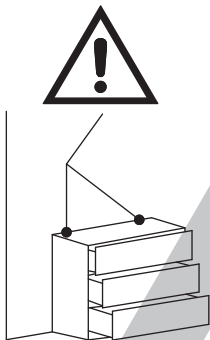

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.
















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.





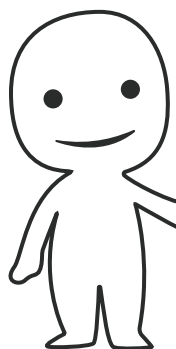


Please prepare the following tools

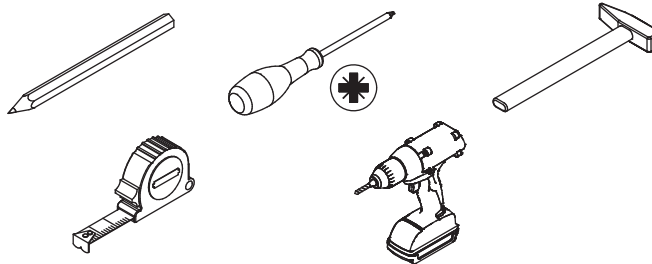 

               When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

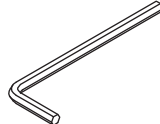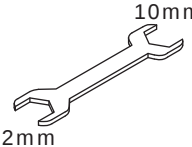A x 48  M5 x 42 mm	B x 48  Ø 15 x 10 mm	C x 28  M5 x 40 mm	D x 94  M3.5 x 14 mm	E x 12  M3.5 x 12 mm
F x 8  M6 x 12 mm	G x 12  M6 x 30 mm	H x 12  M6 x 50 mm	I x 2  M6	J x 2  M4 x 45 mm
K x 2  M4	L x 2  Ø 14 x Ø 5 x 1 mm	M x 8  M8 x 40 mm	N x 4  M8 x Ø 45 mm	O x 2  DW
P x 3  220-96	Q x 6  M4 x 18 mm	R x 50  Ø 1.5 x 15 mm	S x 15  15 x 10 mm	T x 4  Ø 7 x 9 mm
U x 10  Ø 8 x 40 mm	x 1  #5	x 1  #4	x 1  10mm 12mm	x 1 

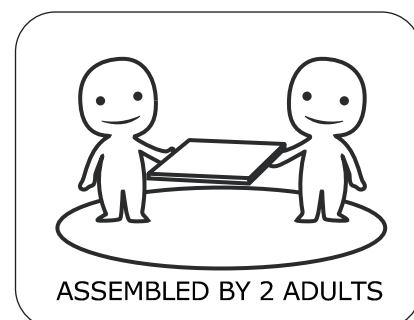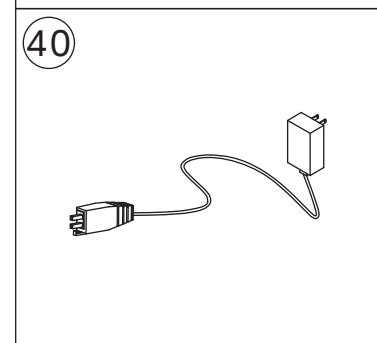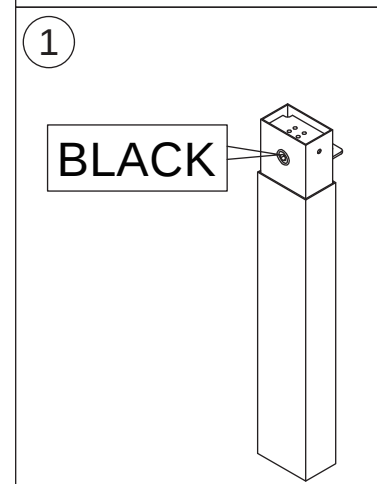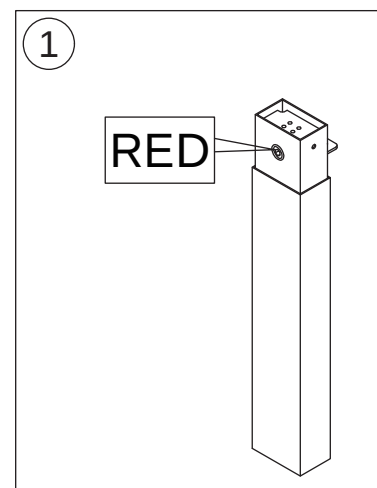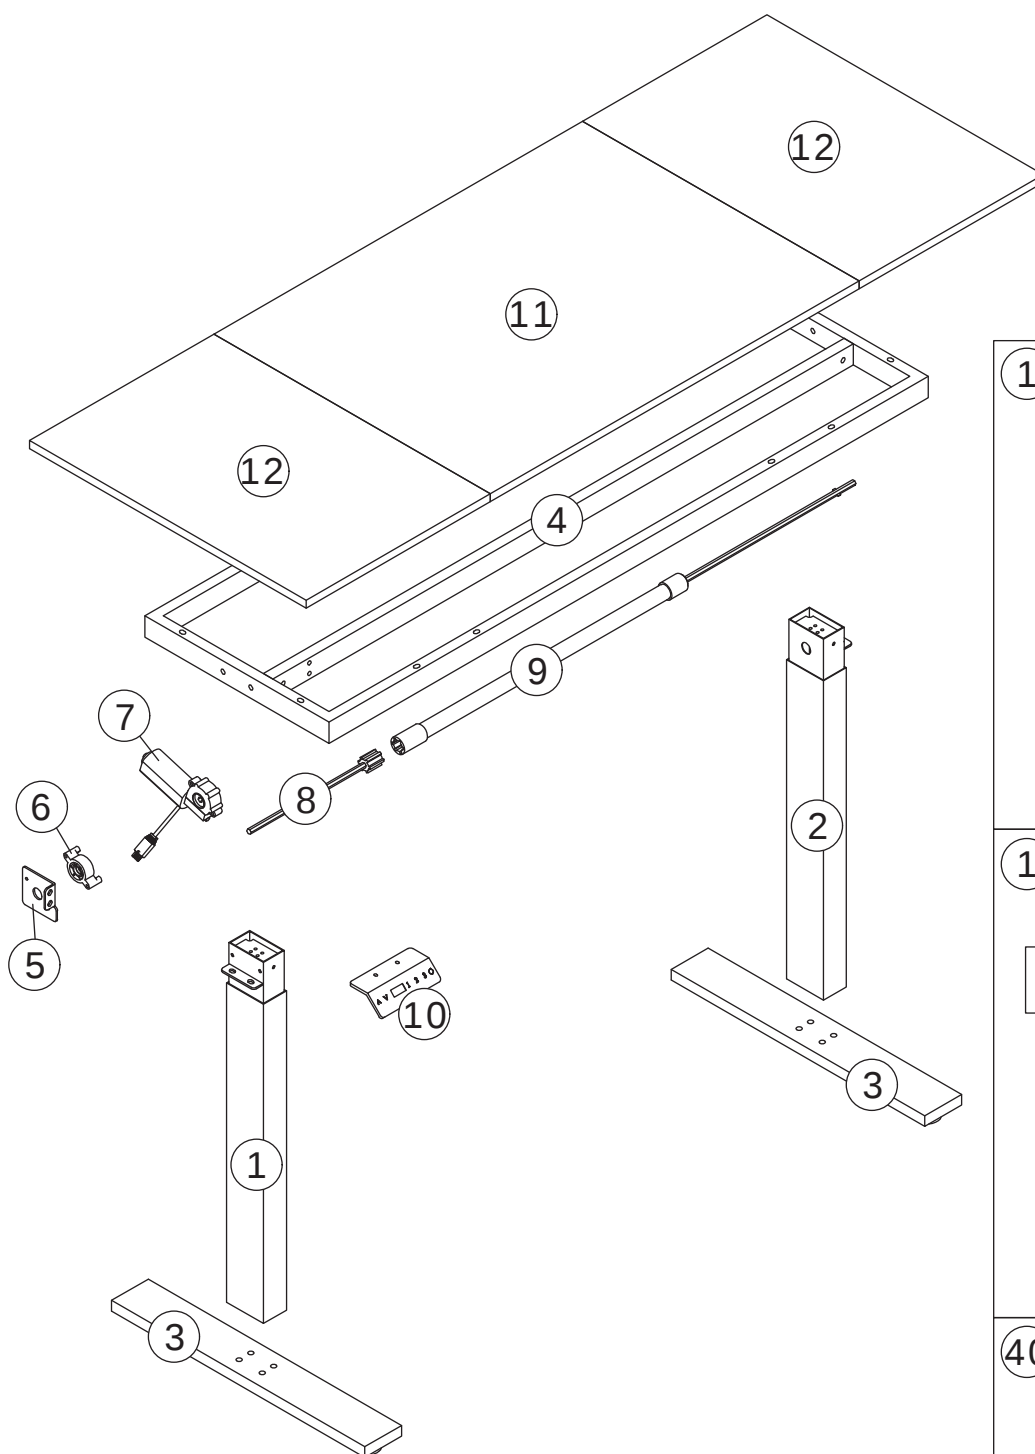     




⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

   *This is a permanent label.
Do not remove!*

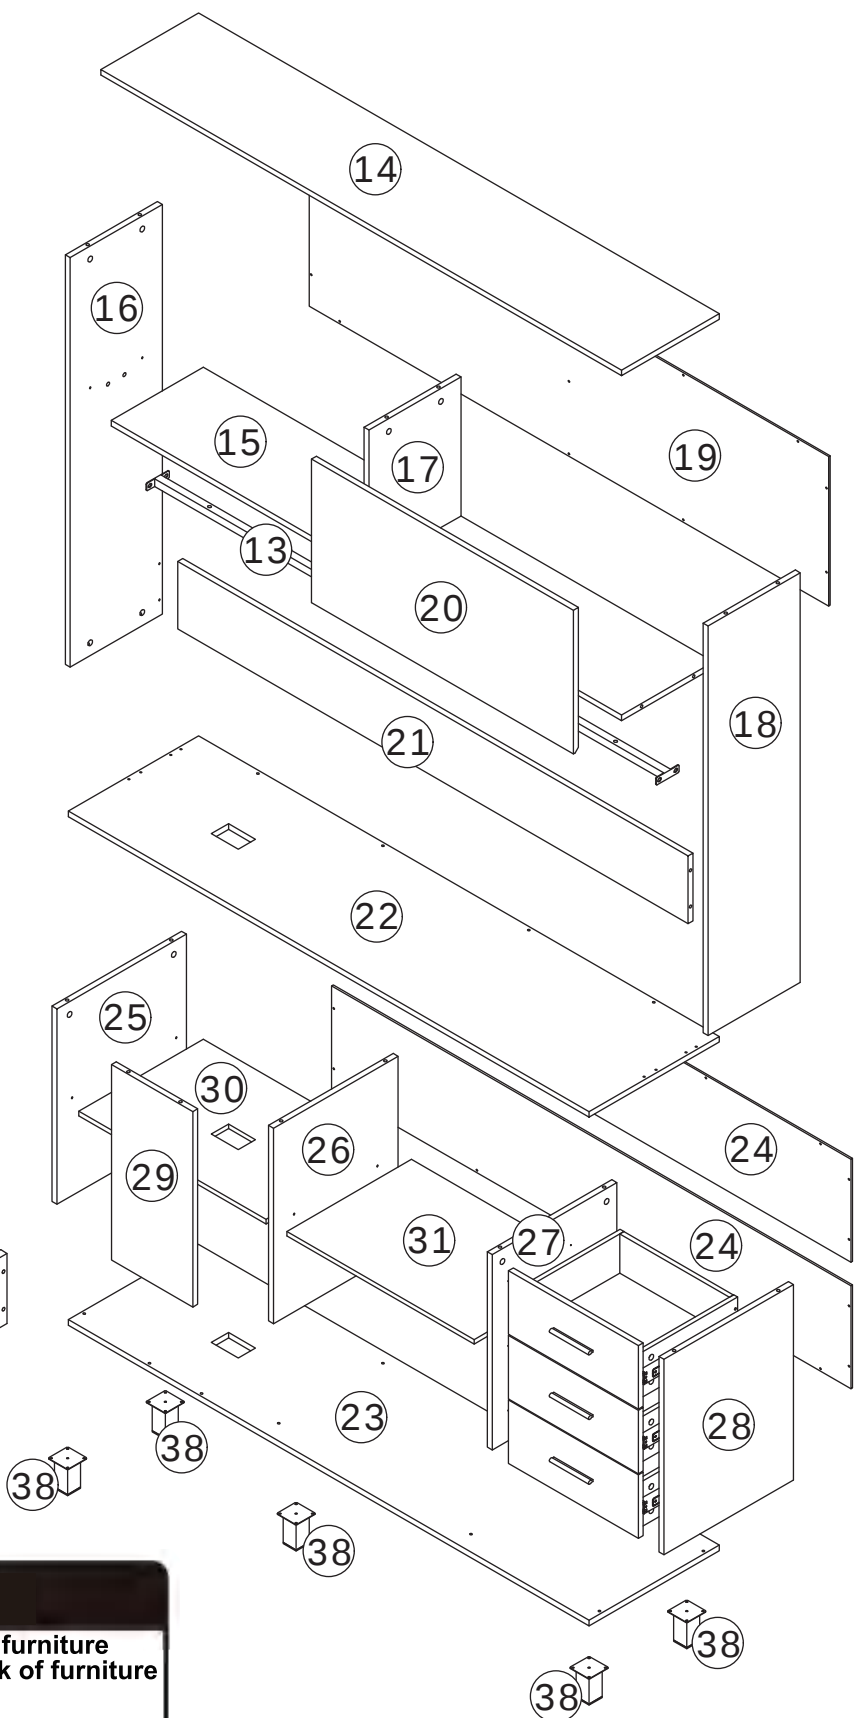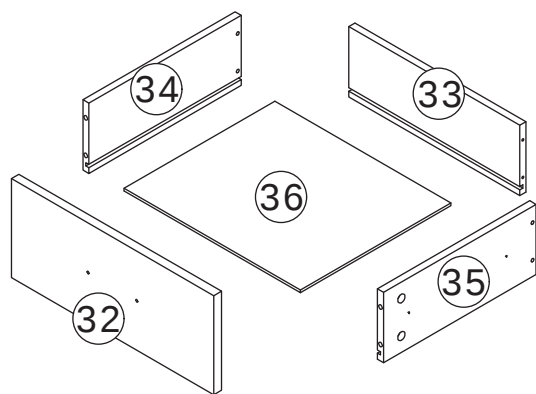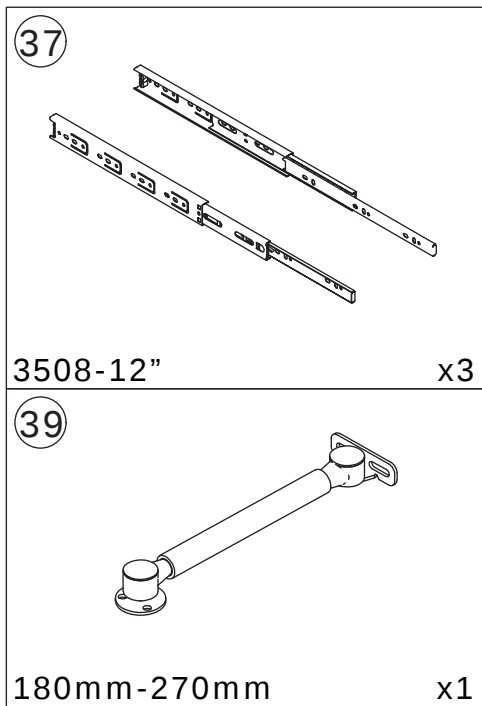


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

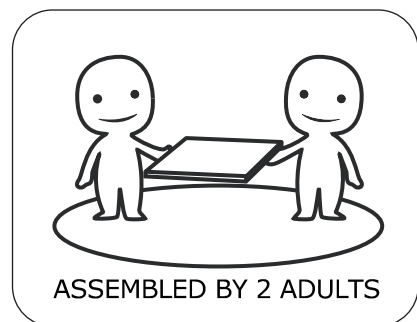


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

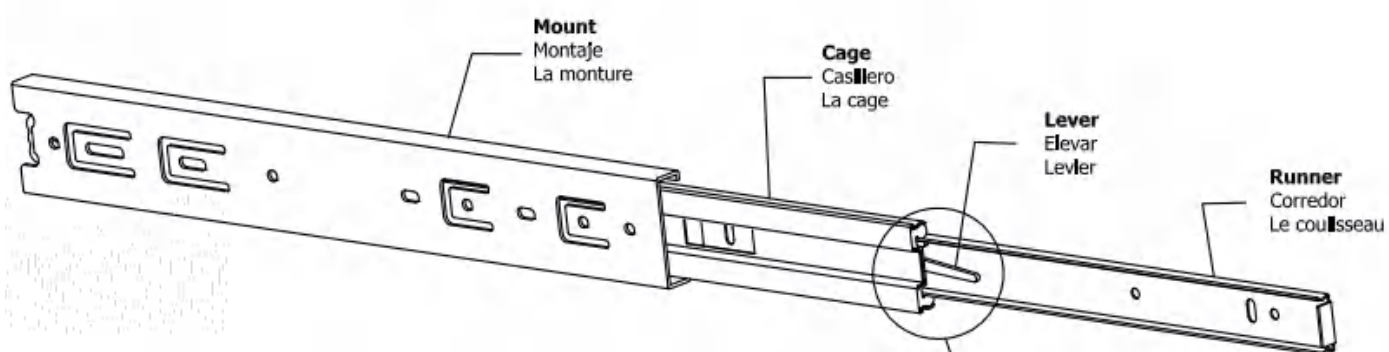

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

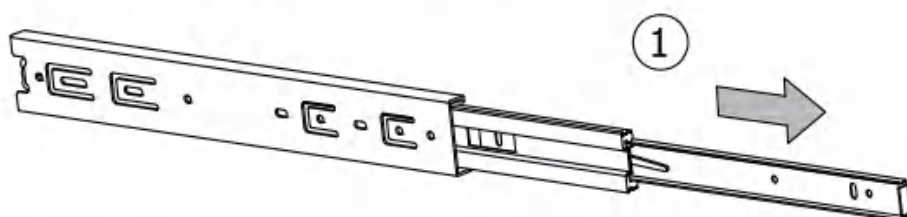



 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

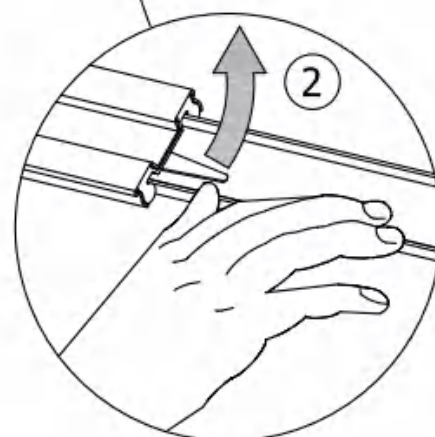

 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

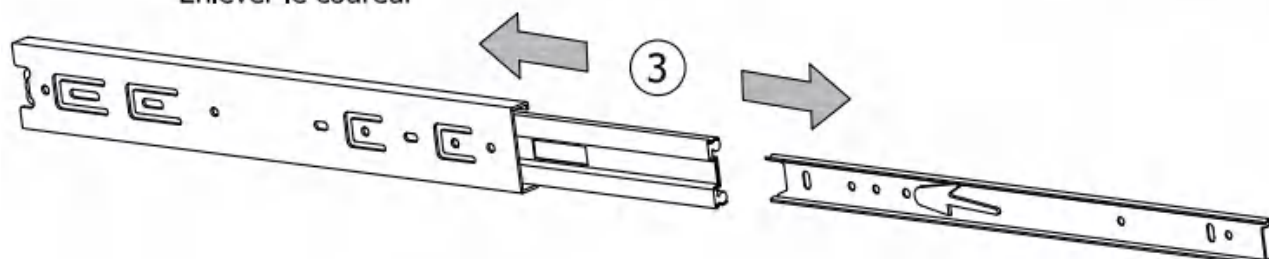




1

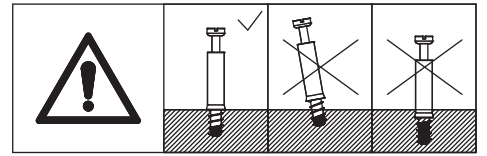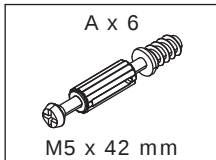   



 
Screw eccentric rod(A) into panel 25 and 26 at first.

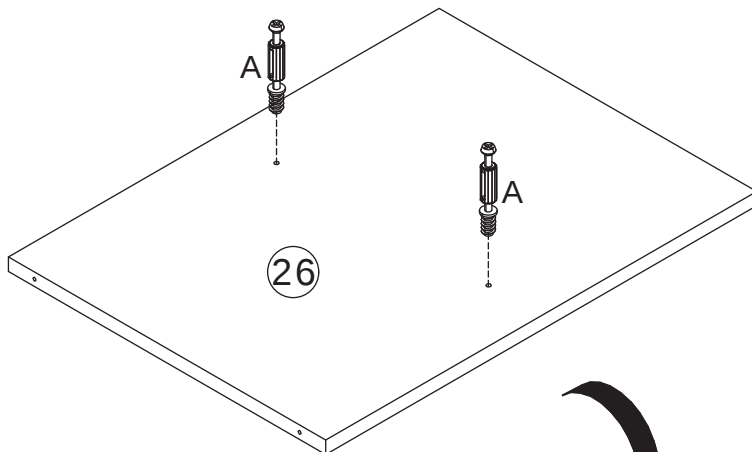

Flip 180°

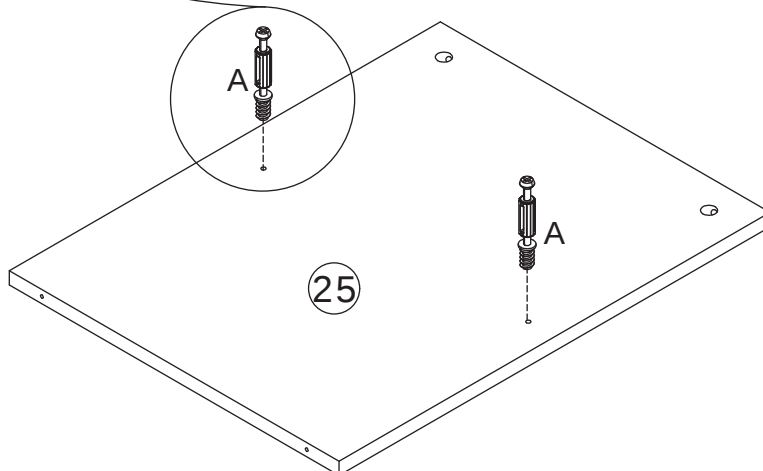 
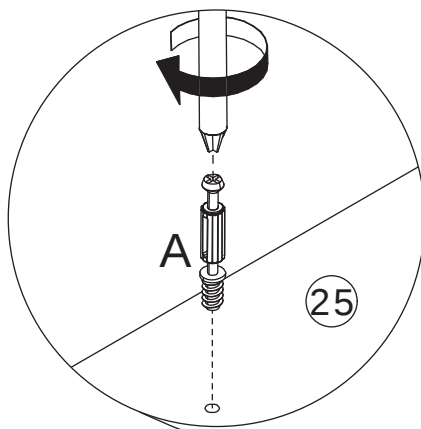 
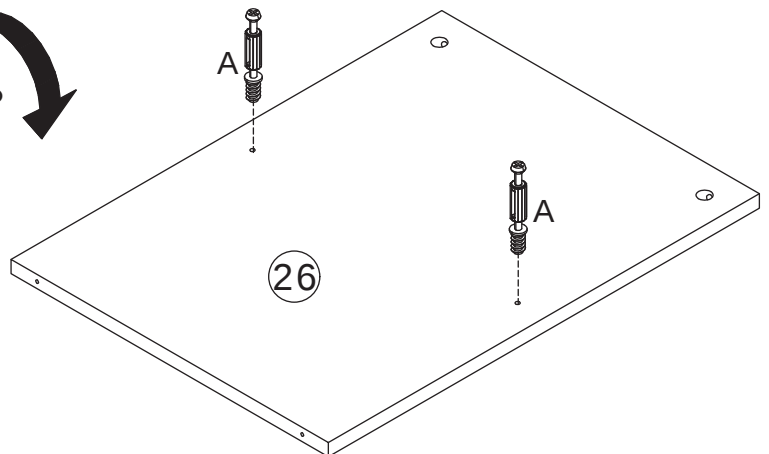 


2

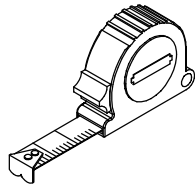 
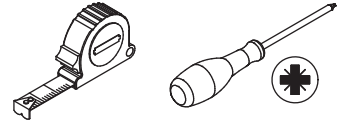 
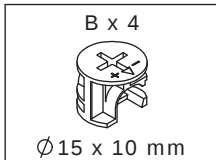 


Unit: millimeter
Attention to direction!

   Connect panel 25 and 26 to panel 30,
add cam lock(B) into panel 30 and turn
clockwise to tighten as shown.


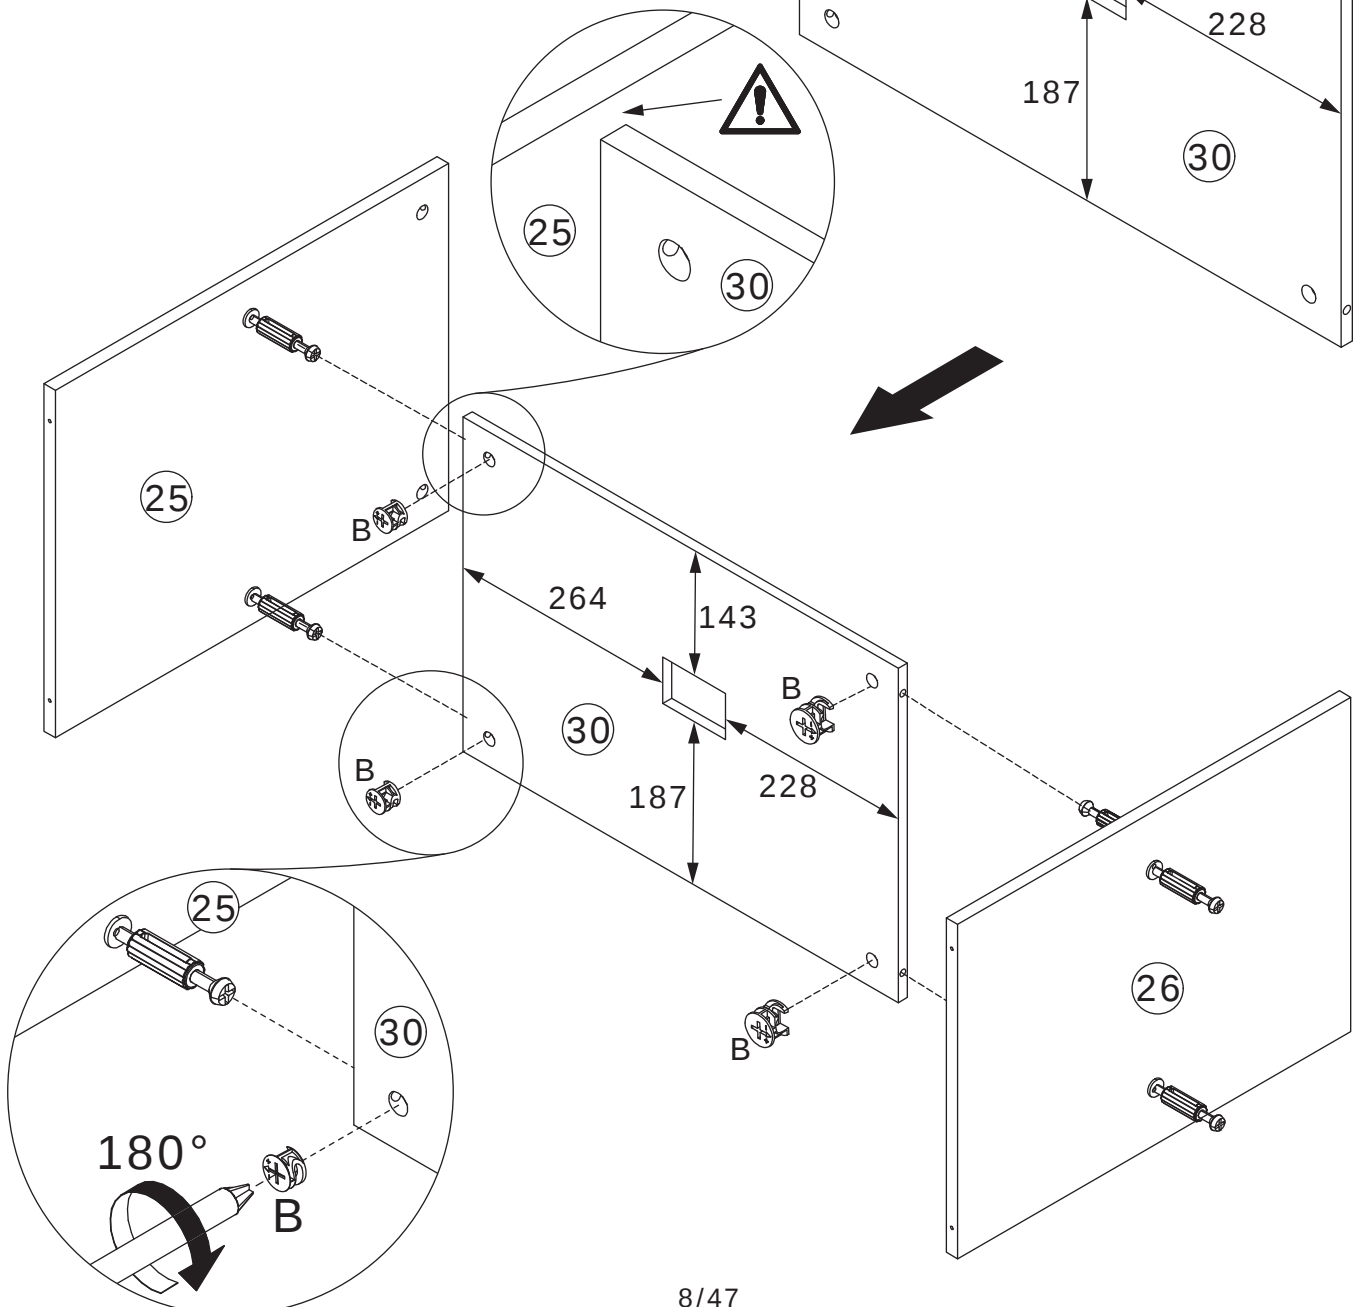
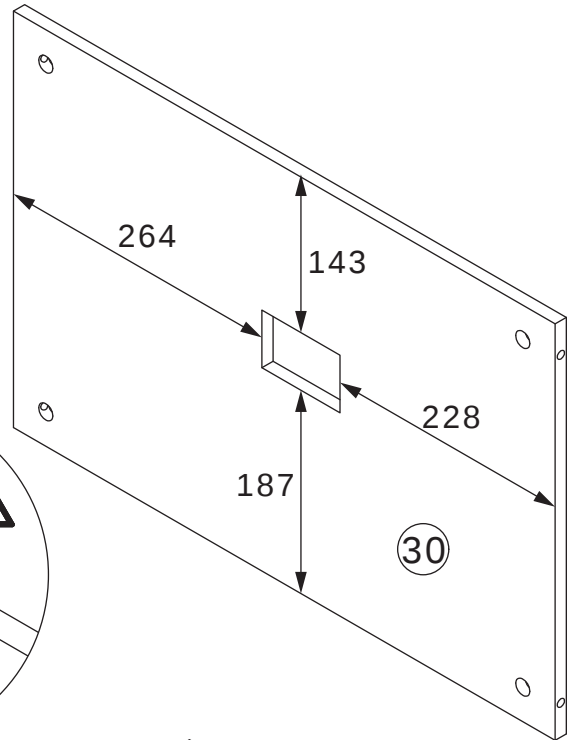
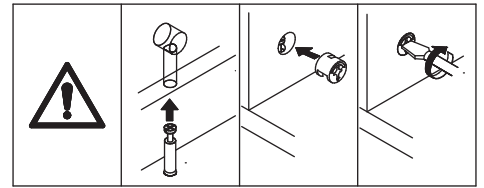


3

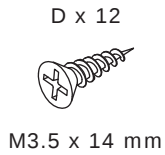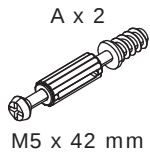   

Fix rail part 37 to panel 27 and 28 with screw(D) at first.

    Flip panel 27 to back, screw eccentric rod(A) into as shown.

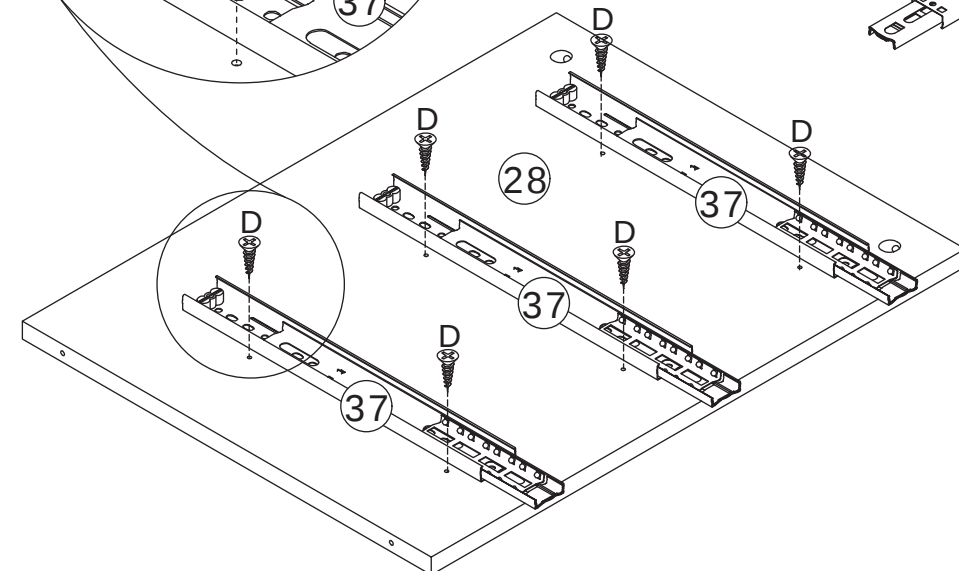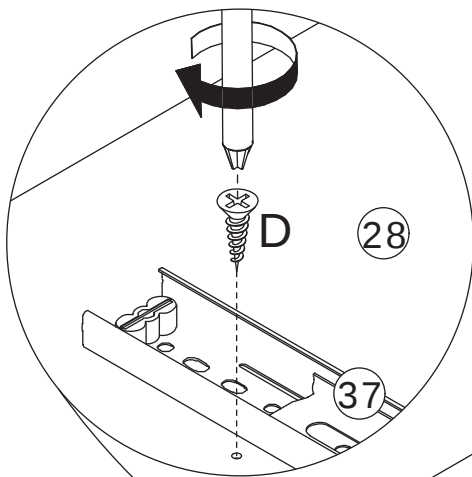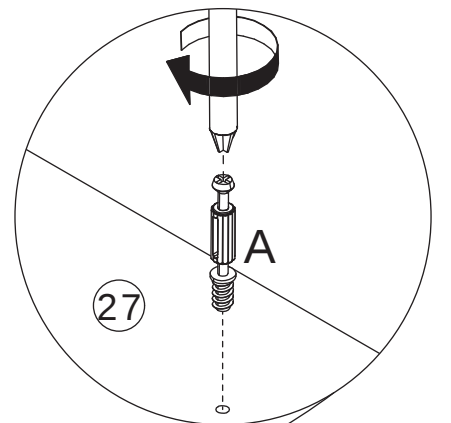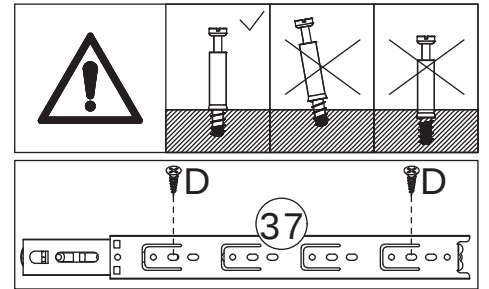


4



B x 4





 
Ø 15 x 10 mm



  
Connect panel 27 and 26 to panel 31,
add cam lock(B) into panel 31 and turn
clockwise to tighten as shown.

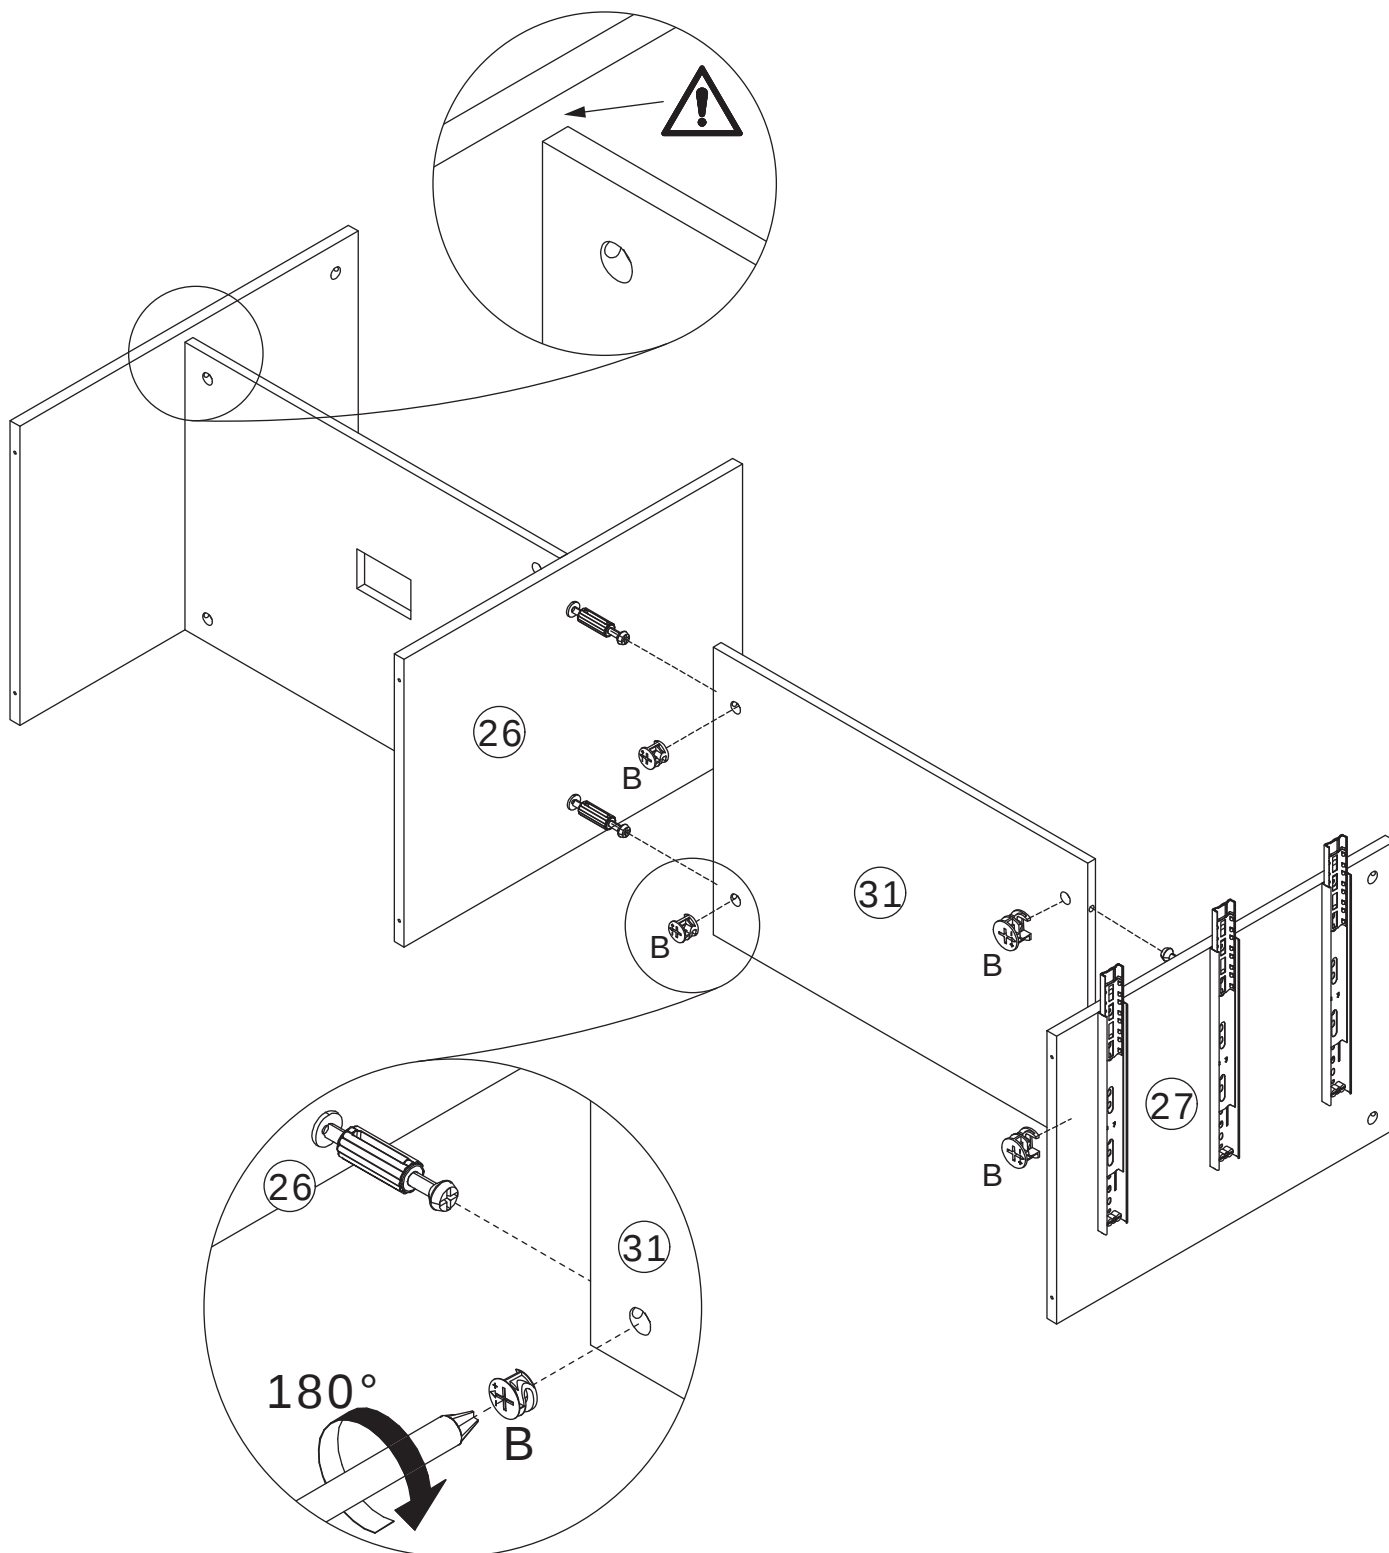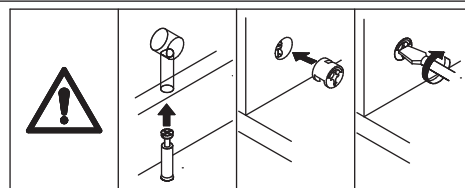

5

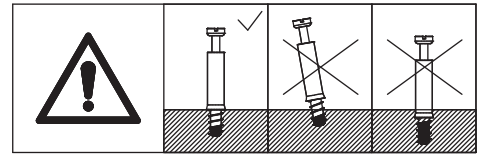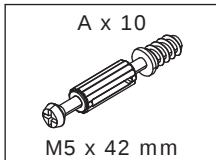   

 Screw eccentric rod(A) into panel 22 at first.



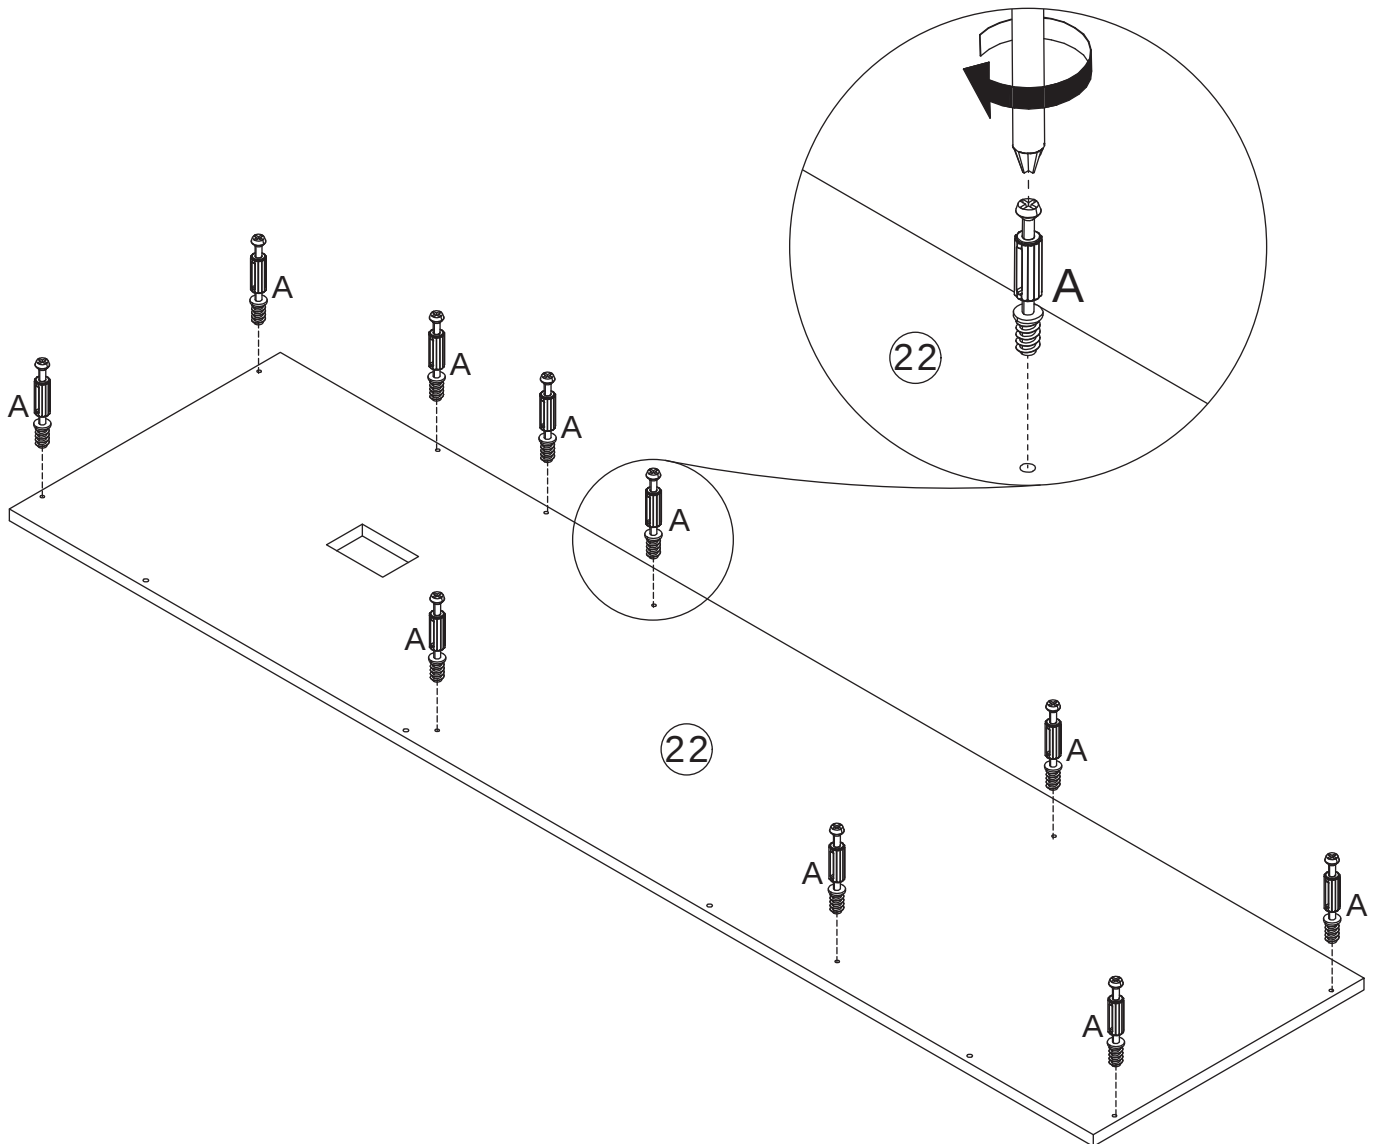


6


B x 8



 
 
 
Ø 15 x 10 mm

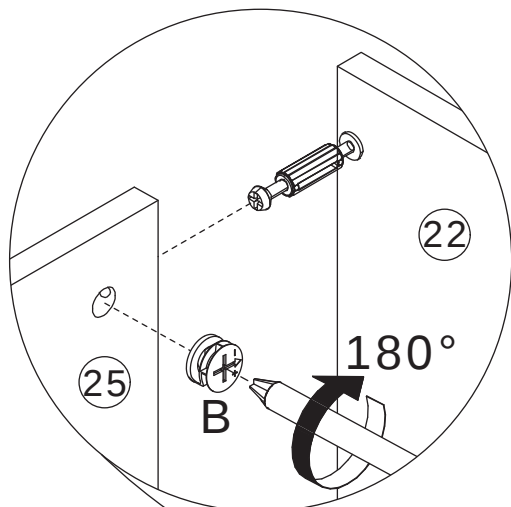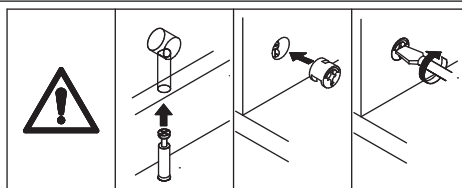

 
Attach panel 22 to panel 25, 26, 27 and 28, add cam lock(B) into and turn clockwise to tighten as shown.

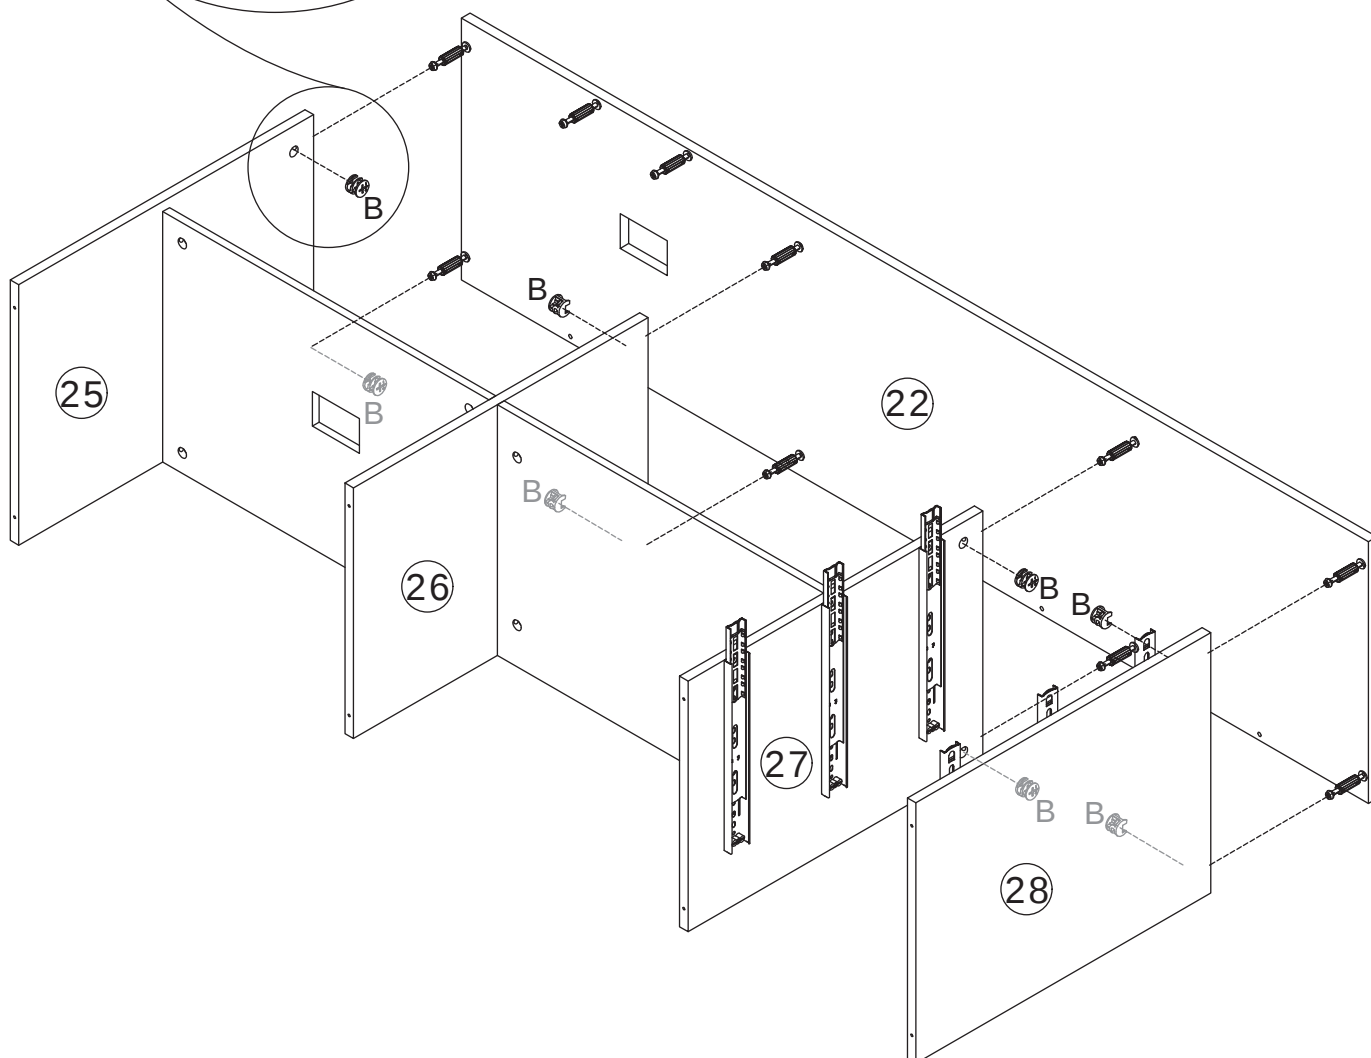

7

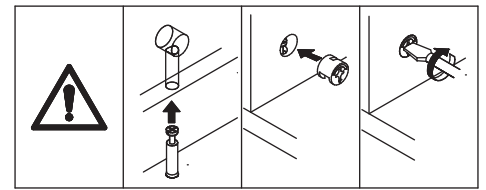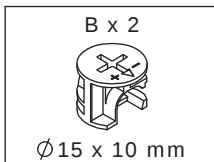   


 Attach panel 29 to panel 22, add cam lock(B) into and turn clockwise to tighten as shown.

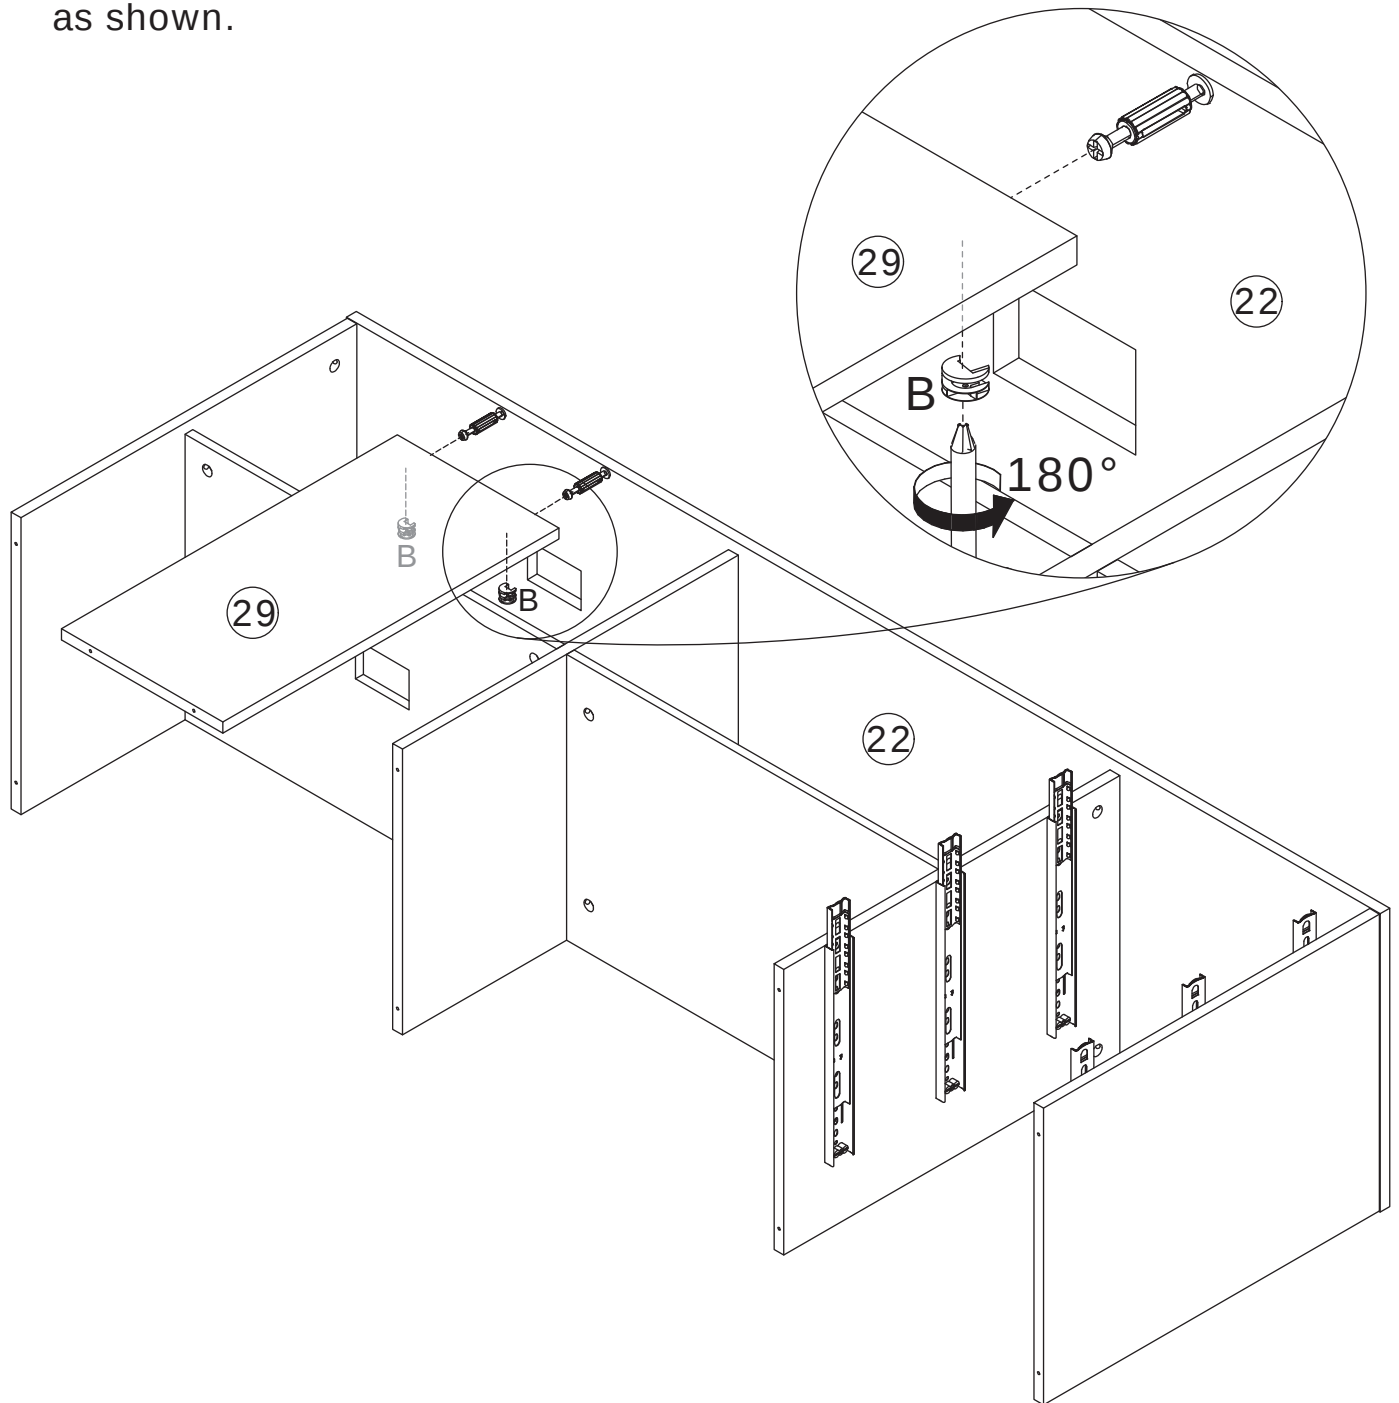


8

 
D x 20





M3.5 x 14 mm

 

 
Fix leg pat 38 to panel 23
with screw(D) as shown.

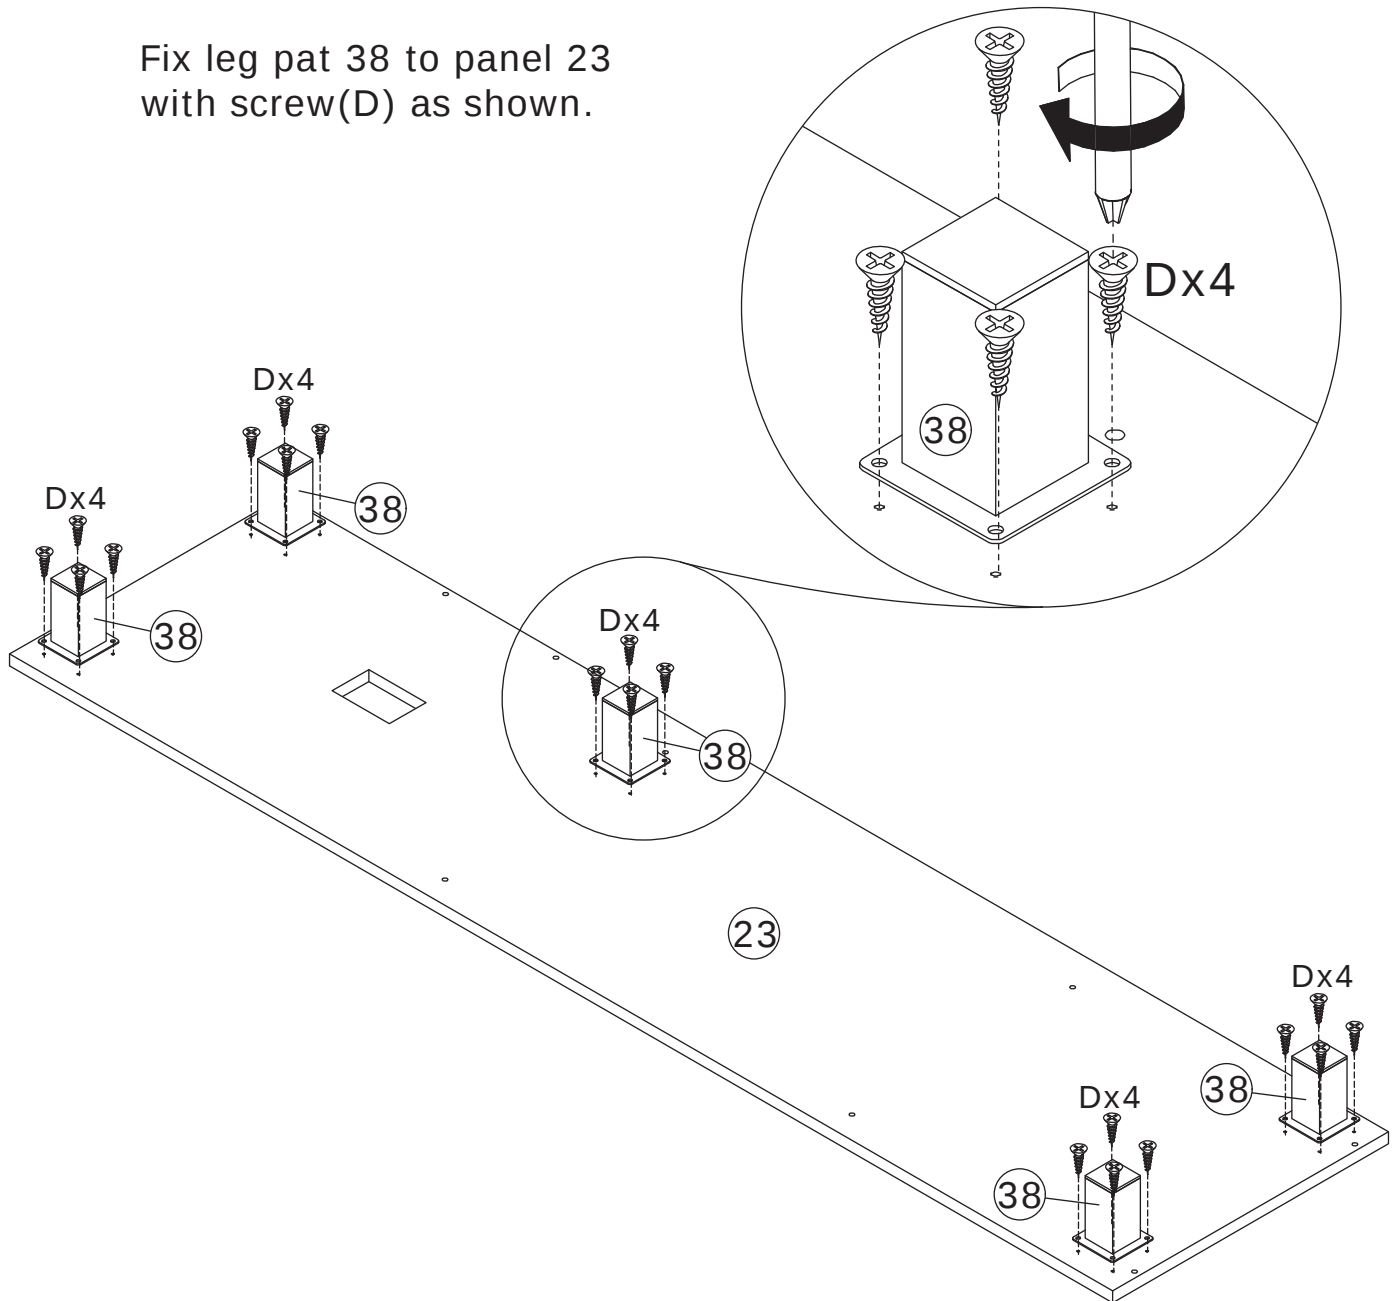

9

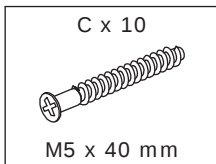  

 Fix panel 23 to panel 25, 29, 26, 27 and 28 with screw(C) as shown.


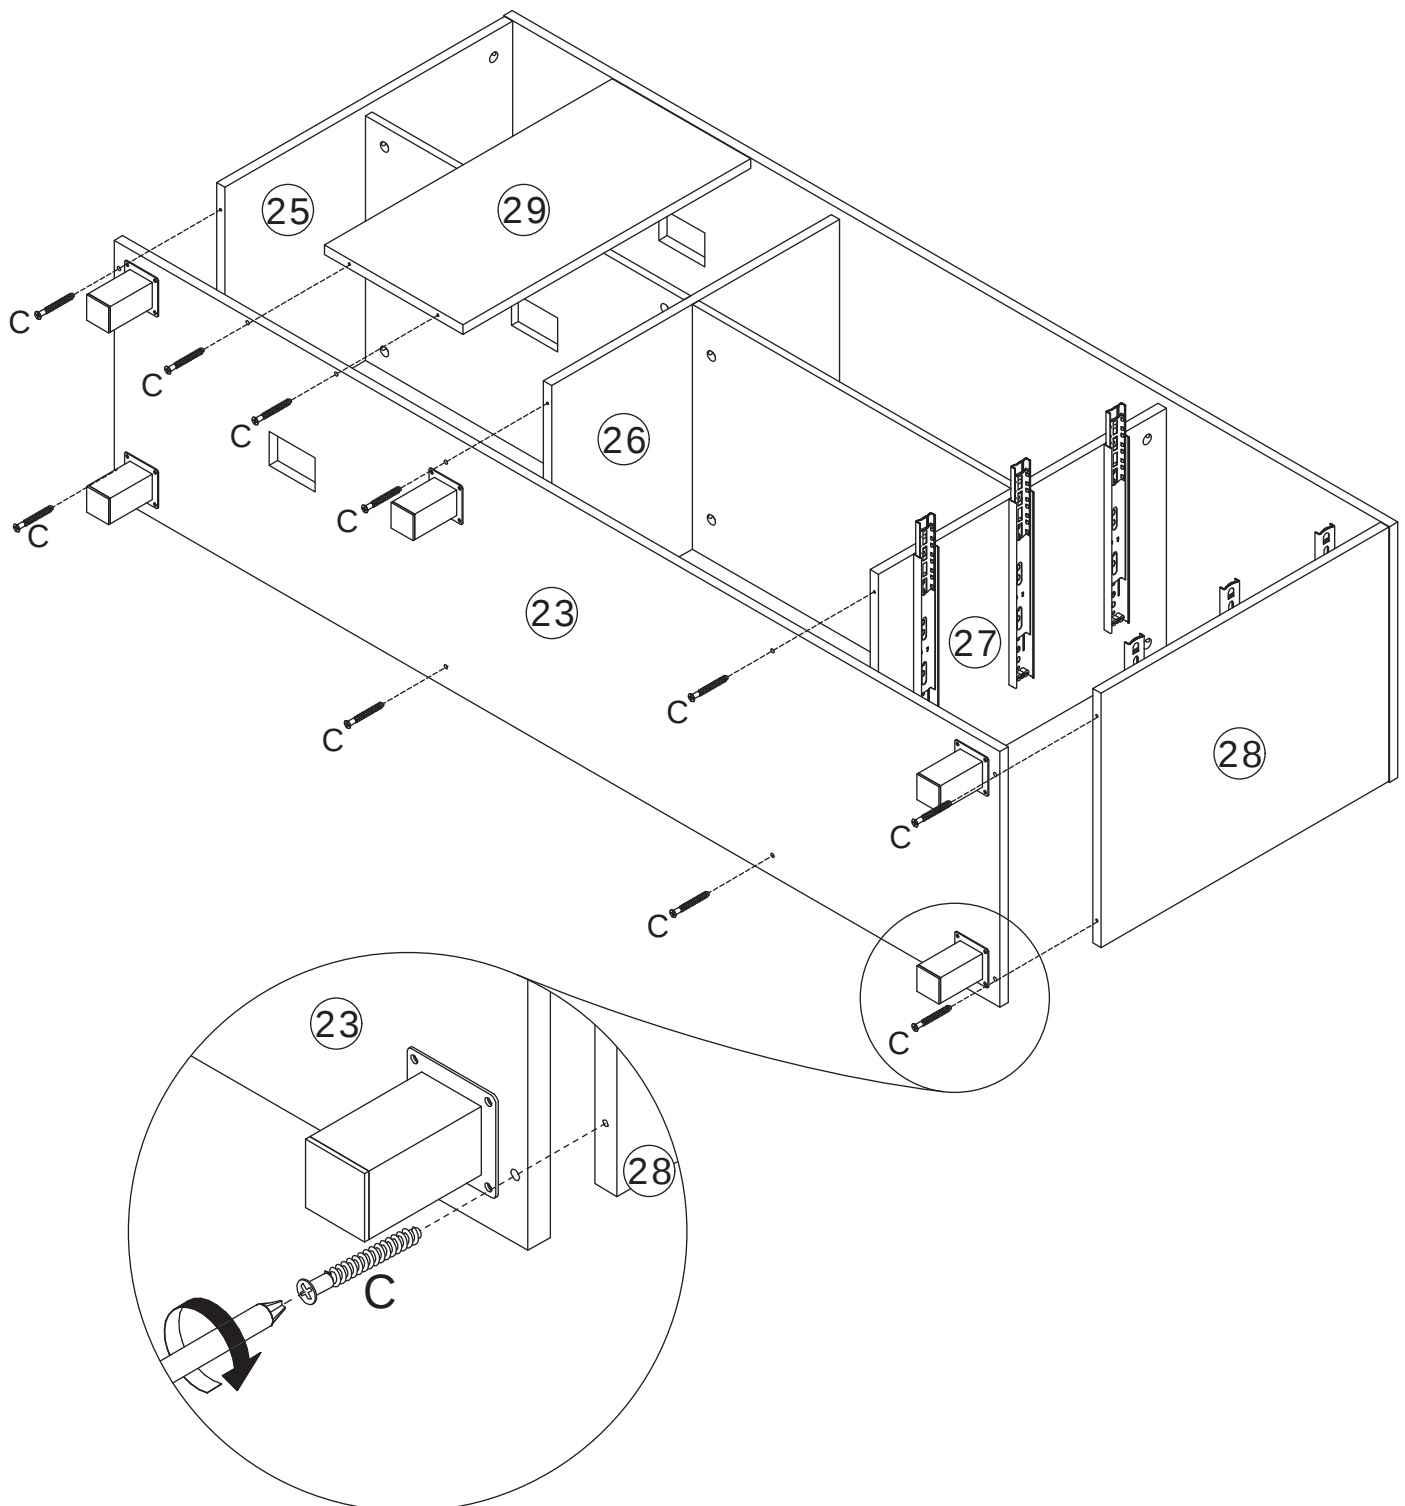


10

Insert part 2 into the holes on panel 22, 30 and 23 as shown.


2

  BLACK

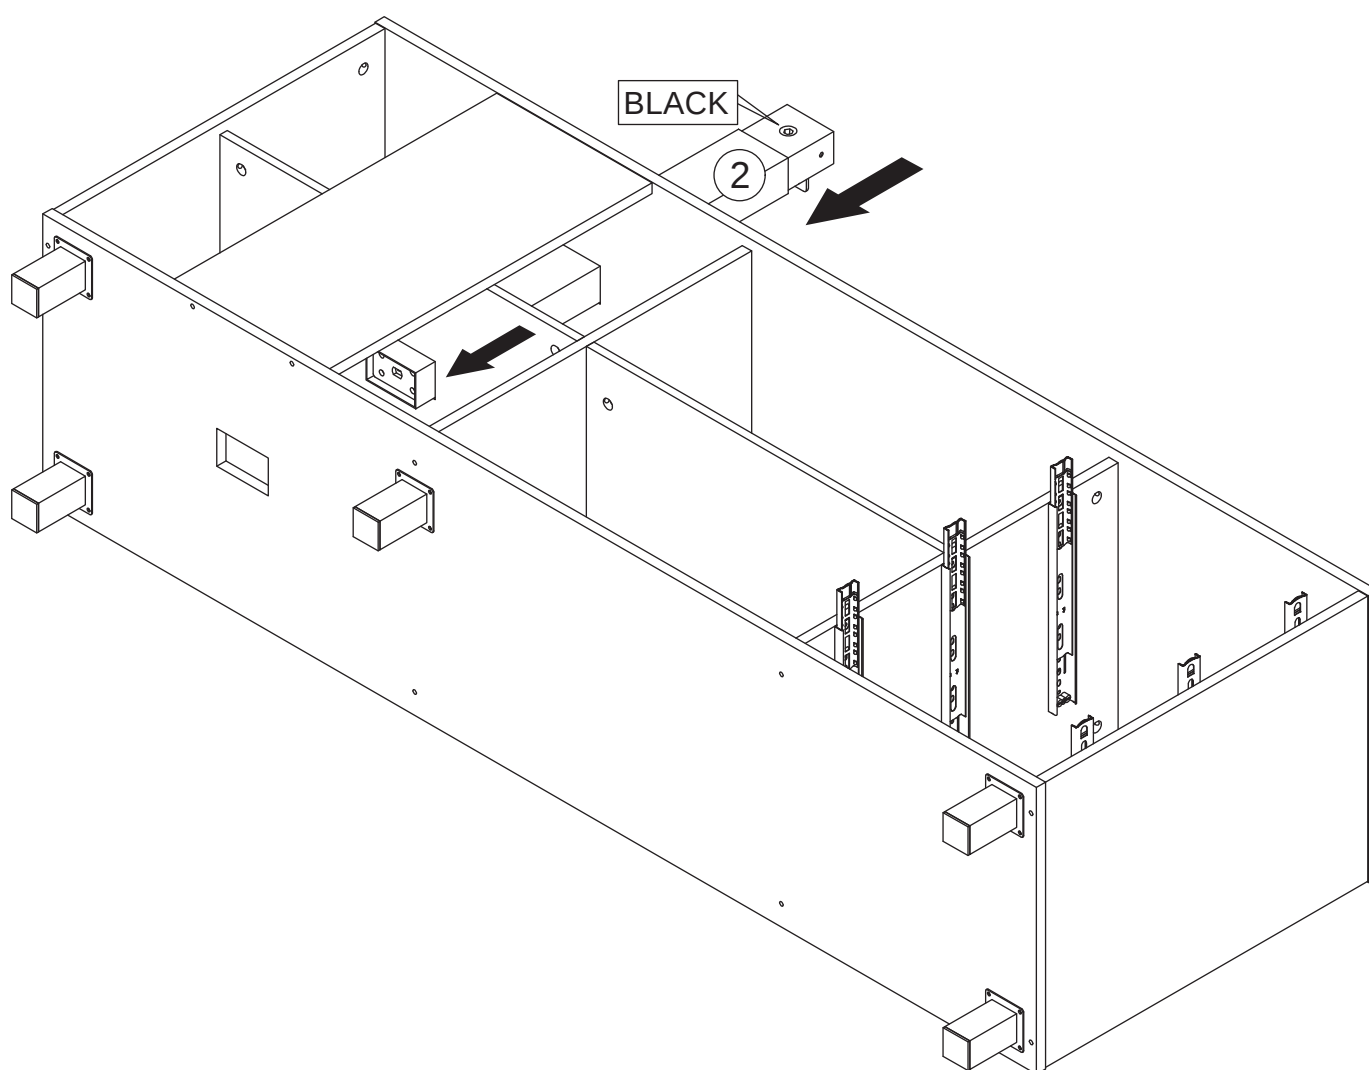

11

 M x 4



M8 x 40 mm

N x 2




M8 x Ø45 mm

x 1




#5

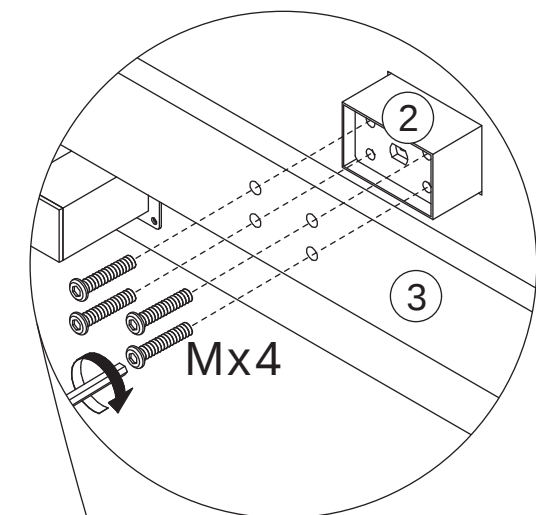 


Mx4

 Fix panel 3 to part 2 with screw(M) as shown.
Rotate foot pad(N) into panel 3 as shown.




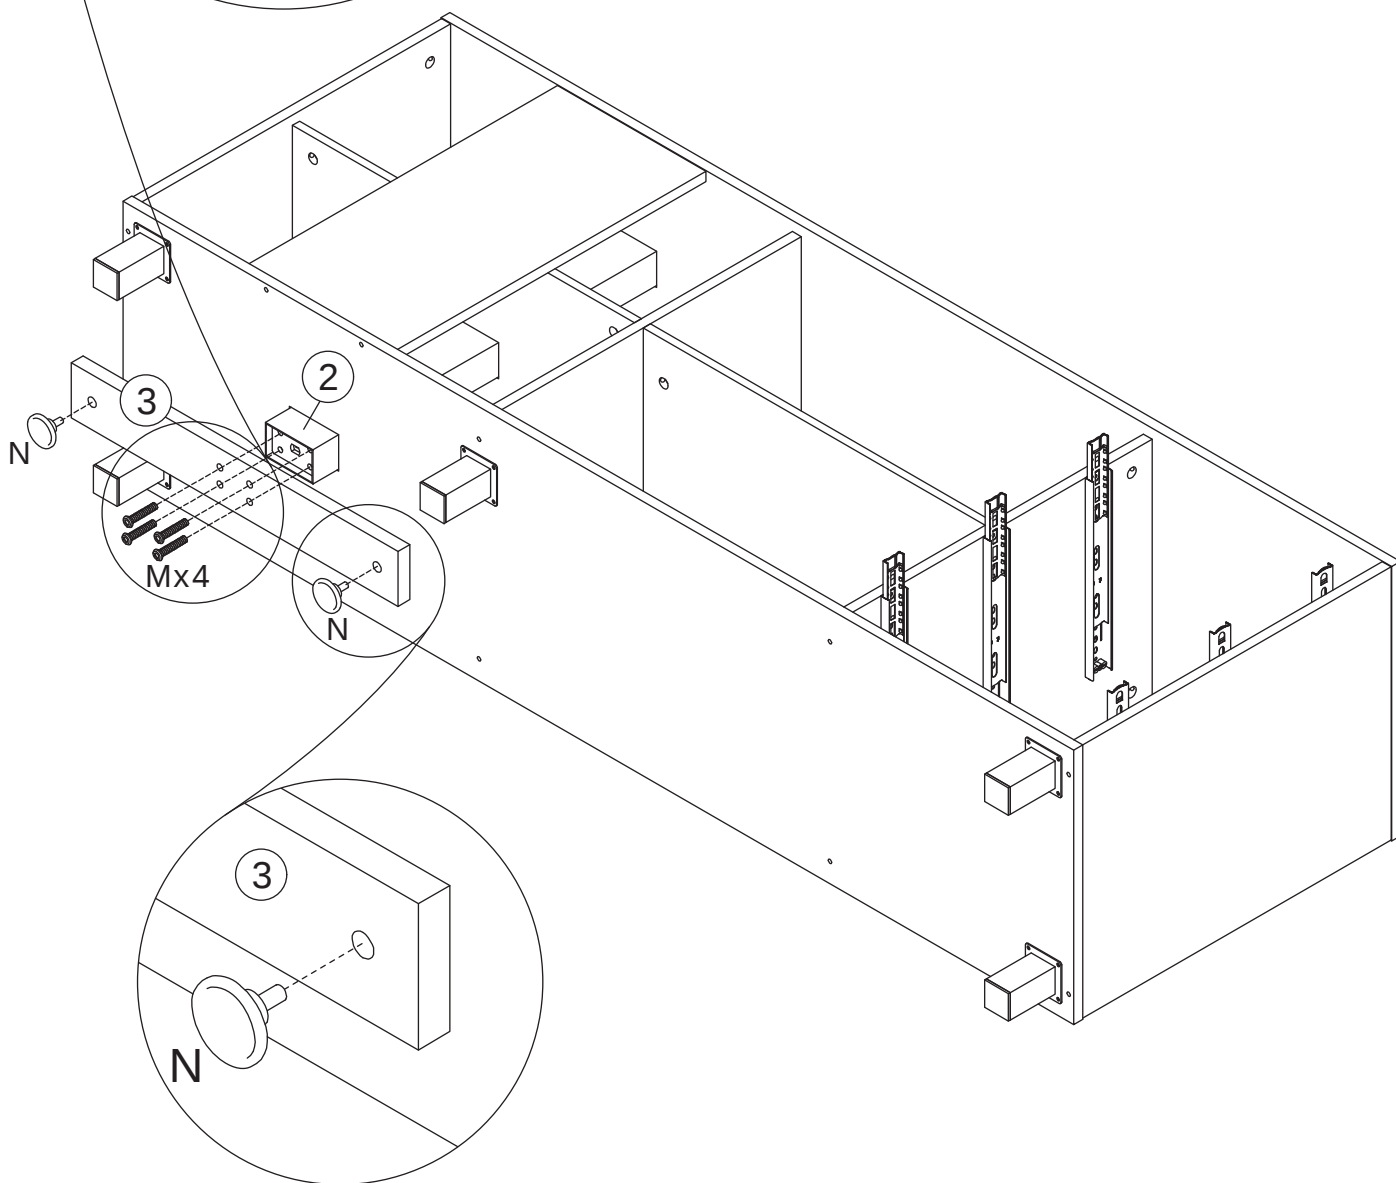


12

 
A x 4





M5 x 42 mm

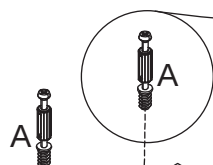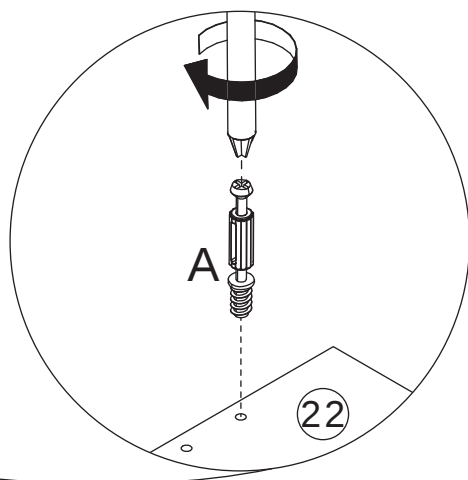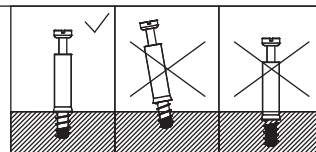    


 Screw eccentric rod(A) into panel 22 at first.

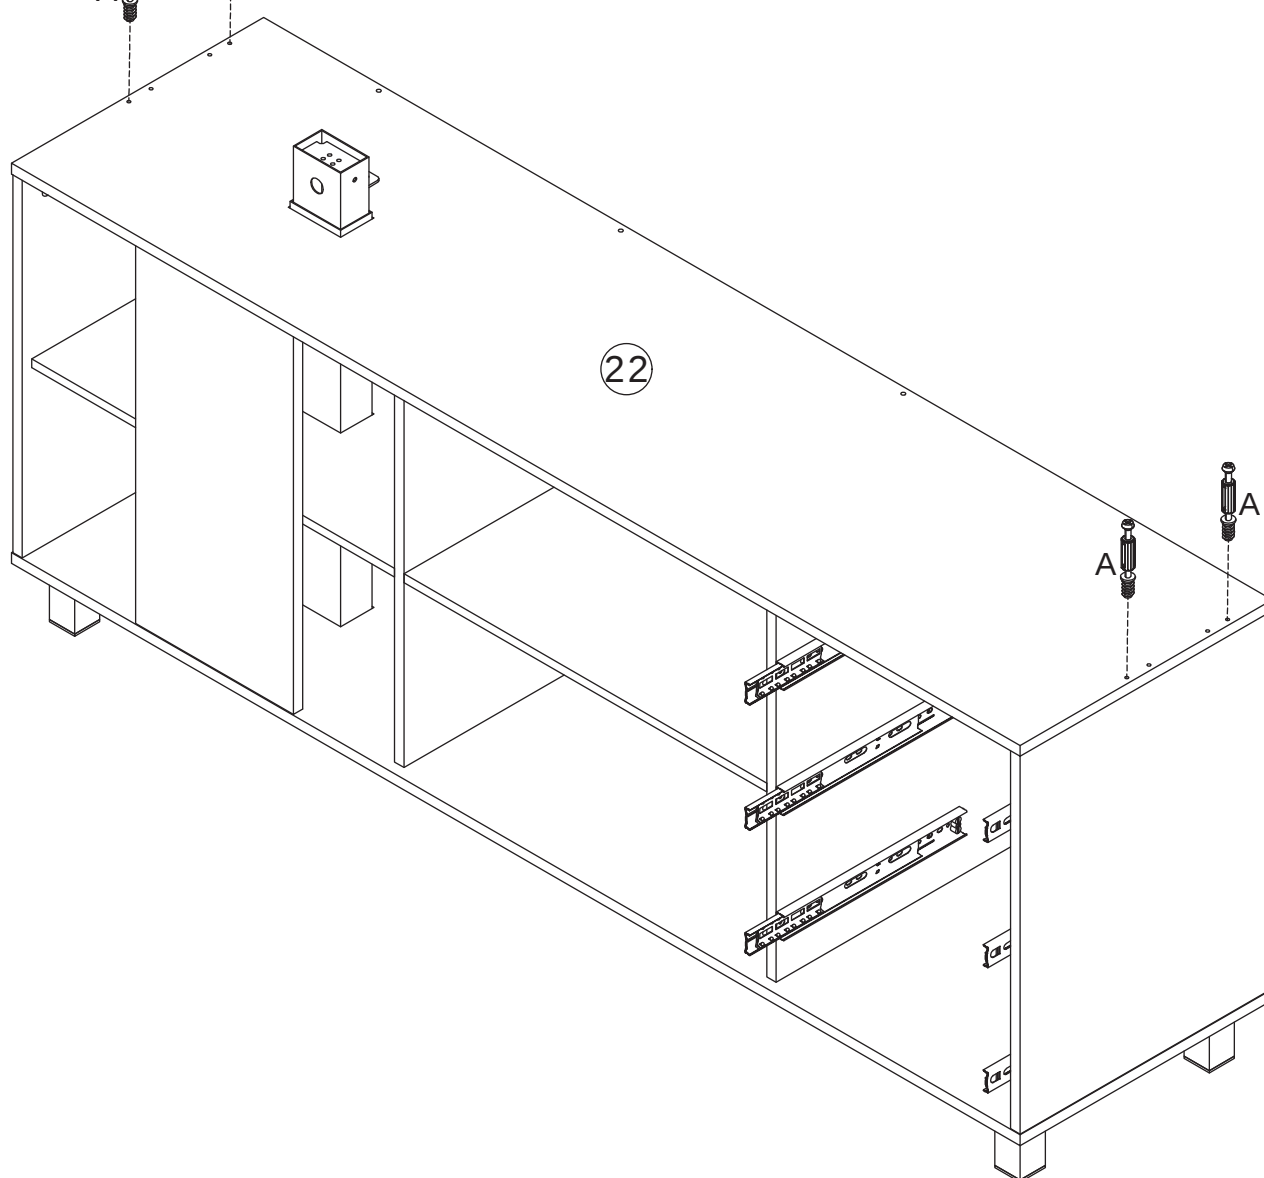

13

 
 
G x 4  M6 x 30 mm	x 1  #4	
--	--	--

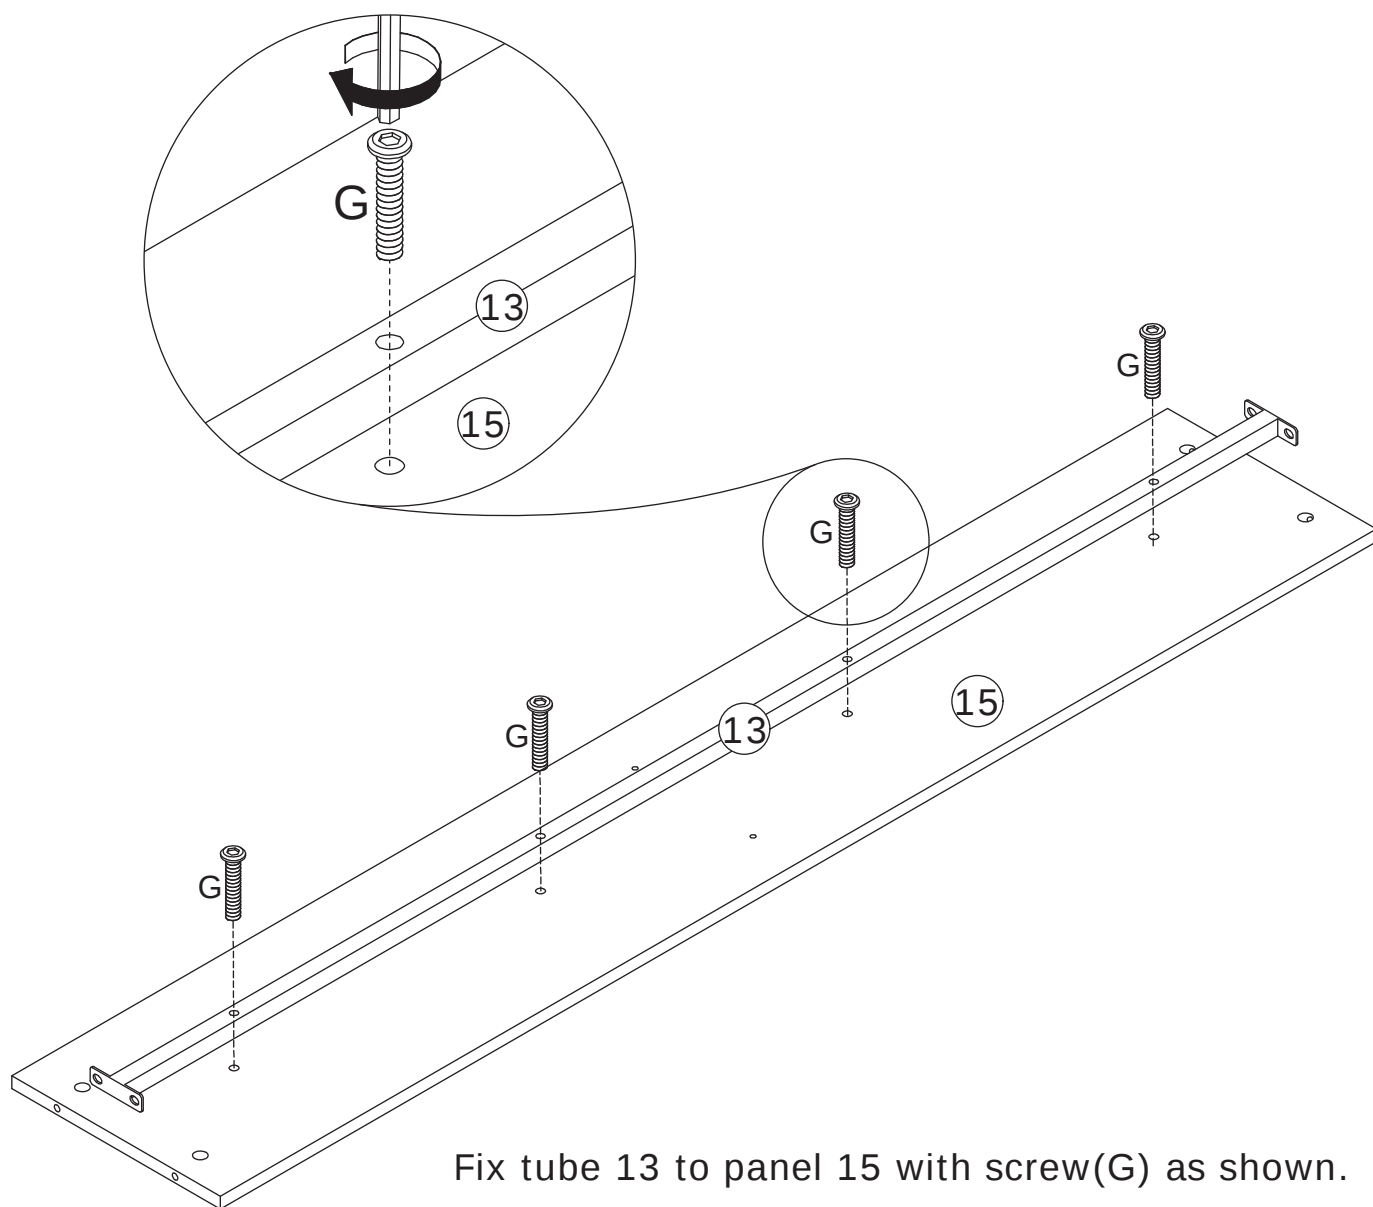 

Fix tube 13 to panel 15 with screw(G) as shown.



14


 
 
C x 2
M5 x 40 mm

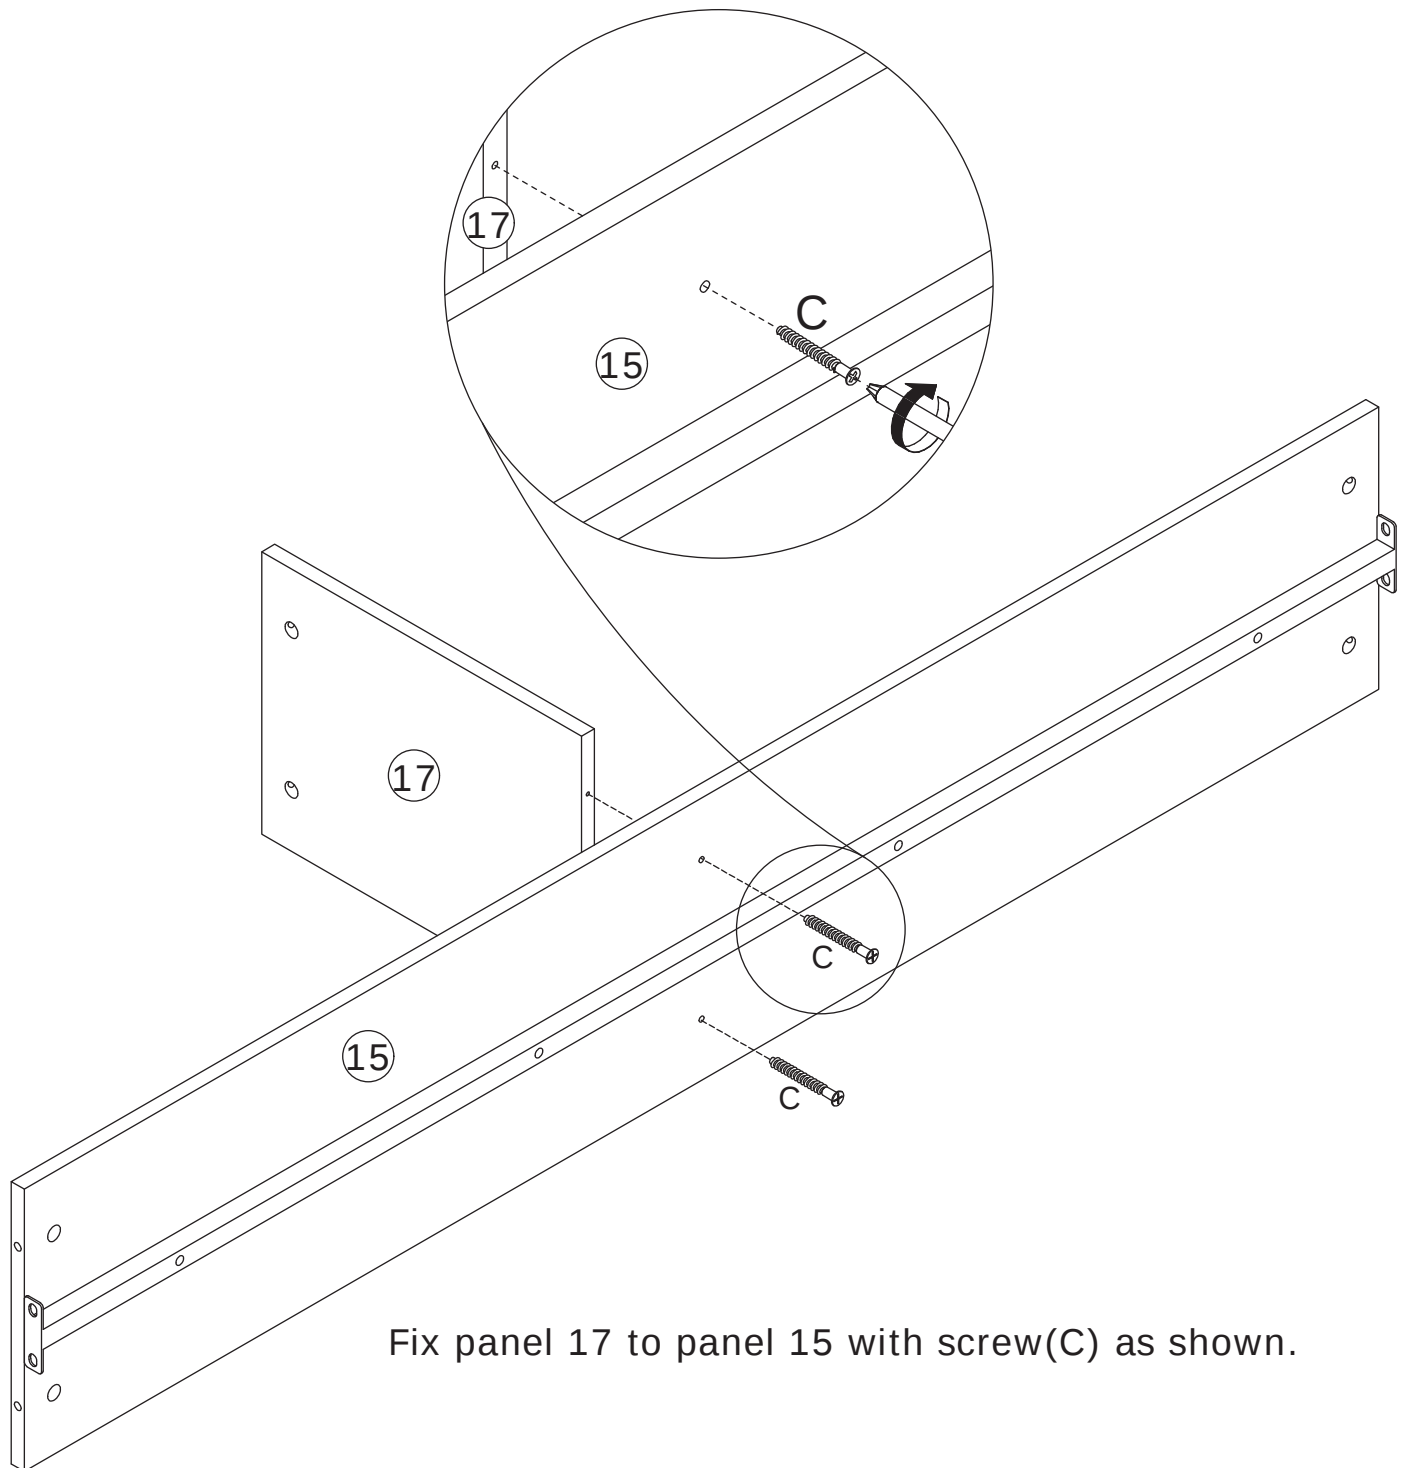

Fix panel 17 to panel 15 with screw(C) as shown.

  
15

A x 4  M5 x 42 mm	B x 2  Ø15 x 10 mm	F x 2  M6 x 12 mm	x 1  #4	
--	---	--	---	---

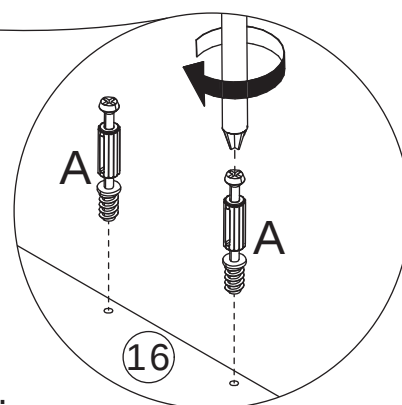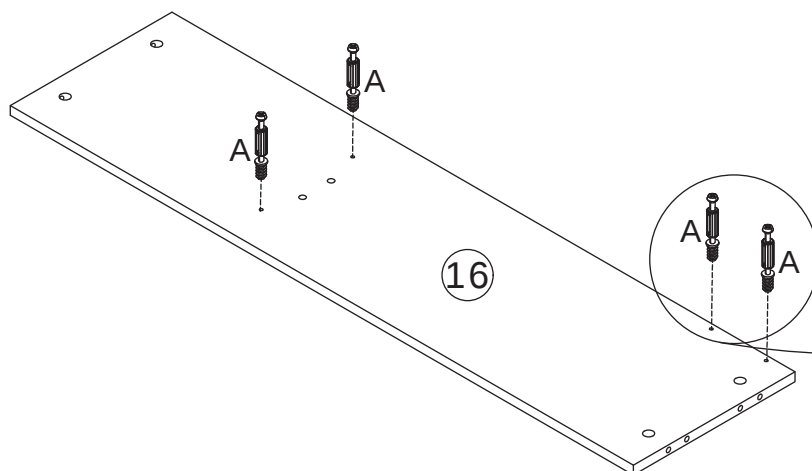  
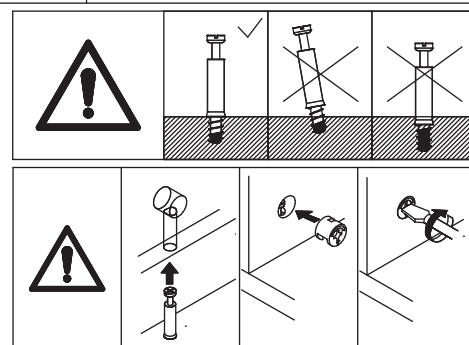 






Screw eccentric rod(A) into panel 16 at first.
Attach panel 16 to panel 15, add cam lock(B)
into and turn clockwise to tighten as shown.

 Fix tube 13 to panel 16 with screw(F) as shown.

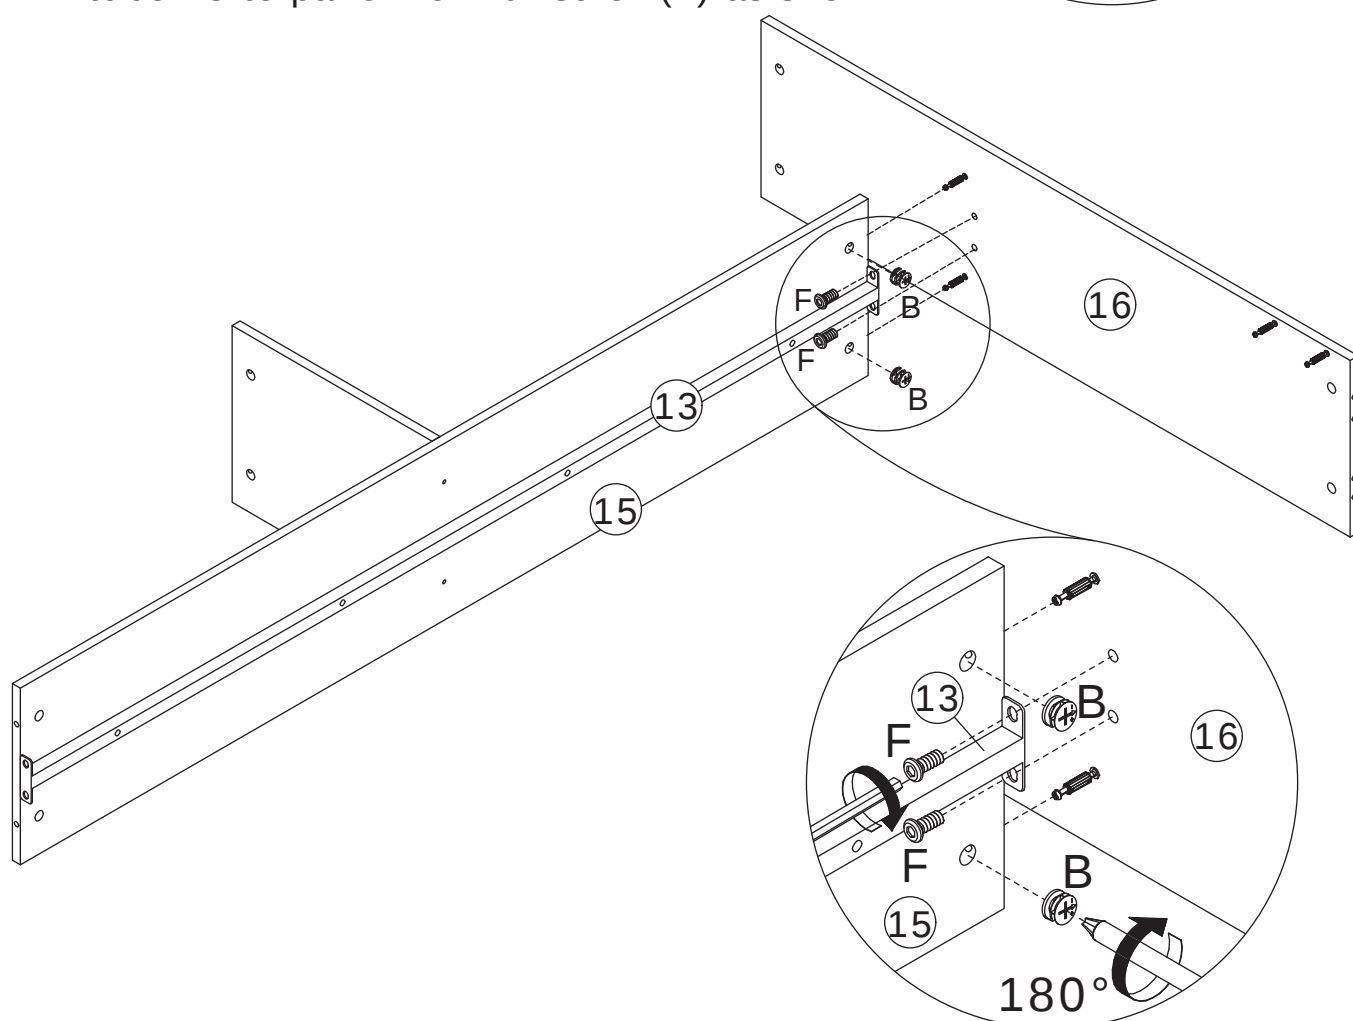


16

  A x 4  M5 x 42 mm	B x 6  Ø15 x 10 mm	F x 2  M6 x 12 mm	x 1  #4	
--	---	--	---	---

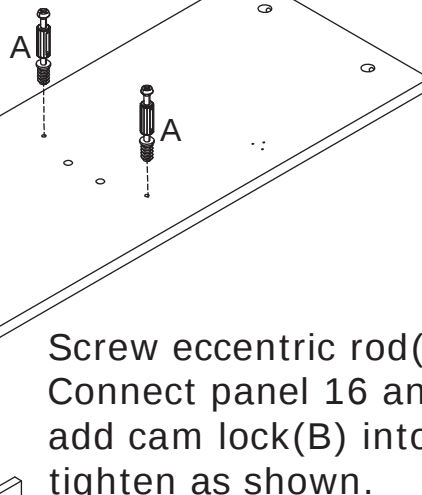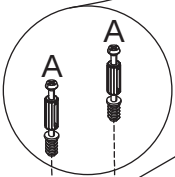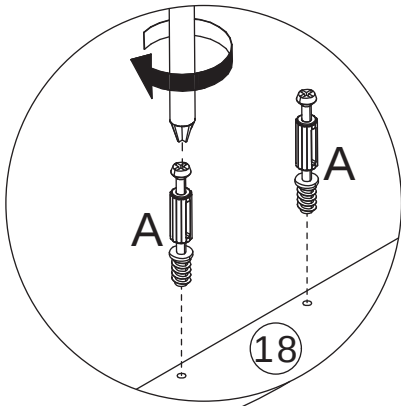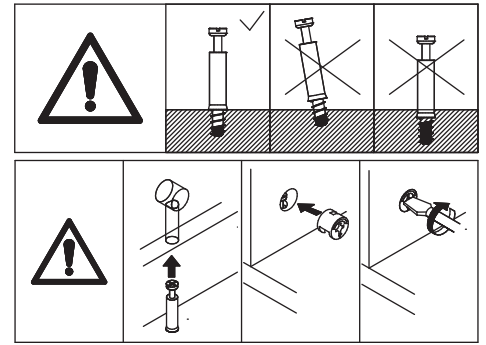    


Screw eccentric rod(A) into panel 18 at first. Connect panel 16 and 18 to panel 15 and 21, add cam lock(B) into and turn clockwise to tighten as shown.

 Fix tube 13 to panel 18 with screw(F) as shown.

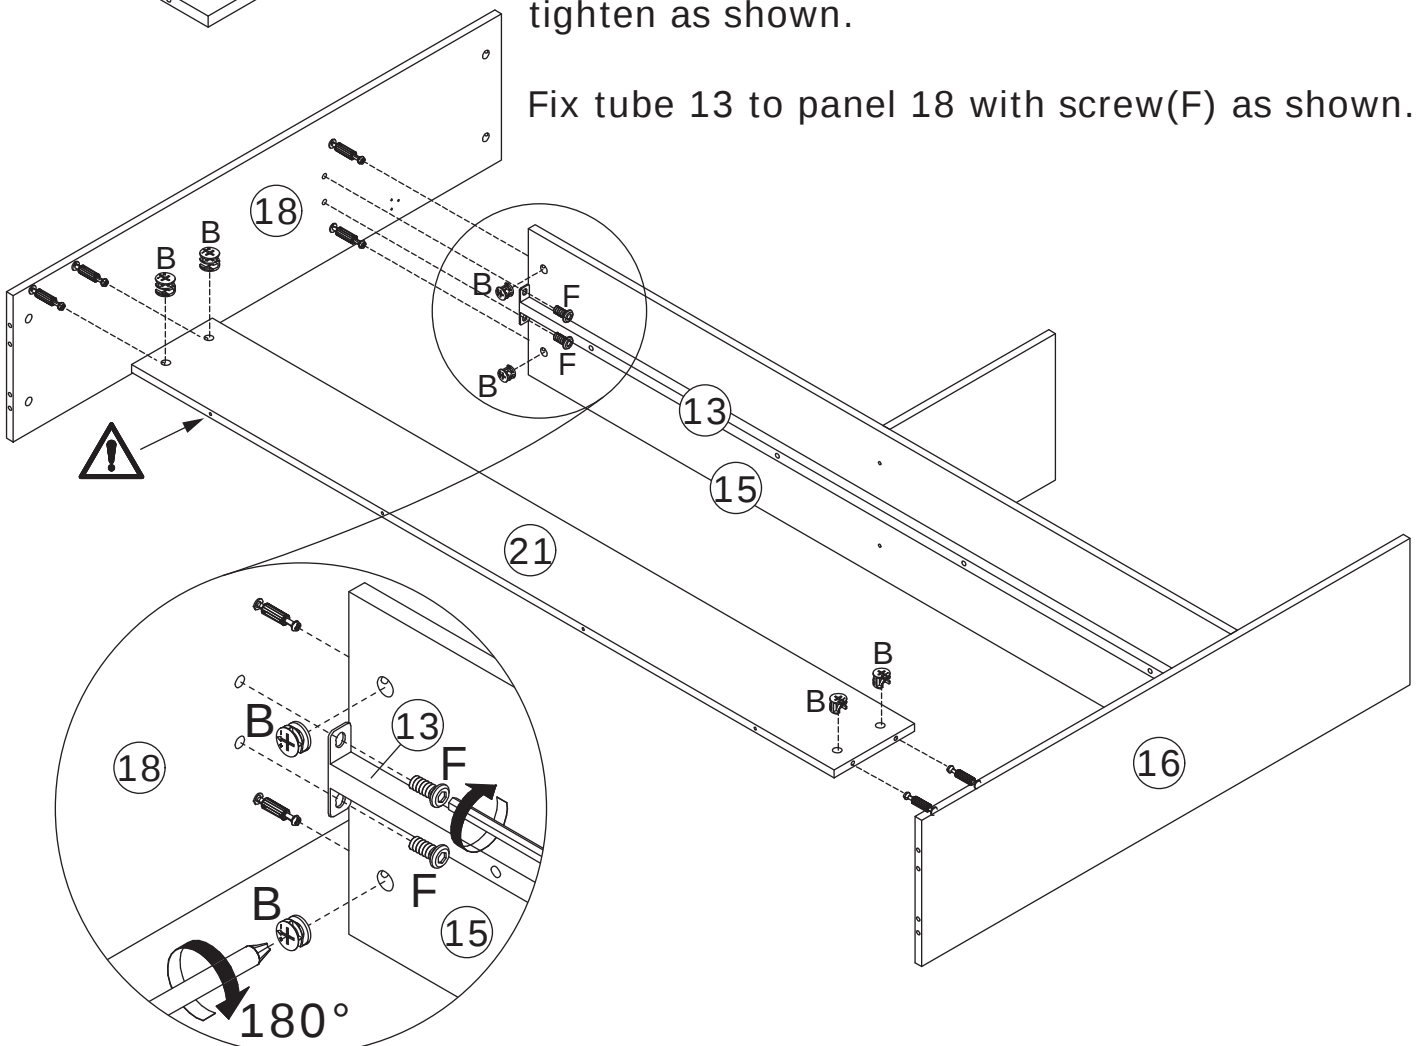

17





 
A x 6

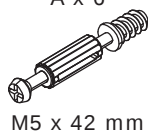

B x 6








     Ø15 x 10 mm

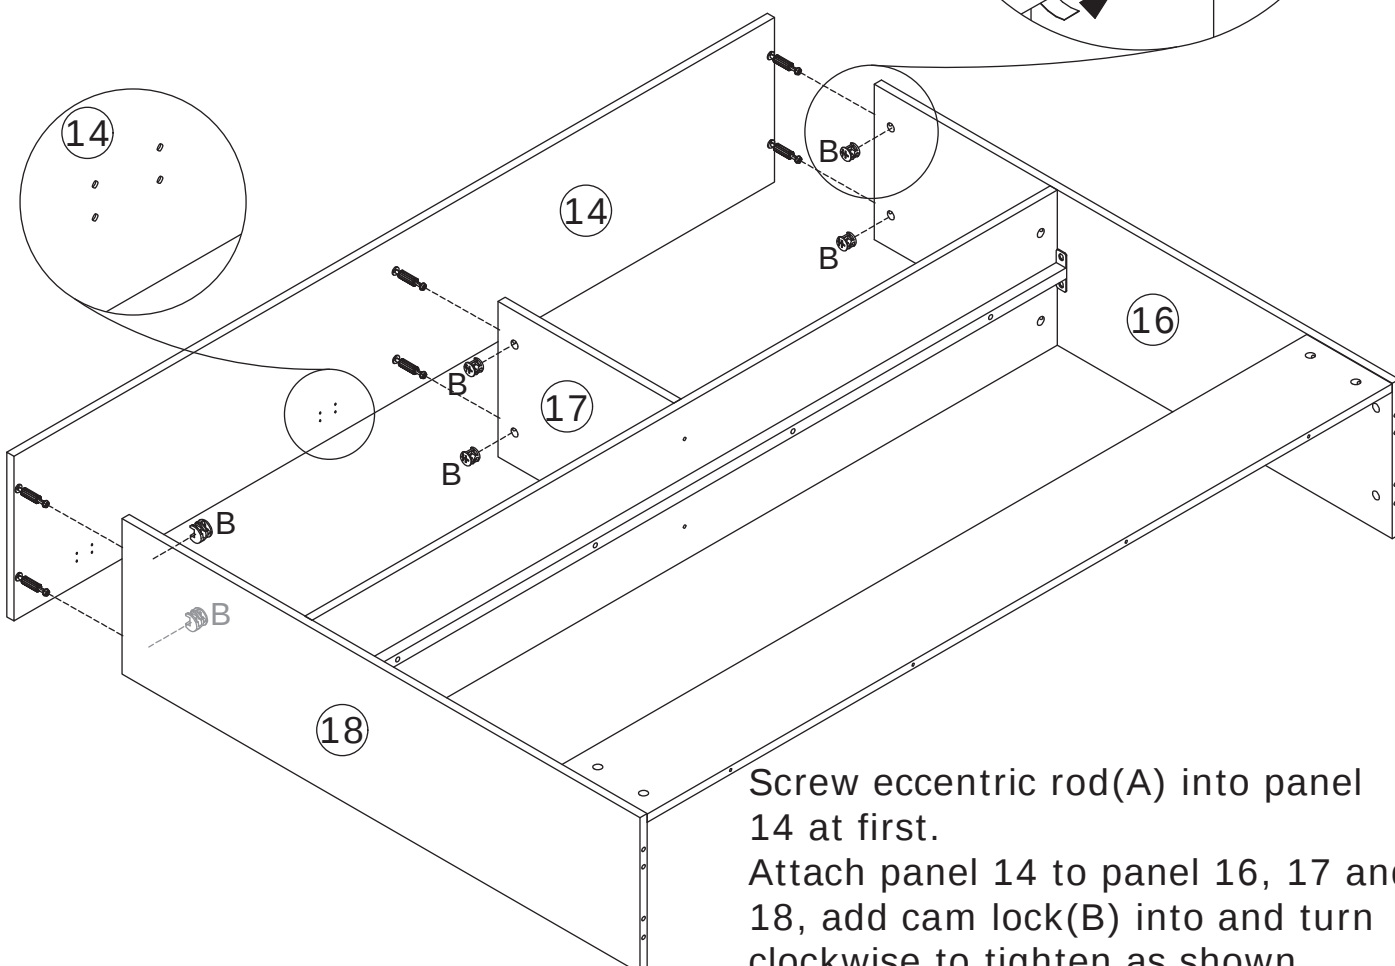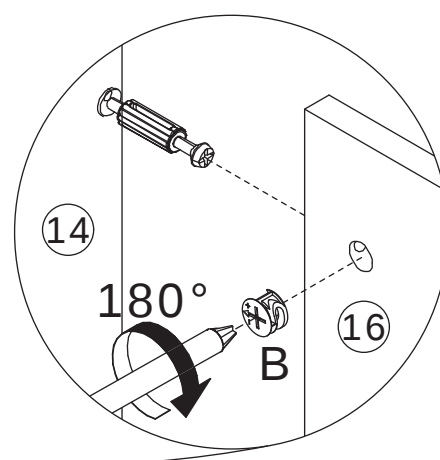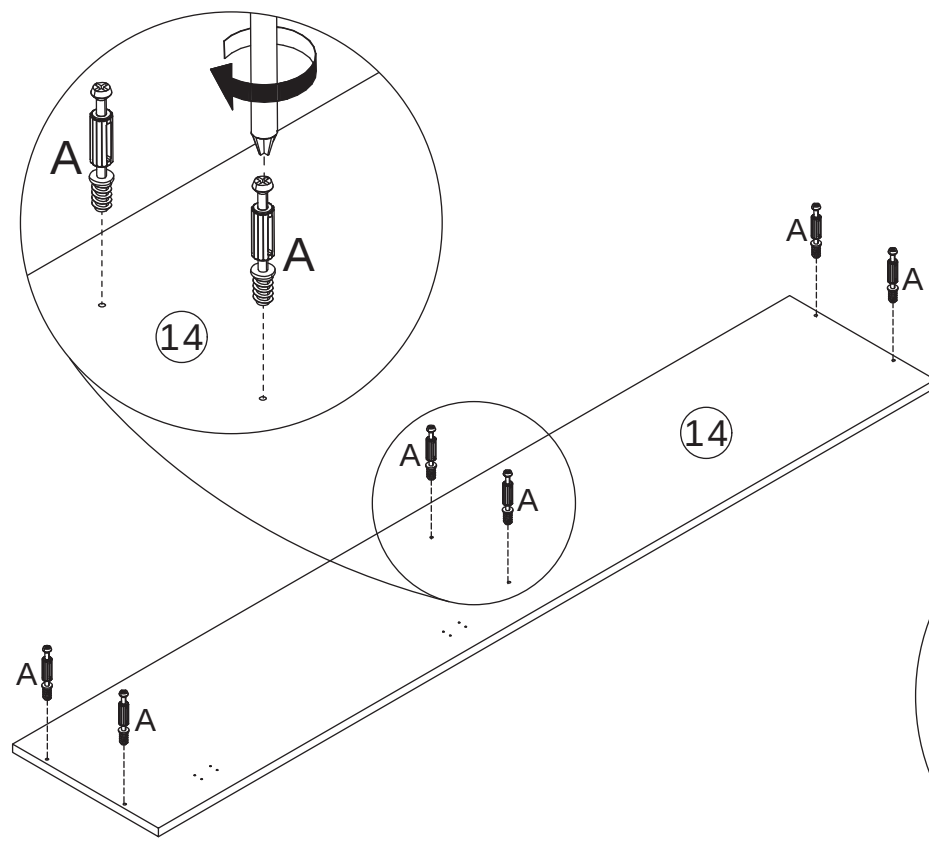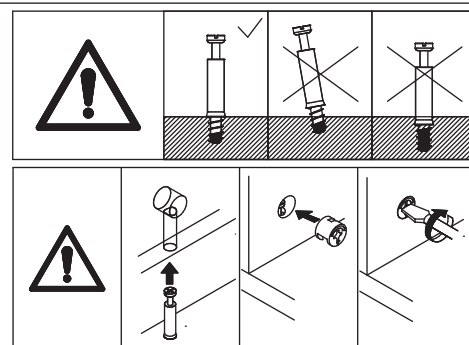



Screw eccentric rod(A) into panel 14 at first.
Attach panel 14 to panel 16, 17 and 18, add cam lock(B) into and turn clockwise to tighten as shown.

     18

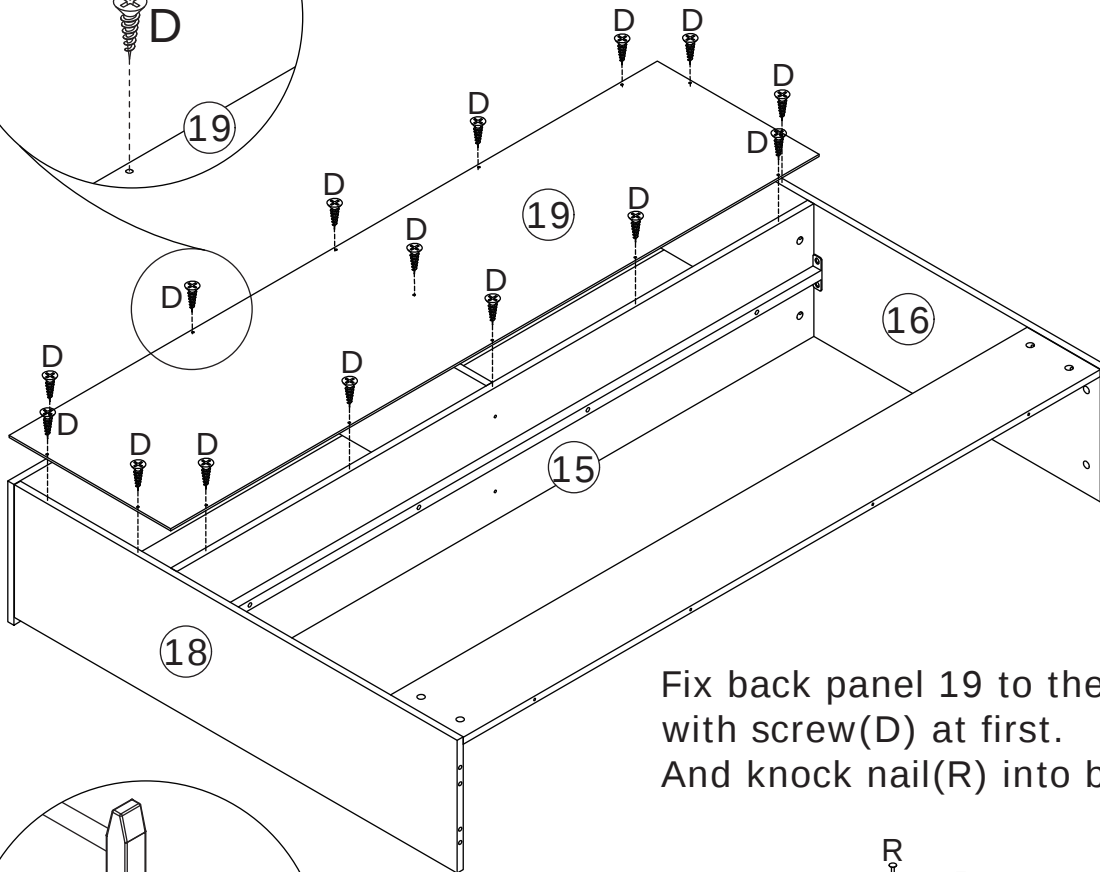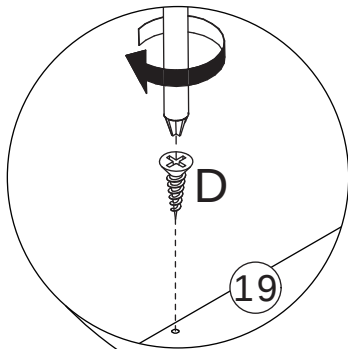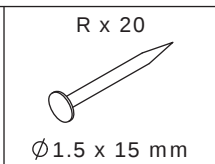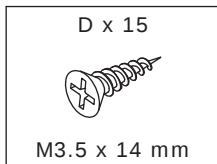


  Fix back panel 19 to the component with screw(D) at first.
And knock nail(R) into back.

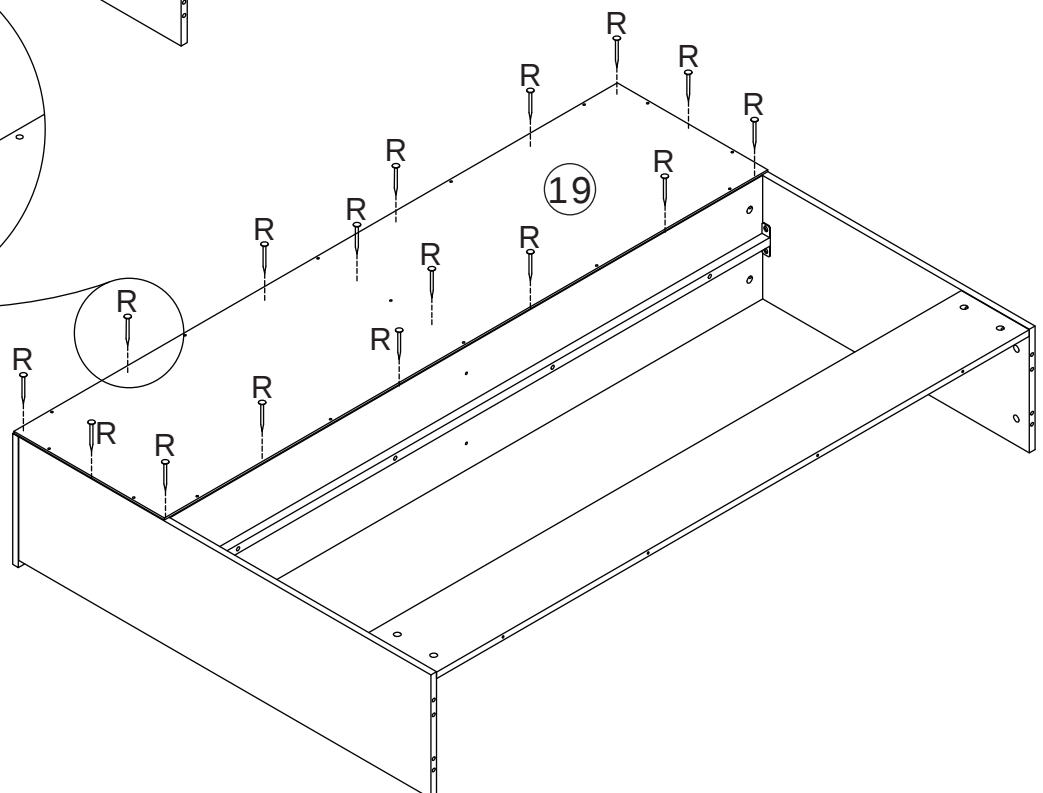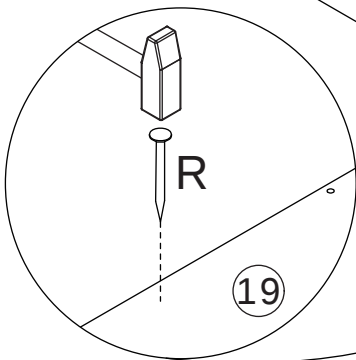


19

 D x 12




M3.5 x 14 mm

 O x 2




DW

 





Fix hinge(O) to panel 20 with screw(D) as shown.

 Assemble door panel 20 to panel 14 by fixing hinge with screw(D) as shown.

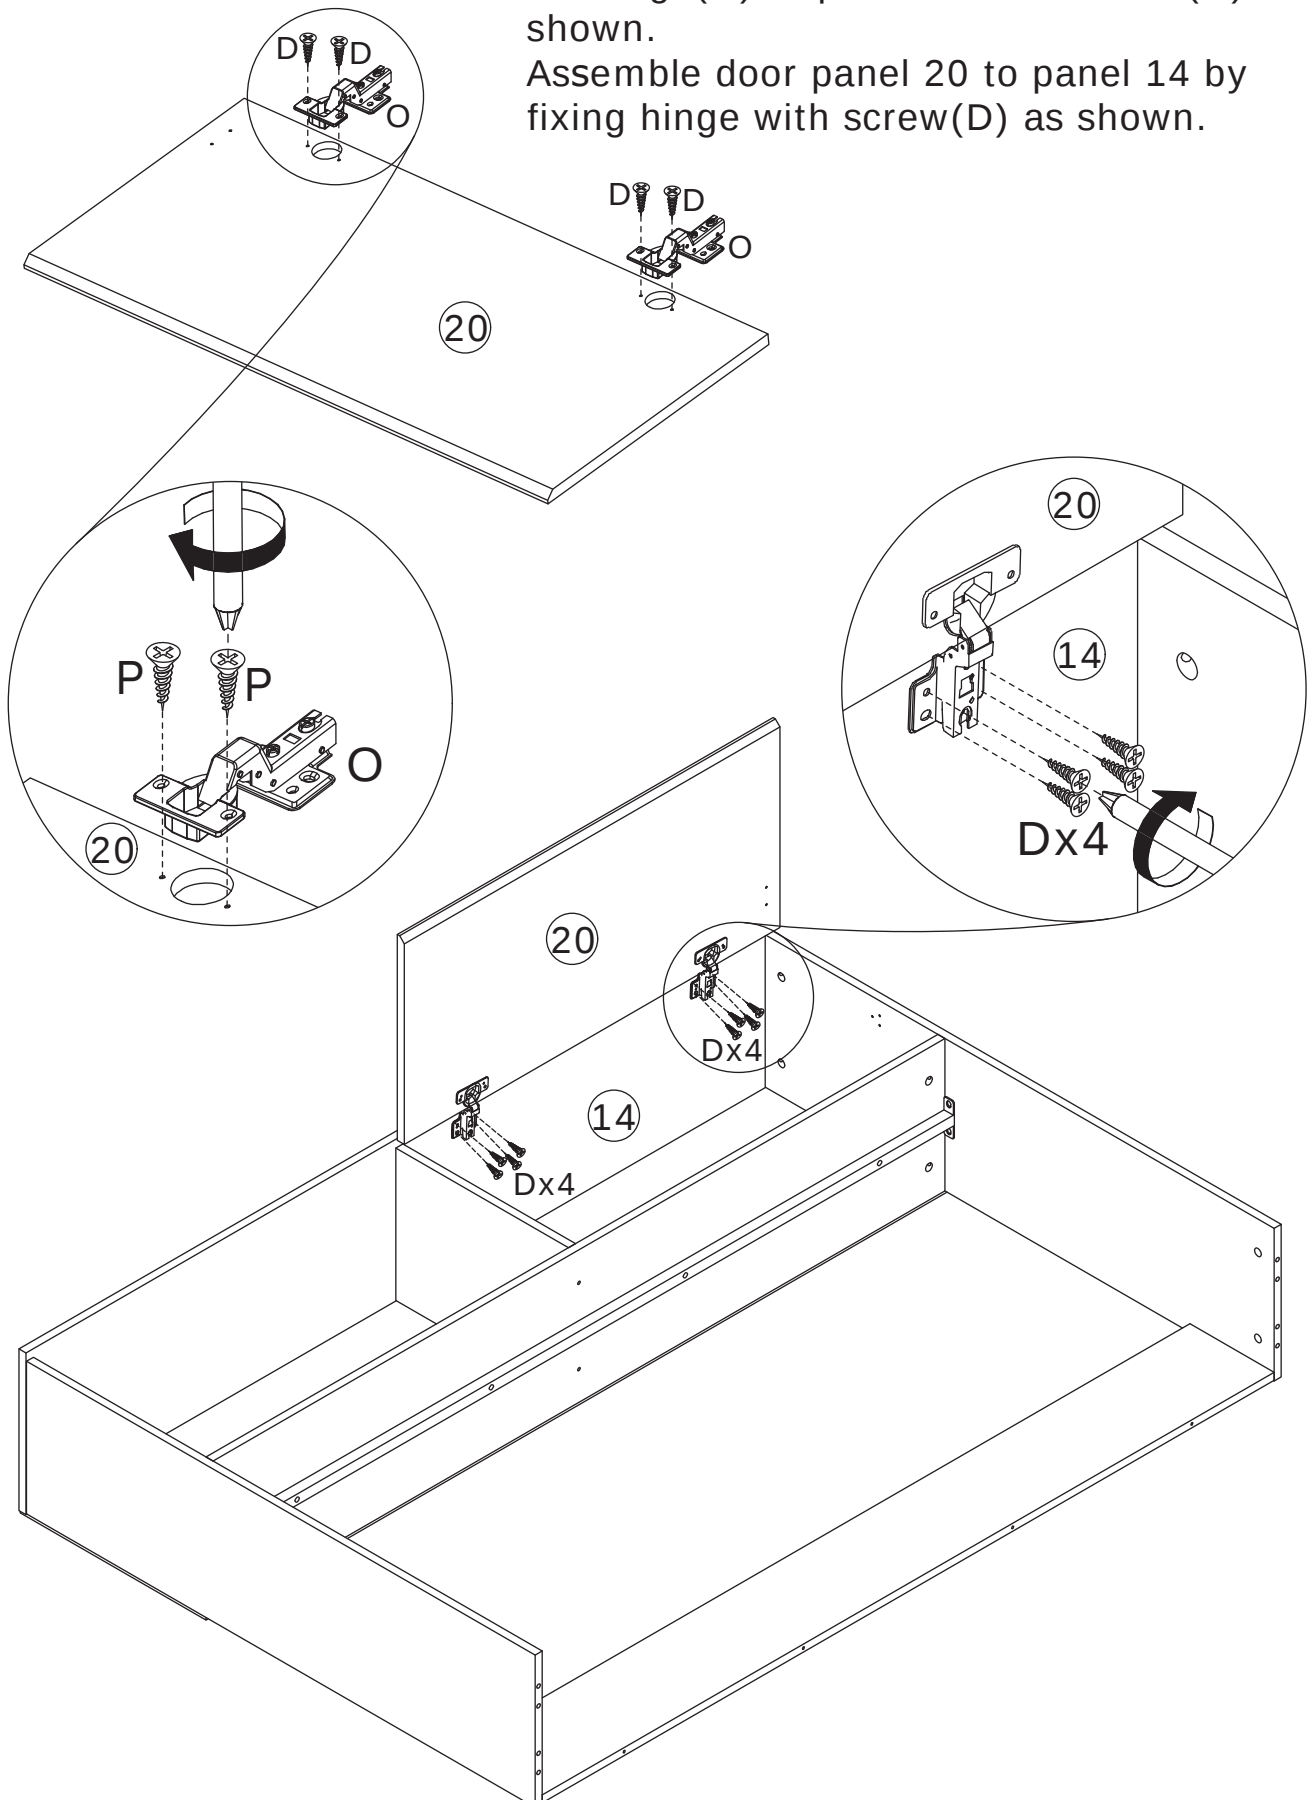


20

    
D x 5
M3.5 x 14 mm

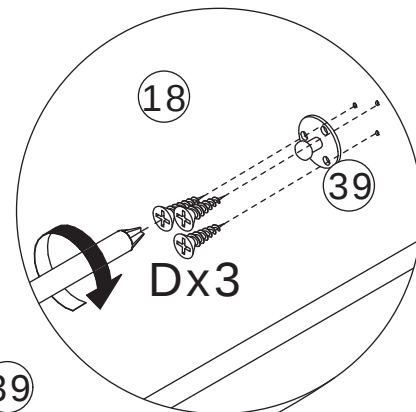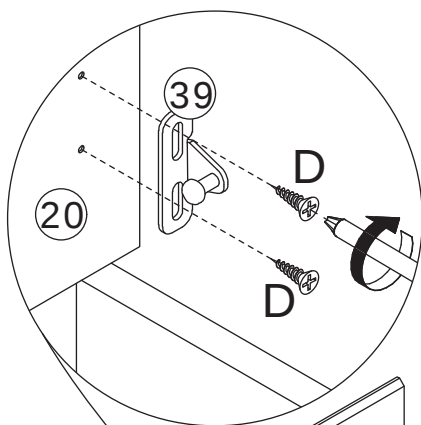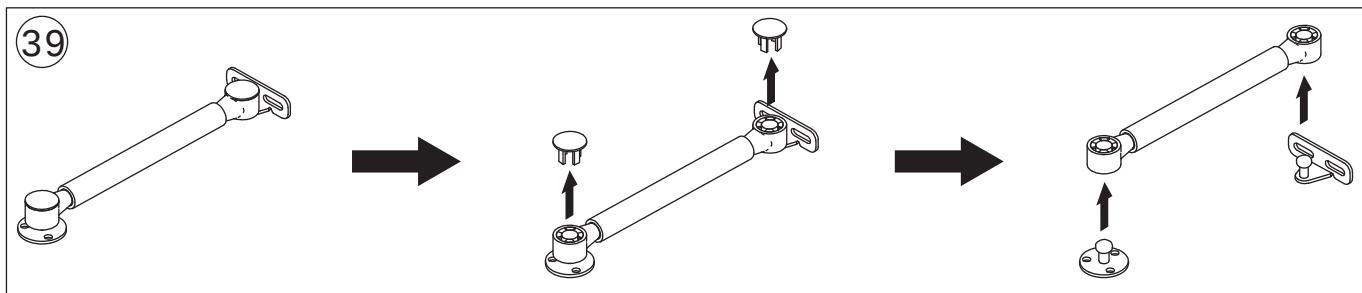

 
Fix part 39 to panel 20 and 18 with screw(D) as shown.

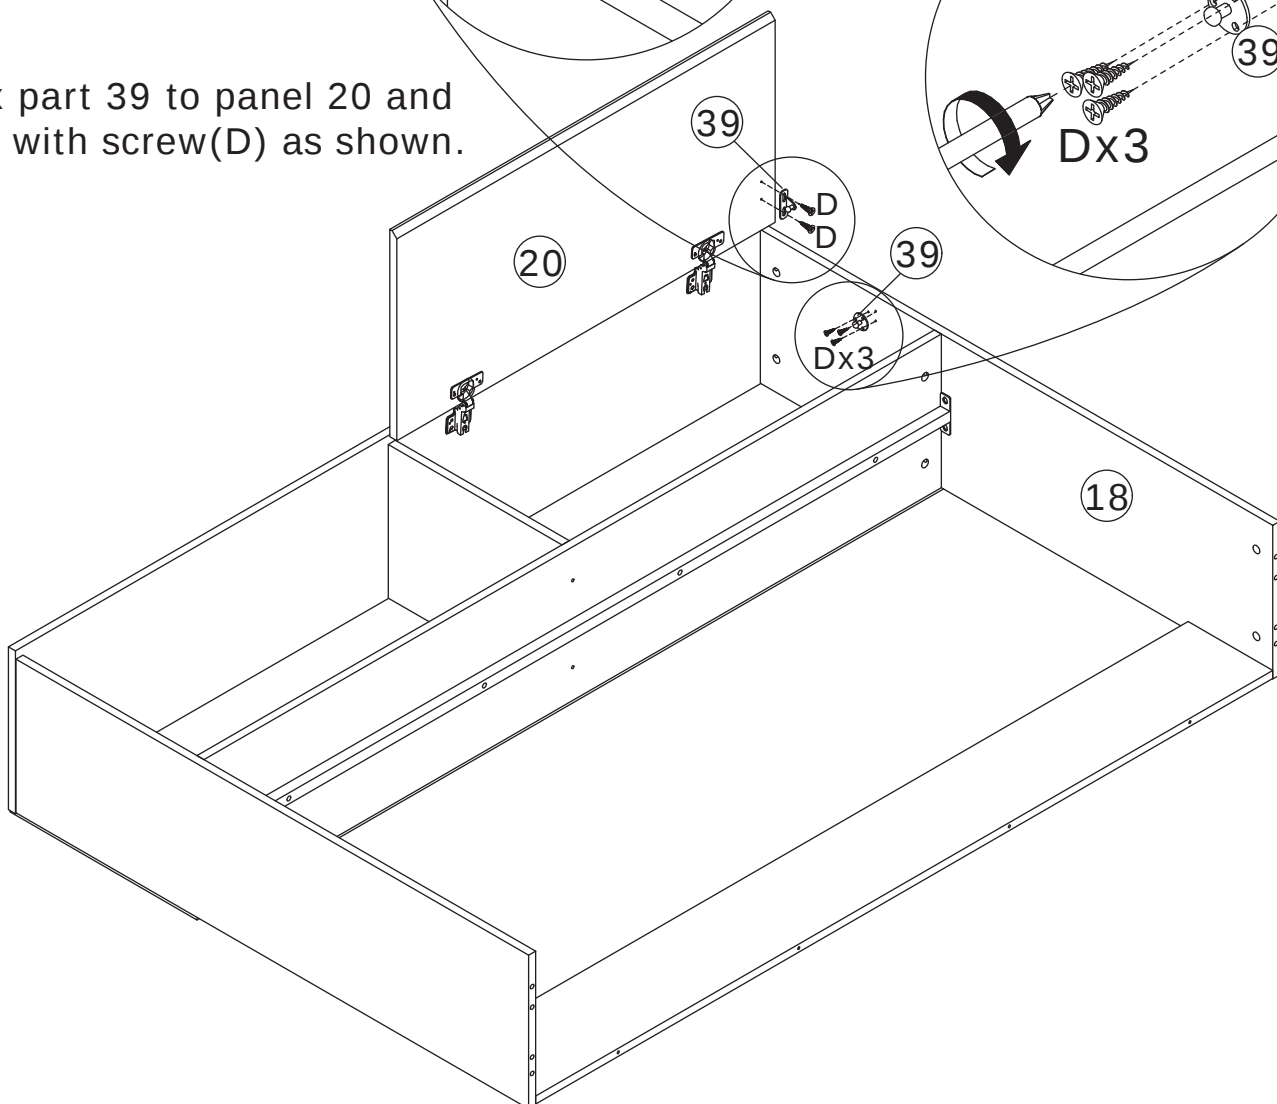





21

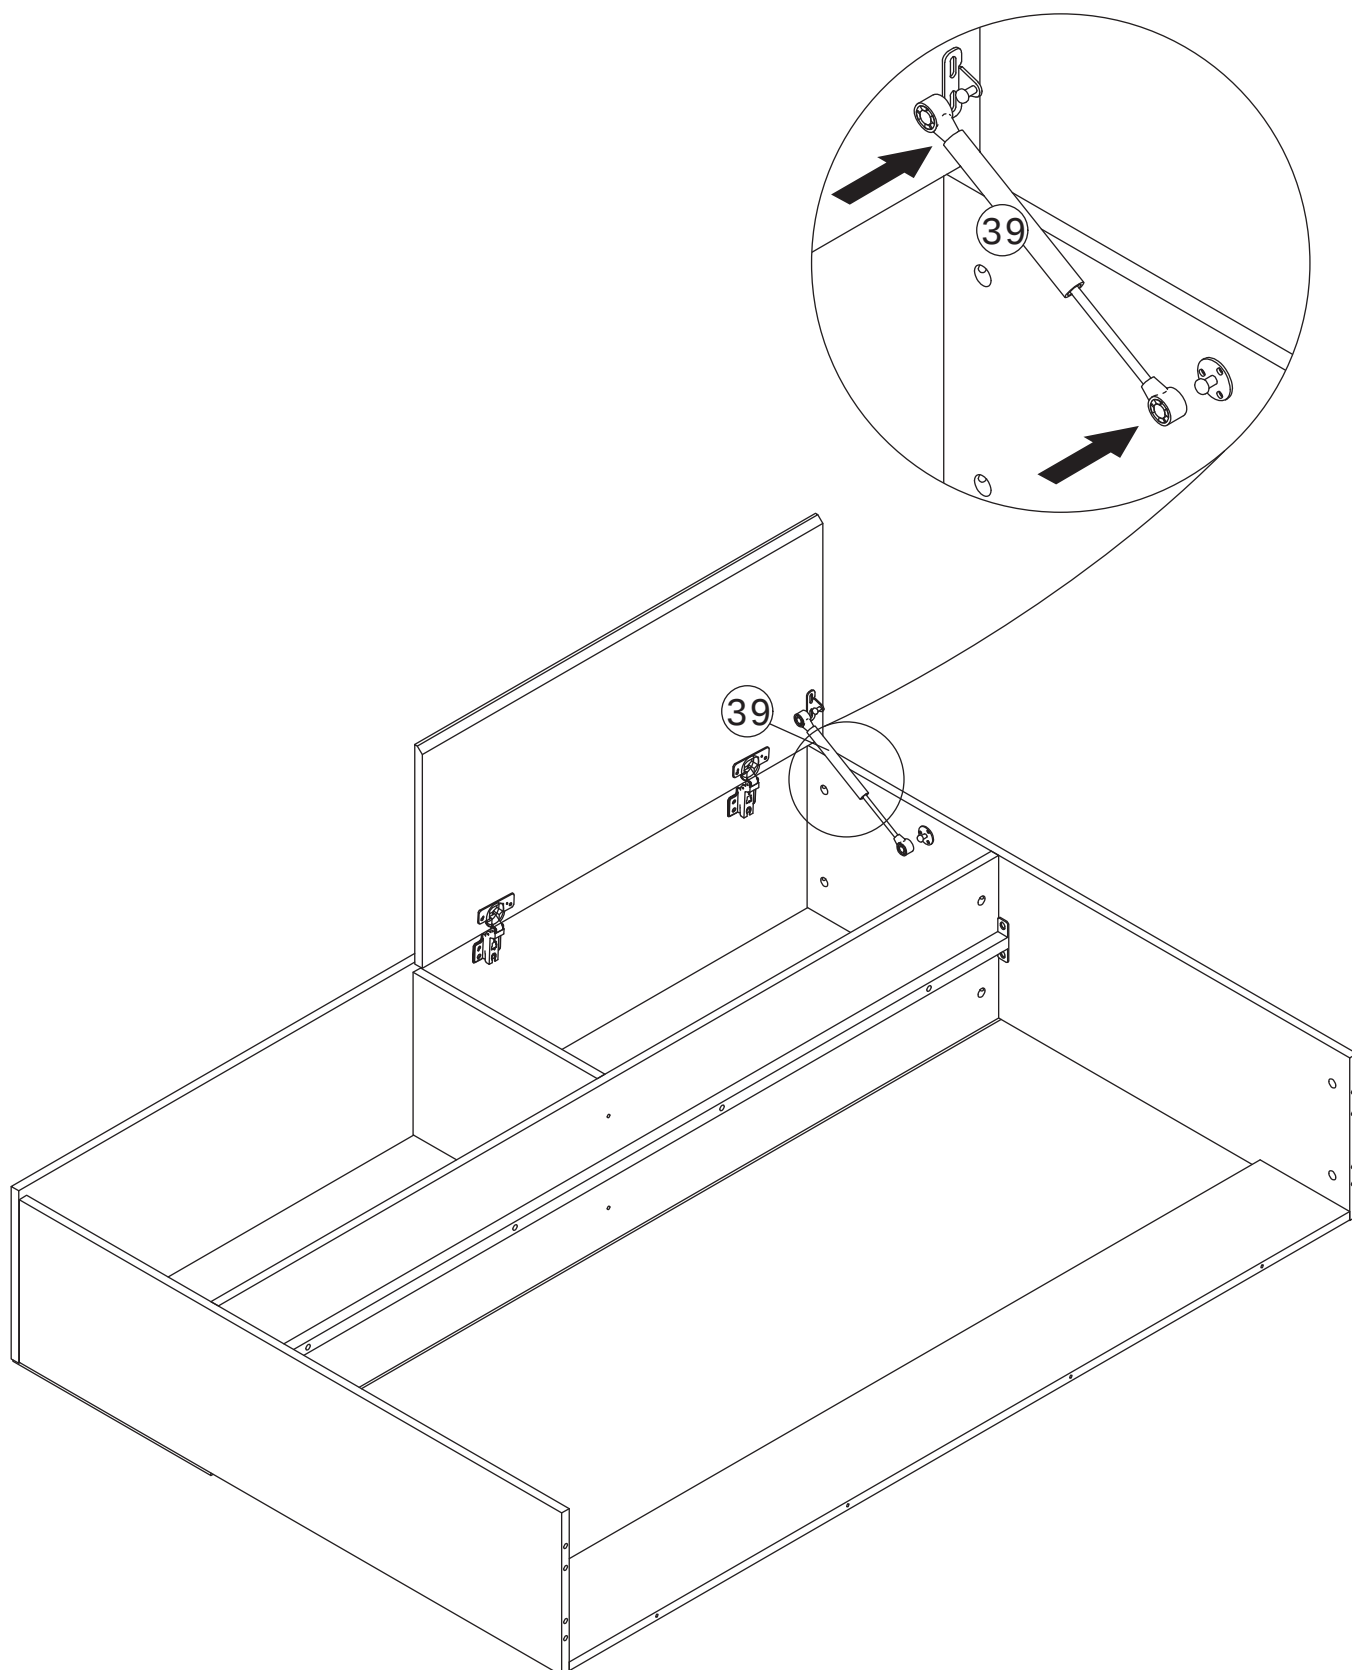 


22

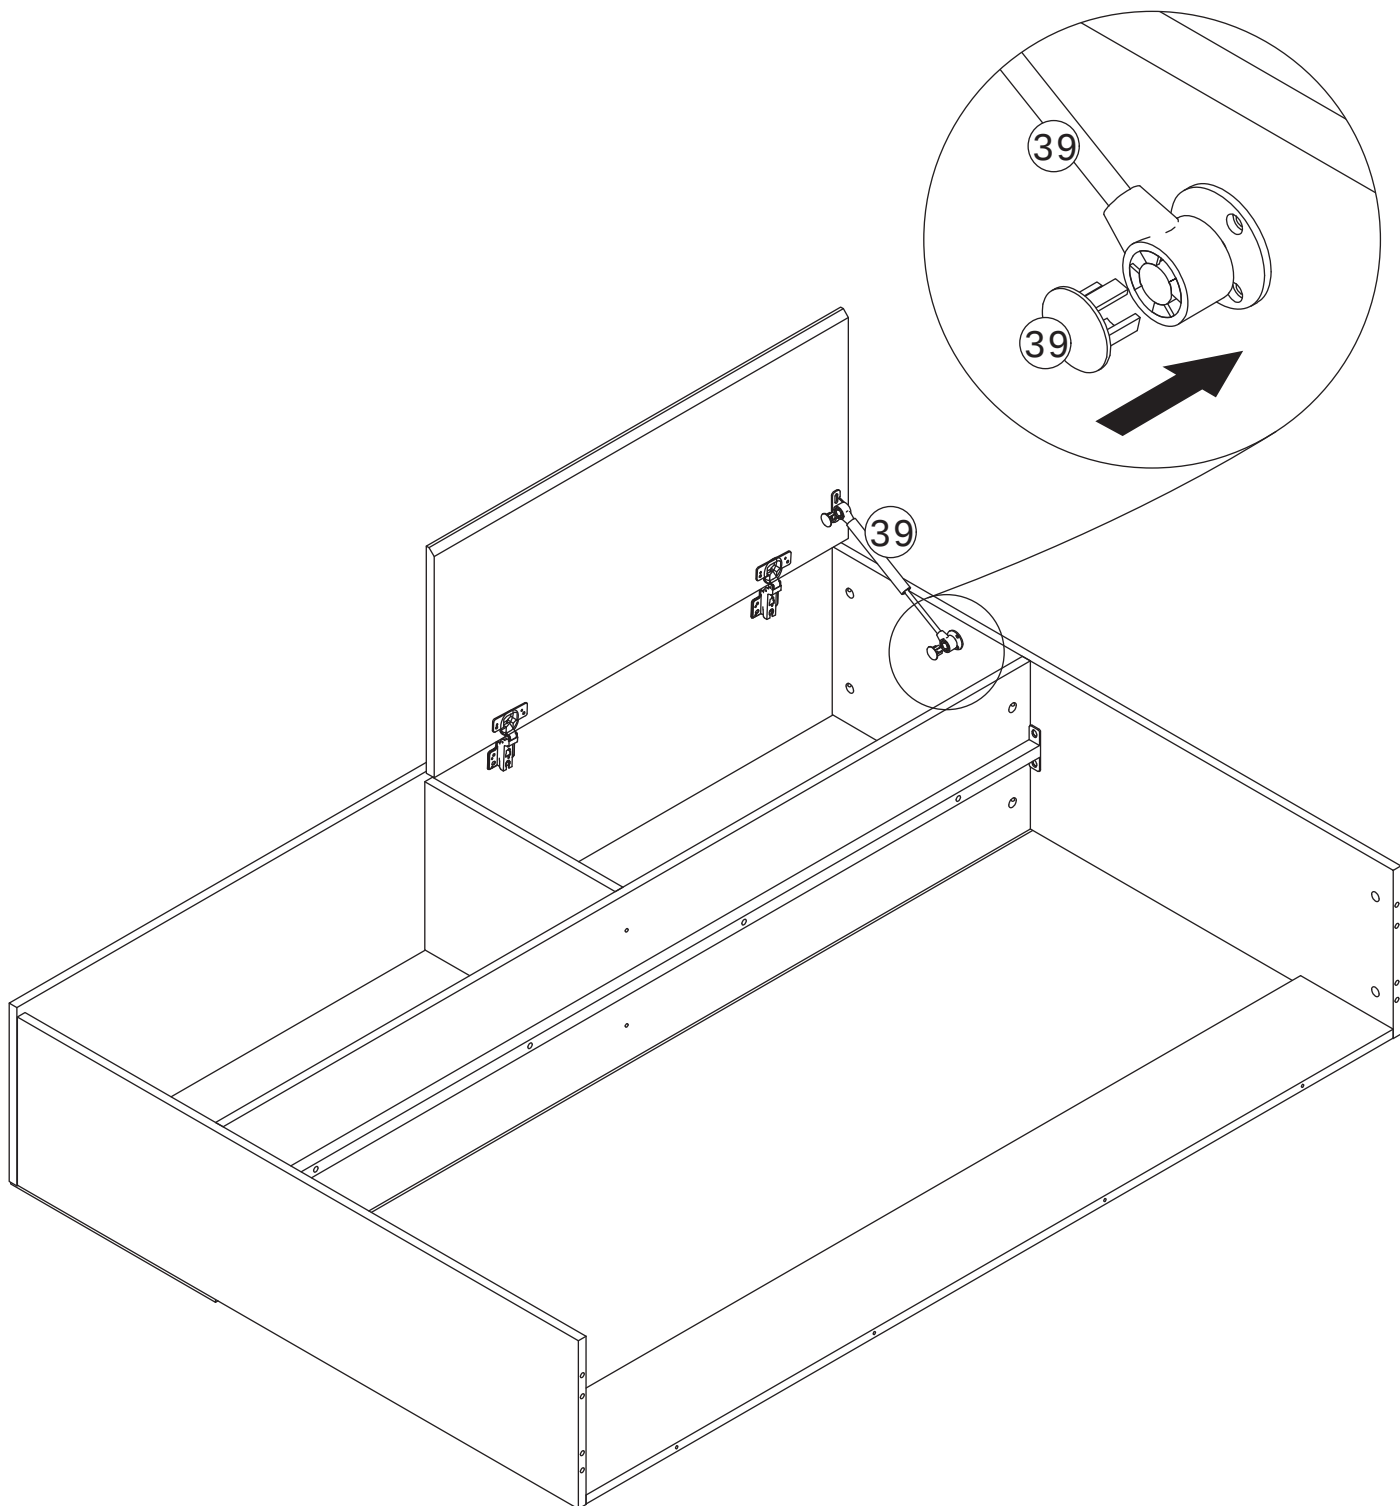 



23

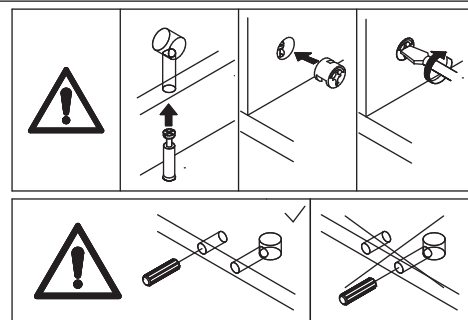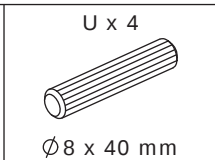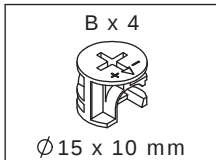    

 
Connect the two components using wooden dowel(U), add cam lock(B) into and turn clockwise to tighten as shown.

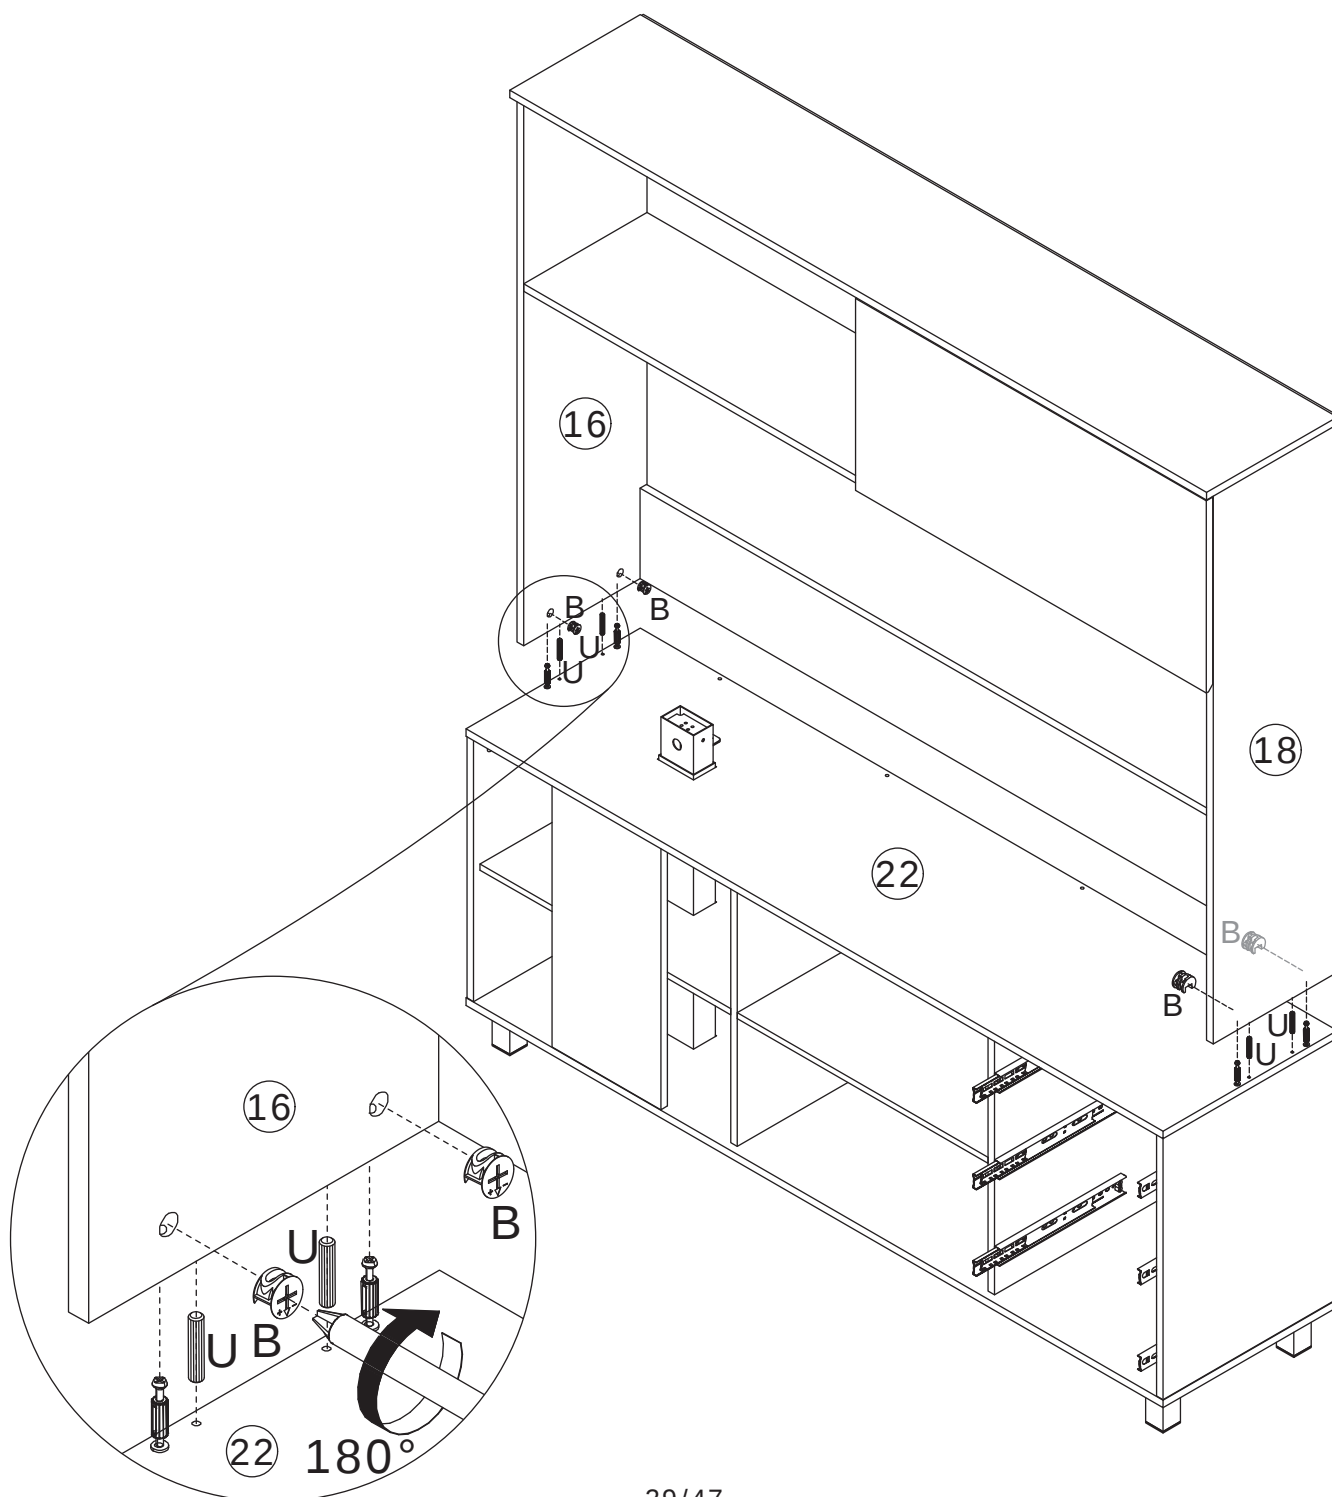



24

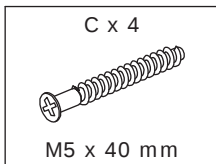  

 
Fix panel 21 to panel 22 with screw(C) as shown.

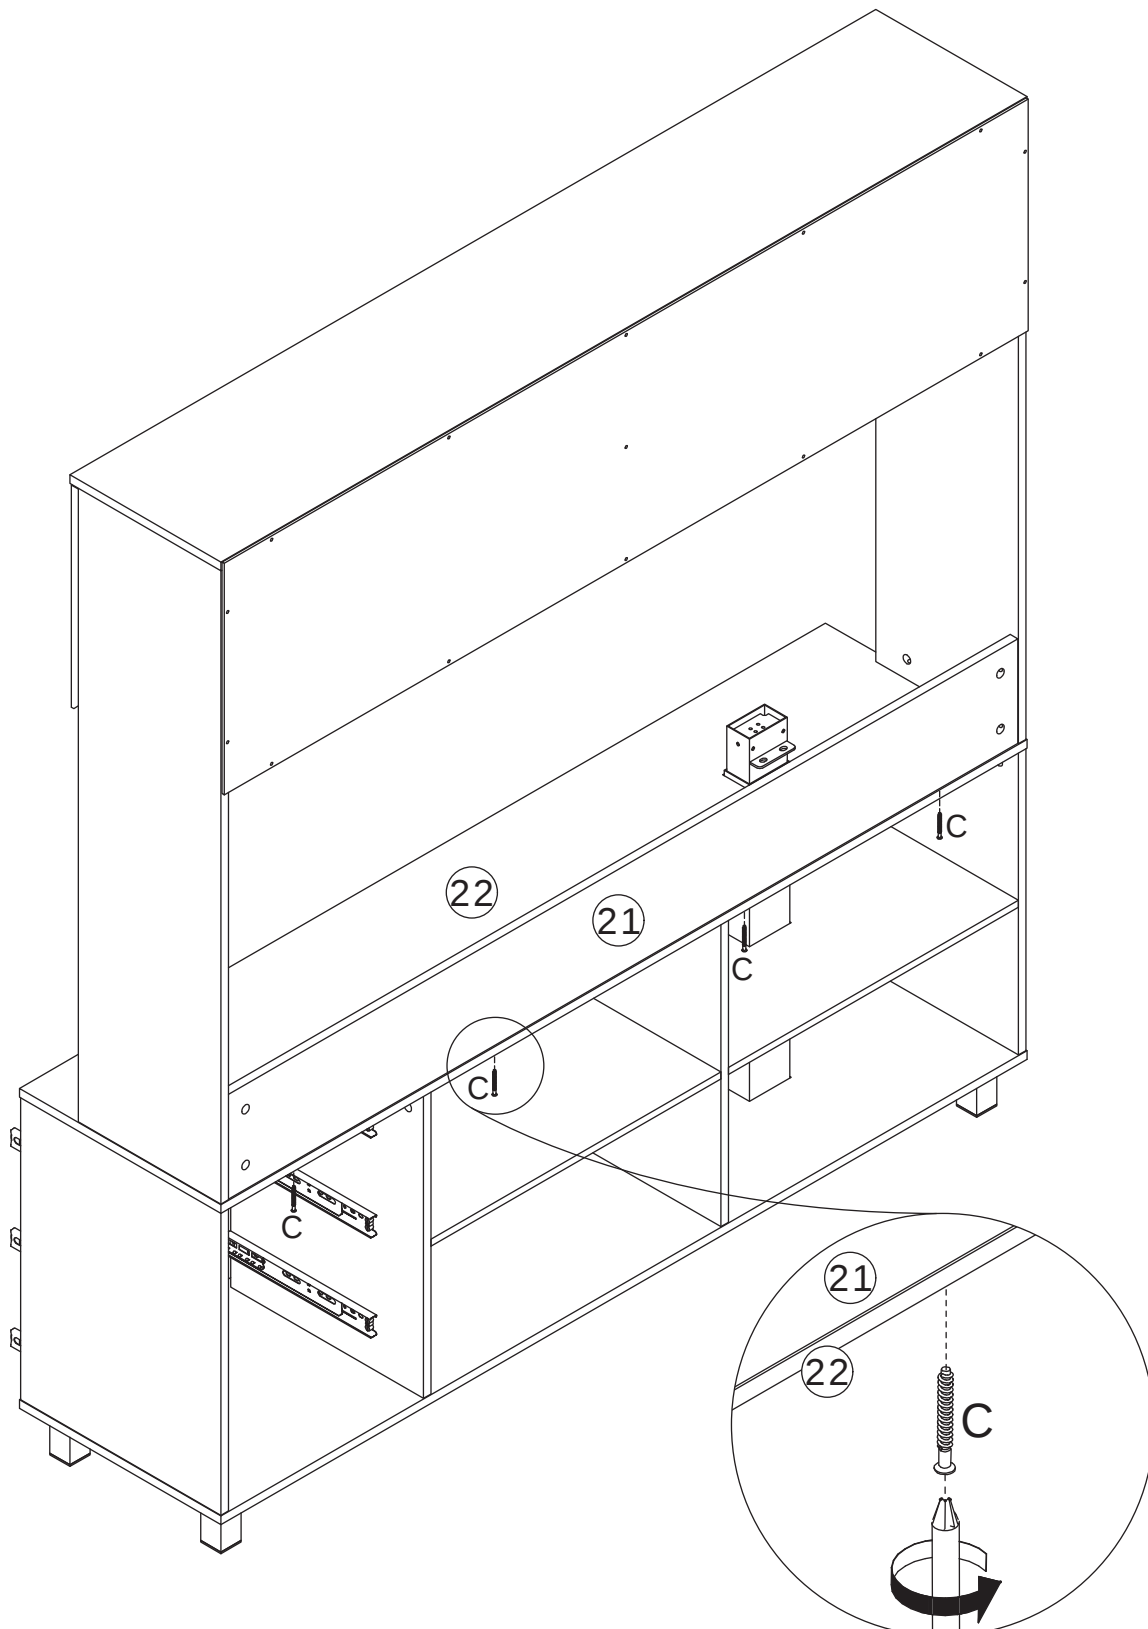

25

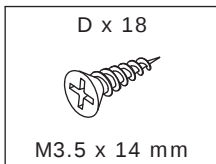  

 Fix back panel 24 to the component with screw(D) at first.

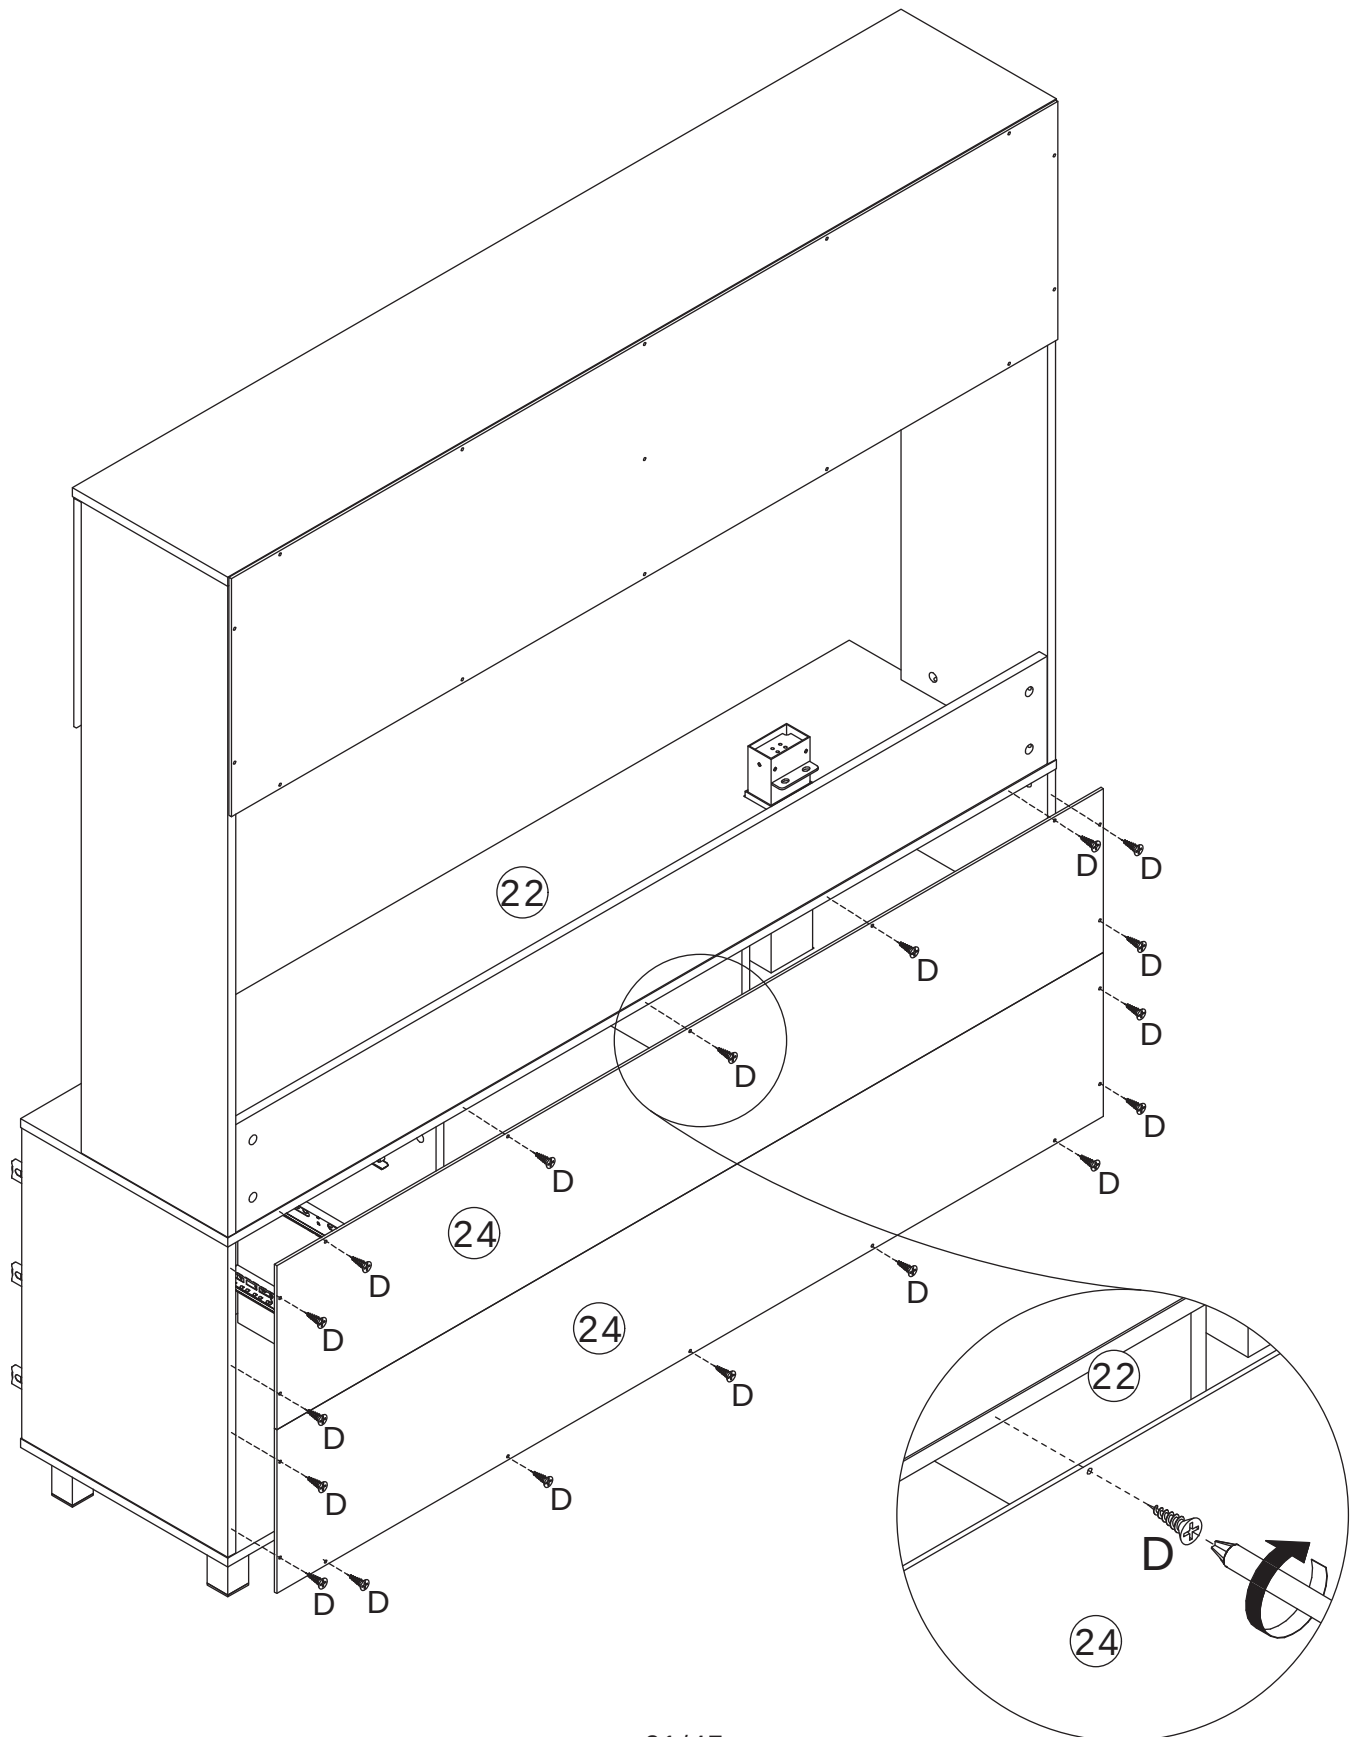


26




And knock nail(R) into back.

 Fix iron sheet(S) to back panels using nail(R) as shown.

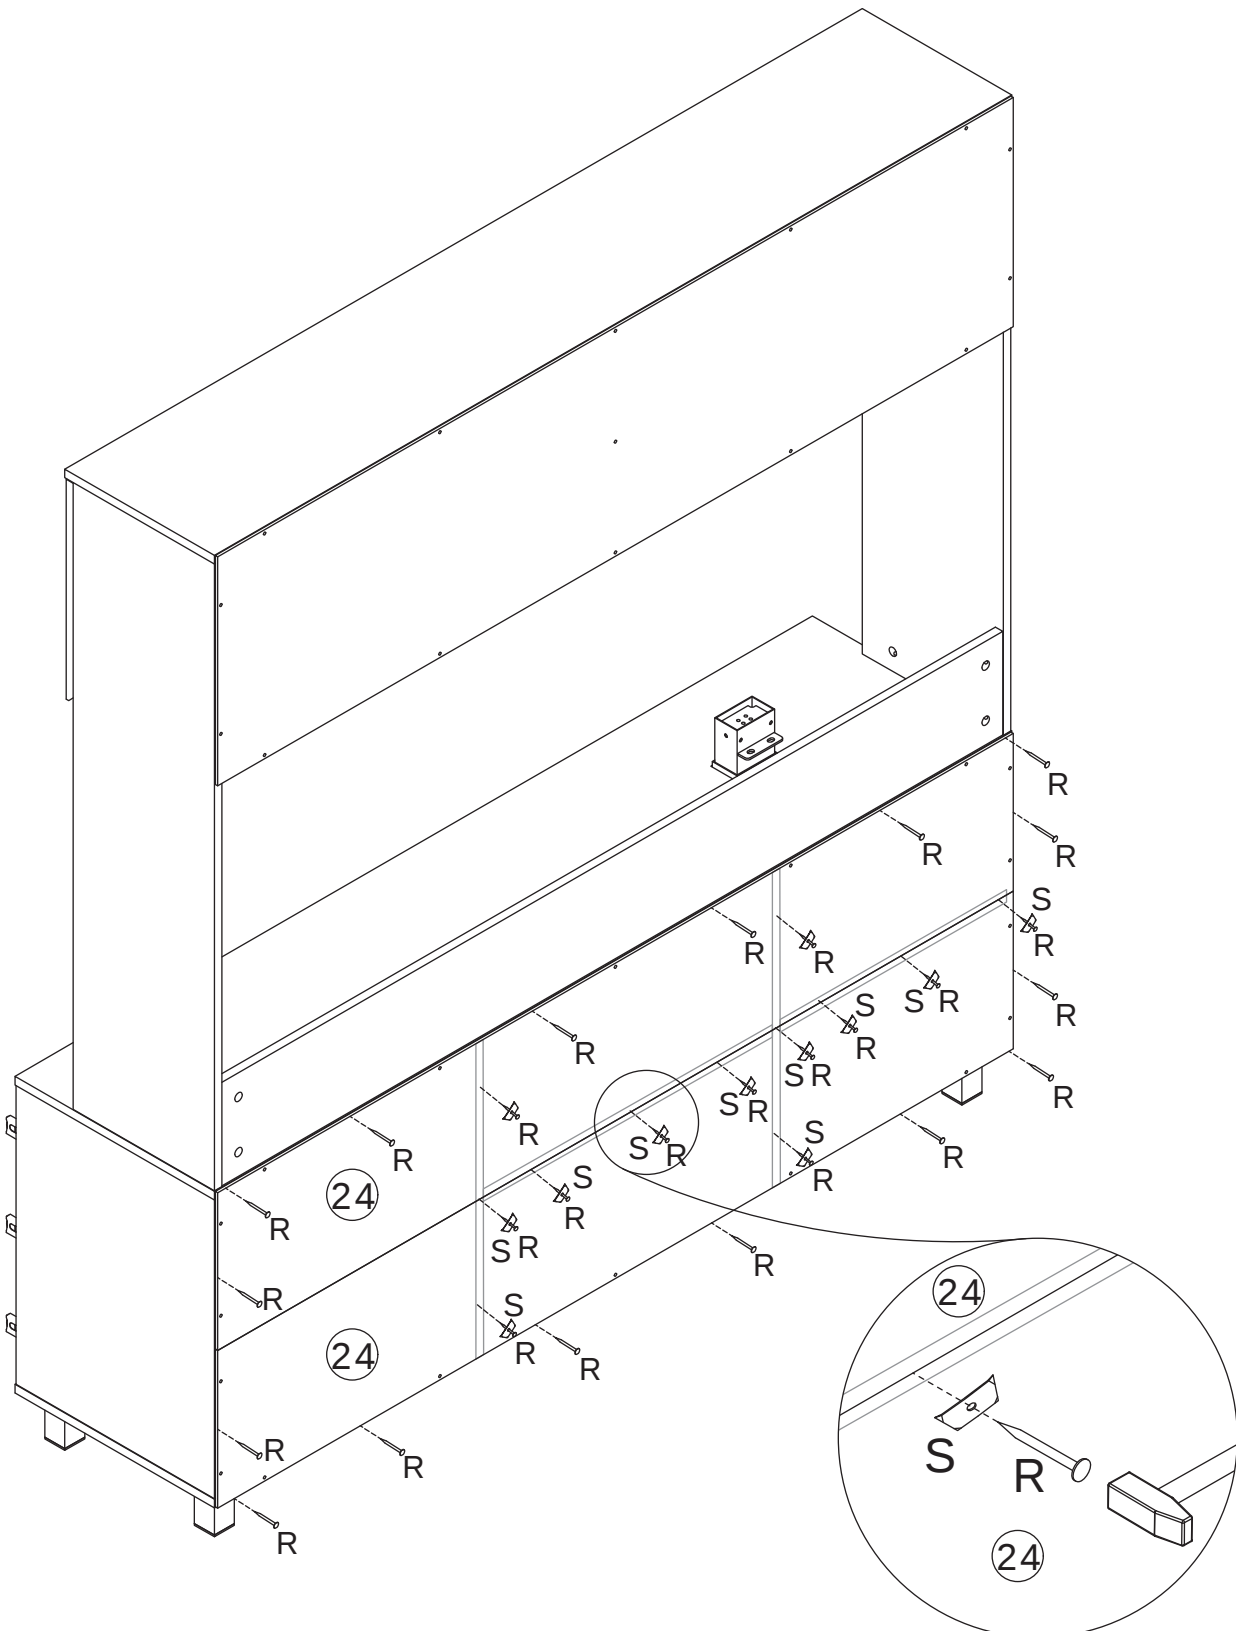


27

 C x 12





M5 x 40 mm



 






Fix panel 33 to panel 34 and 35 with screw(C) as shown.

  Insert panel 36 along available grooves as shown.

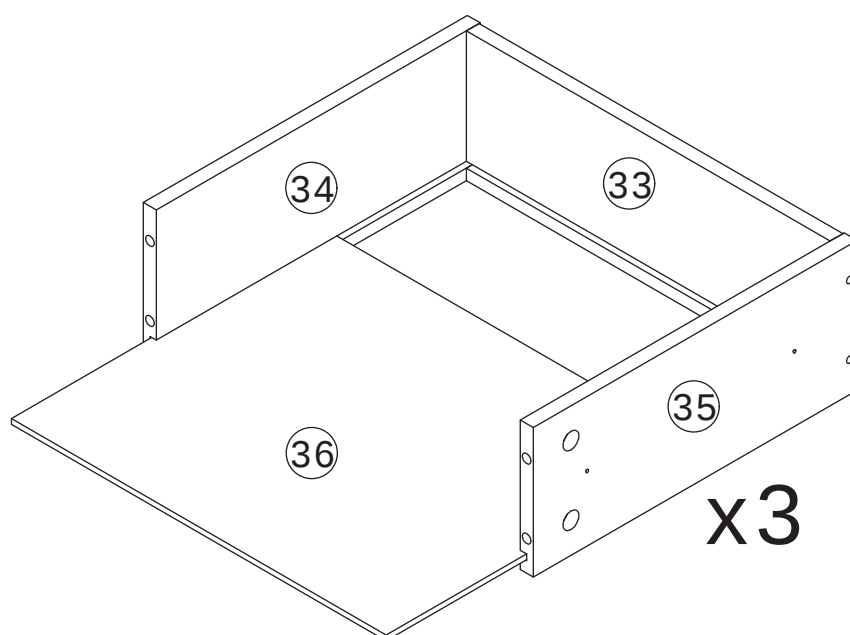
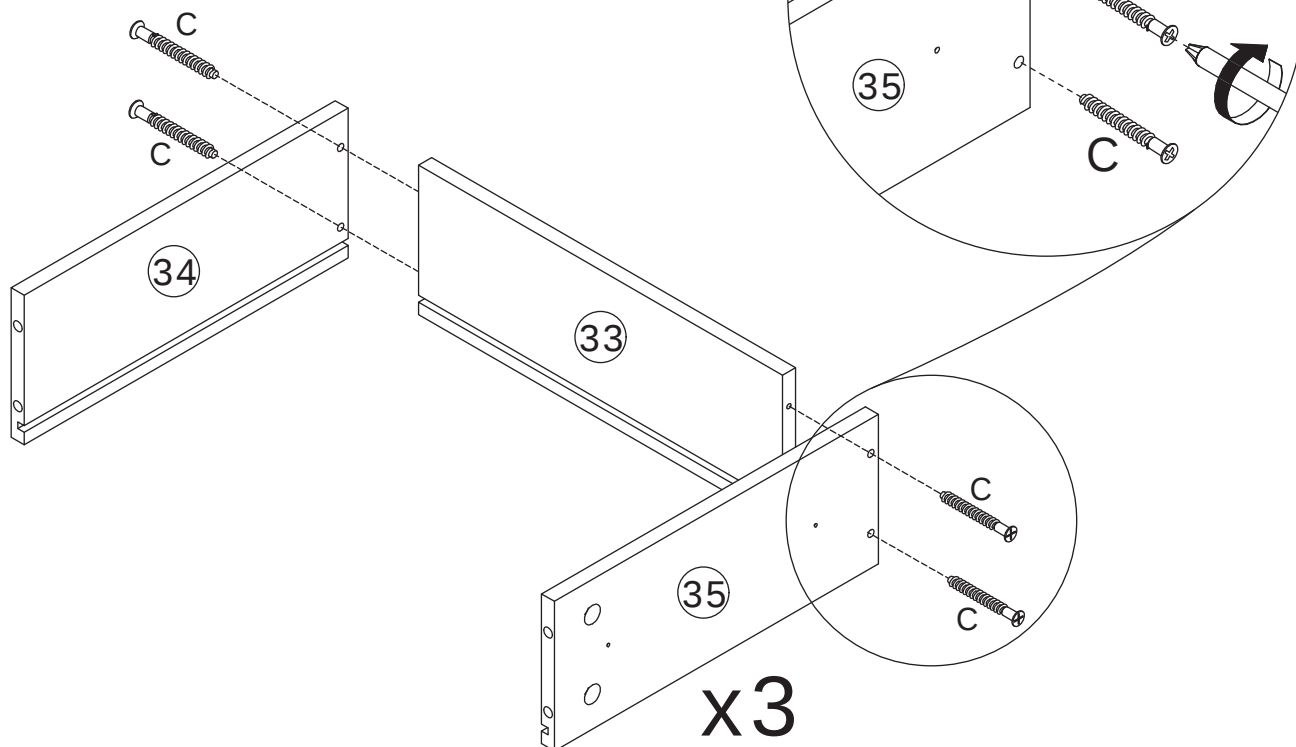


28

   A x 12  M5 x 42 mm	B x 12  Ø15 x 10 mm	P x 3  220-96	Q x 6  M4 x 18 mm	
---	--	--	---	---

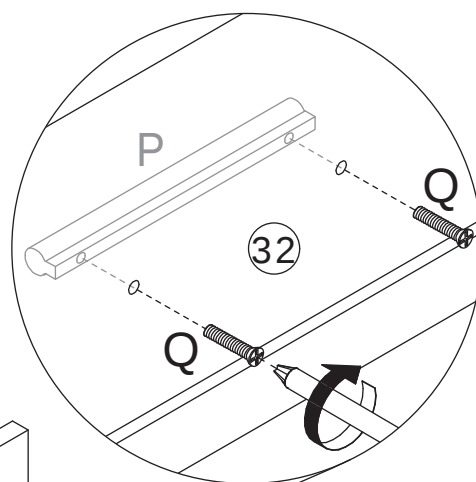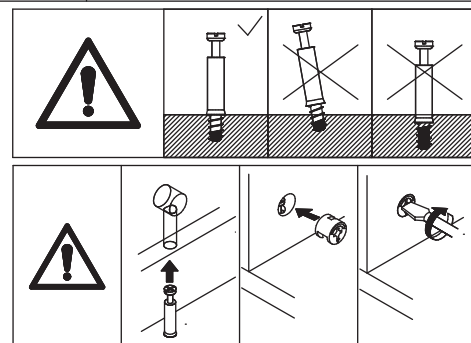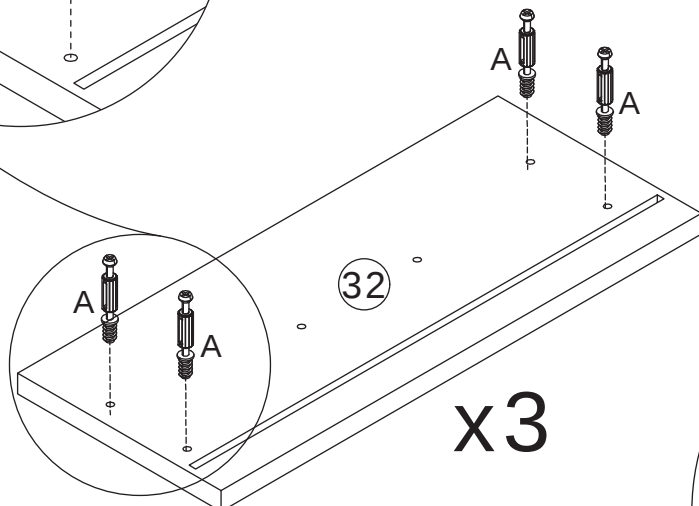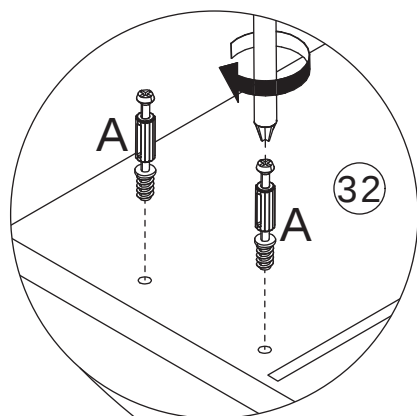    

  Screw eccentric rod(A) into panel 32 and fix handle(P) with screw(Q) at first.
Attach panel 32 to panel 34 and 35, add cam lock(B) into and turn clockwise to tighten as shown.


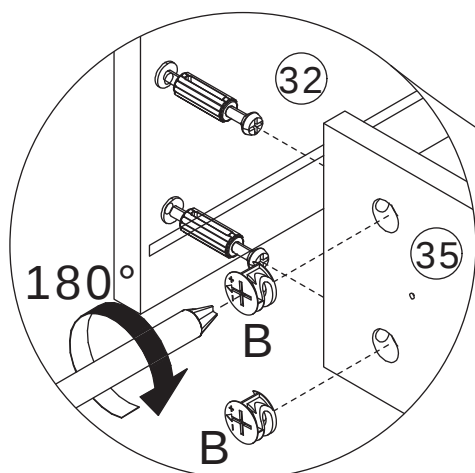
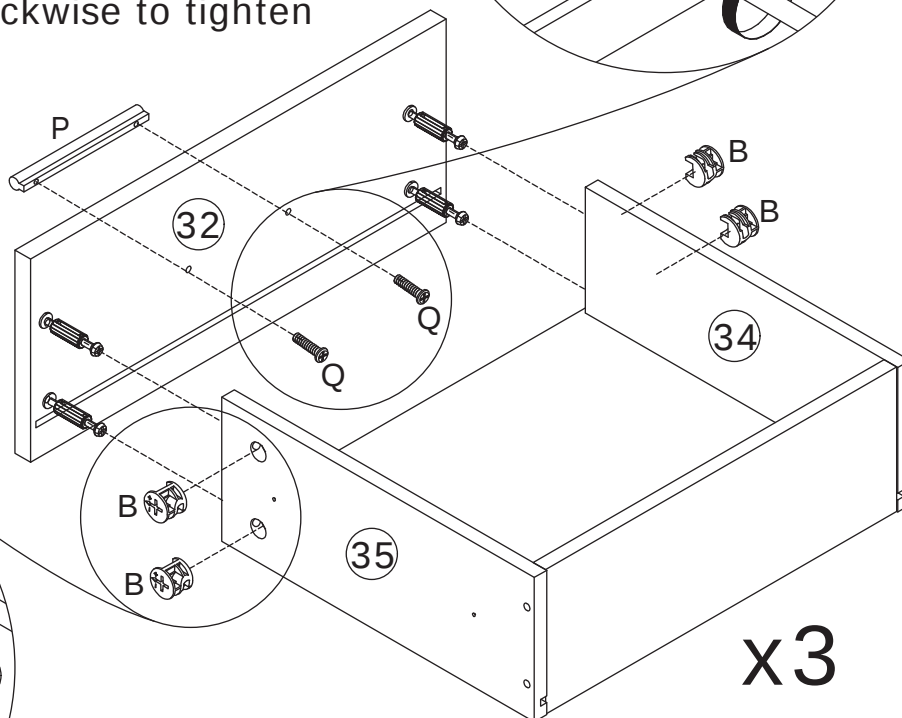


29

E x 12




   M3.5 x 12 mm

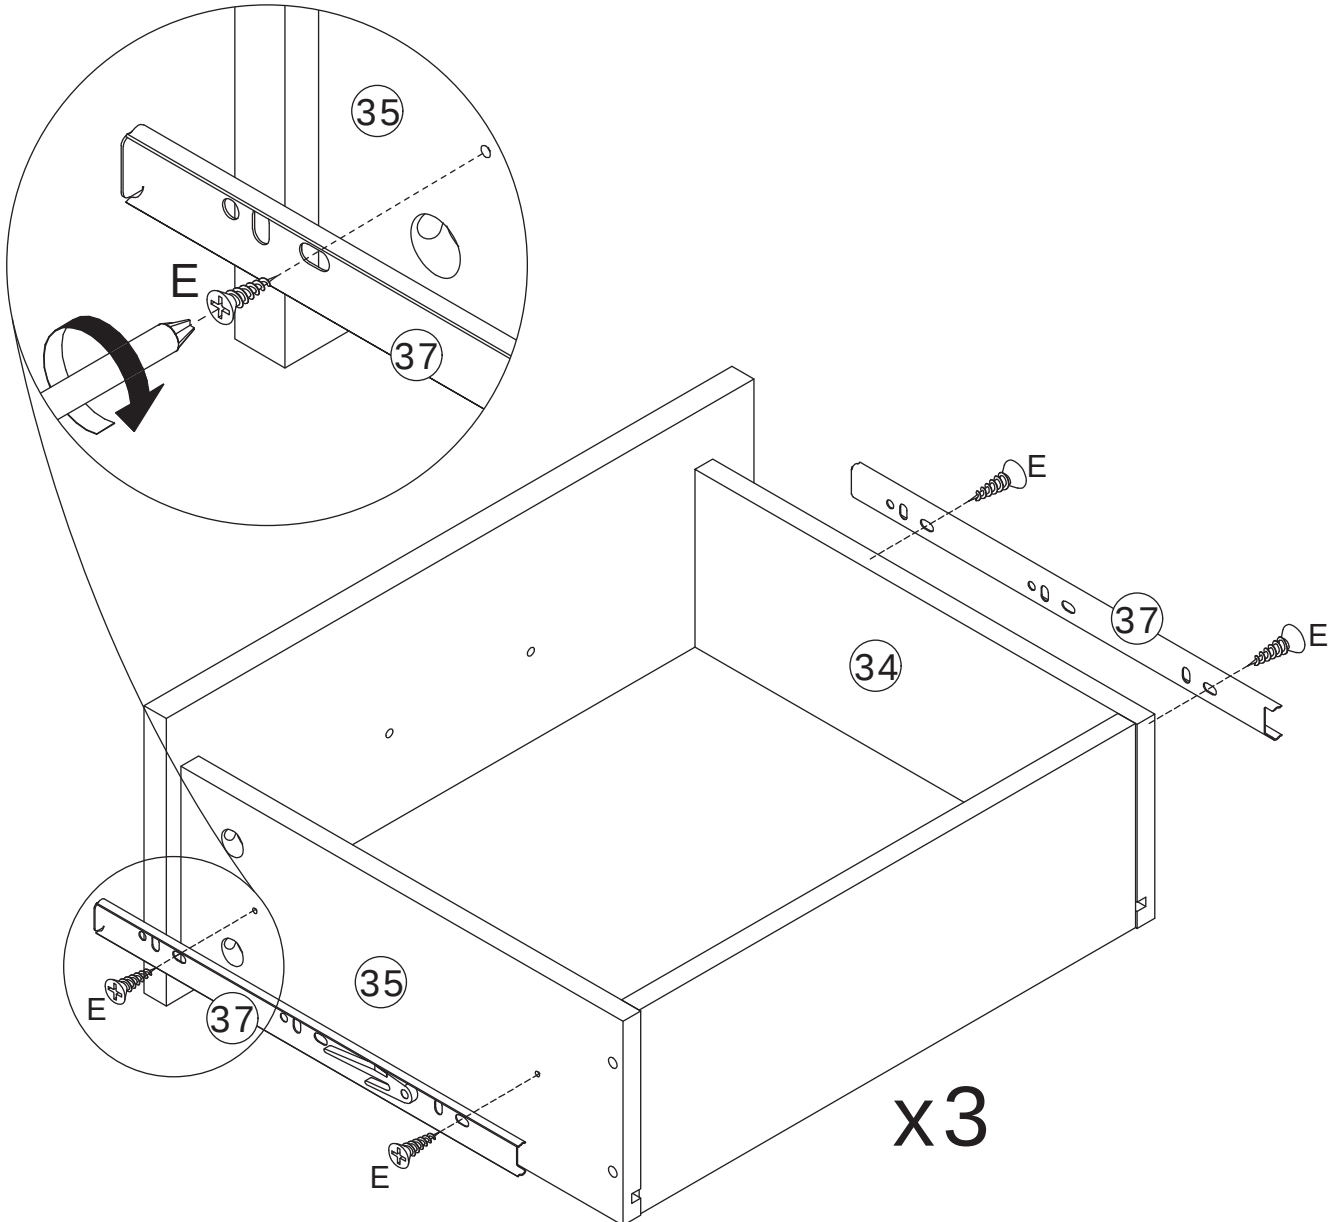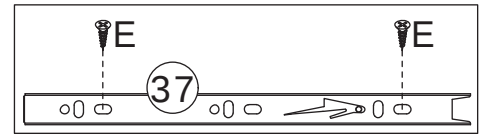



Fix track 37 to panel 34 and 35 with screw(E) as shown.


 
30

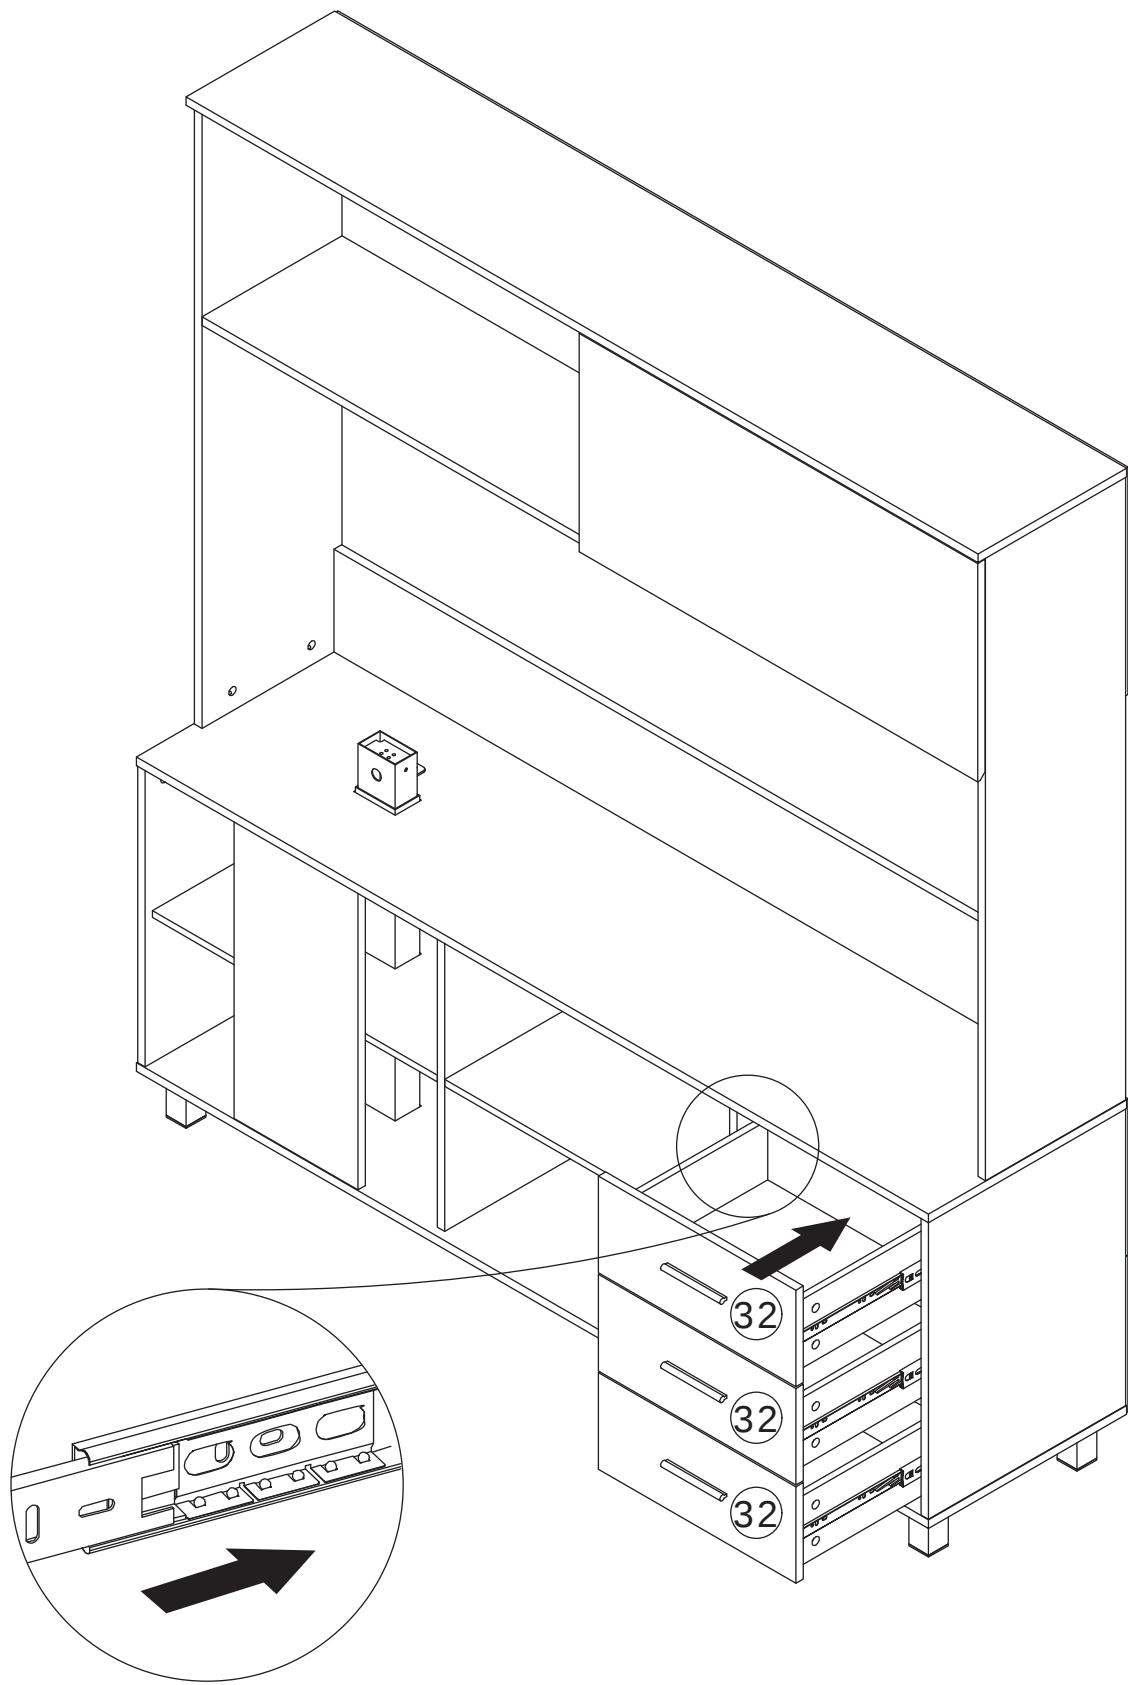

31

  M x 4  M8 x 40 mm	N x 2  M8 x Ø45 mm	x 1  #5	
--	---	--	--

  Fix panel 3 to part 1 with screw(M) as shown.
Rotate foot pad(N) into panel 3 as shown.

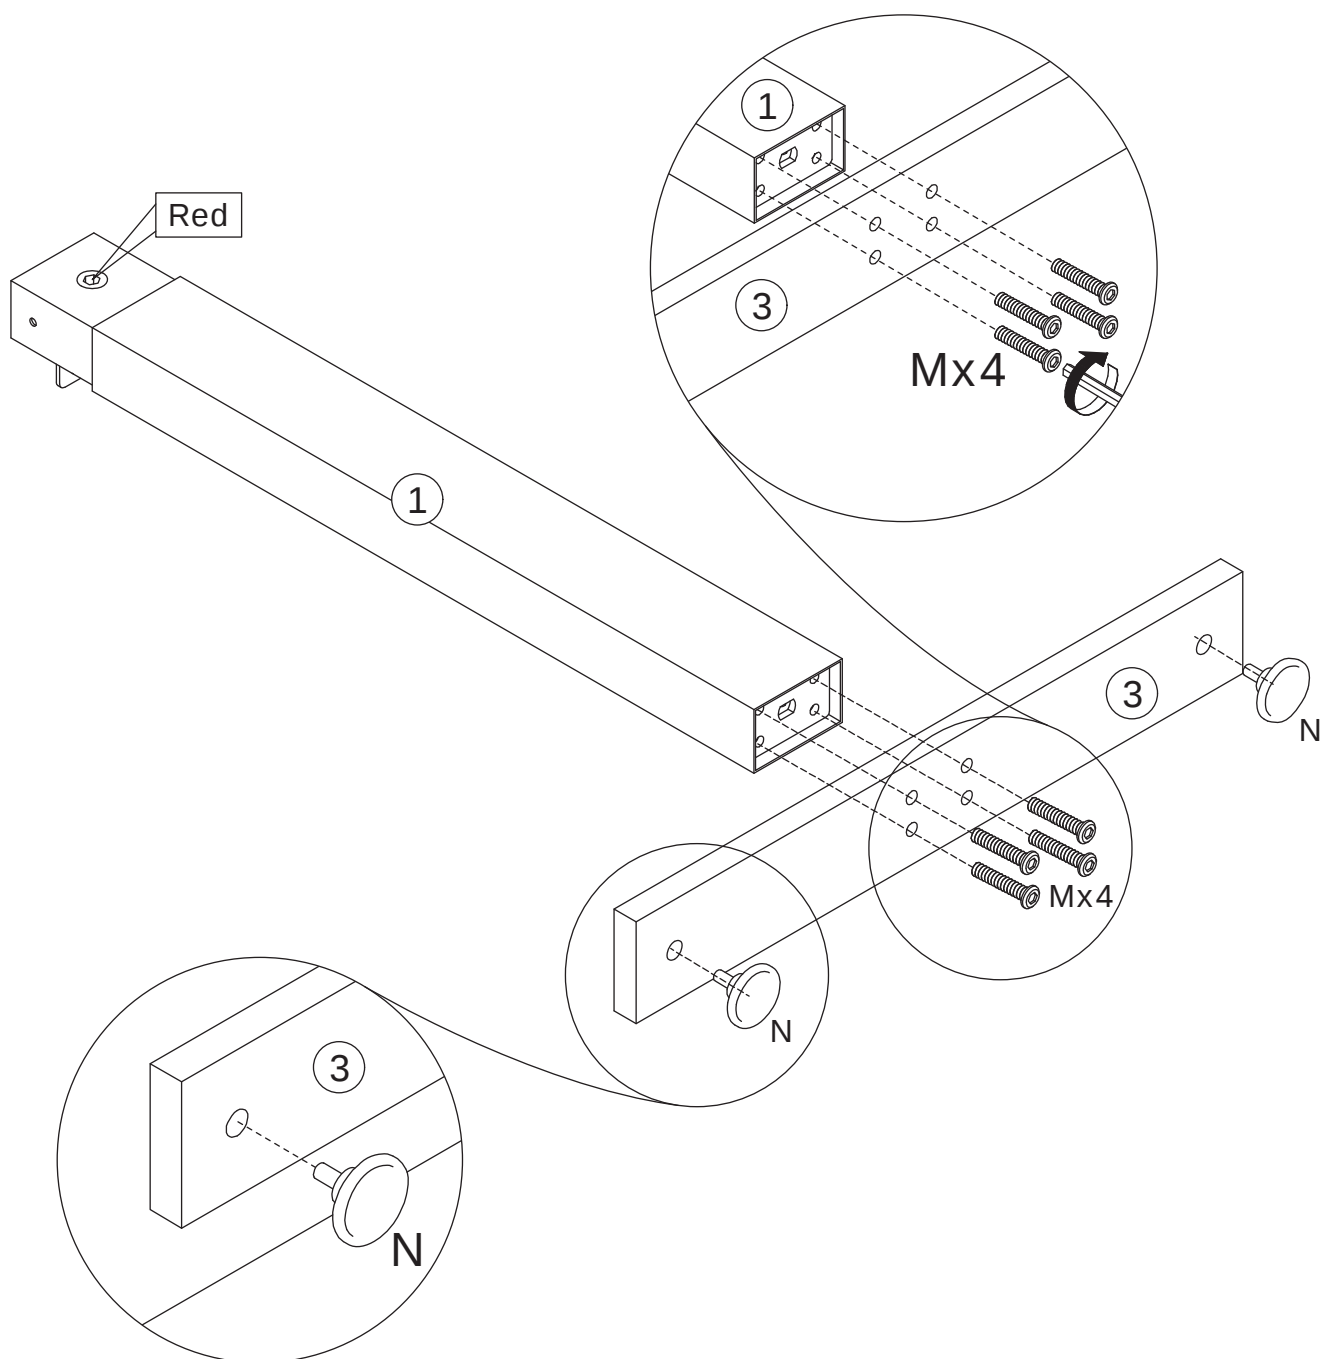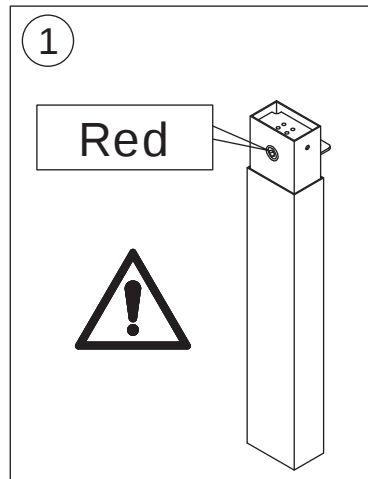


32

G x 6
M6 x 30 mm


x 1

#4


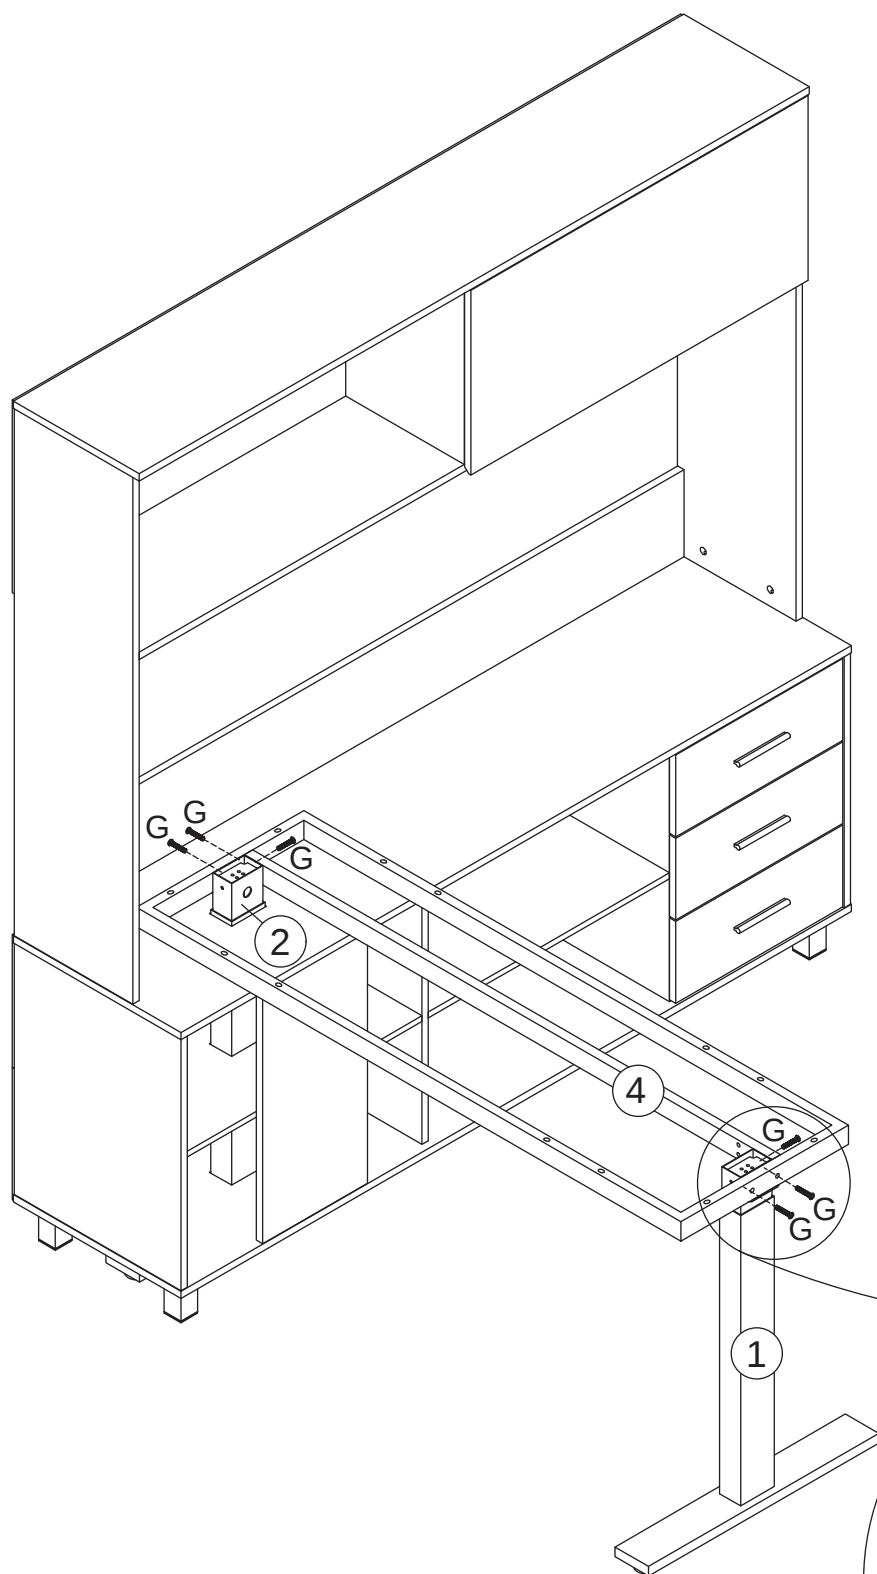 


Fix part 4 to part 1 and 2 with screw(G) as shown.


 
33

J x 2  M4 x 45 mm	K x 2  M4	L x 2  Ø 14 x Ø 5 x 1 mm	x 1 	
--	--	---	---	---


 
 
Connect part 5, 6, 7 and 8, and fix with screw(J), washer(L) and nut(K) as shown.

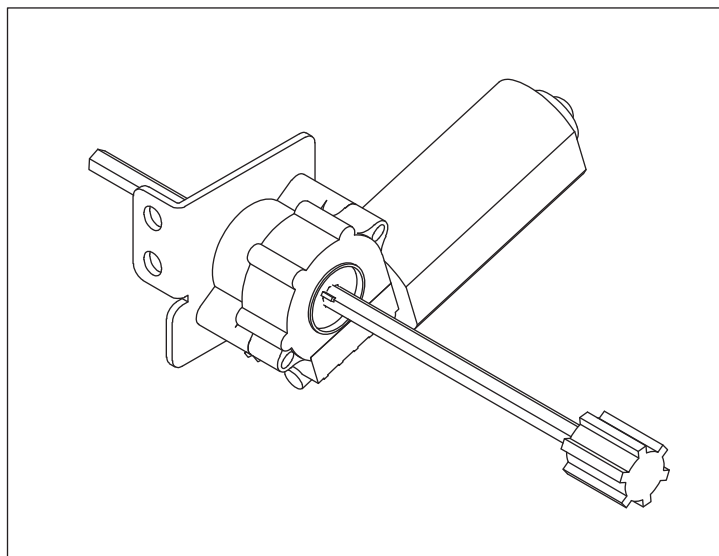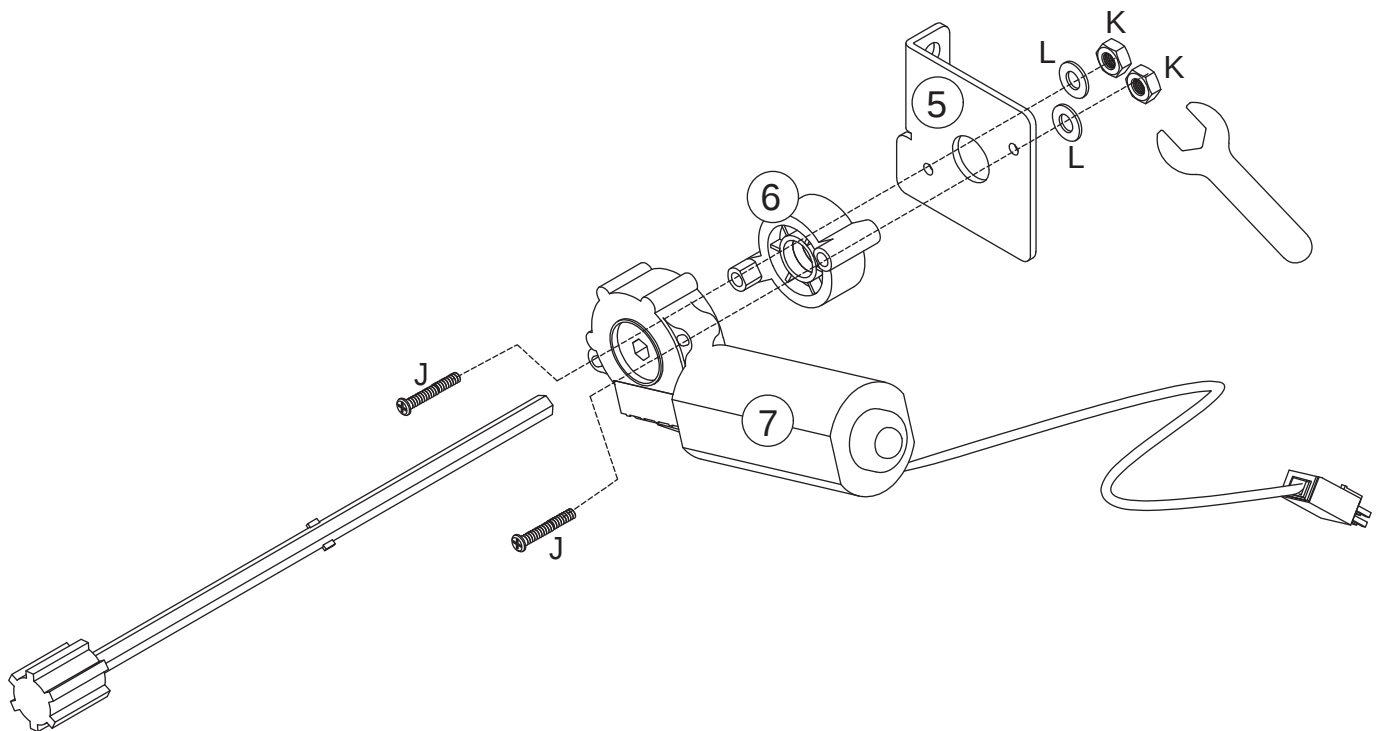


34

  G x 2  M6 x 30 mm	I x 2  M6	x 1  #4	x 1  10mm 12mm	
--	--	--	--	--

  
 
Insert the part into part 1 at first, and fix part 5 to part 4 with screw(G) and nut(I) as shown.

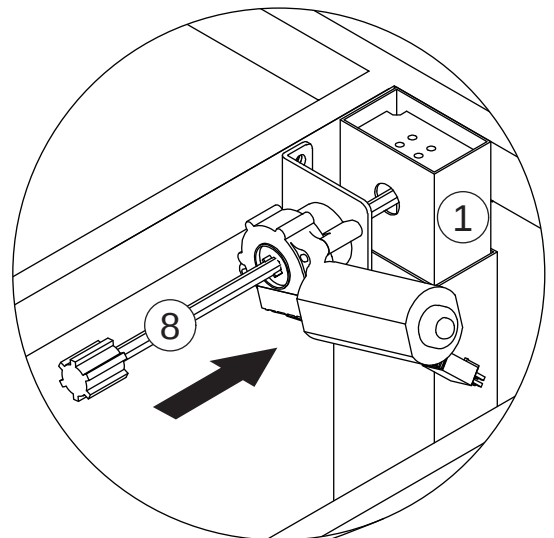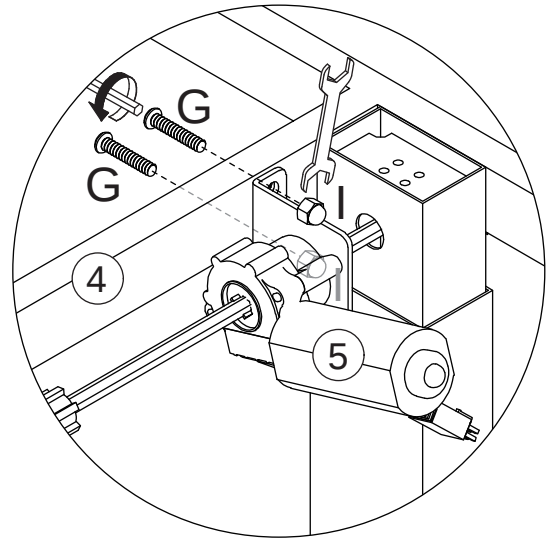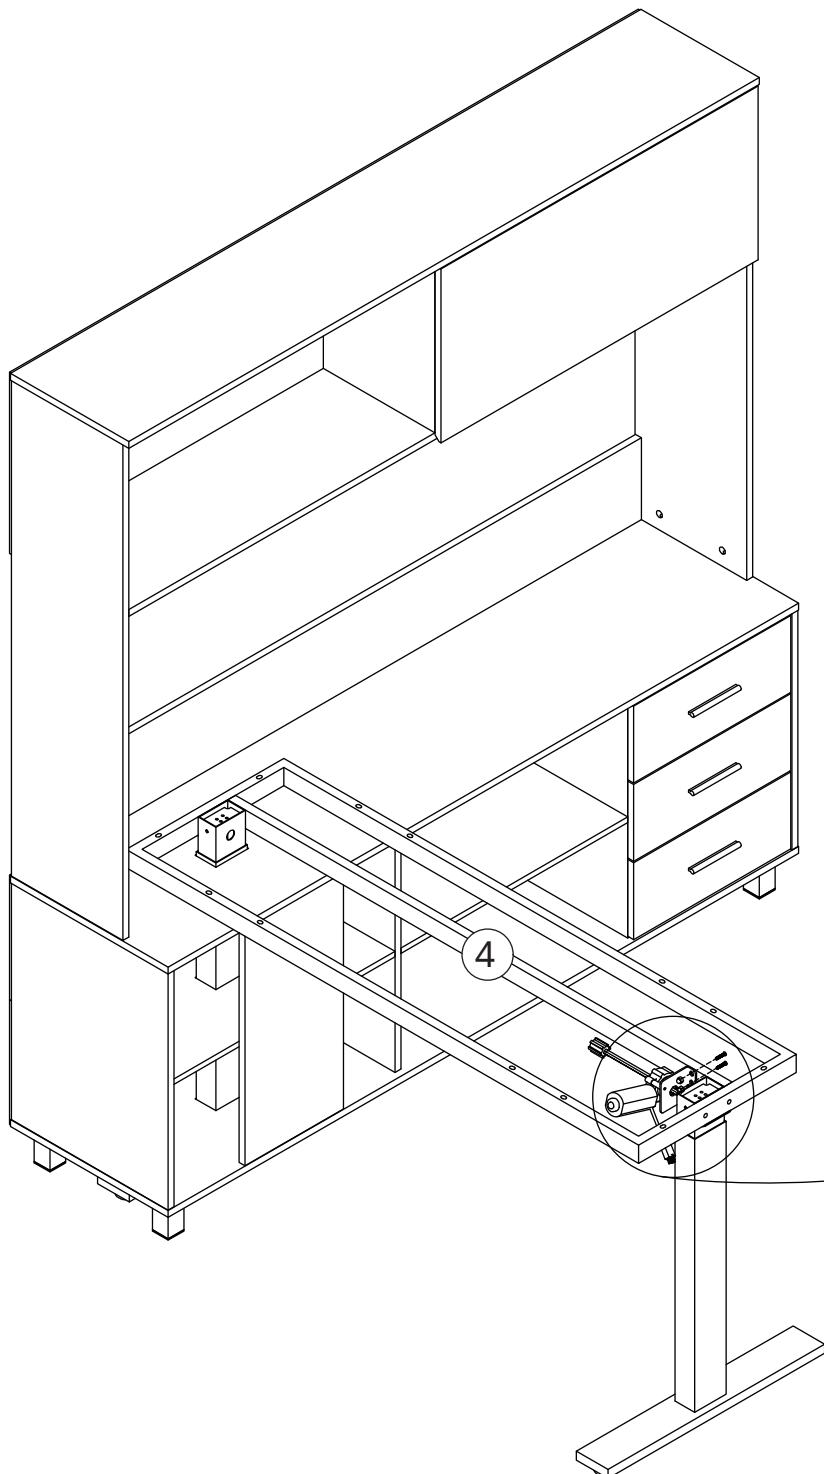



35

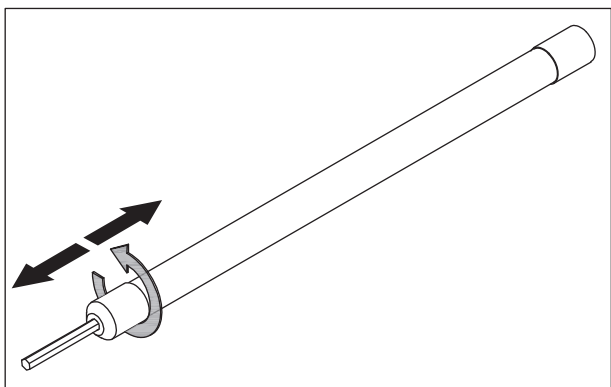 

  
Turn part 9 clockwise, extend to appropriate length and insert into part 8 and 2 as shown.

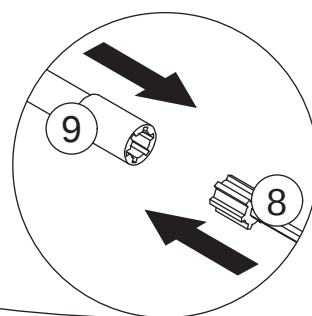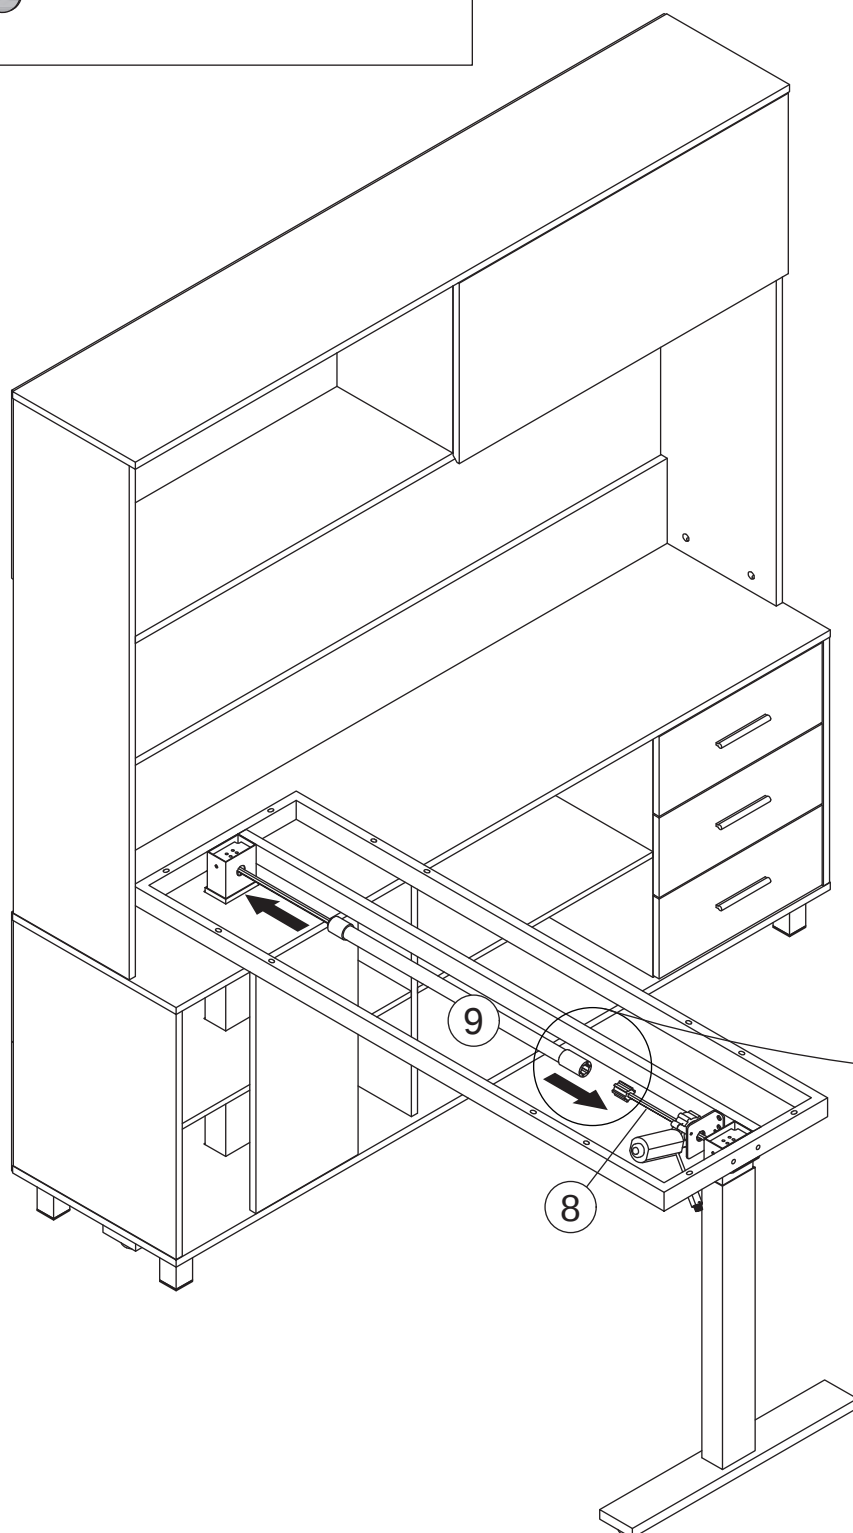


36

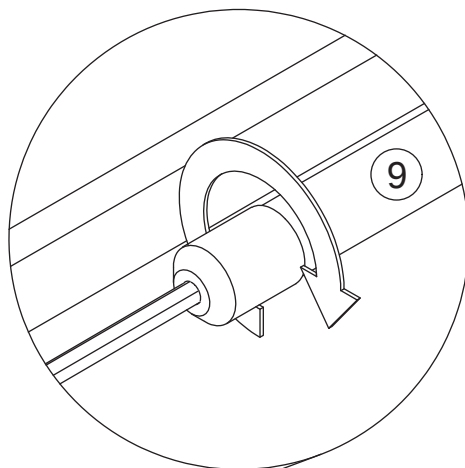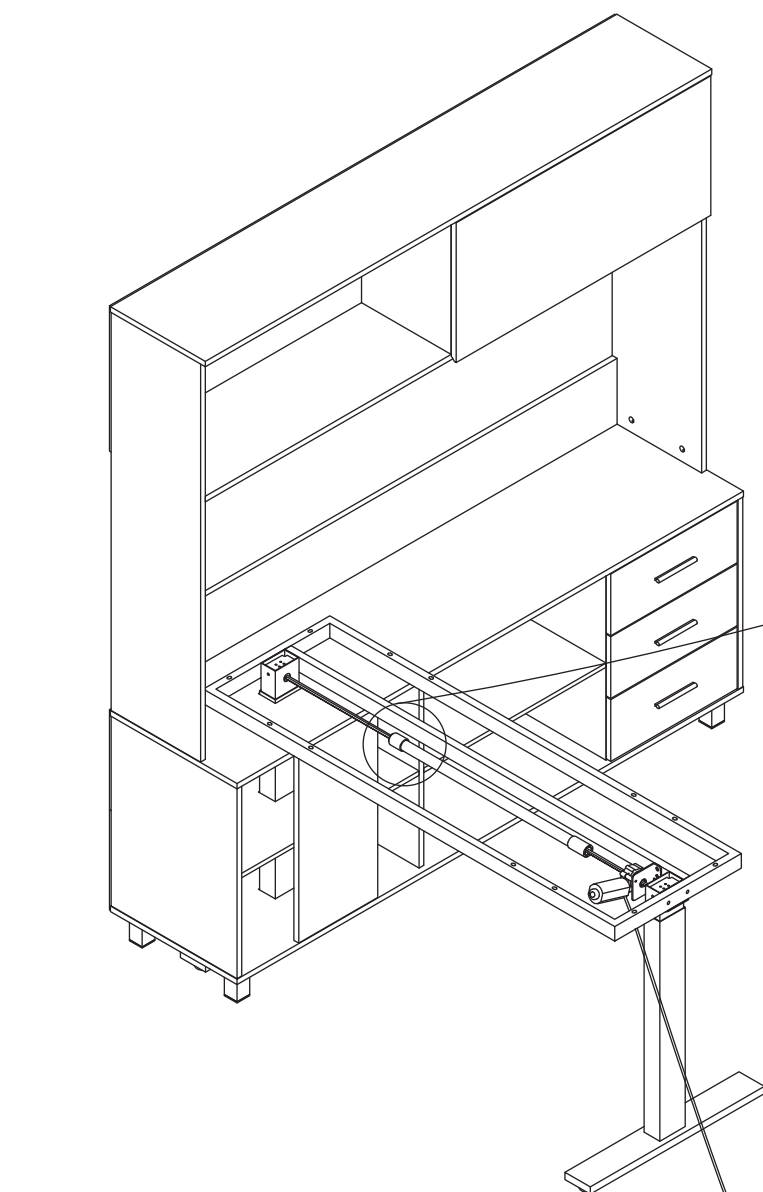  

 
Rotate part 9 counterclockwise to a fixed length and connect part 10 to part 7 and 40 as shown.

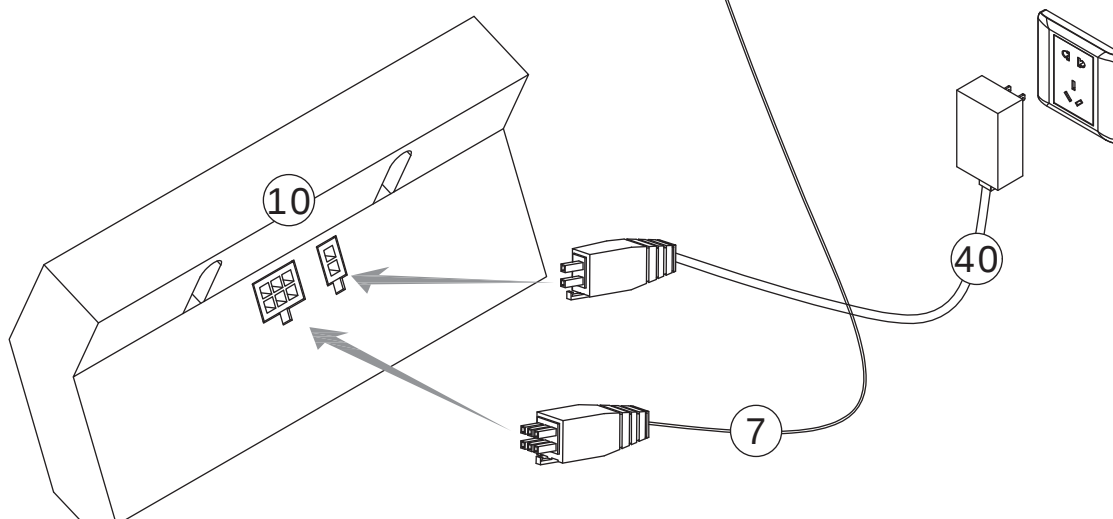



37

 F x 4  M6 x 12 mm	x 1  #4	
--	--	--

 
Fix part 4 to part 1 and 2 with screw(F) as shown.

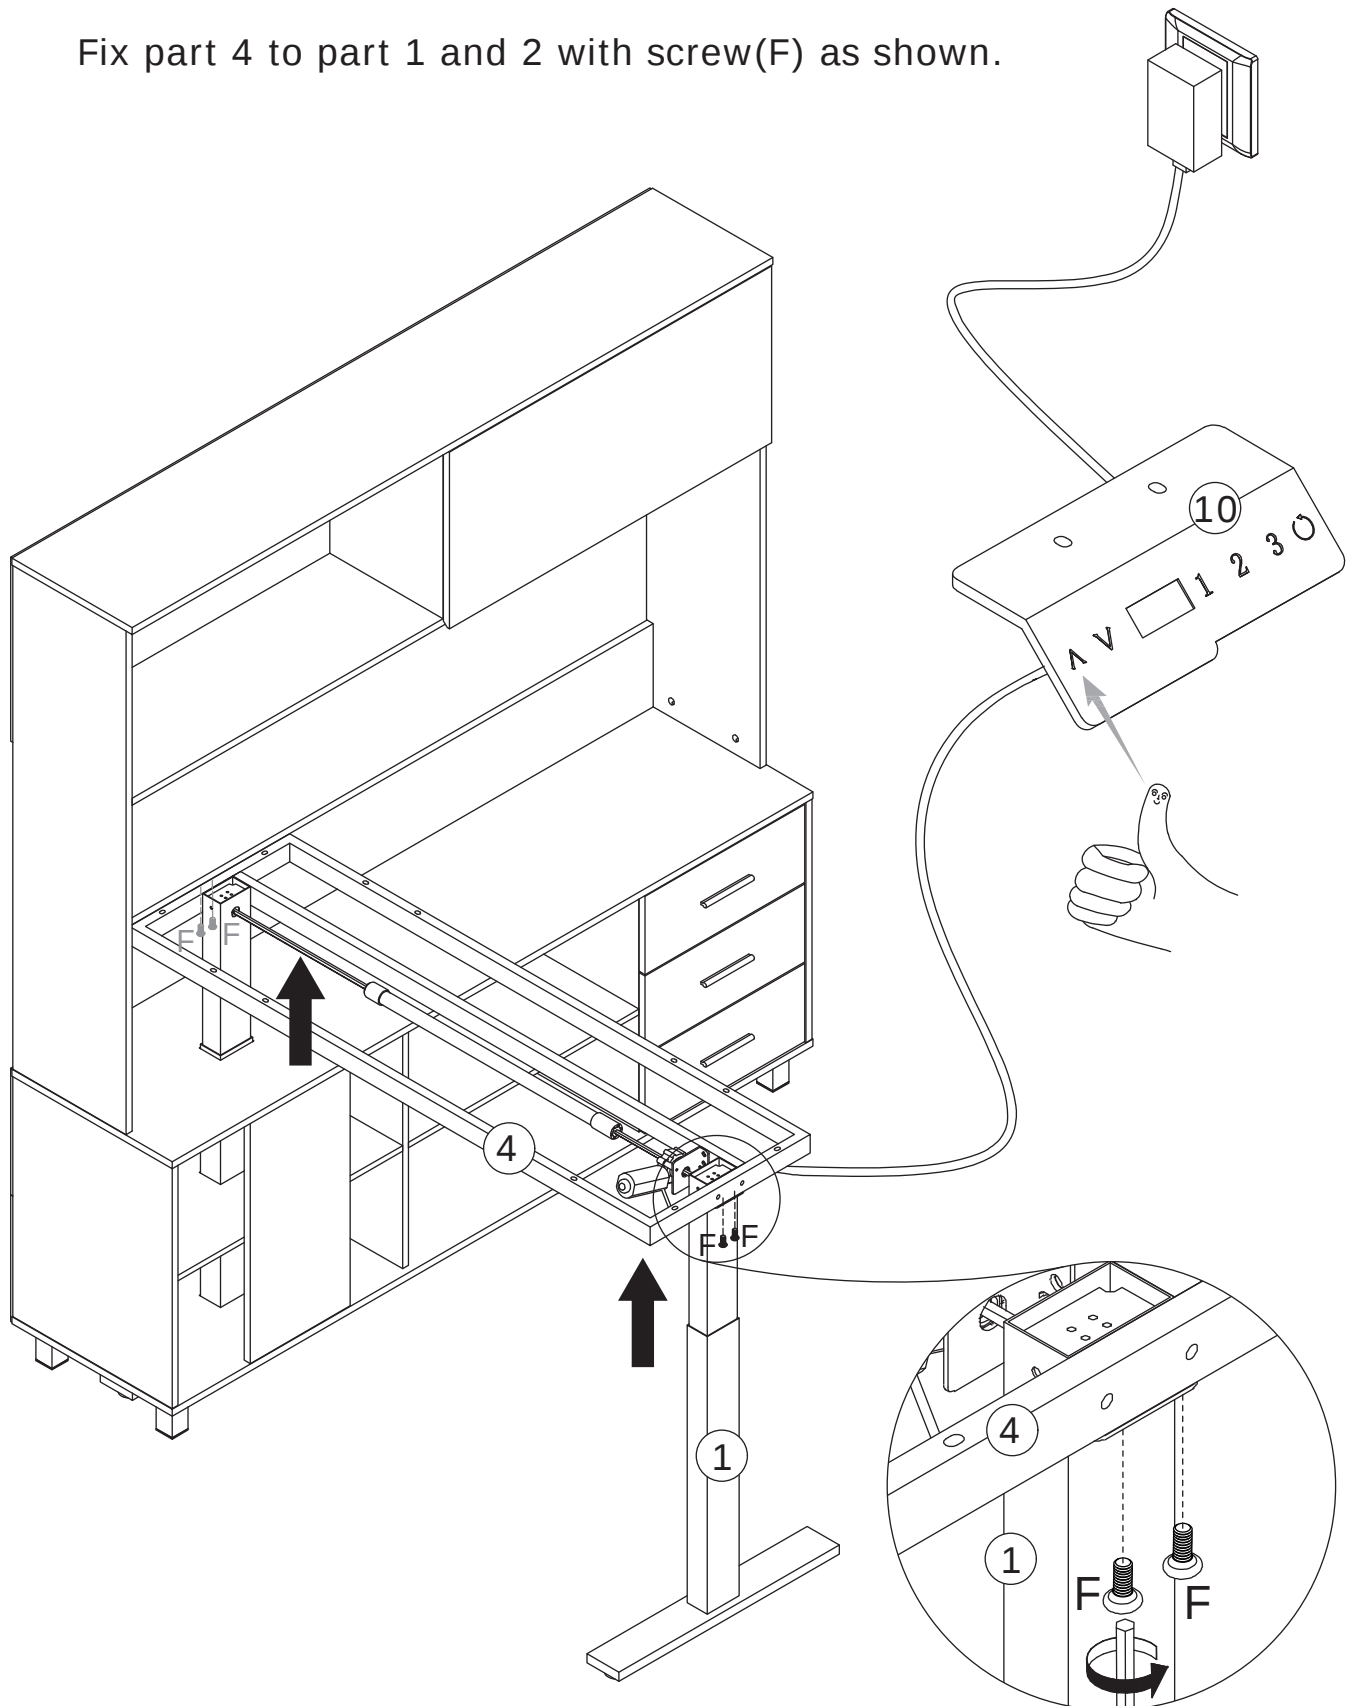



38

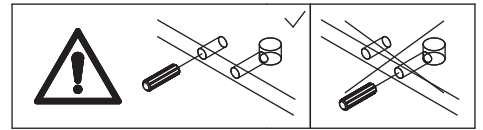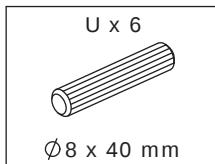  

 
Connect panel 11 and 12 using wooden dowel(U) as shown.

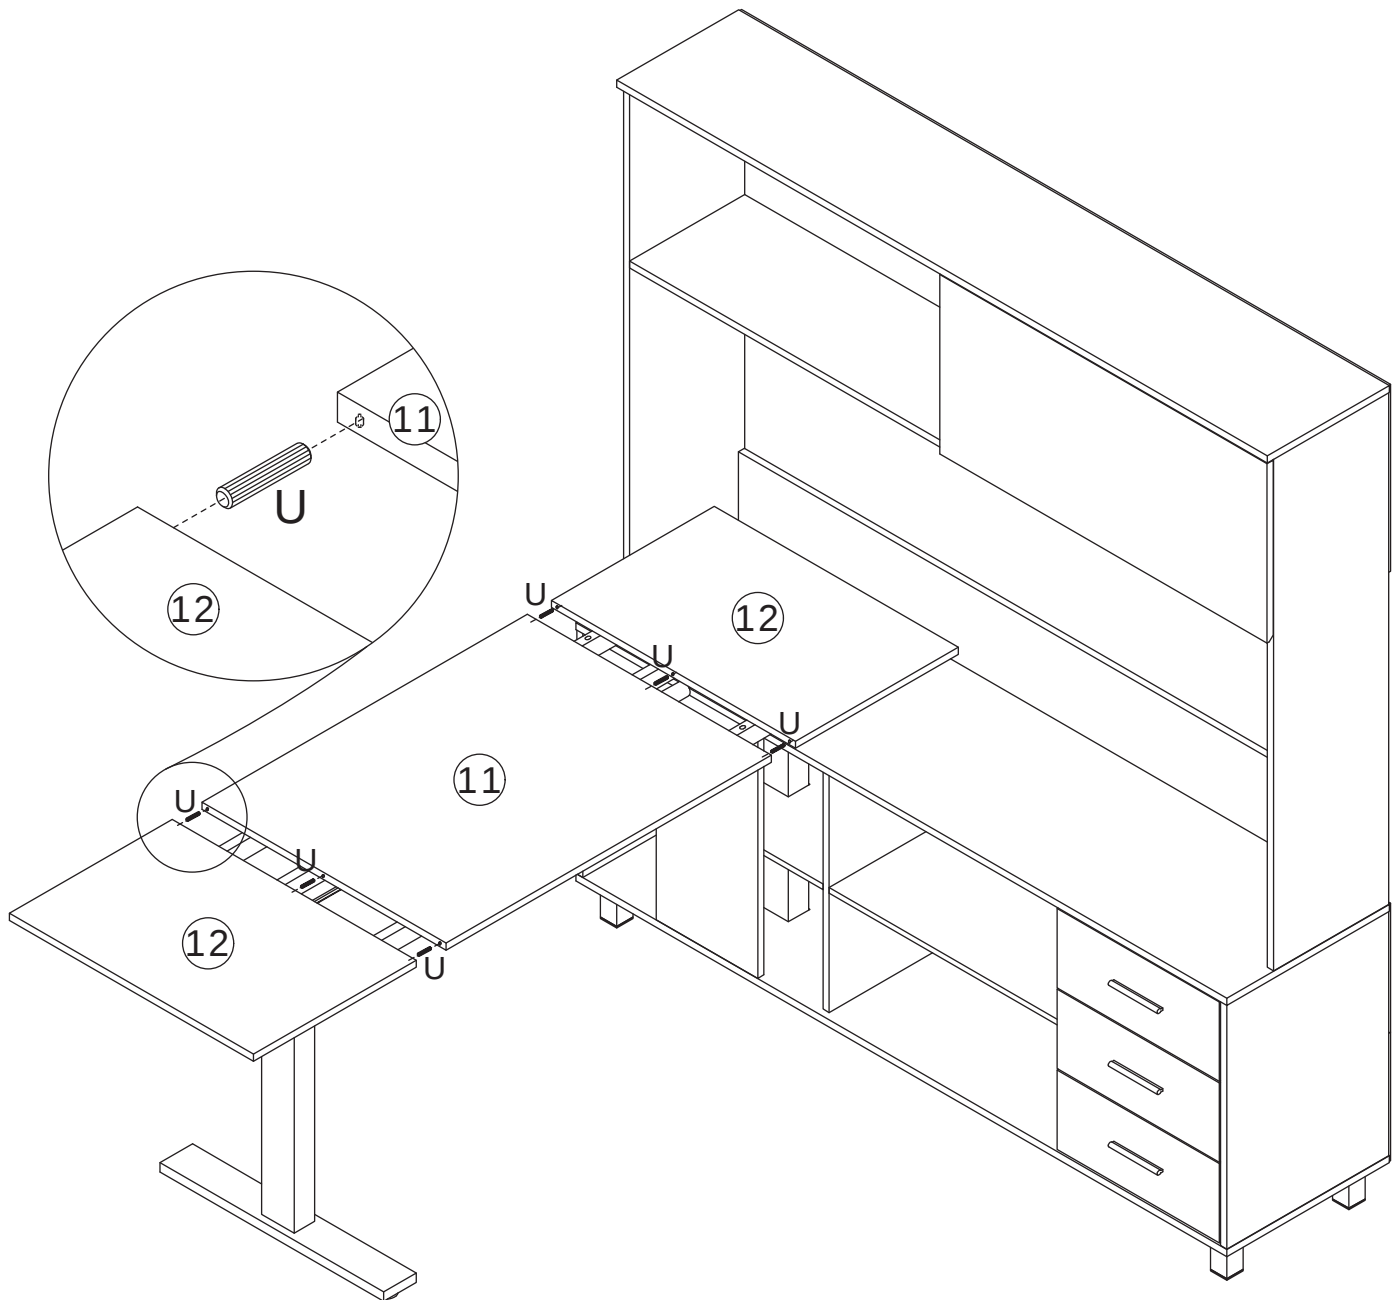

39

  
H x 12  M6 x 50 mm	x 1  #4	
---	--	--

 Fix panel 11 and 12 to part 4 with screw(H) as shown.

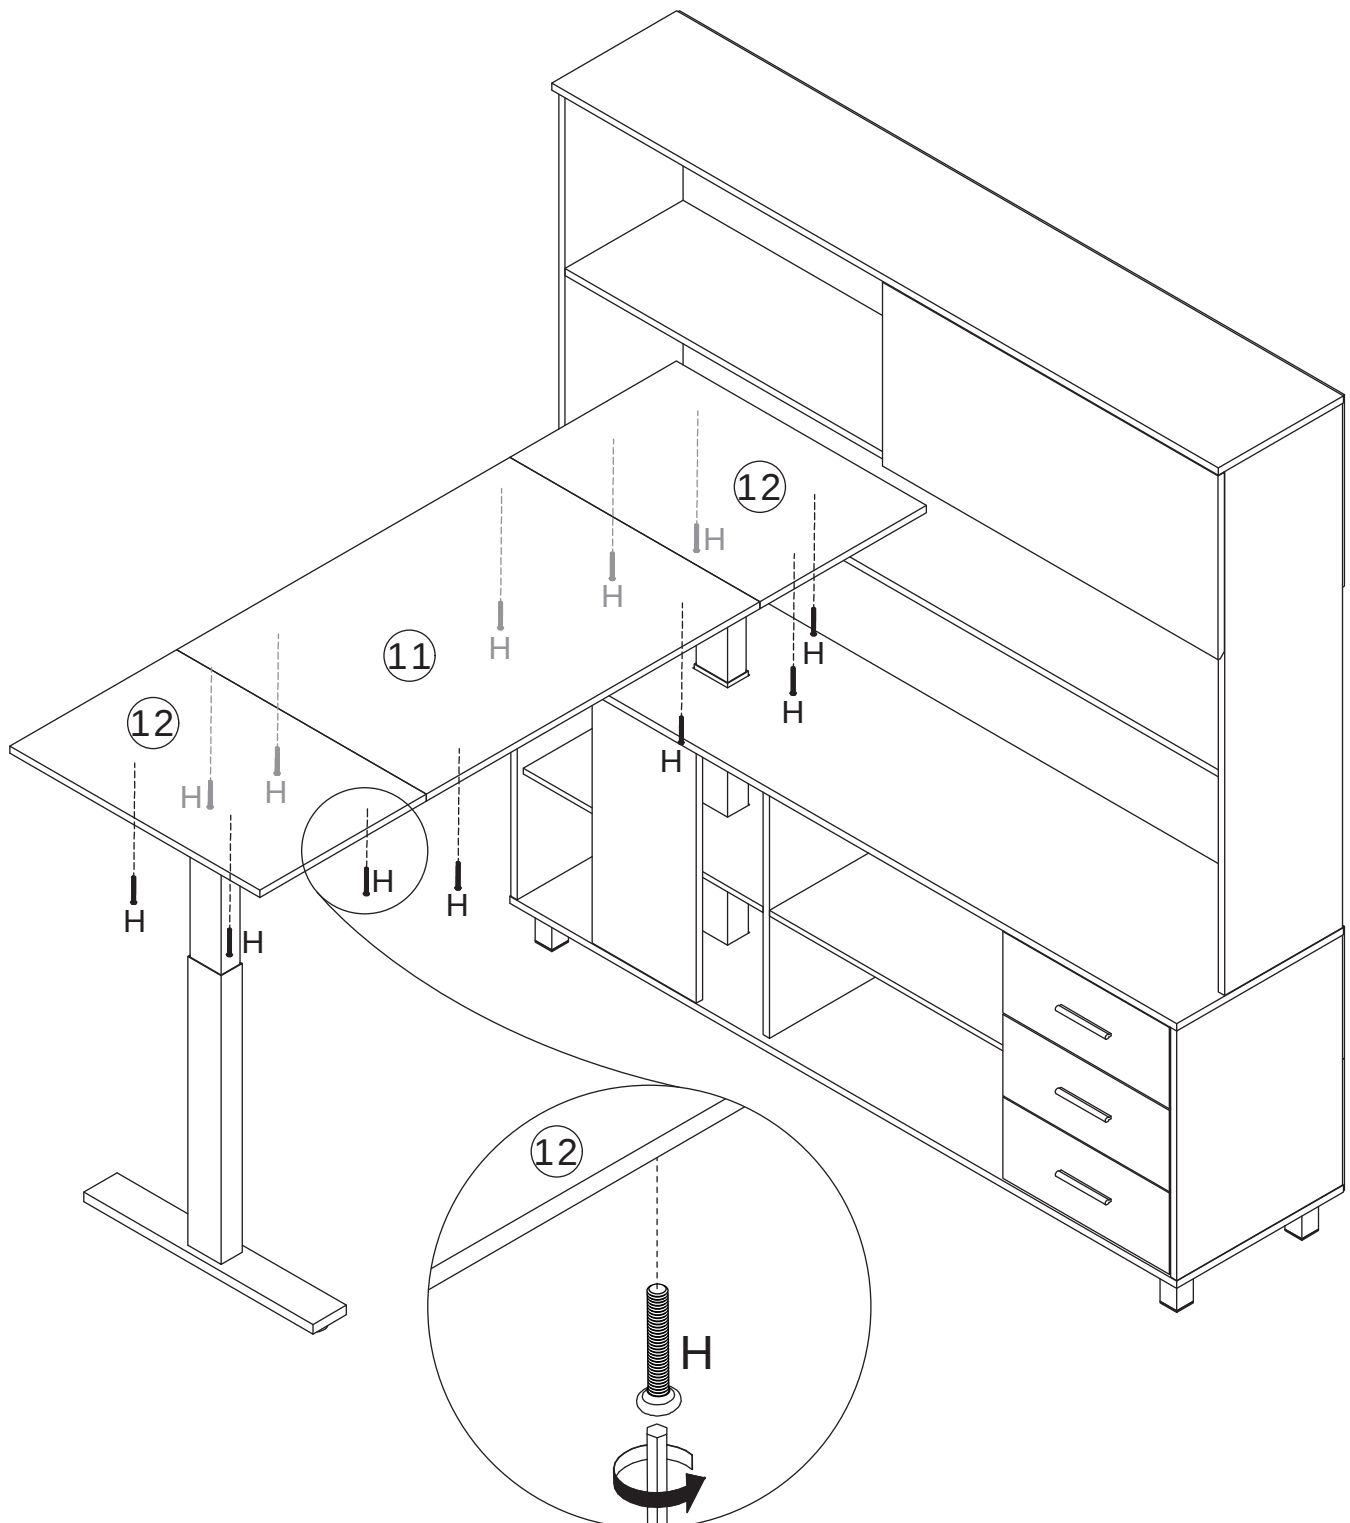

40

 D x 10




M3.5 x 14 mm

T x 4




 
Ø7 x 9 mm



Fix part 4 to panel 12 with screw(D) as shown.

 
 
Use buckle(T) to fix the wire to panels with screw(D) as shown.

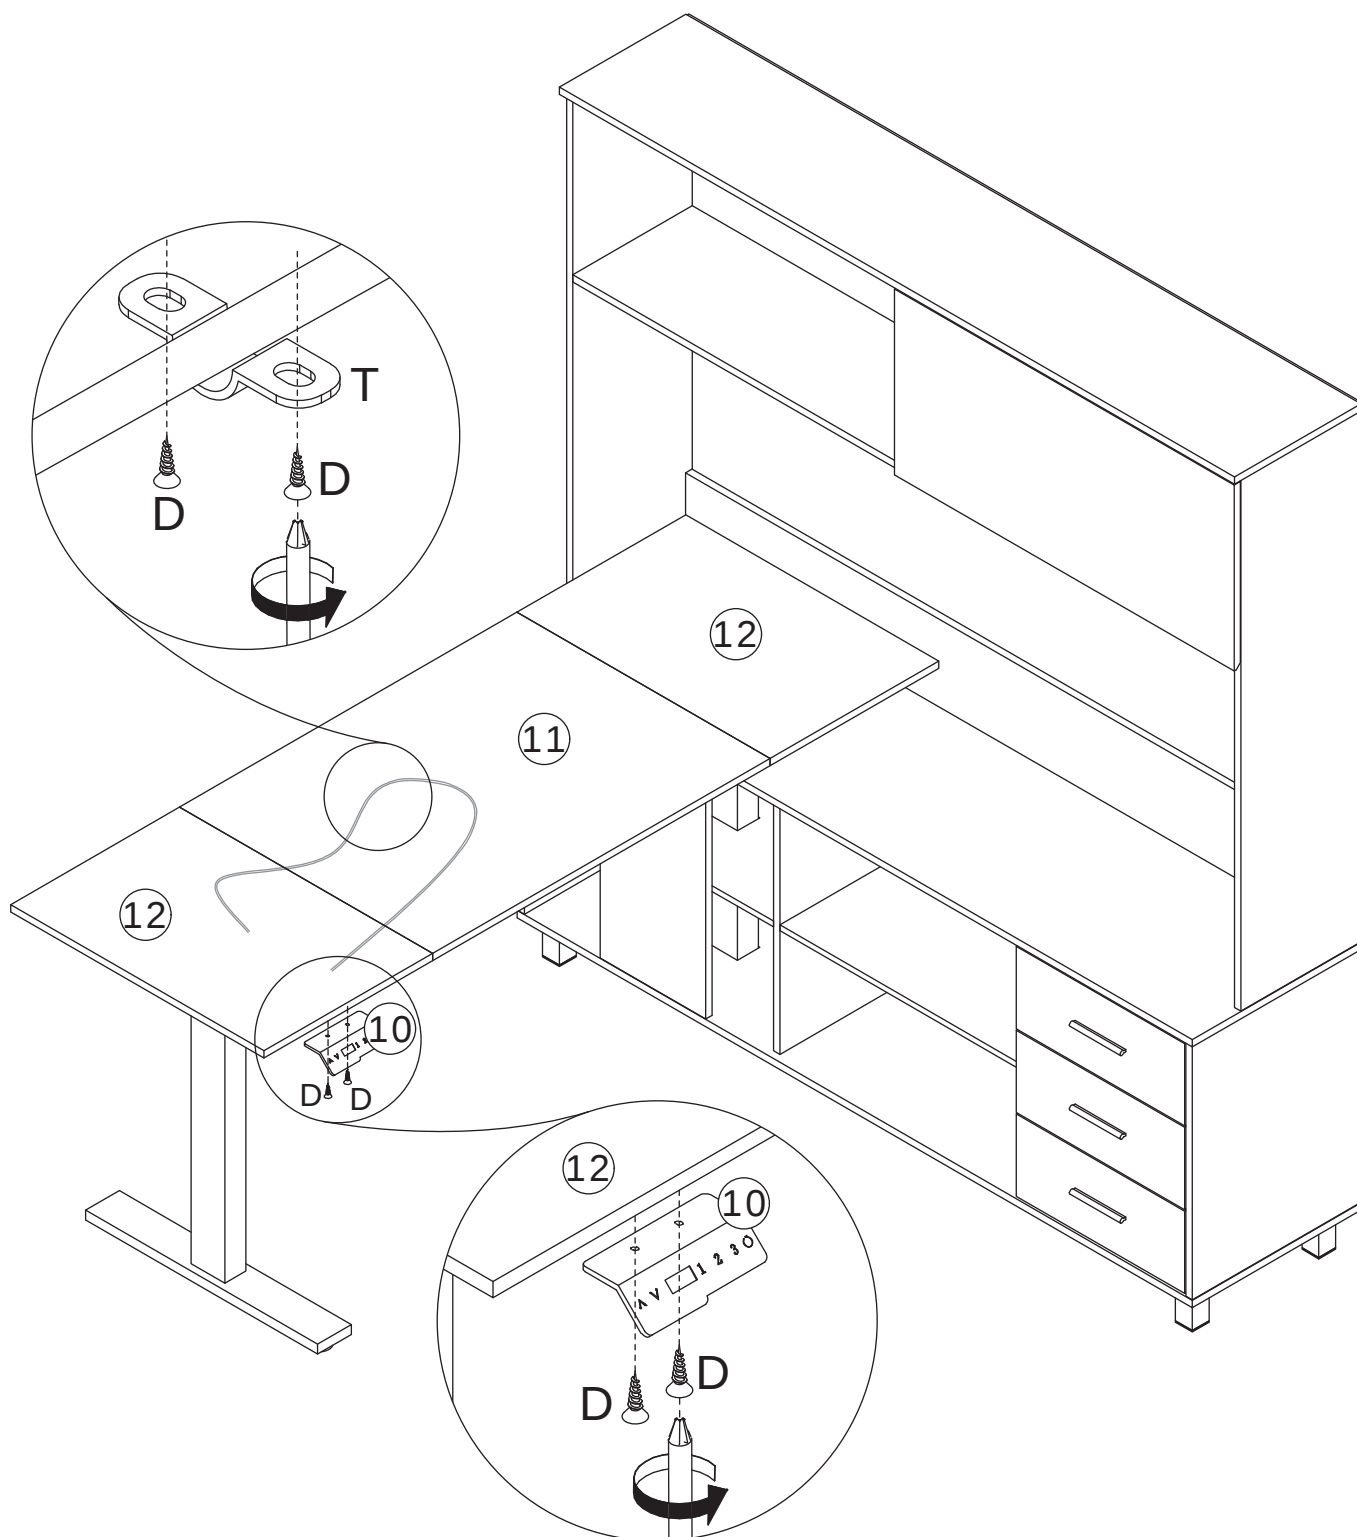




If doors are still not aligned if the hinges are properly correctly, please watch the video.

  
<https://youtu.be/n0Lb36SoODM>

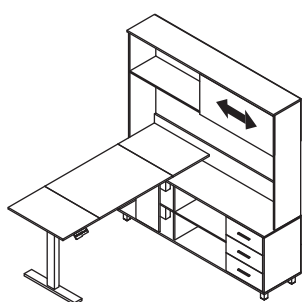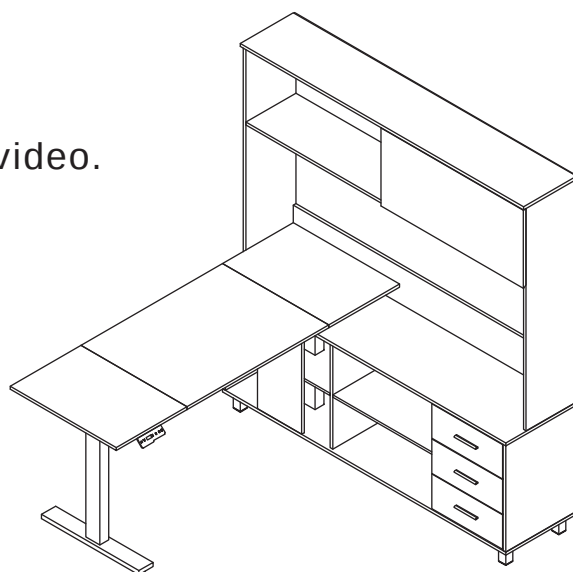



①

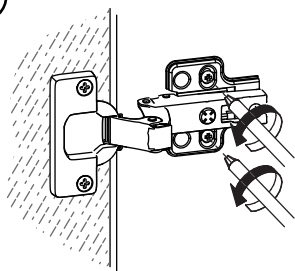 


②

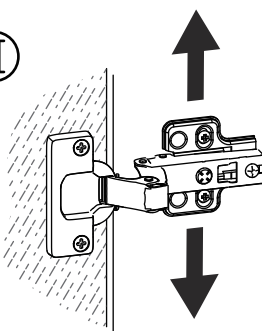 


③

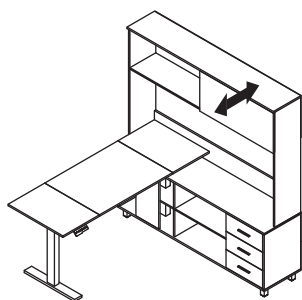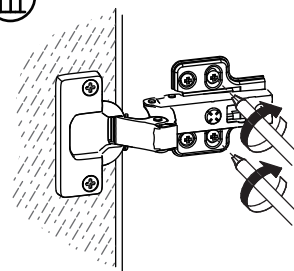  



①

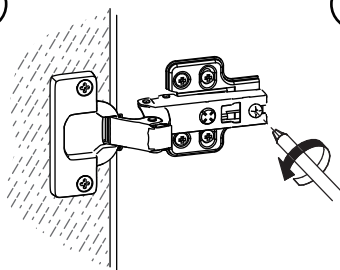 


②

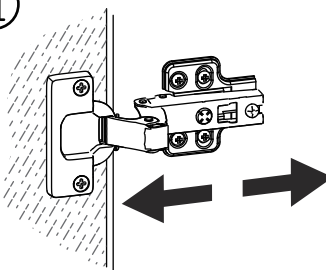 


③

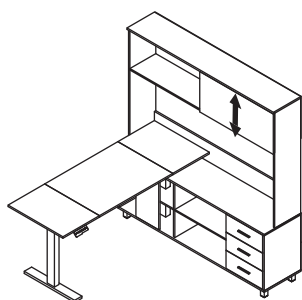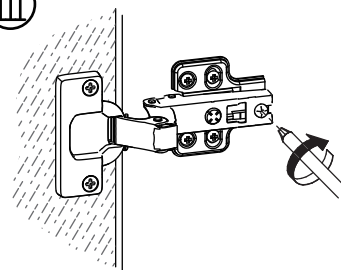  

①

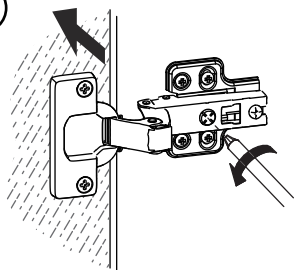 

②

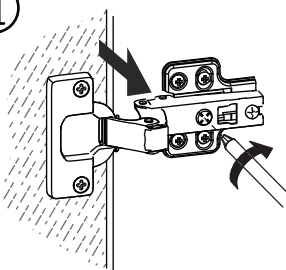 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



01203 310000 or 01203 310001



01203 310000 or 01203 310001