


BL015926

HS1326-011

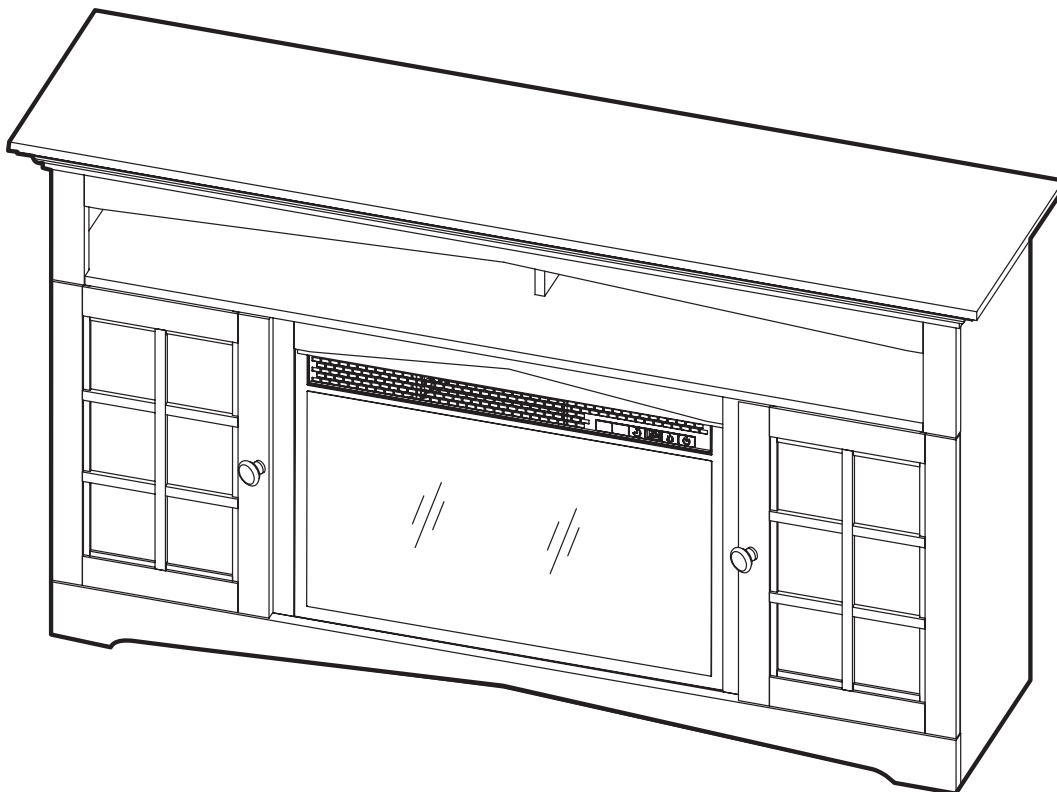

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____

Questions, problems, missing parts? Before returning
to your retailer, call our customer service
department at service@uni-neo.com

**IMPORTANT:
SAVE THESE
INSTRUCTIONS.**

**PLEASE READ THIS MANUAL BEFORE
INSTALLING AND USING APPLIANCE**

WARNING!
IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED
EXACTLY, AN ELECTRICAL SHOCK OR FIRE MAY RESULT
CAUSING PROPERTY DAMAGE, PERSONAL INJURY OR LOSS OF LIFE.

Retain this manual for future use.

**IMPORTANT :
CONSERVER CES
INSTRUCTIONS.**

**VEUILLEZ LIRE CE MANUEL AVANT L'INSTALLATION
ET L'UTILISATION DE VOTRE FOYER**

AVERTISSEMENT!
SI LES RENSEIGNEMENTS DE CE MANUEL NE SONT PAS EXACTEMENT
SUIVIS, UN CHOC ÉLECTRIQUE OU UN INCENDIE PEUT SURVENIR, ET
CAUSER DES DOMMAGES, DES BLESSURES OU LA PERTE DE VIE

Conserver ce manuel pour une utilisation ultérieure.

Table of Contents

Table of Contents	2	Package Contents.....	4
Warranty.....	2	Assembly	5
Pre-Assembly	3	Troubleshooting.....	14
Planning Assembly.....	3	Care and Cleaning.....	15
Tools Required	3	Shelf Weight Capacity	15
Hardware Included.....	3	Service Parts.....	15

1 Year Warranty

WHAT IS COVERED

The manufacturer warrants that your new electric fireplace is free from manufacturing and material defects for a period of one year from date of purchase, subject to the following conditions and limitations.

This electric fireplace must be installed and operated at all times in accordance with the instructions furnished with the product. Any alteration, willful abuse, accident, or misuse of the product shall nullify this warranty. This warranty is non-transferrable, and is made to the original owner, provided that the purchase was made through an authorized supplier of the manufacturer. This warranty is limited to the repair or replacement of part(s) found to be defective in material or workmanship, provided that such part(s) have been subjected to normal conditions of use and service, after said defect is confirmed by the manufacturer's inspection. The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part(s).

WHAT IS NOT COVERED

Any installation, labor, construction, transportation, or other related costs/expenses arising from defective part(s), repair, replacement, or otherwise of same, will not be covered by this warranty, nor shall the manufacturer assume responsibility for same. Further, the manufacturer will not be responsible for any incidental, indirect, or consequential damages, except as provided by law.

All other warranties - expressed or implied - with respect to the product, its components and accessories, or any obligations/liabilities on the part of the manufacturer are hereby expressly excluded. The manufacturer neither assumes, nor authorizes any third party to assume, on its behalf, any other liabilities with respect to the sale of this product. The warranties as outlined within this document do not apply to non-manufacturer accessories used in conjunction with the installation of this product.

This warranty does not cover the lightbulb(s) included with the fireplace.

This warranty is void if: the fireplace has been operated in atmospheres contaminated by chlorine, fluorine, or other damaging chemicals; the fireplace is subjected to prolonged periods of dampness or condensation; the fireplace is altered, willfully abused, damaged by accident, or misused in any way.

Pre-Assembly

PLANNING ASSEMBLY

Before you begin assembly, locate the instructions and hardware. Compare all parts with the Hardware Included and Package Contents lists. Be sure you have all the parts and can identify them. A helping hand is always good. Assemble your mantel with an adult assistant if possible. Some pieces are heavy and will need to be held by a helper. Assembly time will take approximately 30-60 minutes.

Before assembly, use scissors to unwrap the parts from the packaging. Do not use a box cutter or exacto-knife, as you may cut into the mantel pieces inside the box and damage the finish. Check for the red hardware bag located inside the packaging. Do not discard any pieces. Use an appropriate screwdriver to insert and tighten all screws.

TOOLS REQUIRED (NOT INCLUDED)




Safety goggles



Phillips screwdriver

HARWARE INCLUDED

Note: Hardware not shown to actual size.

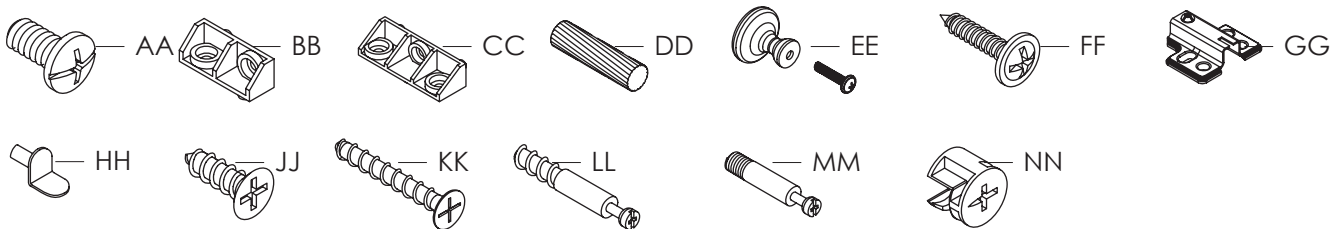


Part	Description	Quantity
AA	Bolt	33
BB	Short Connector	2
CC	Long Connector	2
DD	Dowel	36
EE	Knob	2
FF	Back Panel Screw	30
GG	Door Hinge Plate	4

Part	Description	Quantity
HH	Shelf Pin	8
JJ	Hinge Screw	16
KK	Long Screw	2
LL	Long Metal Bolt	4
MM	Short Metal Bolt	4
NN	Metal Cam Lock	8

Pre-Assembly (continued)

PACKAGE CONTENTS

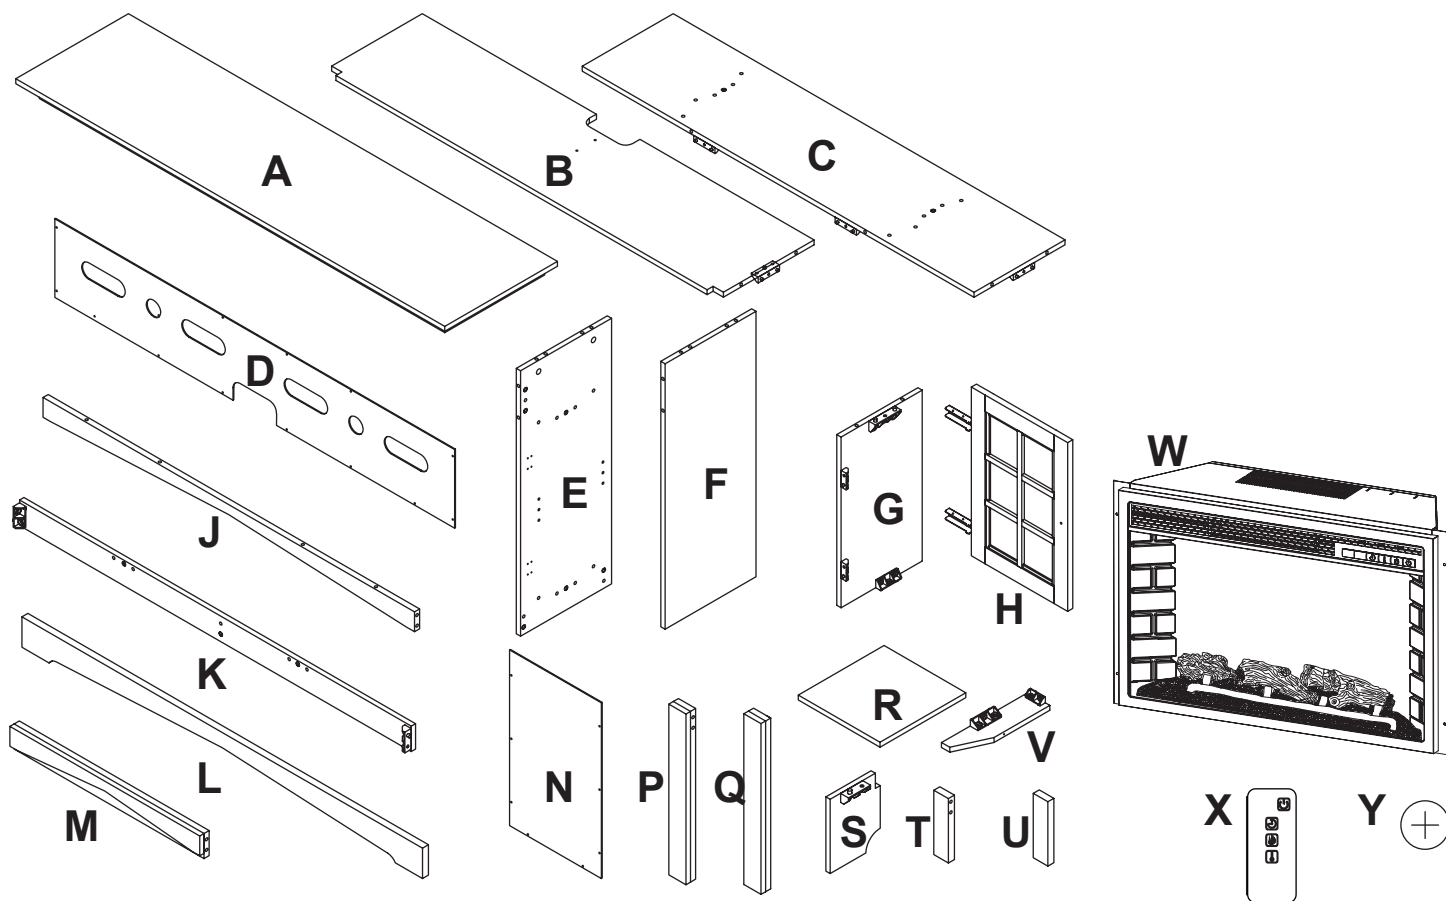


Part	Description	Quantity
A	Top Panel	1
B	Media Shelf	1
C	Base Panel	1
D	Upper Back Panel	1
E	Left Side Panel	1
F	Right Side Panel	1
G	Inside Panel	2
H	Cabinet Door	2
J	Top Rail	1
K	Rear Apron Panel	1
L	Front Apron Panel	1
M	Top Trim	1

Part	Description	Quantity
N	Side Back Panel	2
P	Left Trim	1
Q	Right Trim	1
R	Adjustable Shelf	2
S	Support Panel	1
T	Left Front Panel	1
U	Right Front Panel	1
V	Support Leg	1
W	Firebox	1
X	Firebox Remote Control	1
Y	Button Cell Battery	1

Assembly


ATTACHING THE SUPPORT LEG AND CONNECTORS

1. Locate the base panel (C) and place on a soft surface to protect the finish. Line up and insert the long connector (CC) on the support leg (V) into the unthreaded holes in the center of the base panel (C).
2. Attach the support leg (V) to the base panel (C) by turning a bolt (AA) clockwise through the long connector (CC). Do not strip the bolt (AA) by overtightening.
3. Locate the top trim (M) and place them on a soft surface to protect the finish.
4. Insert two short connectors (BB) into the top trim (M) where indicated. Press down firmly until flush.
5. Attach the short connectors (BB) by inserting two bolts (AA) and turning clockwise. Do not strip the bolts (AA) by overtightening.

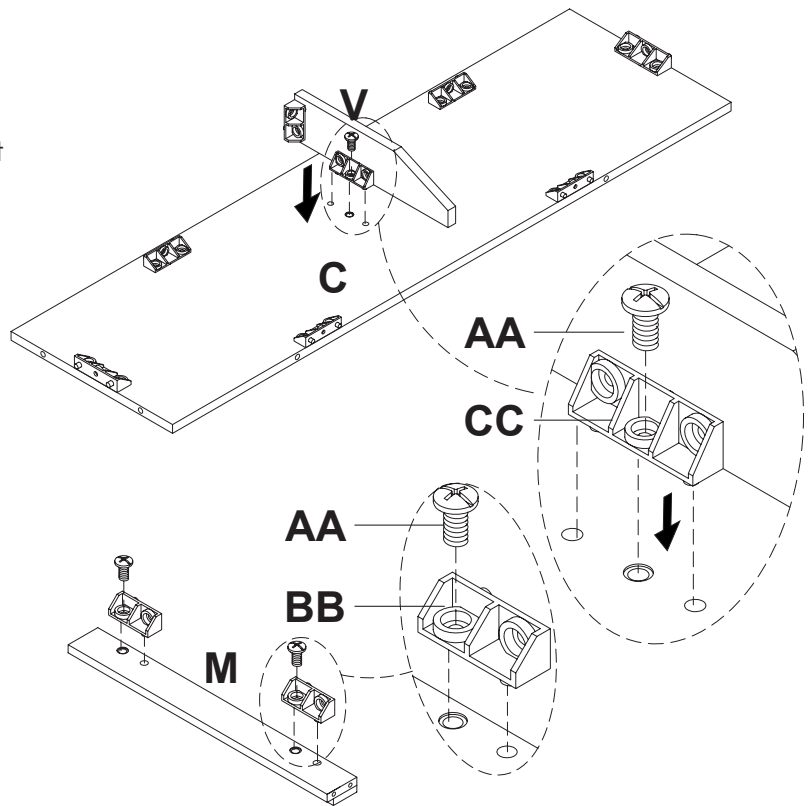

ATTACHING THE FRONT AND BACK PANELS TO THE BASE


1. Line up and insert two wood dowels (DD) into the unthreaded holes in the side of the base panel (C). Line up the wood dowels (DD) with the unthreaded holes in the front apron panel (L). Press together until flush.
2. Line up the short and long connectors (BB & CC) in the base assembly (C) with the unthreaded holes in the rear apron panel (K). Press together until flush.
3. Insert five bolts (AA) into the short and long connectors (BB & CC) on the base assembly.
4. Attach the front and rear apron panels (L & K) by turning the bolts (AA) clockwise. Do not strip the bolts (AA) by overtightening.

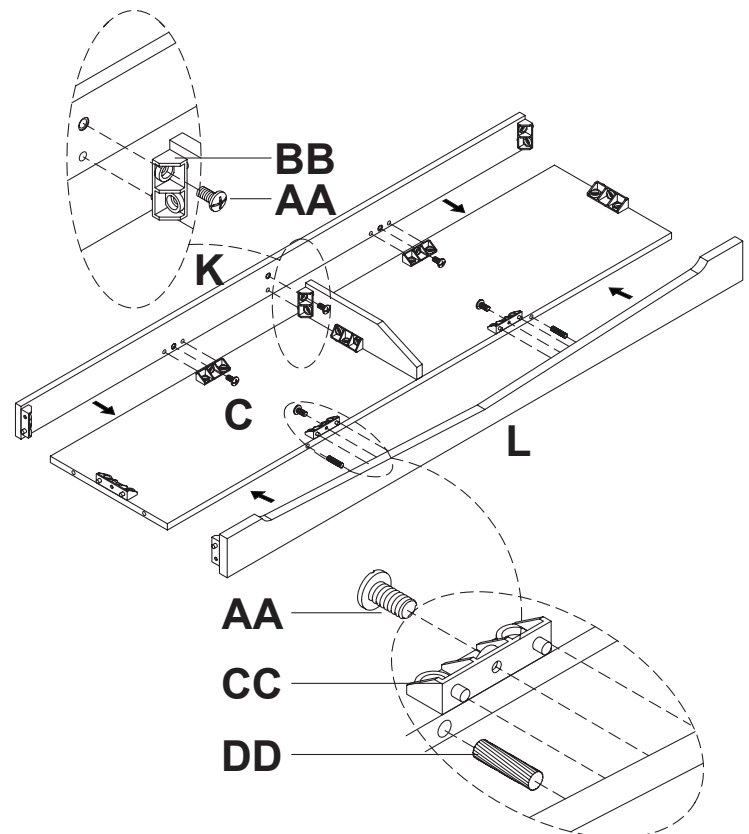

Assembly (continued)


ATTACHING THE LEFT AND RIGHT TRIM PIECES

1. Line up the short connectors (BB) in the inner panels (G) with the unthreaded holes in the left and right trim pieces (P & Q). Press together until flush.
2. Insert four bolts (AA) into the short connectors (BB) on the inner panels where indicated.
3. Attach the left and right trim pieces (P & Q) by turning the bolts (AA) clockwise. Do not strip the bolts (AA) by overtightening.

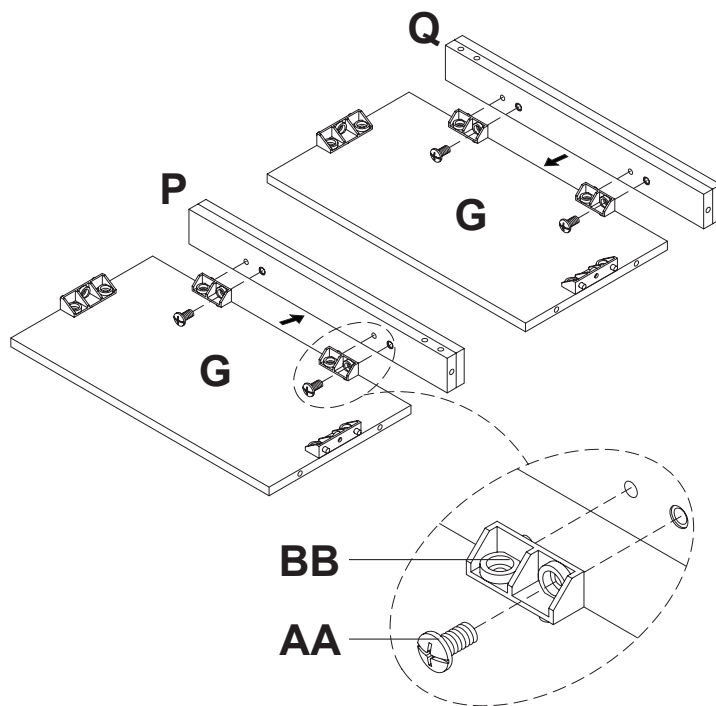

ATTACHING THE INNER PANELS


1. Insert four wood dowels (DD) into the unthreaded holes in the top trim (M).
2. Line up the four wood dowels (DD) in the top trim (M) with the unthreaded holes in the left and right trim pieces (P & Q).
3. Press together firmly until flush.

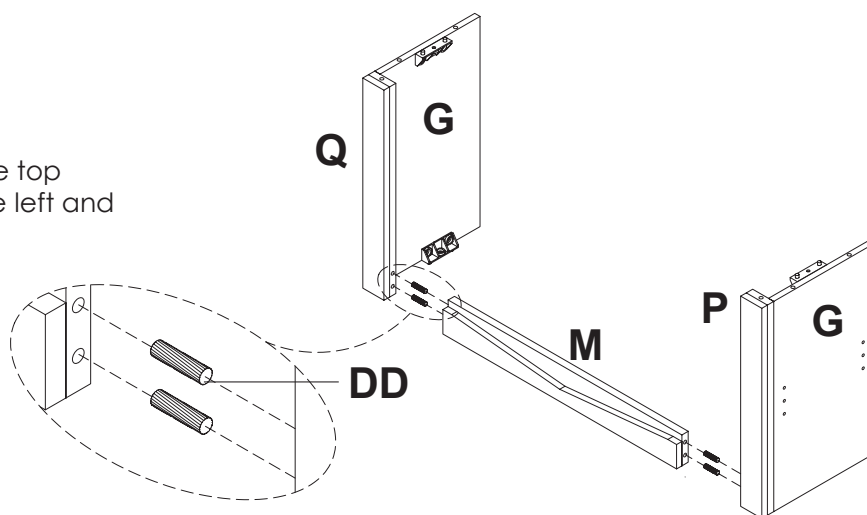

Assembly (continued)


ATTACHING THE MEDIA SHELF

1. Insert four wood dowels (DD) in the unthreaded holes of the media shelf (B).
2. Line up the wood dowels (DD) in the media shelf (B) with the unthreaded holes in the left and right inner panels (G).
3. Line up the short and long connectors (BB & CC) attached to the inner panel assembly with the holes in the media shelf (B).
4. Press the inner panel assembly down firmly onto the media shelf until flush.
5. Insert four bolts (AA) into the short and long connectors (BB & CC) on the inner panel assembly.
6. Attach the inner panel assembly to the media shelf (B) by turning the bolts (AA) clockwise. Do not strip the bolts (AA) by overtightening.

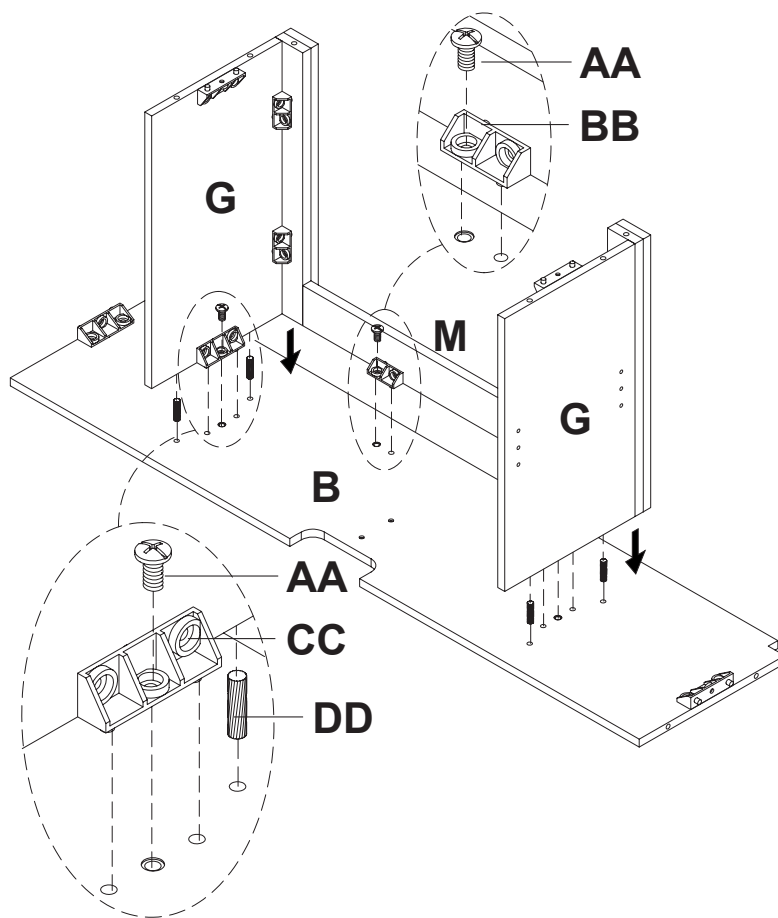

ATTACHING THE BASE


1. Insert six wood dowels (DD) into the unthreaded holes in the media shelf assembly.
2. Line up the wood dowels (DD) with the unthreaded holes in the base panel (C). Press together firmly until flush.
3. Attach the base panel (C) to the media shelf assembly by inserting two bolts (AA) through the long connectors (CC) on the inner panels (G) and turning clockwise. Do not strip the bolts (AA) by overtightening.

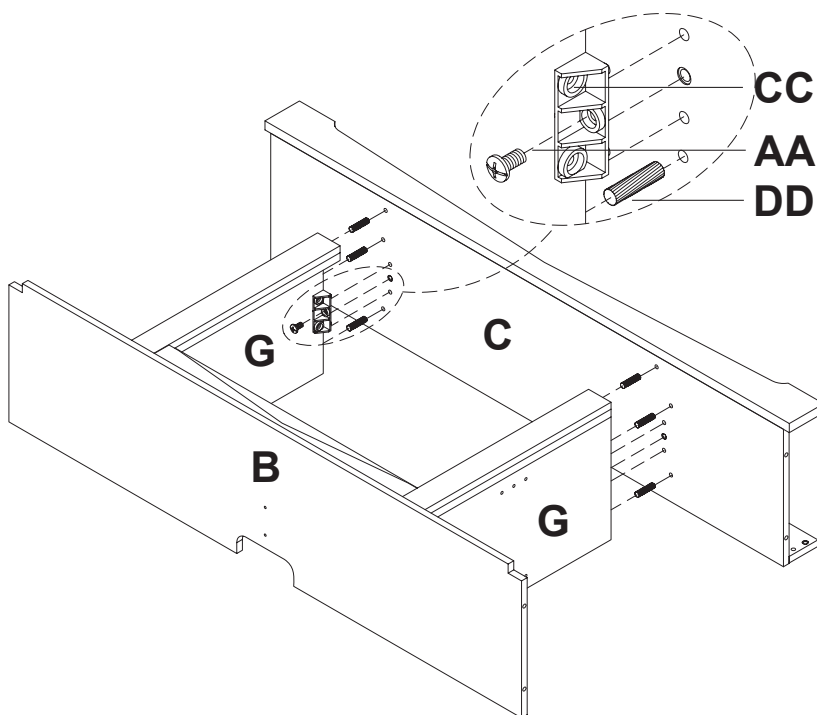

Assembly (continued)


ATTACHING HARDWARE ONTO THE SIDE PANELS

1. Locate the left and right side panels (E & F) and place them on a soft surface to protect the finish.
2. Insert long connectors (CC) into the left and right side panels (E & F) where indicated. Press down firmly until flush.
3. Attach the long connectors (CC) by inserting and turning four bolts (AA) clockwise. Do not strip the bolts (AA) by overtightening.
4. Attach the four door hinge plates (GG) to the left and right side panels (E & F) by inserting and tightening sixteen hinge screws (JJ). Do not overtighten and strip the hinge screws (JJ).

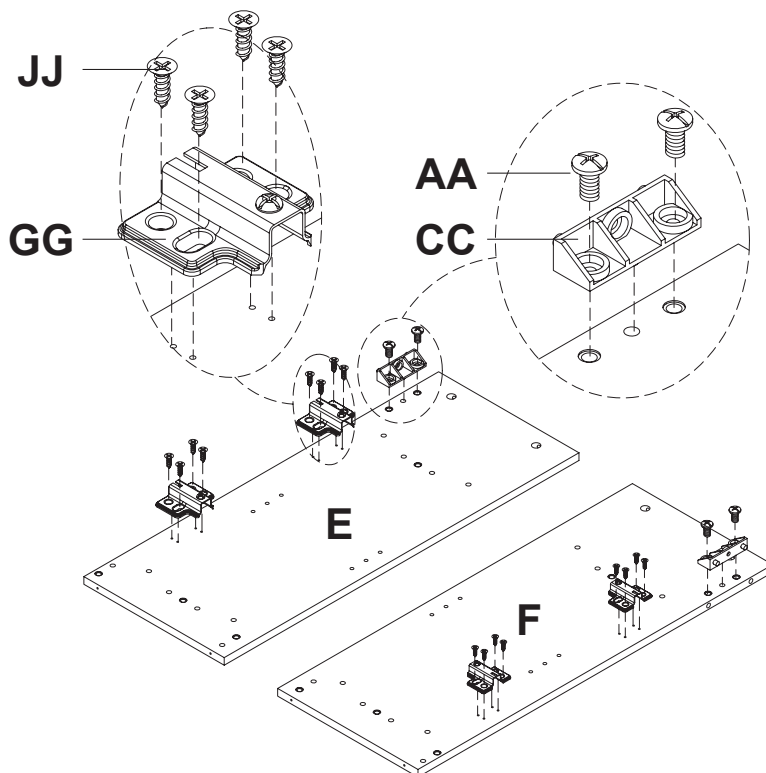

ATTACHING THE SIDE PANELS


1. Insert eight wood dowels (DD) into the unthreaded holes in the sides of the media shelf (B) and the base panel (C).
2. Line up the wood dowels (DD) in the sides of the media shelf (B) and the base panel (C) with the unthreaded holes in the left and right side panels (E & F).
3. Line up the long connectors (CC) in the media shelf (B) and the base panel (C) with the holes in the left and right side panels (E & F).
4. Press the left and right side panels (E & F) firmly until flush with the media console assembly.
5. Attach the left and right side panels to the media console assembly by inserting eight bolts (AA) through the long connectors (CC) in the media shelf (B) and the base panel (C) and turning clockwise. Do not strip the bolts (AA) by overtightening.

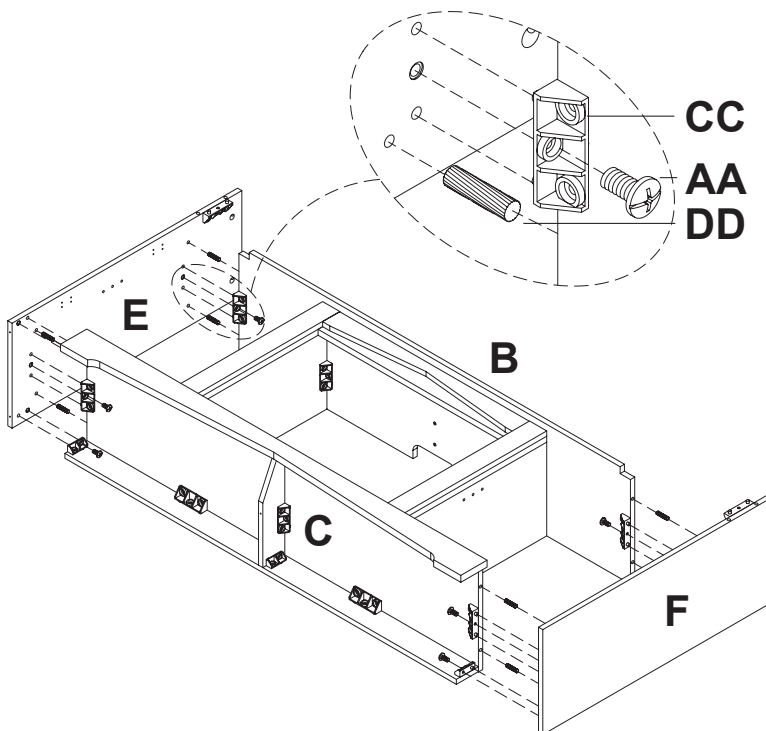

Assembly (continued)


ATTACHING THE SUPPORT PANEL

1. Attach the support panel (S) to the media shelf (B) by lining up the holes in the bottom of the support panel (S) with the holes in the media shelf (B). Insert and tighten two screws (KK) through the media shelf (B) into the support panel (S).
2. Do not strip the screws (KK) by overtightening.

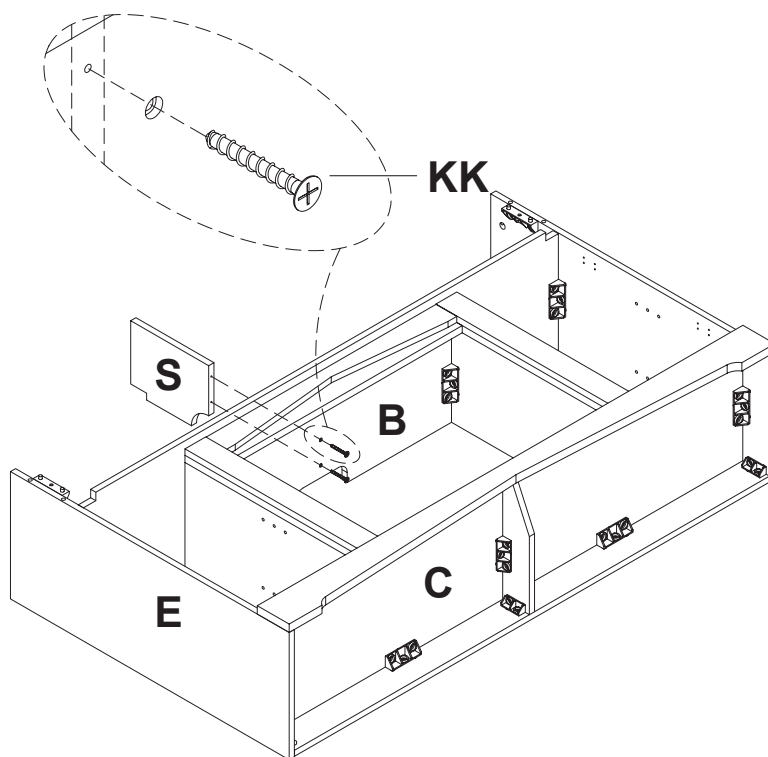

ATTACHING THE TOP RAIL


1. Insert four wood dowels (DD) into the unthreaded holes in the sides of the top rail (J).
2. Line up the wood dowels (DD) in the top rail (J) with the unthreaded holes in the sides of the left and right front panels (T & U). Press together firmly until flush.
3. Insert 4 wood dowels (DD) into the unthreaded holes on the back of the left and right front panels (T & U).
4. Line up the wood dowels (DD) in the left and right front panels (T & U) with the unthreaded holes in the left and right side panels (E & F).
5. Line up the long connectors (CC) in the left and right side panels (E & F) with the holes in the left and right front panels (T & U). Press together firmly until flush.
6. Attach the top rail assembly to the left and right side panels (E & F) by inserting two bolts (AA) through the long connectors (CC) in the left and right side panels (E & F) and turning clockwise. Do not strip the bolts (AA) by overtightening.

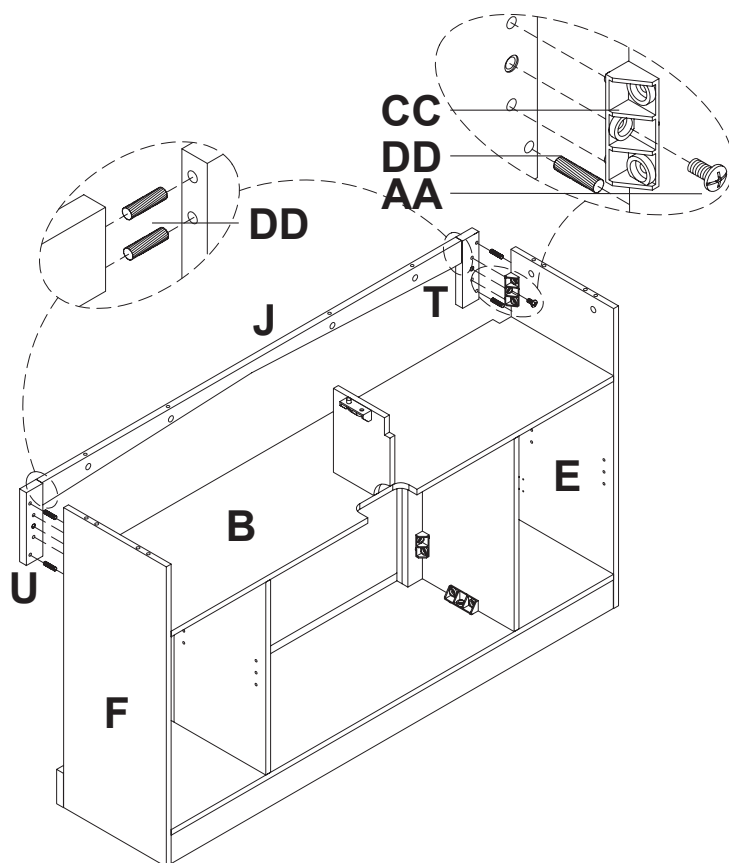

Assembly (continued)


PREPARING THE TOP PANEL

1. Locate the top panel (A) and place it on a soft surface to protect the finish with the finished side facing down.
2. Insert four long cam lock dowels (LL) into the threaded holes in the sides of the top panel (A) by turning clockwise. Do not strip the long cam lock dowels (LL) by overtightening.
3. Insert four short cam lock dowels (MM) into the threaded holes in the front of the top panel (A) by turning clockwise. Do not strip the short cam lock dowels (MM) by overtightening.

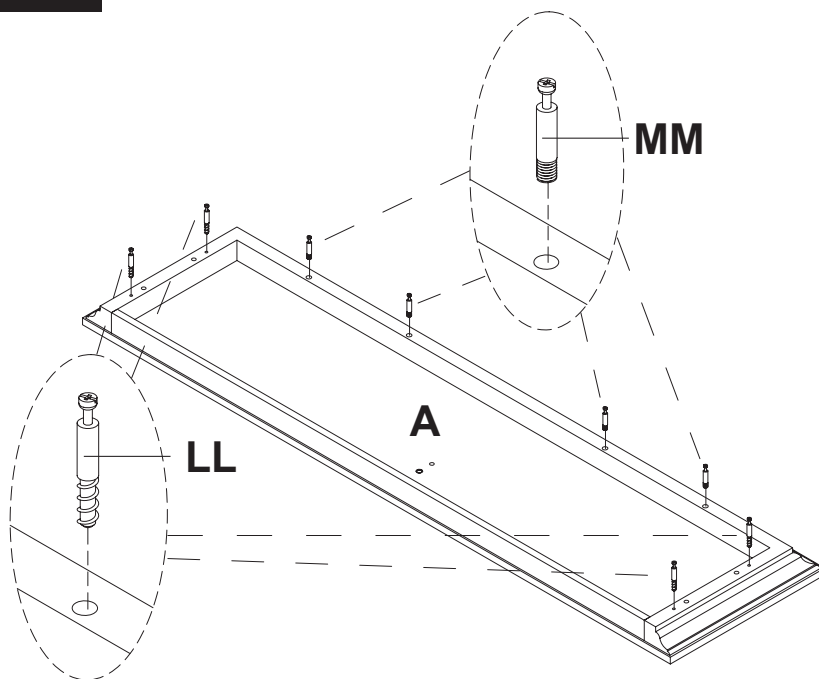

ATTACHING THE TOP PANEL


1. Insert four wood dowels (DD) into the unthreaded holes in the top of the left and right side panels (E & F). Line up the wood dowels (DD) in the side panels (E & F) with the unthreaded holes in the top panel (A).
2. Line up the long and short cam lock dowels (LL & MM) with the cam lock holes in the media console assembly. Push down on the top panel (A) until flush.
3. Insert eight metal cam locks (NN) into the cam lock holes in the left and right side panels (E & F) and the top rail (J).
4. Attach the top panel (A) to the media console assembly by turning the metal cam locks (NN) clockwise. Do not break the metal cam locks by overtightening.
5. Insert one bolt (AA) through the short connector (BB) on the support piece (S) and tighten by turning clockwise. Do not strip the bolt (AA) by overtightening.

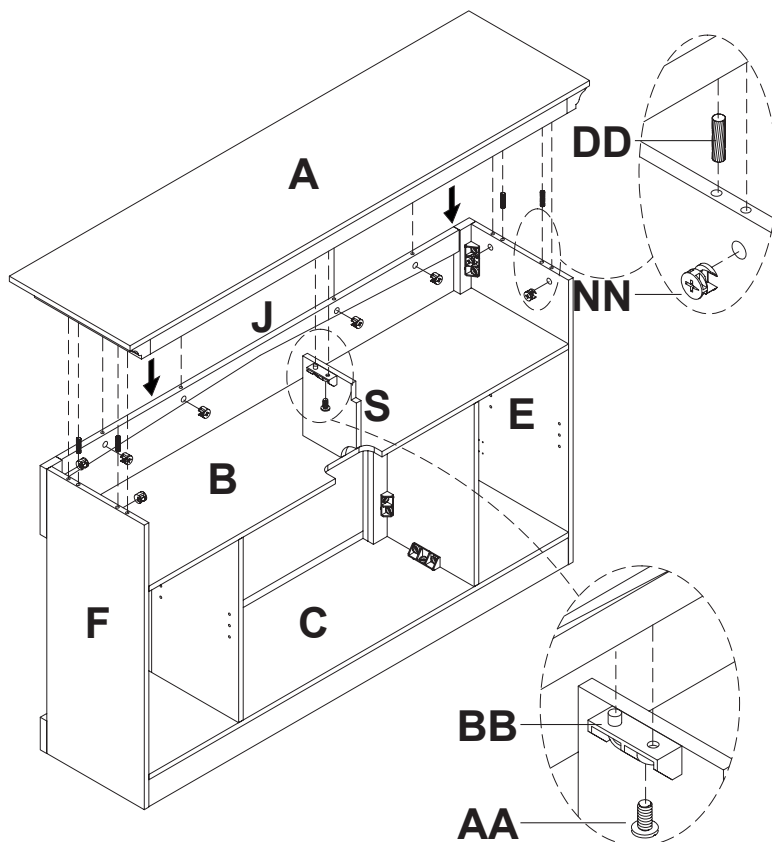

Assembly (continued)


ATTACHING THE BACK PANELS

1. Locate the back panels (D & N) and line them up to the back of the media console with the finished side facing in.
2. Insert and tighten thirty screws (FF) to attach the back panels (D & N) to the media console.
3. Do not strip the screws (FF) by overtightening.

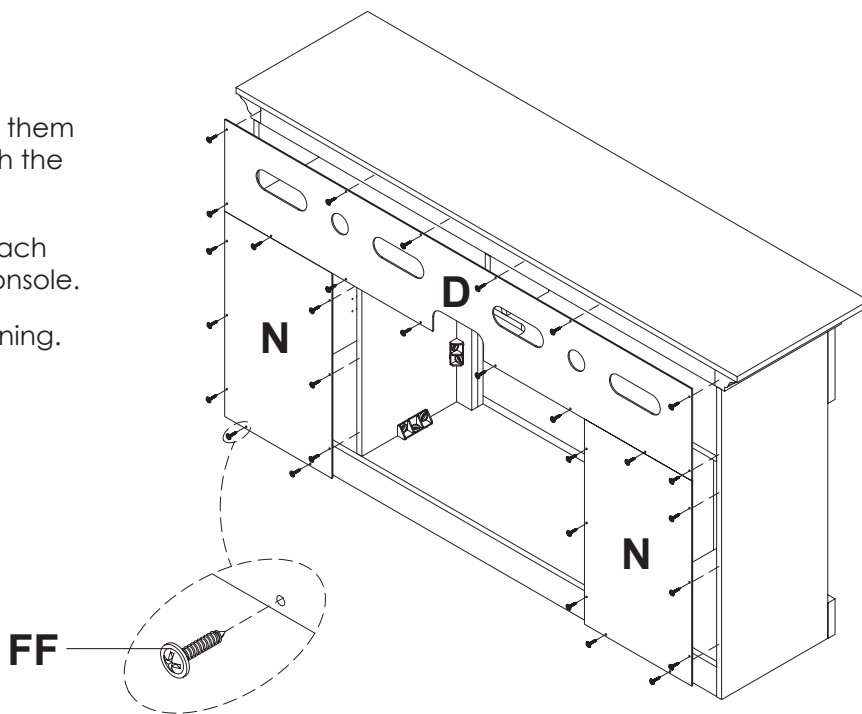

ATTACHING THE DOORS AND KNOBS

1. Loosen the screws in the hinge plates (GG) in the left and right side panels (E & F).
2. Line up the hinges in the left and right doors (H) with the hinge plates (GG) in the left and right side panels (E & F).
3. Tighten the screws to attach the hinges to the hinge plates (GG) on the left and right side panels (E & F). Do not strip the screws by overtightening.
4. Attach knobs (EE) to the left and right doors (H) by inserting the bolts through the doors (H) and turning clockwise into the knobs (EE). Do not strip the bolts by overtightening.

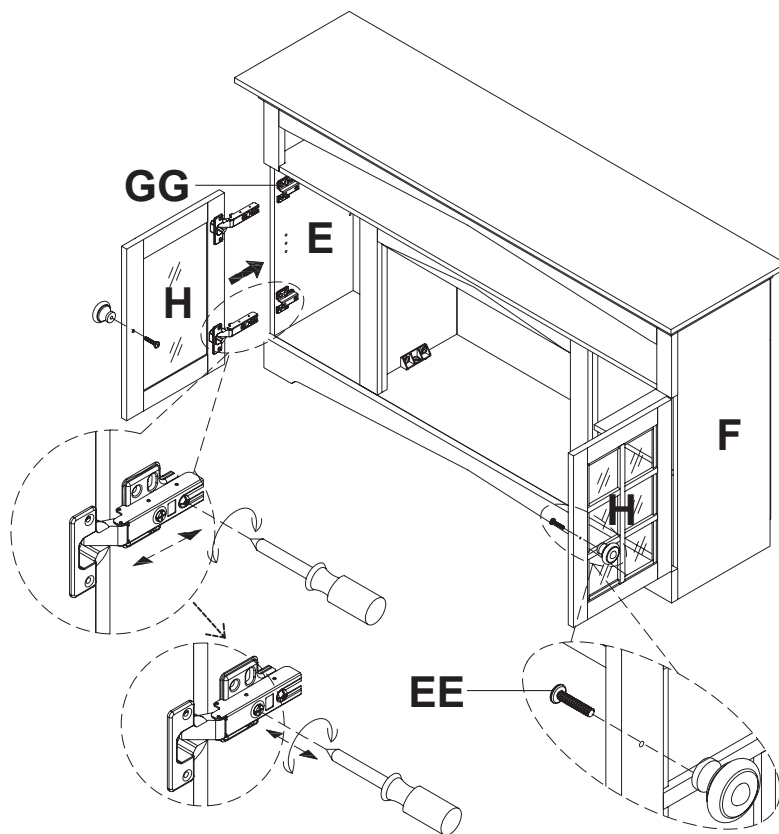


NOTE: The door's left/right and forward/back, positions are adjusted by turning the screws in the hinge pivot as shown in the illustration.

Assembly (continued)


INSTALLING THE SHELVES

1. Locate the two shelves (R) and place them on a soft surface to protect the finish.
2. Insert the 8 shelf pins (HH) into the interior of the side panels (E, F & G). Be sure to insert the pins parallel to one another to ensure the shelves (R) are level.
3. Insert the shelves (R) onto the shelf pins (HH) with the finished side visible.

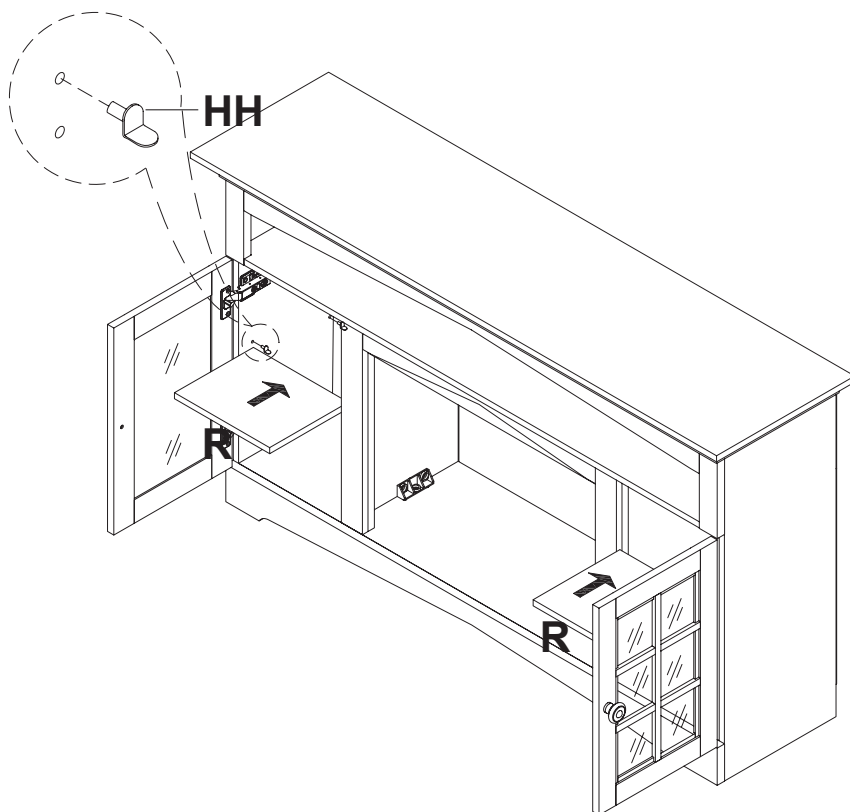

INSTALLING THE FIREBOX


1. Insert the firebox (W) into the media console through the back opening.
2. Push the firebox (W) forward through the front opening until the metal trim of the firebox (W) is flush with the left and right front panels (P & Q).
3. Once the firebox is in position insert and tighten the four screws provided with the firebox through the holes in the metal trim and into the left and right front panels (T & U).
4. Do not strip the screws by overtightening.

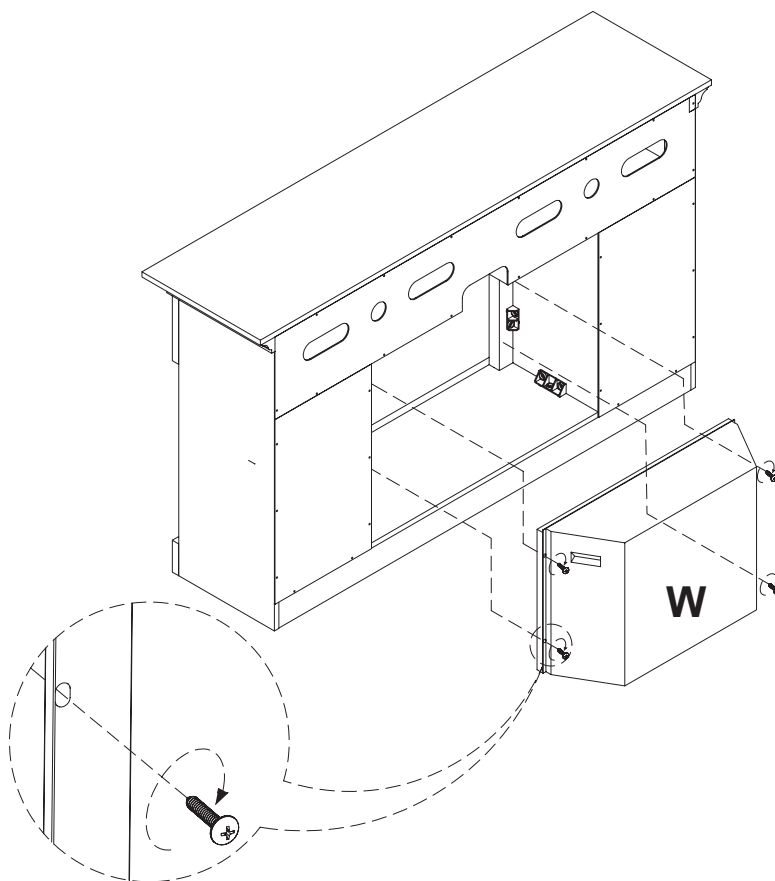


Care and Cleaning

1. Always turn the heater OFF and unplug the power cord from the outlet before cleaning.
2. Cleaning of the control panel, located in the upper right-hand corner of the fireplace is to be done only using a soft cloth, slightly dampened in water (if needed, a small amount of dish soap can be added to the water) and dried using a clean, dry soft cloth. Cleaning of the screen diffuser is to be done using only water and lint free cloth. DO NOT use any abrasive on the controls or the diffusing screen.

Shelf Weight Capacity

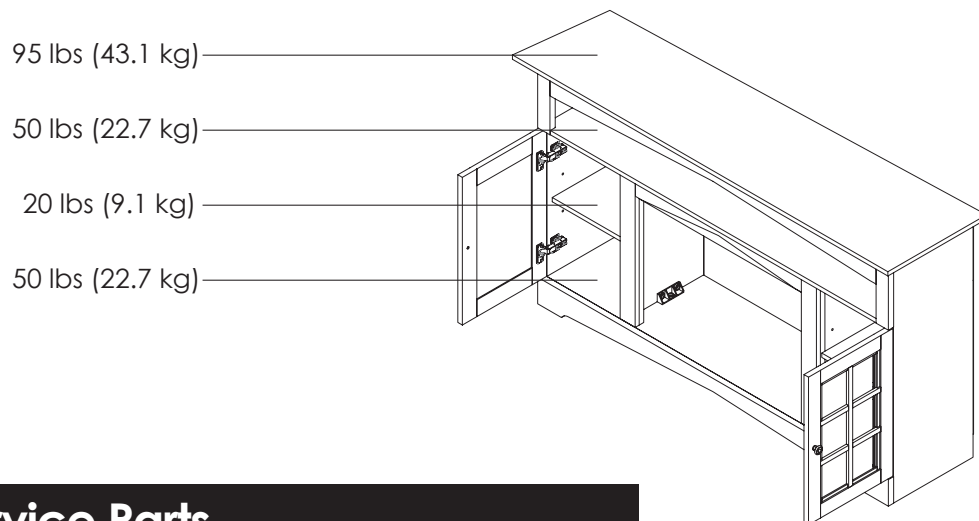

Service Parts

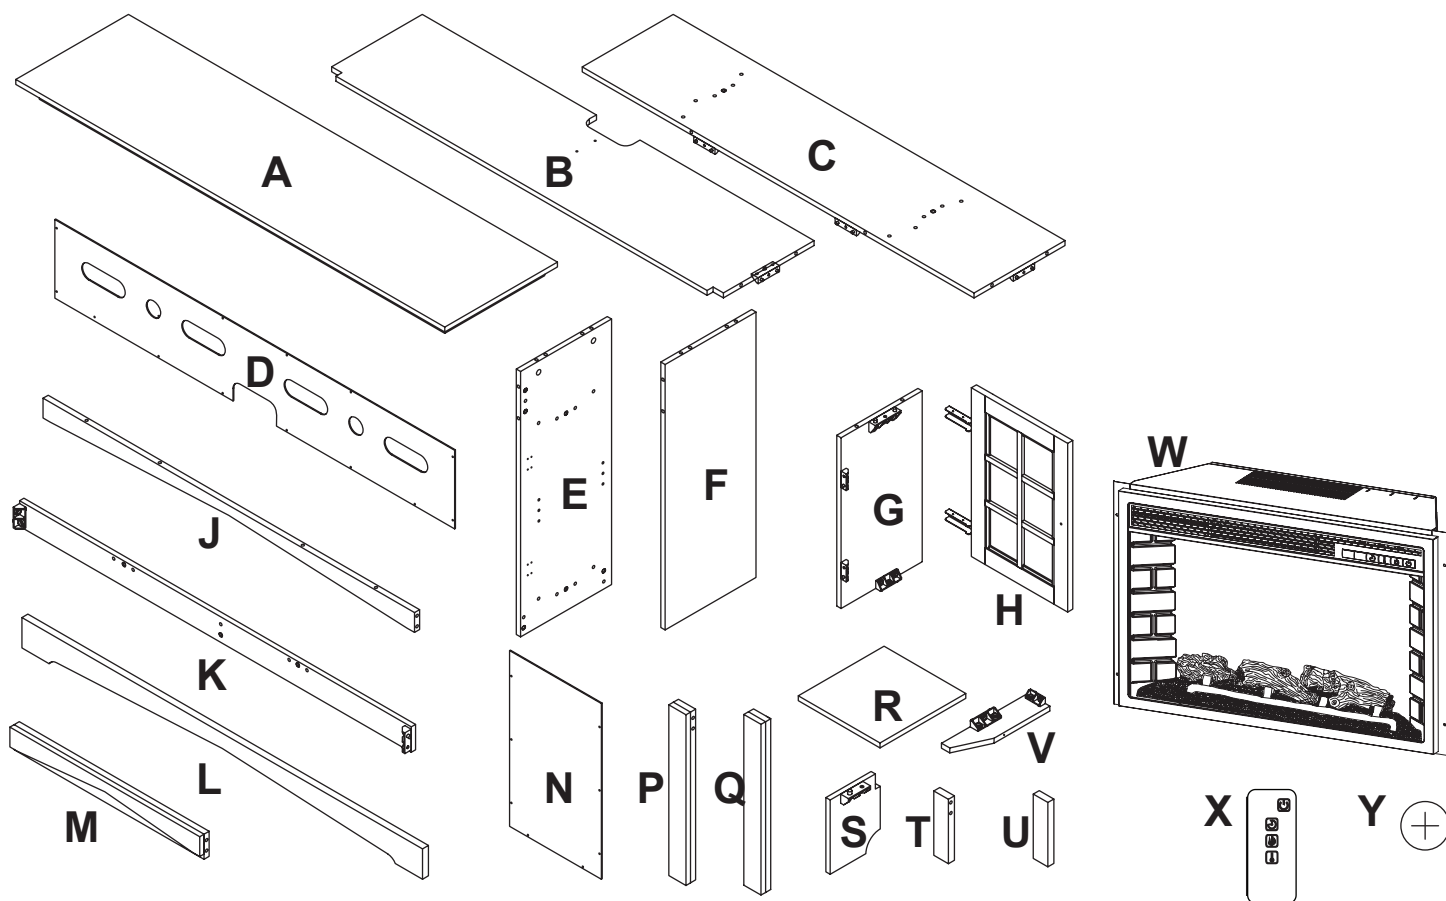

Service Parts (continued)

Part	Description	Quantity	Part Number 370-196-48 Espresso Finish	Part Number 370-196-204 White Finish	Part Number 370-196-205 Grey Finish
A	Top Panel	1	20-06-116	20-06-720	20-12-935
B	Media Shelf	1	20-06-117	20-06-721	20-12-936
C	Base Panel	1	20-06-118	20-06-722	20-12-937
D	Upper Back Panel	1	20-06-119	20-06-723	20-12-938
E	Left Side Panel	1	20-06-120	20-06-724	20-12-939
F	Right Side Panel	1	20-06-121	20-06-725	20-12-940
G	Inside Panel	2	20-06-122	20-06-726	20-12-941
H	Cabinet Door	2	20-06-123	20-06-727	20-12-942
J	Top Rail	1	20-06-124	20-06-728	20-12-943
K	Rear Apron Panel	1	20-06-125	20-06-729	20-12-944
L	Front Apron Panel	1	20-06-126	20-06-730	20-12-945
M	Top Trim	1	20-06-127	20-06-731	20-12-946
N	Side Back Panel	2	20-06-128	20-06-732	20-12-947
P	Left Trim	1	20-06-129	20-06-733	20-12-948
Q	Right Trim	1	20-06-130	20-06-734	20-12-949
R	Adjustable Shelf	2	20-06-131	20-06-735	20-12-950
S	Support Panel	1	20-06-132	20-06-736	20-12-951
T	Left Front Panel	1	20-06-133	20-06-737	20-12-952
U	Right Front Panel	1	20-06-134	20-06-738	20-12-953
V	Support Leg	1	20-06-135	20-06-739	20-12-954
W	Firebox	1	27-800-001		
X	Firebox Remote Control	1	EF33510AS-15		
	Hardware Pack	1	20-09-550		
	Manual	1	20-10-306		