 



Assembly Instructions

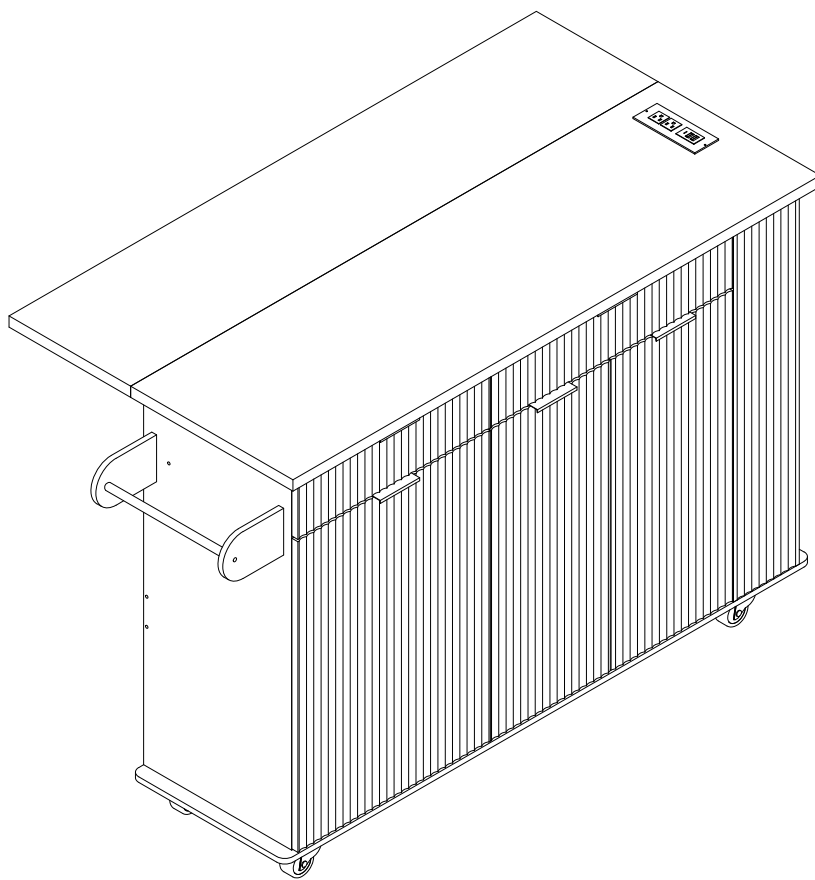


C260008S


Installation of Cams and Pins

 Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.











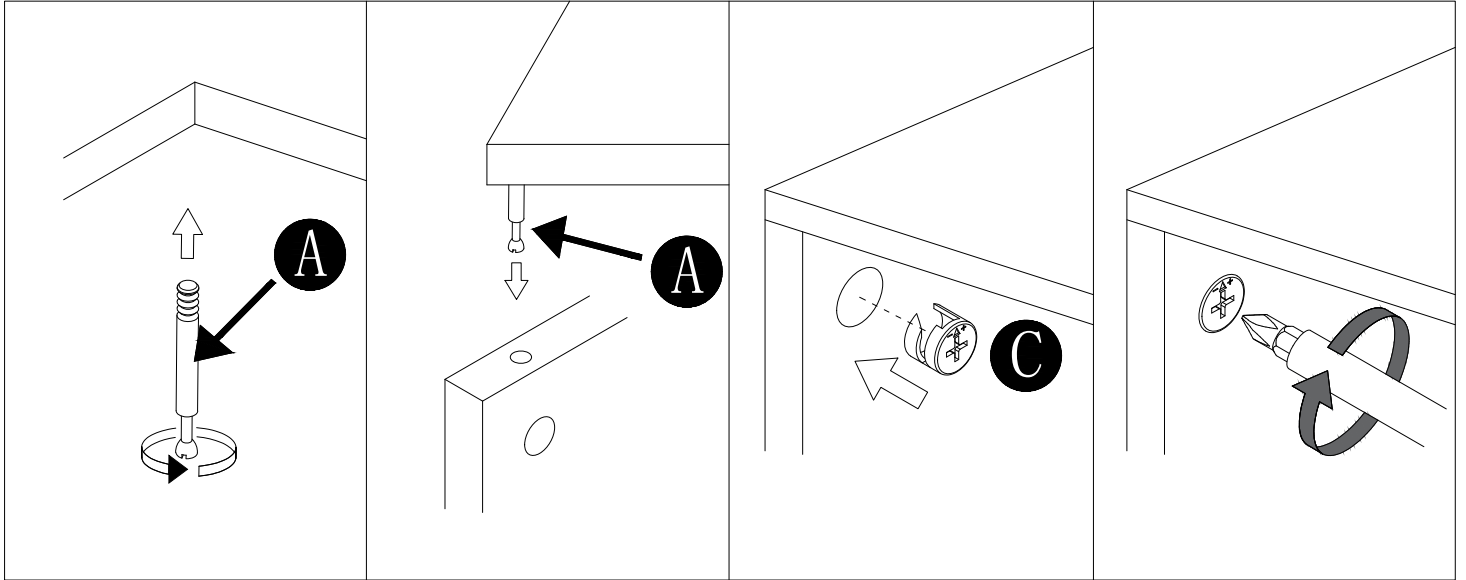


  Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.











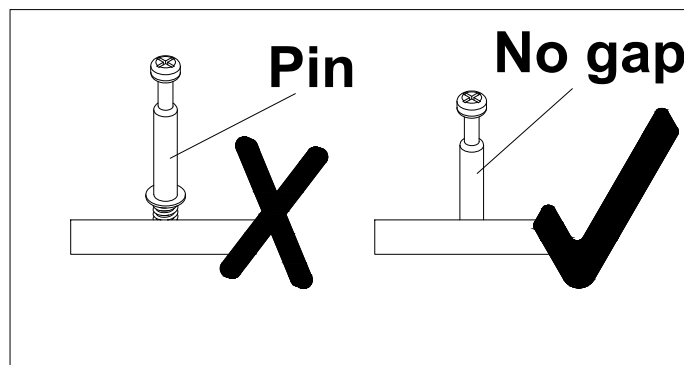


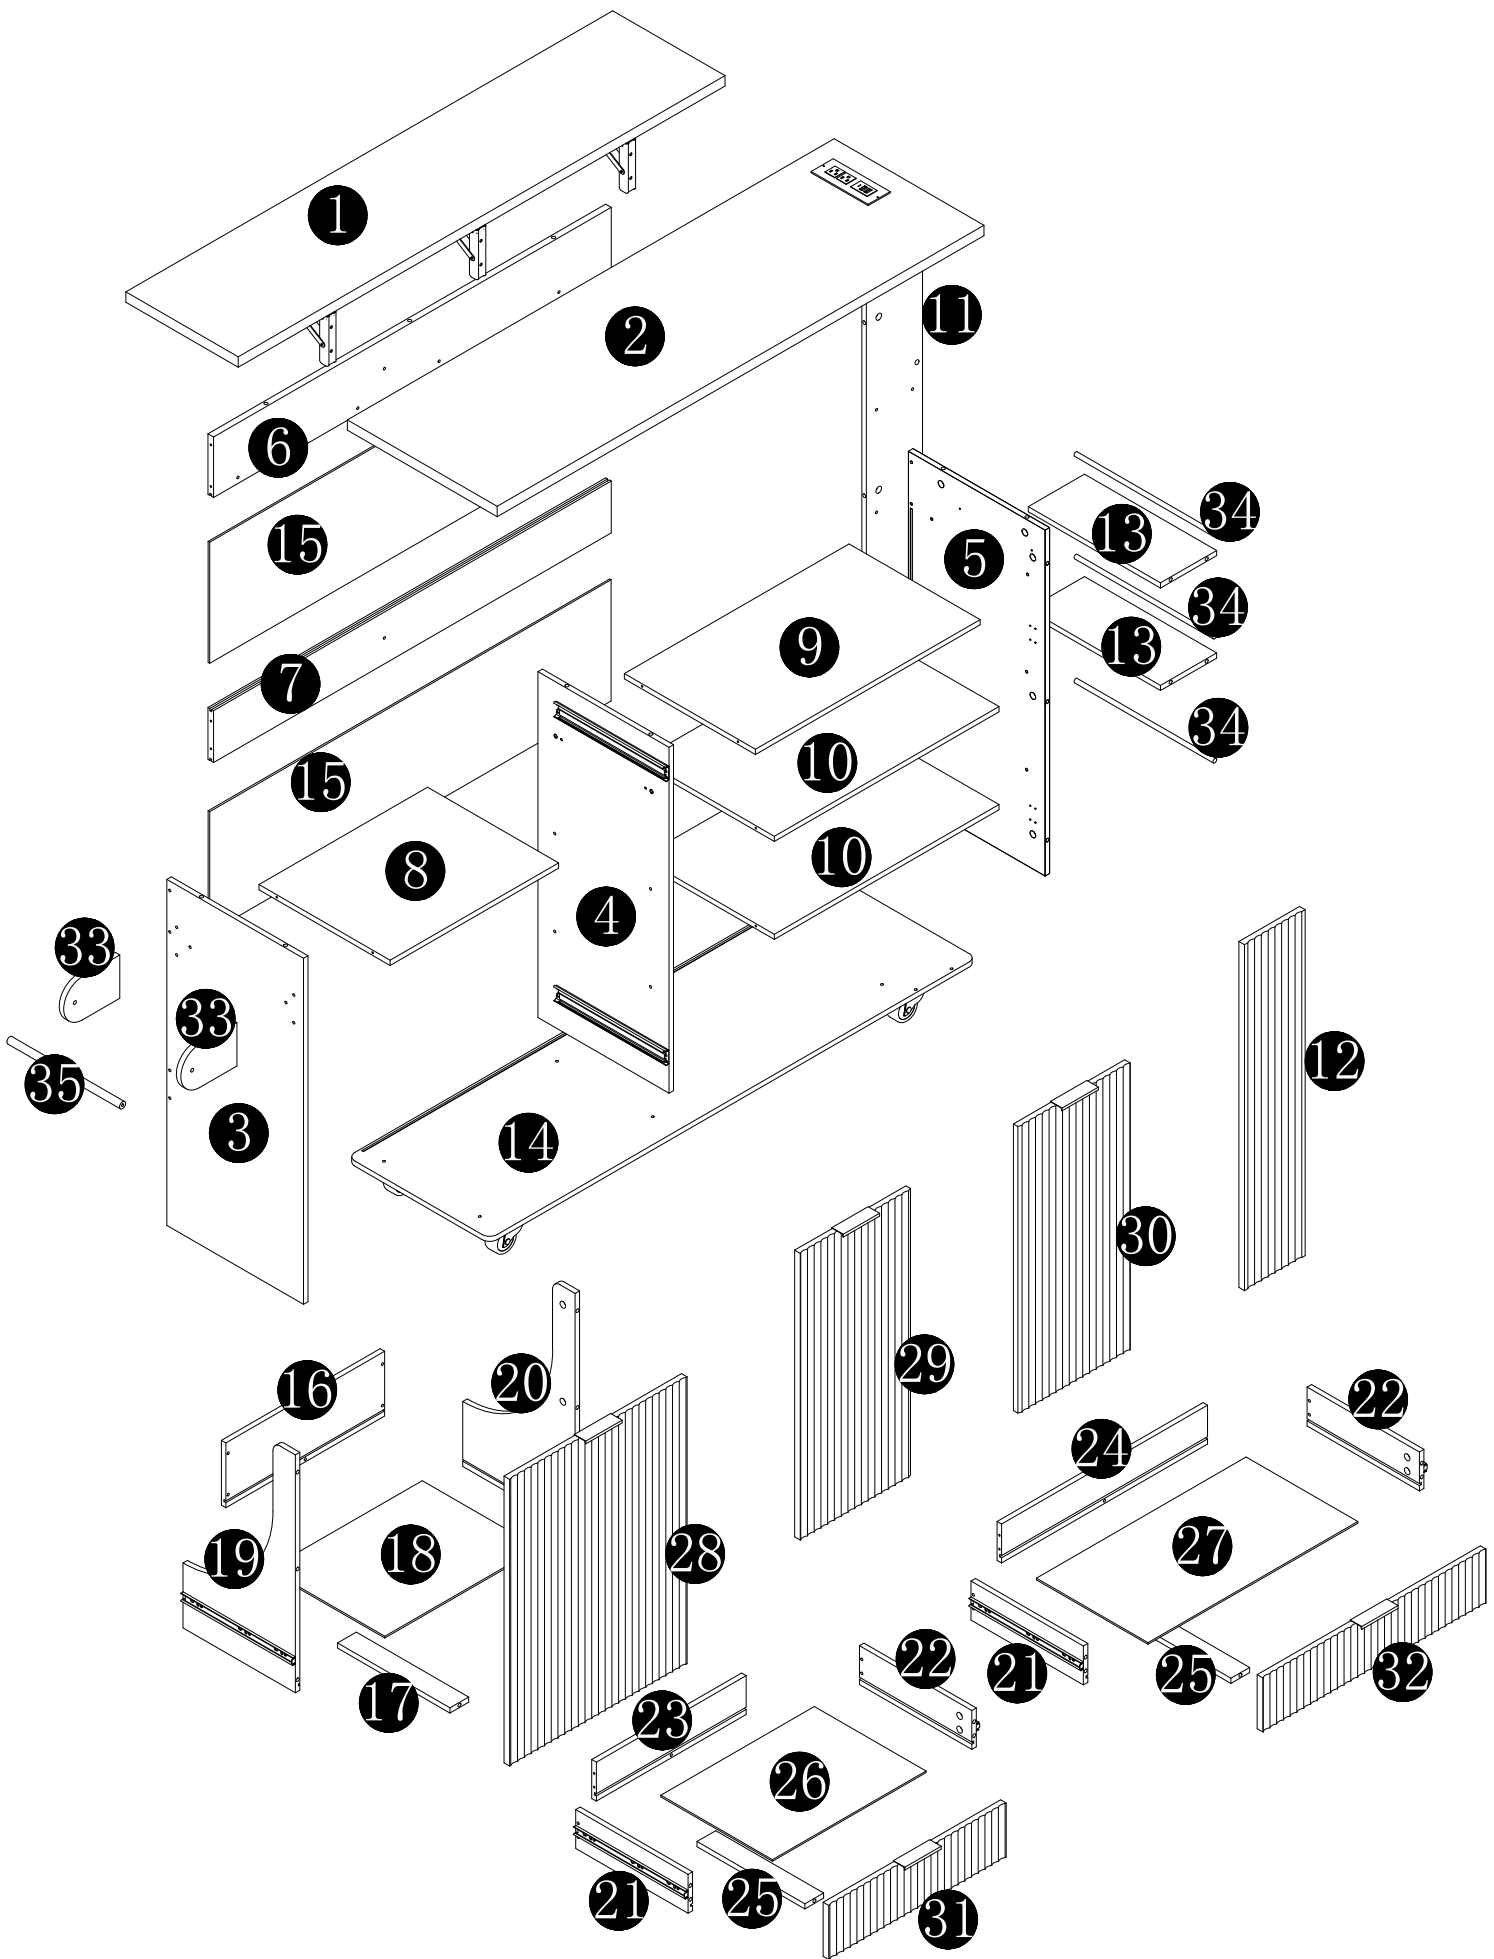









Parts & Hardware List

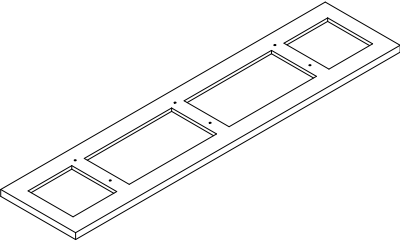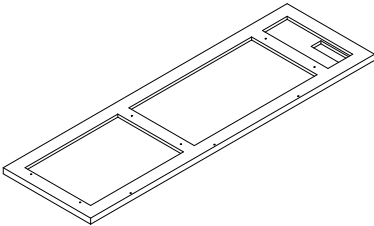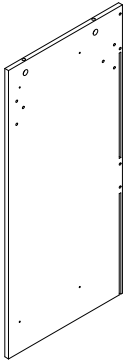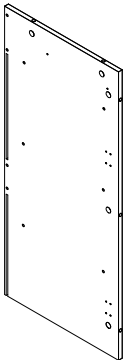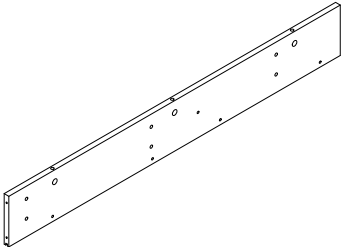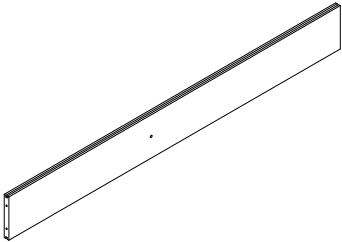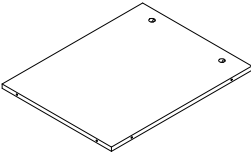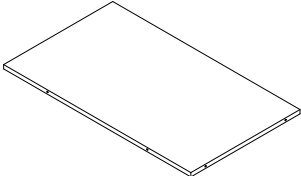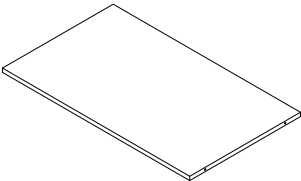            1 1pc	 2 1pc	 3 1pc
 4 1pc	 5 1pc	 6 1pc
 7 1pc	 8 1pc	 9 1pc
 10 2pcs	 11 1pc	 12 1pc

       
 
 
 
 
Parts & Hardware List

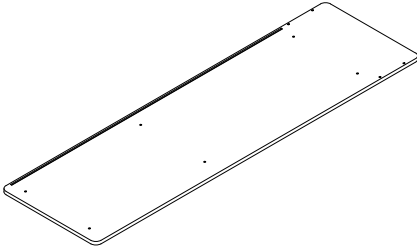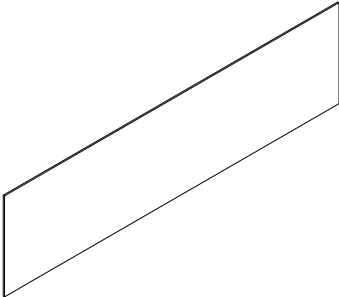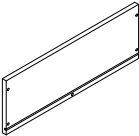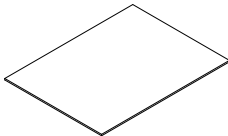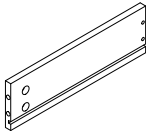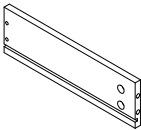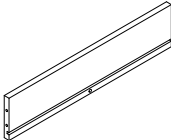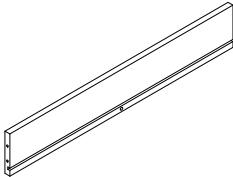 13 2pcs	 14 1pc	 15 2pcs
 16 1pc	 17 1pc	 18 1pc
 19 1pc	 20 1pc	 21 2pcs
 22 2pcs	 23 1pc	 24 1pc

        
Parts & Hardware List

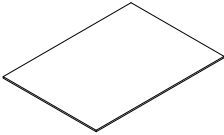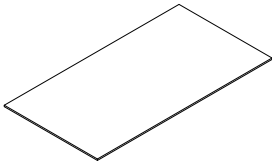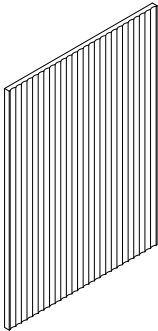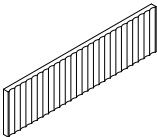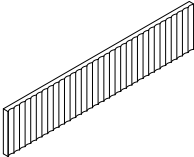 25 2pcs	 26 1pc	 27 1pc
 28 1pc	 29 1pc	 30 1pc
 31 1pc	 32 1pc	 33 2pcs
 34 3pcs	 35 1pc	

     
Parts & Hardware List

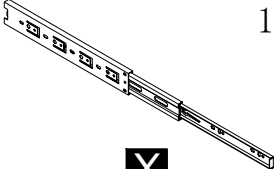 A 37pcs	 M5X50MM B 63pcs	 C 37pcs	 M6X28MM E 2pcs
  M 12pcs	 M6X10MM N 26pcs	 ST3. 5X12MM P 60pcs	 Q 1pc
 DW S 4pcs	 M4X10MM T 6pcs	 64MM U 5pcs	 8" W 3pcs
 X 6pcs 12"		 Y 1pc 2"	
	 3#	 4#	



 
1

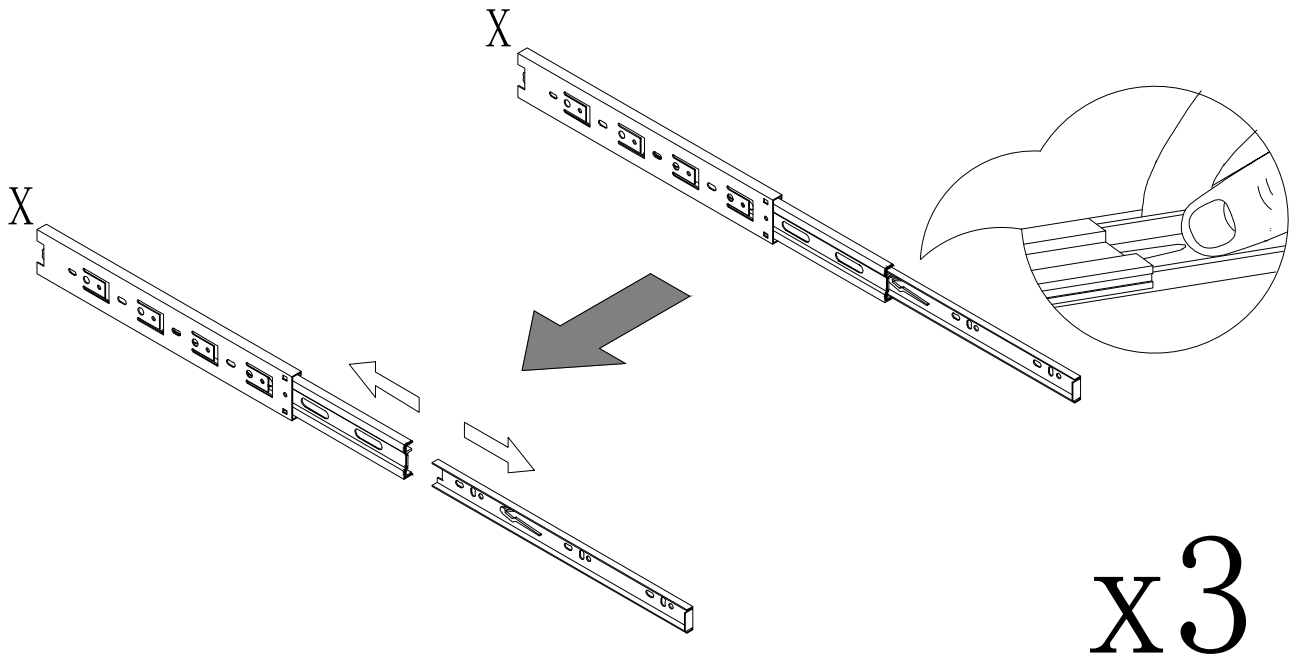


2

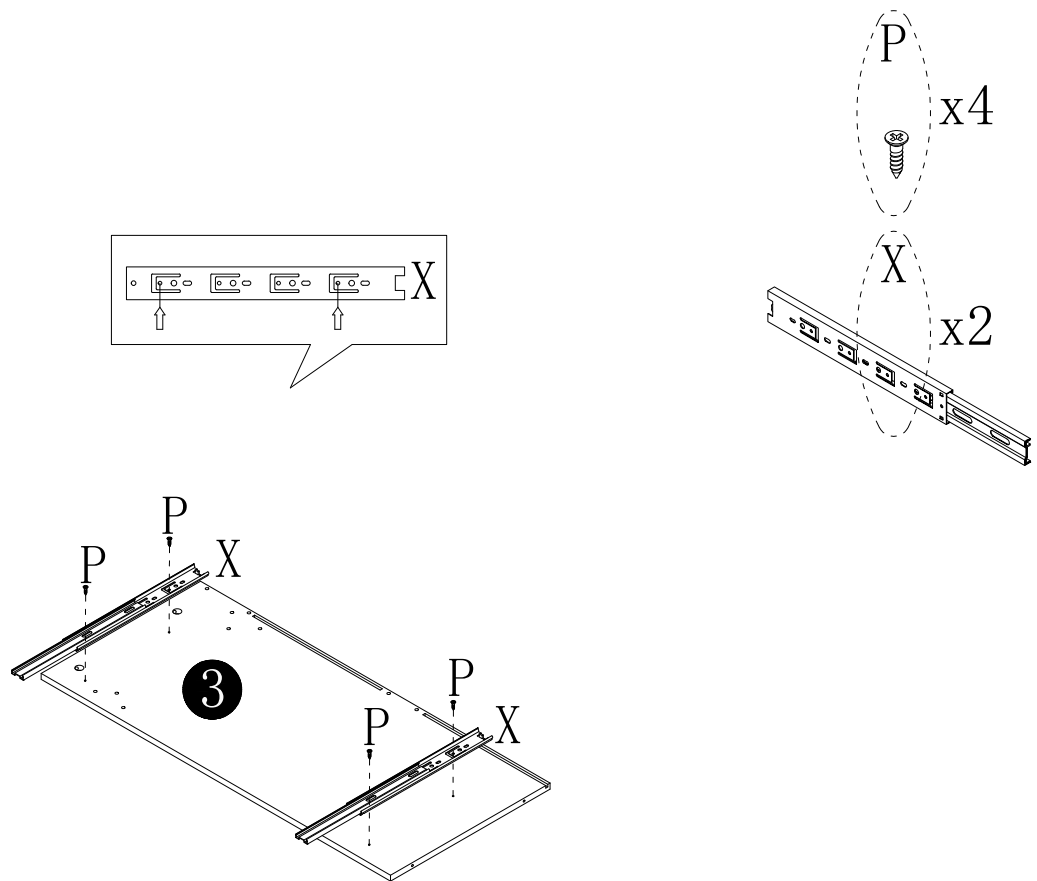 


3

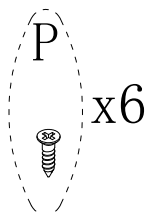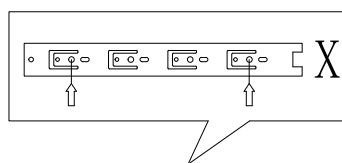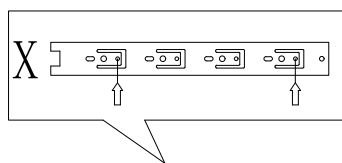   


x6

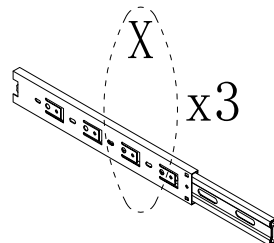 


x3

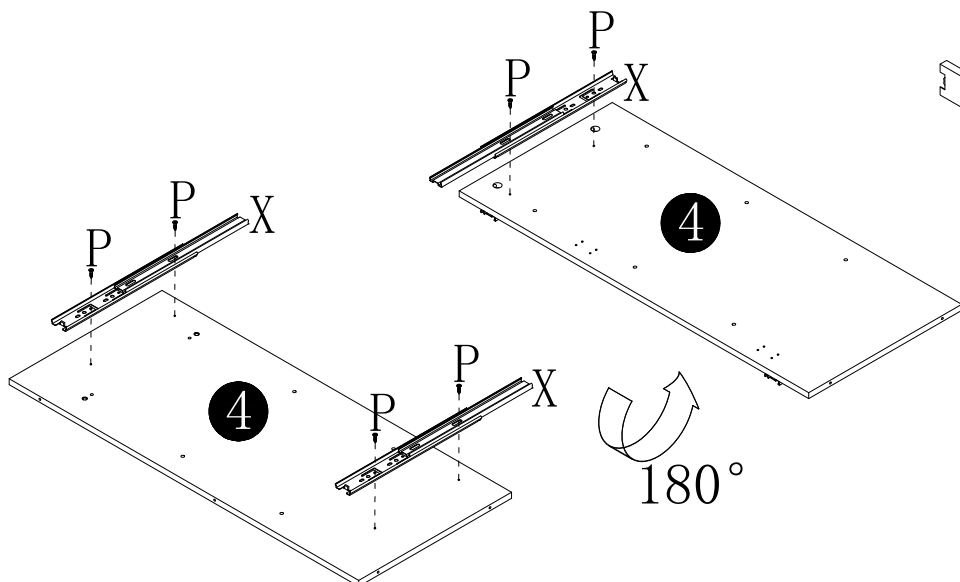 



4

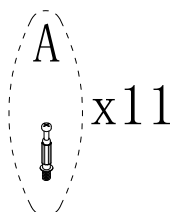 



x11

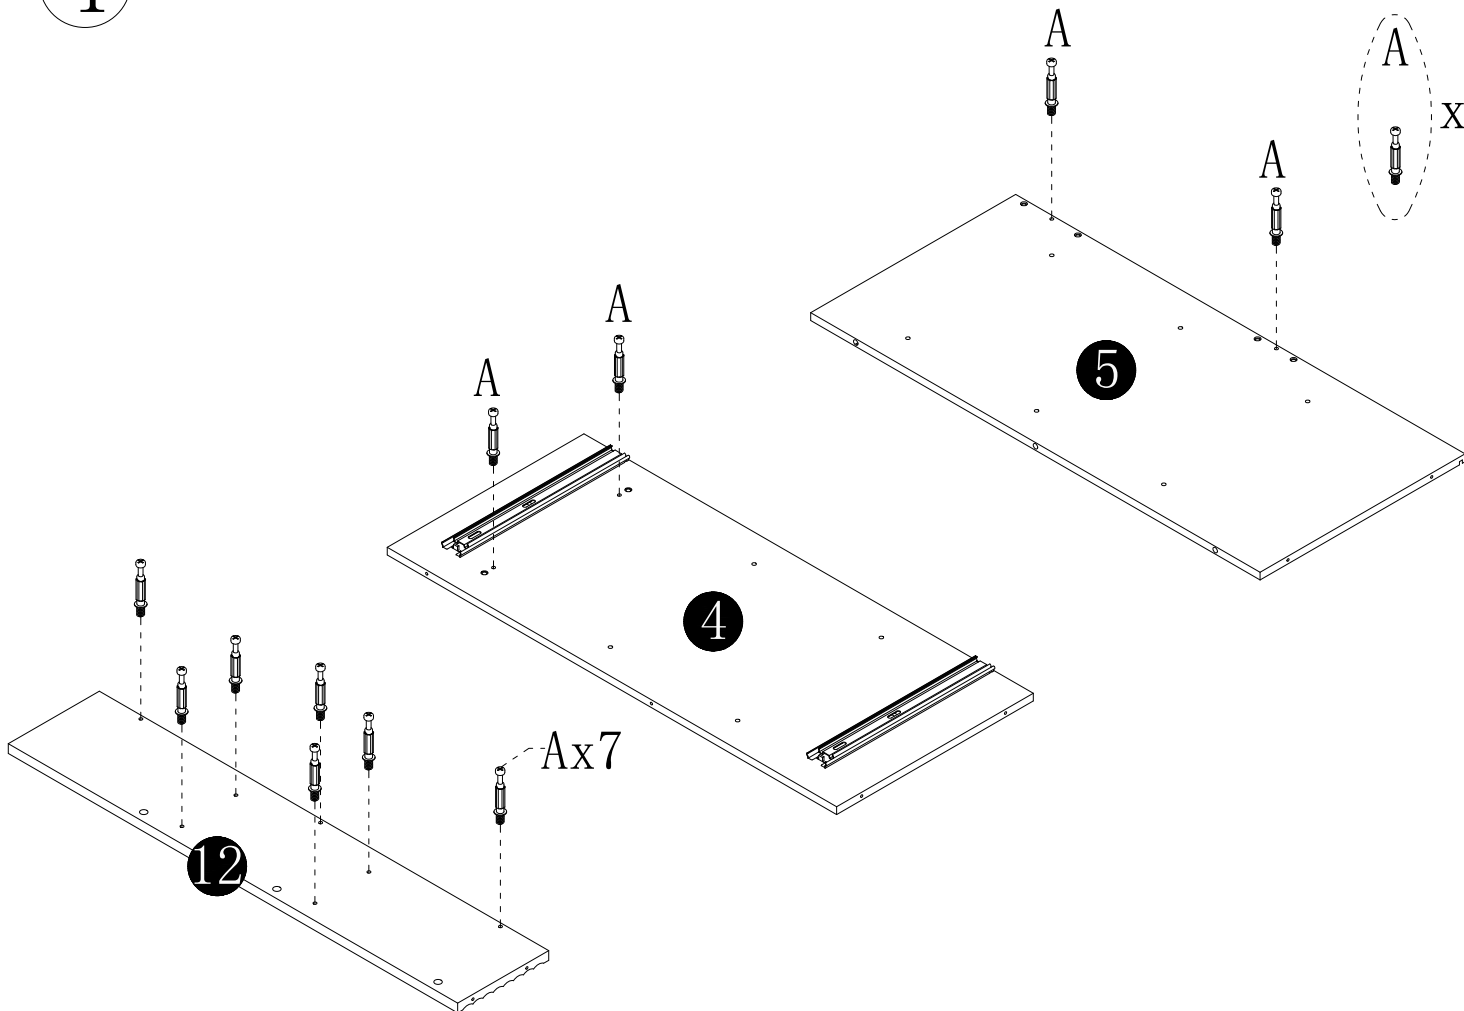 



5

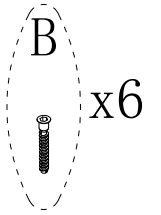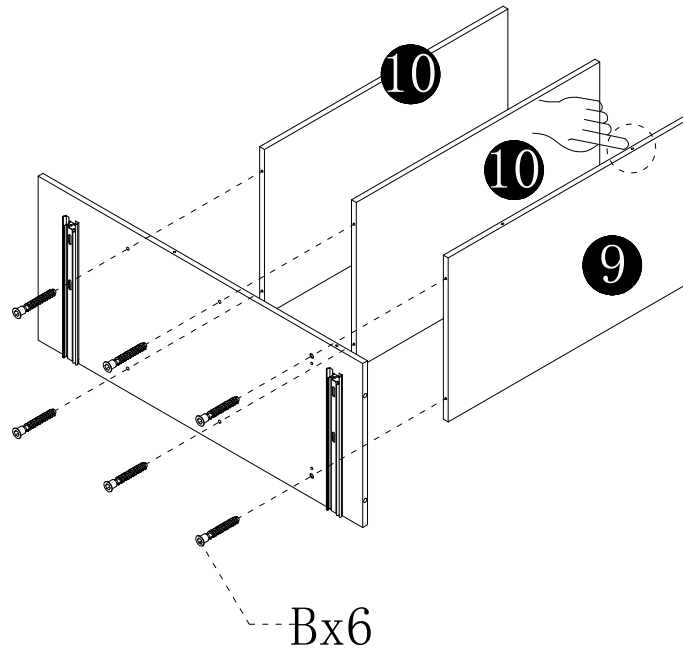  




6

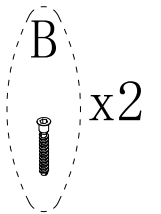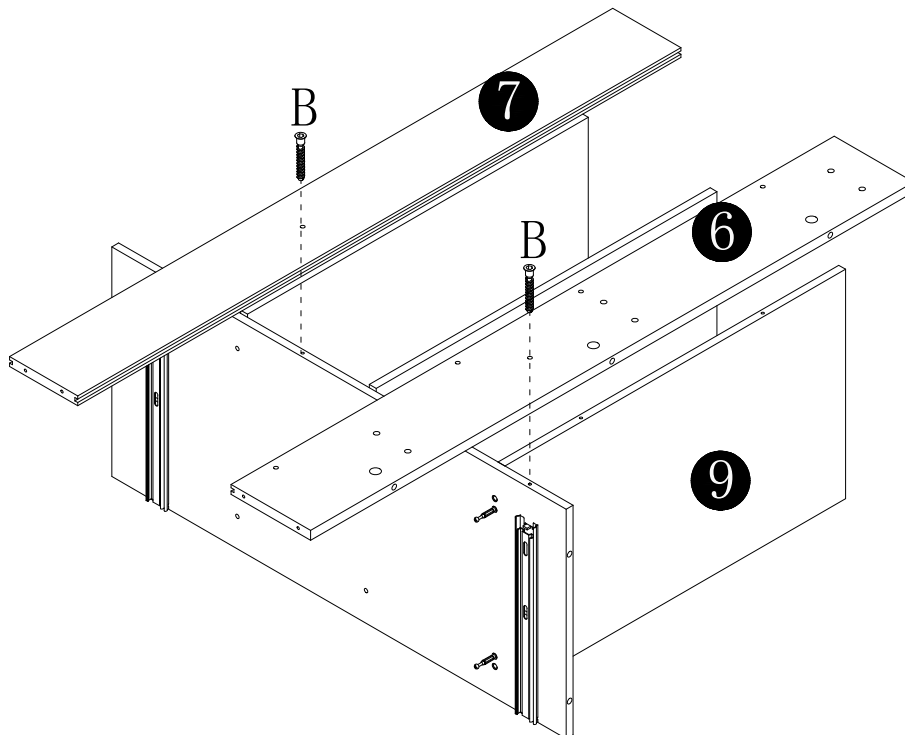  




7

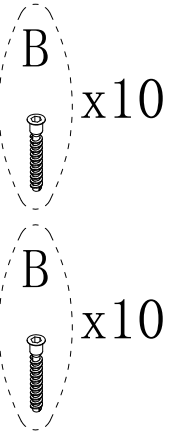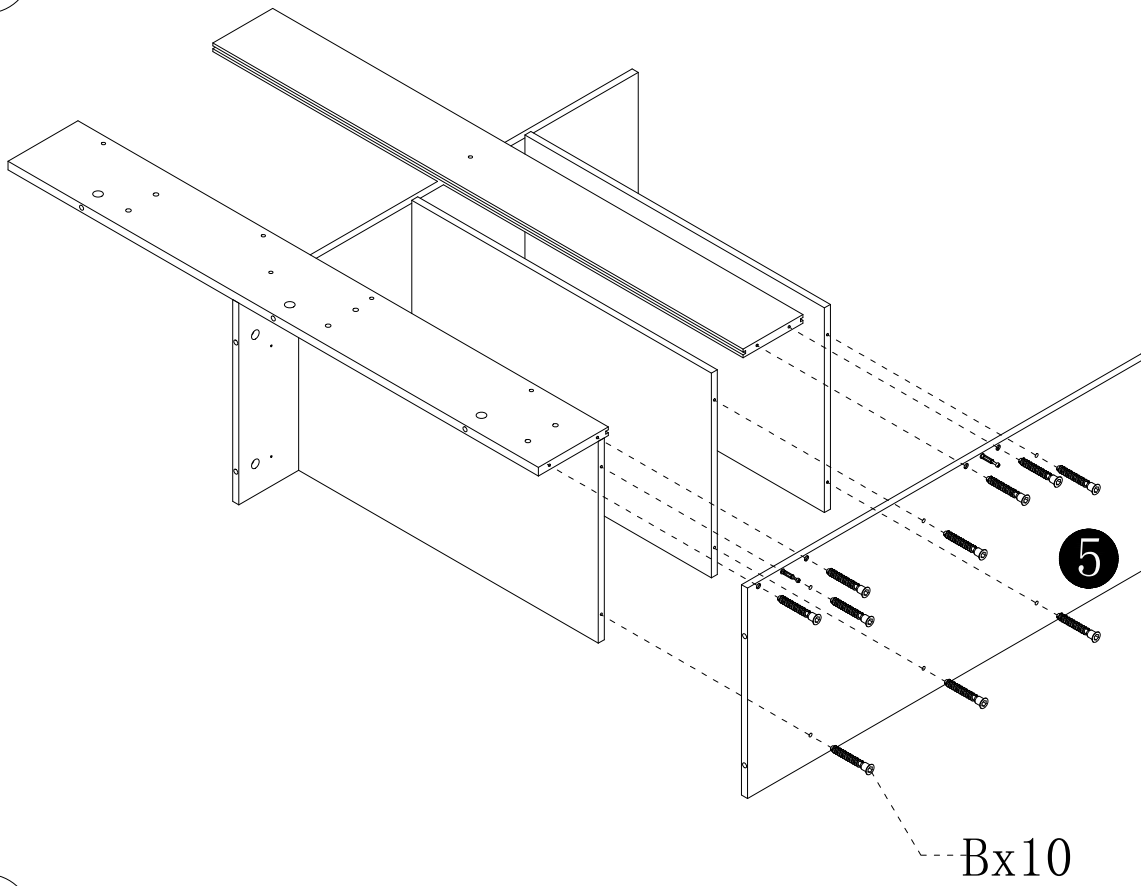  




8

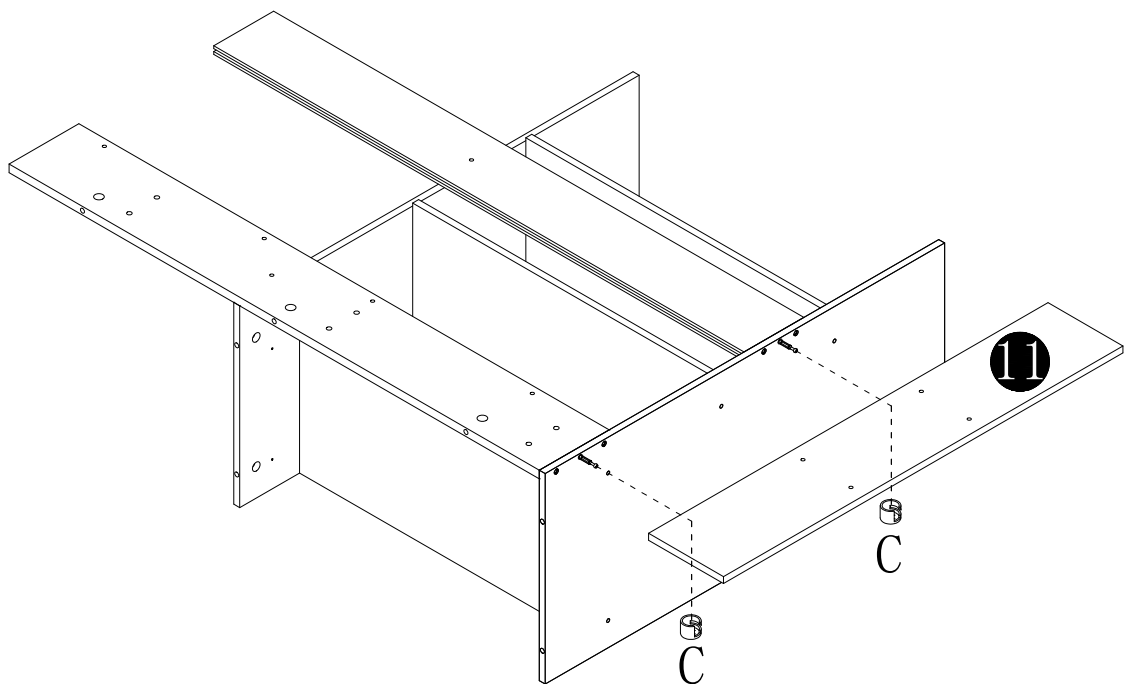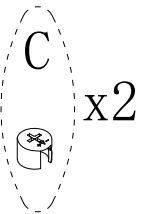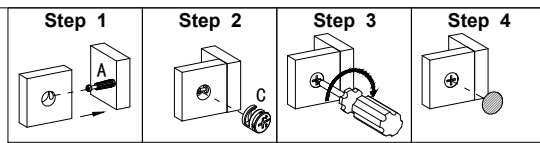   


9

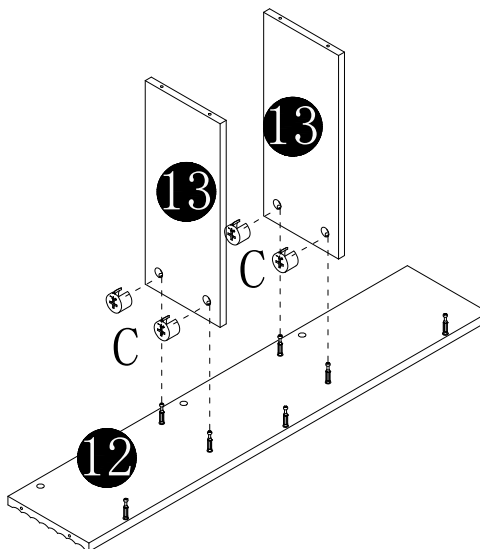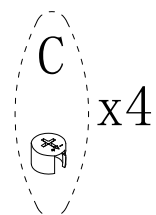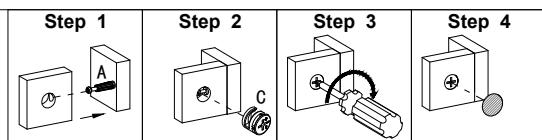   




10

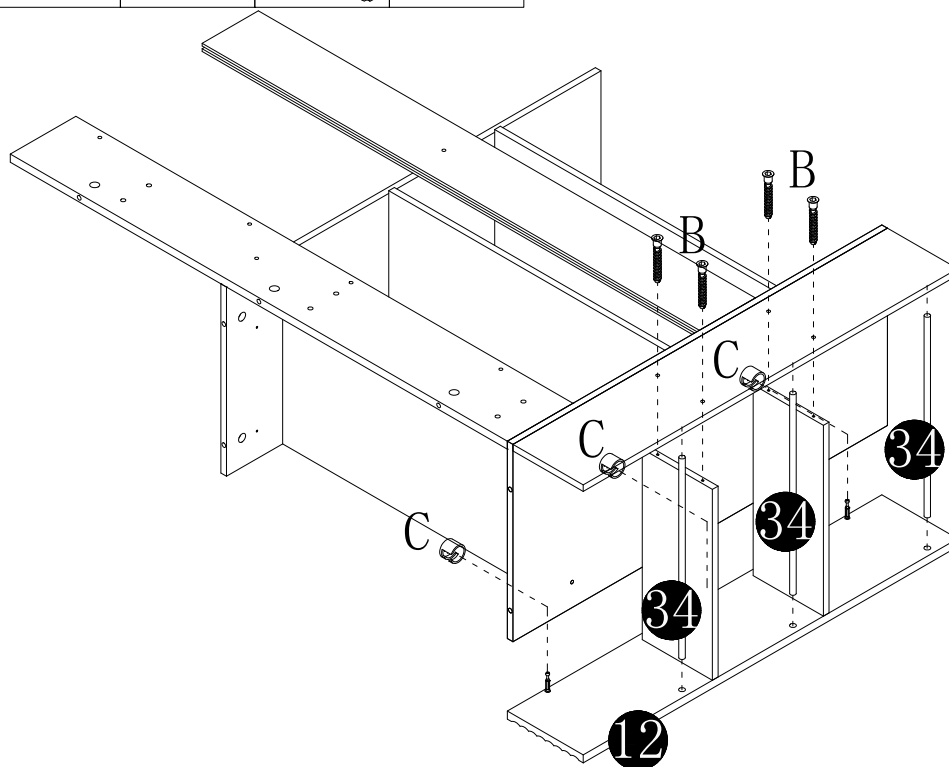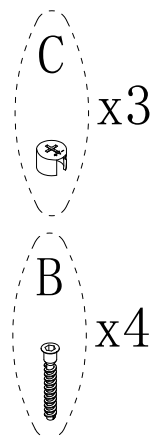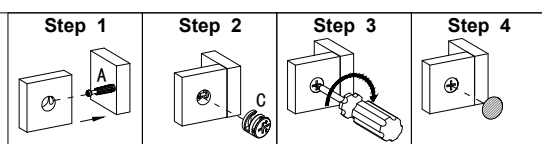   



11

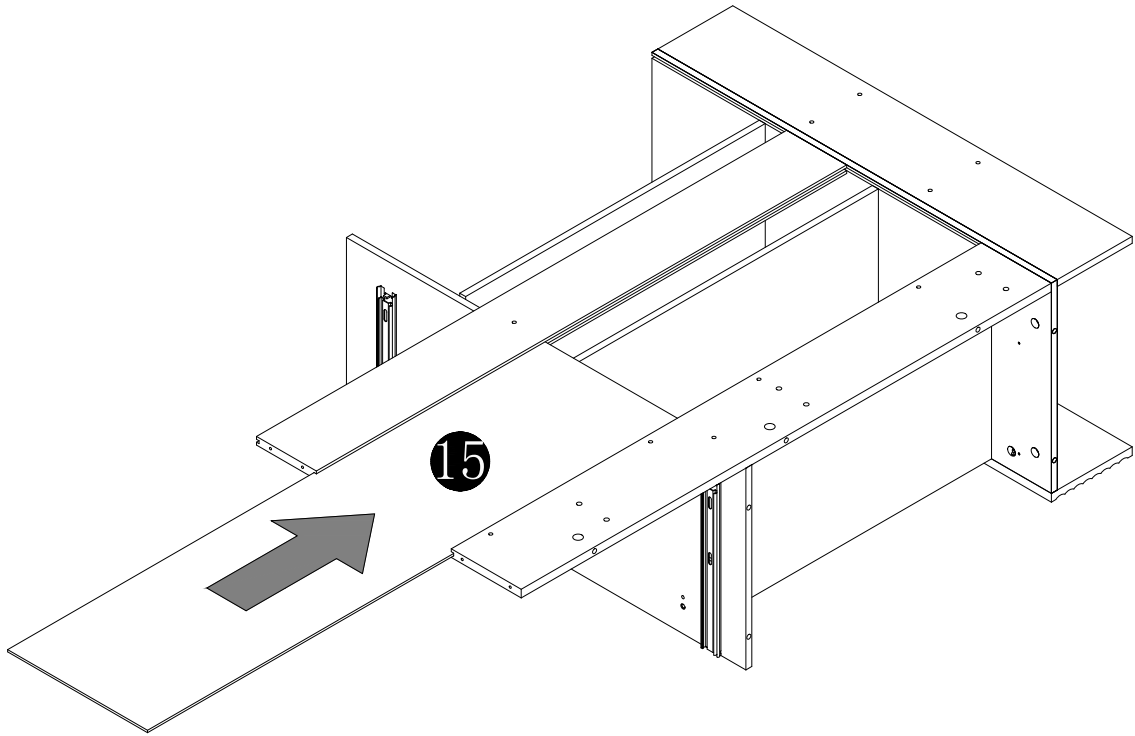 



12

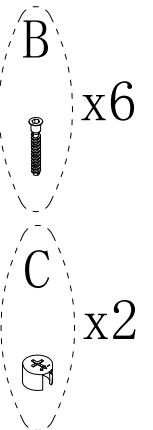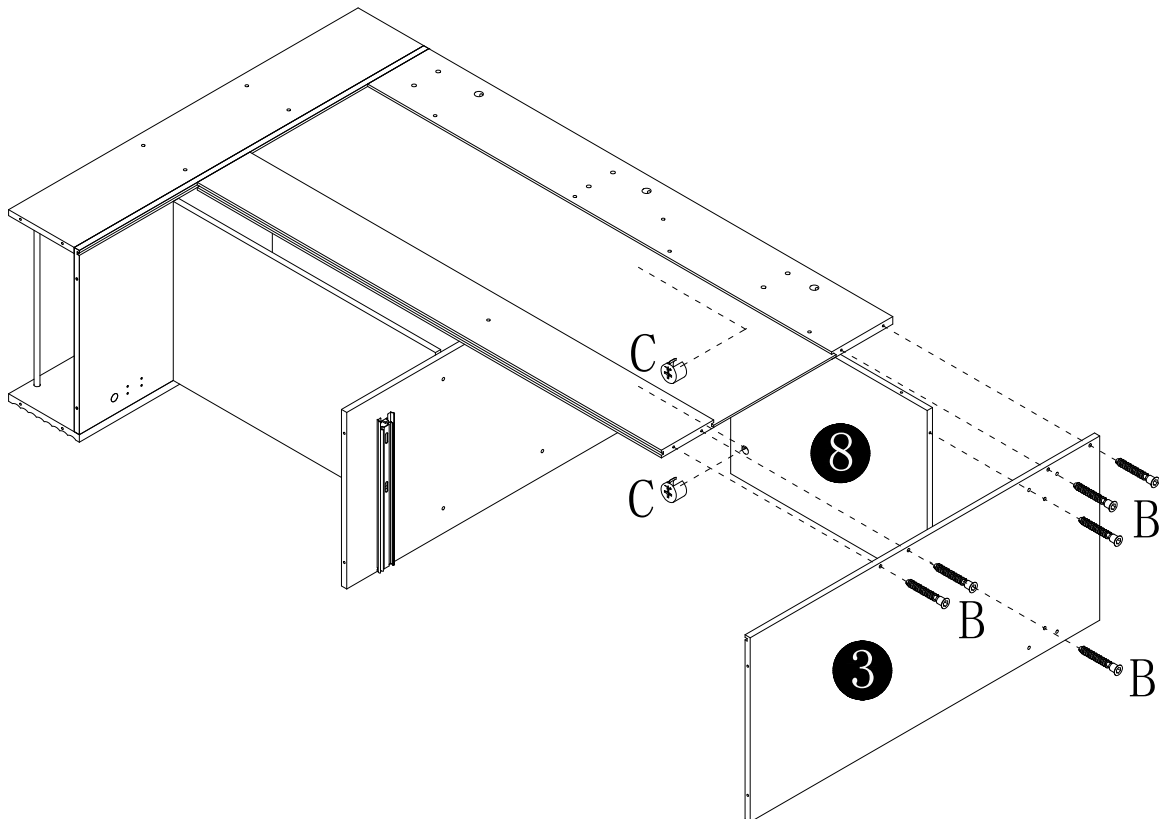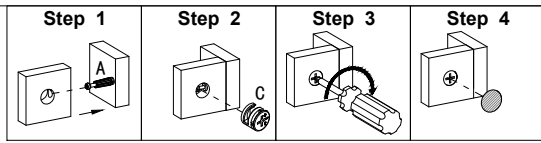   


13

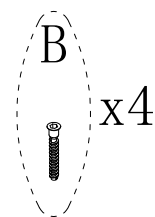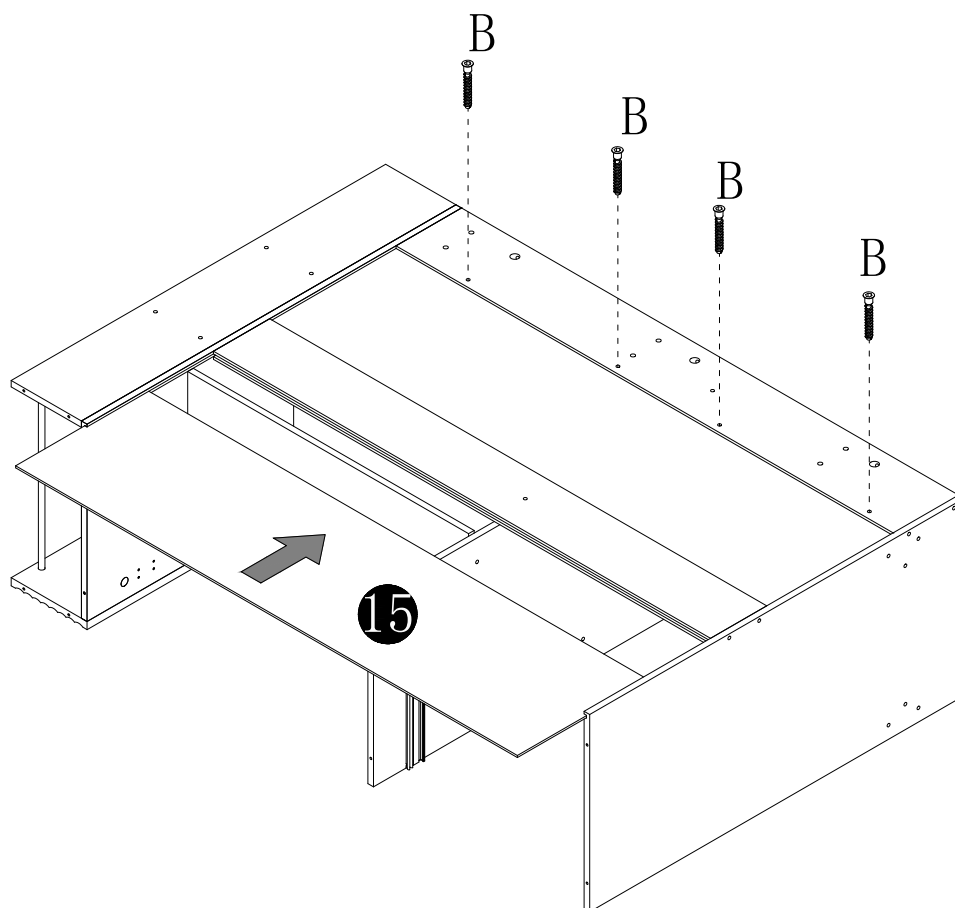  


14

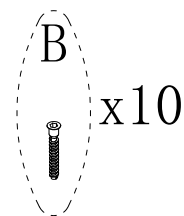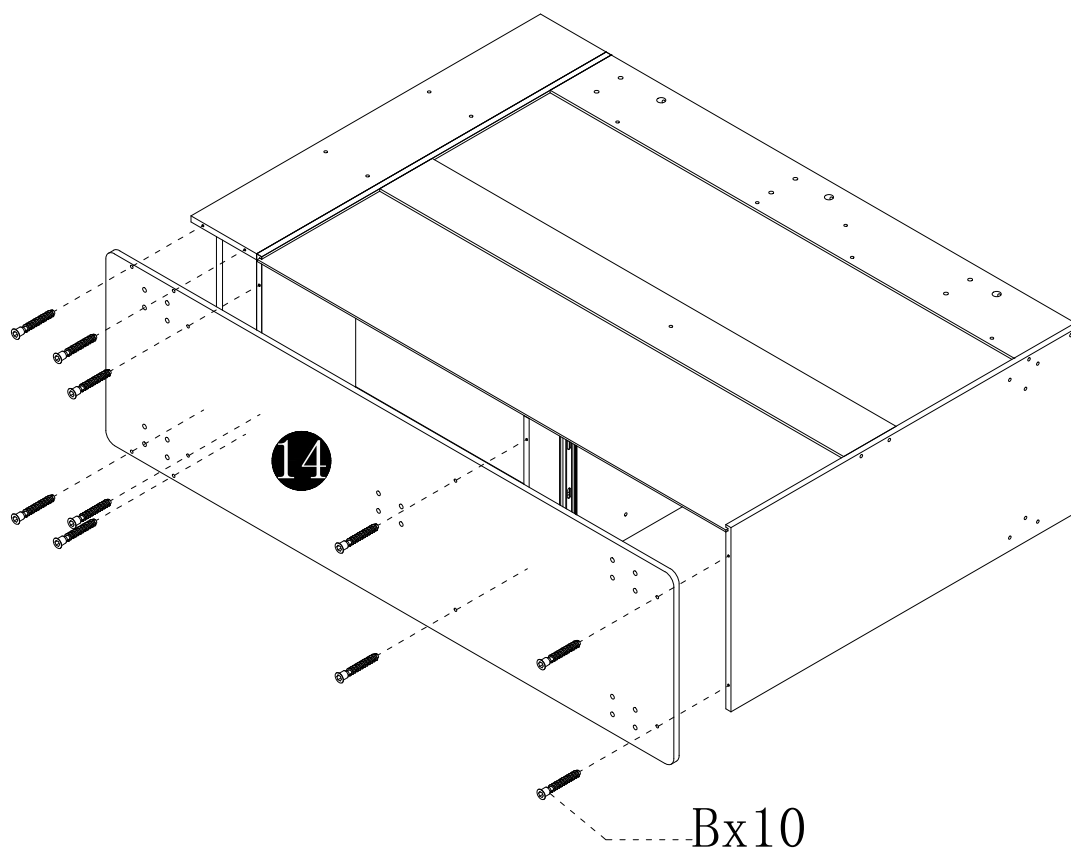  

15

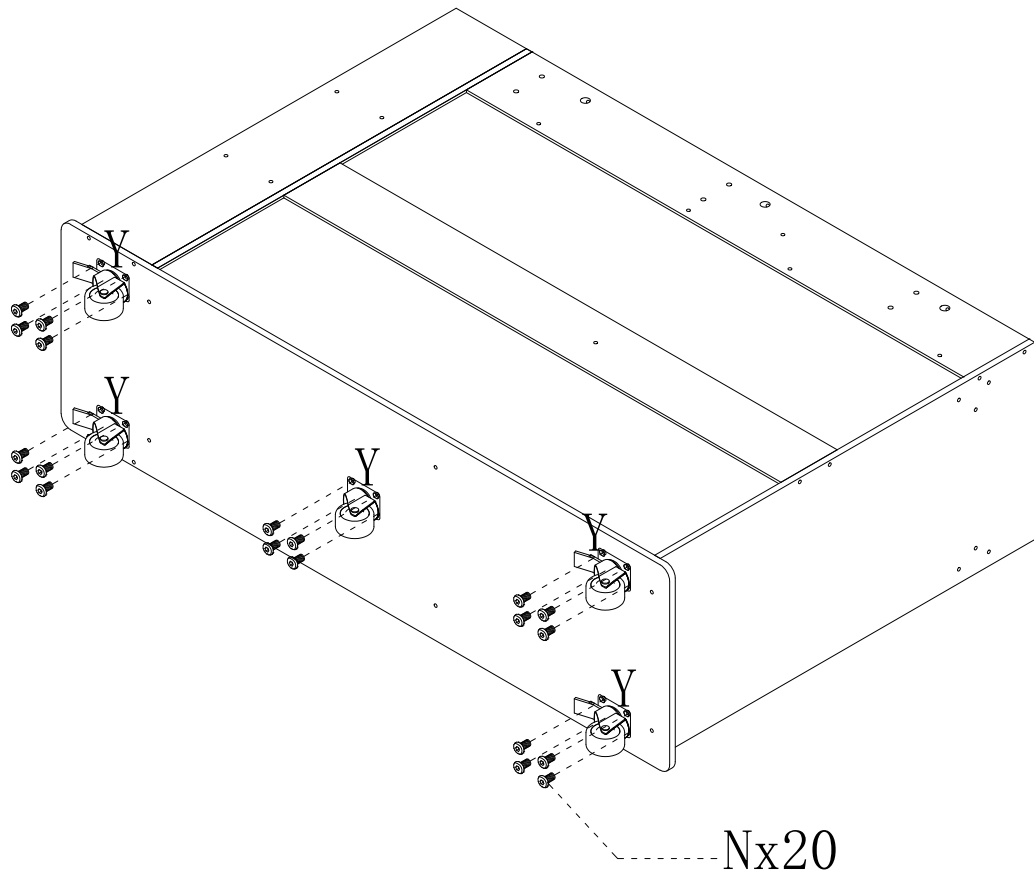 


16

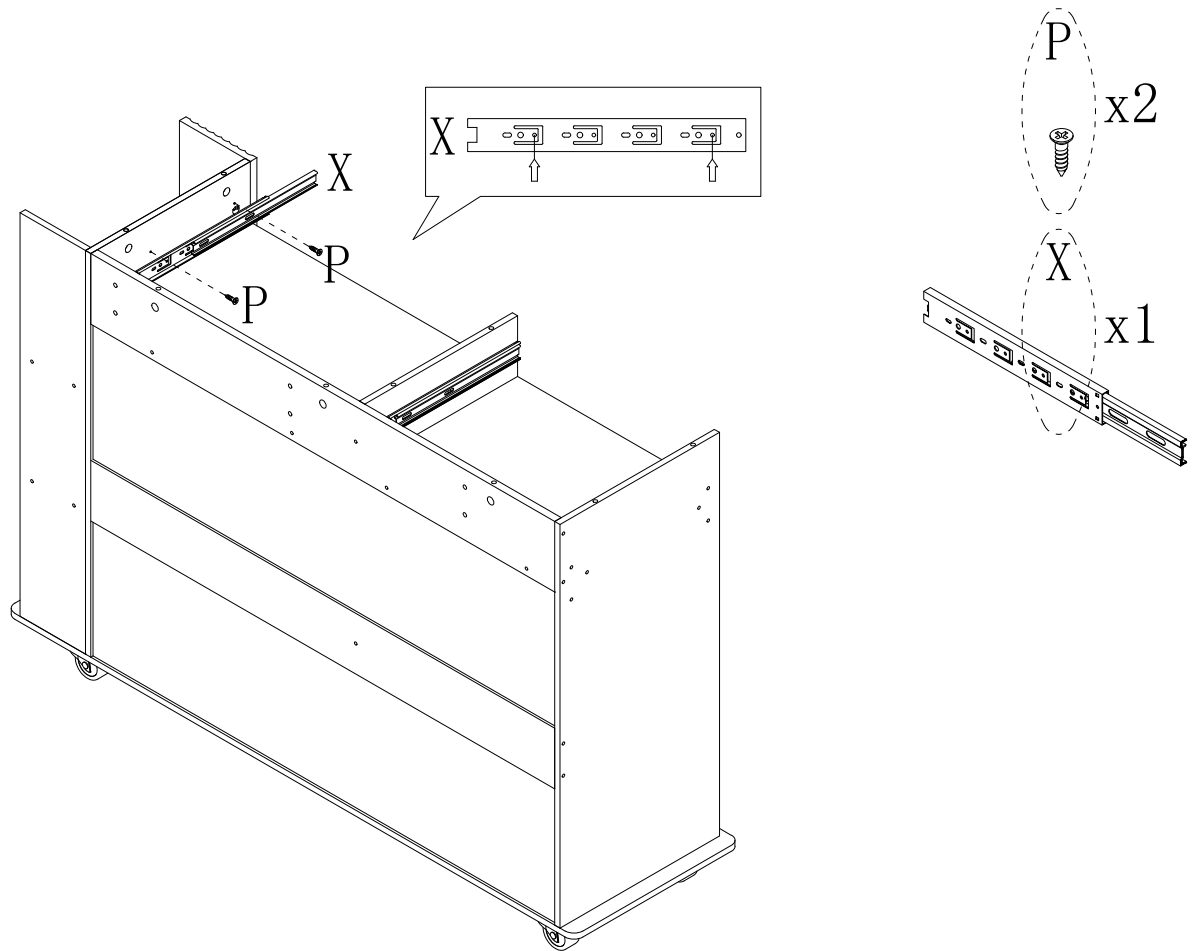 


17

 E
x2

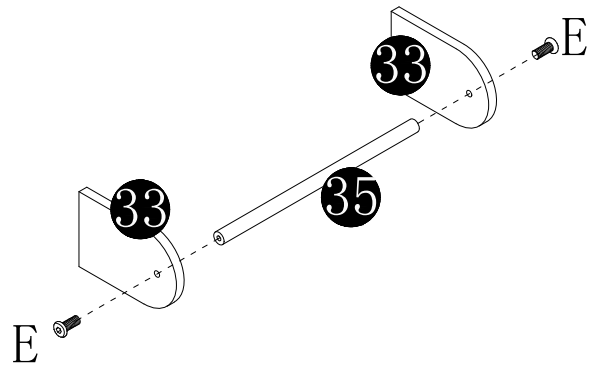


18


 
B
x4

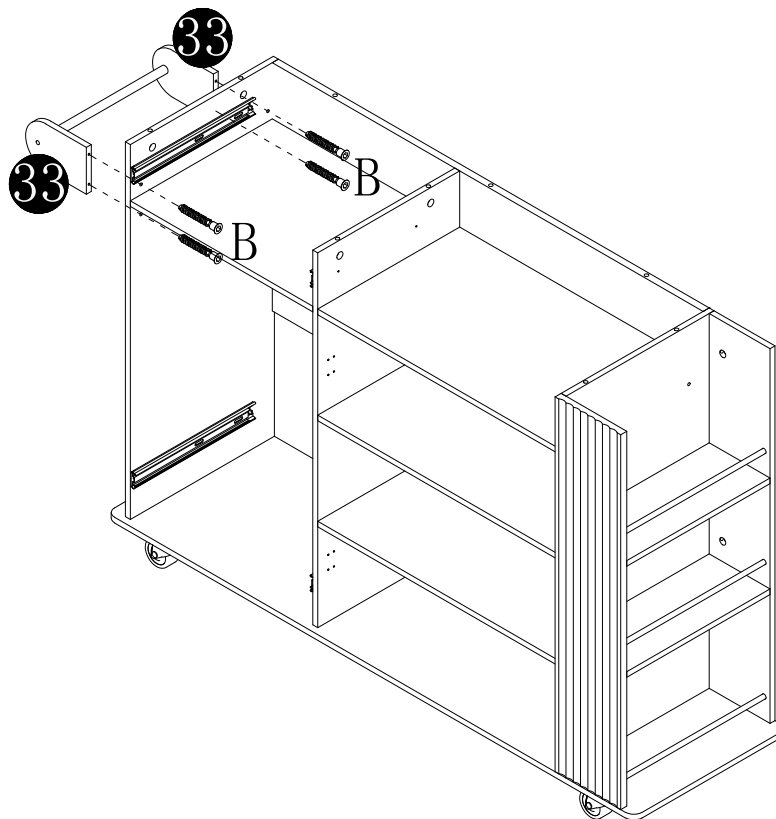



19

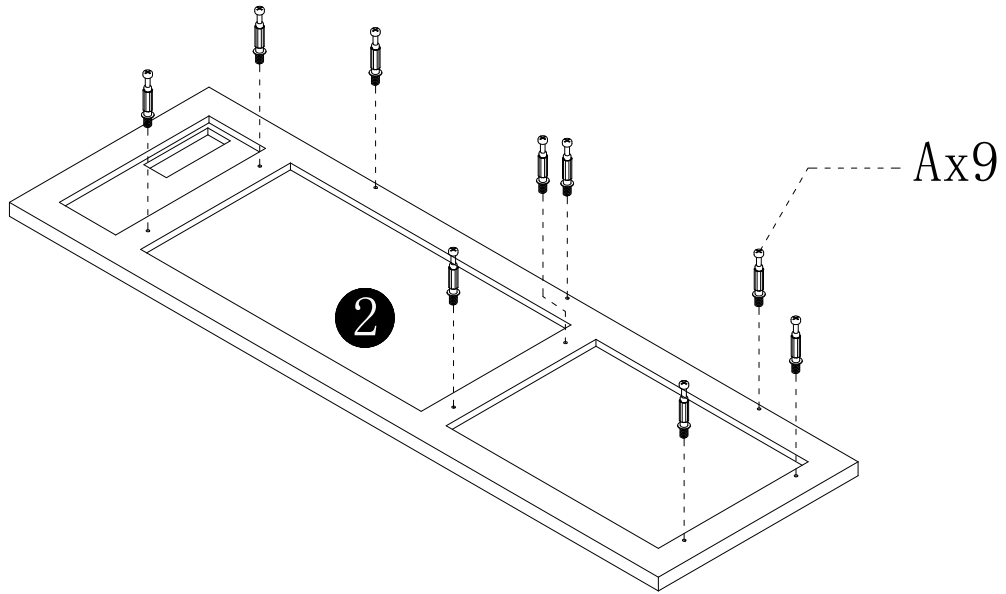 



20

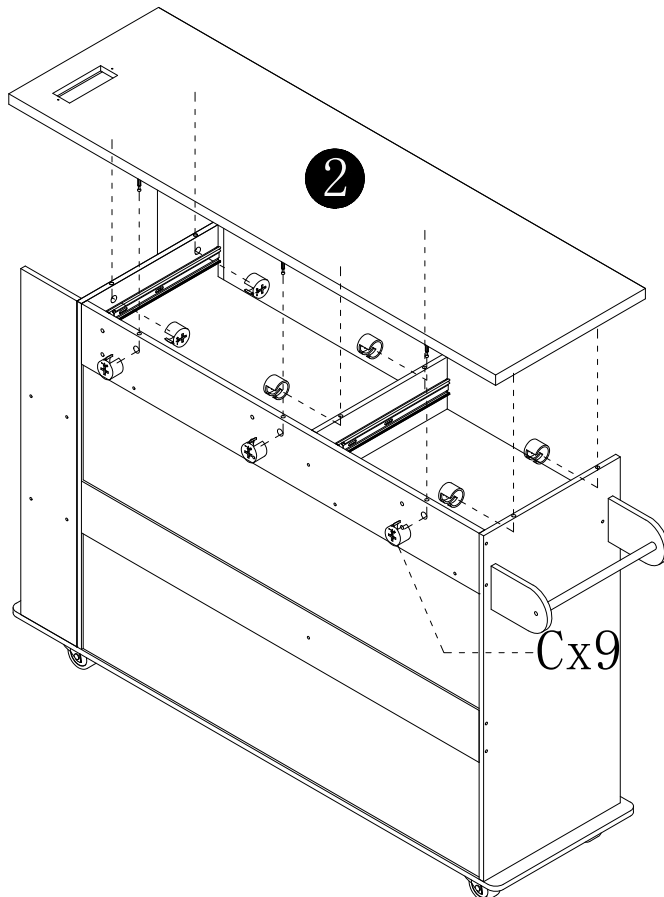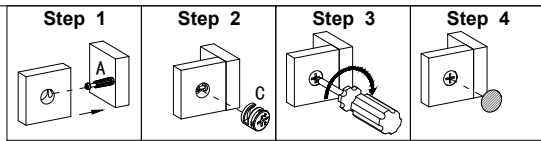  



21

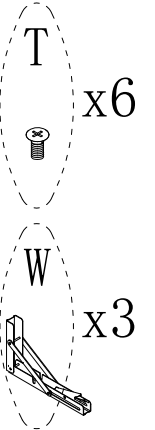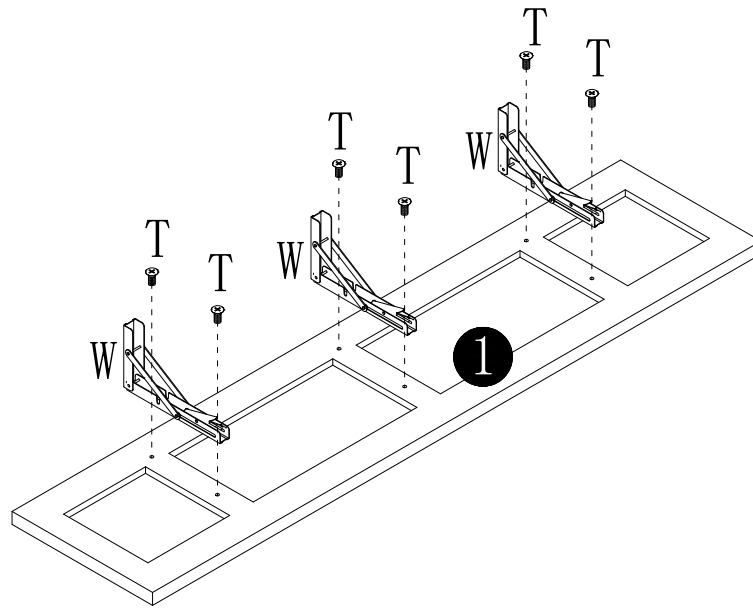  






22

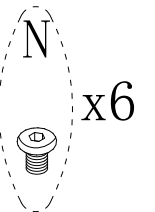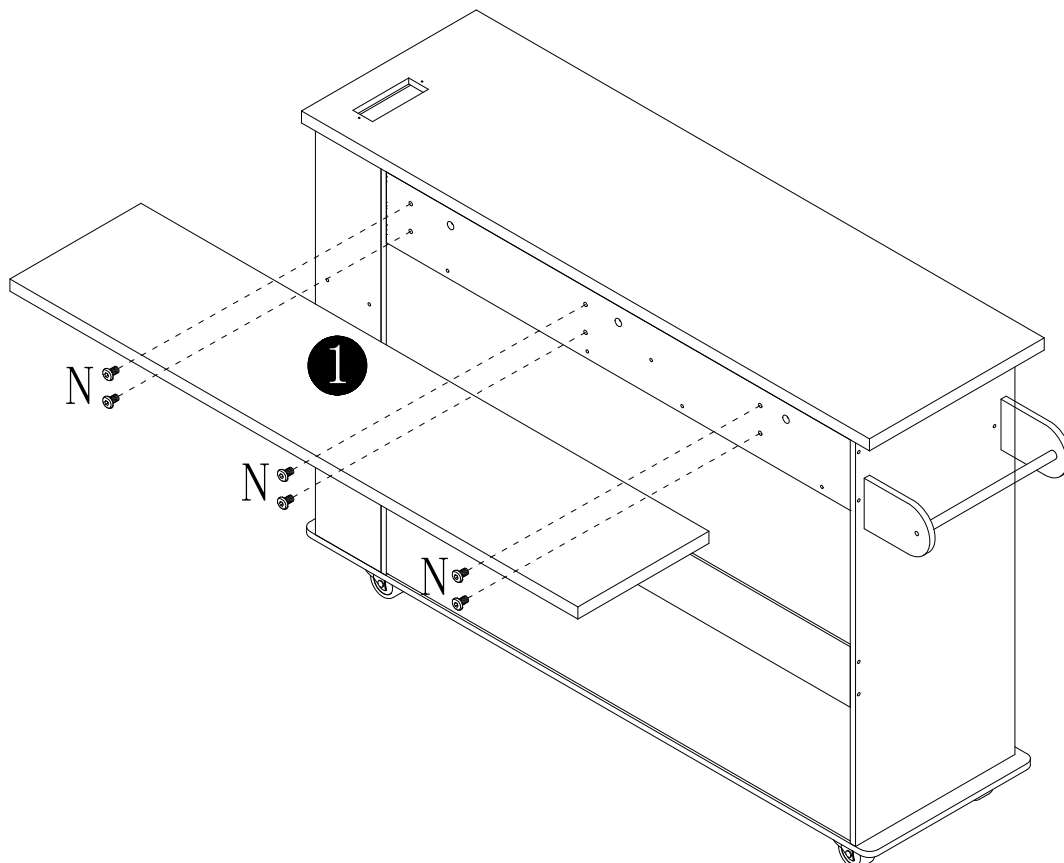  

23


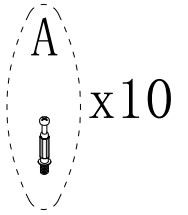 
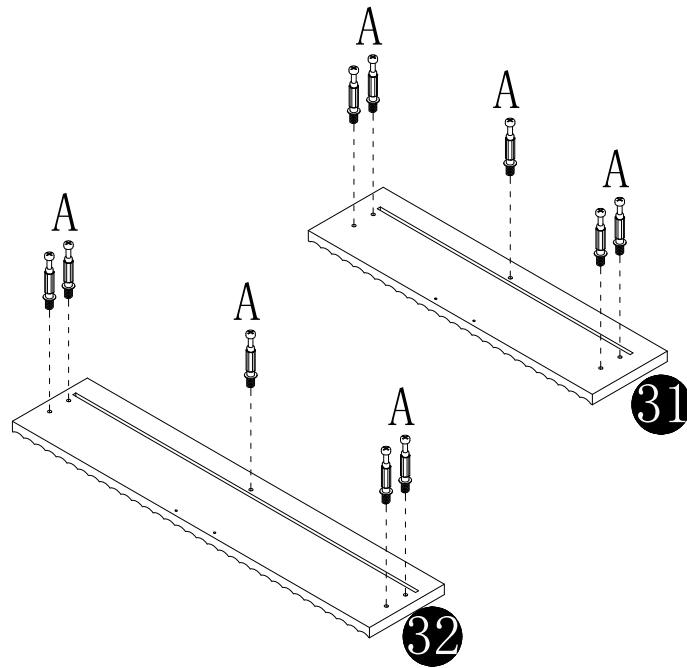 


24

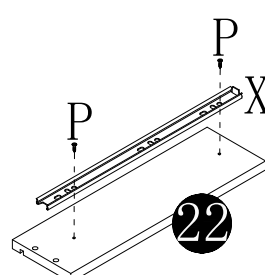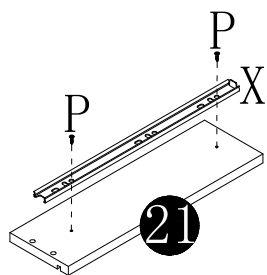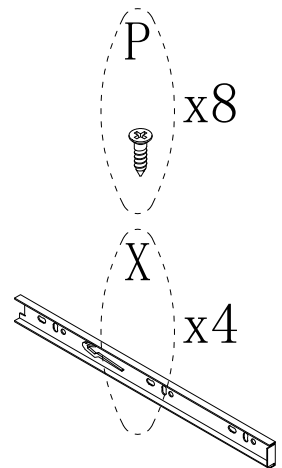   
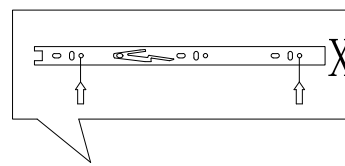 
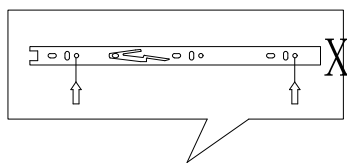 


x2

  
 
25

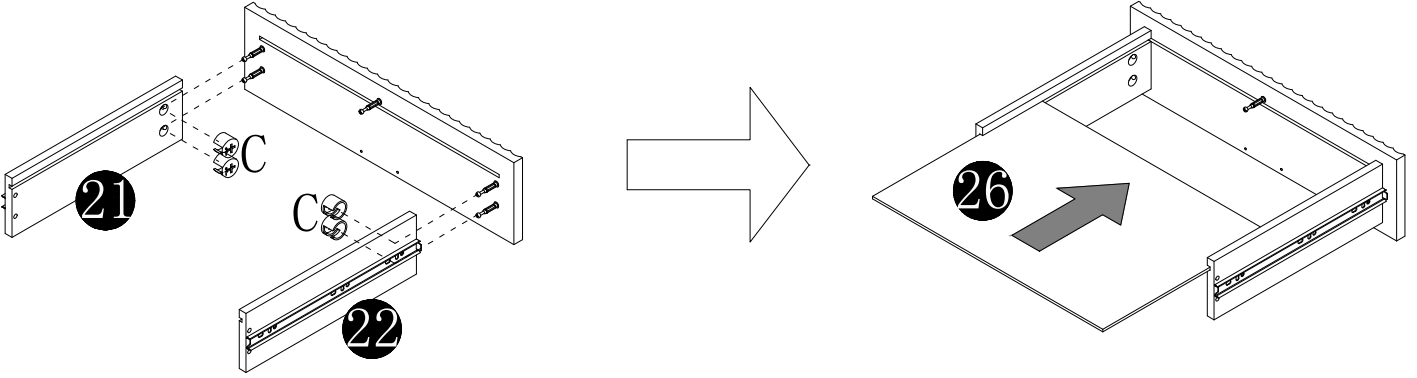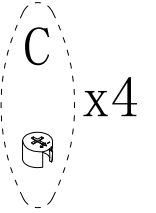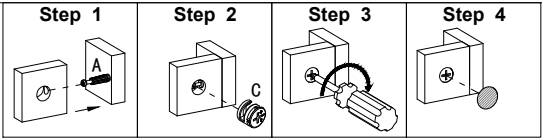




26

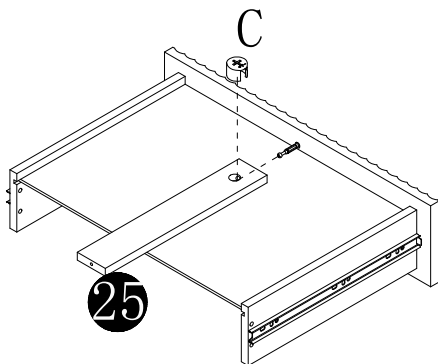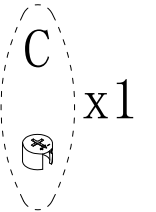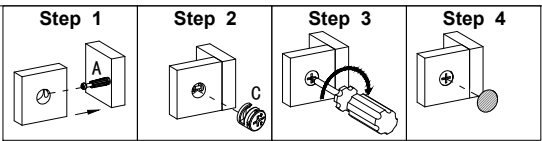   




27

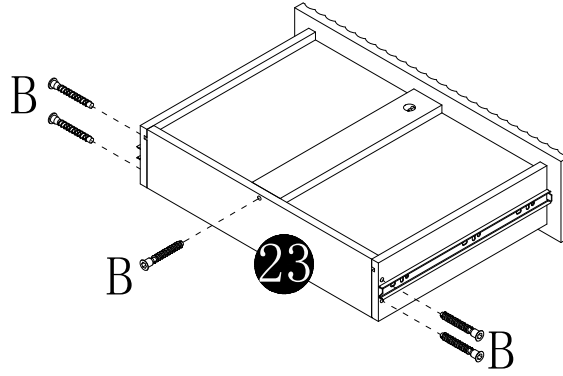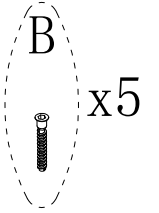  



28

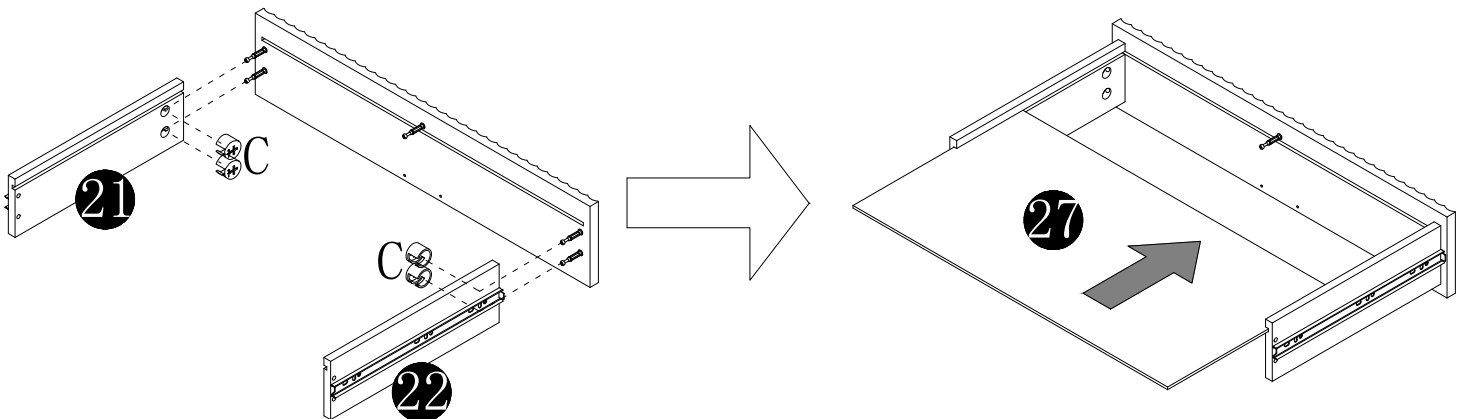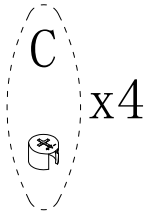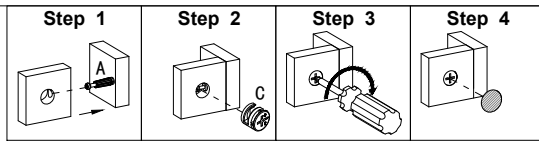   


29

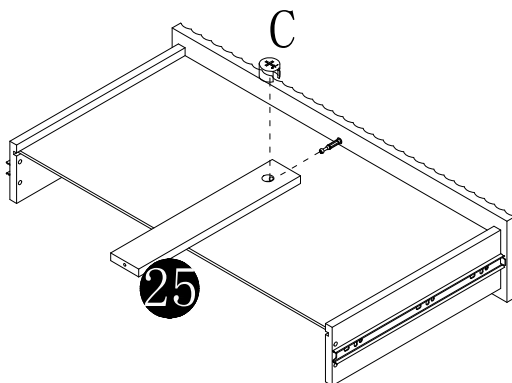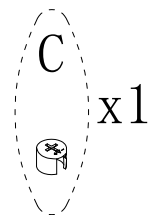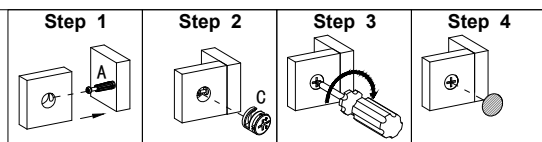   


30

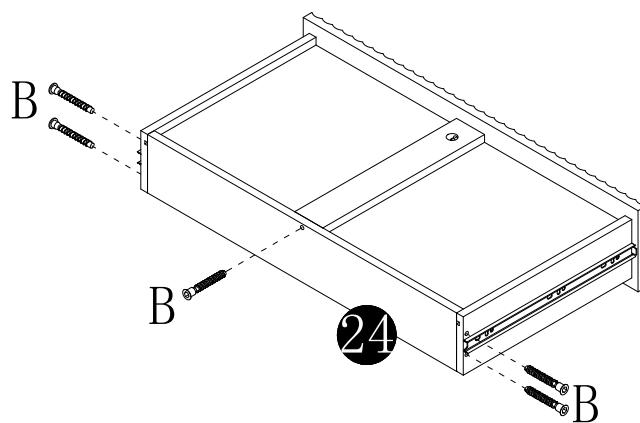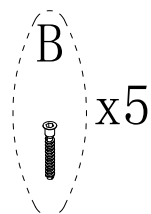  


31

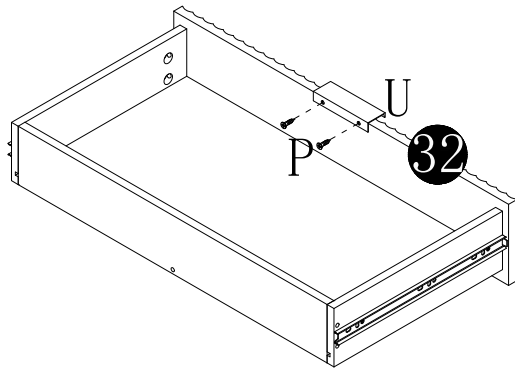 


32

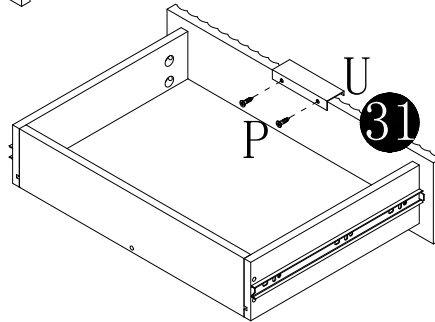 


31

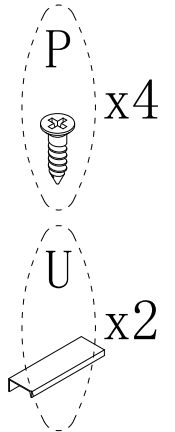 


32

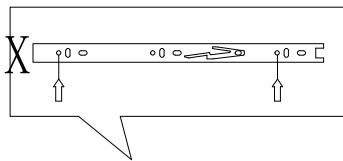 



20

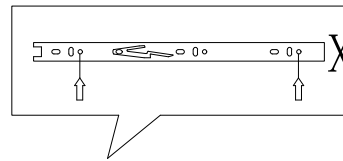 






19

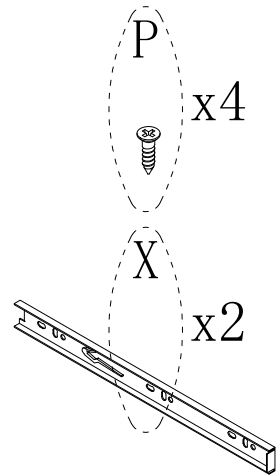 




33

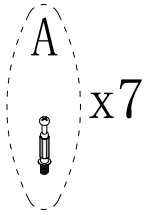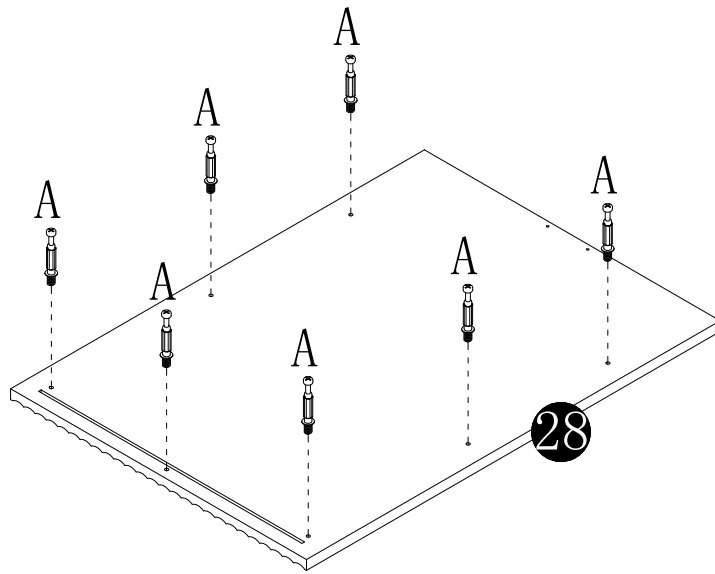  



34

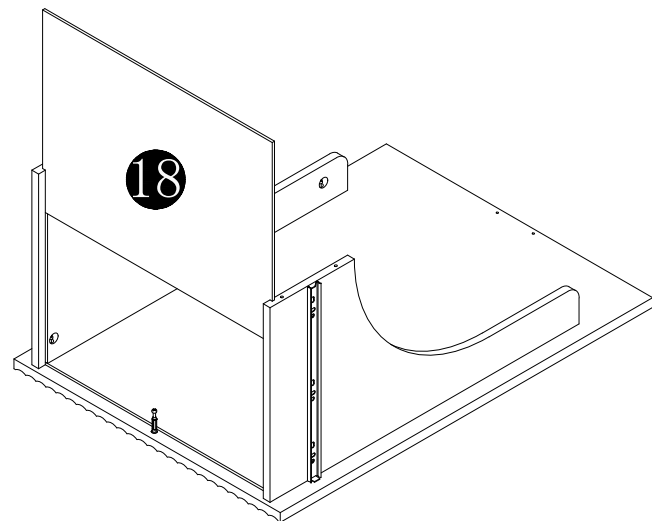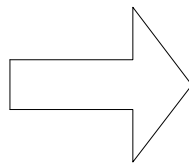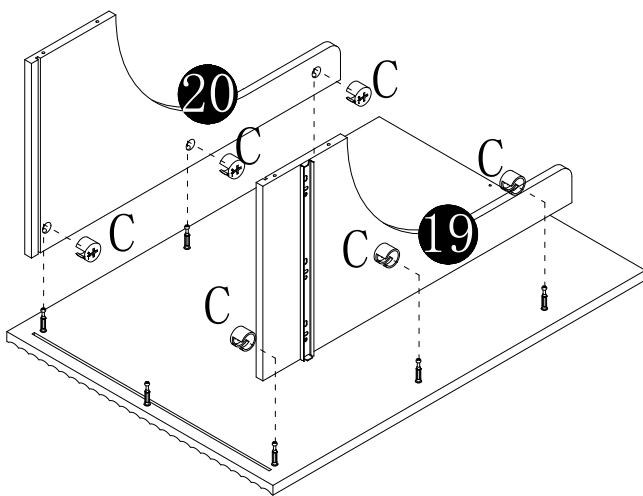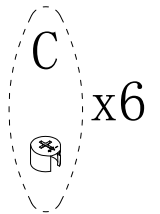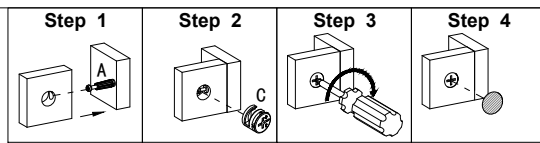     



35

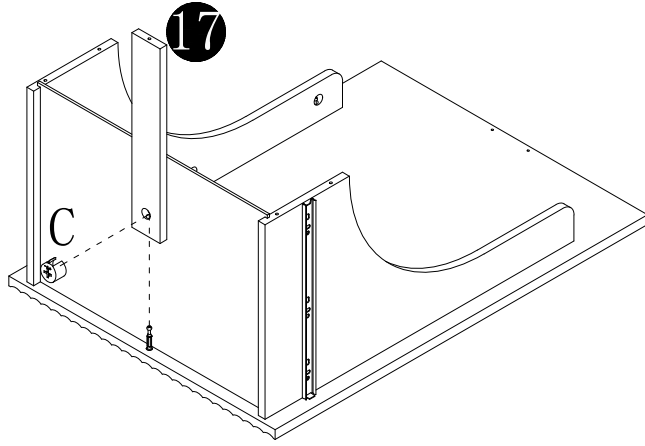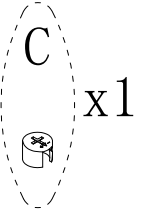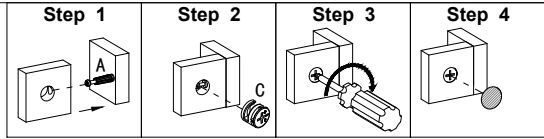   


36

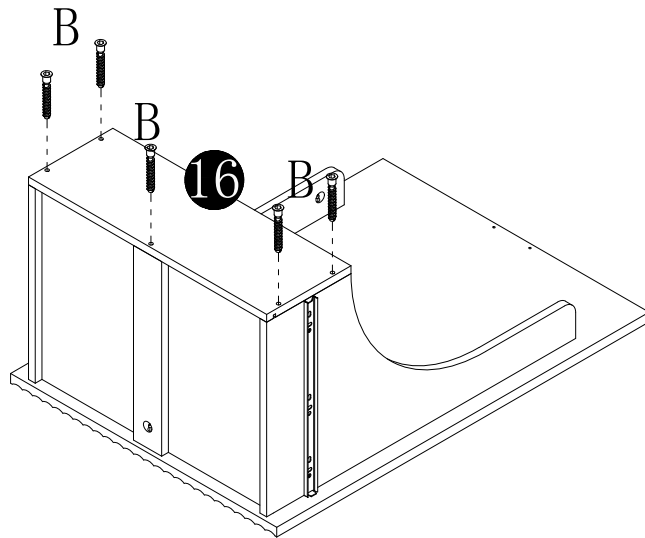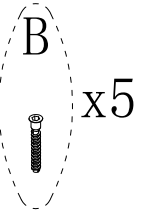  


37

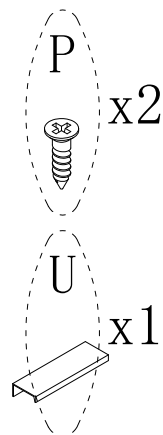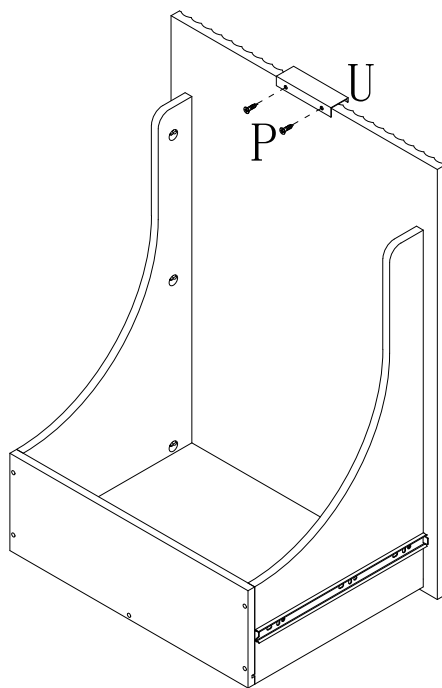  


38

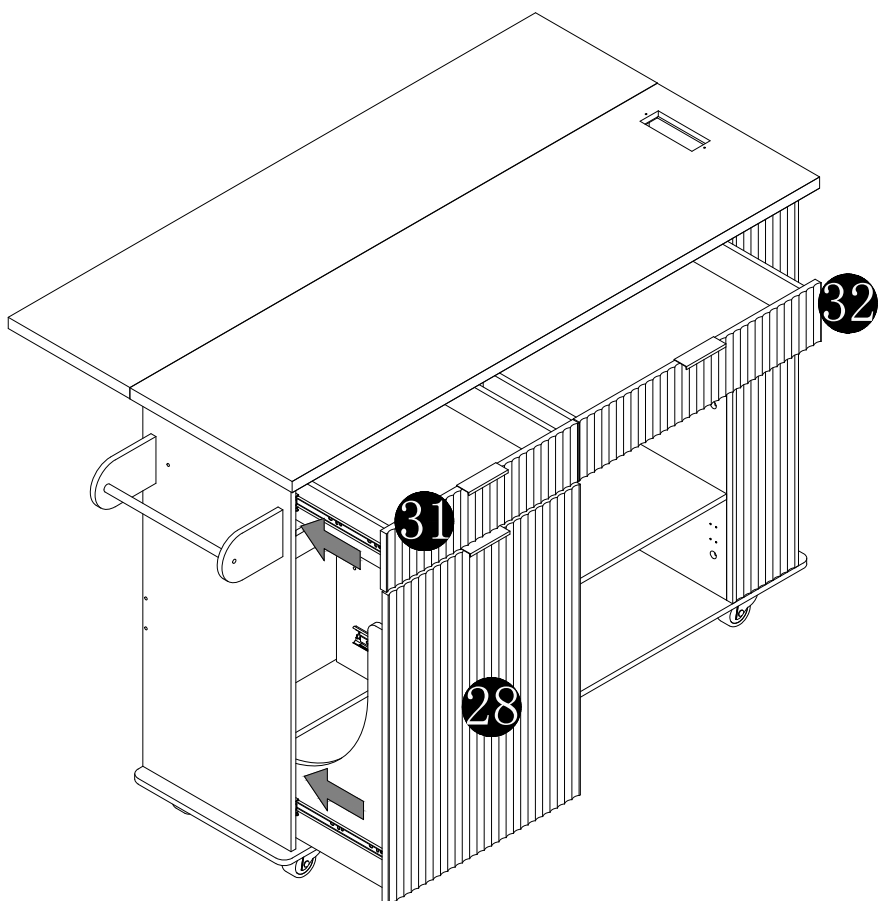 



39

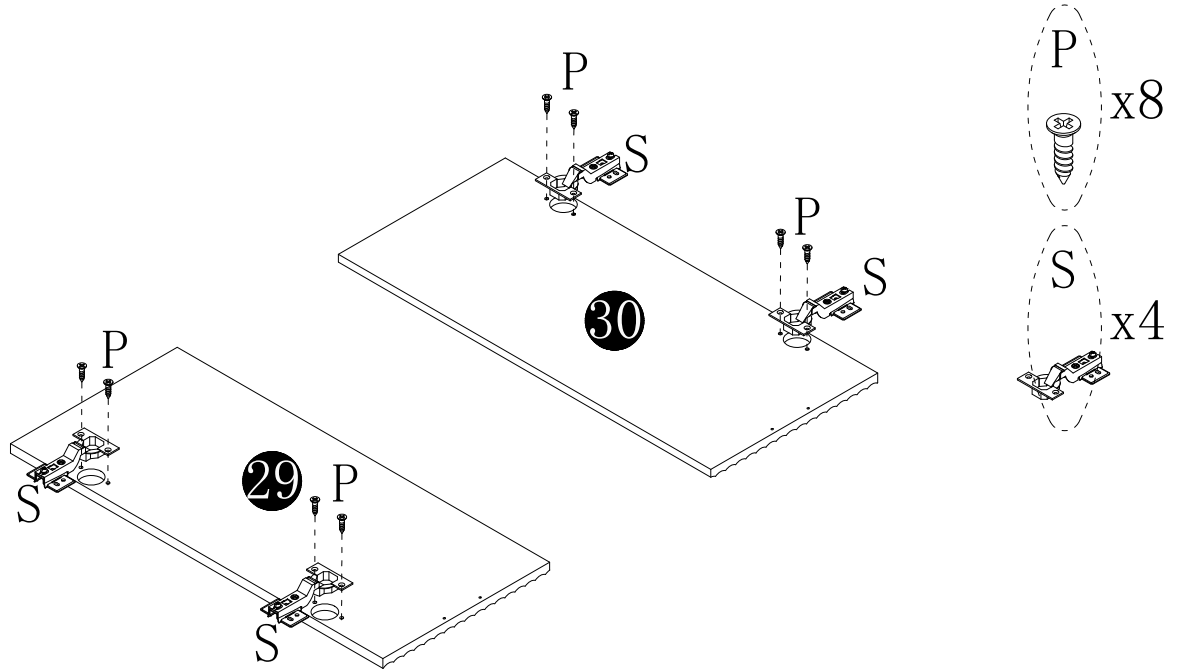 



40

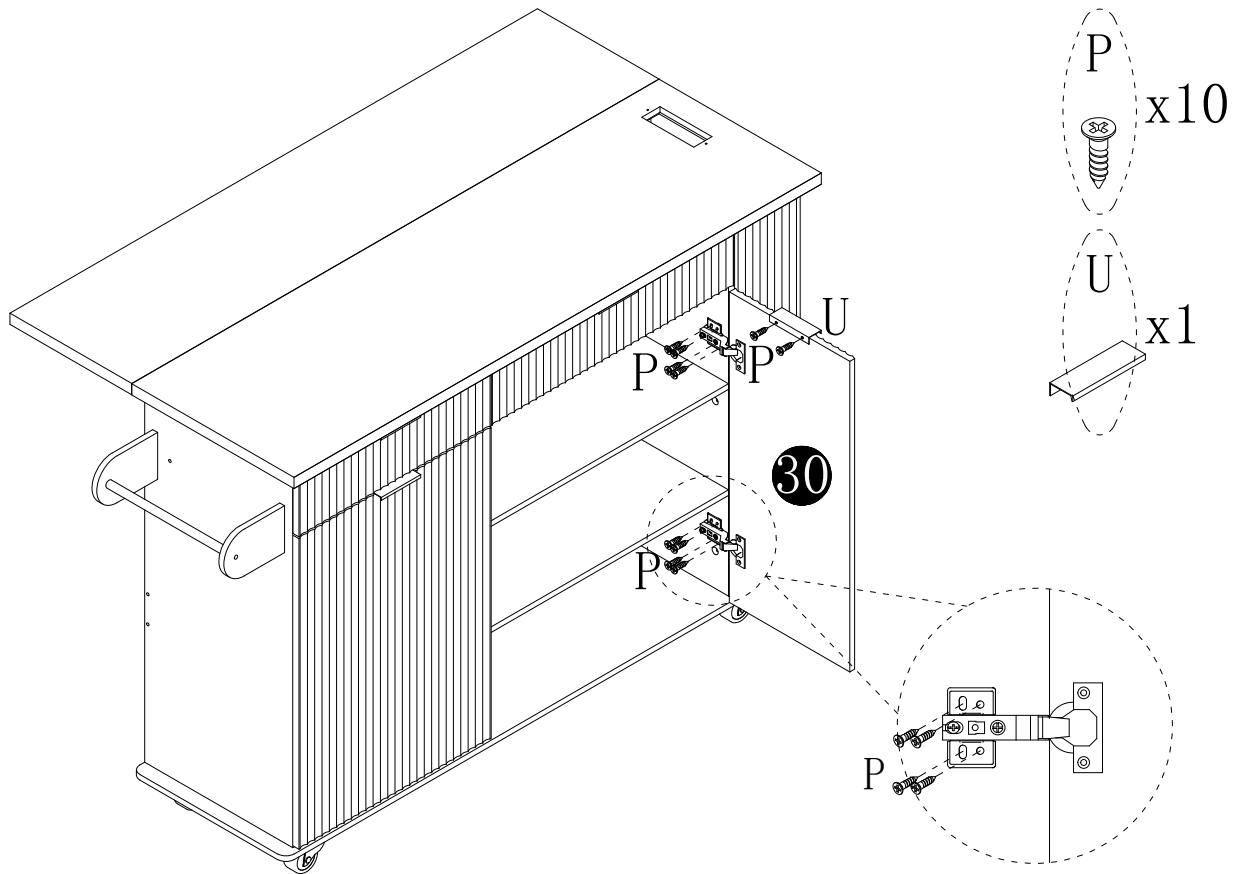 




41

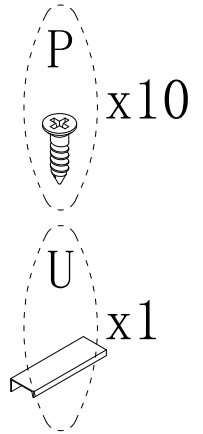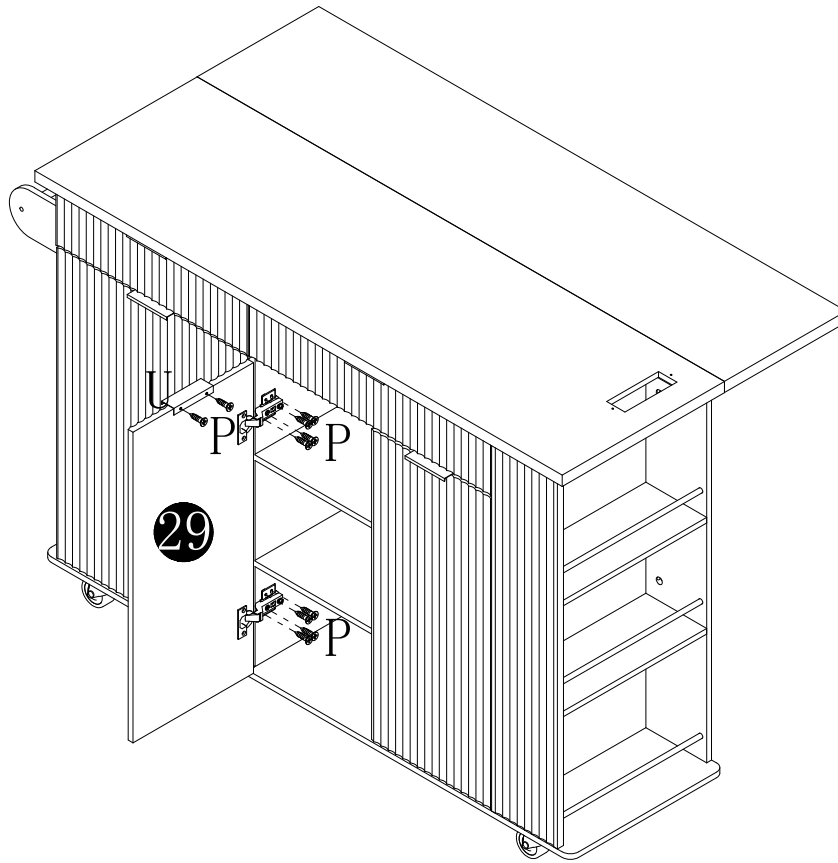  

42

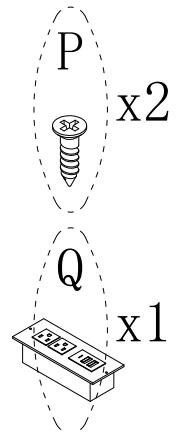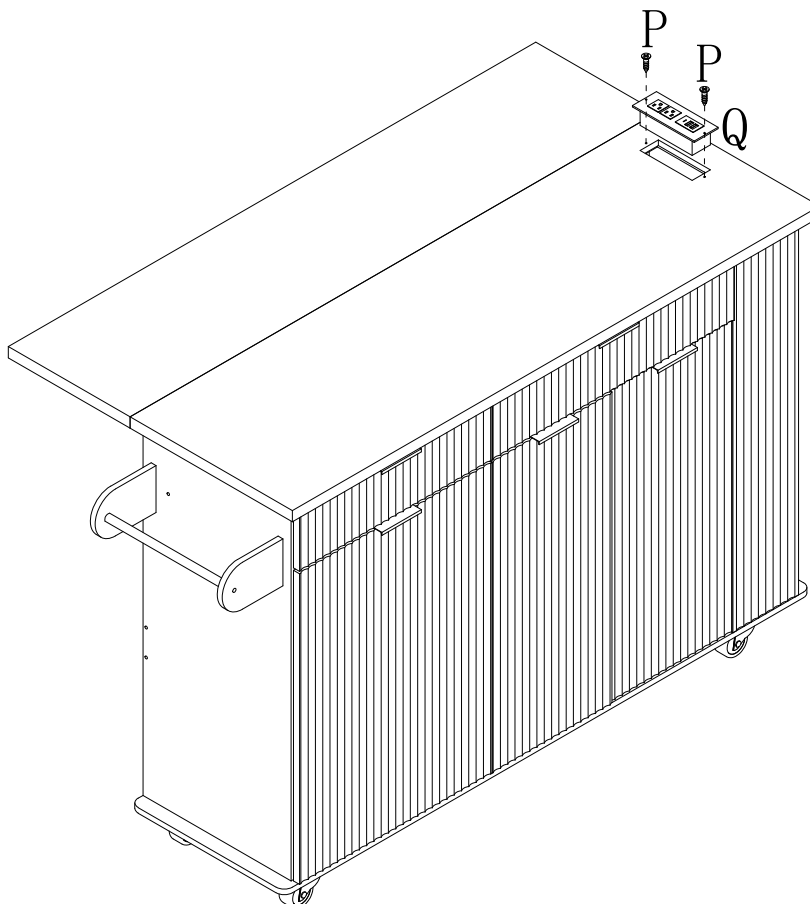  


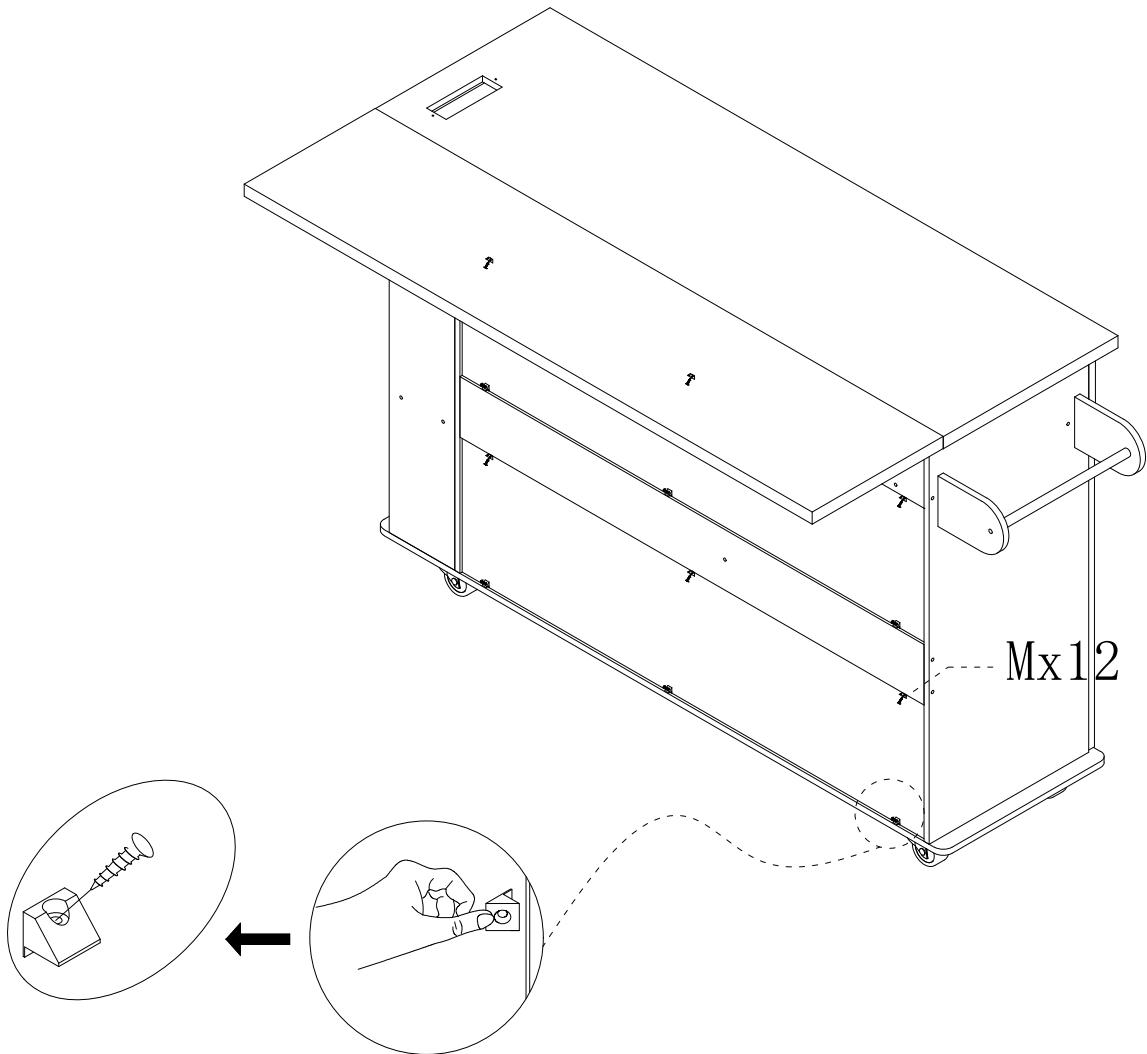 

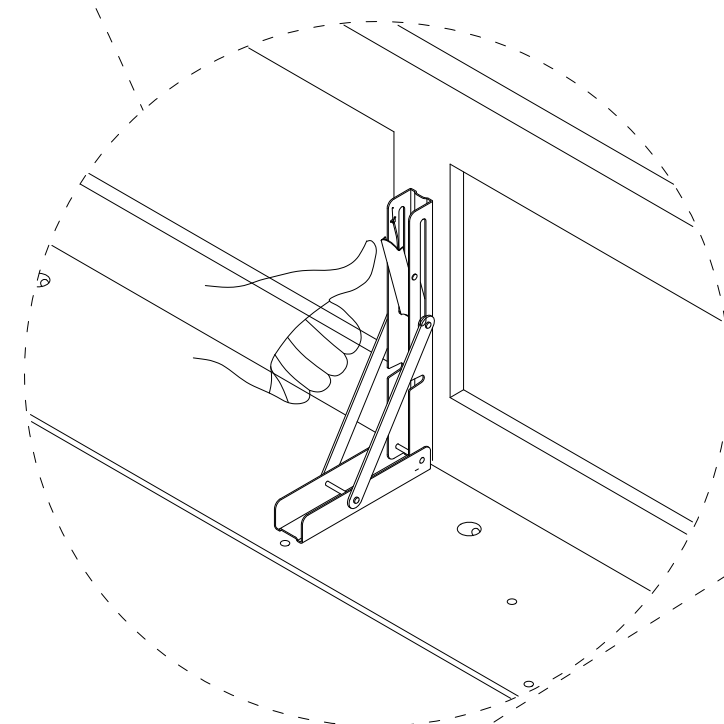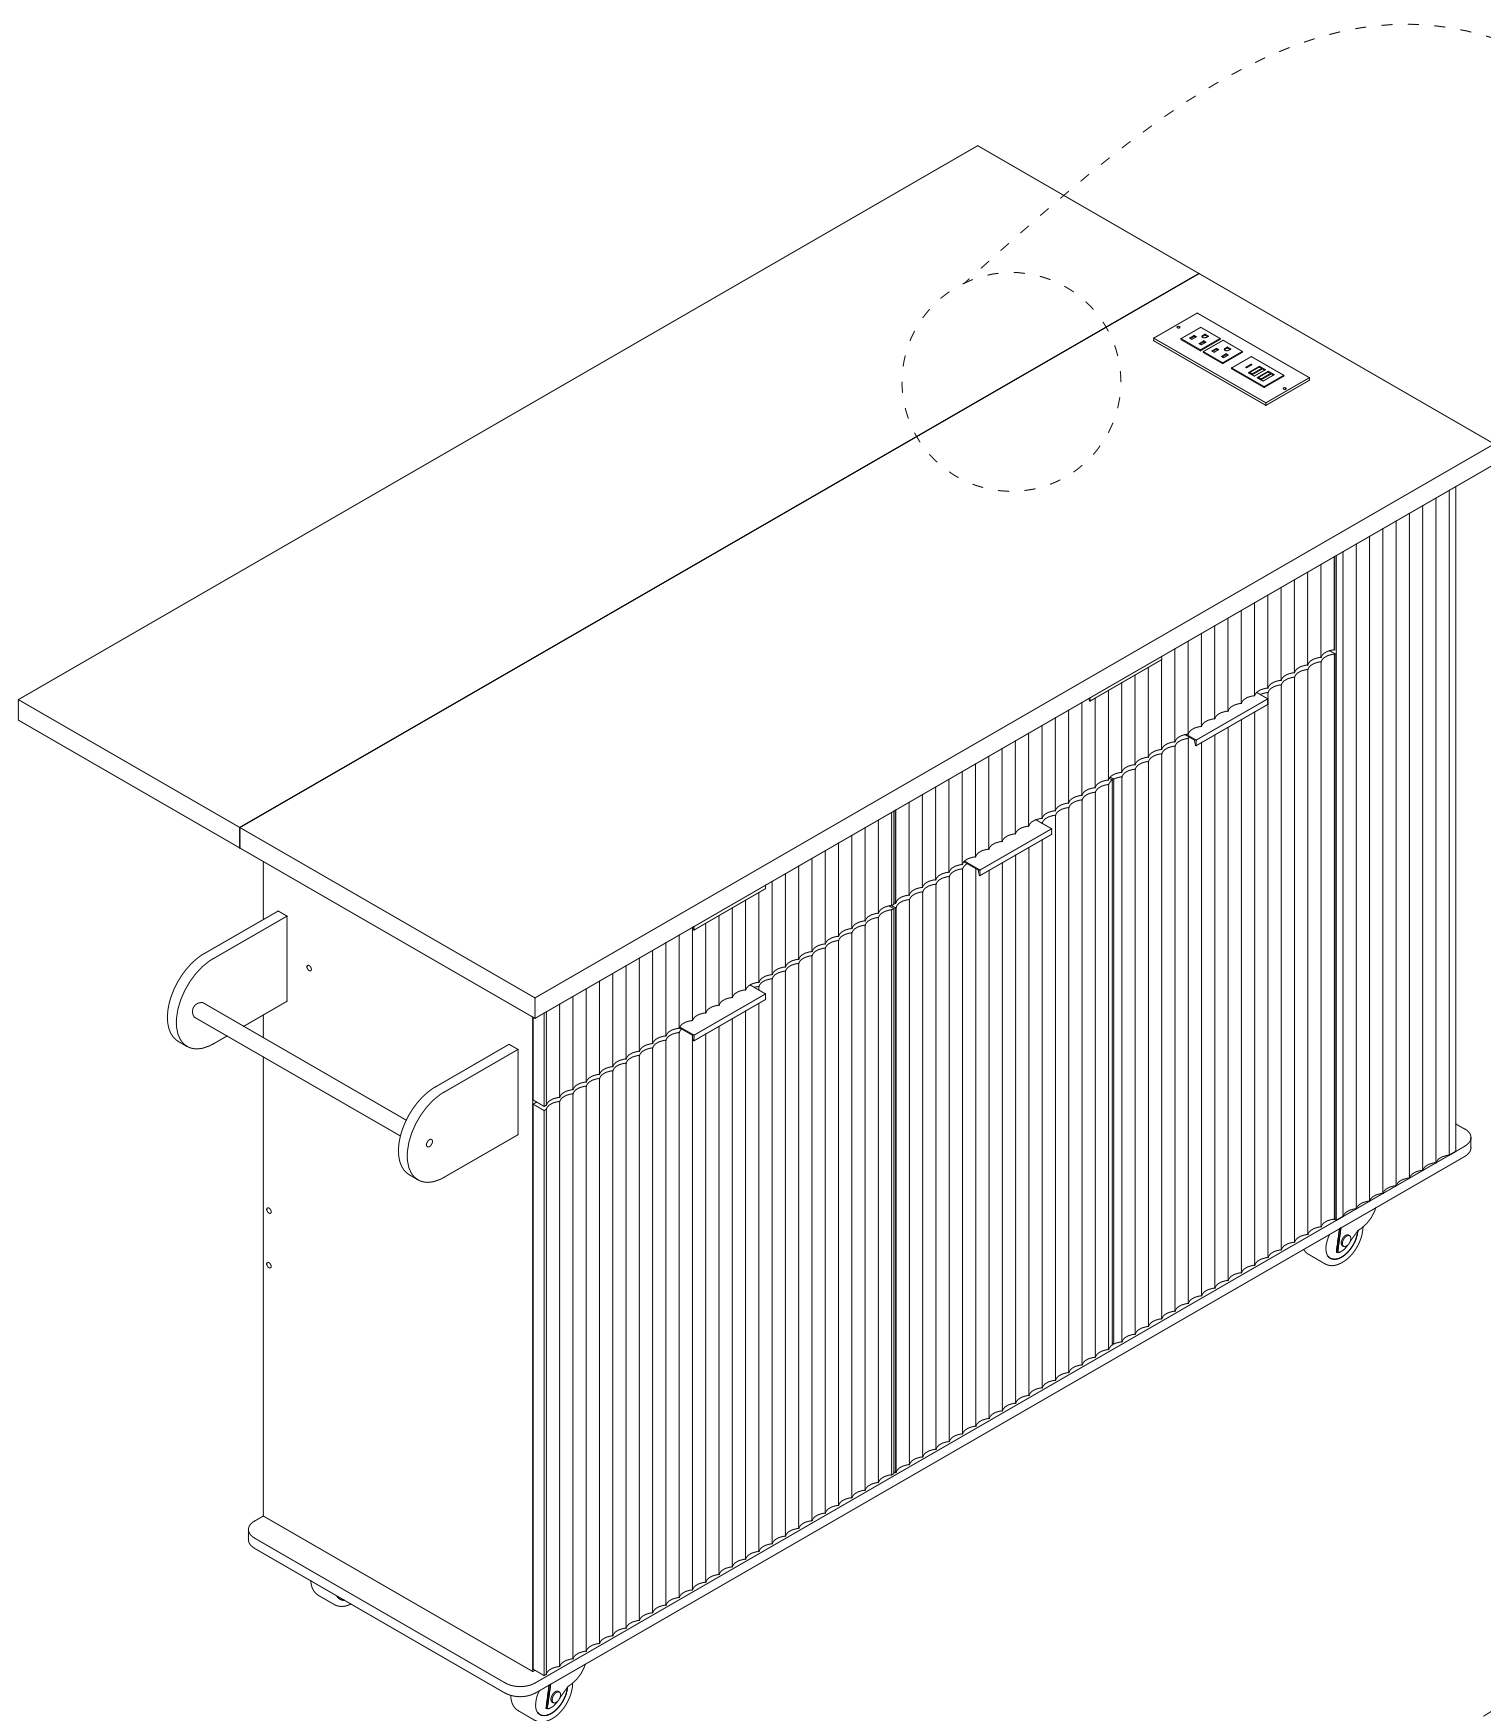  



When folding the rear board, the proportion bracket switch needs to be pressed down.

 OR

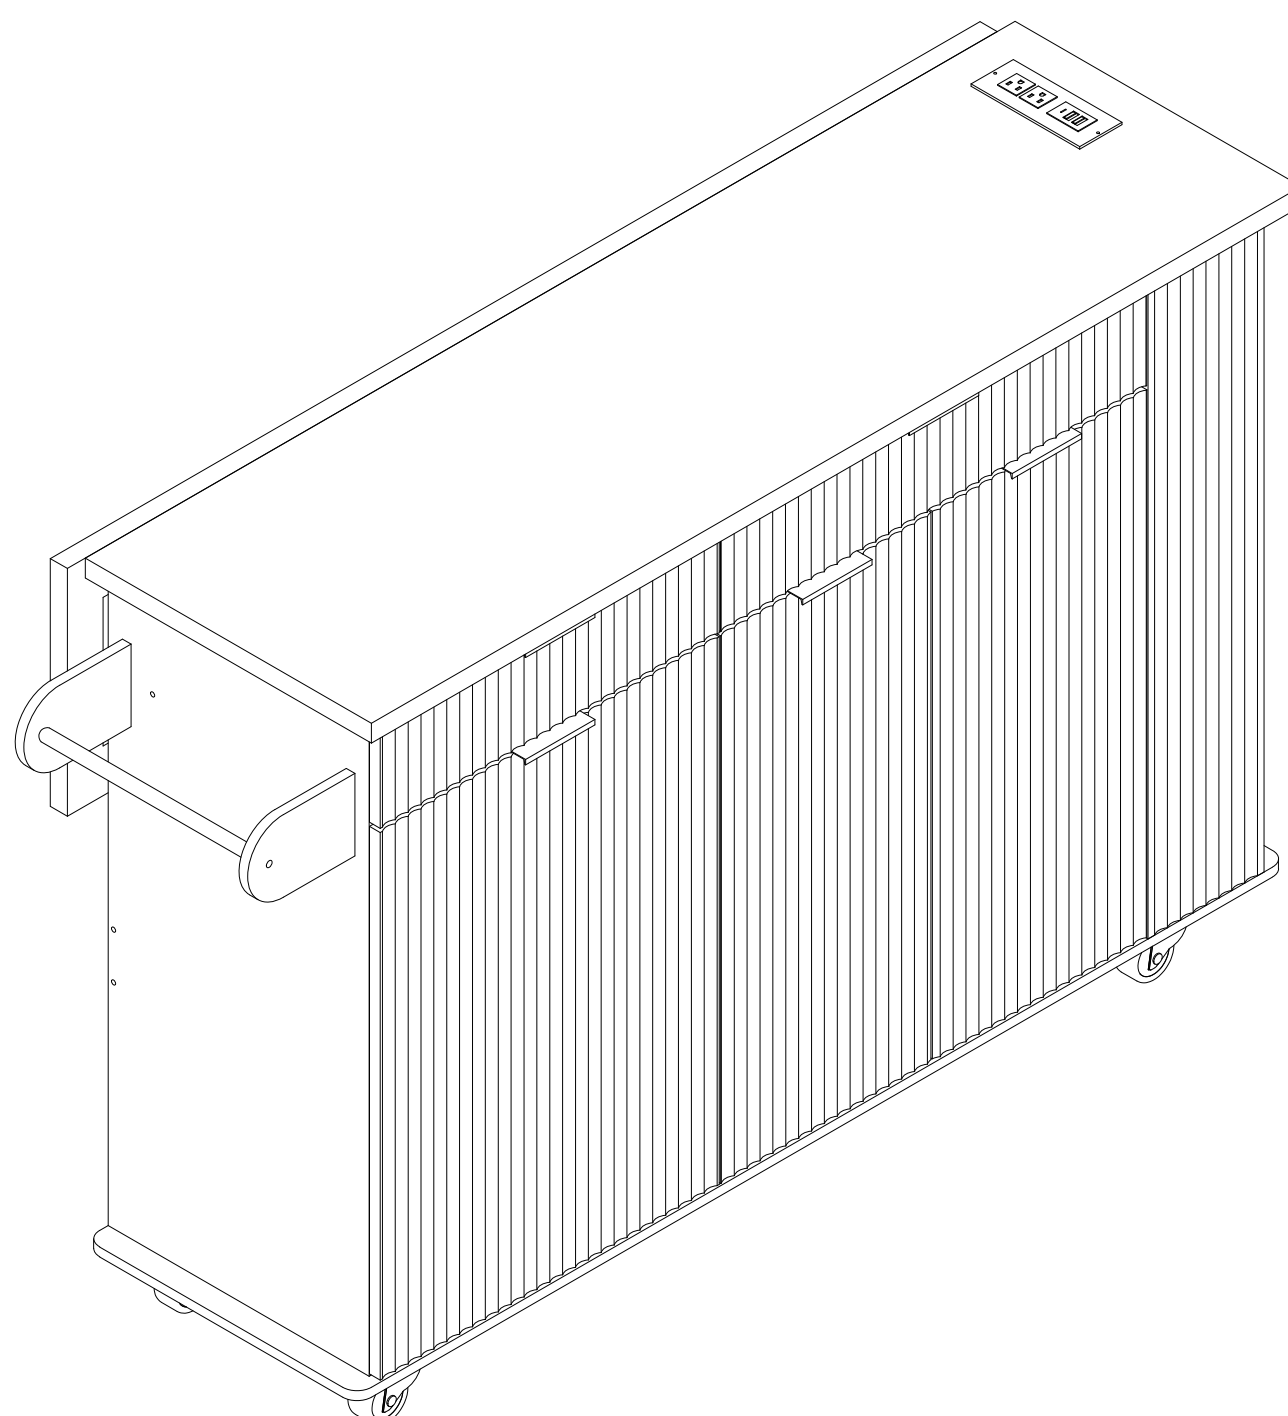



Door hinge adjustment method

  Method 1:

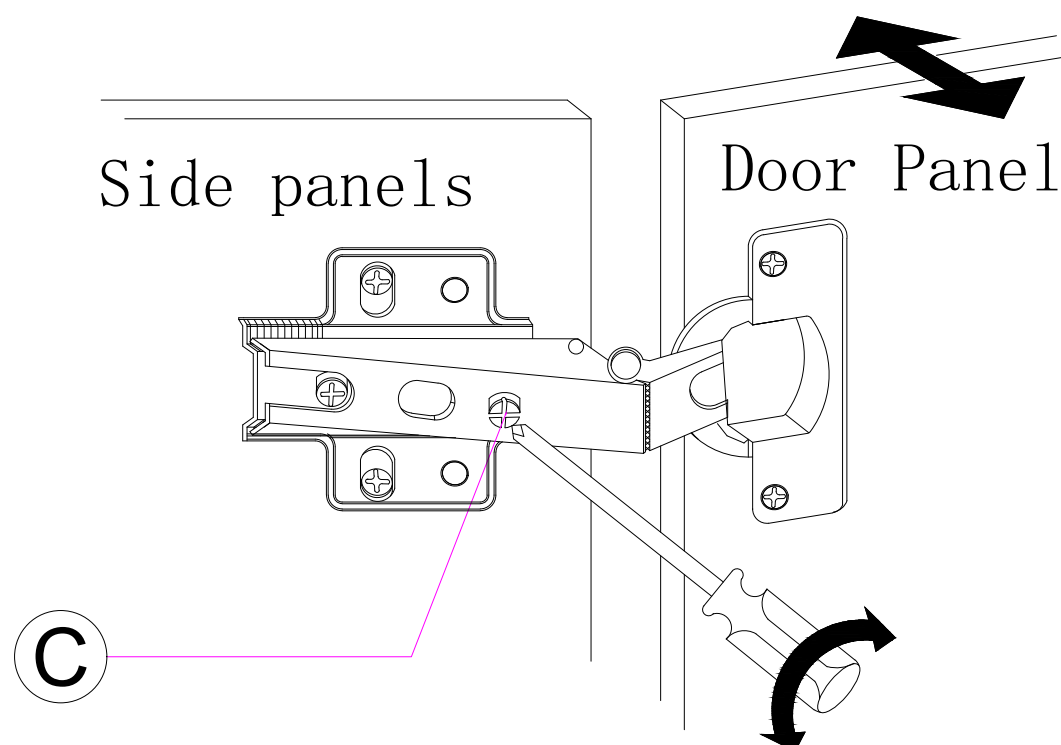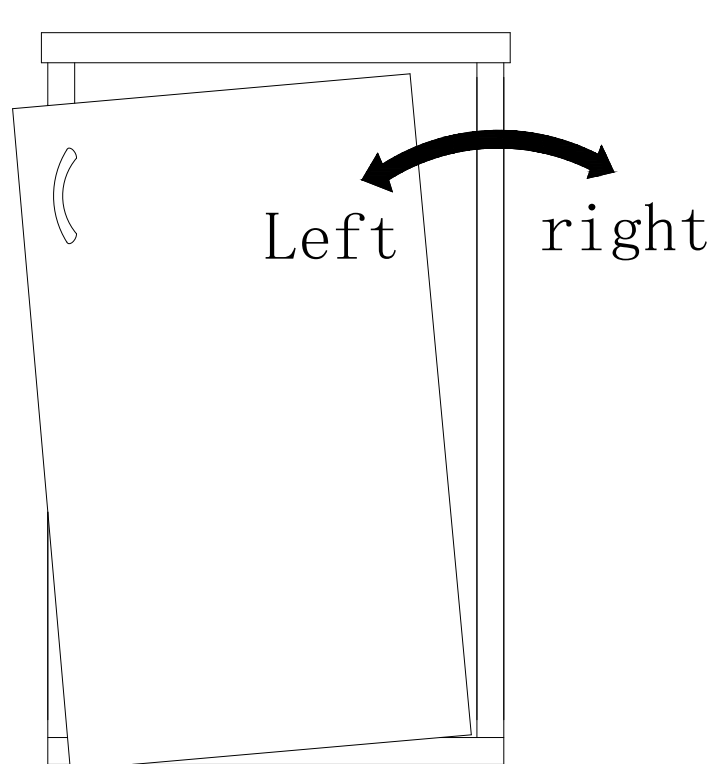



Move the door left or right:
1. Rotate the C screw with a screwdriver clockwise to move the door panel to the left
2. Rotate the C screw counterclockwise with a screwdriver to adjust the door panel to move to the right

  Method 2:

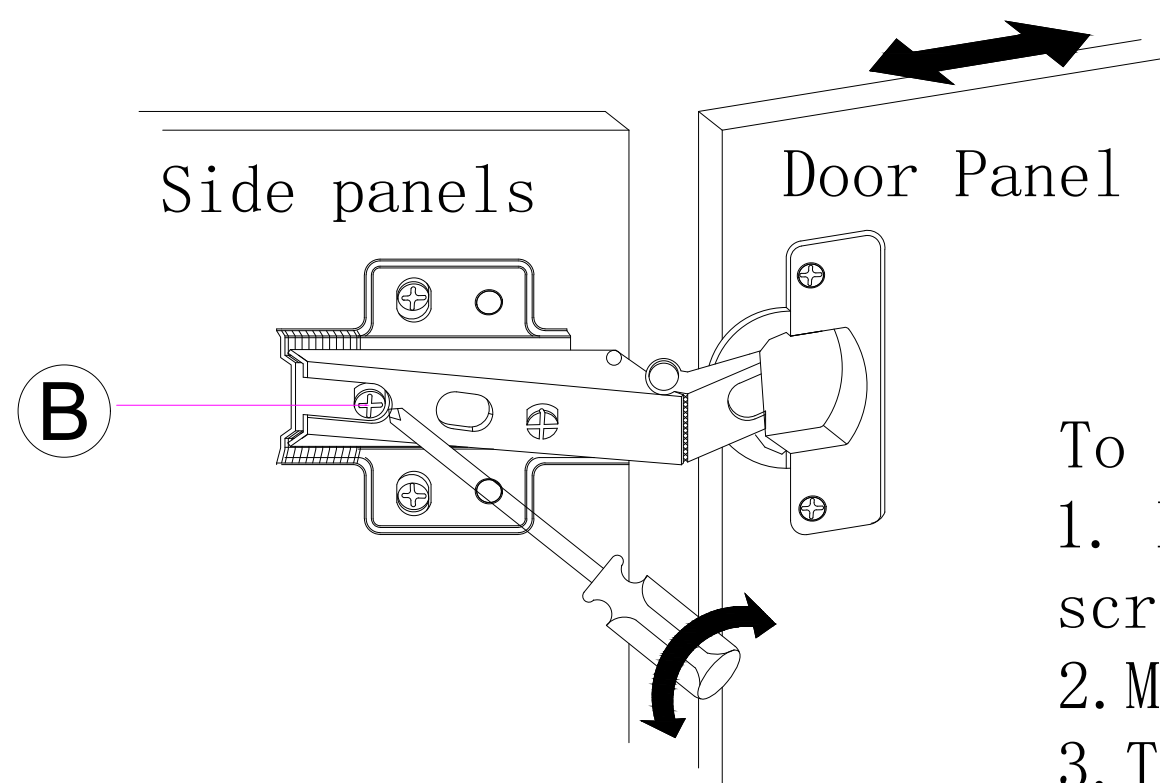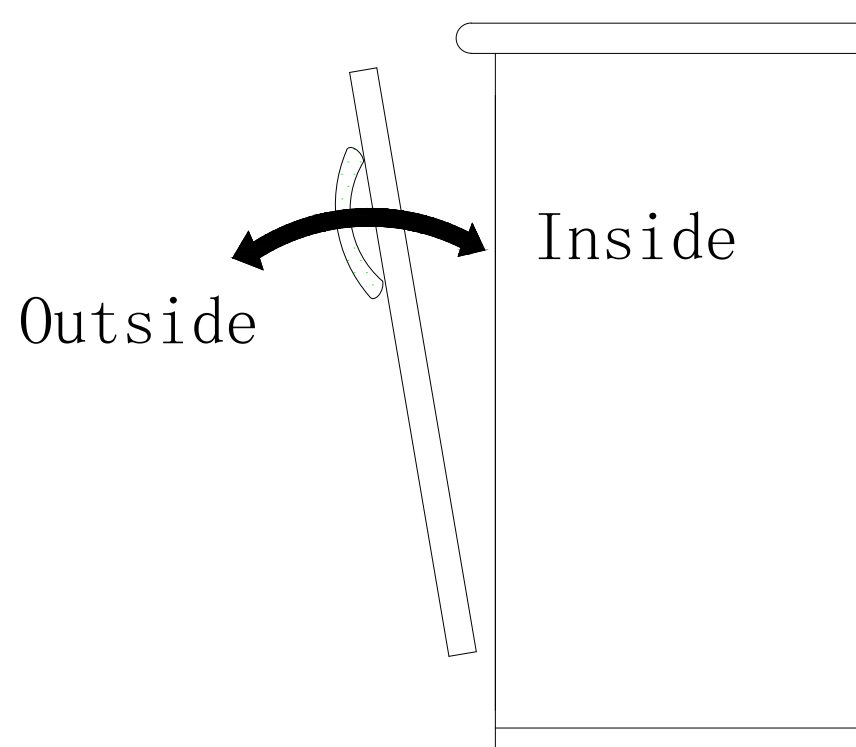

To move the door in or out:
1. Loosen screw B using a screwdriver, as shown in Figure
2. Move door to proper position
3. Tighten the screws again

  Method 3:

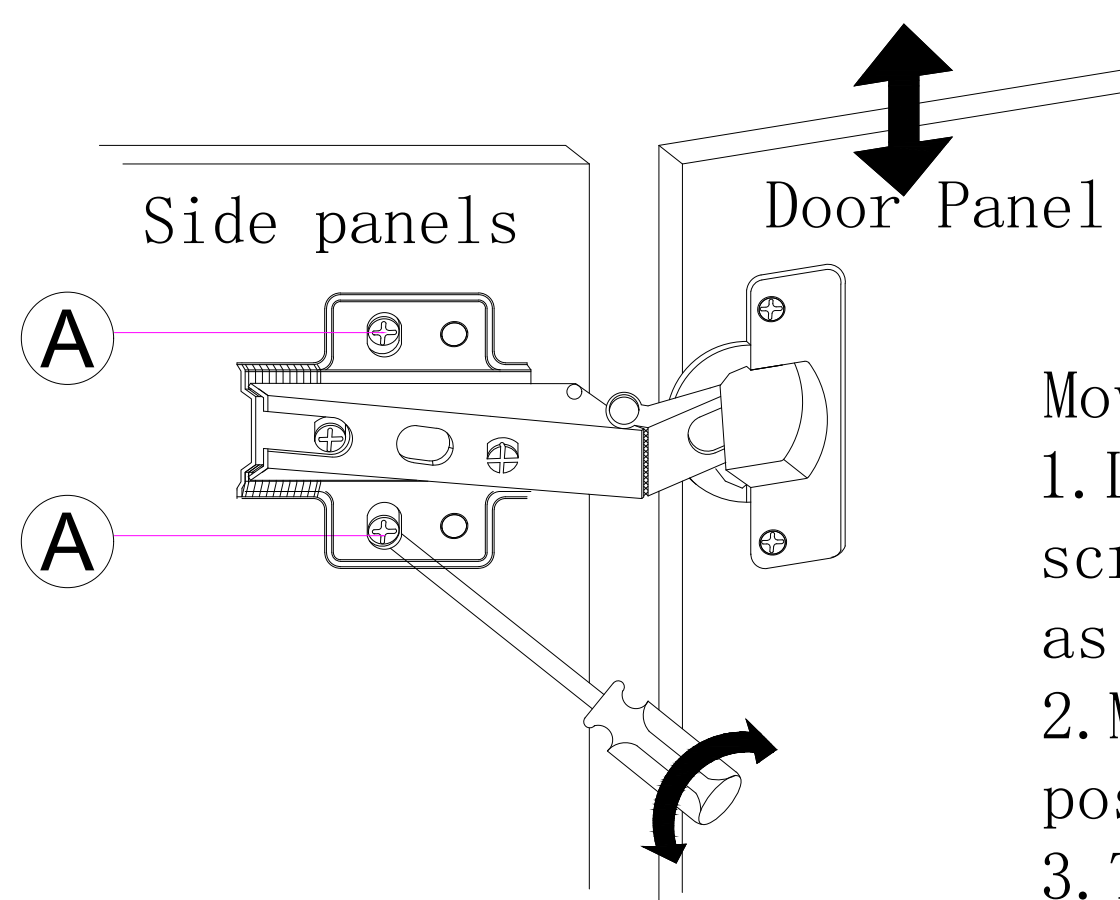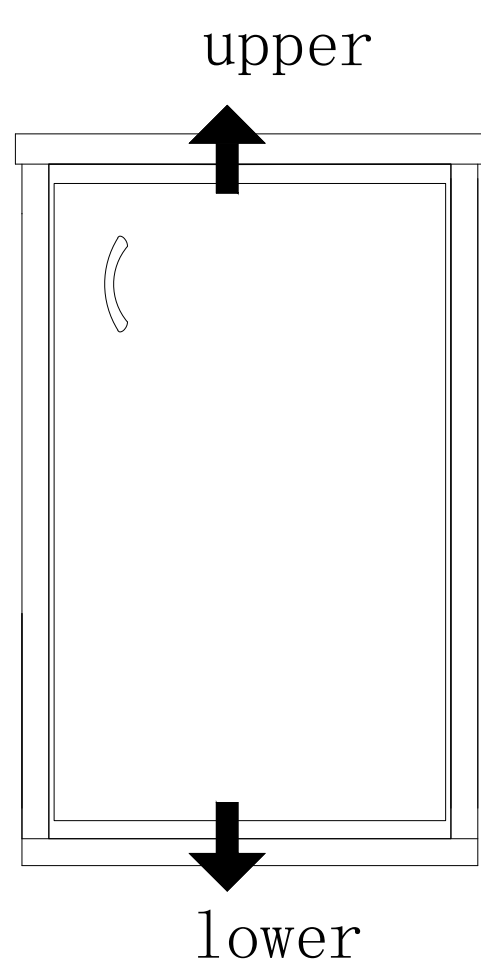

Move the door up and down:
1. Loosen the top and bottom screws A using a screwdriver, as shown in Figure
2. Move the door to the proper position and align the door
3. Tighten the screws again