 


LED CHRISTMAS CLUSTER STRING LIGHTS

SKU:Y013-JG-BP-25-IR-WW/Y013-JG-BP-25-IR-MC/
Y012-JG-BP-50-IR-WW/Y012-JG-BP-50-IR-WH/
Y012-JG-BP-50-IR-MC/Y015-JG-BP-100-IR-WW

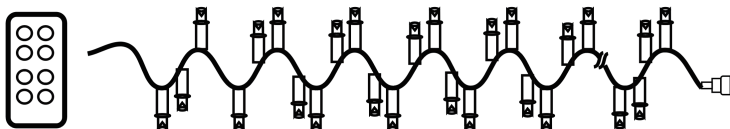

Plug-in Power
Adapter



12 Lighting
Modes



Timer
Function



Dimmable
(4 Levels)



Memory
Function



IP44
Waterproof



Connectable



Indoor &
Outdoor Use

 
PACKAGE INCLUDES



LED Cluster
String Lights



Power Adapter
(With Controller)



Remote Control
(Built-in Battery)



User Manual

SPECIFICATIONS

Power Source: 120V~ 50/60Hz 0.22A

LED Quantity: 500 LEDs/ 1000 LEDs / 2000 LEDs

Lighting Modes: 12 Modes

Waterproof Rating: IP44 (Adapter Not Waterproof)

Remote Working Range: Up to 32ft / 10m

Operating Environment: Indoor & Outdoor Use (Please keep adapter dry)

REMOTE CONTROL GUIDE

1.ON: Turn on the lights

2.TIMER: 6 Hours ON / 18 Hours OFF, repeat daily

3.OFF: Turn off the lights

4.1-8: 8 Lighting Modes

5.4 Modes:

- FAST BLINK
- SHINY STAR
- JUMP1 50%
- JUMP2 30%

6.DIM+/DIM-

Increase brightness/Decrease brightness

7.6H: 6H on, 18H off

8H: 8H on, 16H off

6639H: 6H on, 6H off then 3H on, 9H off



⚠ NOTE: Remove the insulation tab from the battery compartment before first use.

REMOTE BATTERY REPLACEMENT & SAFETY

■ Button Cell Replacement

Step 1: Poke it with a hard stick.

Insert a hard stick into the hole and push inward to release the battery holder.

Step 2: Pull out the battery holder.

The battery holder will pop out slightly.


Pull it out in the direction as shown.

Step 3: Remove the old battery.

Take out the old button cell battery from the holder.

Step 4: Insert the new battery.

Insert a new CR2025 battery with the "+" side facing up. Then push the holder back into the remote until it clicks in place.

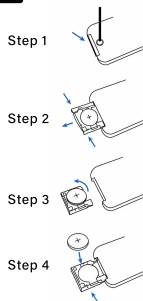

⚠ NOTE: Use CR2025 button cell battery (3V). Replace only with the same type.

BATTERY SAFETY (FOR REMOTE CONTROL)

INGESTION HAZARD: This product contains a button cell or coin battery.

- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause internal chemical burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH OF CHILDREN.
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



The battery in the remote control is a CR2025 button cell battery (3V, non-rechargeable). Replace only with the same type.

IMPORTANT BATTERY INFORMATION

- Use only CR2025 3V lithium battery.
- Replace only with the same or equivalent type.
- Do not recharge, disassemble, heat above 100°C (212°F) or incinerate.
- Do not mix old and new batteries.
- Remove battery if remote will not be used for extended periods.

8 LIGHTING MODES

Press MODE repeatedly to cycle through 8 modes

No.	Mode	Description (Icon)
1	Steady On	•-•-•-•-•
2	In Wave	~~~~~
3	Sequential	→→→→→
4	Slow Glow	☀ ☀ ☀ ☀
5	Chasing Flash	* * * *
6	Slow Fade	☀ ☀ ☀ •
7	Twinkle Flash	* * *
8	Combination	_____

MEMORY FUNCTION

The string lights automatically remember the last lighting mode you selected. When powered on again, the lights will resume the previous mode.

TIMER FUNCTION

Press and hold the MODE button for 3 seconds to activate timer mode.

6H 6H: 6 hours on/ 18 hours off


8H 8H: 8 hours on/ 16 hours off

6639H 6639H: 6 hours on/ 6 hours off then 3 hours on/ 9 hours off

The timer will repeat daily until deactivated.
To cancel timer mode: Press and hold the MODE button again for 3 seconds.

DIMMABLE BRIGHTNESS

Press DIM+ / DIM- to adjust brightness.

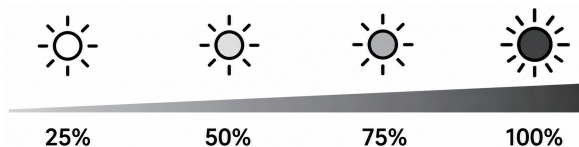


CONNECTABLE SETS (END TO END)

The string lights can be extended with the same strings. Do not exceed the maximum connectable strands.

LEDS	Connectable Sets
500 LEDs	1 Sets
1000 / 2000 LEDs	NOT CONNECTABLE

NOTE: A maximum of 1000–1200 LEDs can be connected in total. Exceeding this amount may cause low brightness or uneven lighting.

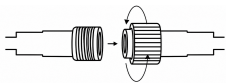

HOW TO USE

1. Hang the string lights on trees, indoors or outdoors, using hooks or cable ties.
2. Plug the adapter into the AC outlet.
3. Aim the remote at the adapter. Press the button to turn the lights on/off, select lighting modes, set the timer, or adjust brightness.
4. Press the MODE button on the adapter repeatedly to switch modes if the remote is lost.
5. Insert the insulation tab back into the remote for storage.

TROUBLESHOOTING

■ Lights do not turn on:

- Make sure the adapter is plugged in and the switch is ON.
- Check if the outlet is working.

■ Lights are dim or not bright enough:

- Adjust brightness to a higher level.
- Reduce the number of connected sets.

■ Remote control not working:

- Remove the insulation tab from the battery compartment.
- Replace the battery (CR2025) if needed.
- Make sure you are within 32 ft (10 m).

■ Mode cannot be changed with remote:

- Make sure the receiver is not obstructed.
- Try using the MODE button on the adapter controller.

SAFETY INSTRUCTIONS

1. Keep away from heaters, fireplaces, candles, or other heat sources.
2. Do not use staples or nails to secure wires. Use only the provided mounting kits.
3. Do not rest the product on any power cord.
4. Use the product only as intended.
5. Do not hang other objects on the cord or light string.
6. Do not close doors or windows on the product or cord.
7. Do not cover the product while in use.
8. Read and follow all instructions.

1 Year Limited Warranty

The product is warranted against defects in materials and workmanship for one year from the original purchase date, when delivered new in its original container. Warranty repair or replacement does not extend the original warranty period. A dated proof of purchase is required for warranty service. A copy of your dated sales receipt satisfies this requirement.

This warranty does not cover:

Accessories or consumables (e.g., light bulbs) – no warranty or replacement.

This limited warranty applies only to defects from normal use. It does NOT cover:

1. Damage caused by misuse, abuse, neglect, mishandling, improper packaging, alteration, accident, power fluctuations, improper use, failure to follow Iseebiz's instructions, dropping, scratches, or abrasion. Such damage is presumed to result from improper use.
2. Damage caused by parts or supplies not sold by Iseebiz.
3. Products with a defaced, altered, or removed model number or date code.

For customer service and warranty claims, contact us here:

Tel: +86 13510668147

Email: service@iseebiz.com

Website: <http://www.iseebiz.com>