




USER'S MANUAL

Pre-lit Christmas Tree

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

PARTS

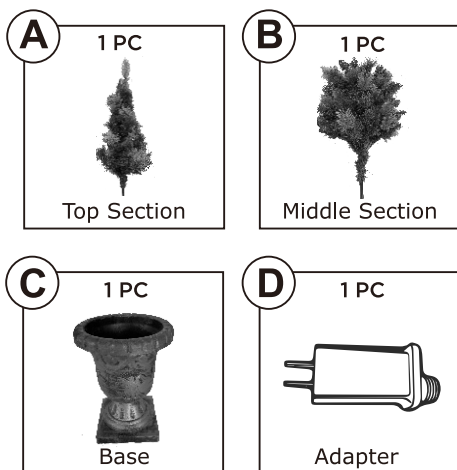


 Wires may come wrapped around frame pieces. Locate and unwrap wires before assembly.

PRODUCT ASSEMBLY

1 Assemble the Christmas tree.



3FT PORCH TREE
90CM PORCH TREE



4FT & 5FT PORCH TREE
1.2M & 1.5M PORCH TREE

Spread out the branches of the tree and rearrange them to your preference.



NOTE: NOTE: Bottom section is wider than middle section. Make sure they are in the correct order before inserting them into the base of the tree.

PRODUCT ASSEMBLY

- 2 Connect all the corresponding plugs.
Spread out the branches and arrange them to your preference. Locate the power cord in the part C bottom, attach the part E adapter, and insert into a wall outlet to turn the lights on.



3FT PORCH TREE
90CM PORCH TREE



4FT & 5FT PORCH TREE
1.2M & 1.5M PORCH TREE

CLEANING & STORAGE

- >Store this tree in a cool and dry place away from heat and moisture.
- >Before putting this tree in storage, do the following:
 - Completely remove all decorations.
 - Clean the tree with a slightly damped cloth and let it dry naturally.
 - Raise all branches to original upright position; make sure not to damage any branches in the process.