

senelux

INSTRUCTION MANUAL

16^{Inch} Wall Mounted Fan WITH REMOTE CONTROL



Model: FT-40MA

ENGLISH

TABLE OF CONTENTS

i.	Points For Attention	02
ii.	Instruction For Safe Operation	03
iii.	PRODUCT SPECIFICATION	05
iv.	Parts Description	05
v.	Operation Instructions	06
vi.	Maintenance Instructions	07
vii.	Warranty	07
viii.	Information	07

1. POINTS FOR ATTENTION

Before using the product, it is essential to carefully read and follow the instructions provided in this user manual. Additionally, it is recommended to keep the manual in a safe place for future reference.

Warning

1. Avoid electrical shock and fire: Ensure that water, other liquids, and flammable cleaning agents do not enter the product.
2. Prevent combustion: Refrain from spraying any combustible materials, such as insecticides or perfumes, in the vicinity of the product.
3. Check power supply compatibility: Before connecting the product to the power supply, verify whether the product's voltage requirement aligns with the local power supply voltage.
4. Secure placement: Always place and use this product on a stable, flat, and level surface.
5. To avoid damage to the product and ensure its optimal performance, please refrain from inserting fingers or objects into the front cover.

2. INSTRUCTION FOR SAFE OPERATION


1. The fan should be used only at its rated voltage. This fan is designed for a 220-240V~ 50Hz electrical supply.
2. Never insert fingers or any other objects through the fan guard while the fan is running.
3. Unplug the fan when not in use, when moving it from one location to another, before attaching or removing parts, and before cleaning.
4. Regularly check the power cord and plug for damage. If damaged, the power cord or plug must be replaced by the manufacturer or a qualified expert/agency to avoid hazards.
5. Do not insert your fingers into the openings. Do not allow children to insert any objects into the front casing.
6. Do not use this fan outdoors or in damp areas, such as bathrooms.
7. Do not place the electrical cord under a carpet or cover. Do not lay anything over the cord. Position the cord in an area where it does not pose a tripping hazard.
8. The fan must always be unplugged when not in use. To unplug the fan, first switch all controls to the "OFF" position, then disconnect the plug from the outlet.
9. Do not operate the fan near gasoline, paint, or other flammable liquids.
10. If you need to move the fan, first switch it off and unplug it.
11. Users must not replace any parts of this fan themselves.
12. The fan should not be disassembled by the user.

13. Ensure that water or other liquids do not enter the interior of the motor.
14. The fan must be properly grounded.
15. Place the fan on a stable, flat surface.
16. Ensure that the fan does not come into contact with any obstructions while oscillating.
17. This appliance is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they are under the supervision or have been instructed on the use of the appliance by a person responsible for their safety. Children should be supervised to prevent them from playing with the appliance.

3. PRODUCT SPECIFICATION

Product Name	16 Inch Chrome Wall-mounted Fan
Model No.	FW-40MA-R
Fan Size	16 Inch (40cm)
Voltage	220-240V 50Hz
Power	50W
Oscillating Degree	80°
Vertical Tilt Degree (manual)	20°
Product Size	44.5*35.5*46.5cm
Packaging Size	45.5*21.0*45.5cm
Gross Weight	4.60kg
Net Weight	3.75kg

4. PARTS DESCRIPTION

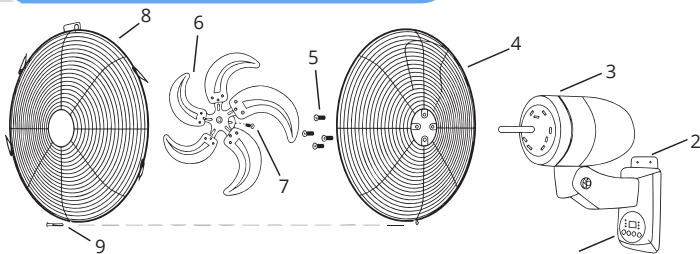


1. Control panel
2. Wall mounting holes
3. Motor
4. Rear grille
5. Rear grille fixing screws

6. Fan blades
7. Blade fixing screws
8. Front grille
9. Grill fixing screws

5. OPERATION


1. Ensure that the mains voltage matches the voltage specified on the product.
2. To turn the fan on, press the ON/OFF button.
3. To select the speed, press the SPEED button. Options include Low, Medium, and High-speed settings.
4. To choose the type of wind, press the MODE button on the remote control. Available settings are: Normal, Natural, and Sleep.
5. To activate the oscillation function, press the OSC button. Press it again to turn the function off.
6. To set a timer, press the TIMER button. The timer can be set from 0.5 hours (30 minutes) to 7.5 hours, increasing in increments of 0.5 hours each time the button is pressed (e.g., 0.5 hrs, 1.5 hrs, 2.5 hrs, ... up to 7.5 hrs).
7. To turn the fan off, press the ON/OFF button

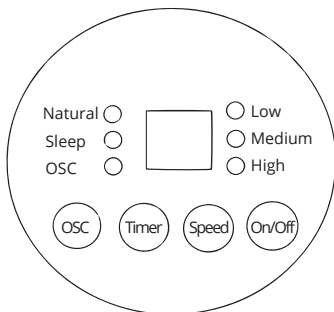

Fan control panel

Battery Compartment of the Remote Control

- Make sure the batteries are inserted with the correct orientation.
- Avoid mixing different types of batteries.
- When replacing batteries, ensure both are replaced at the same time.

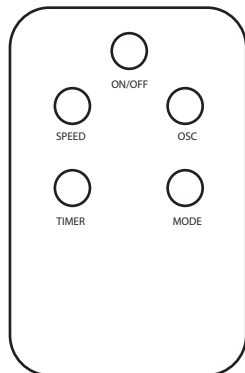

Remote control panel

6. MAINTENANCE

1. Before cleaning, turn the fan off and unplug it from the power supply.
2. Use a soft cloth to wipe off any dust from the fan. If the fan is very dirty, use a slightly damp cloth, then wipe it dry. Avoid using cleaning detergents, sprays, or other chemicals, as they may damage the fan.
3. Store the fan in its original packaging in a well-ventilated, dry area.
4. The motor bearings are permanently sealed and do not require additional lubrication.
5. Prevent water from dripping on or entering the fan housing.

7. WARRANTY

All Senelux products are covered from the original purchase date by a standard 2-year warranty. To register your warranty, please visit www.senelux.co.uk.

If, in the unlikely event that your product has any manufacturing defect, please get in touch with our customer service team at support@senelux.co.uk. Please quote your order number and any other relevant details regarding your issues. FAQs and help regarding all our products are available on our website and YouTube channel.

Any unauthorised repair of this product invalidates your warranty.

 
8. INFORMATION

If you want further information regarding using this product or any of our products, don't hesitate to contact us via the details below.

Senelux Ltd
Unit 5-6 105 Boundary Street
Liverpool L5 9YJ
United Kingdom
Email – info@senelux.co.uk
Website – www.senelux.co.uk



Be sure to tag us in your photos on social media using #seneluxathome to be featured



Thank you very much for using our products.
Please read the user manual carefully before use and keep it for future reference.