

Read and Save These Instructions

T5573



Important: Read Before Returning This Product

Carefully Review This Manual Before Attempting To Assemble, Install, Operate, Or Maintain The Described Product. Protect Yourself And Others By Adhering To All Safety Guidelines. Failure To Follow These Instructions May Result In Personal Injury And/Or Property Damage!

Safety Warnings

- * In order to ensure safe use and avoid injury and property damage to you or others, please observe the following safety precautions.
- * Failure to observe safety warnings may lead to accidents when used incorrectly.
- * This product does not take into account the use of equipment by unattended children and disabled people, and the situation of children playing with machines, which may lead to accidents.



Please do not touch it with wet hands to avoid electric shock.



This product should not be placed in proximity to flammable materials. During use, ensure it is kept at a safe distance from curtains, blinds, or similar items in order to minimize the risk of fire.



Do not allow children to operate alone. Keep out of reach of infants to avoid dangerous accidents such as electric shock and burns.



Please pay attention to waterproof machine parts shall not be immersed in water.



Unauthorized disassembly is strictly prohibited. Only authorized maintenance personnel are permitted to perform such operations.

Operation Precaution

- * During the working process of the product and for a period of time after the pan body is removed, the surface temperature of the insulation area is relatively high. Please Do not touch, in case of high temperature burns.
- * Do not place the product directly on a metal countertop for use. To avoid danger caused by the product heating the metal countertop.
- * Do not rinse the product with water. Prevent water and foreign objects from entering the body to keep the body clean.
- * During the product working process, it is forbidden to place irrelevant articles such as paper, aluminum foil paper and cloth on the panel.
- * Note that the surface of products with high temperature symbols will become hot during use.
- * Do not heat sealed containers or sealed foods(e.g. cans, pressure cookers, etc.) directly on top of the product. avoid Heat expansion accident.
- * Please use a power socket $\geq 10A$ separately. After use, unplug the power cord plug from the socket.
- * When the product is in normal use or idle, please ensure that it is more than 1.5 meters away from water sources or fire sources.

 
- * If the power cord is damaged, it must be replaced with a special cord or a special component purchased from its manufacturer or repair department.

Insulation Methods

Use tableware correctly



① Please use a flat dish. Heat preservation will work better

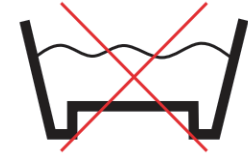


② The bottom of the dish is recessed more than 5mm, the heating and insulation effect is not ideal.



Matters that may cause minor injuries or property damage

- * Please do not subject the panel to heavy pressure and sharp scratches.
- * The product cannot be operated with an external timer or independent remote control system.
- * Avoid wiping with thinner, toluene, acidic detergent, kerosene, alcohol or chemical reagents to prevent discoloration.
- * The oil stains on the surface of this product must be removed cleanly to avoid discoloration and damage.
If there are cracks on the surface of the panel, turn off the product to avoid possible electric shock.
- * Metallic objects such as knives, forks, spoons and covers should not be placed on the surface of the panel as they may heat up.
- * Do not cover the panel and do not touch the panel for warmth.
- * Before doing external cleaning work, you must first turn off the power source and unplug the power plug. After the panel cools down, do not clean it directly with water.

 
Cleaning & Maintenance

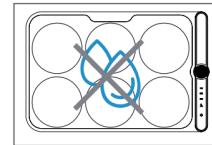


1. Keep the body dry. Please cut off the power of the machine if it is not used for a long time, which can prolong the service life of the machine.



 2. Confirm that the plug of the power cord is pulled out of the socket, and clean and maintain the product after cooling.

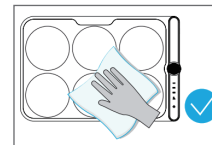


 3. If there is a small amount of dust on the surface of the product, use a soft damp cloth to wipe the surface of the product and store it after the surface is dry.

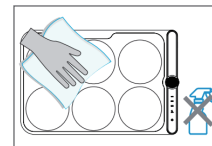

4. If there is oil on the surface of the product, it can be wiped with a soft damp cloth dipped in a small amount of toothpaste or mild detergent until no residue is left.

 Note: Do not wipe products with bleach or corrosive liquids

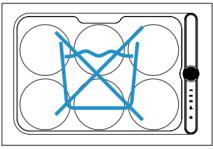

5. Do not rinse the product directly with water or immerse the product in water for cleaning.

Disposal

- * This electronic appliance should not be disposed of with regular household waste. Dispose of all packaging, paper, cartons and plastic, plastic bags in accordance with your local recycling regulations.
- * At the end of the product's lifespan, you can contact your local waste management authority for information about collection points in your area and about potential costs associated with the recycling process.



The product warranty will be void if damages occur due to non-compliance with the aforementioned safety instructions. We shall not be held responsible for any personal or property damage resulting from improper handling of the product or failure to comply with the below safety instructions.