 


COSORI

User Manual

Original Double-Wall Electric Kettle

Model No.: CO172-EK

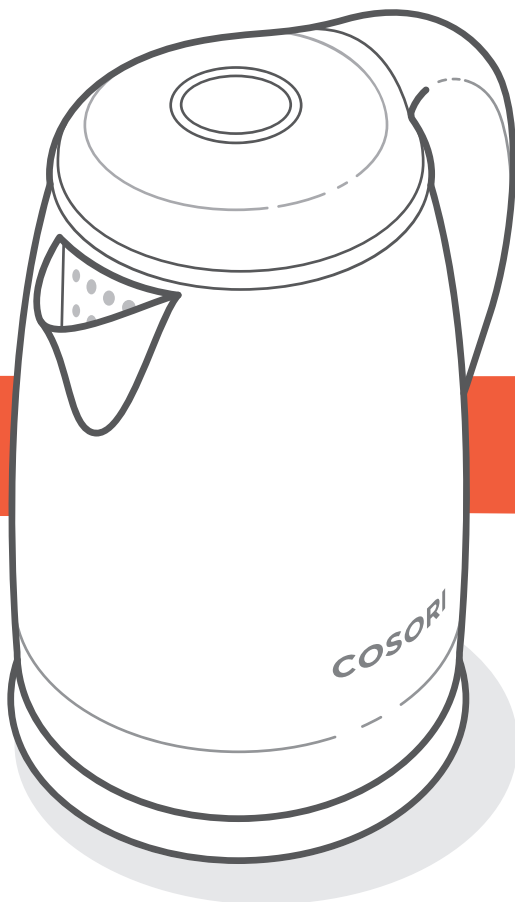

Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT
support@cosori.com | (888) 402-1684

 *Thank you for
your purchase!* 

(We hope you love your new electric kettle as much as we do.)



join

the Cosori Cooks Community on Facebook
facebook.com/groups/cosoricooks



explore

our recipe gallery
www.cosori.com/recipes



enjoy

weekly, featured recipes
made exclusively by our in-house chefs



CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

Email: recipes@cosori.com

Toll-Free: (888) 402-1684

M-F, 9:00 am-5:00 pm PST/PDT

On behalf of all of us at Cosori,

Happy cooking!

Table of Contents

Package Contents

3

Specifications

3

Important Safeguards

4

Getting to Know Your Kettle

5

Before First Use

6

• Water Test

6

Using Your Kettle

7

• Boiling Water

7

Care and Maintenance

8

• General Cleaning

8

• Descaling the Kettle

8

Warranty Information

9

Customer Support

10

Package Contents

- 1 x Original Double-Wall Electric Kettle
- 1 x Power Base
- 1 x User Manual
- 1 x Descaling Card

Specifications

Power Supply	AC 120V, 60Hz
Rated Power	1500W
Capacity	1.8 qt / 1.7 L

IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using your kettle.

Read all instructions.

General Safety

CAUTION!

- **Do not** touch hot surfaces. Use handle. **Do not** touch the base or metal walls of the kettle during or immediately after operation.
- **Do not** fill the kettle above the “MAX” line. This may cause water to boil over and may cause scalding.
- **Always** handle with care when there is hot water inside the kettle, to avoid scalding.

- Closely supervise children near the kettle. **Do not** allow children to use or play with this kettle.
- **Do not** immerse the kettle, base, cord, or plug in water or other liquids.
- Unplug the kettle when it is not being used and before cleaning. This will avoid electric shock and prevent moisture from causing a short circuit in the power base while it is plugged in.
- Allow to cool before putting on or taking off parts, and before cleaning.
- **Do not** use the kettle if it is malfunctioning, or if the kettle, base, power cord or plug is damaged in any way. **Do not** try to repair the kettle. Contact **Customer Support** (see page 12).
- Using accessory attachments not recommended by the manufacturer may result in fire, electric shock, or injury.

 
- **Do not** use outdoors.
- Place the kettle on a dry, flat surface. **Do not** place the kettle on or near heat sources such as stovetops, ovens, radiators, etc.
- **Do not** turn on the kettle while the lid is open.
- **Always** make sure the lid is closed while the kettle is operating. **Do not** cover the spout opening while the kettle is operating. **Do not** cover the slits near the **On/Off Switch**.
- To disconnect, use the **On/Off Switch** to turn the kettle off, then remove the plug from the outlet.
- **Only** use the kettle as directed in this manual.
- Household use **only**.

Plug and Cord

- **Do not** let the cord (or any extension cord) hang over the edge of a table or counter. **Do not** allow the cord to touch hot surfaces.
- Your kettle has a polarized plug (one prong is wider than the other), which fits into a polarized outlet only one way. This is a safety feature to reduce the risk of electric shock. If the plug does not fit, reverse the plug. If it still does not fit, **do not** use the plug in that outlet. **Do not** bypass this safety feature.
- This kettle uses a short power-supply cord to reduce the risk of entangling or tripping. Use extension cords with care.
- The marked electrical rating of an extension cord should be at least as high as the rating of the kettle (see page 3).

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR KETTLE

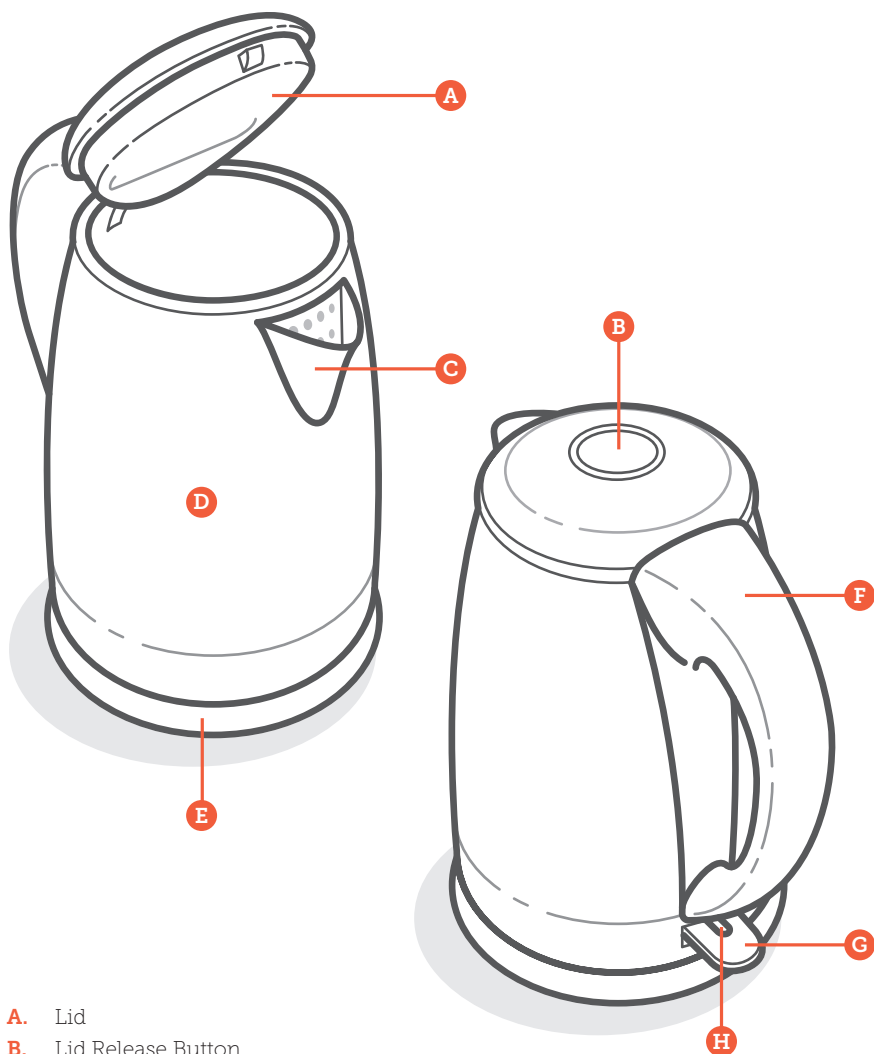

- A.** Lid
- B.** Lid Release Button
- C.** Spout
- D.** Kettle
- E.** Power Base
- F.** Handle
- G.** On/Off Switch
- H.** Indicator Light

BEFORE FIRST USE

Water Test

⚠ CAUTION!

Do not use the kettle if it is damaged. Contact **Customer Support** to replace your kettle (see page 12).

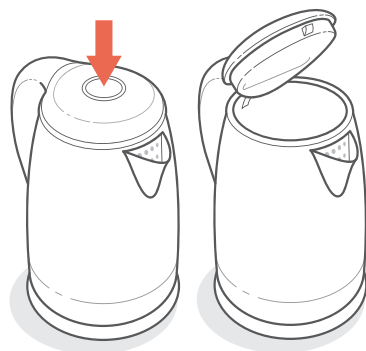 


Figure 1.1



Figure 1.2

1. Remove all parts from the package and carefully inspect each part.
2. Completely unravel the power cable and place the power base on a flat, level surface.
3. Press the **Lid Release Button** to open the lid. [Figure 1.1]
4. Fill the kettle with water to the "**MAX**" line, then close the lid. [Figure 1.2] Place the kettle onto the power base. Plug in.
5. Press the **On/Off Switch**. The blue indicator light will turn on. [Figure 1.3]
6. The kettle will automatically turn off once it has finished boiling the water. Allow it to cool for at least 5 minutes, then pour out the water.



Figure 1.3

USING YOUR KETTLE

Boiling Water

Do not boil other liquids in this kettle. This kettle should only be used for boiling water.

1. Press the **Lid Release Button** to open the lid.
2. Fill the kettle to the desired level.
Do not fill above the “**MAX**” line. [Figure 2.1]
3. Close the lid and place the kettle onto the power base. Plug in. [Figure 2.2]
4. Press the **On/Off Switch**. The blue indicator light will turn on. [Figure 2.3]
5. The kettle will automatically turn off once it has finished boiling the water.

Note:

- Minimum amount of water needed for boiling is 2.1 cups / 0.5 L.
- You can stop the heating process by flipping the **On/Off Switch** back up while the kettle is operating.
- This kettle has a dry-run safety feature. If there is no water inside the kettle, it will automatically turn off to prevent the heating plate from overheating.
- If the kettle overheats, fill it with cold water and wait for 2 minutes before using again.



Figure 2.1

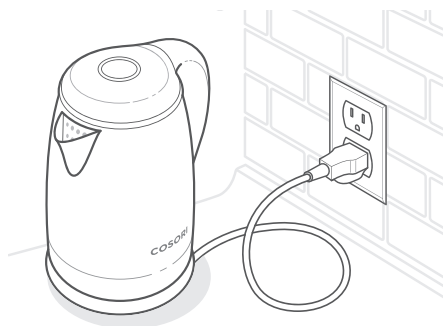 


Figure 2.2



Figure 2.3

CARE AND MAINTENANCE

Descaling the Kettle

You should descale the kettle at least once a week if you use it frequently. Descaling removes any mineral deposits that have built up inside the kettle. **Always** descale the kettle after it has been stored for long periods of time and before storing it.

1. Fill the kettle with 1 cup of distilled vinegar or lemon juice and 2 cups of water (1:2 ratio).
2. Boil the mixture, then let it soak in the kettle for 2 hours.
3. Pour out the solution, then wipe the limescale away with a cloth or non-abrasive sponge.
4. Rinse the kettle with clean water, and dry with a soft cloth.
5. Repeat as needed.

WARRANTY INFORMATION

Product	Original Double-Wall Electric Kettle
Model Number	CO172-EK
Warranty Period	1 year
For your own reference, we strongly recommend that you record your order number and date of purchase.	
Order Number	
Date of Purchase	

TERMS & POLICY

Cosori warrants all products to be of the highest quality in material, craftsmanship, and service, effective starting from the date of purchase to the end of the warranty period.

Cosori will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Cosori is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety or usage warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Cosori and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Additional 1-Year Warranty

You can extend your 1-year warranty by an additional year. Log onto www.cosori.com/warranty and enter your order number (e.g., from Amazon or Houzz) to register your new product for the extended warranty.

If you are unable to provide the order number for your product, please type a short note in the order number field along with the date you received your product.

Defective Products & Returns

Should your product prove defective within the specified warranty period, please contact Customer Support via support@cosori.com with your order number. **Do not** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the unit with a copy of your invoice and order number.

CUSTOMER SUPPORT

We're Here to Help

Should you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is our goal!

Customer Support

Arovast Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@cosori.com

Toll-Free: (888) 402-1684

Support Hours

Monday–Friday

9:00 am–5:00 pm PST/PDT

* Please have your order confirmation number ready before contacting Customer Support.

SHOW US WHAT YOU'RE MAKING

We hope this has been helpful to you. We can't wait to see your beautiful results, and we think you'll want to share glam shots! Others already in the community await your uploads—just pick your platform of choice below.

Snap, hashtag, and tag away, Cosori chef!

#iCookCosori



@cosoricooks



Cosori Appliances

Considering what to cook? Many recipe ideas are available, both from us and the Cosori community.

MORE COSORI PRODUCTS

If you're happy with this food dehydrator, the line doesn't stop here. Check out **www.cosori.com** for a line of all our beautiful and thoughtfully designed cookware. They might be right at home in your kitchen, too!

COSORI

Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT
support@cosori.com | (888) 402-1684