

Instruction


SKU:WL-BC008

Parts List

Part	PICS	QTY	Part	PICS	QTY
A		1	K		1
B		1	aa		1
C		1	L		8
D		1	M		4
E		1	N		6
F		1	O		4
G		1	P		4
J		1	Q		2


How To Install

1

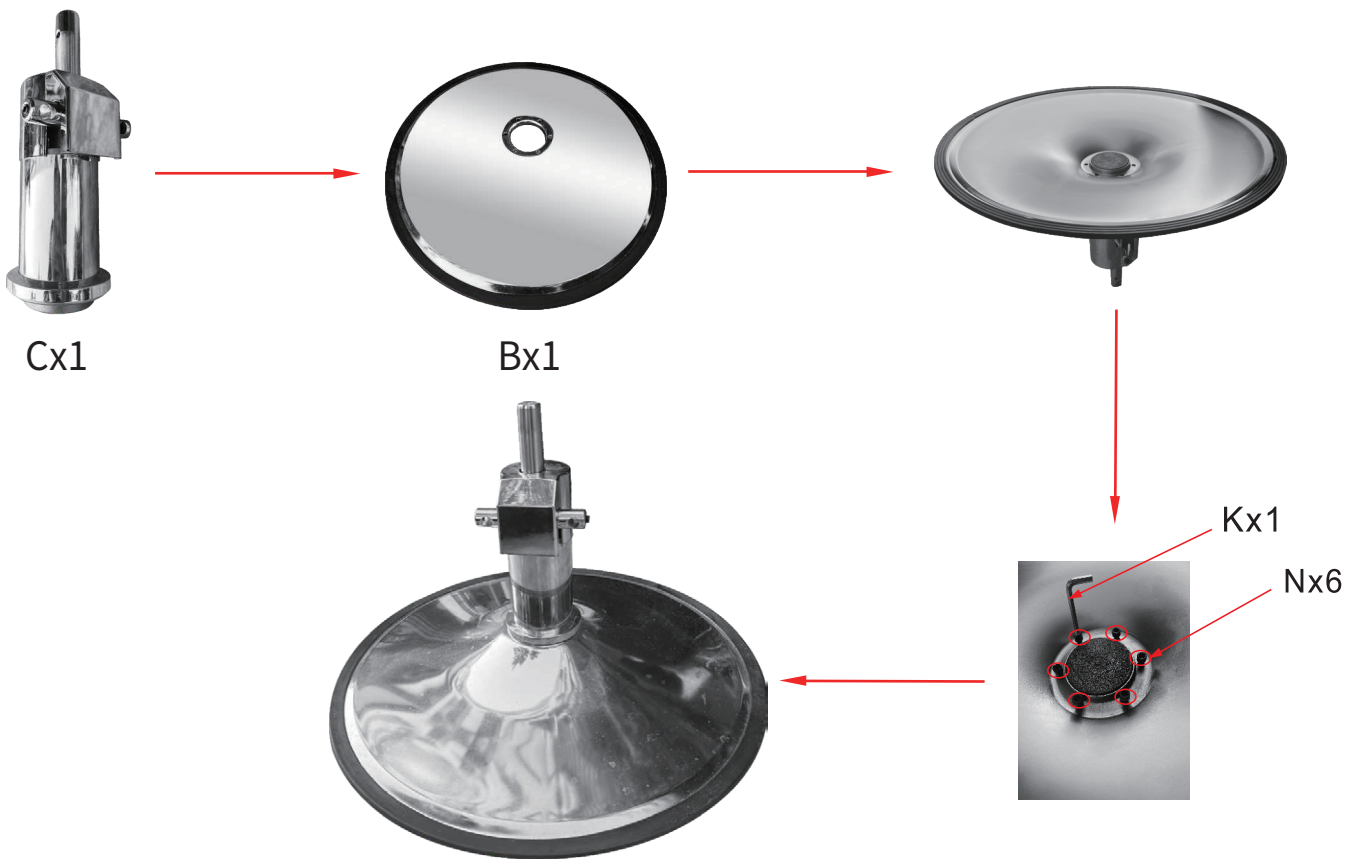


1.Install the hydraulic pump (C) onto the chassis (B). Then insert the screws (N) into the holes and tighten with a large wrench (K).

2

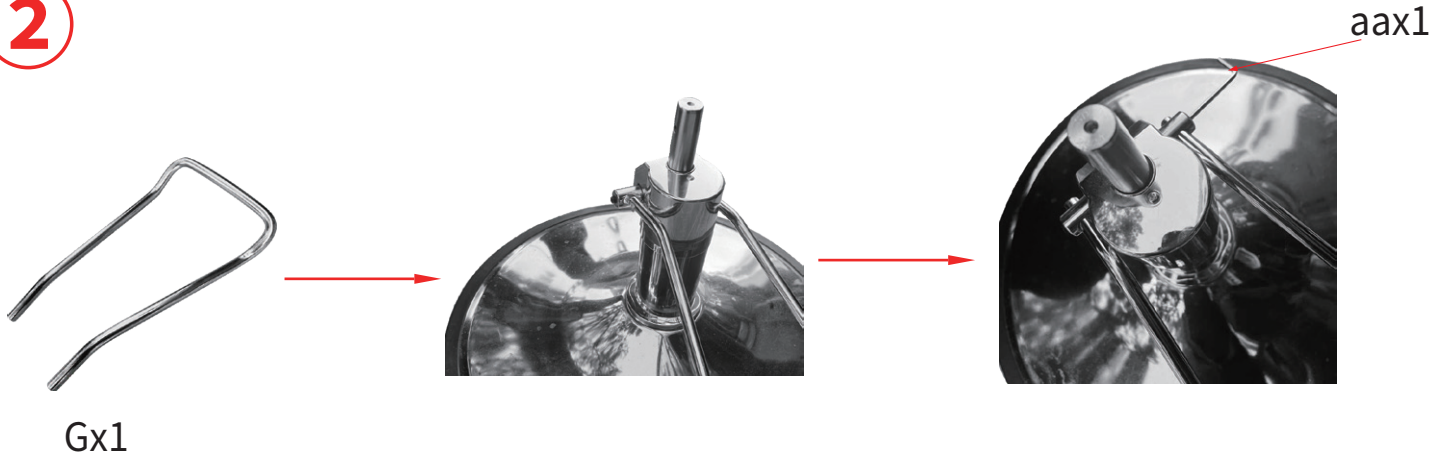

2.Insert hydraulic rod (G) into top of hydraulic pump (C) and tighten with small wrench (aa).

3

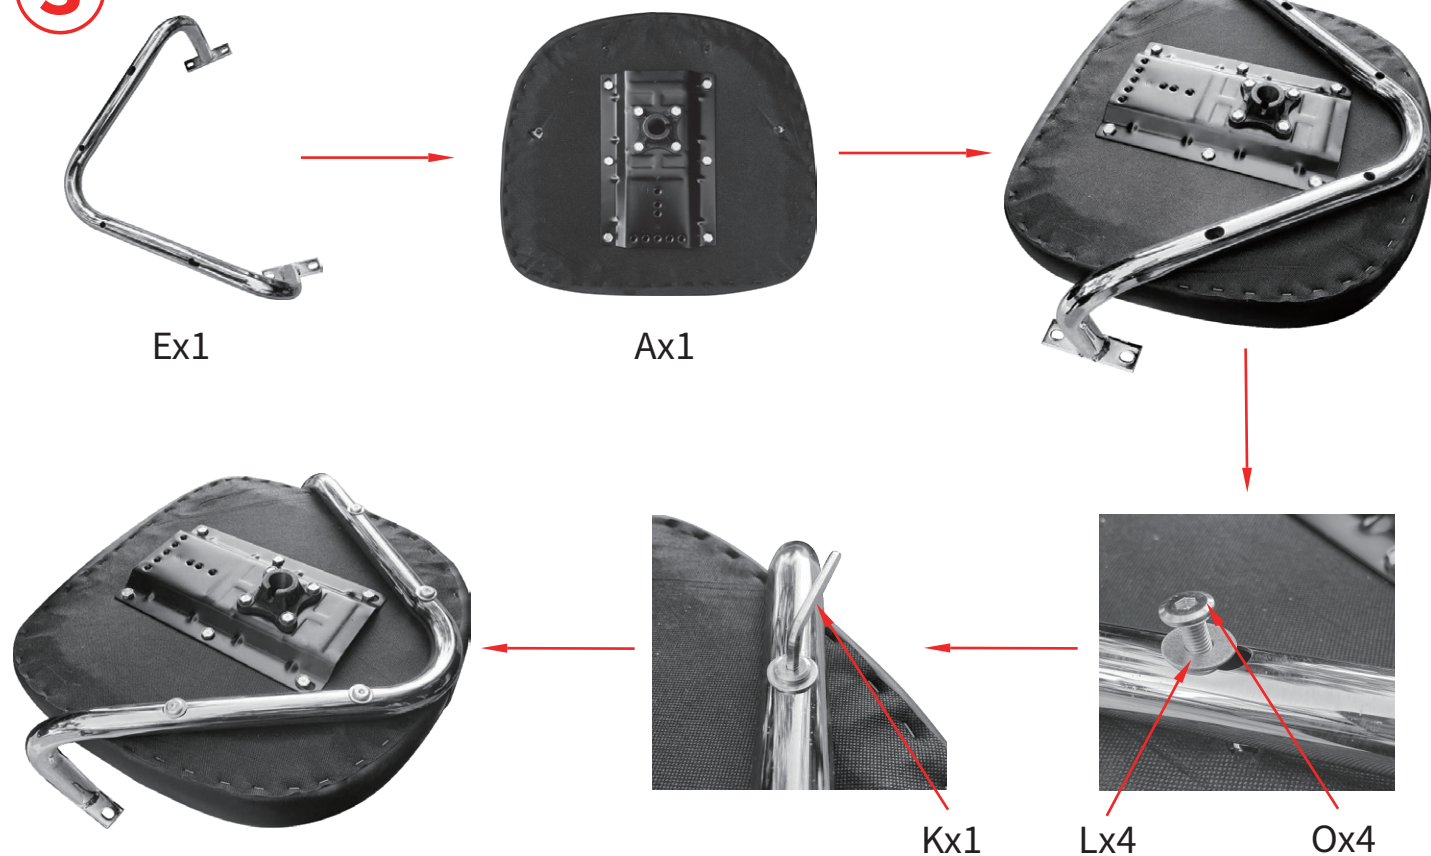


3. Fixed (E) to the seat cushion (A), then,secure screw (O) in the Washer(L),finally tighten them with a large wrench (L).

4



4. Attach the assembly from step 3 to the backrest (D). Attach screws (M) to zipper on backrest (D). Then use a wrench (J) to tighten the screws (P) and spacers (L).

5

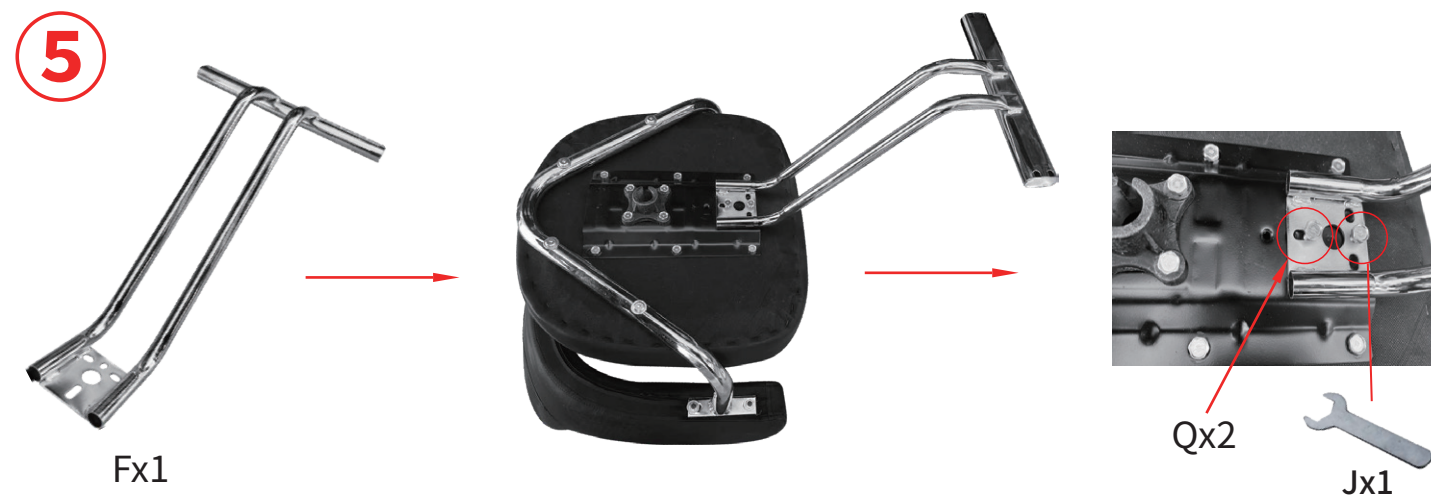

5. Attach the foot pedal (F) to the product assembled in step 4. Then tighten the screws (Q) with a wrench (J).

6



6. Insert directly the products assembled in step 5 (seat cushion and backrest) into the products assembled in step 2 (hydraulic pump and base), now installation is completed.