

TOOL STORAGE CABINET

OPERATING INSTRUCTIONS

Make sure to close all drawers at first. To lock the unit with door, draw out the door and turn left the key.


DO NOT slam the drawers as they will not lock, and damage may occur to lock bar tabs or lock pockets.

- **If it becomes necessary to remove drawers, follow these drawer removal instructions:**

Ball Bearing Drawer Slides

Ball bearing slides have black retaining clips. To remove drawer, the retaining clips need to be released by pushing lever up (right hand side of slide) and down (left hand side of slide)

simultaneously, and pulling drawer out . To re-install drawers, simply place drawer onto slides and push in fully.

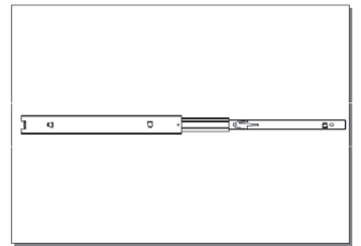


- **Casters and Side Handle**

Roll cabinet is supplied with heavy duty casters, including two swivel casters with brakes and two fixed casters. The side handle must be fixed on the same side as the swivel casters. heavy duty casters, including two swivel casters with brakes and two fixed casters. The side handle must be fixed on the same side as the swivel casters.


- **Warning**

1. Do not open more than one loaded drawer at a time.
2. Close drawers before moving.
3. Do not stand on the product. You may fall which may cause personal injury.
4. Do not mount the product on truck bed or any other moving object.
5. Apply brakes on swivel casters when it is at a standstill.
6. Do not step in the drawers. You may fall which may cause personal injury.
7. Lubricate the top and bottom channels of the drawer slides at least twice a year.


5 DRAWERS

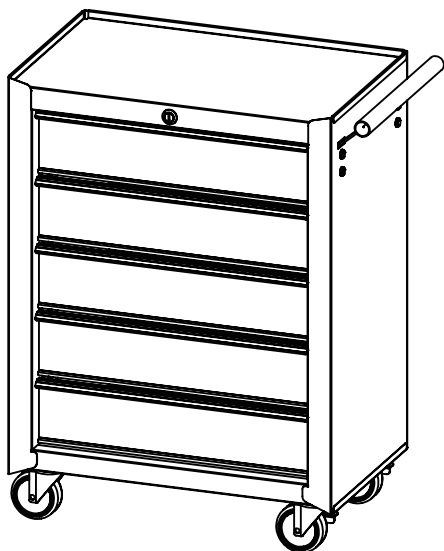


6 DRAWERS

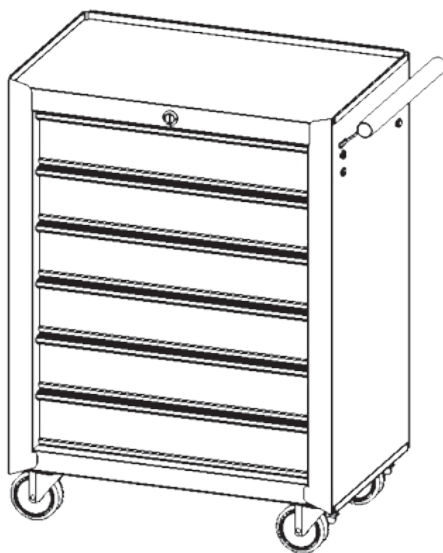 

7 DRAWERS

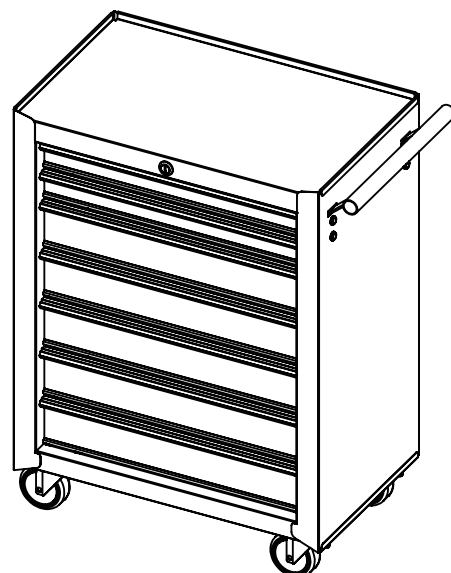 


Parts List

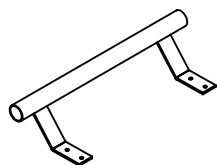 

X 1



 X 2

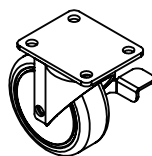

X 2



X 20

