

ELECTRONIC GUN CABINET

INSTRUCTION MANUAL

 


Keep children or unauthorized persons away from your guns

 



COMPONENT DESCRIPTION

Hi friend,

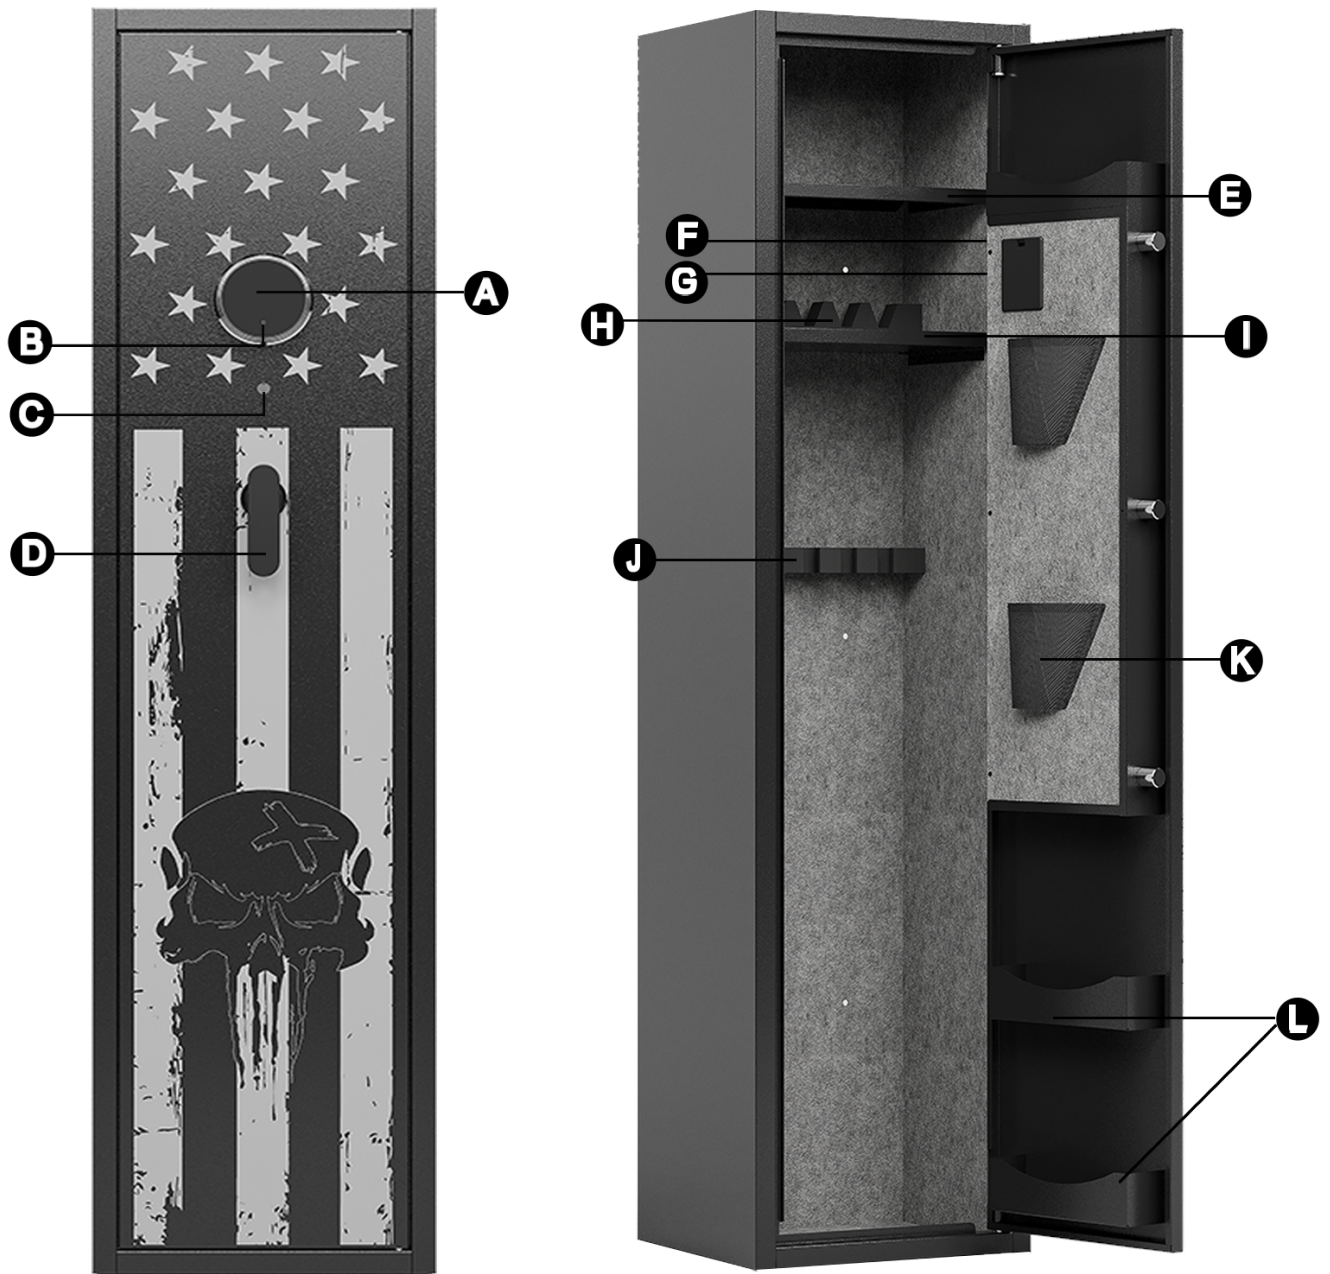
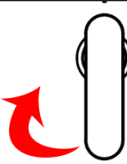 
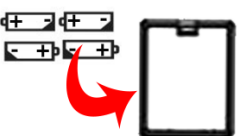 

Thank you for your purchase, please take a few minutes to read the instruction manual for better use of the product. If you have any questions, please contact the seller for your service.



A Electronic Keyboard	D Handle	G LED light	J Adjustable Gun Holder
B External Battery Socket	E Removable Shelf	H Adjustable Gun Holder	K Pistol pouch
C Emergency Keyhole	F Green Setting Button	I Removable Shelf	L Storage Box

Expansion bolt*4		External power box*1		Plastic Snap Pins*2		Key*2	
------------------	---	----------------------	---	---------------------	---	-------	---

THE FIRST TIME OPENING

1.Insert the key		2.Turn the handle	
3.Insert 4 AA alkaline batteries (not included)		Please do not use rechargeable or different brands of batteries	
			

PERSONAL PASSWORD SETTING

Original factory password: 123456

This gun safe can be set with two sets of passwords

SET UP THE FIRST PASSWORD

1. Press the green setting button on the back of the door while the keypad light is off, the buzzer will sound once and the keyboard light



2. Enter any new 3-12 digits code, press the "#" button to confirm. The buzzer will sound once and the indicator light will be off. Password is set successfully.

Note: After setting your password, please test the new password to ensure it is valid.

SETTING THE SECOND SET OF PASSWORDS

1. Wake up the keypad, enter "00" and press the green setup button on the back of the door.
2. Enter your second password, then press the "#" button to confirm.

HOW TO OPEN THE GUN SAFE

1. Wake up the keypad by touching it to enter the password you have set up.
2. Press the "#" button to confirm, the indicator light is on, and the buzzer beeps twice, indicating that the password is entered correctly.
3. Turn the handle clockwise.

NOTE: This electronic combination lock has a power-down protection function, the code will not disappear.

SYSTEM INITIALIZATION

Open the gun safe, press the green setting button for 5 seconds, the system will restore the initialized settings and clear all passwords.

VIBRATION ALARM SETTING

1. The vibration alarm electronic lock has the functions of setting alert and eliminating alert.
2. Alert mode setting method: Touch to wake up the keypad, press "*" to enter the alert state.

LOW BATTERY ALERT

1. The gun safe uses four 1.5V alkaline batteries. If the voltage is insufficient, there will be an audible alert when the door is opened and the keypad light will flash for about 30 seconds to remind you that the batteries are low. You need to replace the batteries in time.
2. If the battery voltage is insufficient, you can use the emergency power supply or mechanical emergency key to open the safe.

ALARM FUNCTION

When continuously enter the wrong password 3 (5) times, the system will automatically alarm for 30 (60) seconds, enter the correct password can eliminate the alarm sound.

MUTE MODE

Touch to wake up the keypad, input "11", then press the "#", the buzzer will sound a long beep, indicating that all sounds are turned on or off successfully.

TECHNICAL PARAMETERS

1. Working power supply : 4 No. 5 "AA" alkaline batteries
2. Working voltage range : 4.2V-7V
3. Working undervoltage point : $4.6V \pm 0.20V$
4. Operating current : $\leq 380mA$
5. Static current : $35\mu A$

Q

What if I lose my keys?

A

Please contact us by email for the key code (the code is next to the keyhole) and we will make a replacement for you!

Q

What if the battery is run off?

A

 
Open the battery box cover, Insert 4AA batteries, Insert the external battery box hole and enter the code to open the gun safe

Easy Installation

1. Drill appropriately sized holes wherever you like.

2. Hand thread the expansion screws through the pre-drilled holes in the safe.

3. Tighten the screws and check that they are secure.

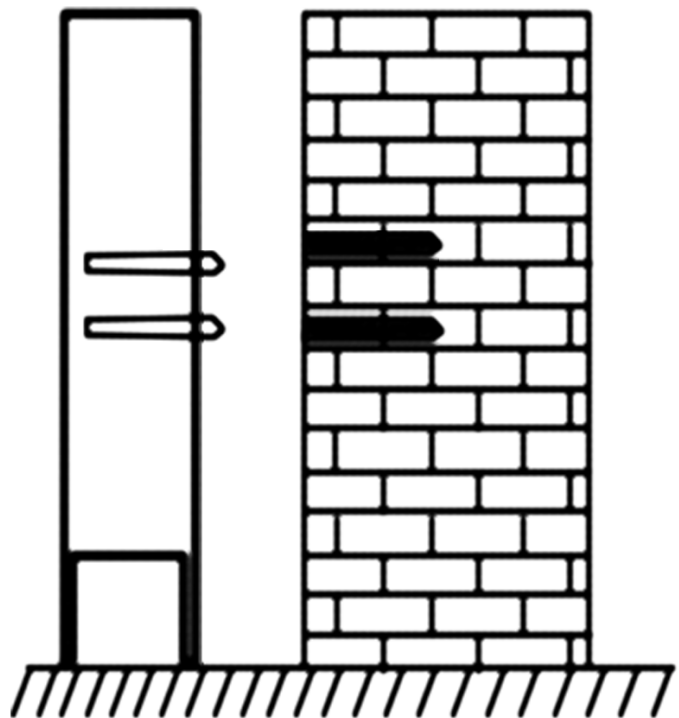

WARNING



Tip Over Hazard

- Please secure the gun safe to a wall or floor before use to prevent children or adults from tipping the safe over and causing death or serious injury.
- Children should not play around the safe at any time.

PERFECT SERVICE

Hi, my order number is
111-*****, I have problems
with.....



Dear Customer.
Thank you very much for contacting us
through your e-mail address.
You are now our VIP member!
Could you please describe your problem in
detail?
Attach a picture so we can solve it faster.
We will provide you with a perfect solution.
Best wishes to you!



Please email us to get a special VIP discount code before your next order.



Problem with the order? Please email us, give us a chance to help you firstly.



Do you love your new product? Help others find it by leaving a product review online!

TOP QUALITY, AFFORDABLE SECURITY!