


Assembly Instructions

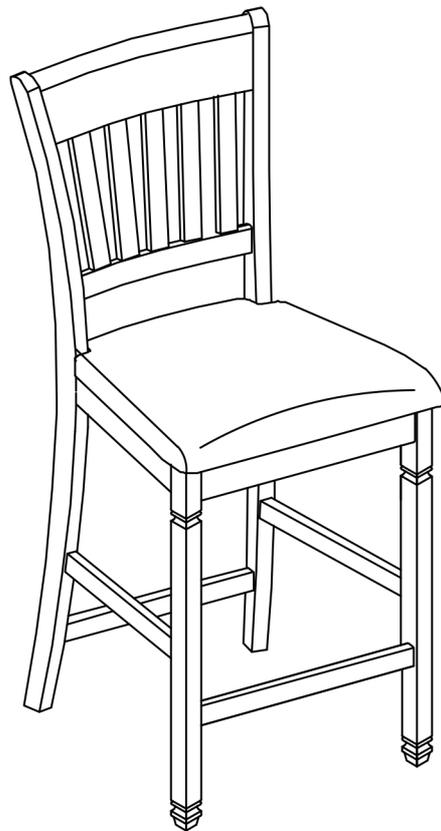

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



Phillips Screwdriver




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

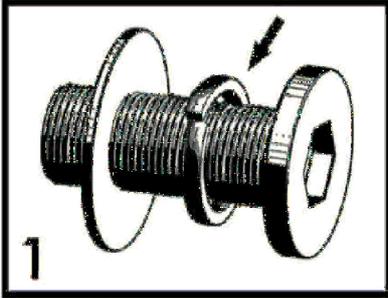


1
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

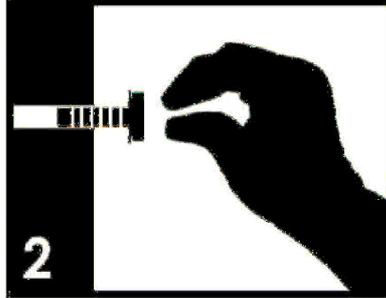


2
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

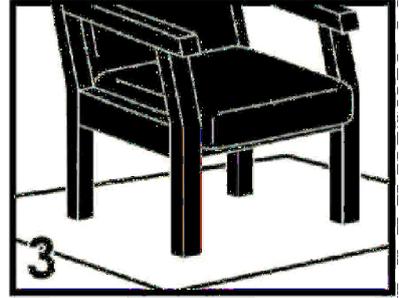


3
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

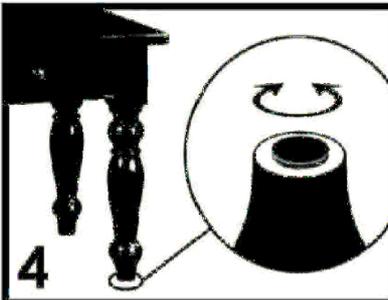

4
Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

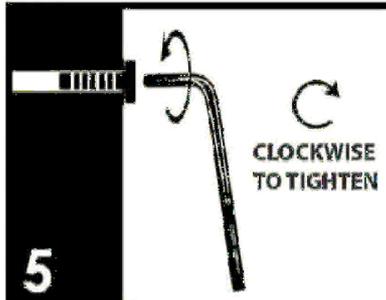

5
Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

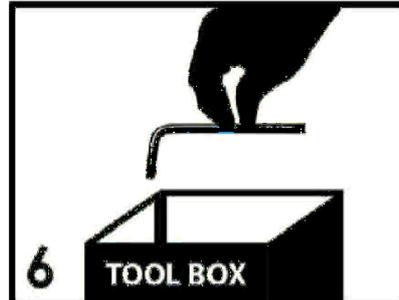


6
Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



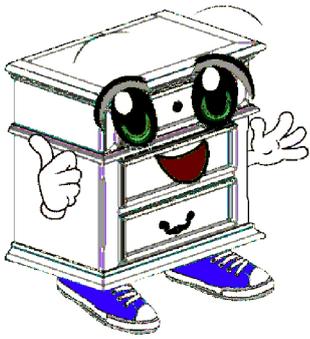






Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

Parts List

Hardware List

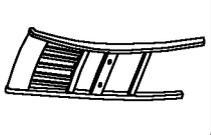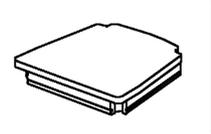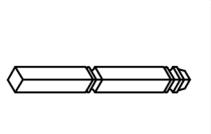- 
#1 x 1pc x2
Chair Back
- 
#2 x 1pc x2
Cushion Frame
- 
#3 x 2pcs x2
Front Legs (L&R)
- 
#4 x 1pc x2
Front Strecher
- 
#5 x 2pcs x2
Side Strecher (L&R)

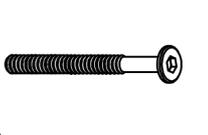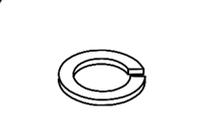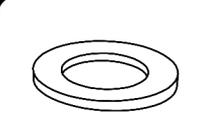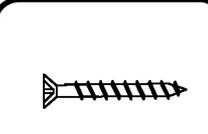
- 
#A x 4pcs x 2
Bolt Ø1/4" x 3-1/8"
- 
#B x 4pcs x 2
Bolt Ø1/4" x 2-3/8"
- 
#C x 2pcs x 2
Bolt Ø1/4" x 1-1/2"
- 
#D x 10pcs x 2
Lock Washer Ø1/4"
- 
#E x 10pcs x 2
Flat Washer Ø1/4"
- 
#F x 1pc x 2
Allen Wrench 4mm
- 
#G x 6pcs x 2
Screw #8 x 1-1/2"

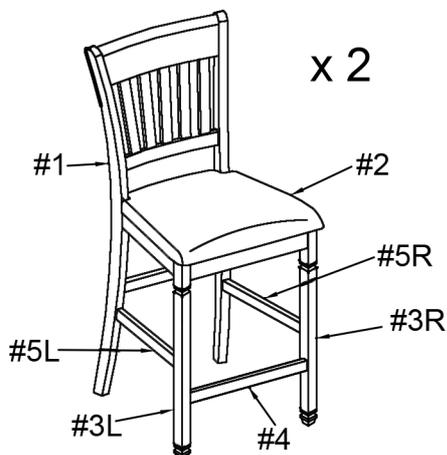




Prepare 2 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#C). Align cushion frame (#2) to the holes of the chair back (#1). Secure holes of the cushion frame (#2) to the chair back (#1) by using bolts (#C). Do not fully tighten bolts (#C).


#C x 2pcs
#D x 2pcs
#E x 2pcs

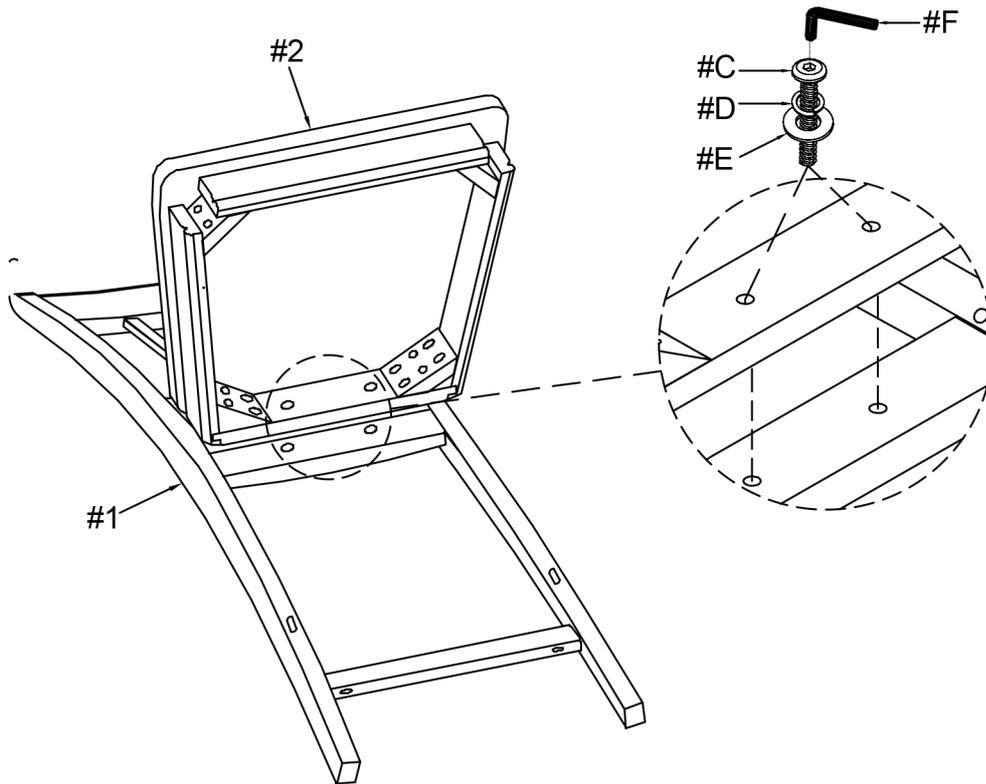

Prepare 4 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#A). Secure corner holes of the cushion frame (#2) to the chair back (#1) by using bolts (#A). Fully tighten bolts (#A,C).


#A x 4pcs
#D x 4pcs
#E x 4pcs

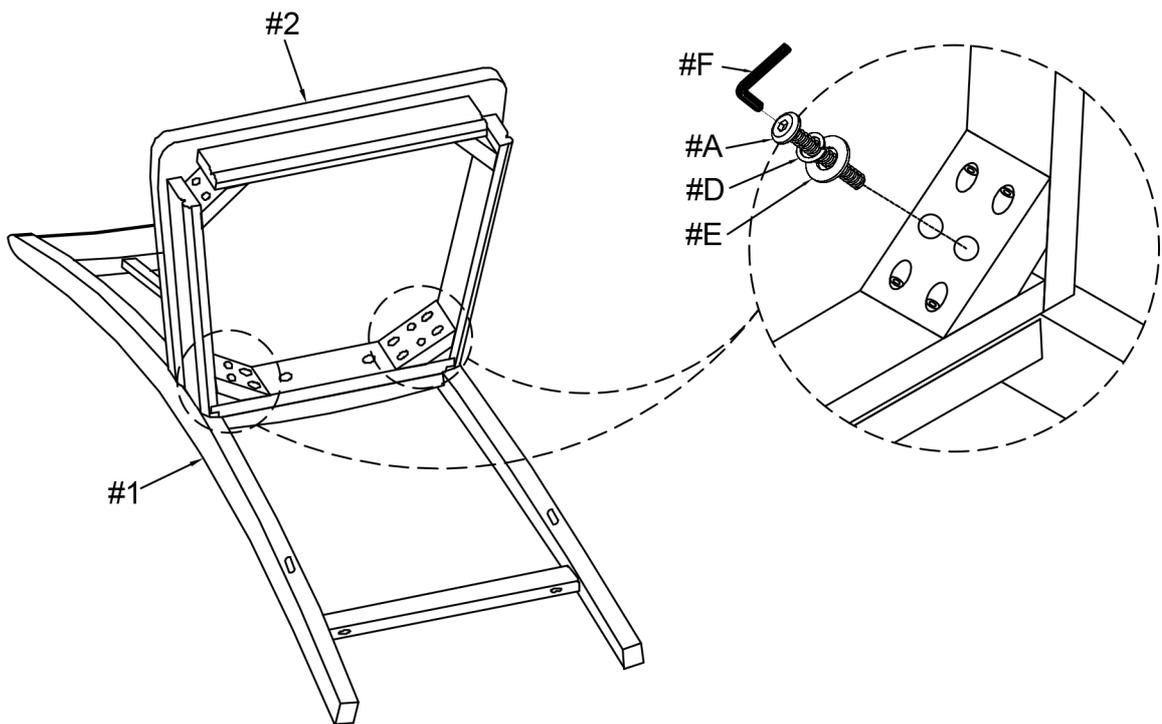

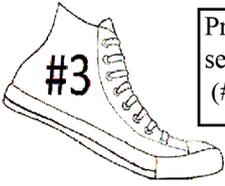

Prepare 4 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#B). Align and secure front legs (#3R/L) to the bench by using bolts (#B). Align side stretchers (#5R/L) and front stretchers (#4) to the gaps of the legs. Fully tighten bolts (#B) on the front legs (#3R/L).

#B x 4pcs
#D x 4pcs
#E x 4pcs

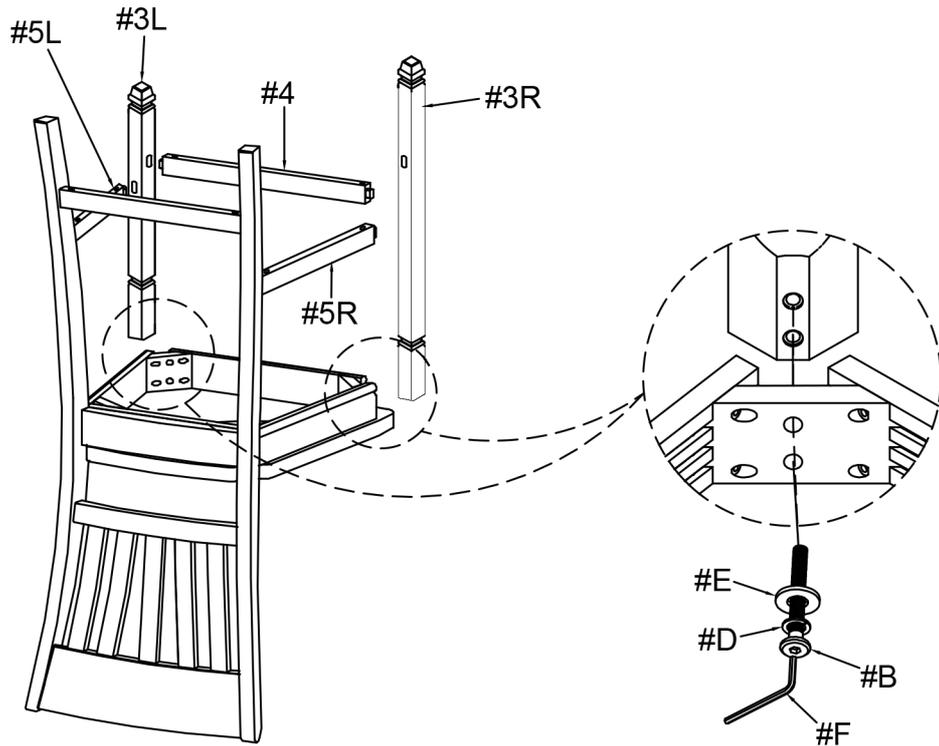

Secure stretchers by using screws (#G).

#G x 6pcs

