 
 


ASSEMBLY INSTRUCTIONS

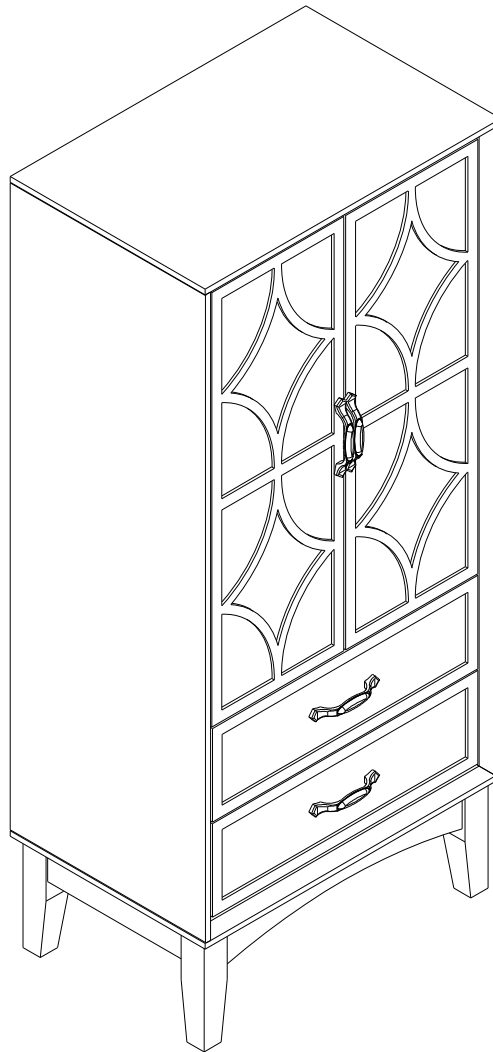 


Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

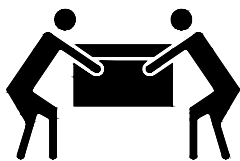

Recommended installers:2

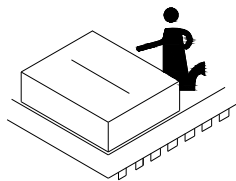















 
Put a carpet on the floor
before unpacking

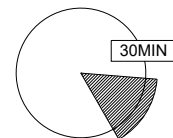

Estimate installation time:
30minutes








ASSEMBLY INSTRUCTIONS

               PART LIST

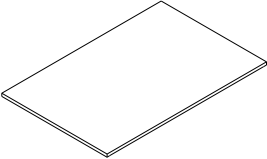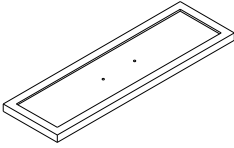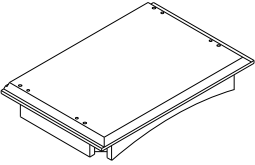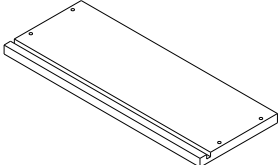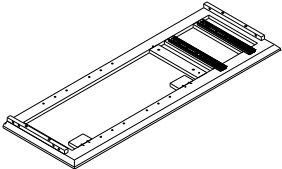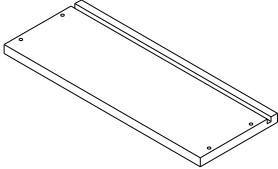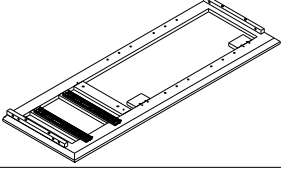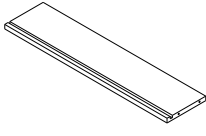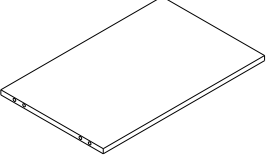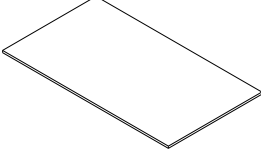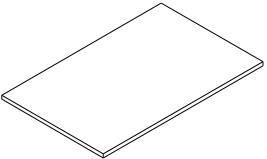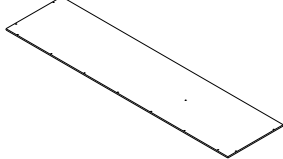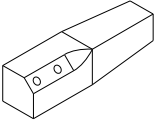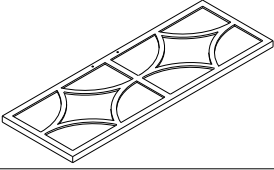
Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
(A)		X1	(I)		X2
(B)		X1	(J)		X2
(C)		X1	(K)		X2
(D)		X1	(L)		X2
(E)		X1	(M)		X2
(F)		X2	(N)		X2
(G)		X4	(O)		X1
(H)		X2			

ASSEMBLY INSTRUCTIONS

       HARDWARE LIST


Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
1	 Ø8*30mm	X12+1	10	 Ø3*12mm	X4
2		X4	11	 Ø3*12mm	X24+2
3		X4	12		X8
4	 Ø1/4"*2"	X8	13	 Ø4*25mm	X2
5	 Ø1/4"*1-1/4"	X8	14	 Ø3*15mm	X24+2
6		X16+1	15	 Ø3.5*30mm	X16+1
7		X16+1	16		X1
8		X4	17		X1
9	 Ø5/32"*3/4"	X8			

 ASSEMBLY INSTRUCTIONS

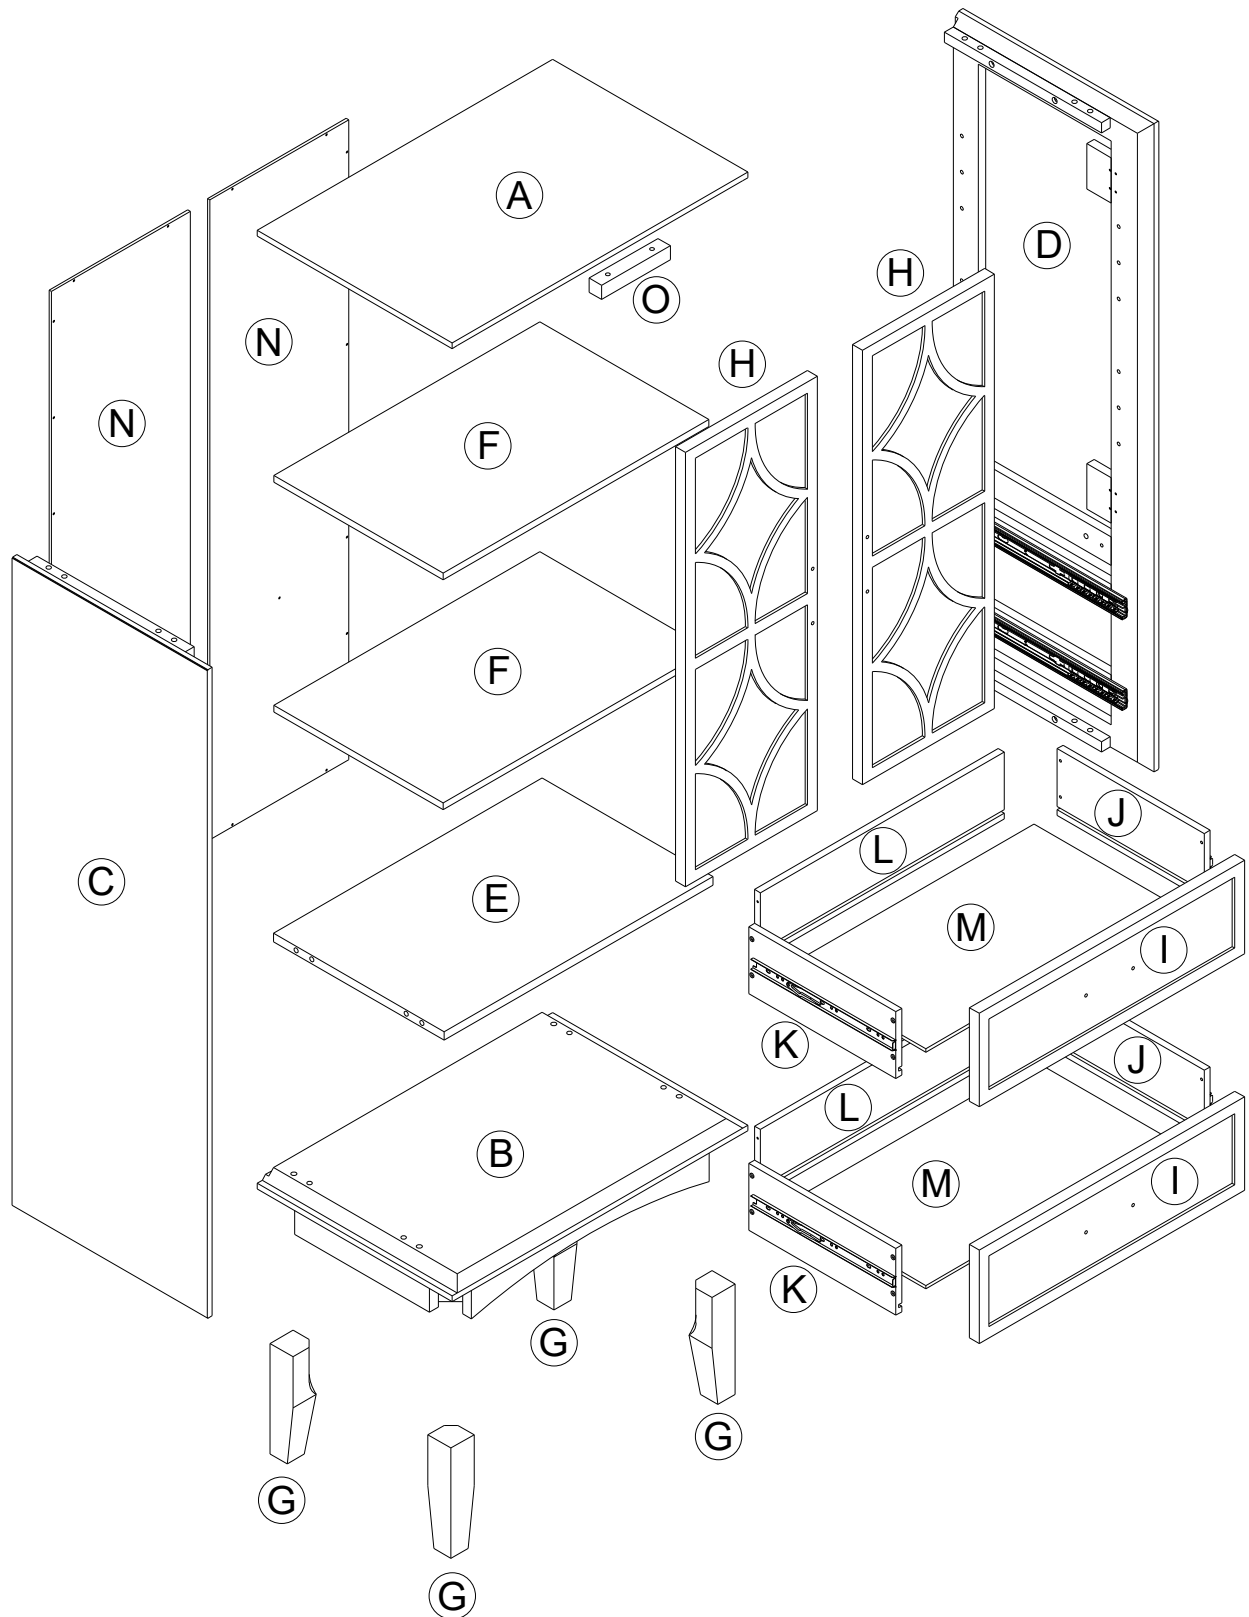


ASSEMBLY INSTRUCTIONS

 1

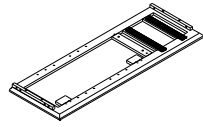



Ⓒ 1PC

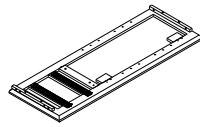 

Ⓓ 1PC





  ② 4PCS

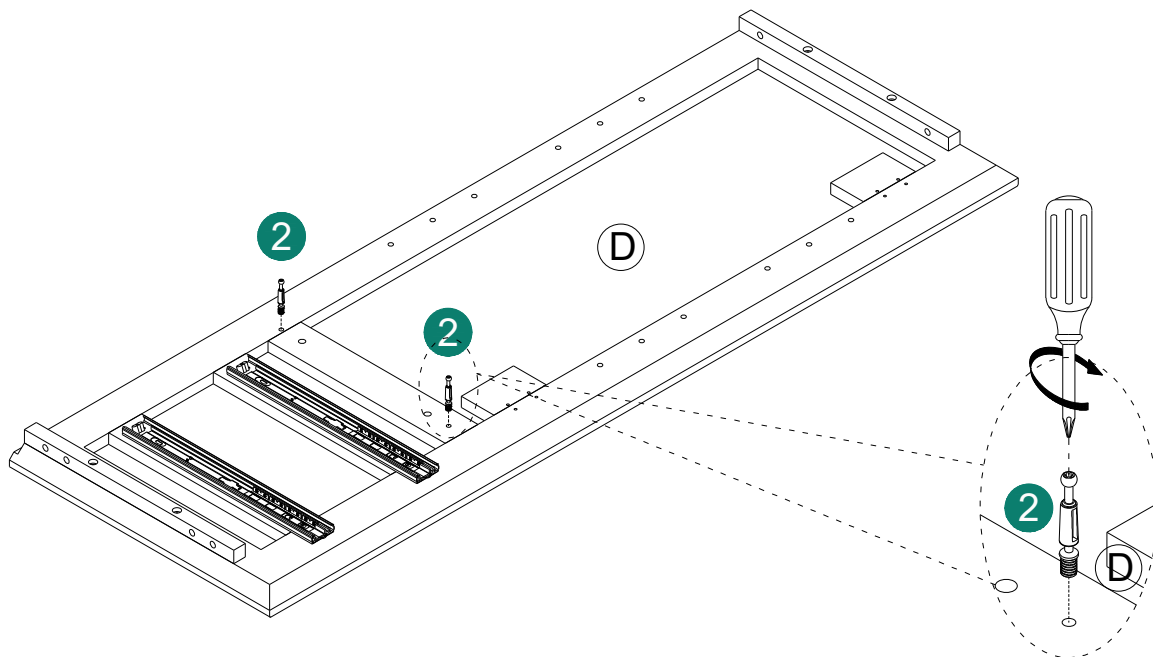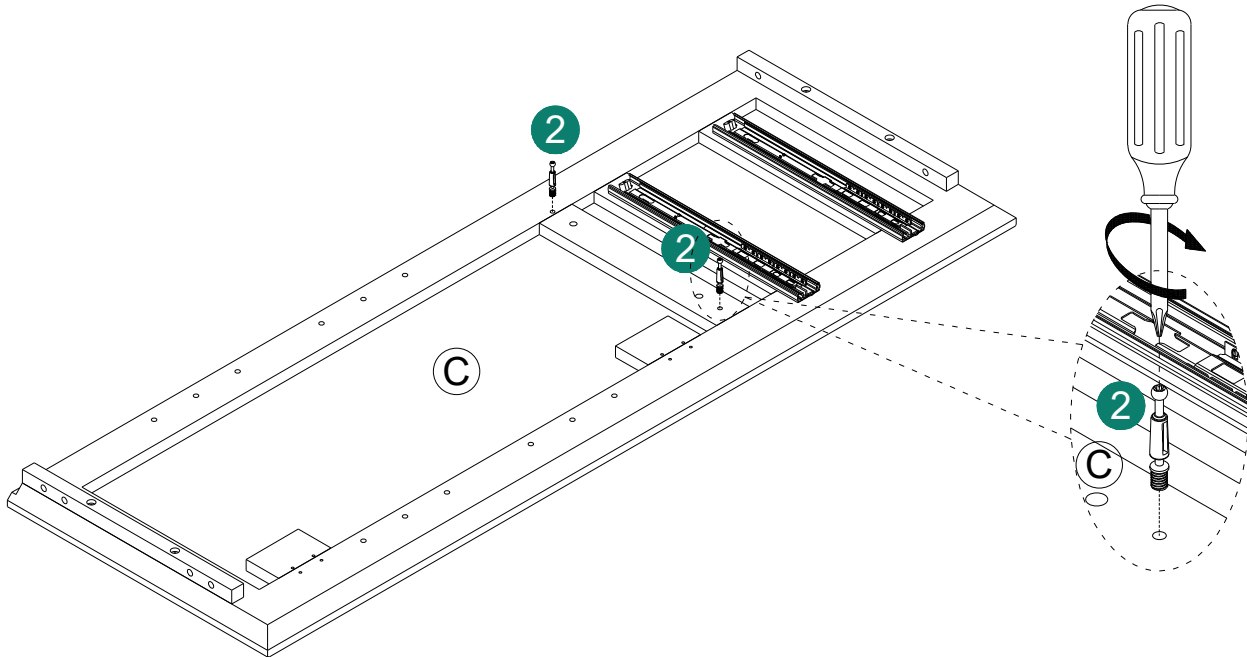


ASSEMBLY INSTRUCTIONS

  2

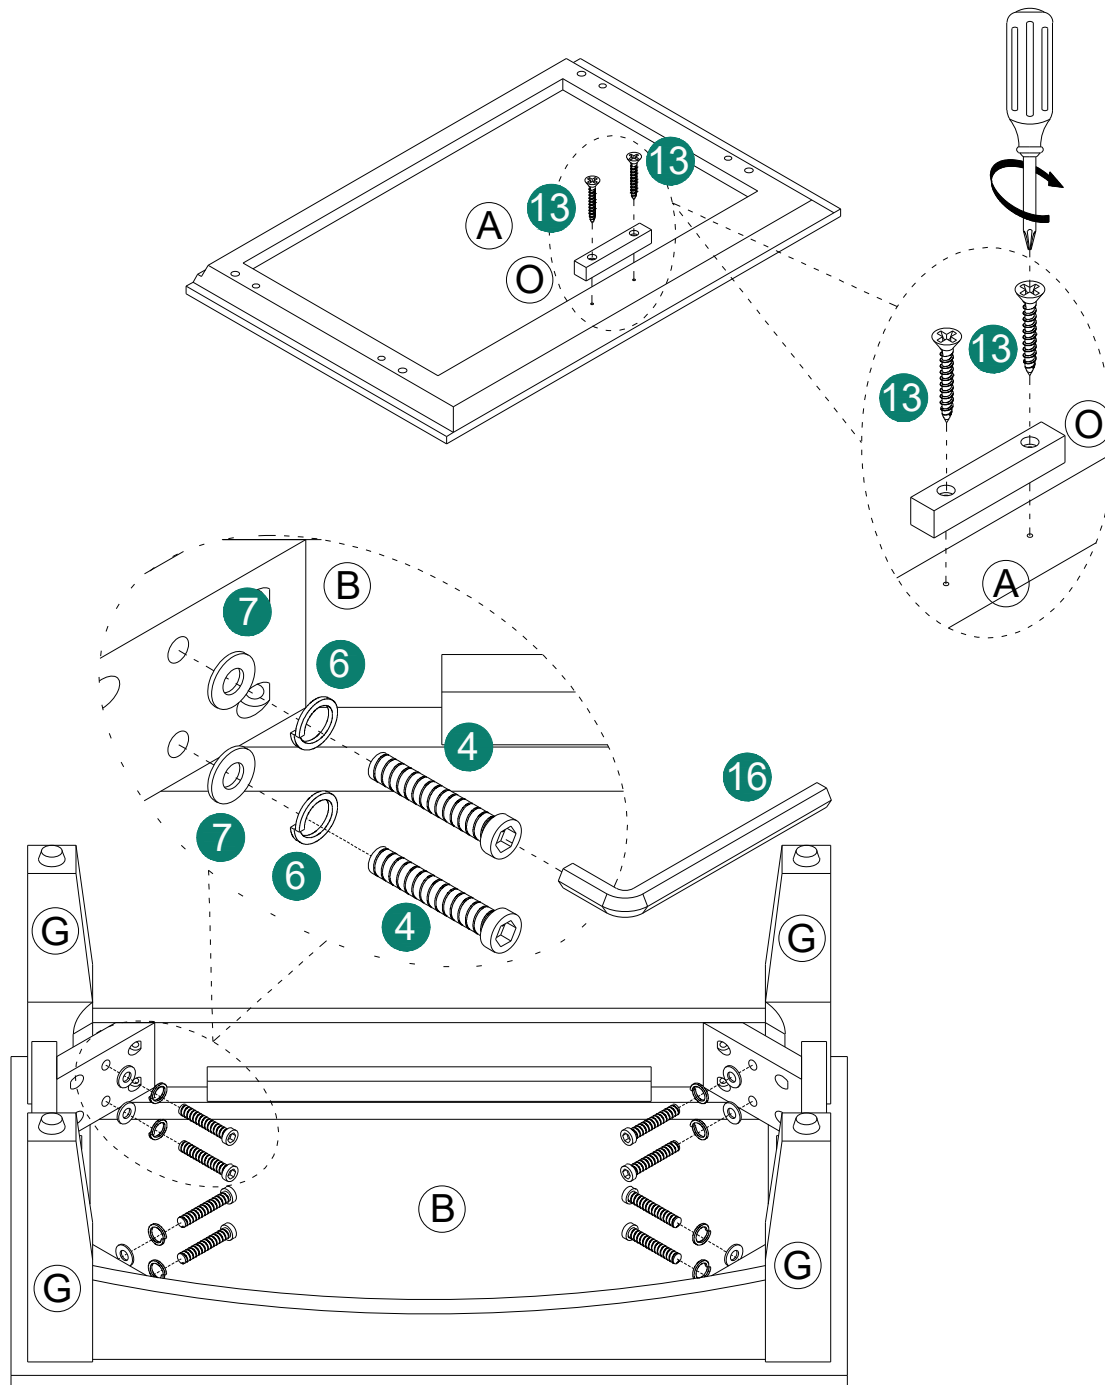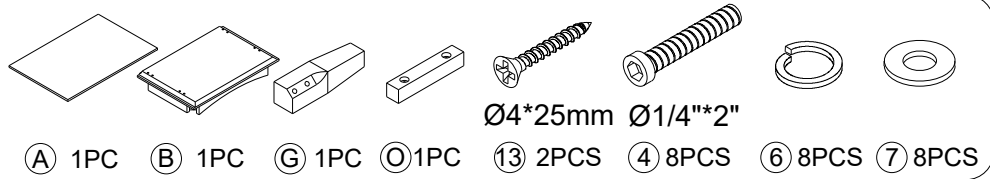


ASSEMBLY INSTRUCTIONS

 
3

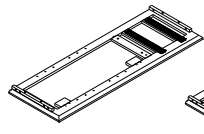


③ 1PC

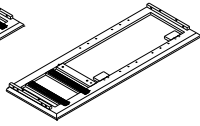 


④ 1PC

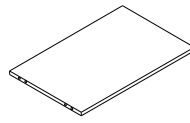 


⑤ 1PC

 

③ 4PCS

 

① 4PCS

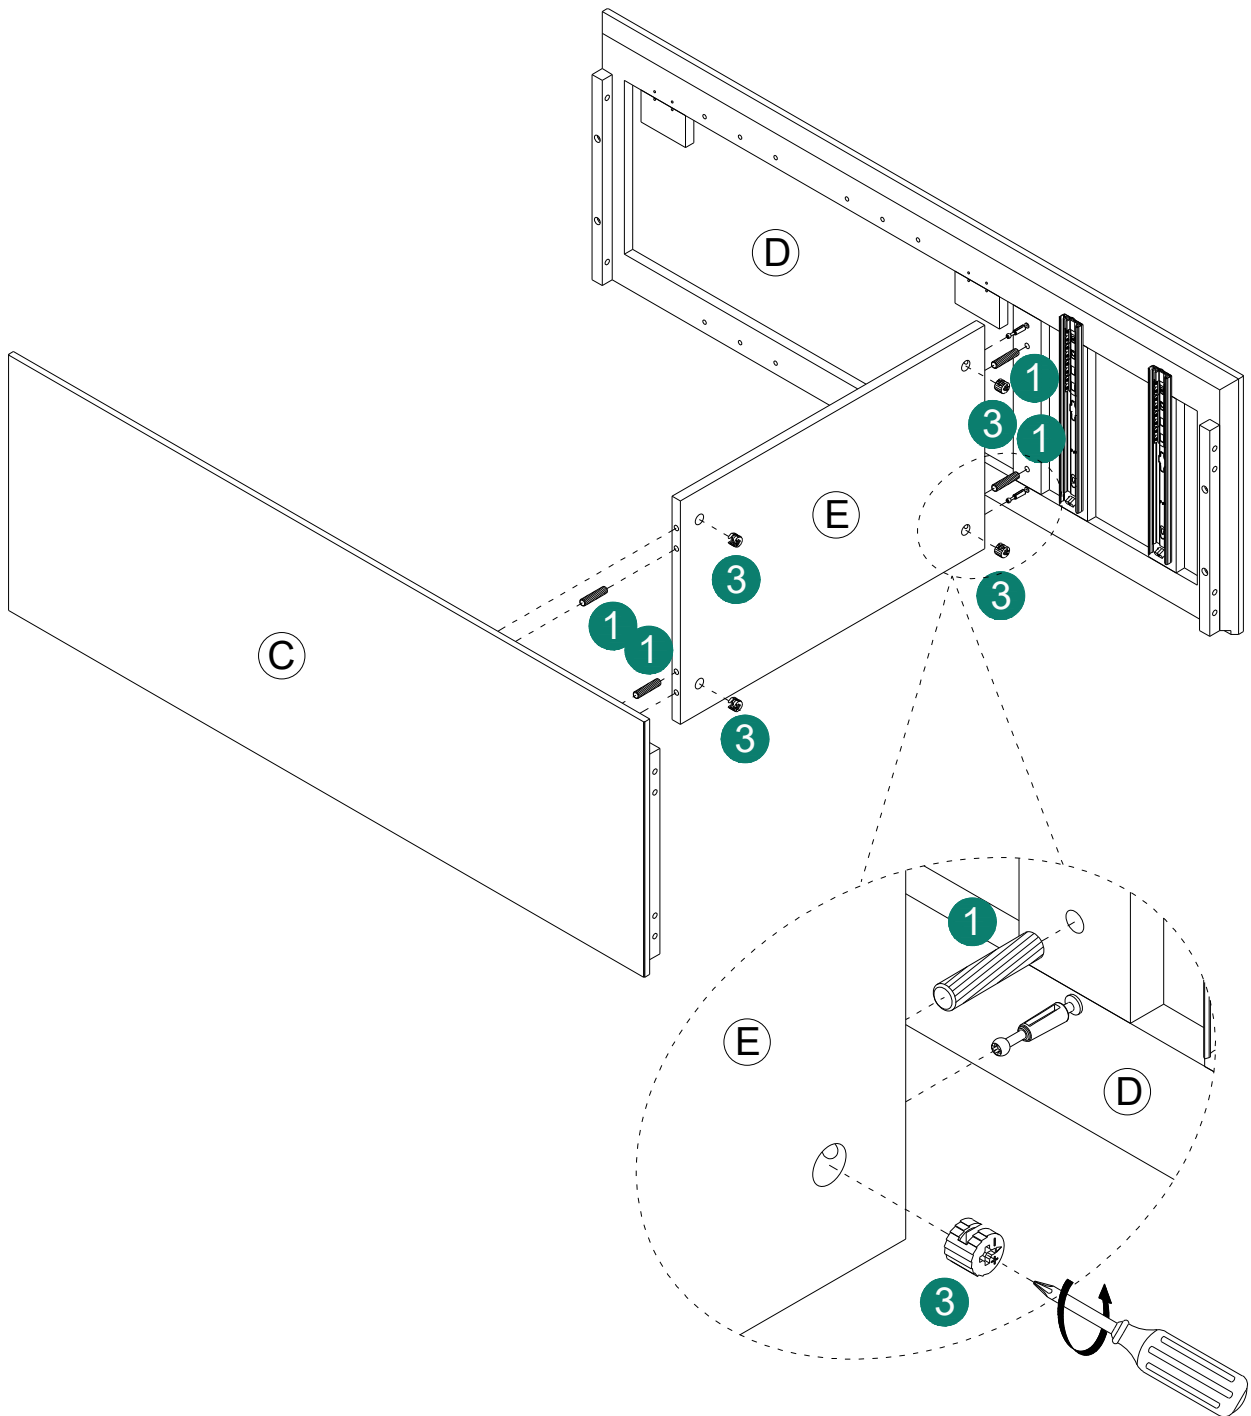 

ASSEMBLY INSTRUCTIONS

 
4

Ø1/4"×1-1/4"
⑤ 4PCS

⑥ 4PCS

⑦ 4PCS

① 4PCS

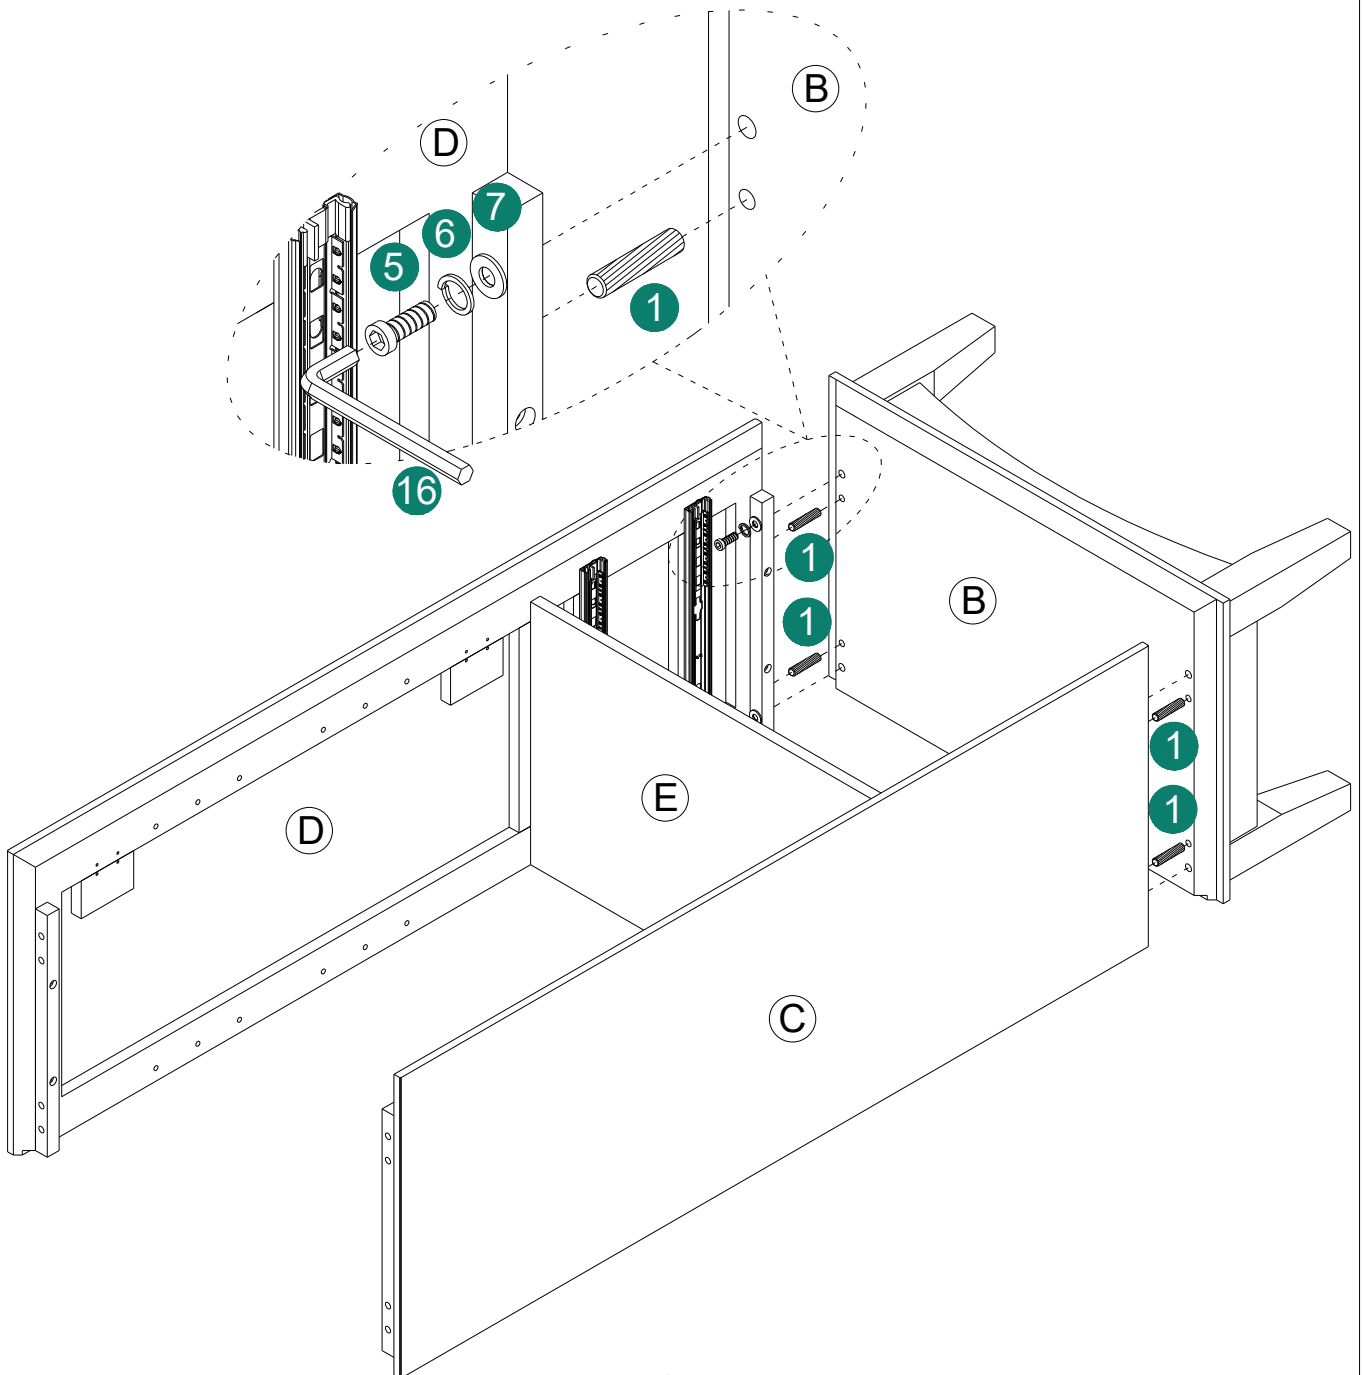


ASSEMBLY INSTRUCTIONS


5


Ø1/4"×1-1/4"
⑤ 4PCS


⑥ 4PCS

 

⑦ 4PCS


① 4PCS

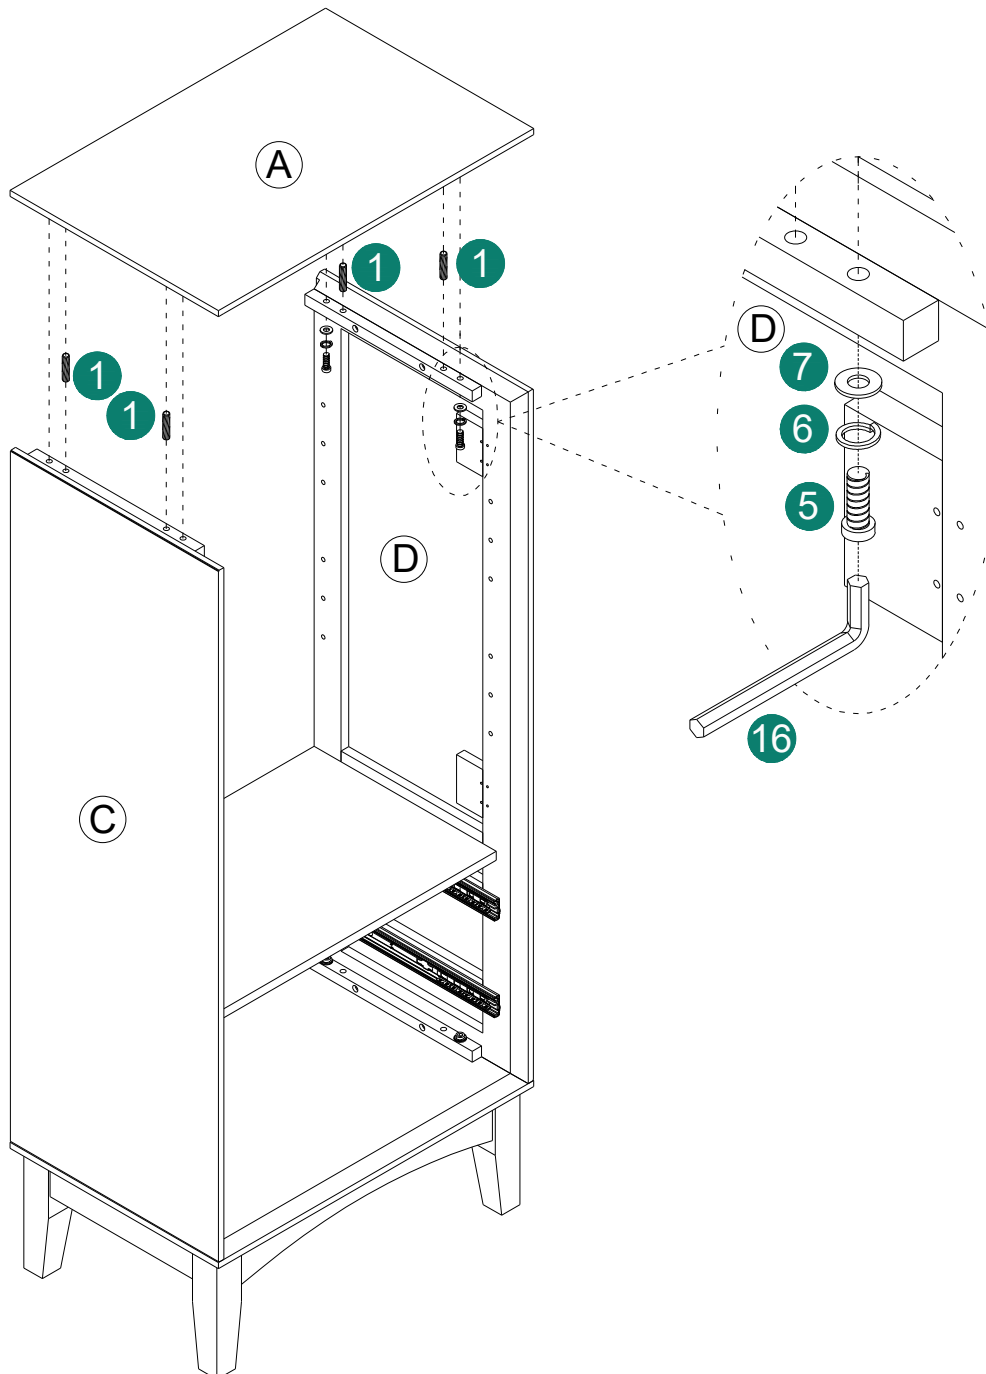 


ASSEMBLY INSTRUCTIONS

 6

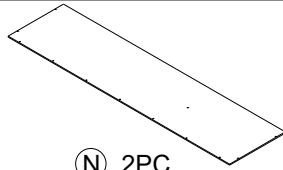


① 2PC

 


Ø3*15mm

 ⑭ 24PCS

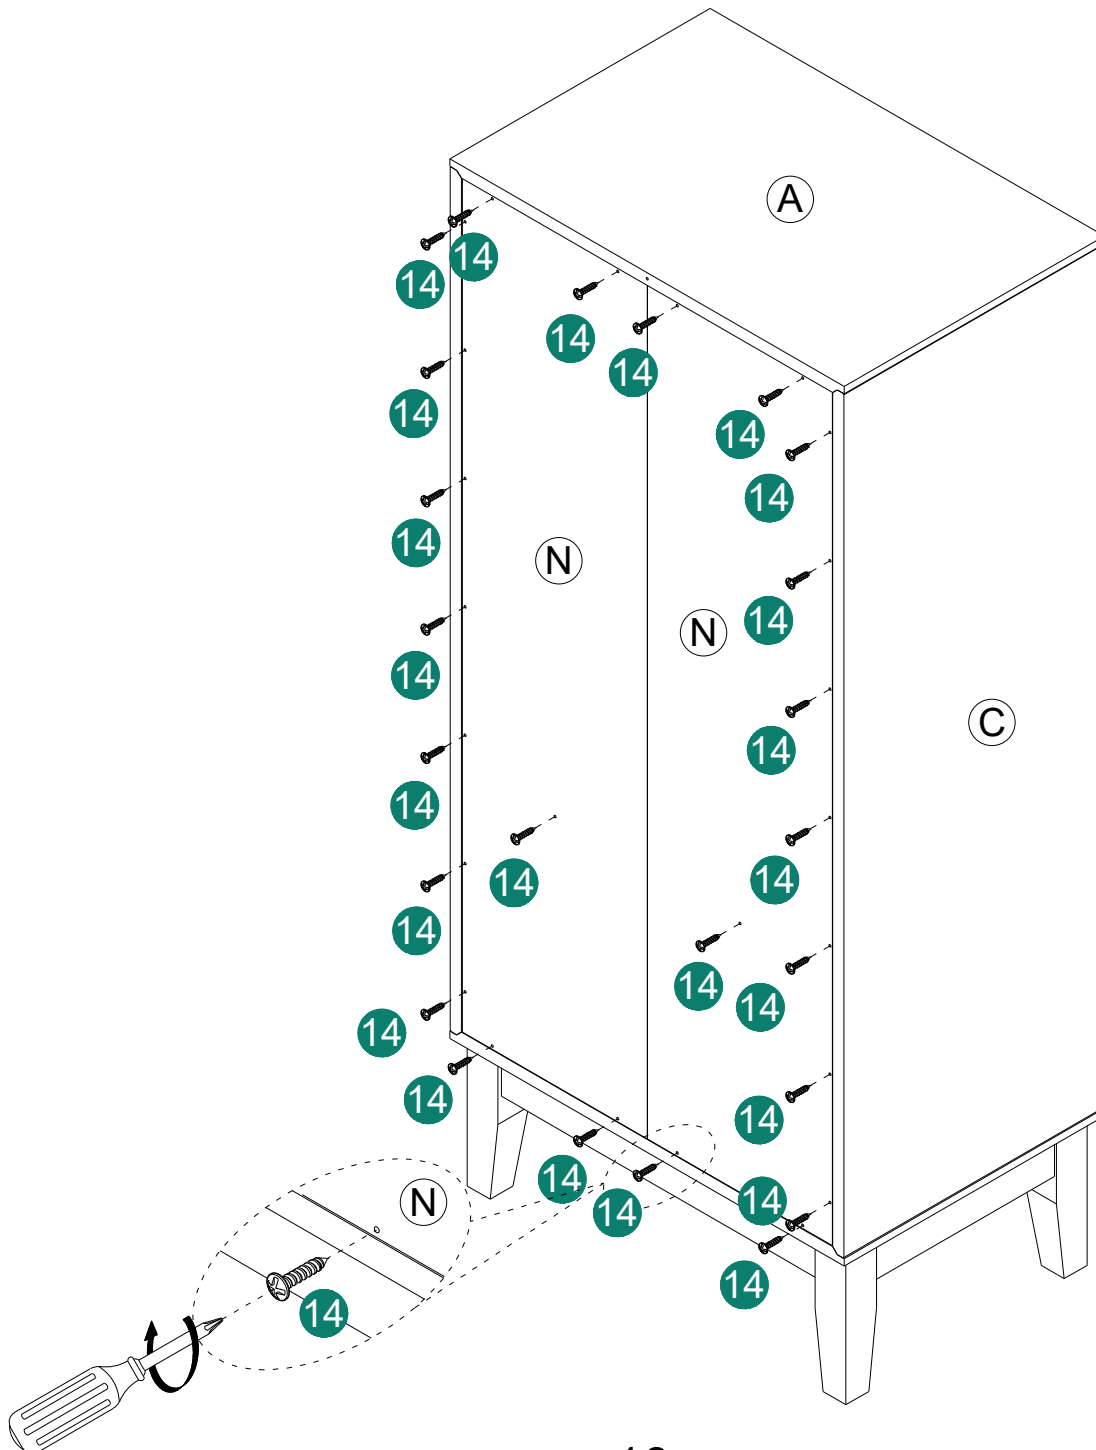

ASSEMBLY INSTRUCTIONS

 
7

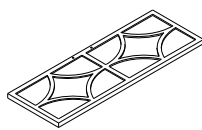

(H) 2PC




 (8) 2PCS



Ø5/32"×3/4"





 
(9) 4PCS



(10) 4PCS



     (11) 8PCS

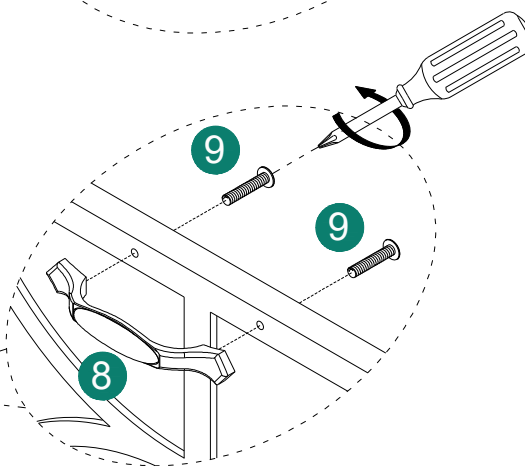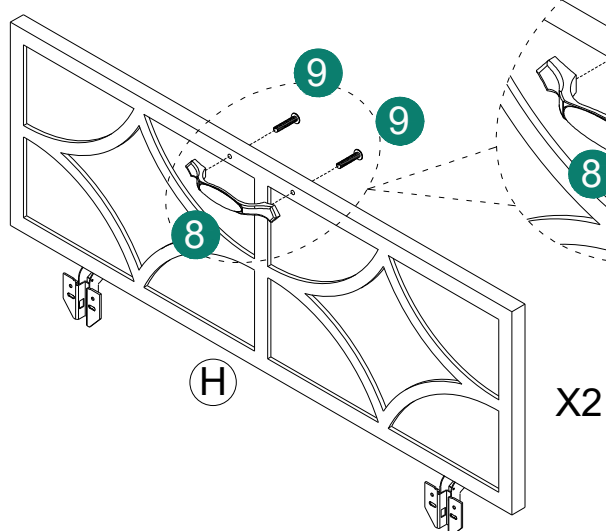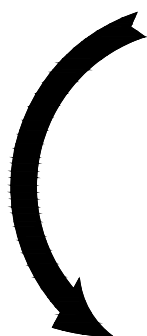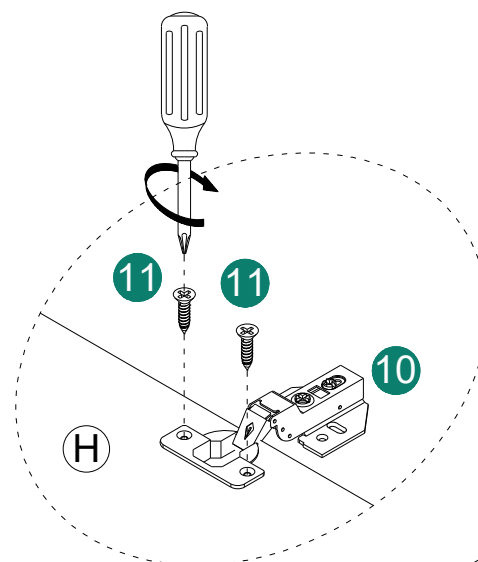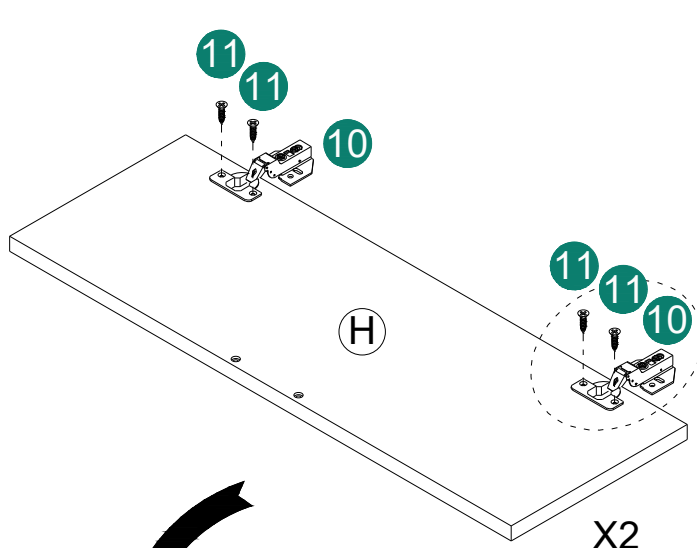


ASSEMBLY INSTRUCTIONS


8



 12 8PCS




11 16PCS

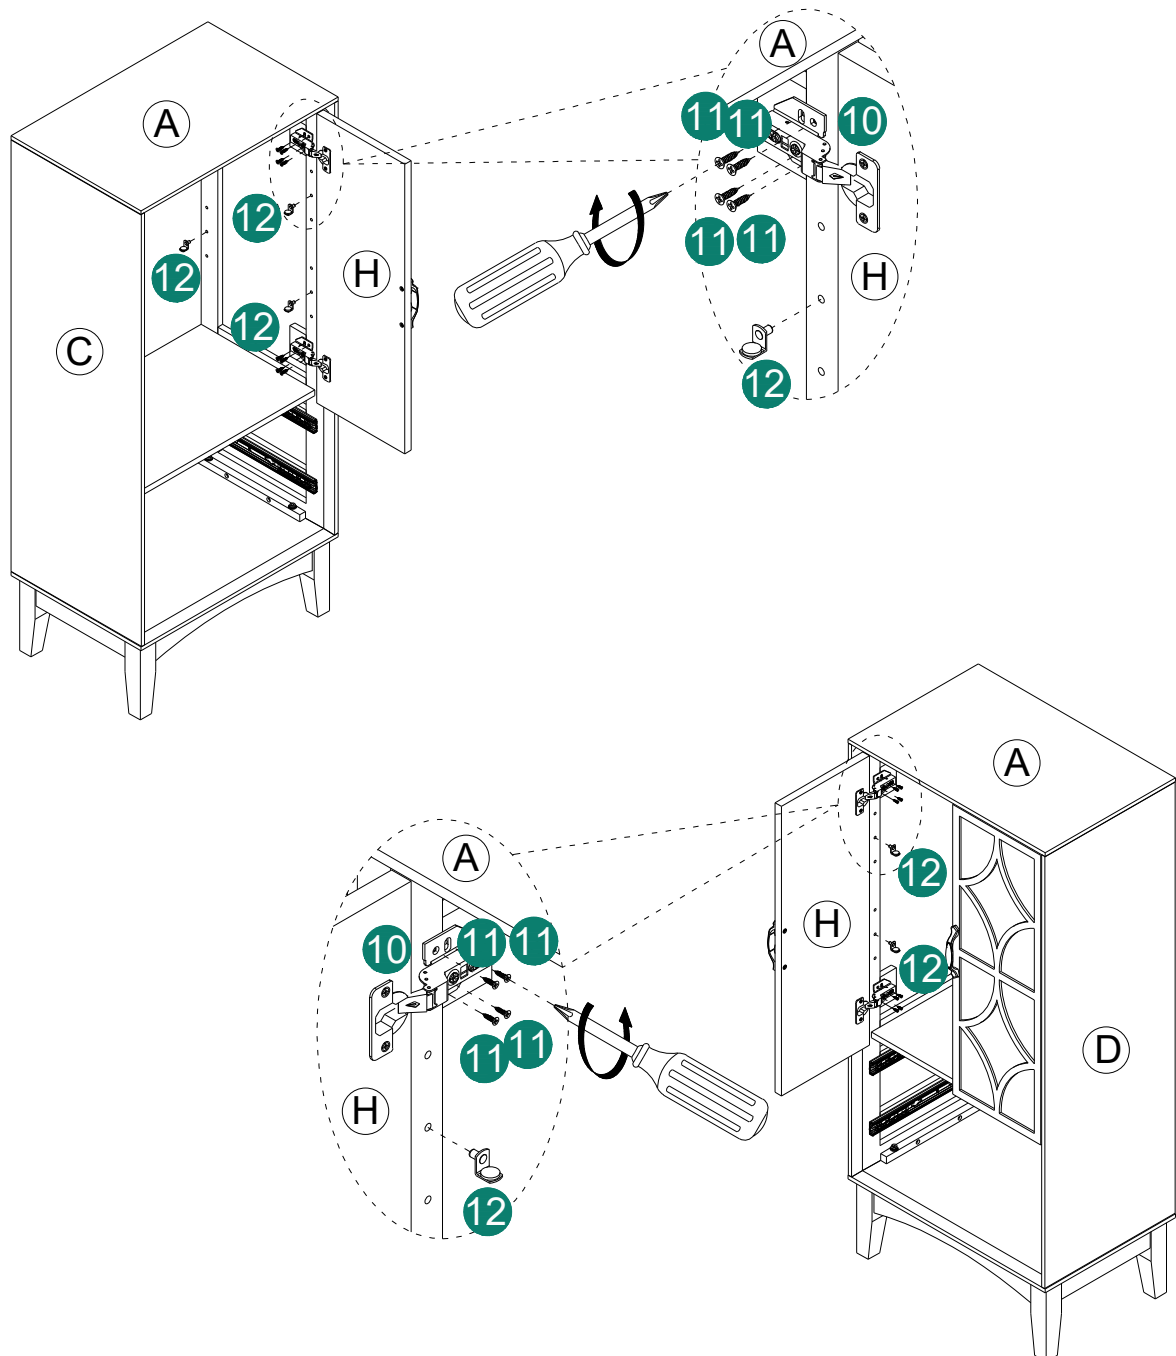 

ASSEMBLY INSTRUCTIONS

 9

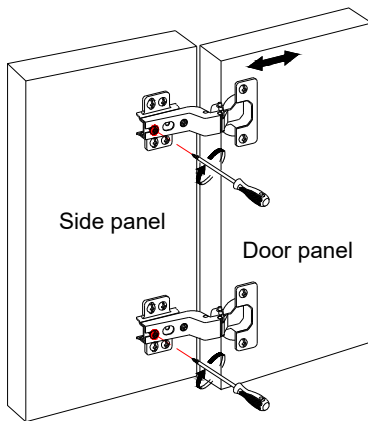


1

Front-to-Back Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved front-back.

 Adjustment range: 4mm

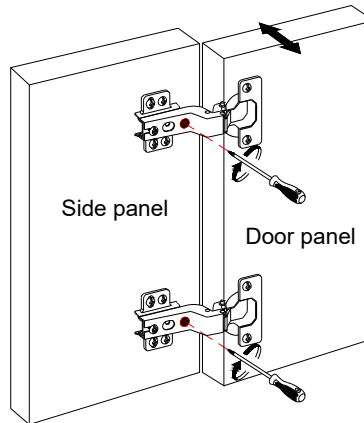


2

Left-Right Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved left-right.

 Adjustment range: 3mm

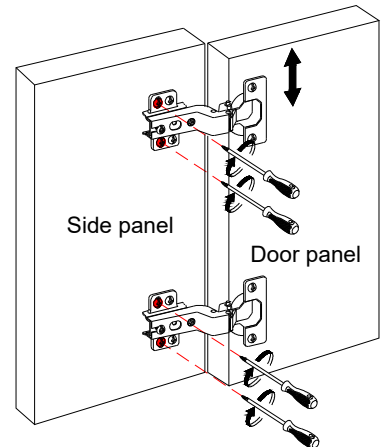

3

Up-Down Direction Adjustment:

 
Rotate the screws on the door hinges shown in the image. The door panel can be moved up-down.

Adjustment range: 4mm

ASSEMBLY INSTRUCTIONS


10

Common Door Panel Issues:

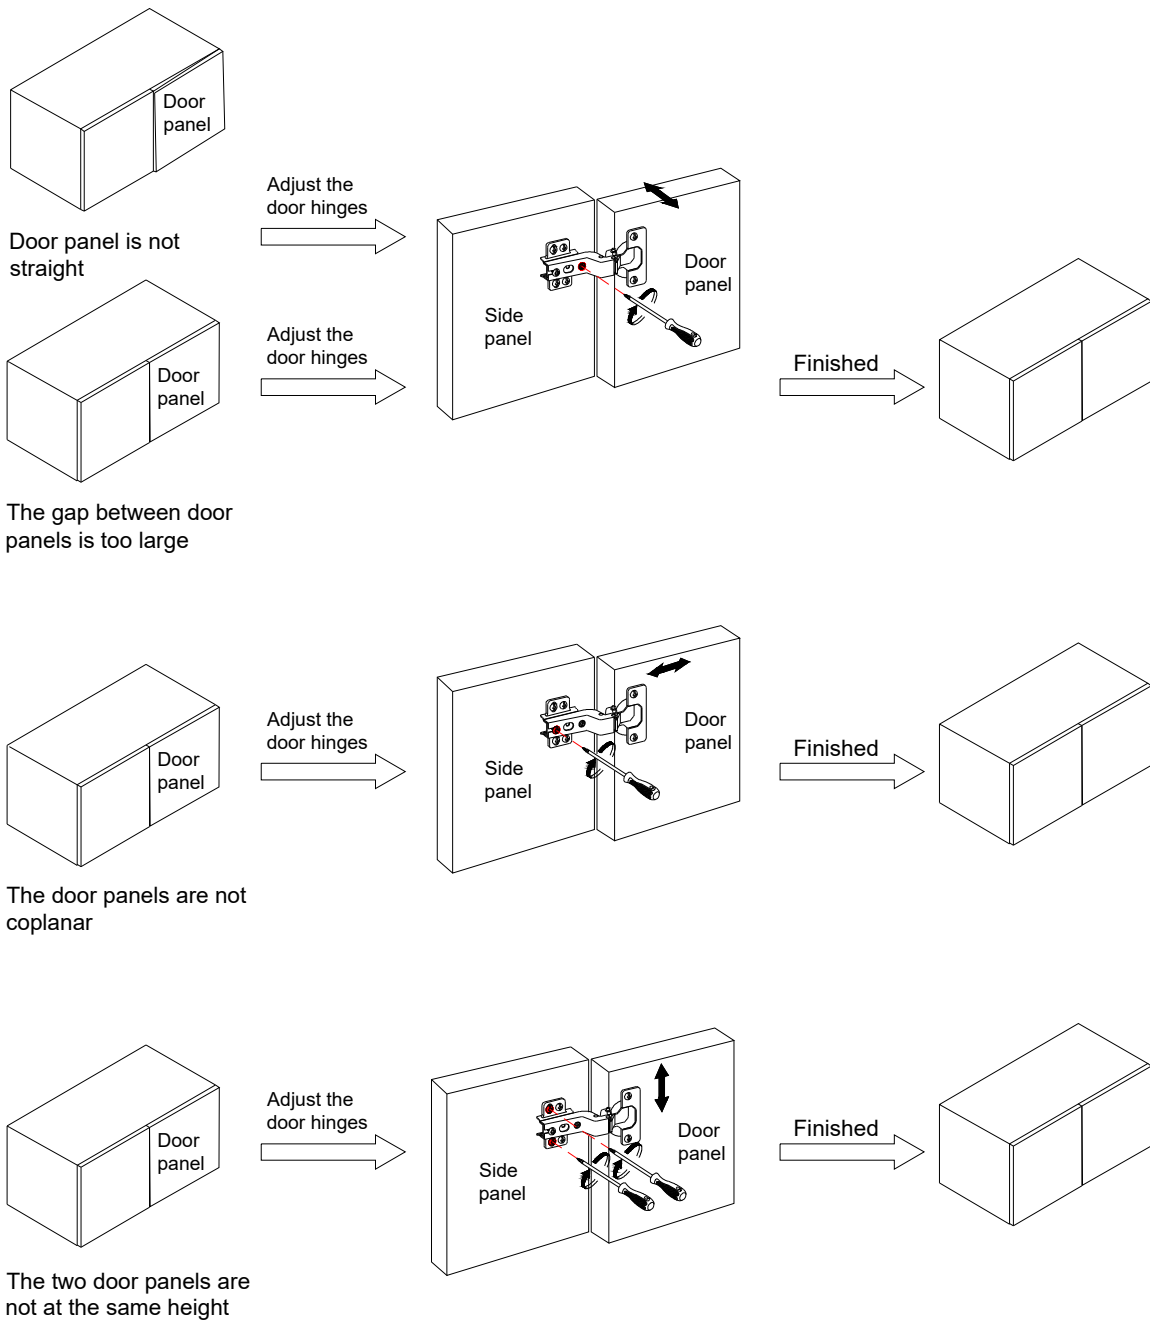


ASSEMBLY INSTRUCTIONS

 11

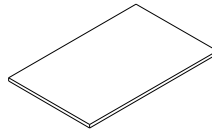


 (F) 2PC

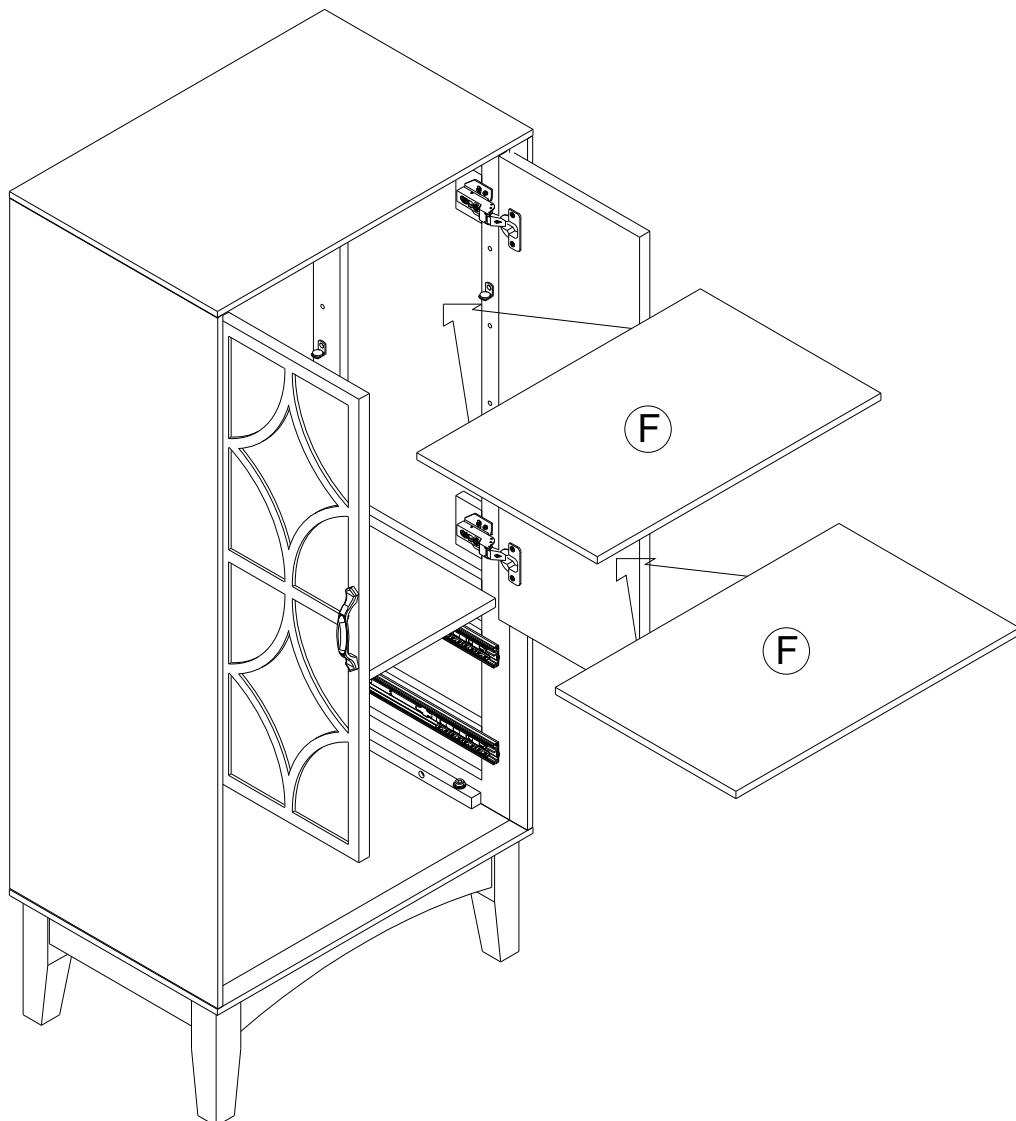


ASSEMBLY INSTRUCTIONS

 
12




Ⓘ 2PC

 


Ⓚ 2PC

 

Ⓙ 2PC

 


Ⓜ 2PC

 


Ø3.5*30mm

 15 8PCS

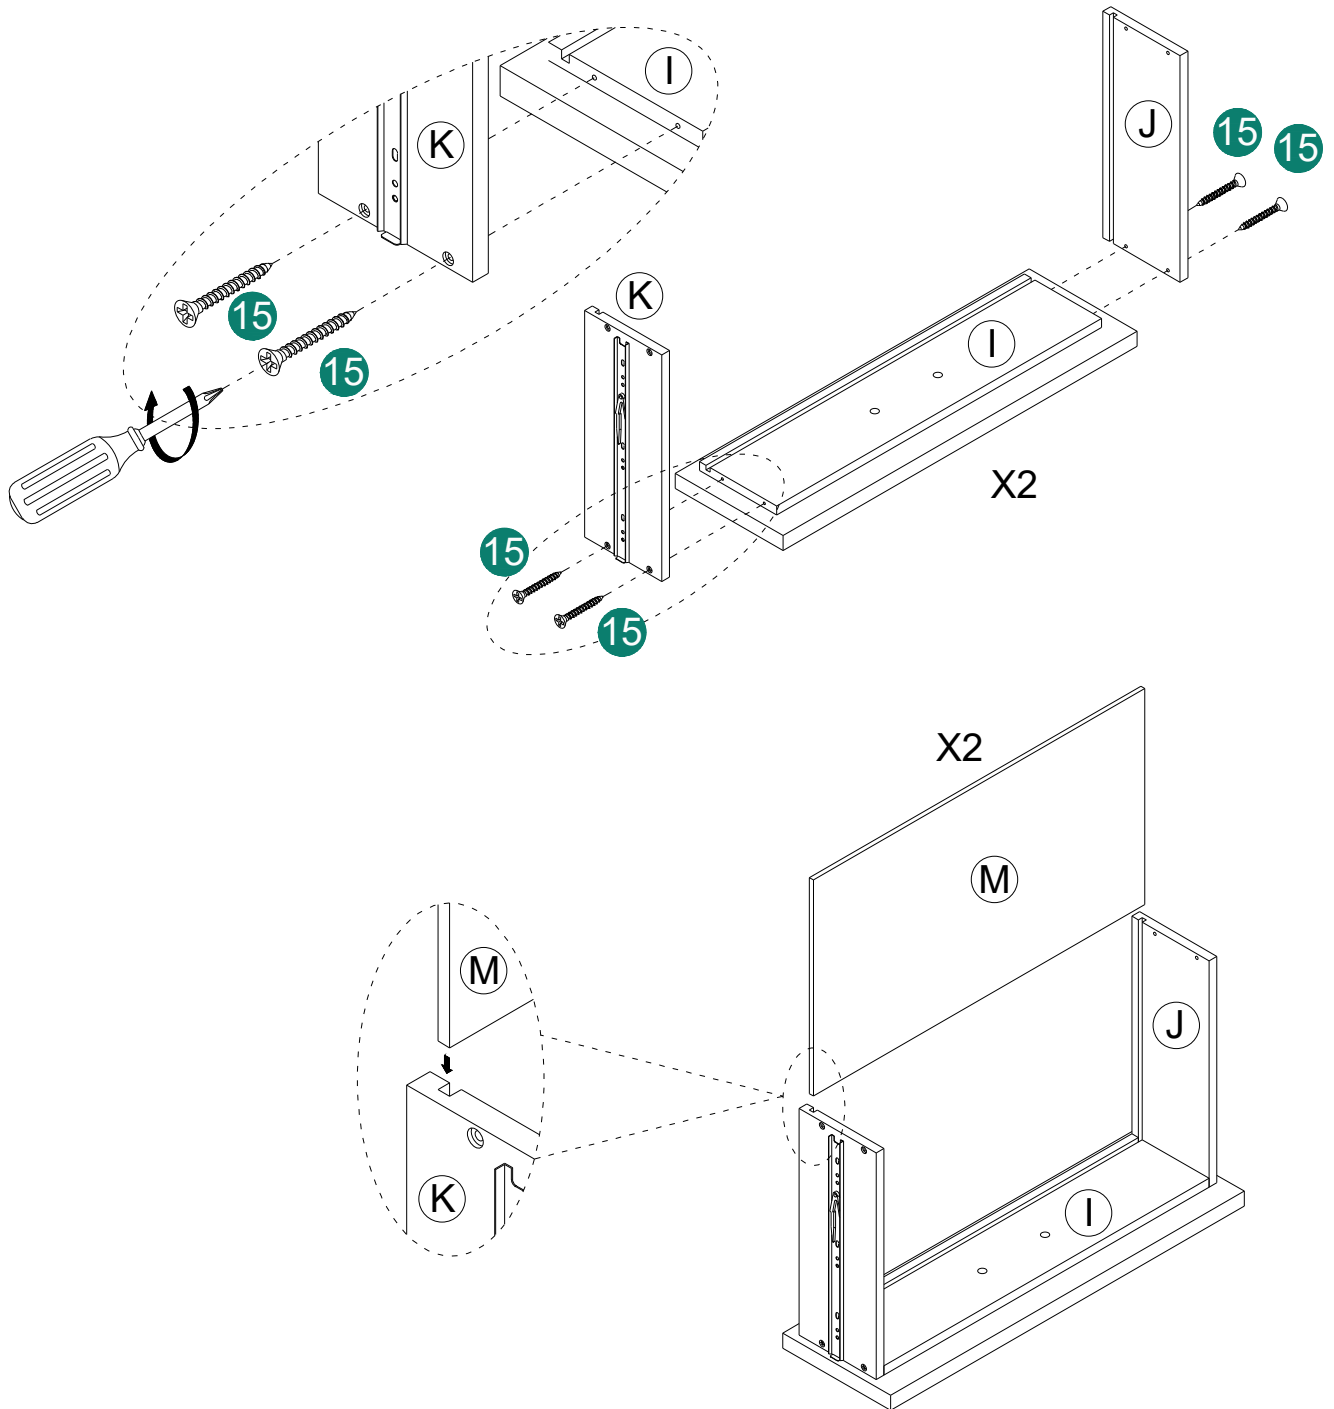

ASSEMBLY INSTRUCTIONS

 
13

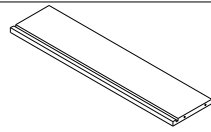

(L) 2PC




 
Ø3.5*30mm
(15) 8PCS



(8) 2PCS




  Ø5/32"*3/4"
(9) 4PCS

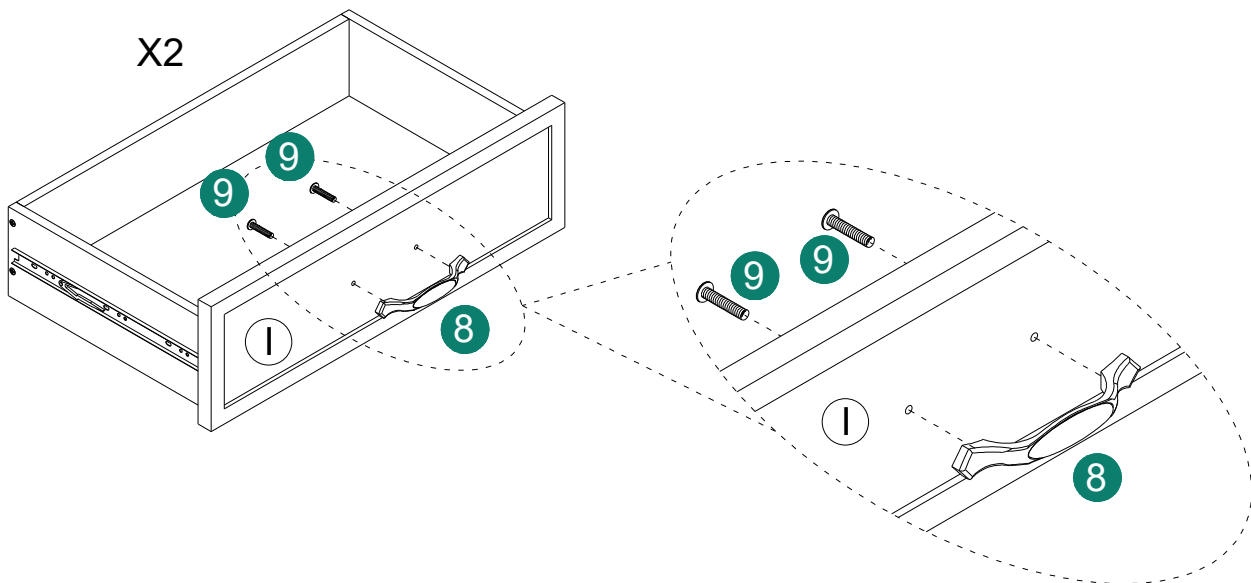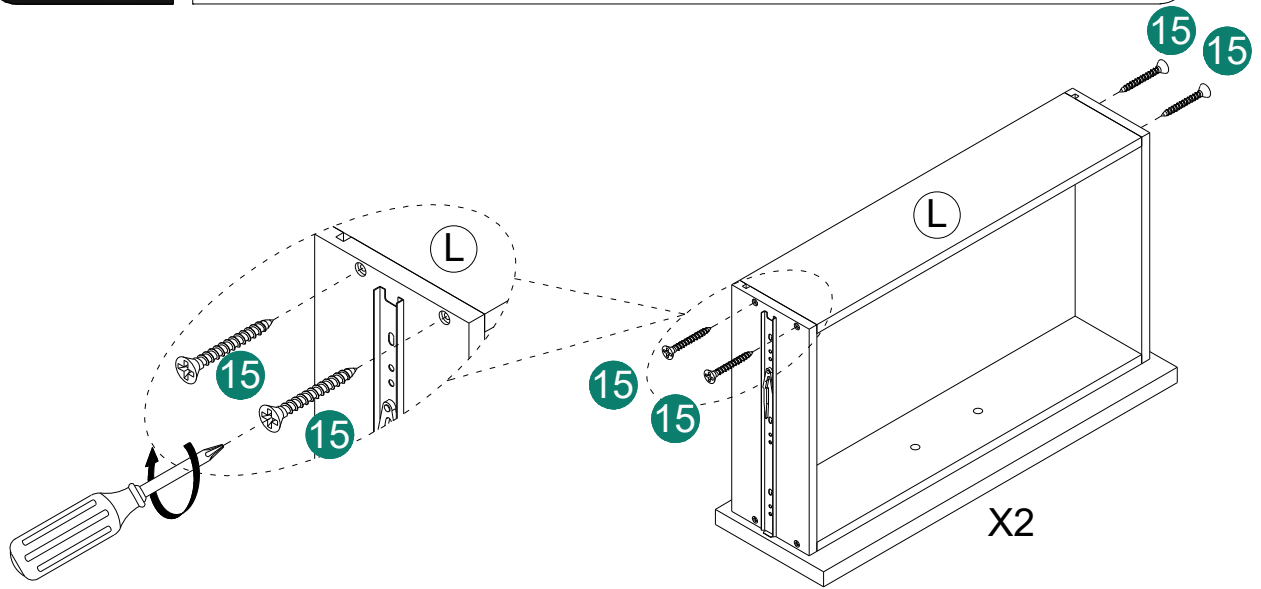

ASSEMBLY INSTRUCTIONS

 14

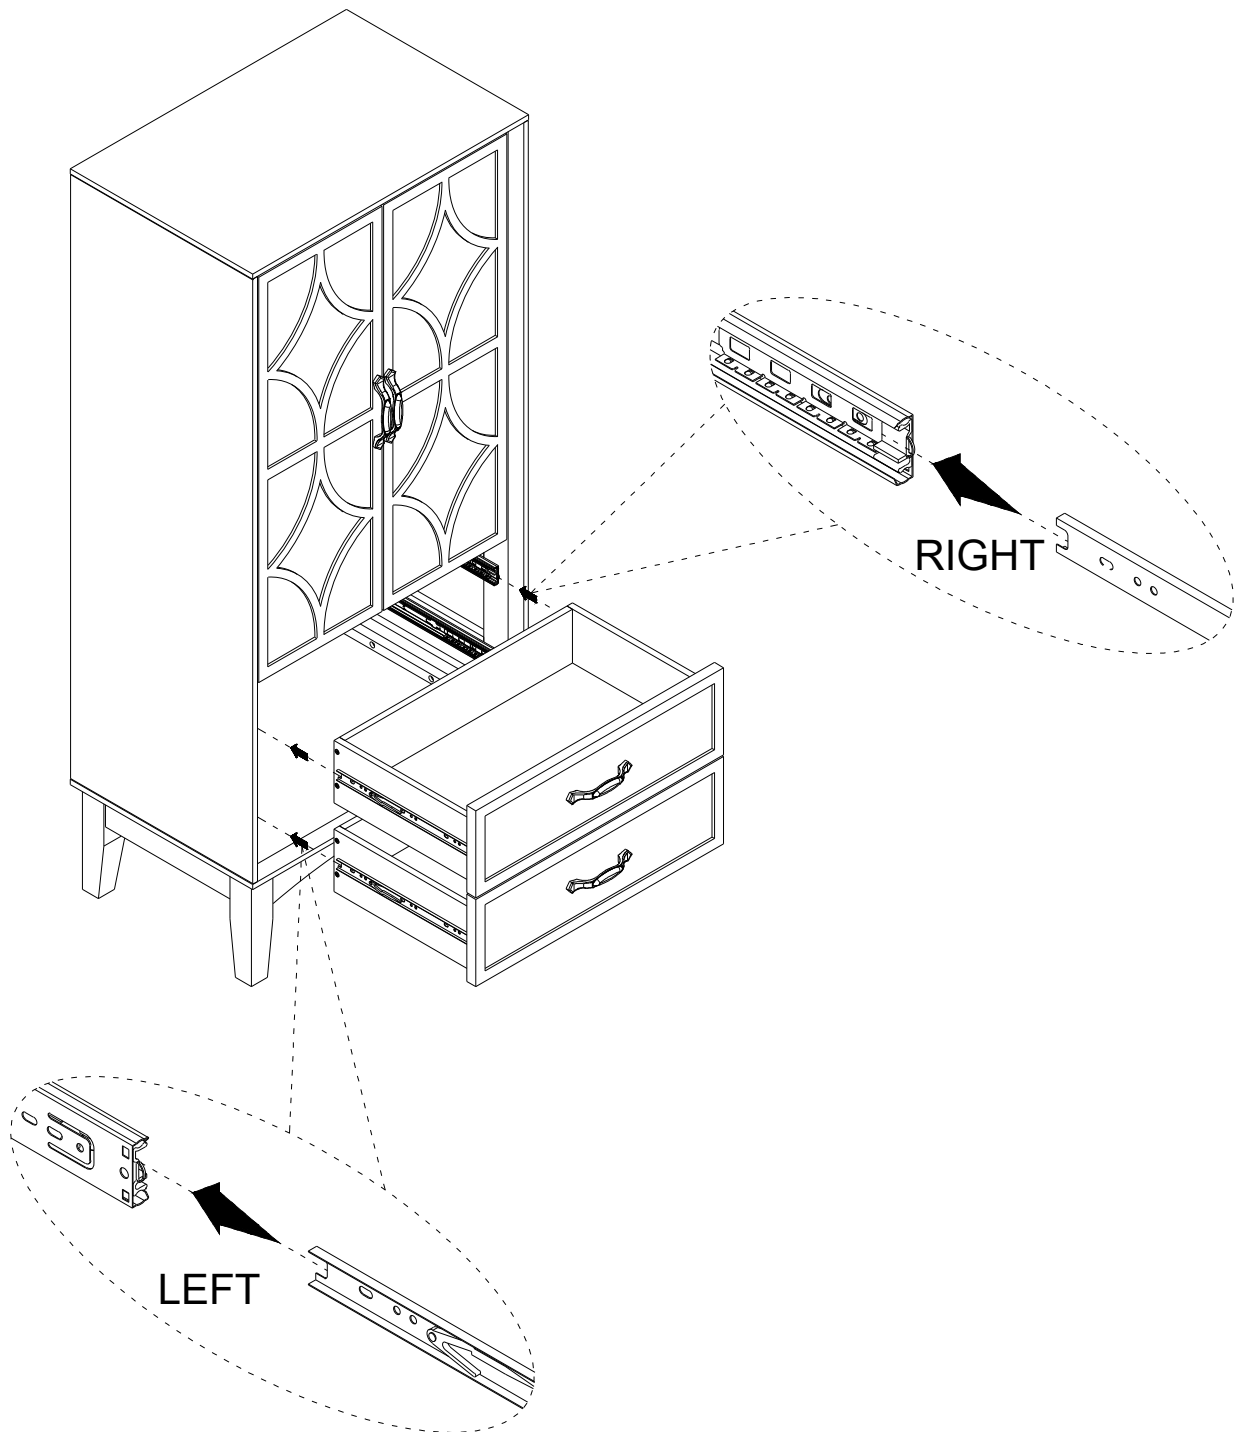

ASSEMBLY INSTRUCTIONS

15



⑪ 1set

