


SOOHOW

Assembly Manual Outdoor Dining Table


CS001

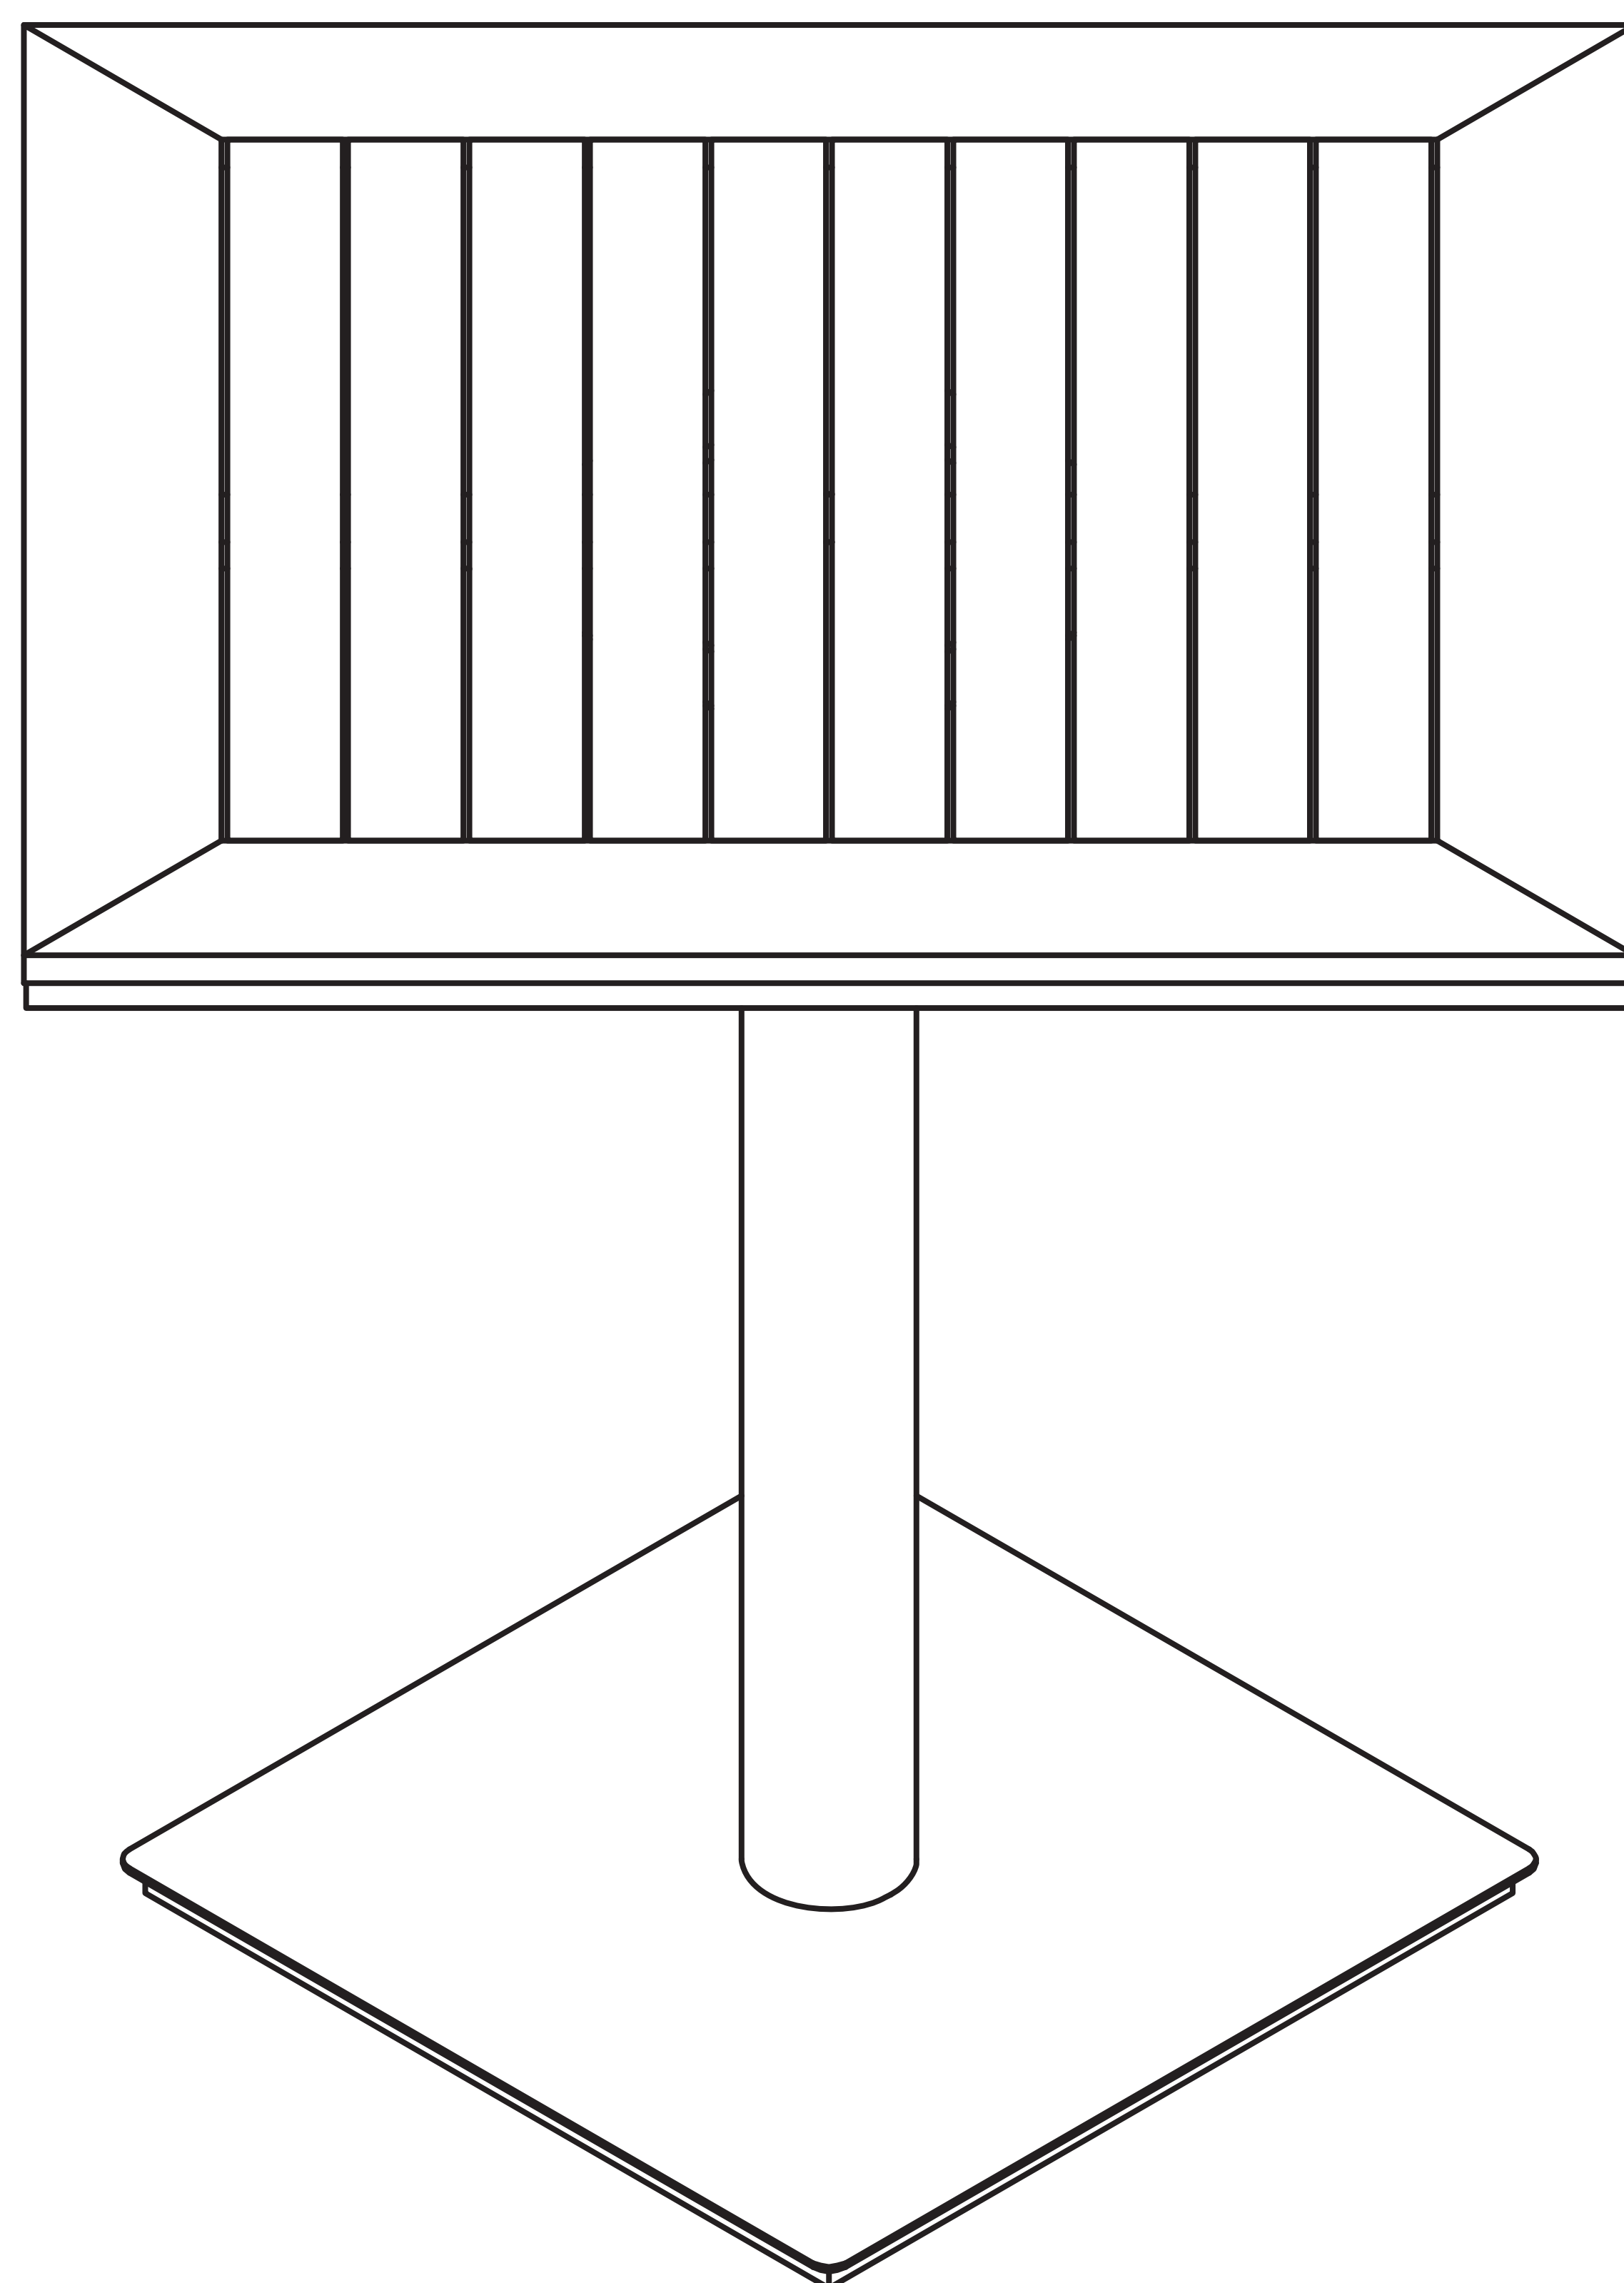

Please read this manual carefully before any operation and keep it properly for future use.

If any problems on our product, please feel free to contact us at ecservice@isunon.com.


Exploded View

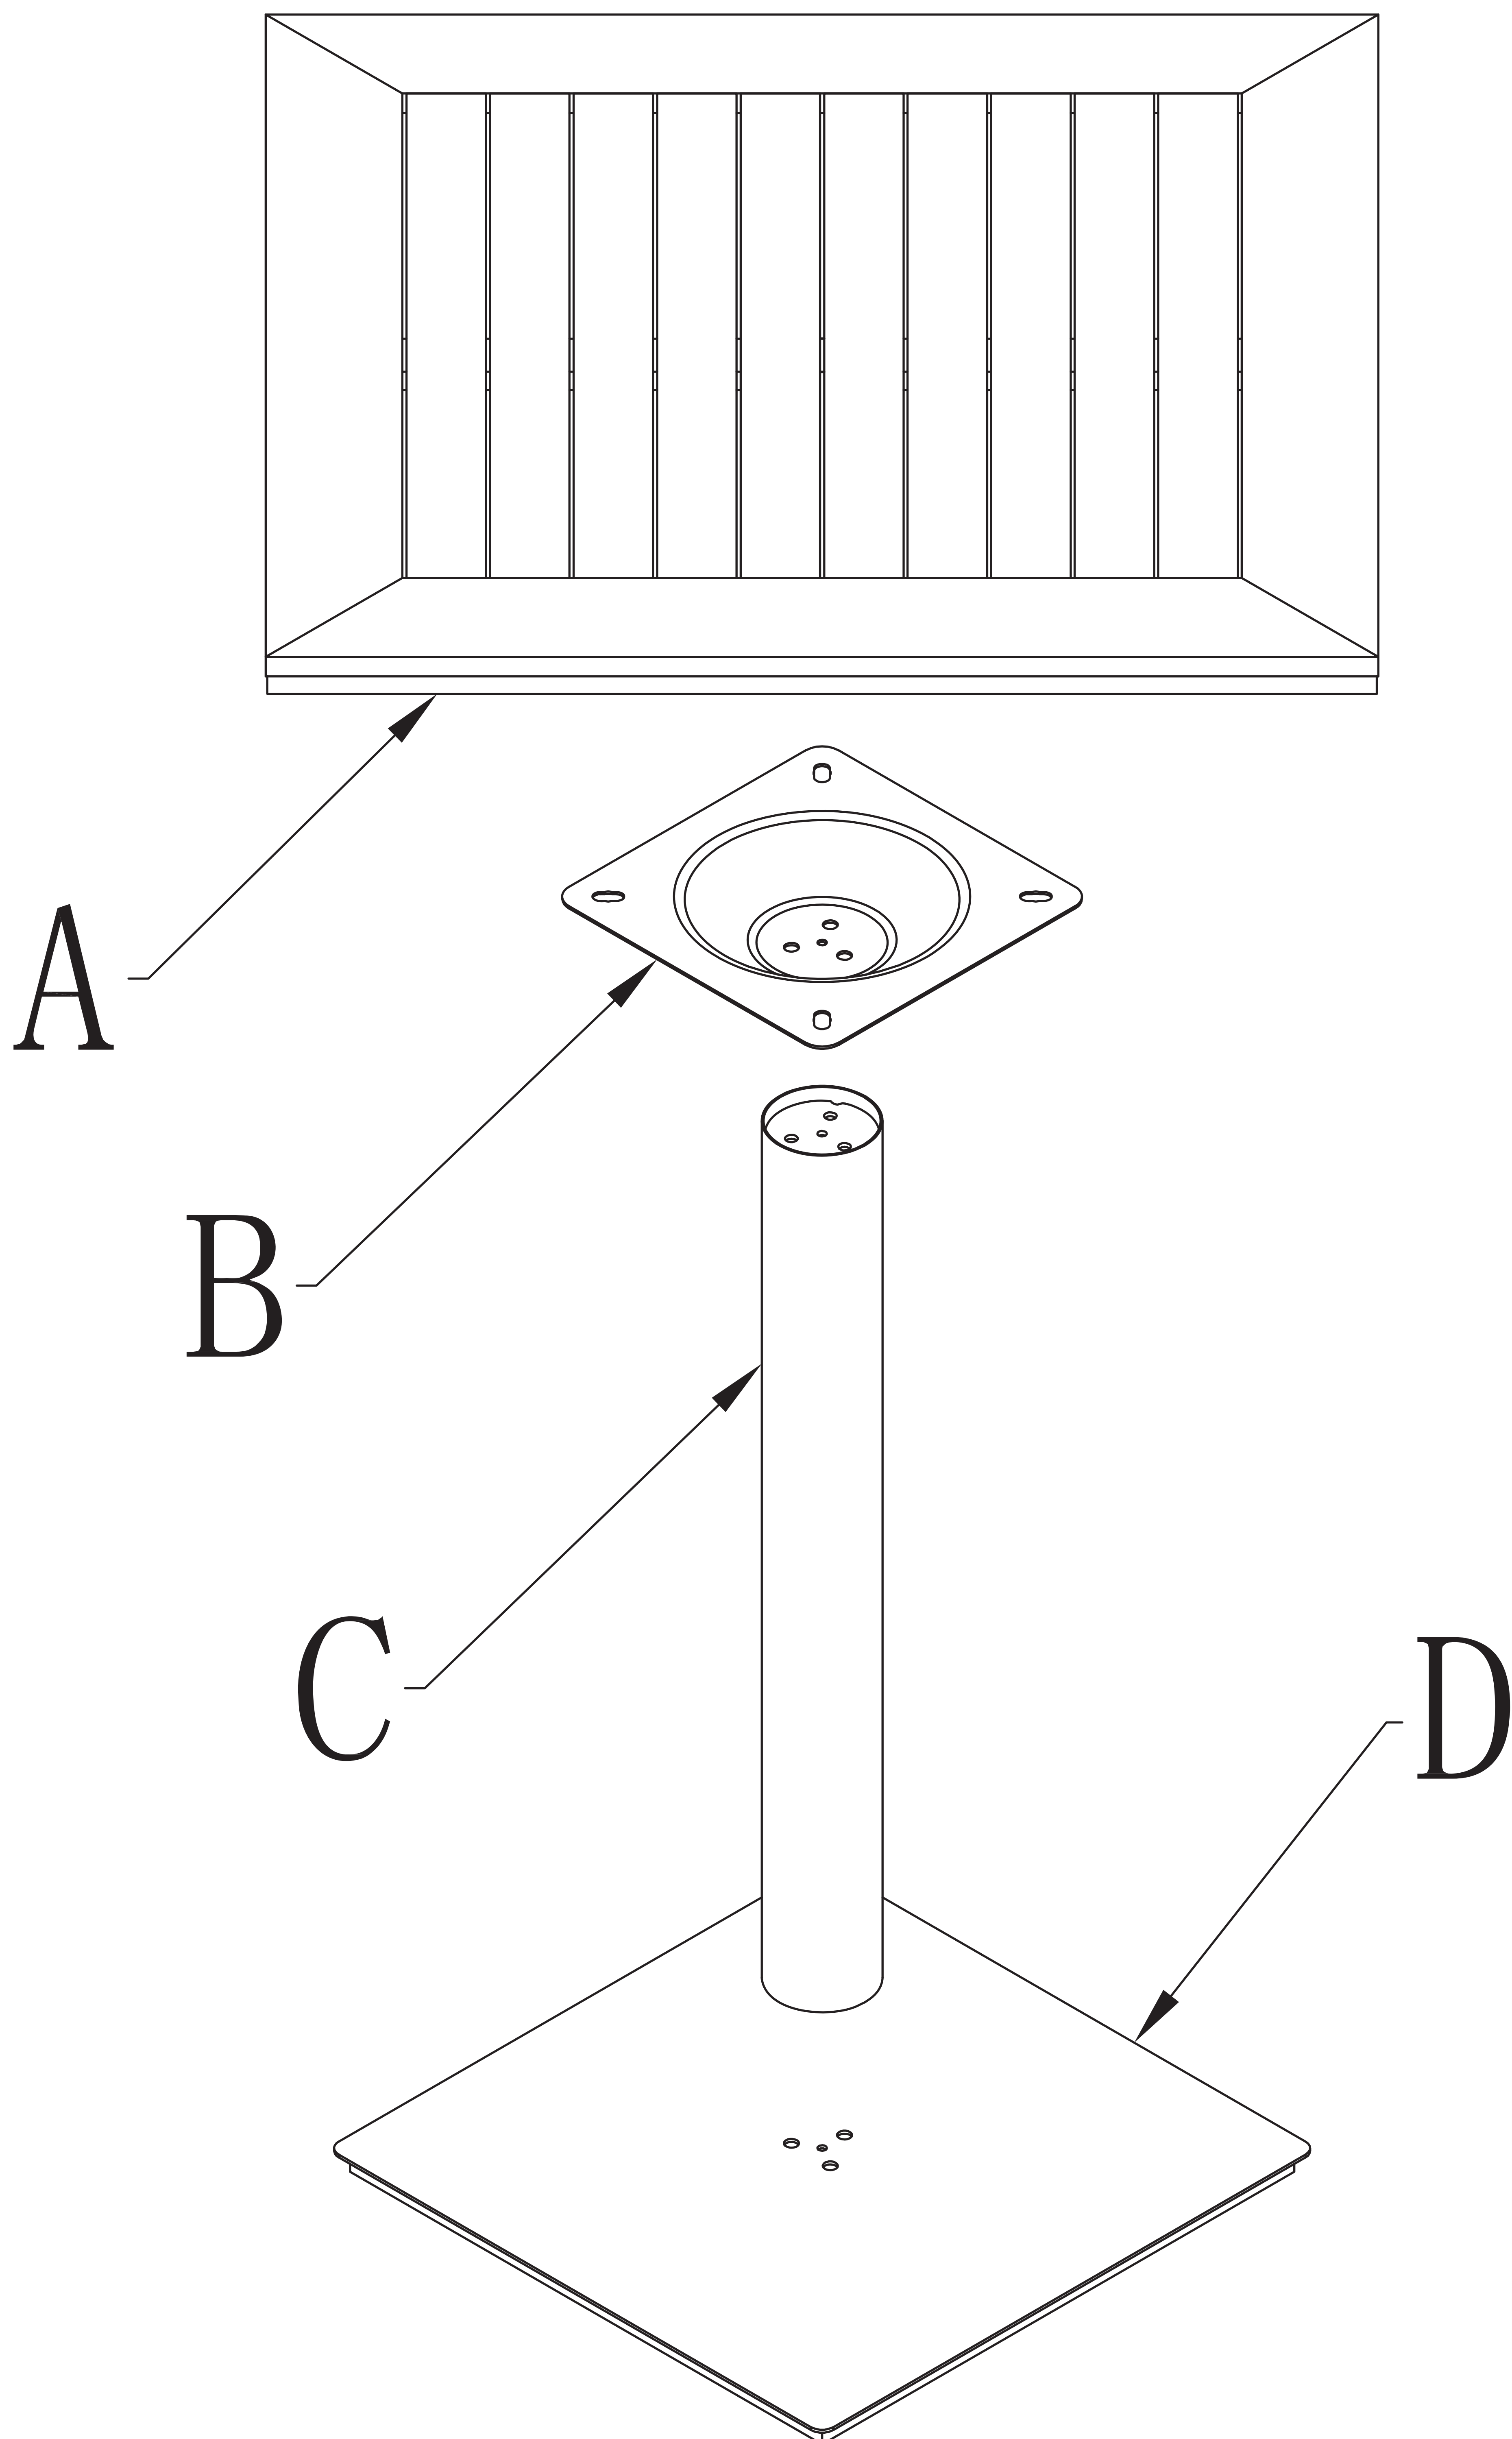


Components List

30min

Assembly Time

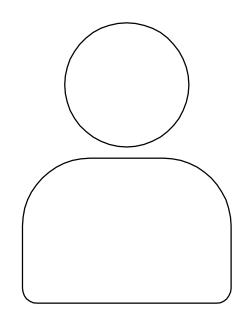


One People

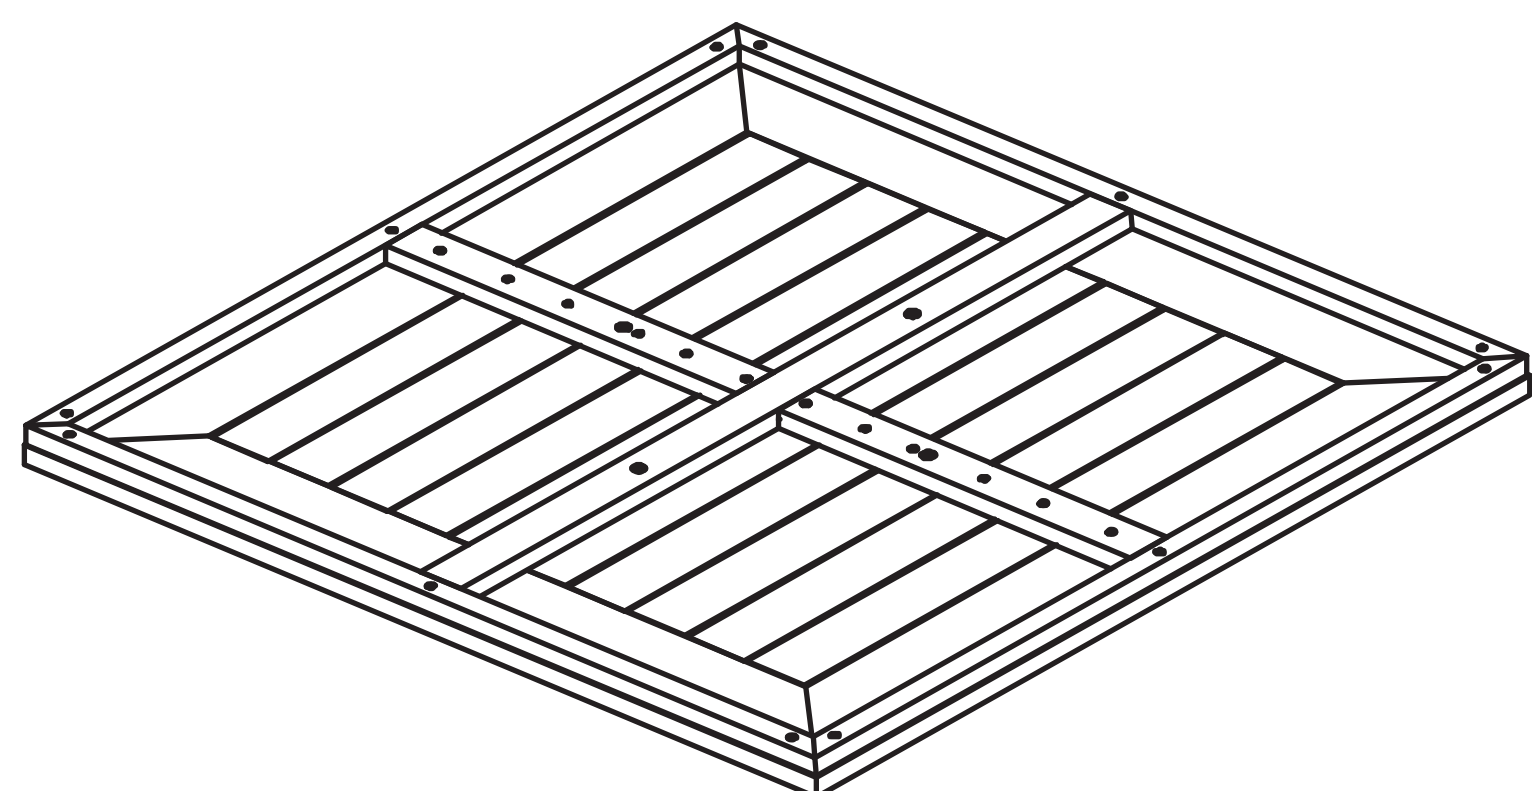

A

Table Top (x1)

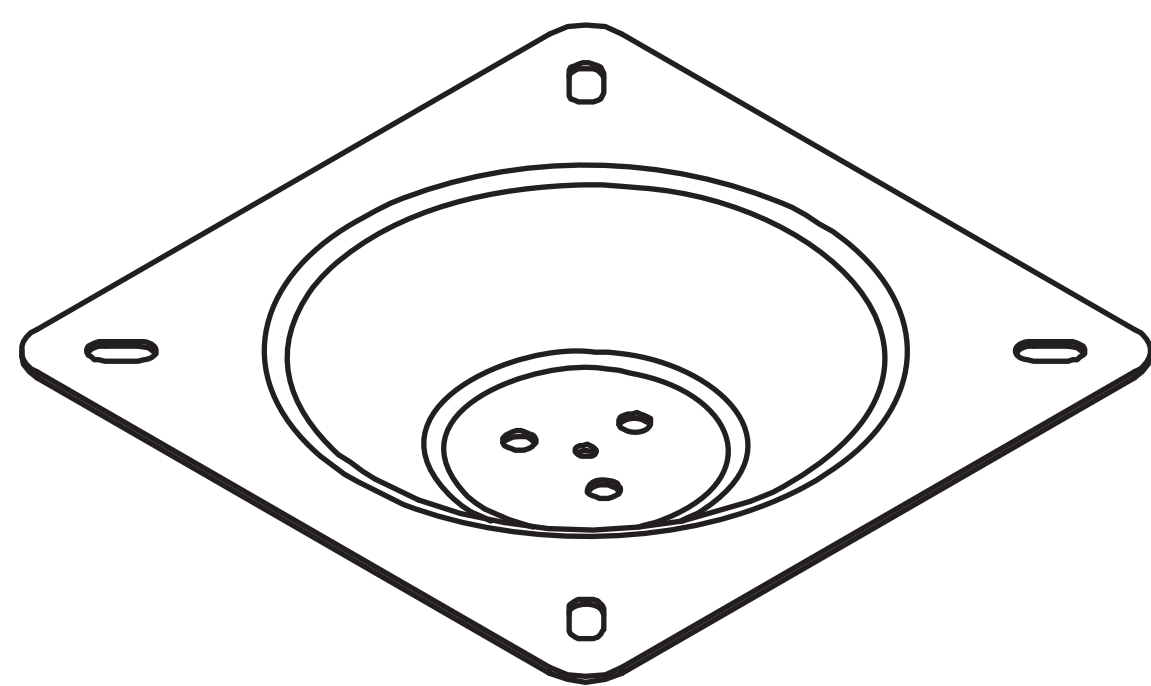


B

Table Connector (x1)



C






Table Leg (x1)

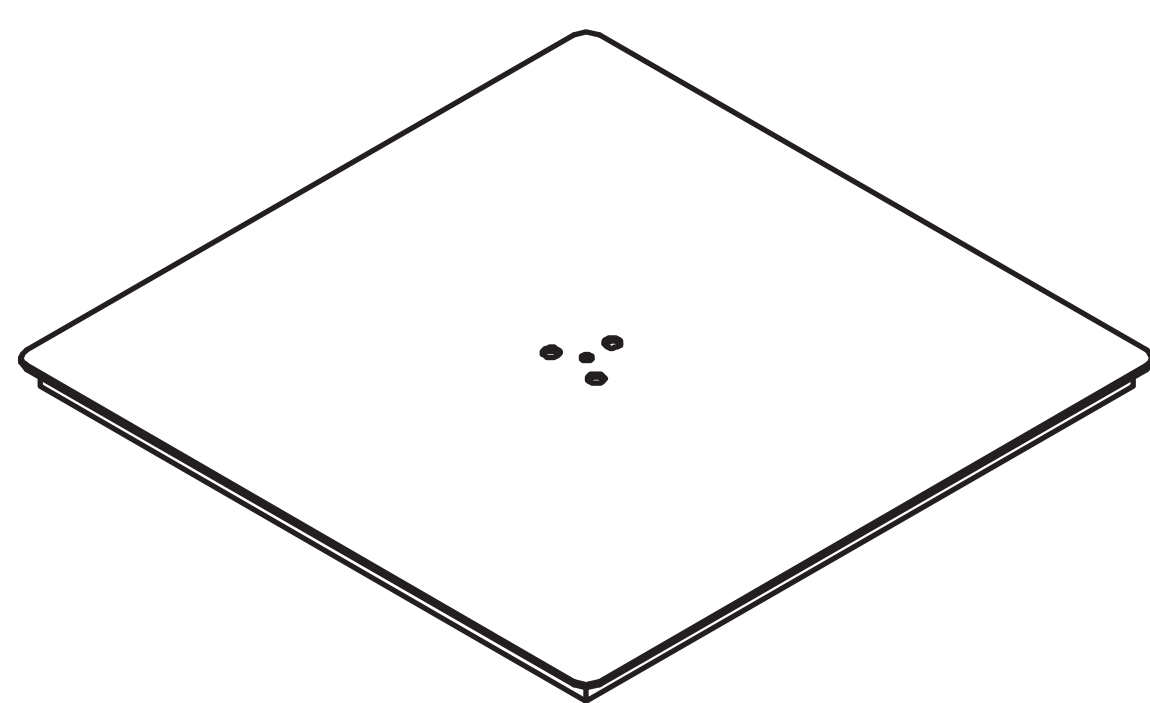

D

Table Base (x1)

Components list


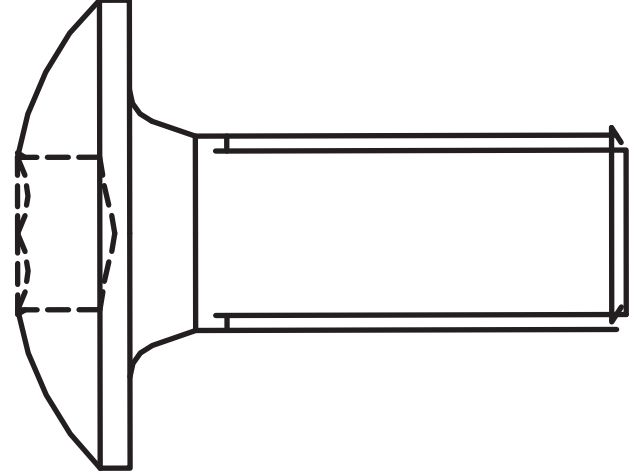
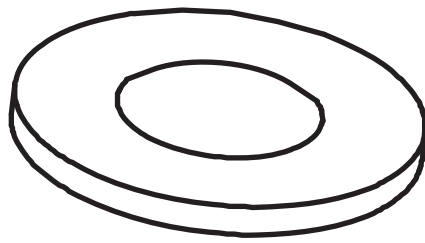
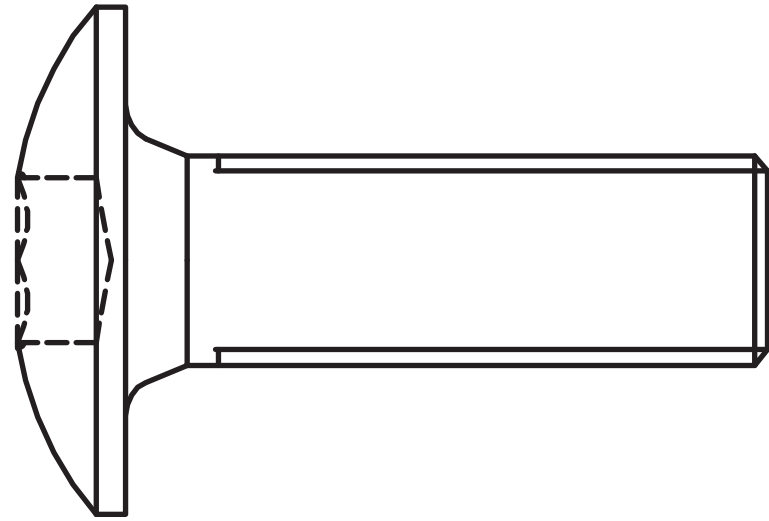
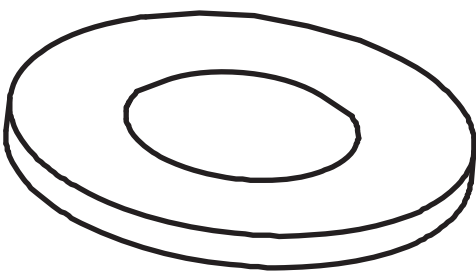
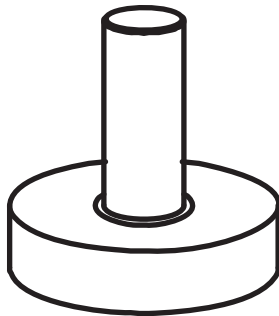
E 			F 			G 		
Bolt	M6x15	4+1	Washer		4+1	Bolt	M8x25	6+1
H 			I 			J 		
Washer		6+1	Foot Cap		4	Allen wrench	M6	1
K 								
Allen wrench	M8	1						

Note:The number after“+” sign indicates the extra piece(s).

Assembly Instruction






STEP 1

Attach the part B table connector to the part C table leg with three part G bolts and three part H washers. Tighten all the bolts fully.

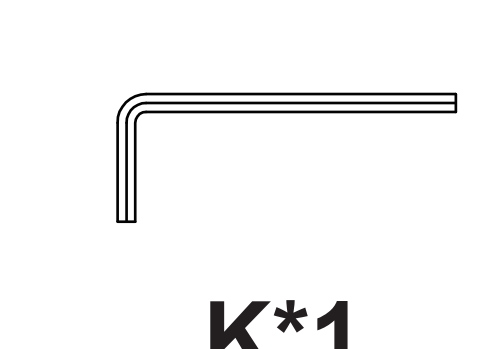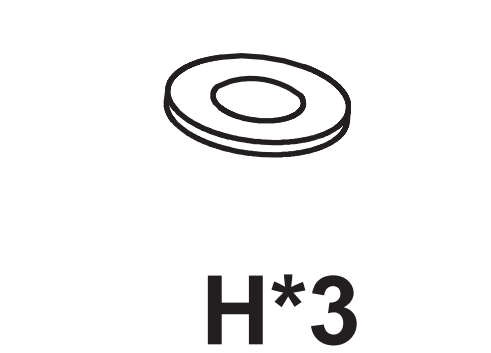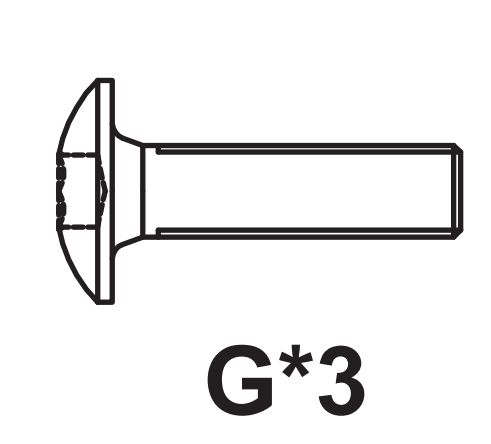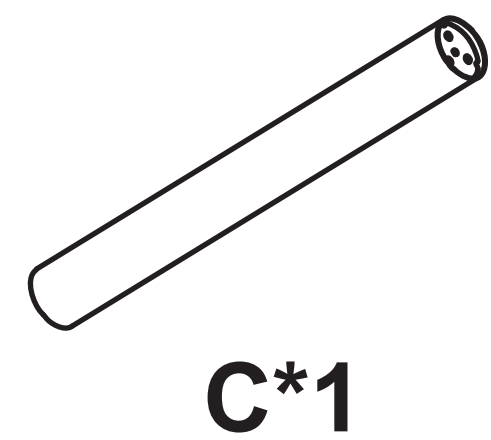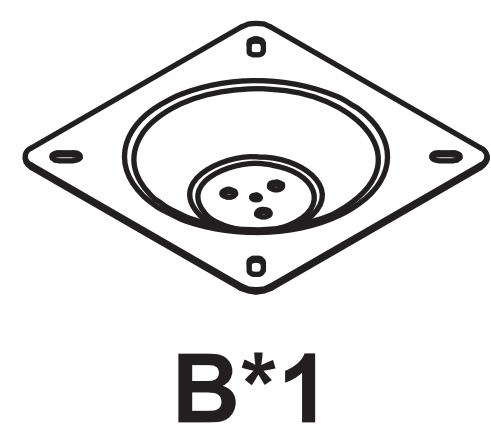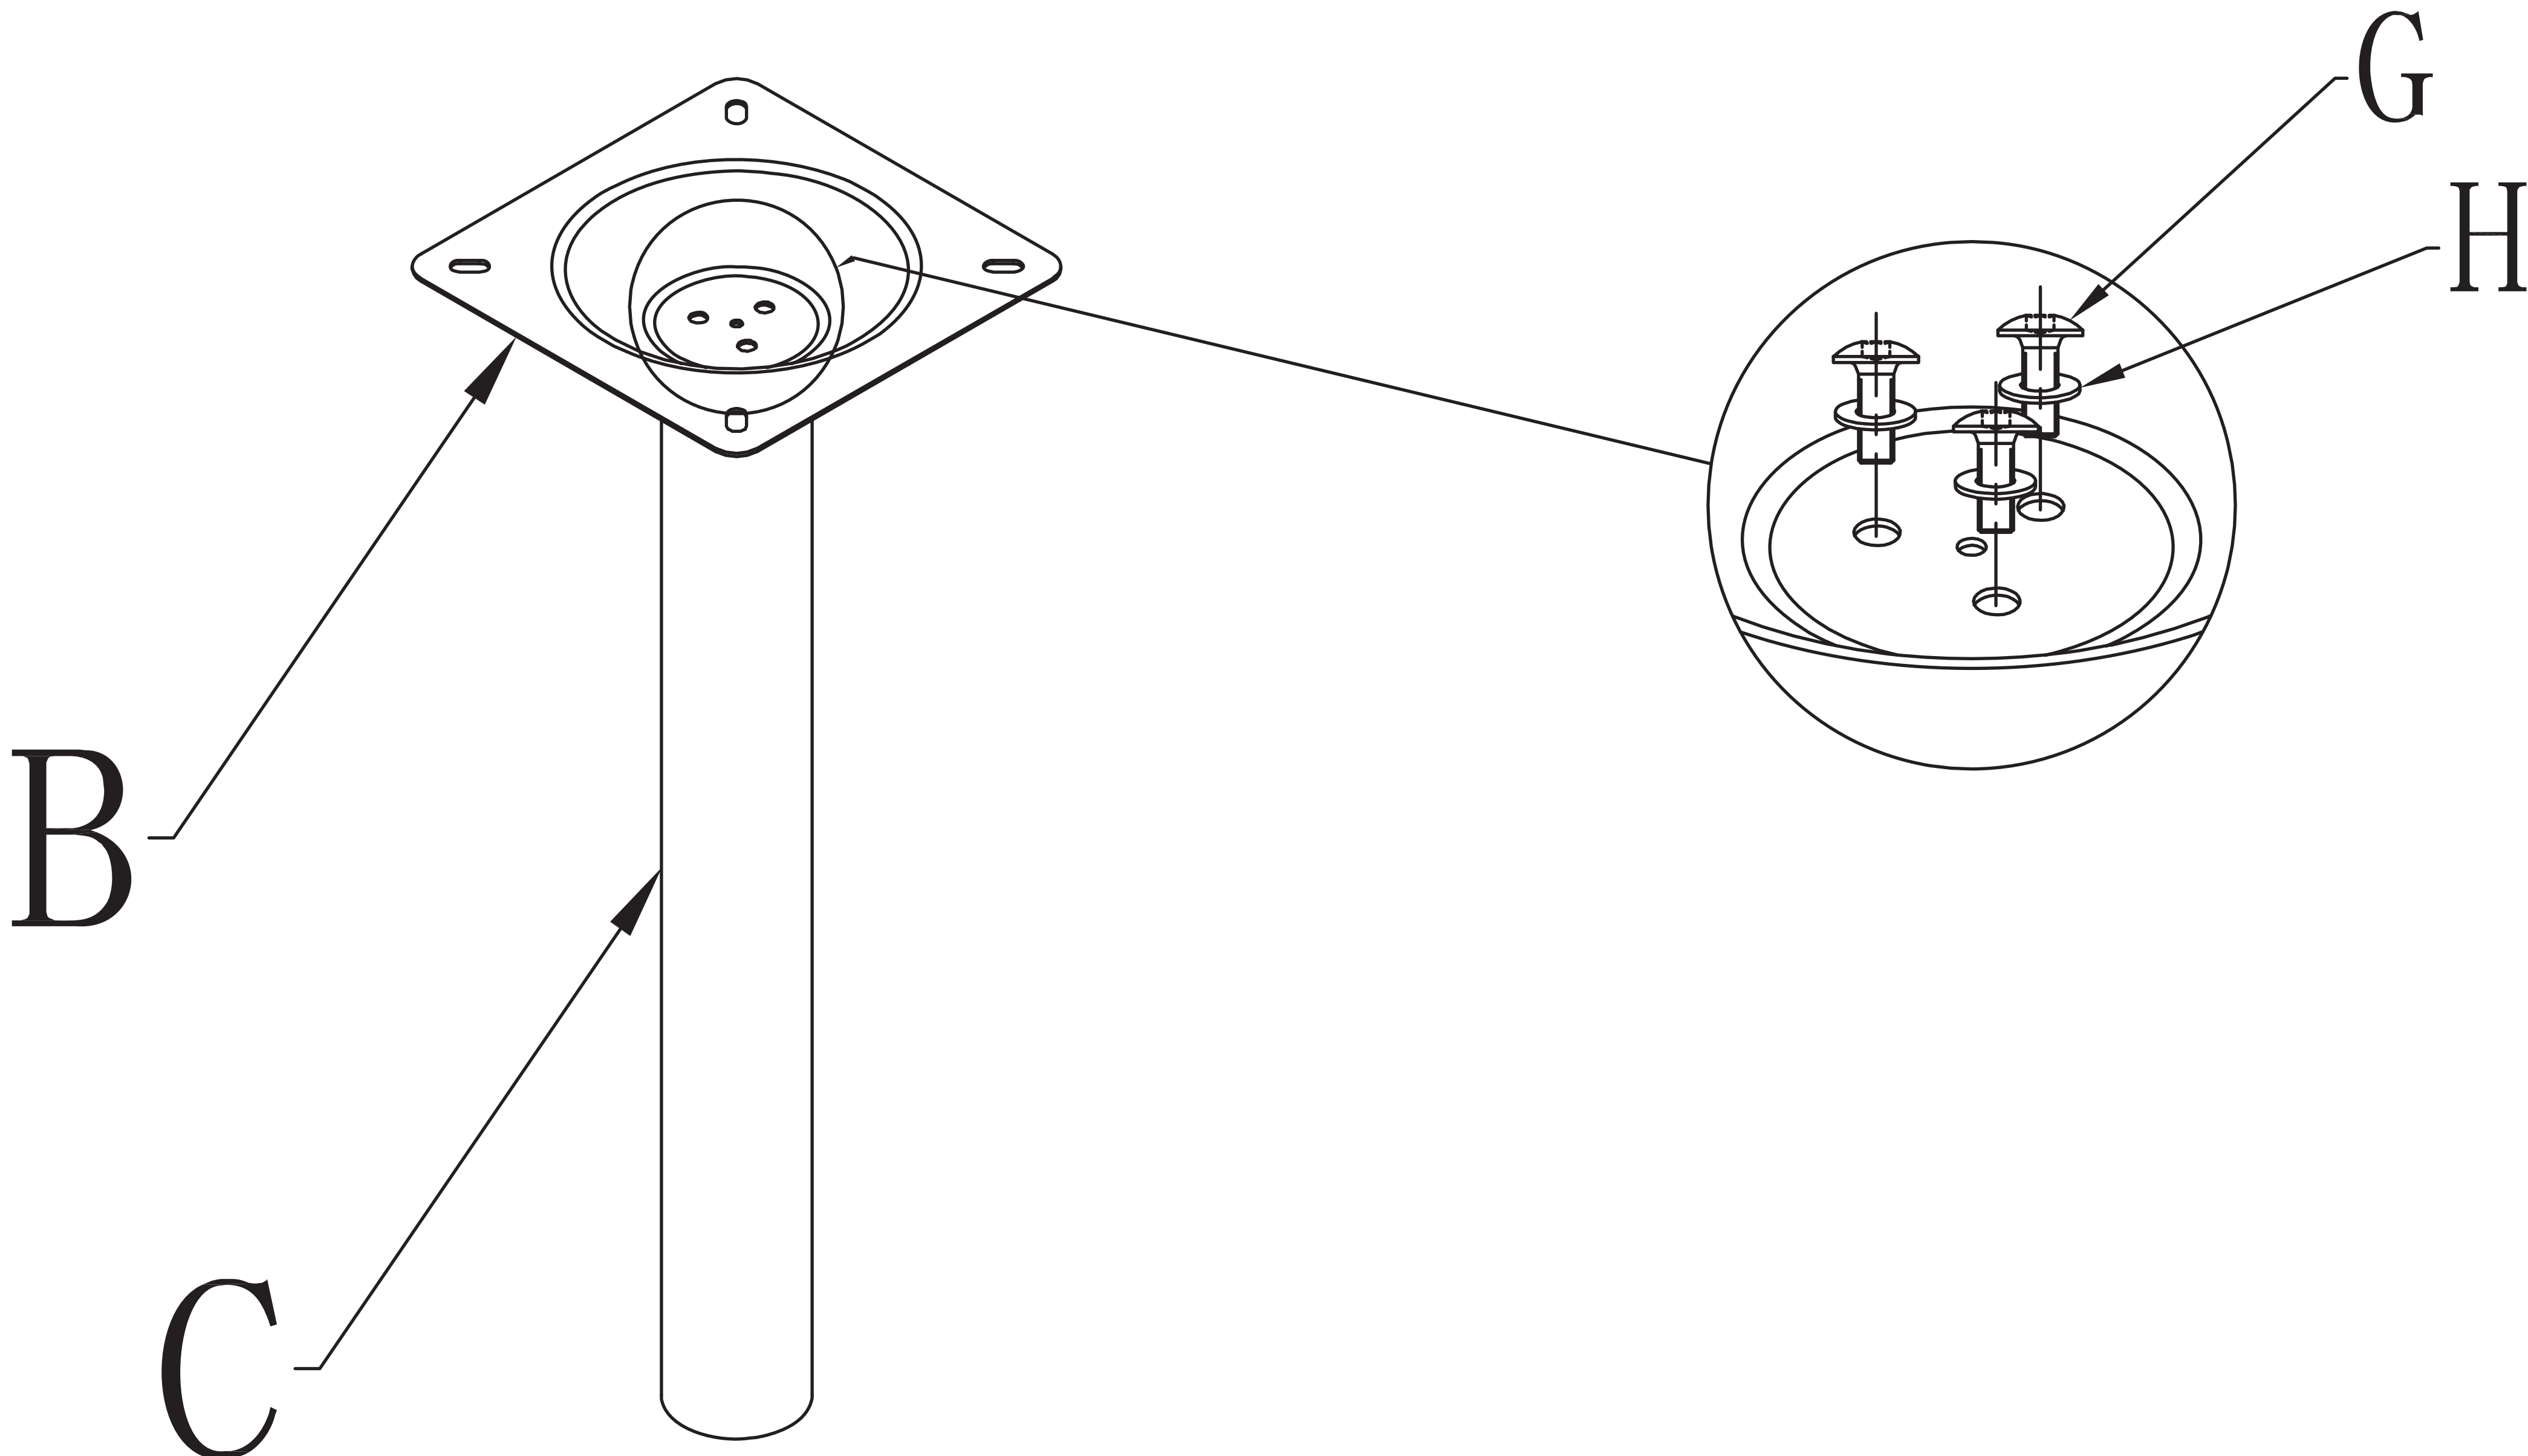

STEP 2


Attach the part B table connector to the part A table top with four part E bolts and four part F washers. Tighten all the bolts fully.

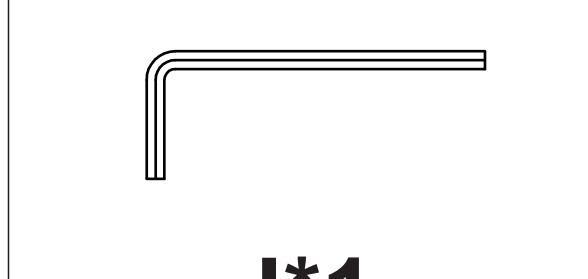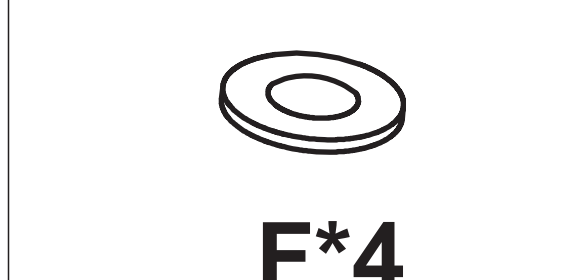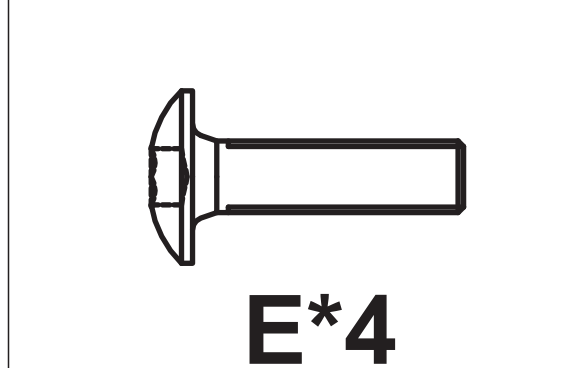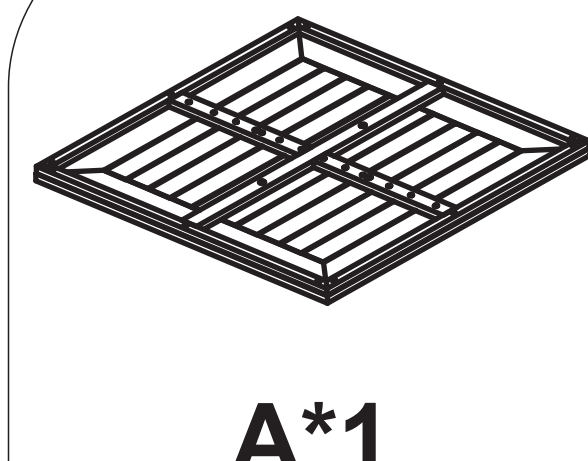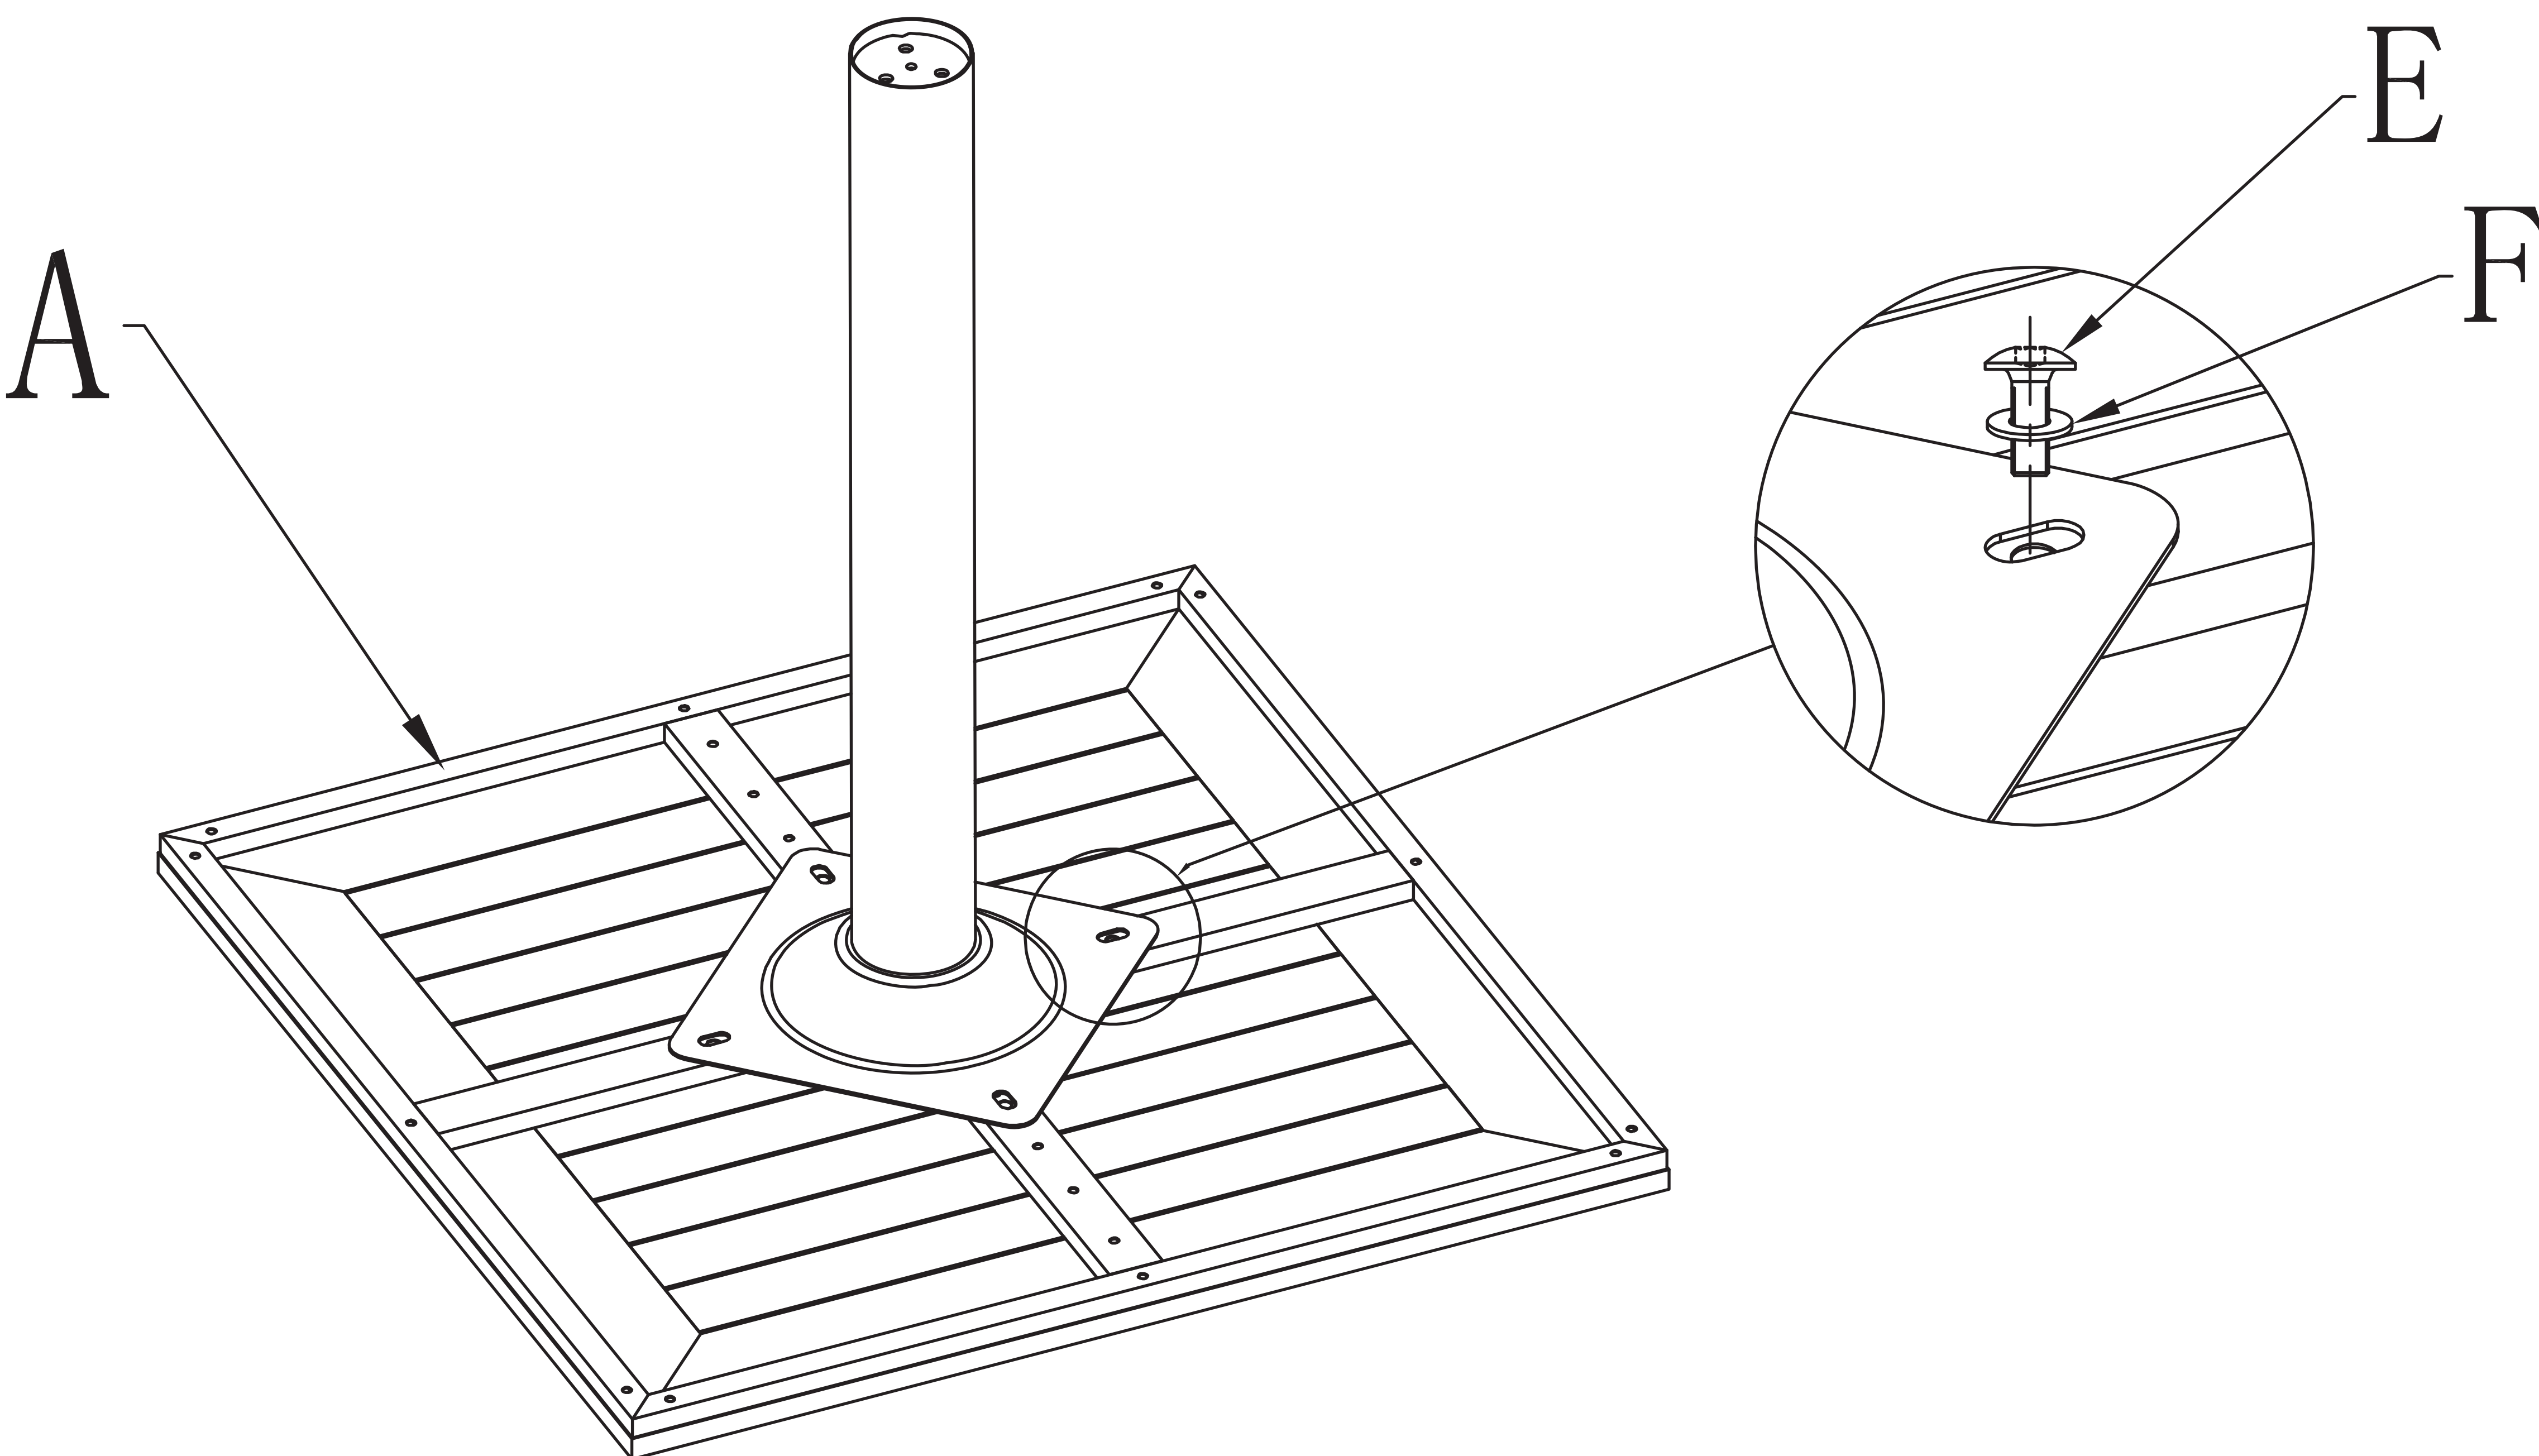

Assembly Instruction

STEP 3

Attach part D table base to the part C table leg with three part G bolts and three part H washers. Then attach four part I foot caps to the part D table base. Tighten all the bolts fully

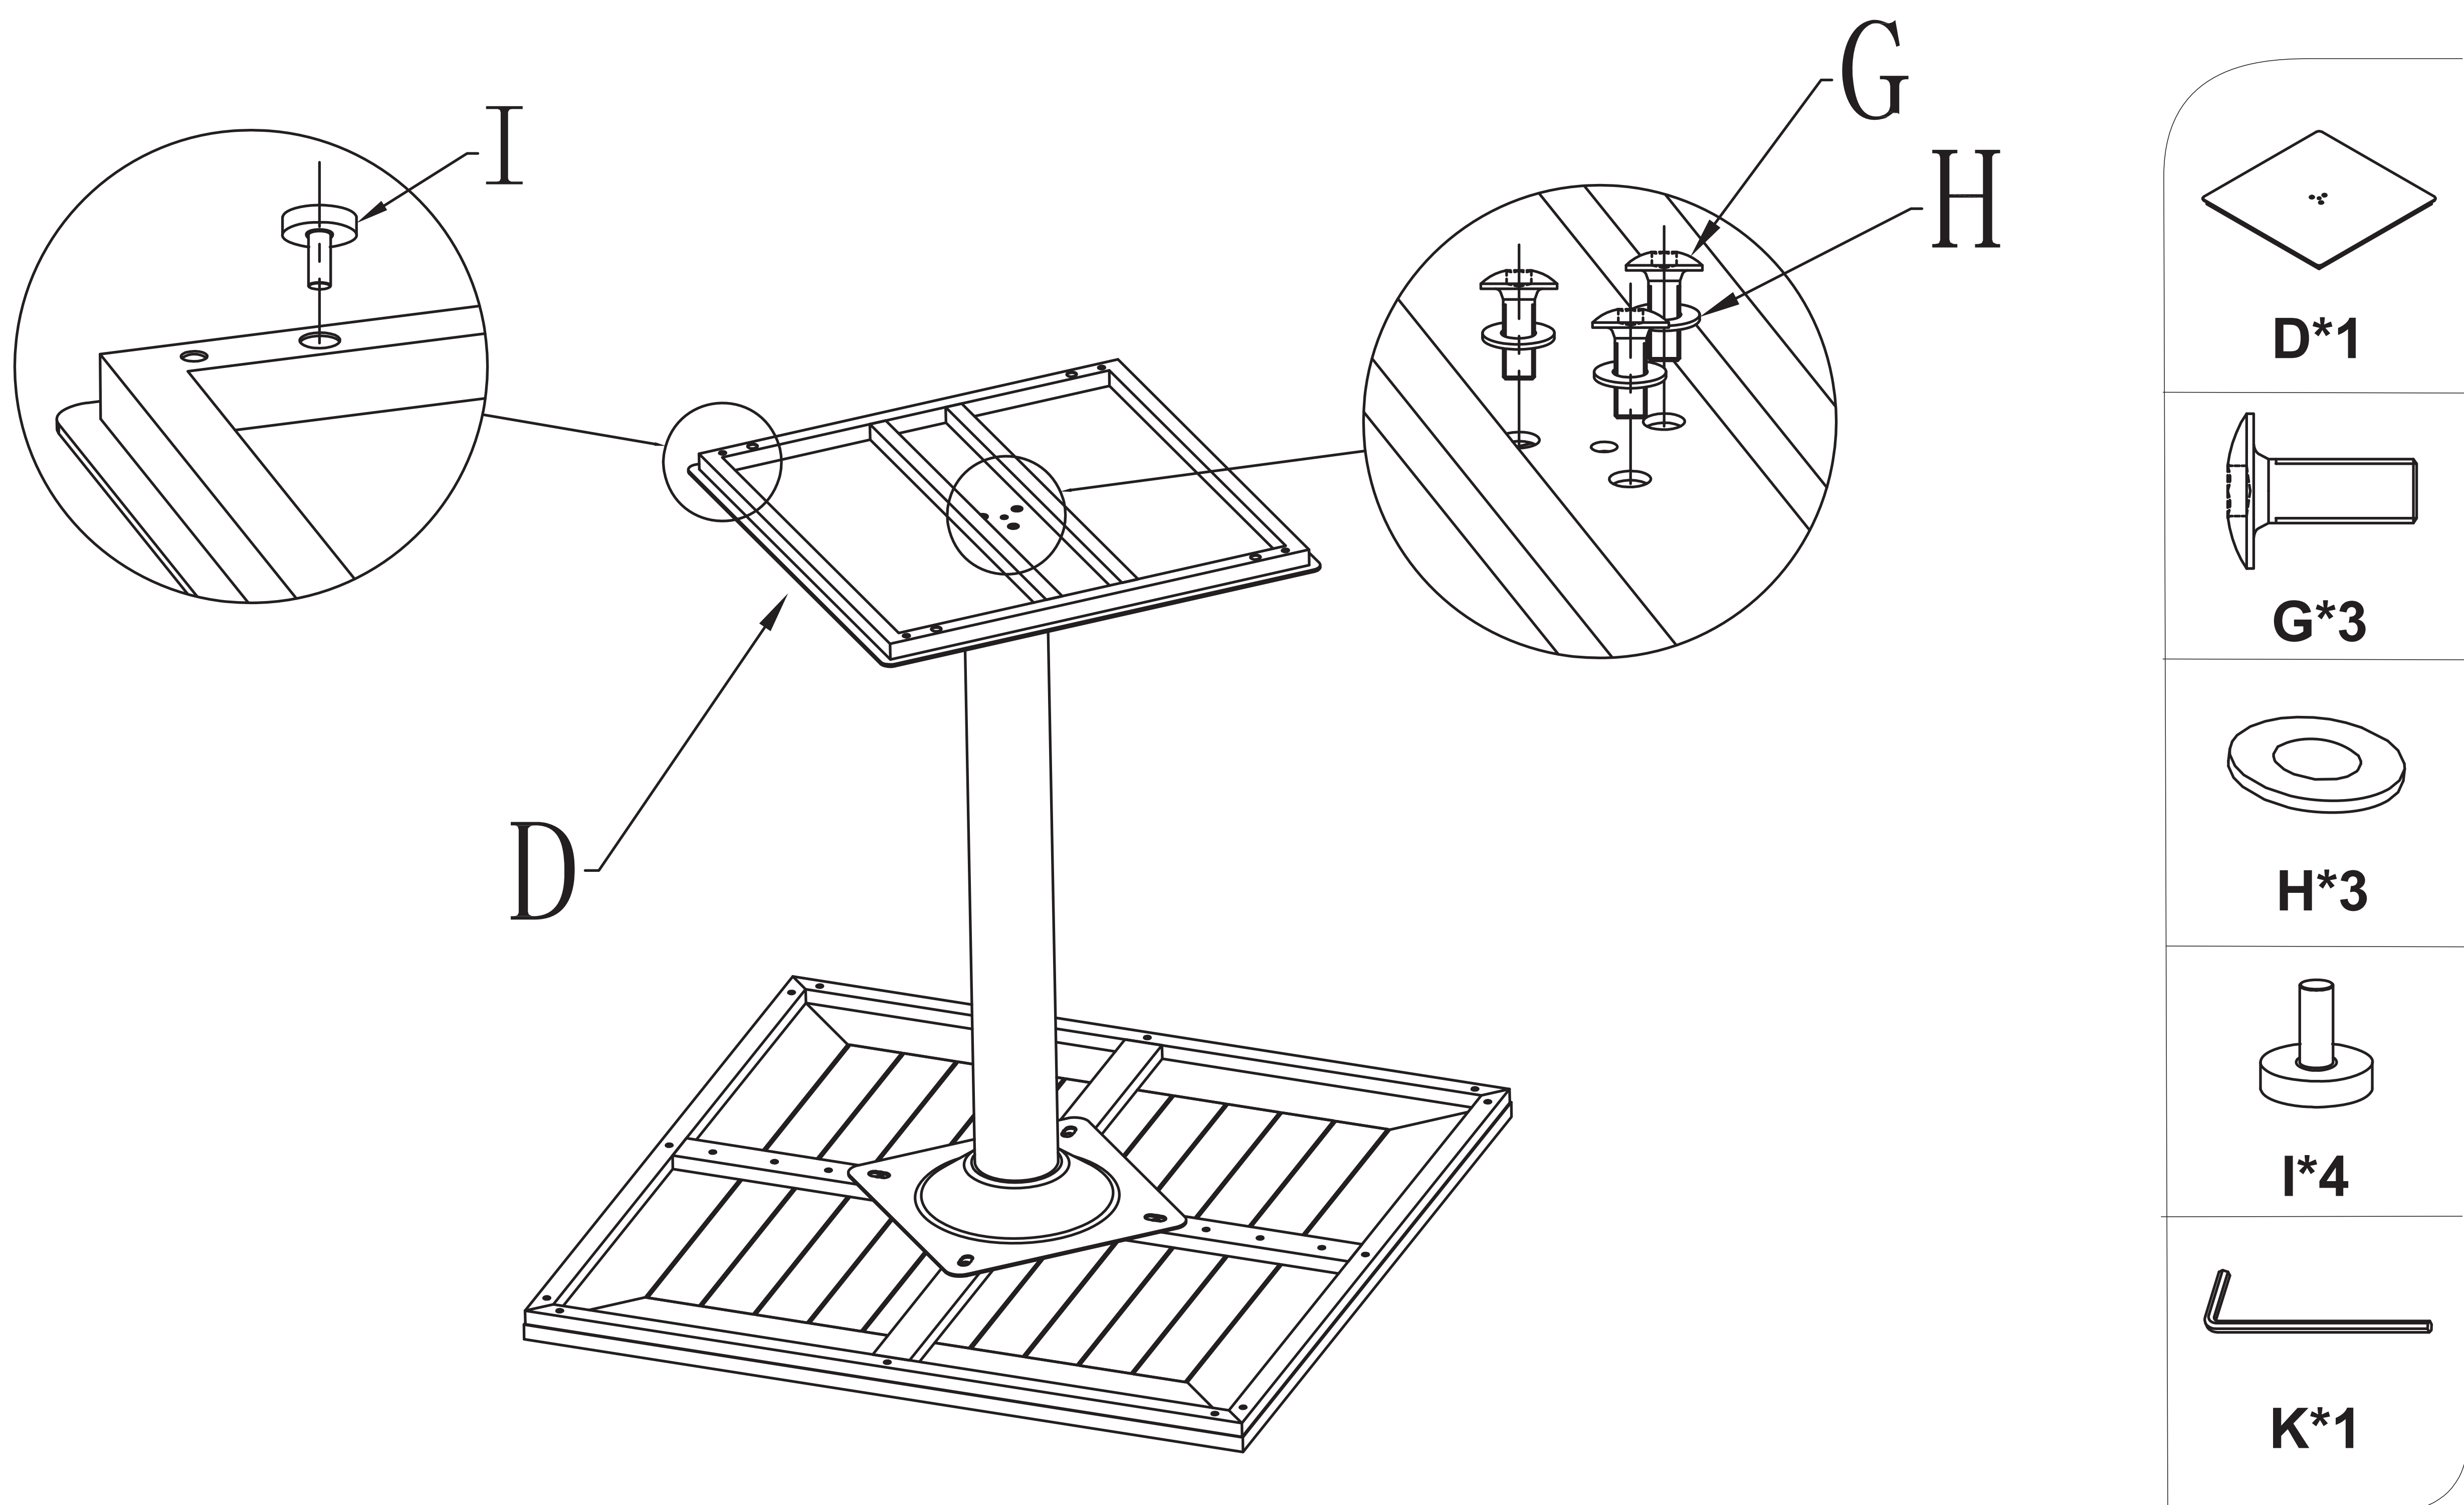

STEP 4

If you find the table not level, please adjust by rotating the feet pads on the legs.

