 


INSTALLATION INSTRUCTION

DeerValley®

LED Bathroom Mirror

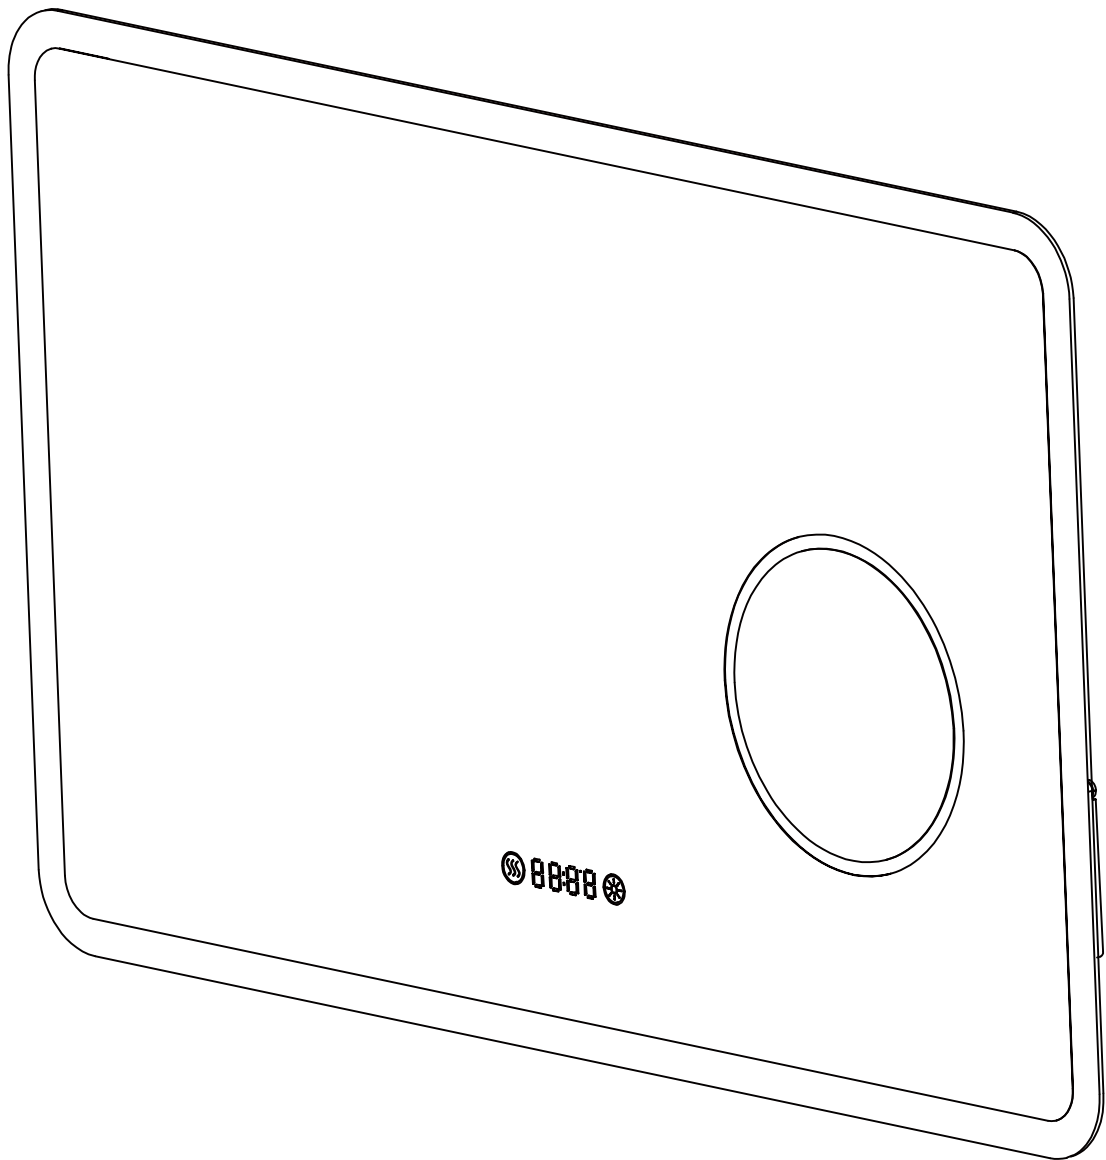

Installation Precautions

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequence. Follow the sections that apply to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.

- These instructions contain important care, cleaning, and warranty information—please leave them for the consumer.

- Before installation, carefully inspect the new fixture for any signs of damage.

- Always wear appropriate protective gear during installation.

⚠ WARNING: Risk of injury or product damage.

⚠ WARNING: Do not use acidic or alkaline cleaners, or alcohol, to clean the surface. Use a damp cloth instead.

⚠ CAUTION: Risk of electric shock. Electrical wiring may need to be relocated.

⚠ Important Information: Check the wall cavity for obstructions.

⚠ WARNING: Risk of electric shock. Improper use of the grounding plug can result in a risk of electric shock.

- If repair or replacement is required, it must be completed by qualified maintenance personnel.

- This product is equipped with specific wiring from the factory. If the product is used together with other products, wiring issues should be considered, and all connections must be made by qualified service personnel.

Mirror Functions & Controls

(1) Fog Removal Function

- The button backlight is white, and when the function is working, the backlight turns blue.

- Touch to activate the fog removal function.

- The defogging function will automatically turn off after 60 minutes of activation, and the button backlight will turn white. If the user still needs to use the defogging function, manually turn it on again.

(2) Light Control










- The button backlight is white, and when the function is active, the backlight turns blue.
- Tap the switch on the bathroom mirror to turn the light on or off.
- Tap the switch to change the light colour.
- Touch and hold the switch for more than 5 seconds to adjust the light brightness.

(3) Time Adjustment

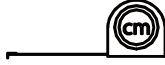- Display mode: Displays the time for 15 seconds, then the temperature for 5 seconds, repeating in a continuous cycle.
- Adjustment mode: Long-press the defogging button (in standby or on mode) to enter the minute-setting mode with the minutes flashing. Short-press the light button to increase by one unit, or short-press the defogging button to decrease by one unit. Long-press the defogging button again to enter the hour-setting mode.



Tools Required & Included Parts

Required Tools (Not Included)				
 Electric Drill	 Drill Bit (Ø8 mm / 0.31 in)	 Tape	 Pencil	 Spirit Level
Supplied Spare Parts (Package)				
 Wall Plug × 3	 Screw × 3	 Hanger × 1	 Connecting Terminal × 1	

Safety Precautions

(1) Electrical Safety Instructions

All electrical connections must be carried out by a licensed electrician in accordance with current building codes. Consult a qualified electrician before installation.

(2) Installation Care and Safety

Wear suitable eye protection when drilling. Use caution when operating power tools and watch out for hidden cables or pipes.

When drilling on tiled surfaces, take extra care to prevent the drill from slipping. Applying a piece of masking tape to the wall before marking the fixing holes will help keep the drill steady.

(3) Important


Do not strike glass components with hard or pointed objects.

Do not place very hot or very cold items directly against or near glass surfaces without adequate insulation to prevent direct contact.


If the glass becomes chipped or broken, replace it immediately.

Installation Steps


1. Remove the product from the packaging and take out the mounting bracket.

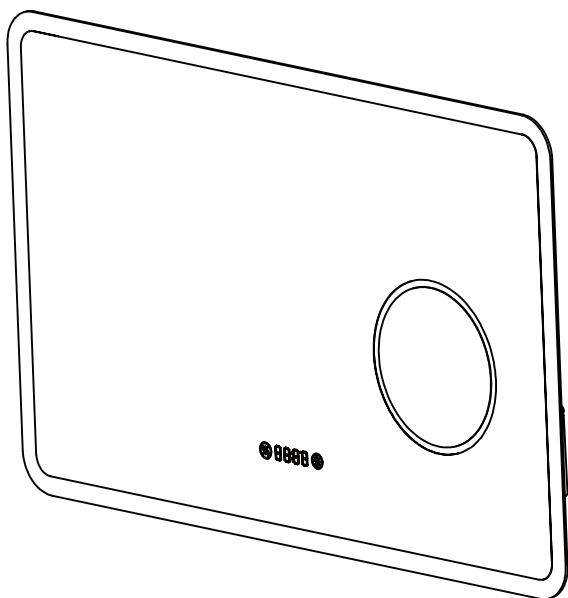


2. Use the holes on the mounting bracket as a guide and mark the positions on the wall.

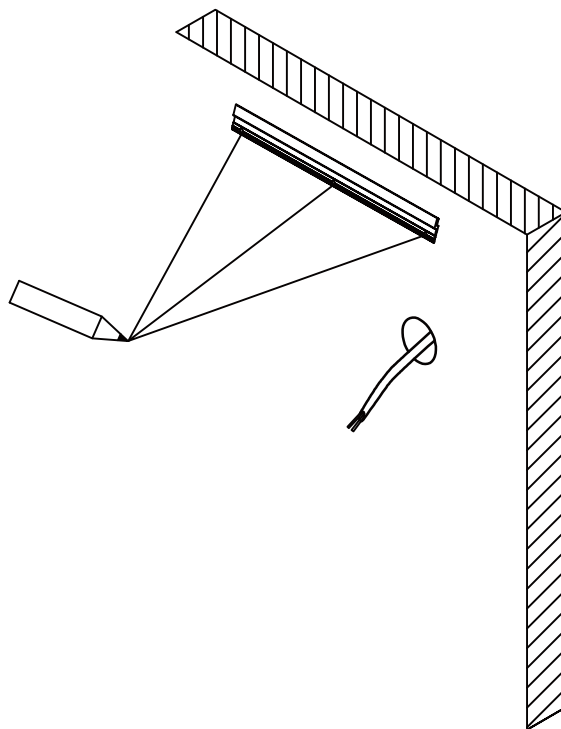


3. Drill the required holes and insert wall plugs.

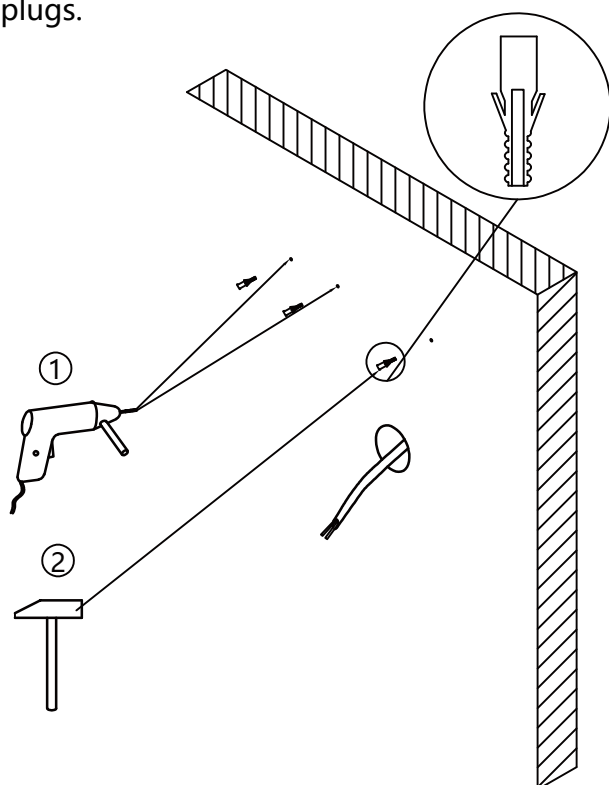

4. Screw the mounting bracket to the wall using the screws, and adjust it with a spirit level.

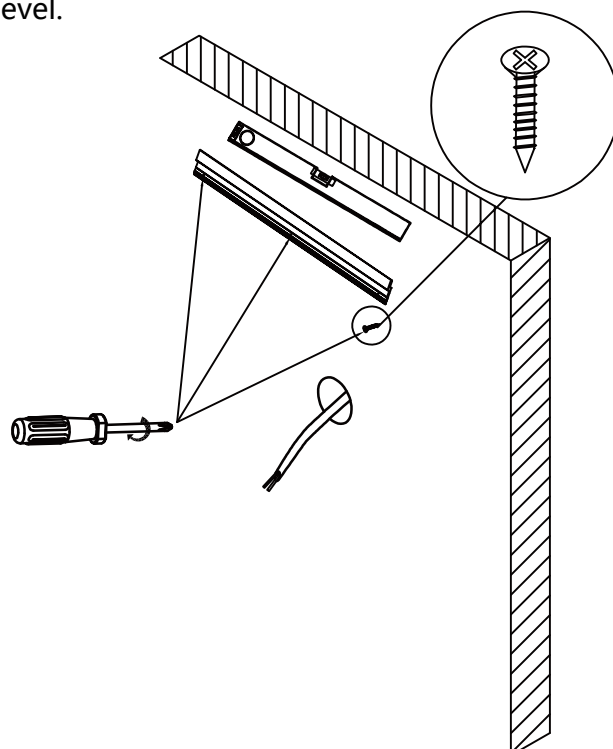


5. Connect the product wire to the power supply through the wire connector (pay attention to electrical safety).

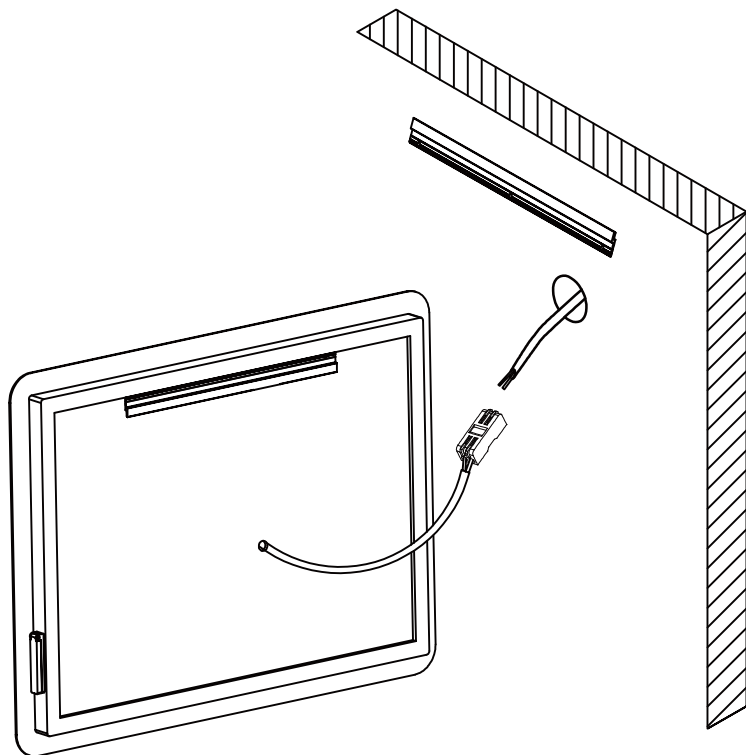


DANGER: Before installation, make sure the main power is turned off.

Brown Wire – Power Supply (L)
Blue Wire – Power Supply (N)


6. Place the mirror against the wall, align the hook with the slot on the mounting bracket, and slowly lower the mirror so the hook fits securely into the slot. Gently shake the mirror to ensure it is firmly installed.

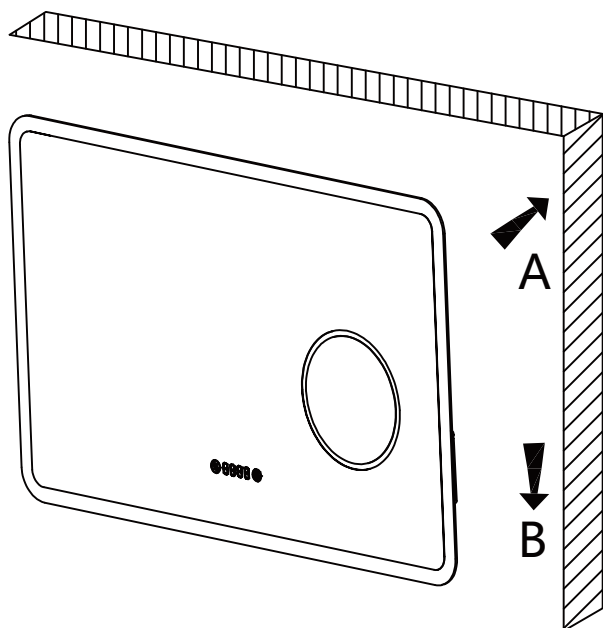

A

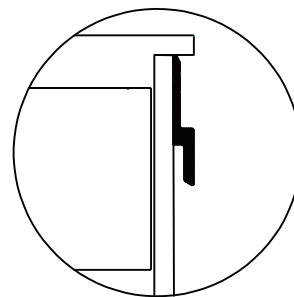

B

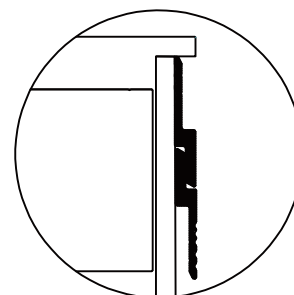

LIMITED WARRANTY COVERAGE

1-YEAR LIMITED WARRANTY

DeerValley products are made from high-quality materials and crafted with care to provide long-lasting durability. If defects in material or craftsmanship are found under normal use within the first year of delivery, DeerValley will provide replacement parts at no charge, or, at its discretion, replace any defective product or part, assuming it has been installed, used, serviced, and maintained properly. This warranty applies only to the original purchaser and proof of purchase is required for any claims. **SCRATCHES ARE NOT COVERED UNDER WARRANTY.**

The manufacturer warrants that this product will be free from manufacturing defects for the duration of the above-mentioned warranty period. Please retain a copy of the original invoice as proof of purchase.

DeerValley will, at its discretion, (1) repair or replace the defective part(s) or product(s) free of charge; (2) issue a refund for the original purchase price (valid within 30 days from delivery date); or (3) issue a credit towards a new DeerValley product purchase. Shipping and delivery charges may apply and are at DeerValley's discretion.

DeerValley recommends installation by a licensed professional plumber. DeerValley is not responsible for damage or failure resulting from improper installation, misuse, or failure to hire a licensed professional. Additionally, DeerValley is not responsible for any removal or installation costs.

This warranty does not cover products subjected to accidents, negligence, improper installation, abuse, misuse, or the use of abrasive cleaners, alcohol, or organic solvents. These exclusions apply regardless of whether the actions were performed by a contractor, service company, or the purchaser.

DeerValley's responsibility under this limited warranty is limited solely to the replacement of parts and does not cover any other costs. DeerValley is not responsible for labor charges, damage incurred during installation, repair, or replacement, nor for any indirect, incidental, or consequential damages, losses, injuries, or costs related to this product. Except as required by law, this limited warranty replaces and excludes all other warranties, whether express, implied, statutory, or otherwise, including but not limited to warranties of merchantability or fitness for a particular purpose.

RESPONSIBILITIES OF OTHERS

It is the responsibility of the installer or contractor acting on behalf of the user to inspect the unit before installation. They must ensure the unit is free from defects or damage.

Notices are placed on the unit and packaging to inform the installer of this responsibility.

If a problem is found, the unit must not be installed. DeerValley is not responsible for damage or failure that could have been identified, repaired, or prevented through proper inspection prior to installation.

Damage occurring during transit is the responsibility of the carrier. The user or installer must inspect the unit upon delivery. If damage is found, it must be reported immediately to both the seller and the carrier in writing, and an inspection must be requested. If the carrier does not respond, the issue should be reported to both parties. Freight claims should be filed promptly thereafter.

LIMITATIONS AND EXCLUSIONS

This warranty does not cover damages resulting from negligence, misuse, abuse, improper installation, accidents, hard water, mineral deposits, exposure to corrosive materials, misapplication, improper maintenance, product alteration, or failure to follow care and installation instructions. The warranty is void if the DeerValley product is altered or if repairs are attempted with unauthorized accessories or parts not provided by DeerValley.

DeerValley is not liable for the loss of use, inconvenience, or any incidental or consequential costs, expenses, or damages. Some states do not allow the exclusion or limitation of incidental damages.

DISCLAIMER

Except as expressly stated, no warranties or obligations, whether express, implied, oral, or statutory, are provided. No dealer or individual has the authority to make any warranties or representations regarding DeerValley or its products. DeerValley is not responsible for any unauthorized warranties or representations.

WARRANTY SERVICE

NOTE: When requesting warranty service, please provide the following:

- A copy of the original invoice
- Date of installation
- Description and pictures of the defect
- Model number or product description

To obtain warranty service or replacement parts, please contact DeerValley Customer Service. DeerValley will determine whether to repair or replace the product, issue a refund, or provide a credit.