


# INSTRUCTION MANUAL

MODEL:CM6901

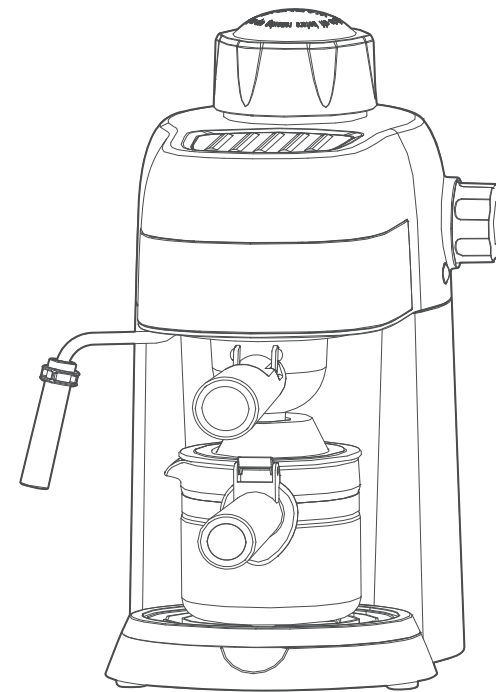

Please read these instructions carefully and retain for future reference.


# IMPORTANT SAFEGUARDS

## The following basic safety rules should always be followed:

- Make sure that your outlet voltage match the voltage that stated on the product.
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is earthed.
- To prevent fire, electric shock or injury to users do not immerse cord or plug into water or other liquid.
- The appliance must not be immersed into liquid.
- Unplug the product if not in use or ready to clean. Let the espresso machine come to room temperature before clean or assemble.
- **Do not** use the machine if the cord or plug is damaged, or the machine is broken. Return or replace the product to the retailer
- **Do not** use the accessories that is not provided by the manufacturer, it may result in fire, electric shock or injury to persons.
- To avoid inadvertently pulling the cord, put the machine on a level surface or table. Don't hang the cord over the edge of the table or counter.
- **Do not** let the power cord touch or be too close to the hot object.
- **Do not** place the product near any hot objects, such as: gas stove, electric burner, or heated oven.
- **Do not** place another objects on the top of espresso machine. Unplug the appliance only after switching off and only pull the plug not the cord.
- **Do not** use appliance for unconventional purposes.
- Closely monitored if the product is used by children or near by children.
- Be careful not to get burned by the steam.
- Some parts of appliance are boiling hot while operating (such as stainless decorated plate, drip tray, top cover, steam wand, steel portafilter and so on). So do not touch it with hand. Use handles or knobs instead.
- Clean and maintain the espresso machine regularly to ensure the quality of the coffee and the using life of appliance. Add lubricant oil on the running parts regularly.
- If you do not use the appliance for a long time, clean and dry all the parts for storage.
- **Do not** remove the portafilter when the machine is brewing or steaming. Ensure to release the pressure before removing the portafilter.

- When the appliance reports prompts trouble, do not operation the appliance.
- **Do not** clean brewing parts with cleanser or hot water. High temperatures will deform parts.
- **Do not** operate the espresso machine without water.
- **Do not** use the espresso machine outdoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.
- If the cord is damaged, do not repair the appliance yourself. Repair should be done by authorized service personnel only.

# KNOW YOUR PRODUCT

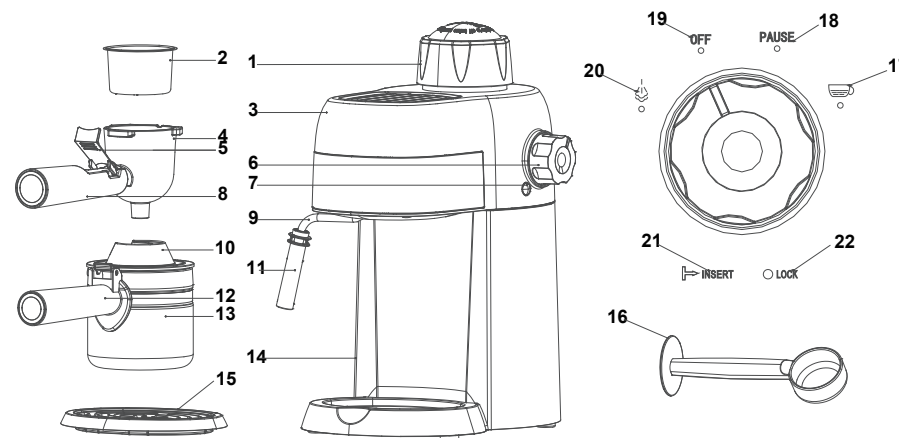

- |                    |                    |                  |
|--------------------|--------------------|------------------|
| 1.Boiler cover     | 2.Steel mesh       | 3.Top cover      |
| 4.Metal funnel     | 5.Press bar        | 6.Steam knob     |
| 7.Indicator        | 8.Funnel Handle    | 9.Steam conduit  |
| 10.Carafe cover    | 11.Frothing device | 12.Carafe handle |
| 13.Carafe          | 14.Main body       | 15.Drip tray     |
| 16.Measuring spoon | 17.Coffee place    | 18.Pause place   |
| 19.OFF place       | 20.Steam place     | 21.Insert        |
| 22.Lock            |                    |                  |

# OPERATION MANUAL

## BEFORE THE FIRST USE

1. Take the espresso machine out of the package and check the accessories according to the list.
2. Clean all the parts according to the “**CLEANING AND MAINTENANCE**” section. Then assemble them completely.
3. Set filter into the portafilter, do not add coffee powder.
4. Insert the portafilter into the appliance from the “**LOCK**” position, and turn it anticlockwise until it is at the “**CLOSE**” position.
5. Place the carafe on the drip tray.
6. Operation the appliance according to the section of “**MAKE ESPRESSO COFFEE**” and “**FROTHING MILK**”. Repeat 2-3 times.

## MAKE ESPRESSO COFFEE

1. Turn the tank cover anticlockwise to remove it. Pour water into the water tank with the carafe, the water level should not exceed the maximum level.  
**Note:** The carafe has the cup marks, the maximum tank capacity is 4 cups. The minimum tank capacity is 2 cups.  
Before pouring water into the water tank, be sure the power is unplug and the steam knob is in the OFF position.
2. Turn the portafilter clockwise to remove it, add coffee powder to the filter with the measuring spoon, then compress the coffee powder into a dense.  
**Note:** The filter has 2 cups and 4 cups. Choose the right filter to make desired cups of espresso.
3. Set filter into the portafilter, then insert the portafilter into the appliance from the “Insert” position, and turn it anticlockwise until it is at the “LOCK” position. (see Fig. 1)

 







Fig. 1

4. Place the carafe on the drip plate.
5. Connect the plug, then turn the steam knob to  position, and the indicator is light on. After waiting for about 2 minutes, espresso will flow out.
6. After dispensing the right amount of espresso. you should turn steam knob to  position, and the indicator goes out. The espresso is ready to serve.  
**Note:** Do not leave the coffee maker unattended after plugged, as you need operate manually sometimes!
7. After making the espresso, remove the portafilter and pour out the used coffee powder.  
**Note:** Before removing the portafilter or opening the tank cover, make sure the pressure in the tank has been released. The method is to turn the steam knob to the  position firstly, the steam in the tank will eject from the steam wand.

## FROTHING MILK

1. Fill a milk frothing pitcher with 100 grams of milk, it is recommended to use cold whole milk for making milk foam.  
Pitcher Size: It is recommended that the diameter is not less than 70±5mm, the volume of milk will increase by 2 times after frothing, make sure the pitcher is high enough.
2. Turn the steam knob to the  position, the indicator will light on. Steam will be released from the steam wand.
3. Put the steam wand into the milk to a depth of about 2 cm, move the milk frothing pitcher up and down to froth milk.
4. Turn the steam control knob to  position when you get enough milk foam.  
**Note:** Clean the steam wand with wet sponge immediately after frothing. But be careful not to get hurt!  
It is recommended to let the appliance cool down before making espresso again. Otherwise, your espresso may have a burning smell.

## CLEAN AND MAINTENANCE

1. Shut off the power and let the espresso machine cool down completely.
2. Clean the espresso machine, carafe, drip tray with a sponge and dry them after each use.

**Note:** Do not clean with alcohol or solvent cleaner. Never immerse the whole espresso machine into the water for cleaning



3. Turn the portafilter clockwise to remove it, pour out the coffee powder, then clean the portafilter with cleanser and rinse it with water.

**Note:** The portafilter is not dishwasher safe, do not clean it in the dishwasher.

4. Clean all the attachments and dry them.

## CLEANING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically clean the water tank and remove limescale as follows

1. Fill the water tank with water and descaler to the MAX level, please use “coffee machine descaler”, the ratio of water and descaler should base on the instruction of descaler. Please use “household descaler”, you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. Put the portafilter (no coffee powder in it) and carafe in place.
3. Turn the steam knob to  position, the indicator will light on, and make two cups espresso (about 2Oz). Then turn the steam knob to OFF position and wait for 5s.
4. Turn the steam knob to  position and make steam for 2min, then turn the steam knob to OFF position to stop the unit immediately, make the descalers deposit in the unit at least 15 minutes.
5. Repeat steps 4-5 at least 3 times.
6. Fill the water tank with tap water to the MAX level, Repeat steps 4-5 at least 3 times until no descaler is left.

## TROUBLE SHOOTING

Symptom	Cause	Solutions
Carafe leaking or water leaking from the lid of carafe	The carafe is not located properly	Let centreline of carafe aligns with the portafilter.
	The level of water in the tank exceeds the MAX level.	The water level in the tank should be within the scale of MIN and MAX.
The metal parts in the water tank rust.	Descaler is not the recommended type. It may corrode the metal parts in the water tank.	Use “household descaler”
Water leaks from the bottom of the espresso machine.	There is too much water in the drip tray.	Please clean the drip tray.
	The water pipe inside the machine is damaged.	Please contact Amazon seller for replacement.
Water leaks out of the outer side of the filter.	There is some coffee powder on the filter edge.	Wip out the coffee powder on the edge.
Acid (vinegar) taste exists in Espresso coffee.	Not cleaned properly after use.	Clean the machine several times before use.
	The coffee powder is stored in a hot or wet place for a long time. The coffee powder turns bad.	Please use fresh coffee powder, sealed and stored the coffee powder in a cool and dry place.
The espresso machine is not working.	The espresso machine is not plugged well.	Plug the power cord into the socket correctly.
	The espresso machine is malfunctioning.	Please contact Amazon seller for replacement.
The milk cannot be frothed.	The indicator is not on.	Only after the indicator is on, the steam can be used to froth milk.
	The container is too big or the shape is not suitable.	Use professional milk frothing pitcher.
	Use Skimmed milk or plant milk.	Use whole milk (butterfat>3%).

Do not take apart the appliance by yourself if the cause of a malfunction is not found, you had better contact Amazon seller.

## ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.