



TEMPERATURE SETTING & CALIBRATION

1.0 PRE-SET TEMPERATURE

1.1 The valve temperature is pre-set at 38°C but on certain installations the setting may need to be adjusted.

2.0 CHECK TEMPERATURE & CALIBRATION

2.1 Fully turn on valve water flow.

Note: Ensure the hot water is above 60°C

2.2 Set the Temperature Control Knob at the 38°C position & check the temperature of water from the handset- if not at 38°C continue below.

2.3 Remove the centre cap & knob securing screw from the Temperature control Knob.

2.4 Fully remove the Temperature Control Knob.

2.5 Relocate the Temperature Control Knob approximately 3mm back on to the splined shaft.

Note: Hold in position.

2.6 If the pre-set temperature is too hot turn the Temperature Control Knob clockwise to obtain the 38°C.

Note: Turn in small increments & allow 10 seconds between each to allow the cartridge to stabilise.

Note: If too cold turn the Temperature Control Knob anti-clockwise to obtain 38°C.

2.7 When set at 38°C carefully remove the Temperature Control Knob from the splined shaft.

2.8 Carefully relocate the Temperature Control Knob on the splined shaft aligning the 38°C (on the knob) with the line on the fixed ring located on the valve body.

Note: Ensure that the knob is not rotated during this operation, as the temperature will be altered.

2.9 Secure the Temperature Control Knob with the fixing screw & replace the centre cap.