 


INSTALLATION

 
 
Product Manual

Version: 150282US-01-25A-XD

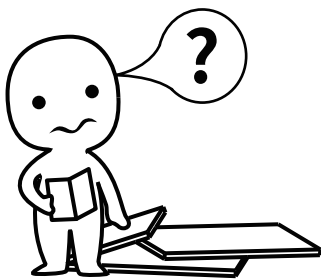


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

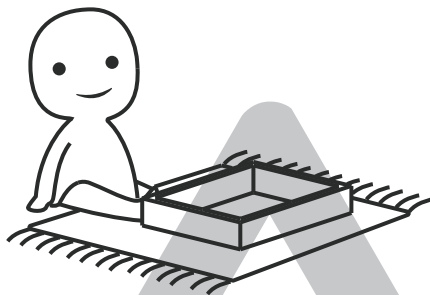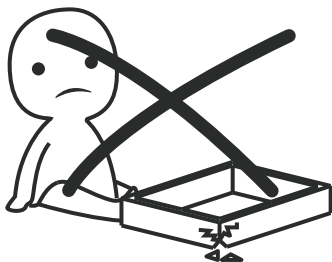



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

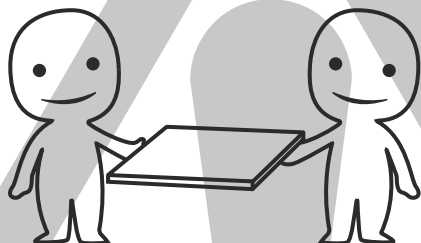

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

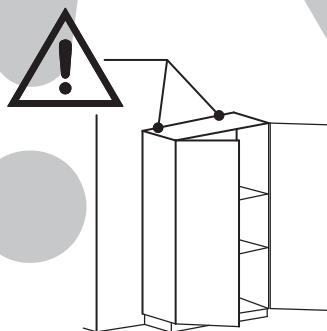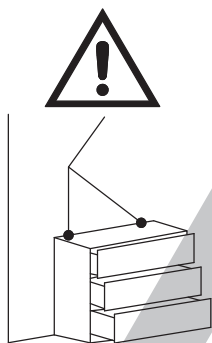

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

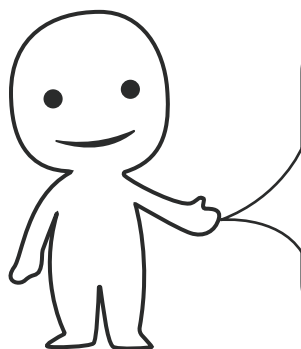


Please prepare the following tools

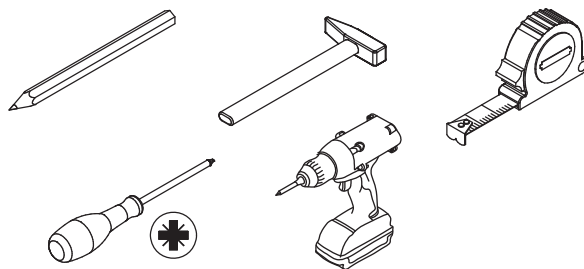 

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 188+4

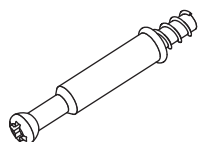

Ø 6 x 35 mm

B x 196+4



 
Ø 15 x 9 mm

C x 152+4



Ø 6 x 30 mm

D x 67+4




Ø 4 x 35 mm

E x 112+4




Ø 3 x 12 mm

 F x 12+1

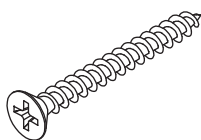


Ø 4 x 50 mm

 G x 4



H x 4

 

J x 5



K x 4

 


L x 14+1




Ø 4 x 18 mm

M x 8

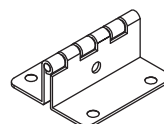

N x 44+4

 


O x 52+4




















Ø 3 x 14 mm

 
P x 8+1

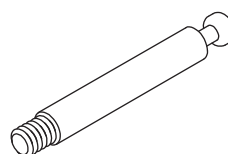

Q x 8+1



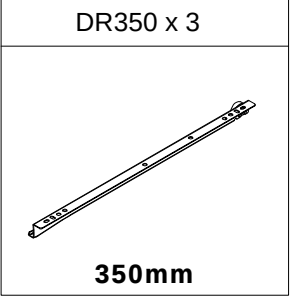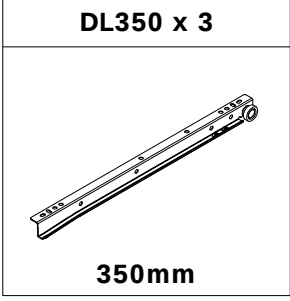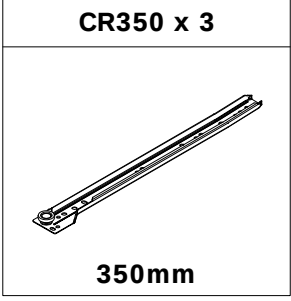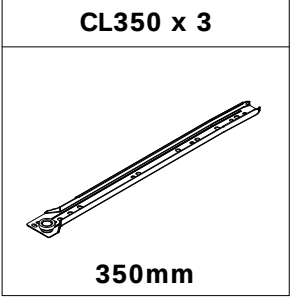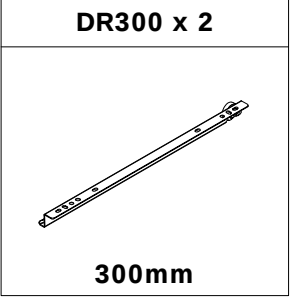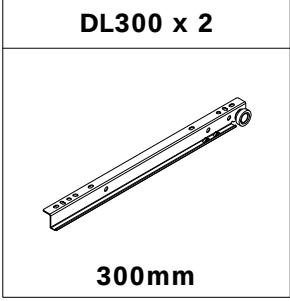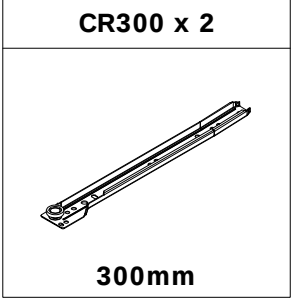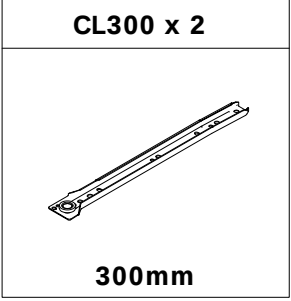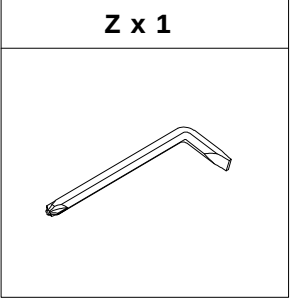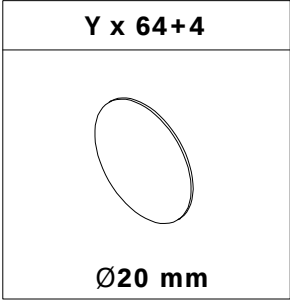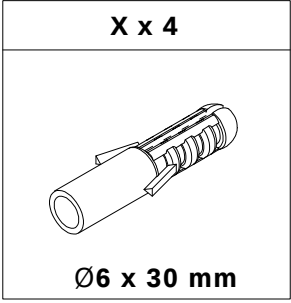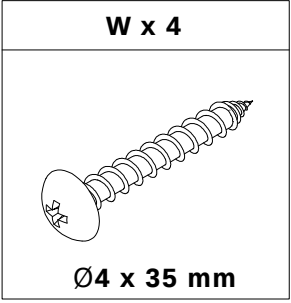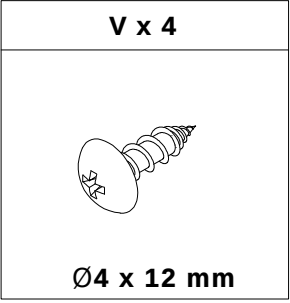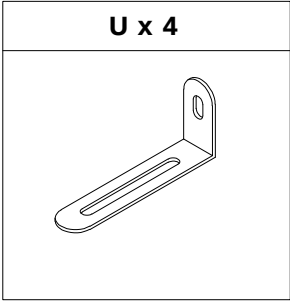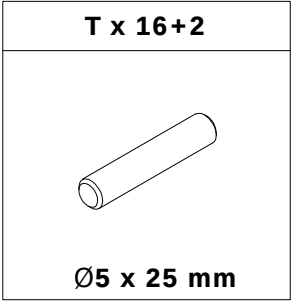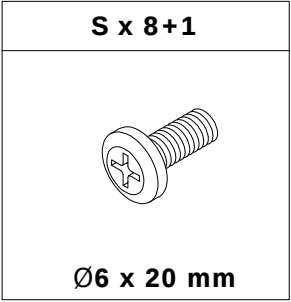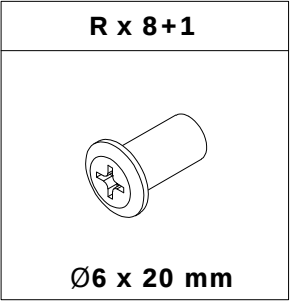                 

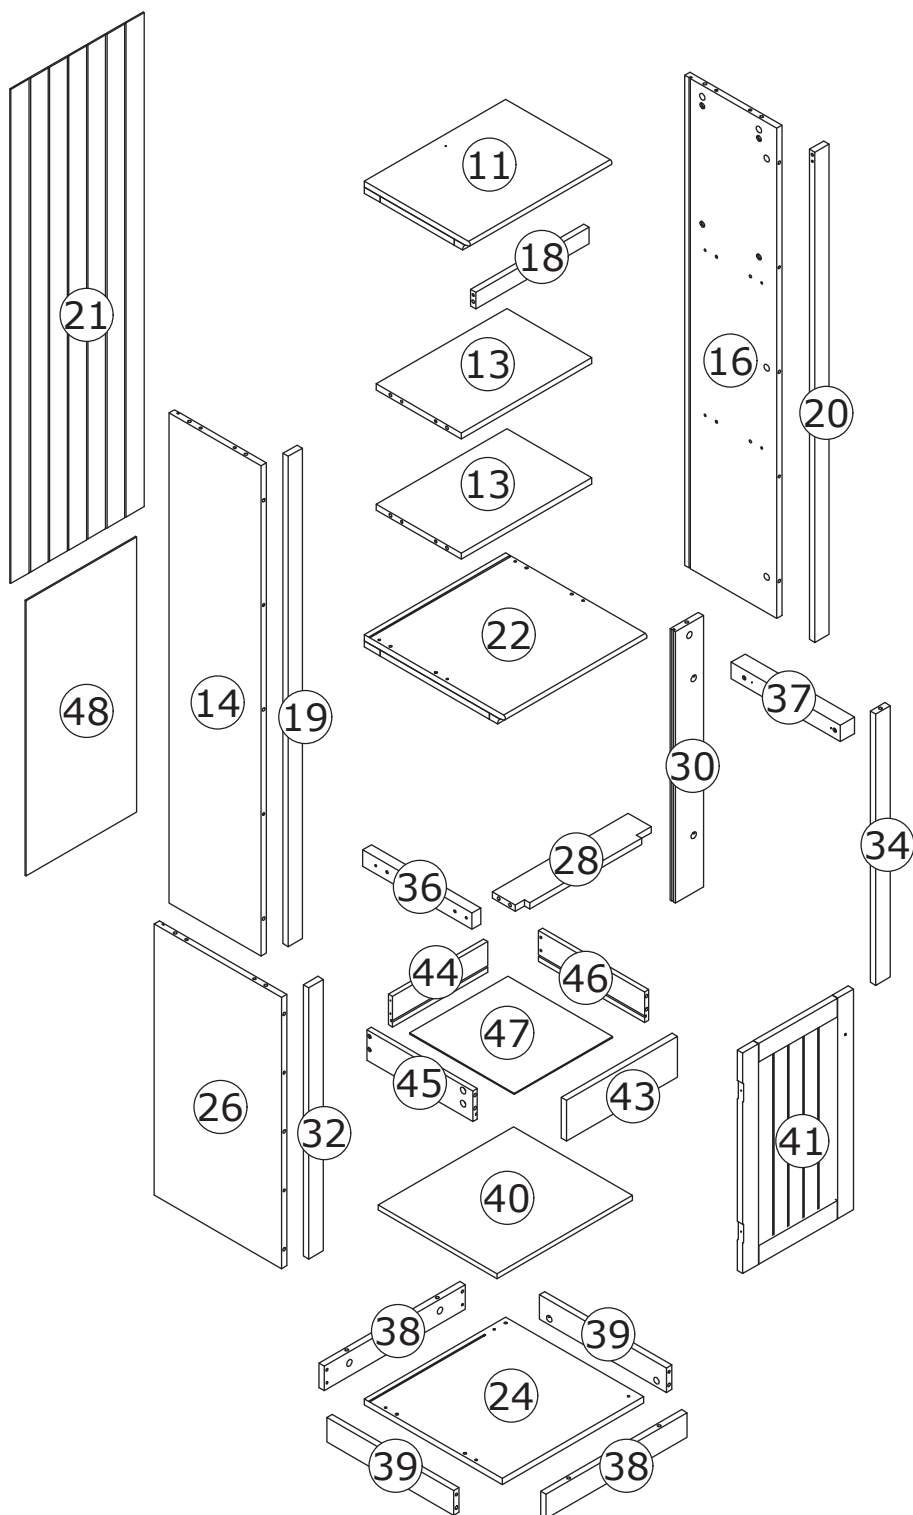 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

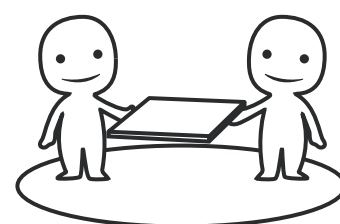

ASSEMBLED BY 2 ADULTS

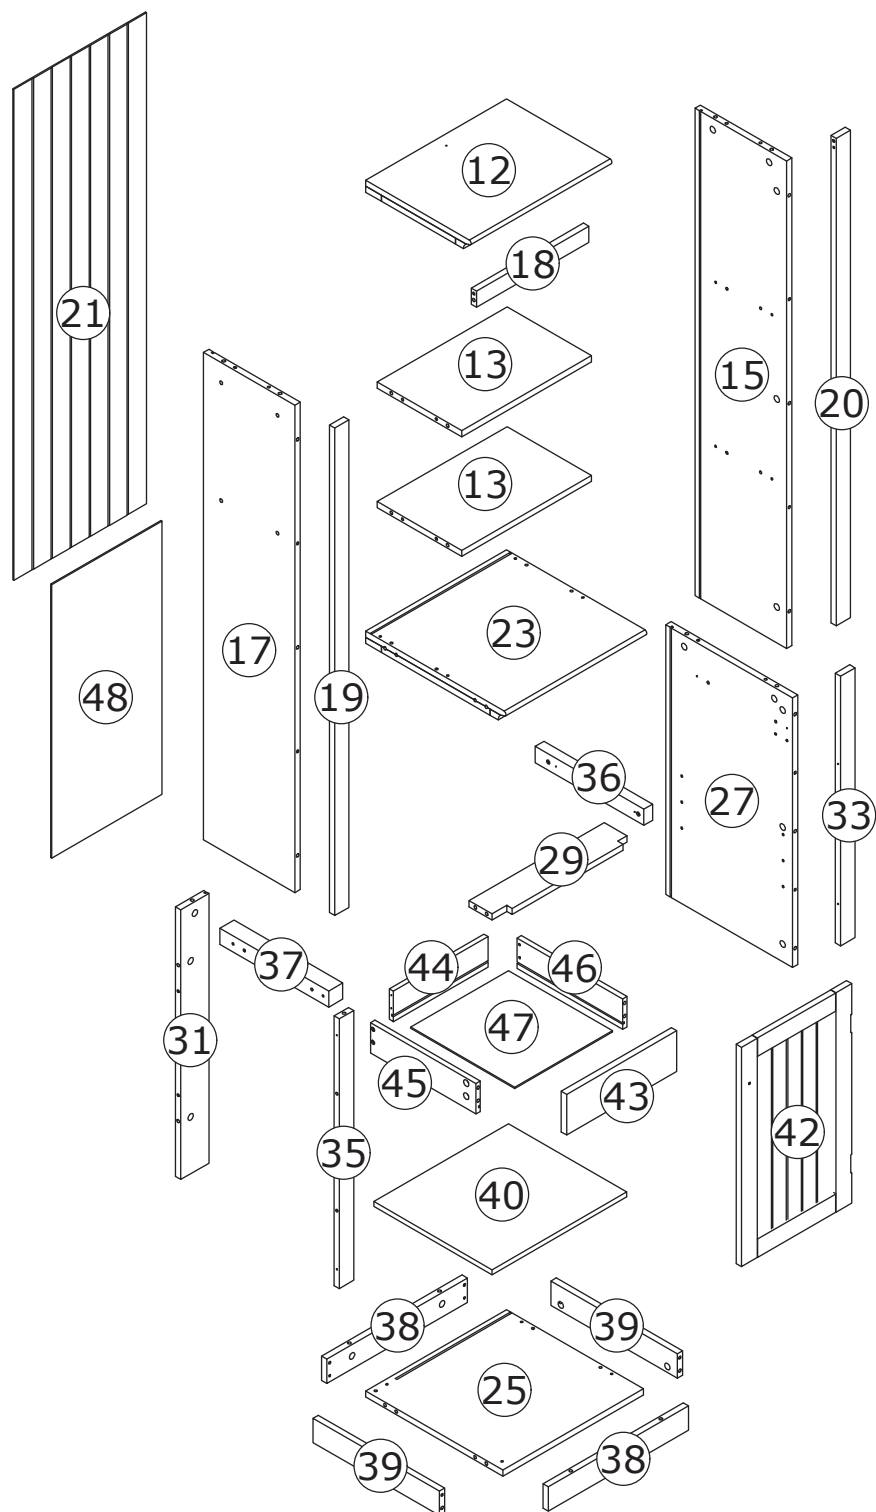 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

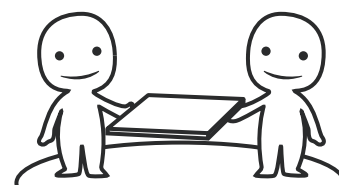

ASSEMBLED BY 2 ADULTS

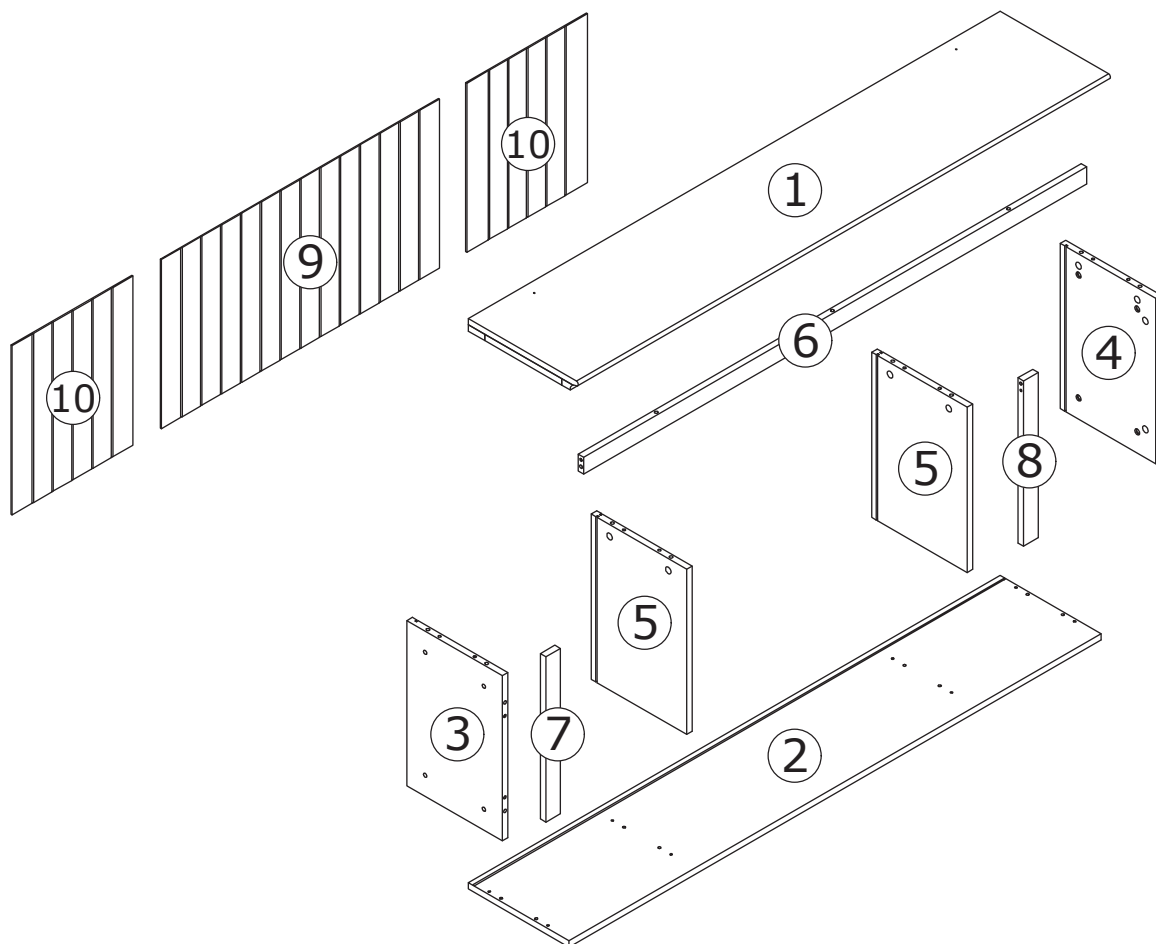 


⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

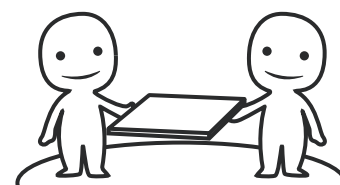

ASSEMBLED BY 2 ADULTS

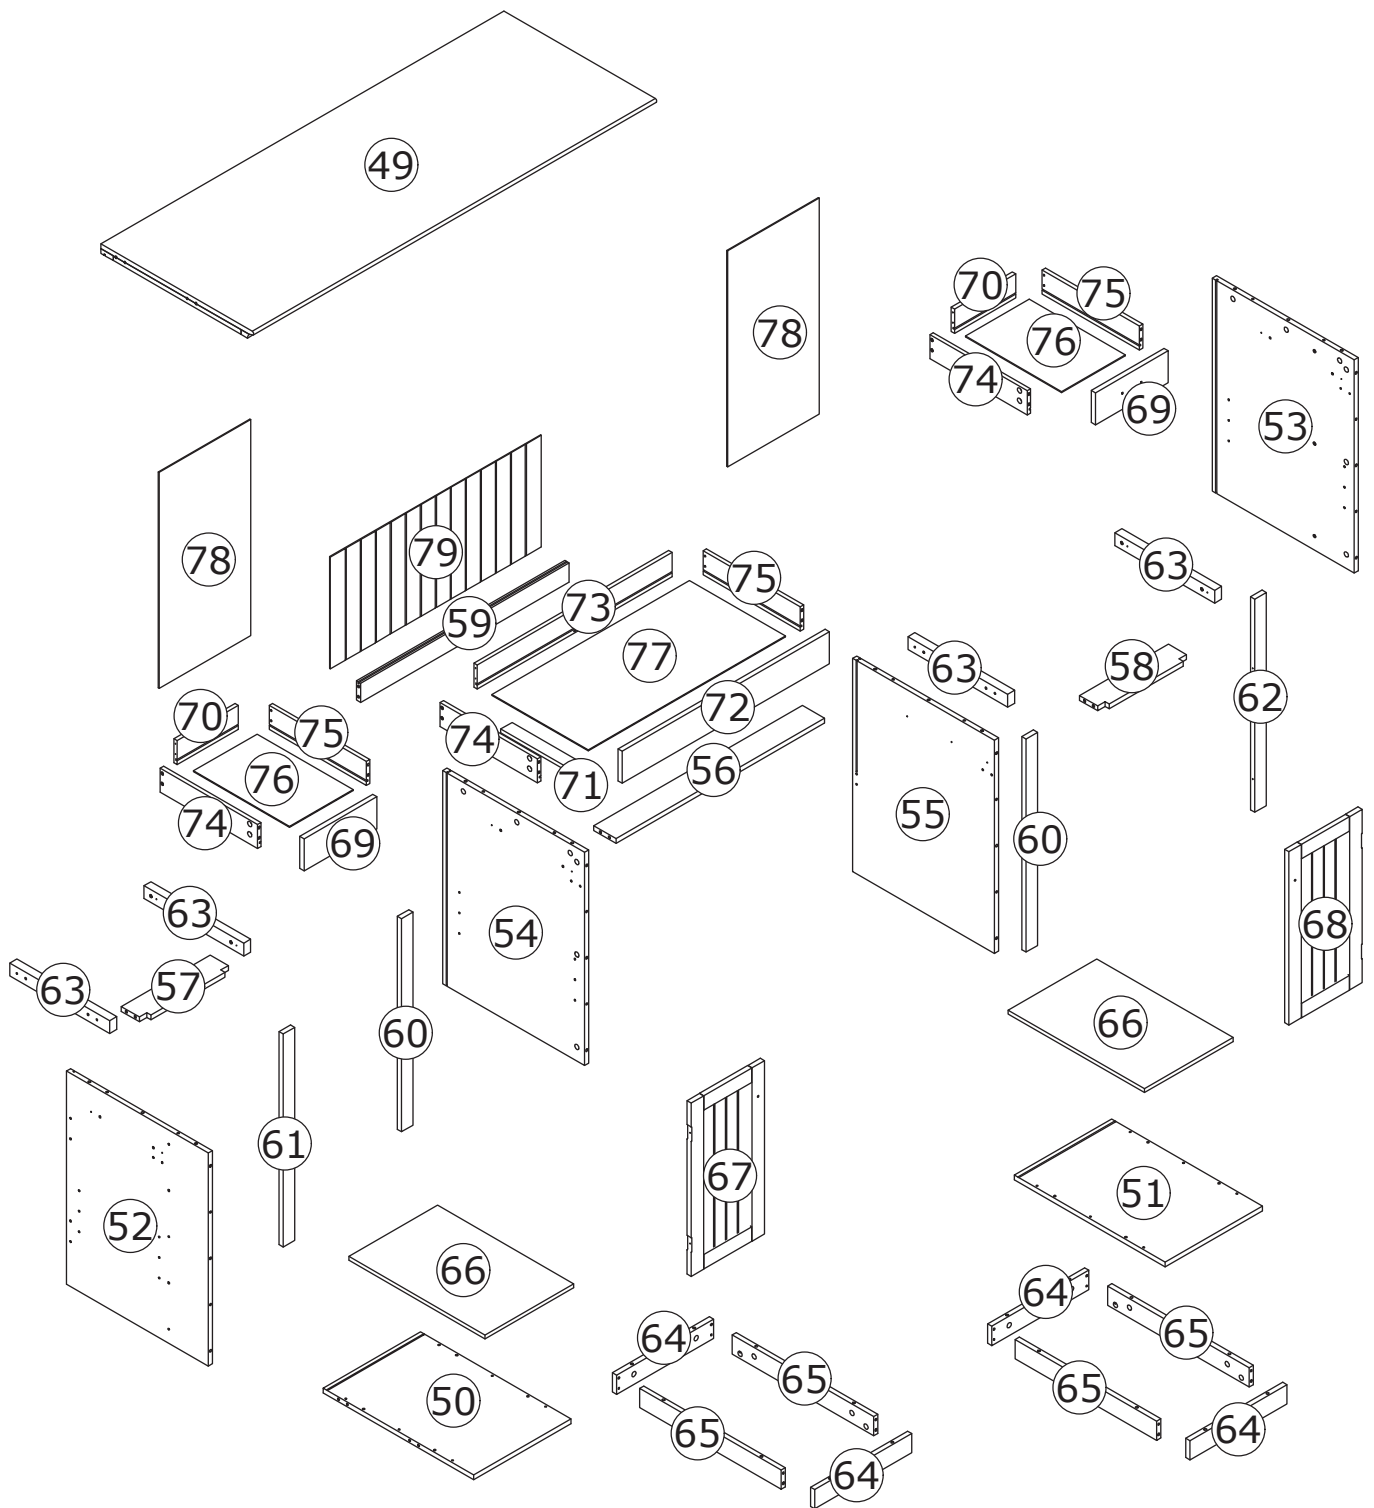 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

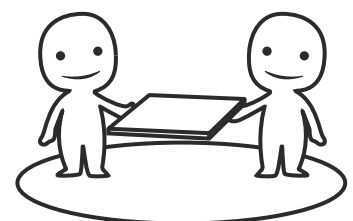


ASSEMBLED BY 2 ADULTS

 
① x1

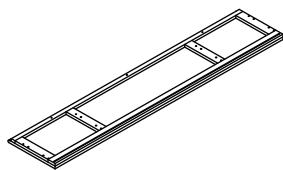


② x1

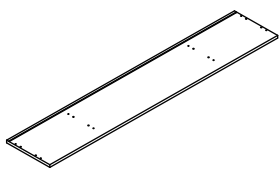 


③ x1

 


④ x1

 

⑤ x2

 

⑥ x1

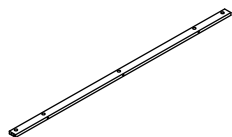 


⑦ x1



⑧ x1



 
⑨ x1




⑩ x2



 
⑪ x1




⑫ x1

 


⑬ x4

 


⑭ x1

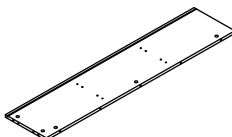 


⑮ x1

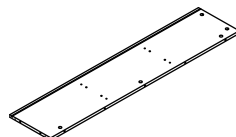 

⑯ x1

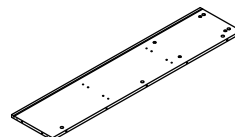 


⑰ x1

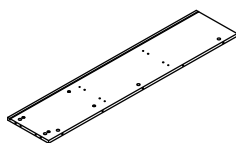 


⑱ x2



 
⑲ x2

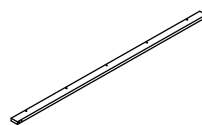


⑳ x2

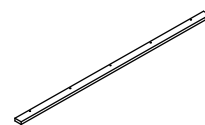 


㉑ x2

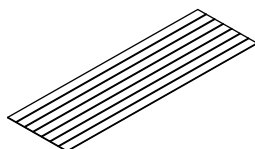 


㉒ x1

 


㉓ x1

 


㉔ x1

 


25 x1

 

26 x1

 

27 x1

 


28 x1



29 x1



 30 x1



31 x1



32 x1



33 x1



34 x1



35 x1



36 x2



37 x2



38 x4



 
39 x4




40 x2



41 x1



42 x1

 

43 x2



44 x2



45 x2



 
46 x2




47 x2




48 x2




④⑨ x1

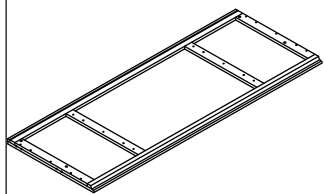 


⑤0 x1

 


⑤1 x1

 


⑤2 x1

 


⑤3 x1

 

⑤4 x1

 

⑤5 x1

 

⑤6 x1



⑤7 x1



⑤8 x1



 
⑤9 x1



⑥0 x2



⑥1 x1



⑥2 x1



 
⑥3 x4




⑥4 x4




⑥5 x4




⑥6 x2

 

⑥7 x1

 

⑥8 x1

 

⑥9 x2



⑦0 x2



 
⑦1 x1



⑦2 x1



73 x1




74 x3




75 x3



 
76 x2




77 x1

 



78 x2

 



79 x1

 








1

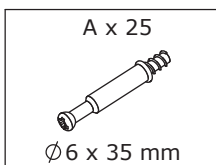  

  Screw eccentric rod (A) onto plate 11, 14, 16, 22, 24 and 32 as shown.

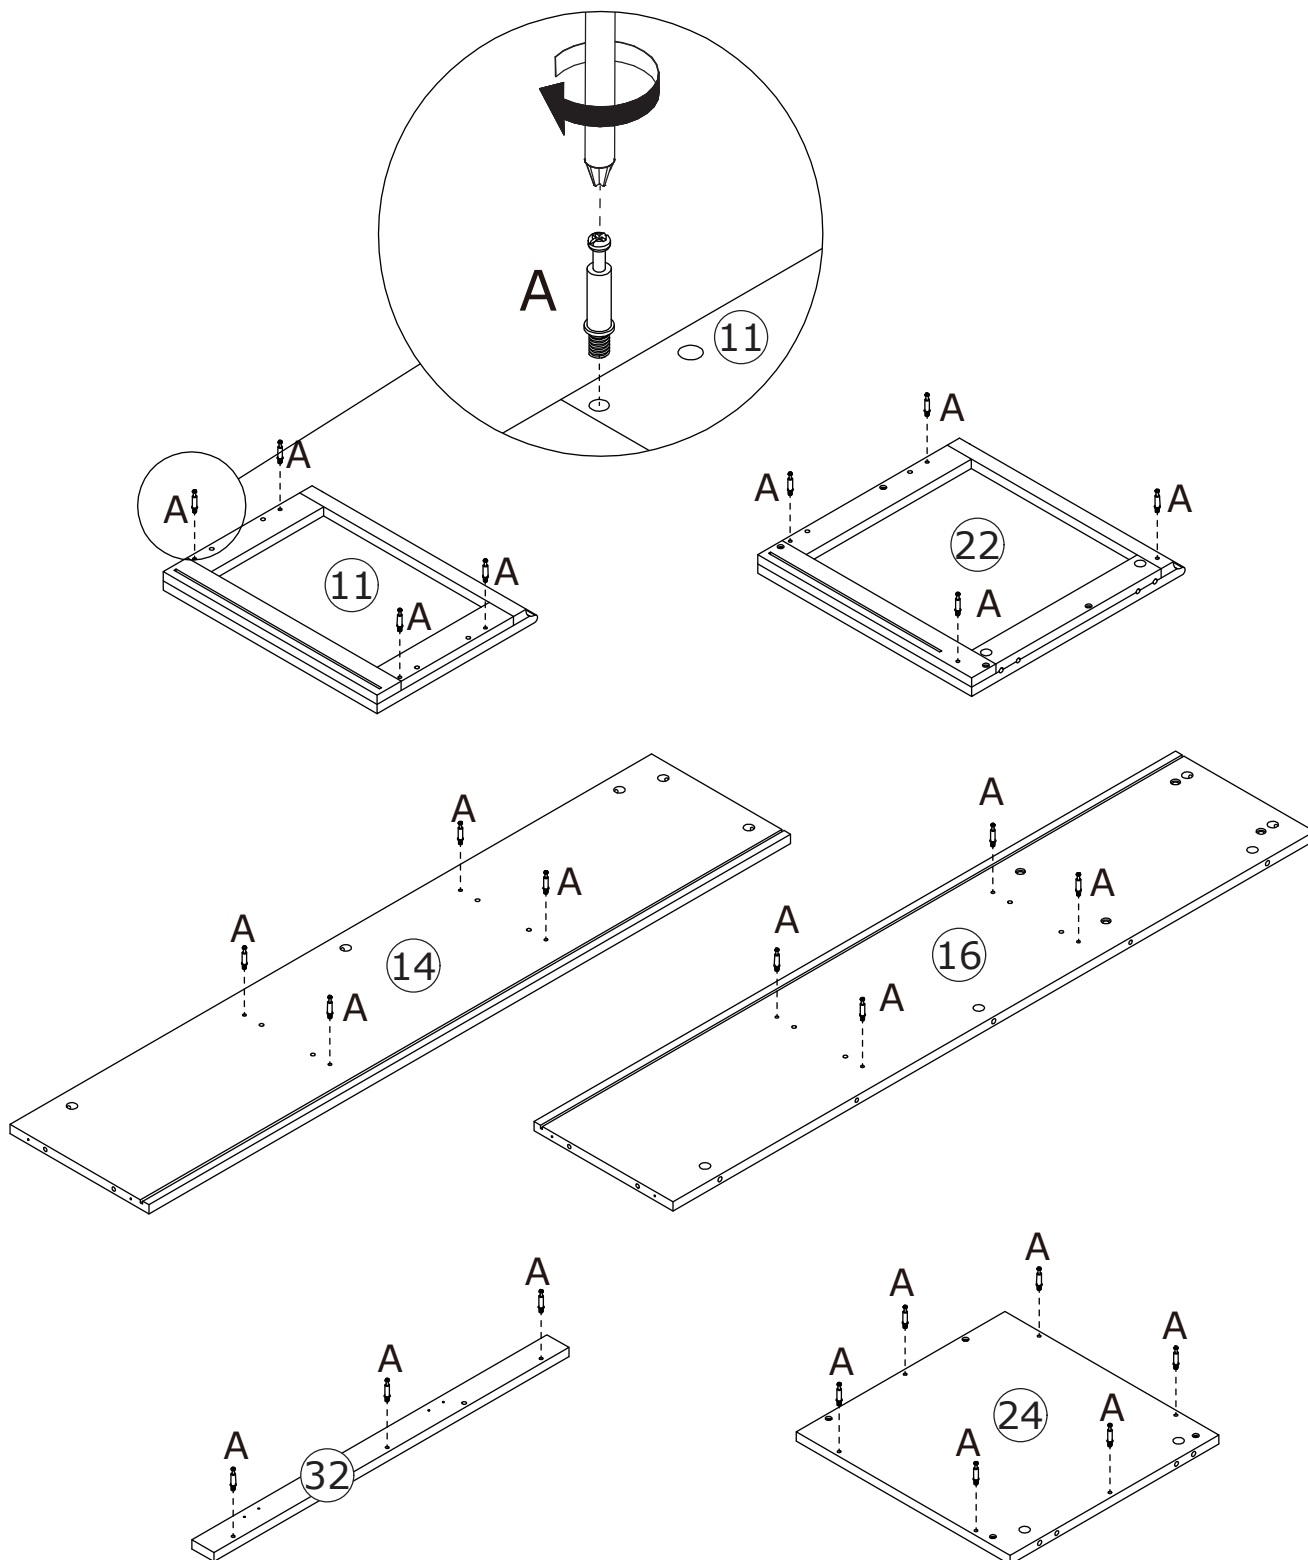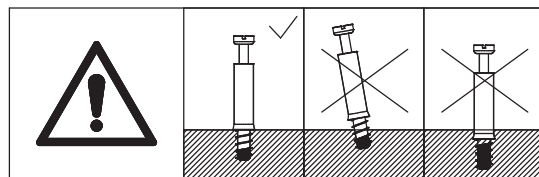


2

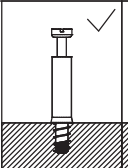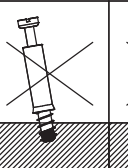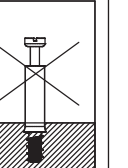       A x 2  Ø 6 x 35 mm	C x 2  Ø 6 x 30 mm	D x 2  Ø 4 x 35 mm	
E x 3  Ø 3 x 12 mm	CL300 x 1  300 mm	   	




Connect plate 36 to plate 26 using wooden dowel (C), and secure with screw (D).

Secure slide rail (CL300) to plate 36 with screw (E).

 Screw eccentric rod (A) onto plate 26.

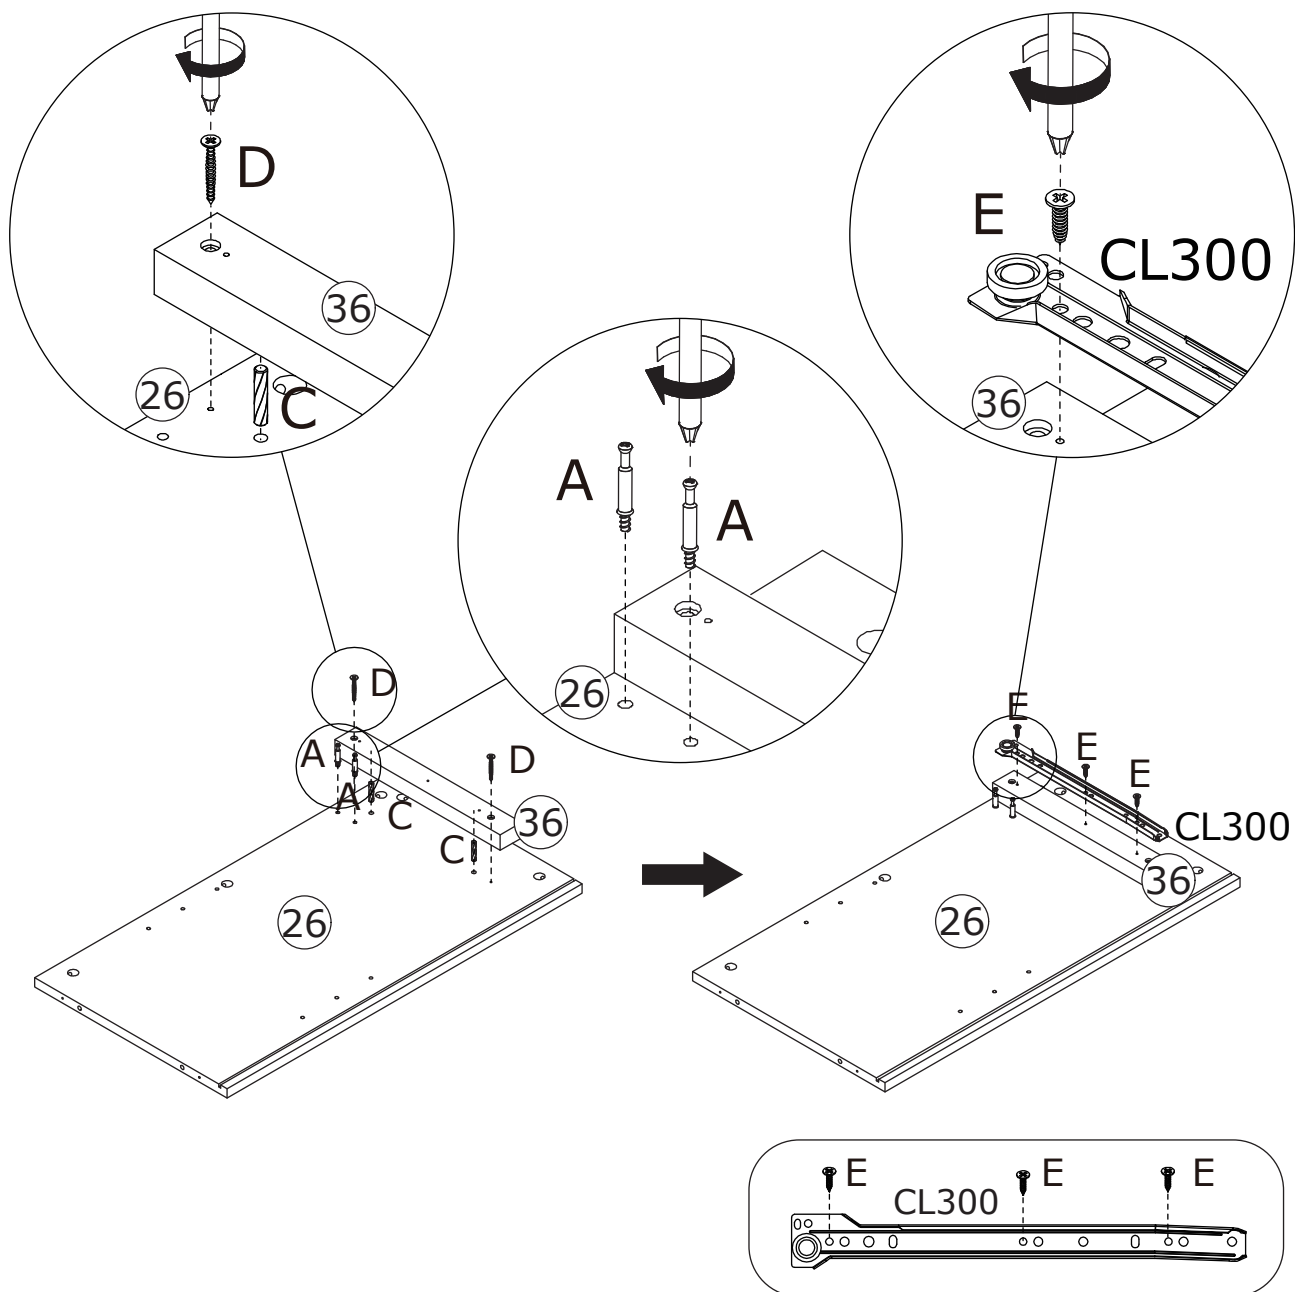


3

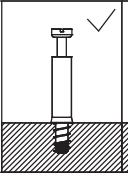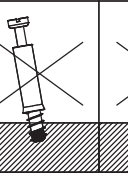   A x 2  Ø 6 x 35 mm	C x 2  Ø 6 x 30 mm	D x 2  Ø 4 x 35 mm	
E x 3  Ø 3 x 12 mm	CR300 x 1  300 mm	  	

Connect plate 36 to plate 27 using wooden dowel (C), and secure with screw (D).

Secure slide rail (CR300) to plate 36 with screw (E).

 Screw eccentric rod (A) onto plate 27.

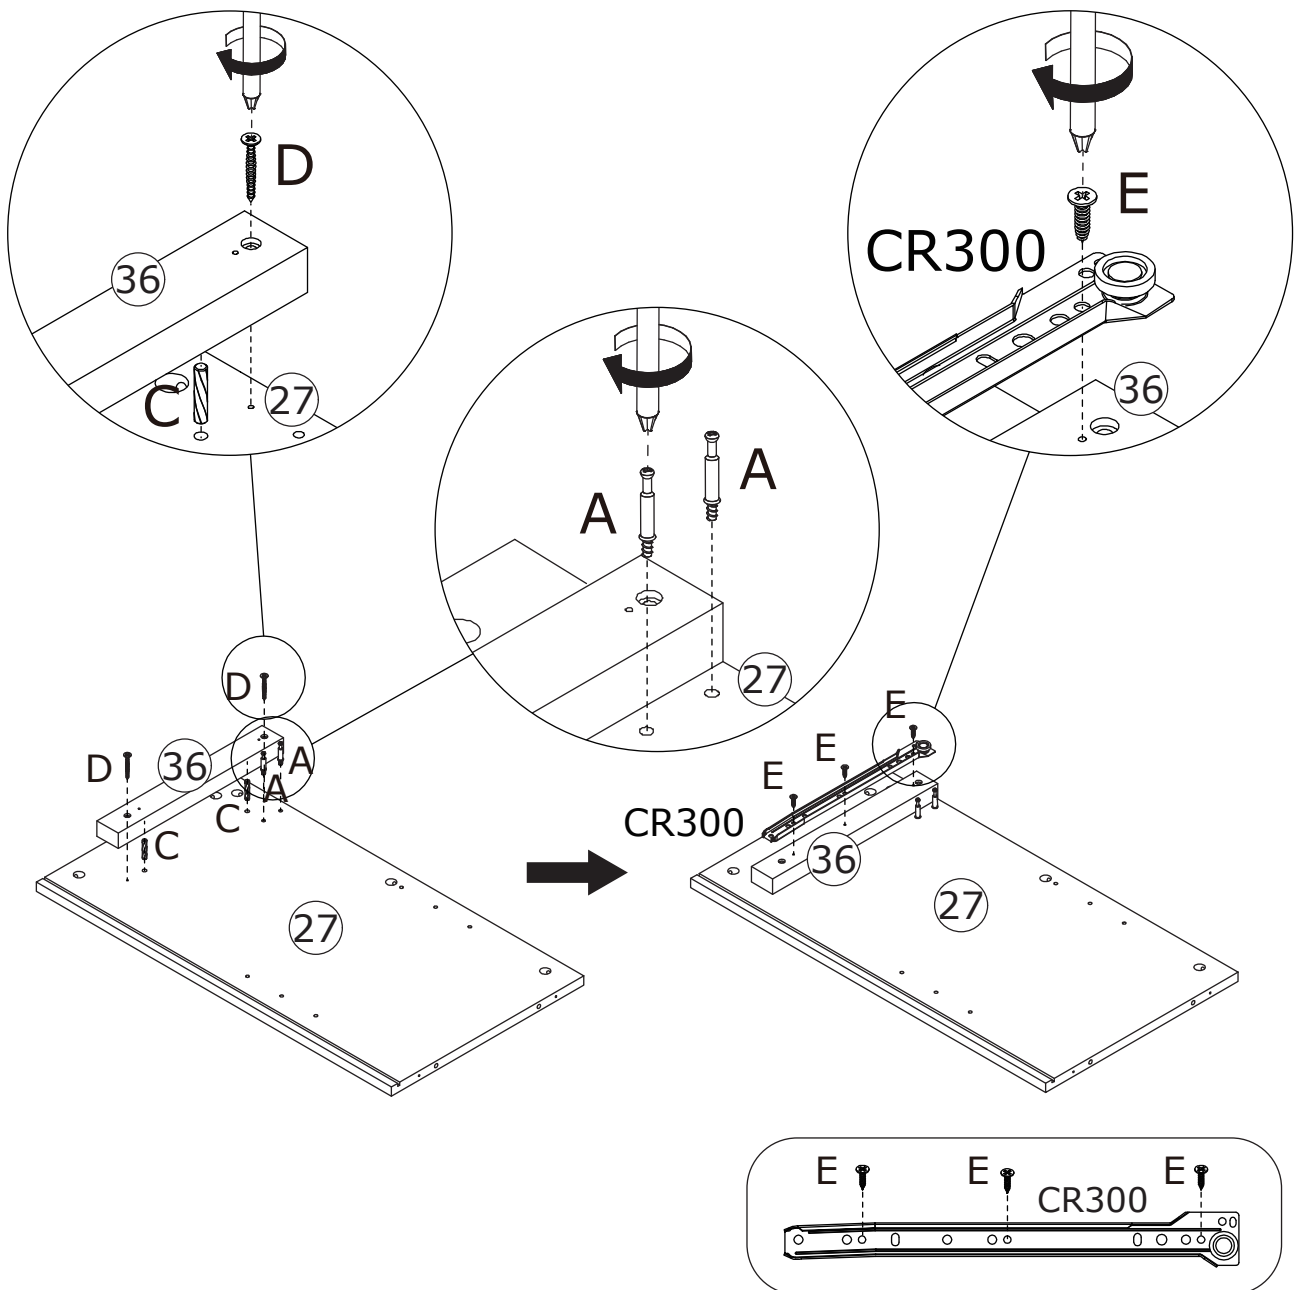

4

B x 8

 


Ø 15 x 9 mm








C x 8





Ø 6 x 30 mm



     
 
 
Connect plate 13 to plate 14 and 16 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

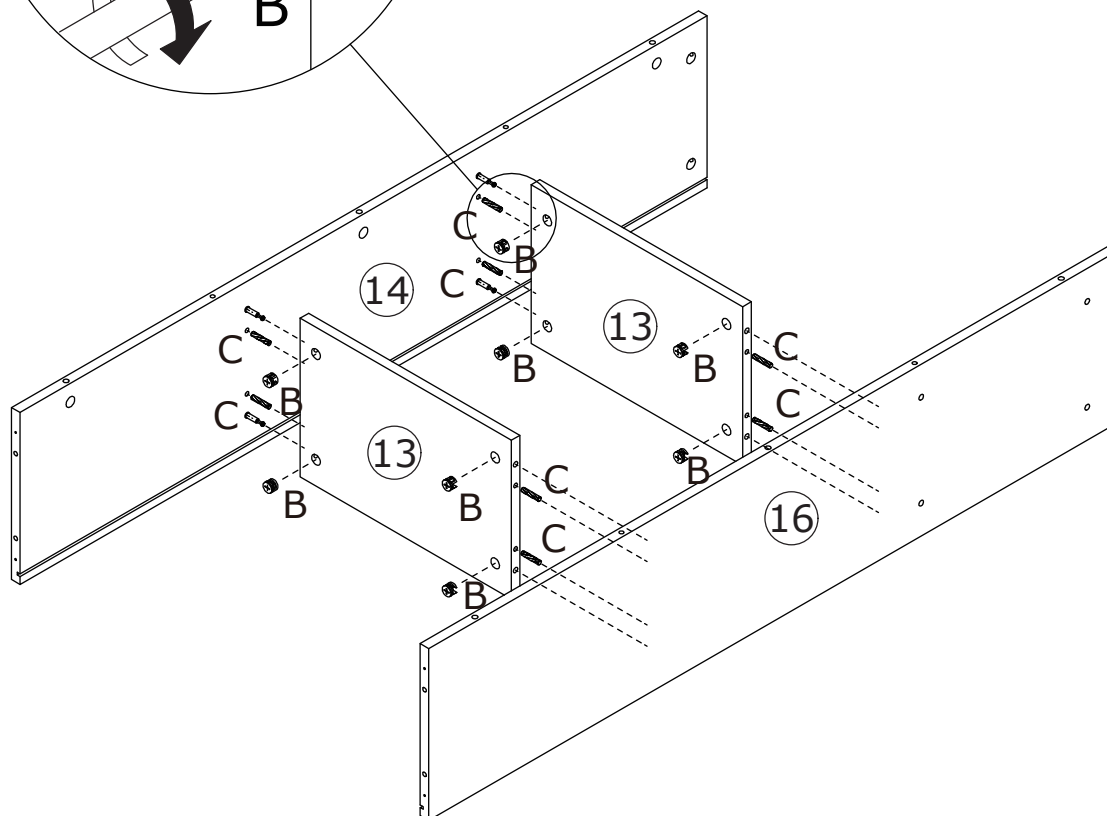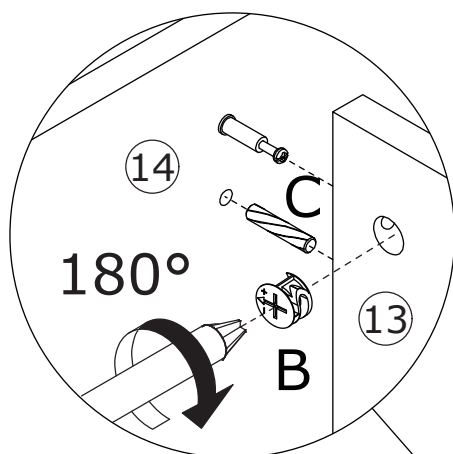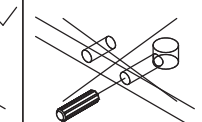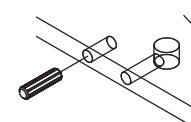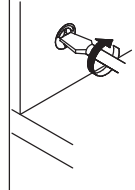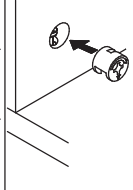




5

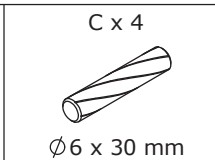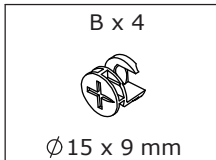  

   
Connect plate 11 to plate 14 and 16 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

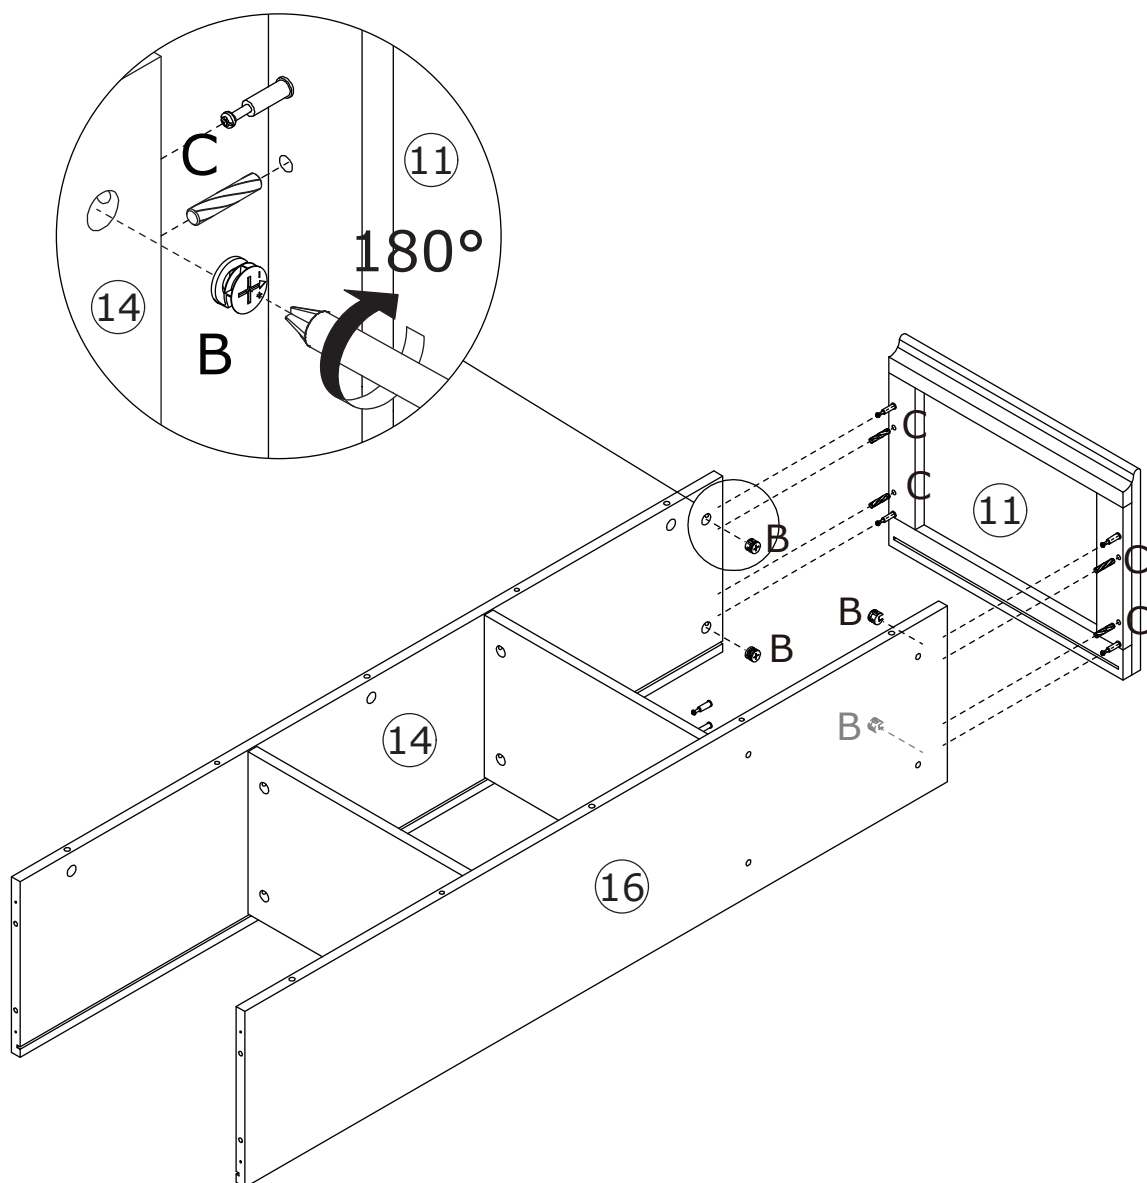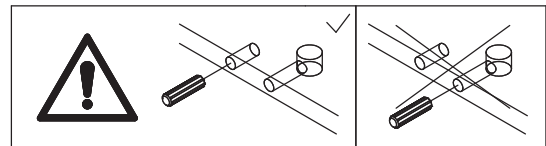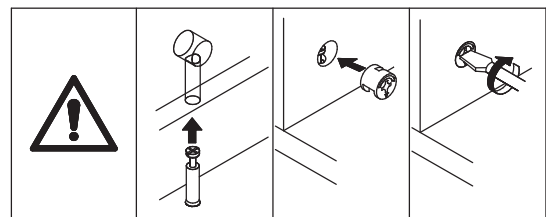


6

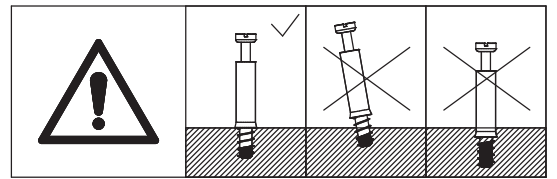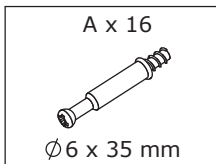   

 
Screw eccentric rod (A) onto plate 19 and 20 as shown.

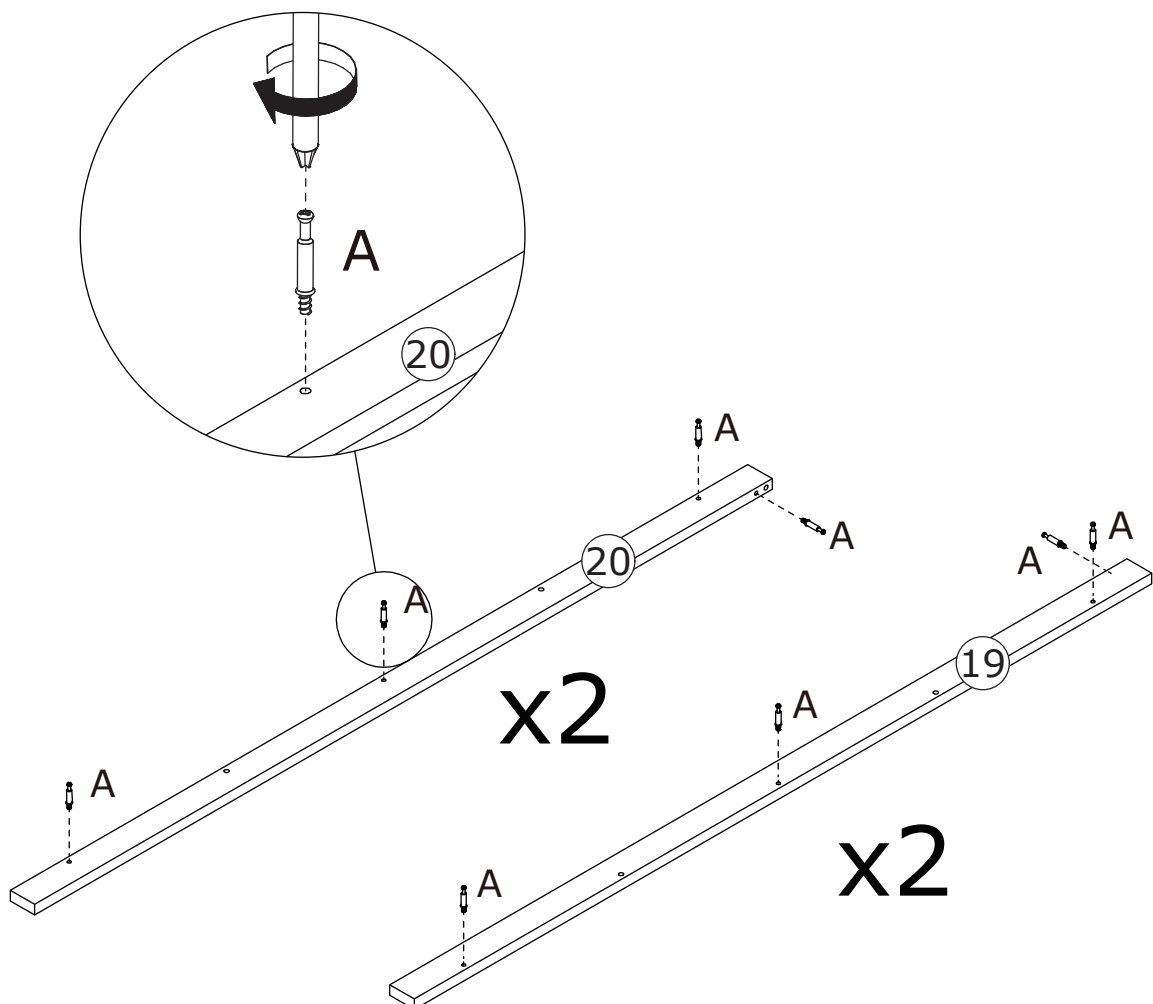

7

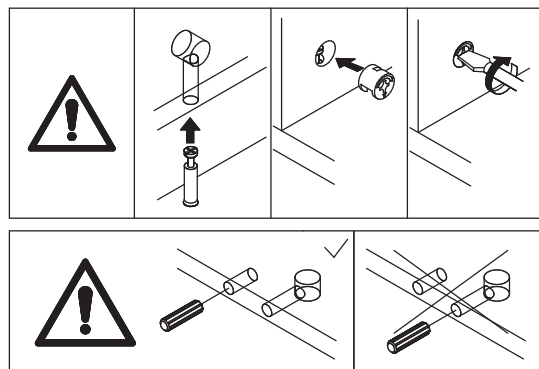 

 Connect plate 18 to plate 19 and 20 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

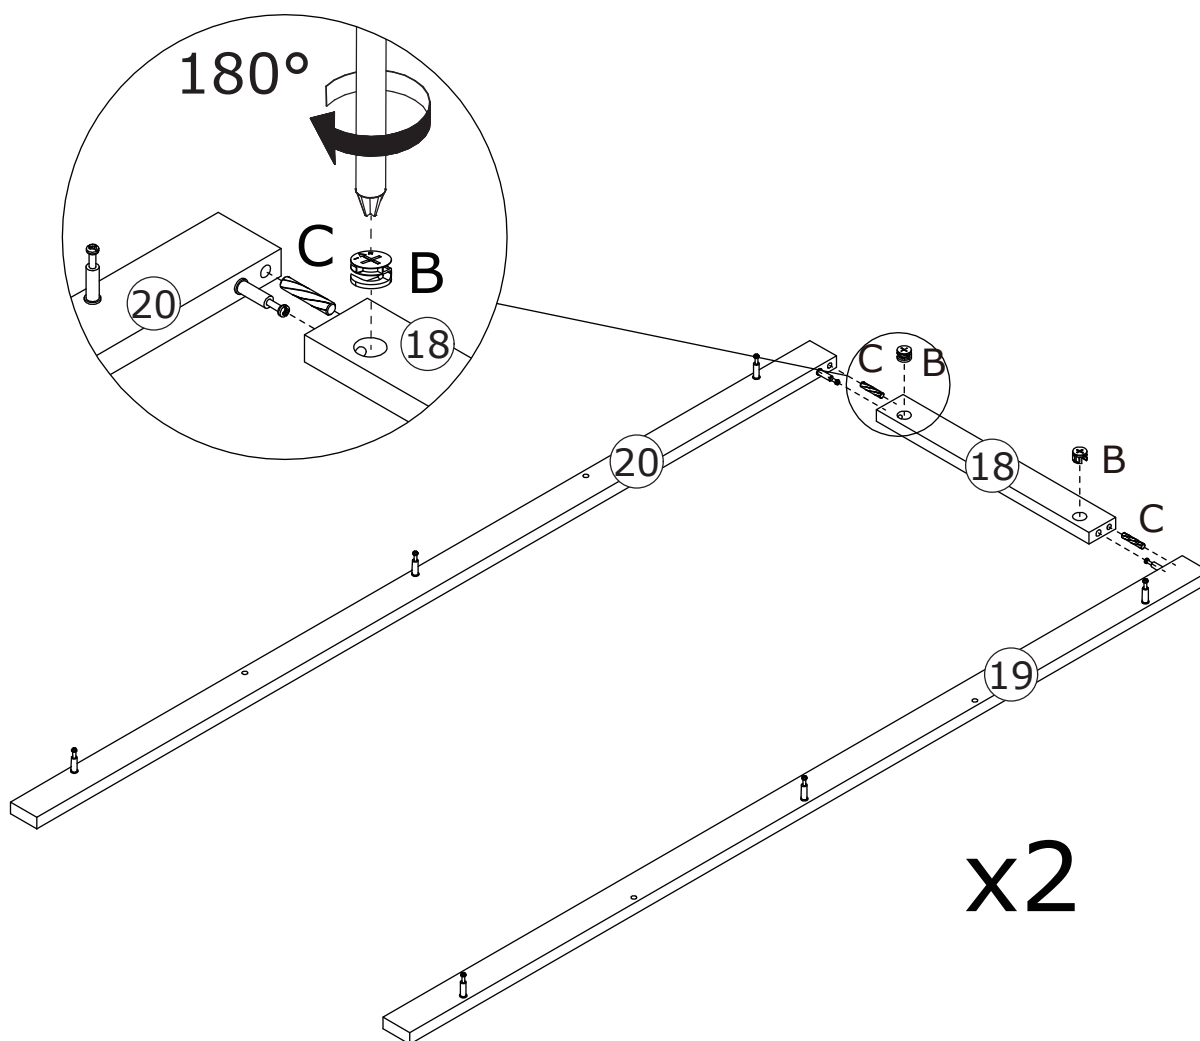

8

B x 6

 
 
 
 
 
 


Ø 15 x 9 mm


C x 4



Ø 6 x 30 mm

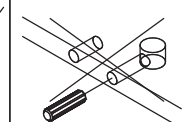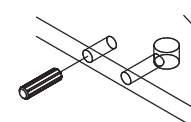


 Connect the two assembled components using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

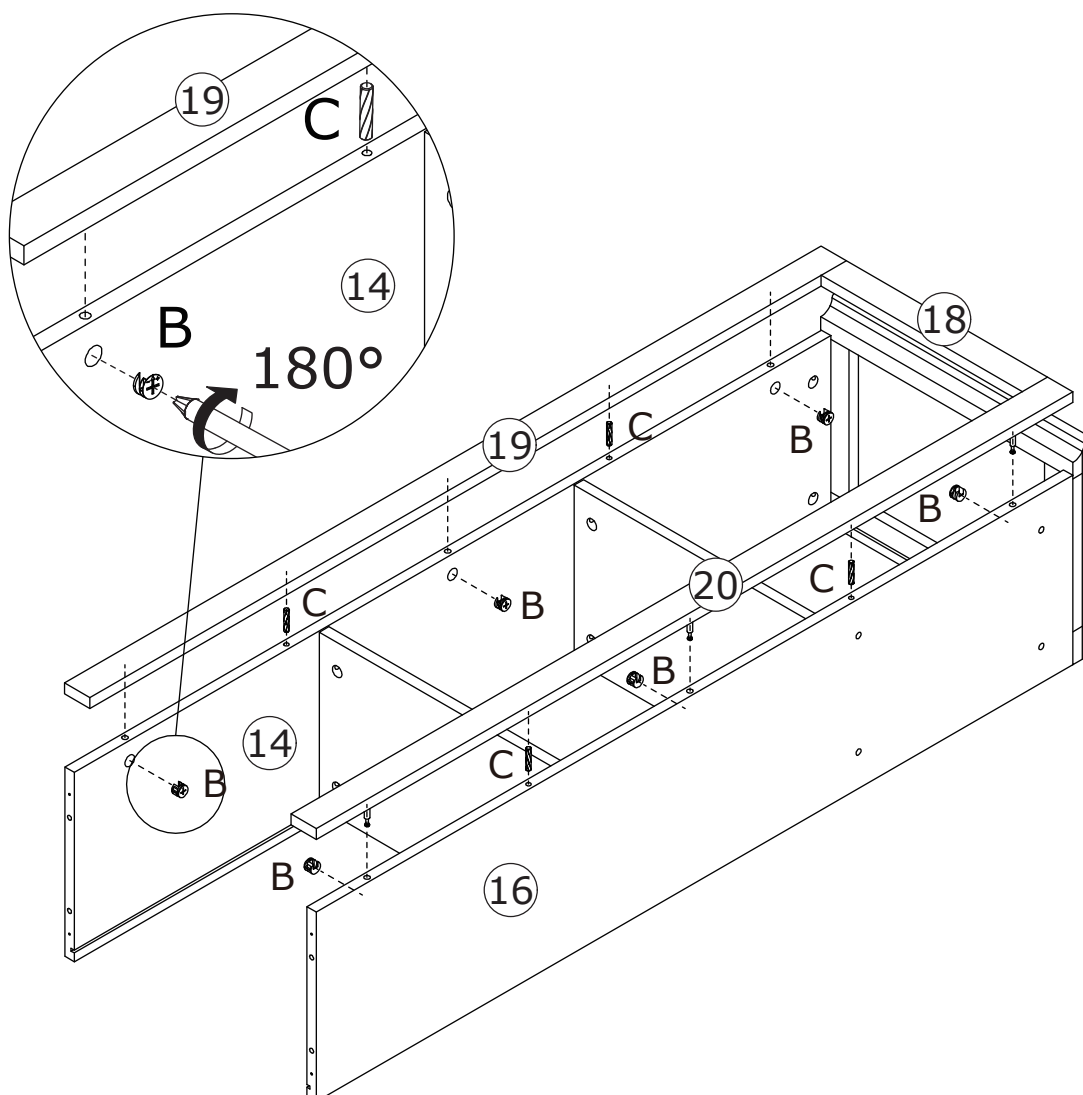


9

 Slide plate 21 along the available grooves as shown.



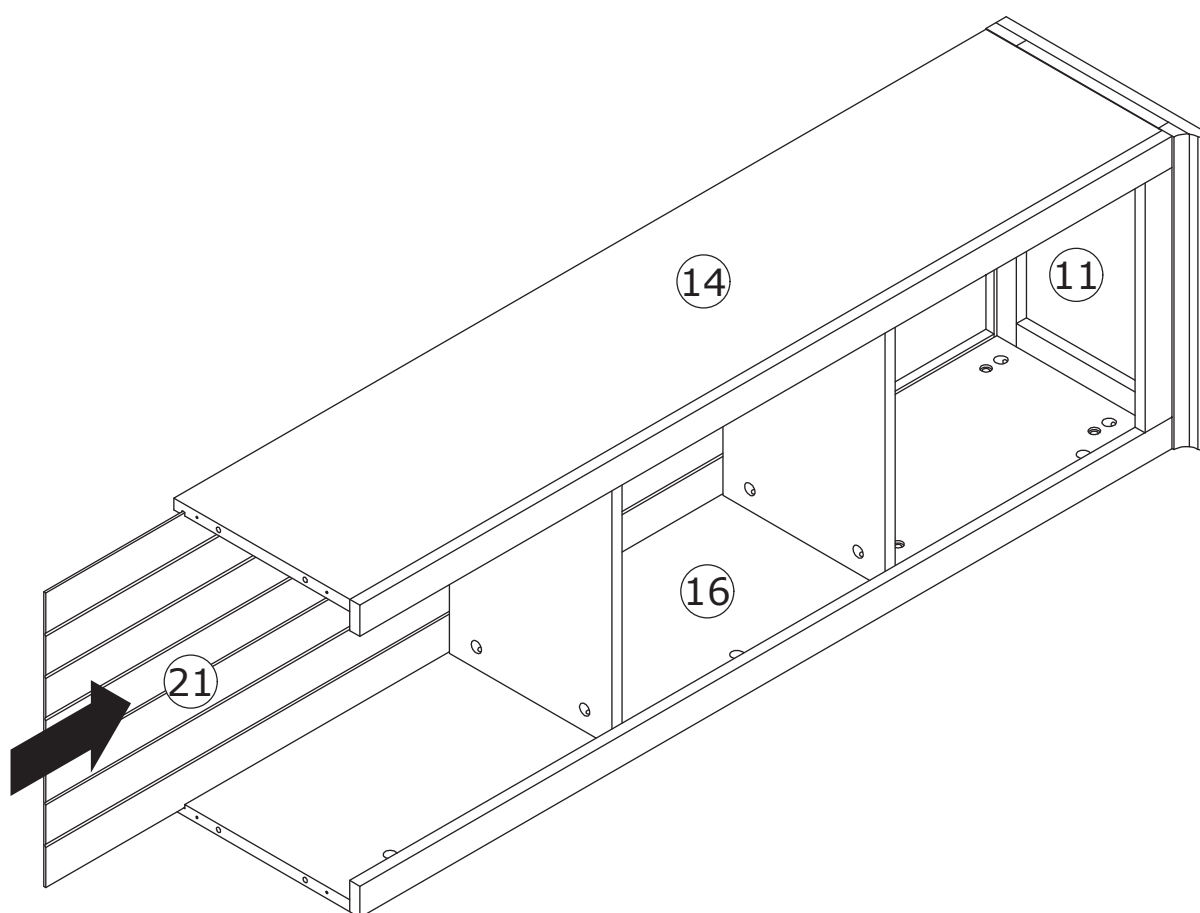


10

 
C x 4

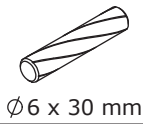

F x 4

   

 Attach plate 22 to plate 14 and 16 using wooden dowel (C), and secure with screw (F) as shown.

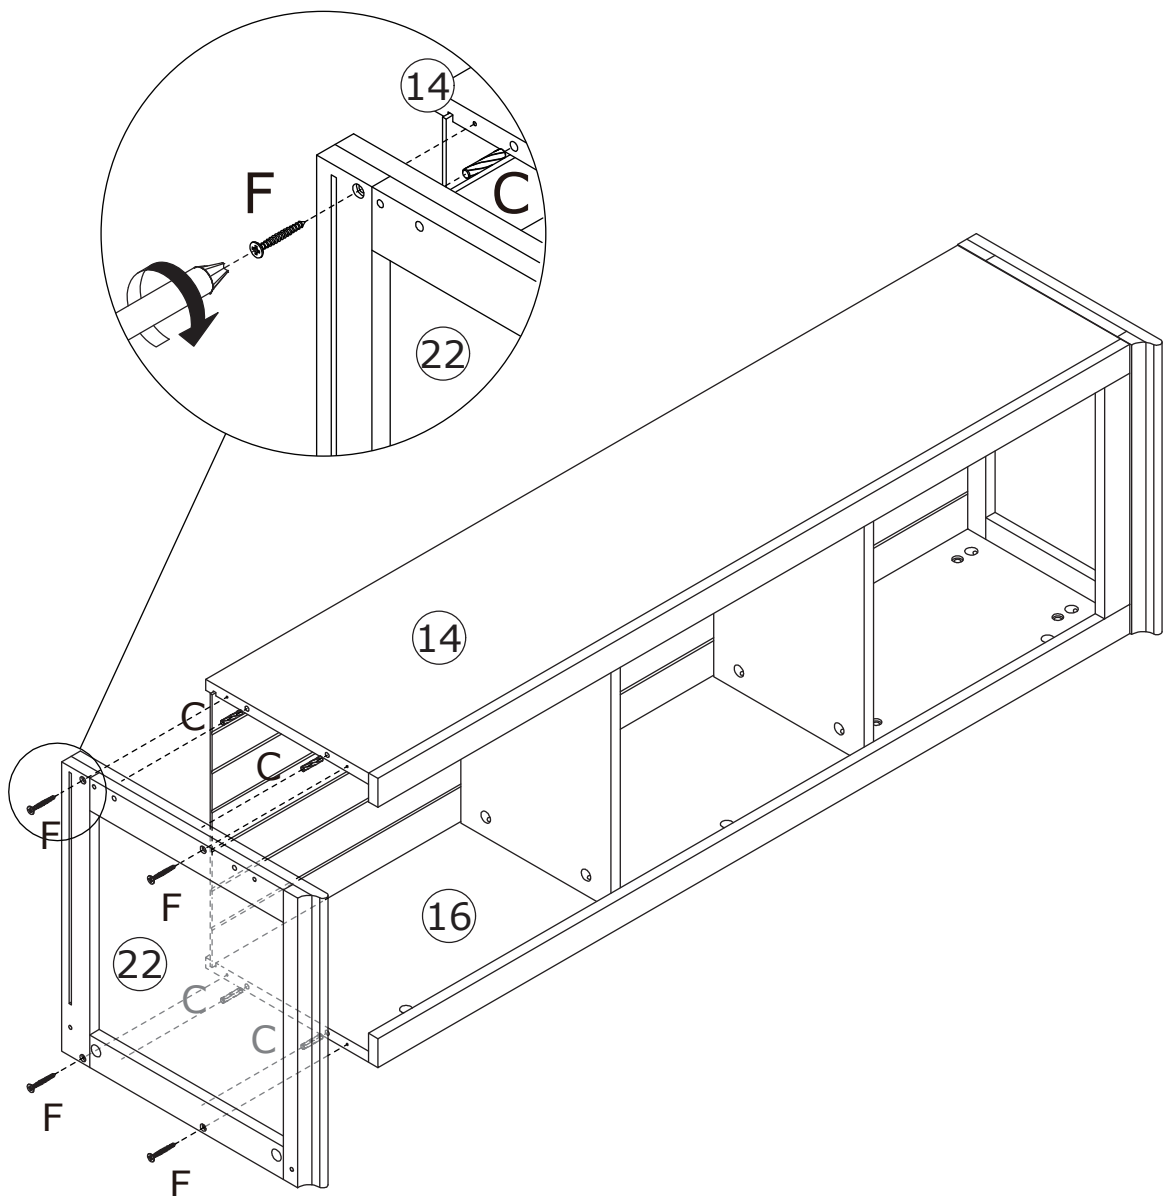

11

B x 3

 
 
 
 
 
 


Ø 15 x 9 mm



C x 2



Ø 6 x 30 mm

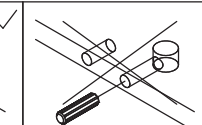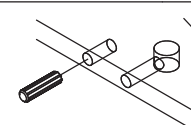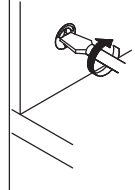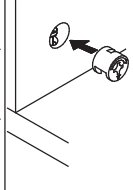

  Connect plate 26 to plate 32 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.


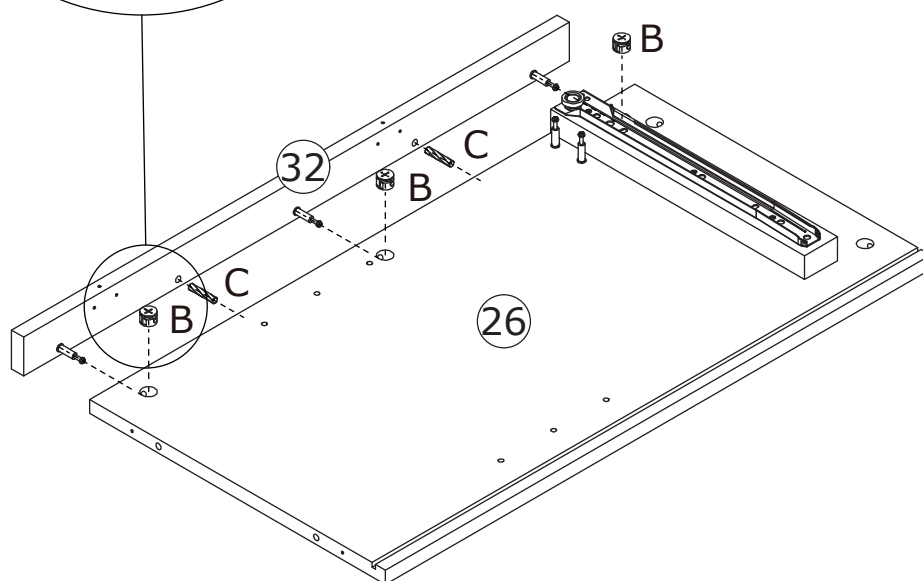
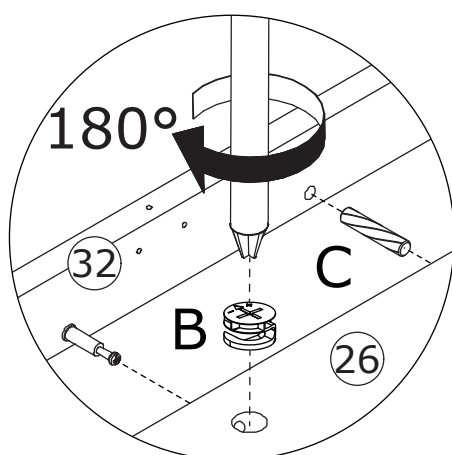


12


C x 3



   D x 3




 Attach plate 24 to plate 26 and 30 using wooden dowel (C), and secure with screw (D) as shown.

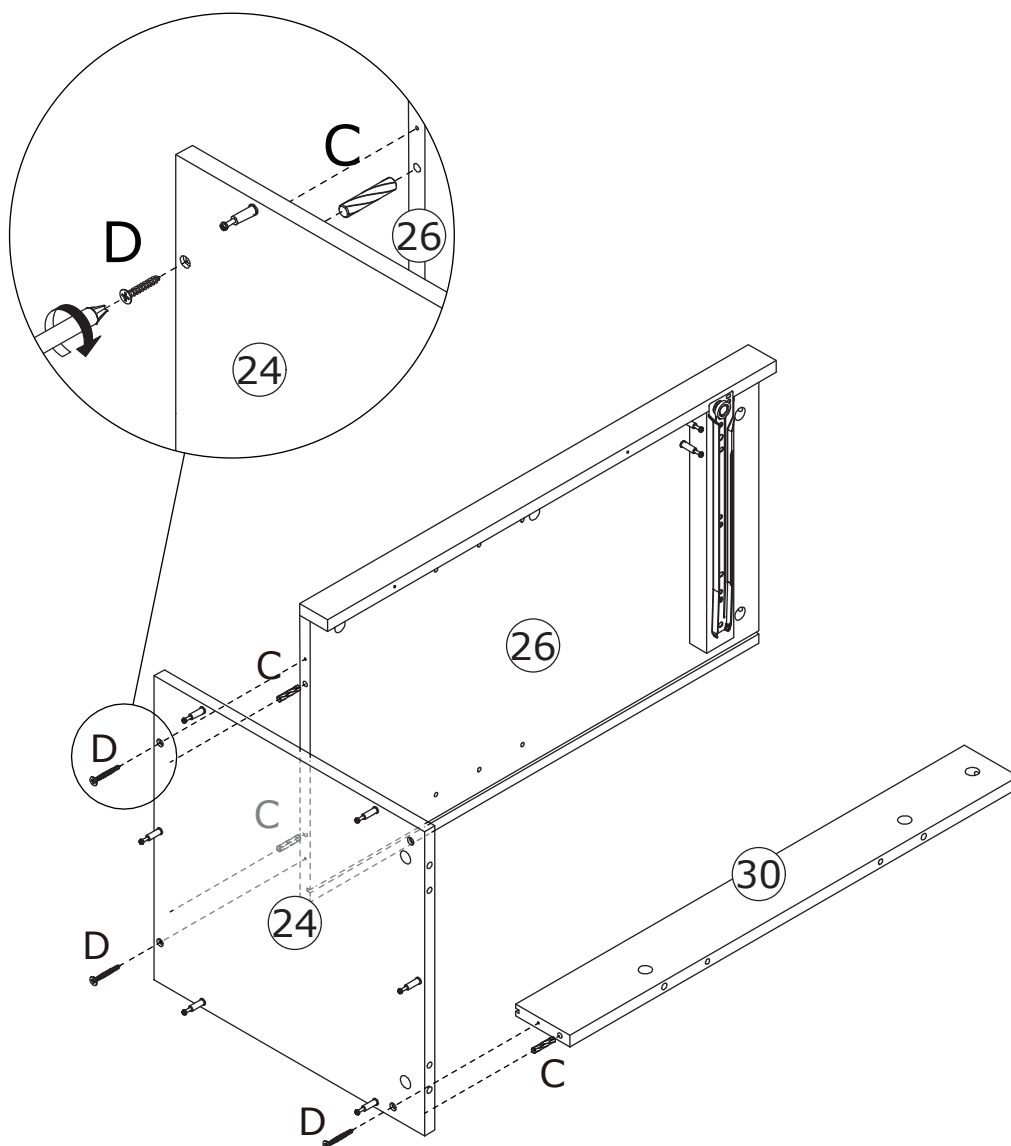


13

 Slide plate 48 along the available grooves as shown.

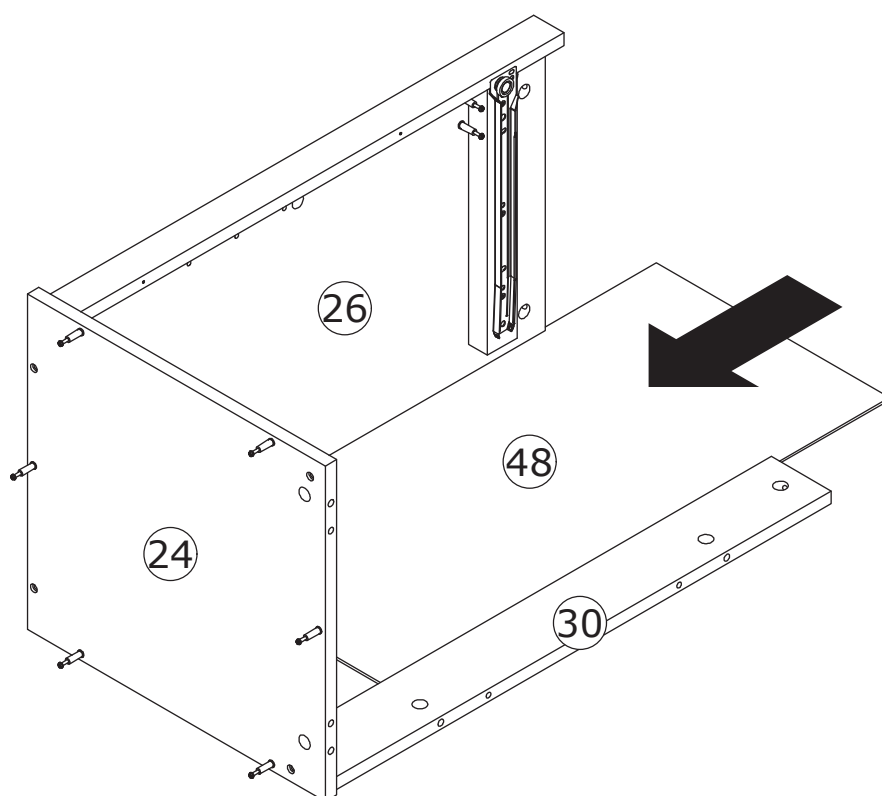

14

 
G x 2




O x 4



 Ø3 x 14 mm



 Secure magnet (G) to plate 28 and 29 with screw (O) as shown.




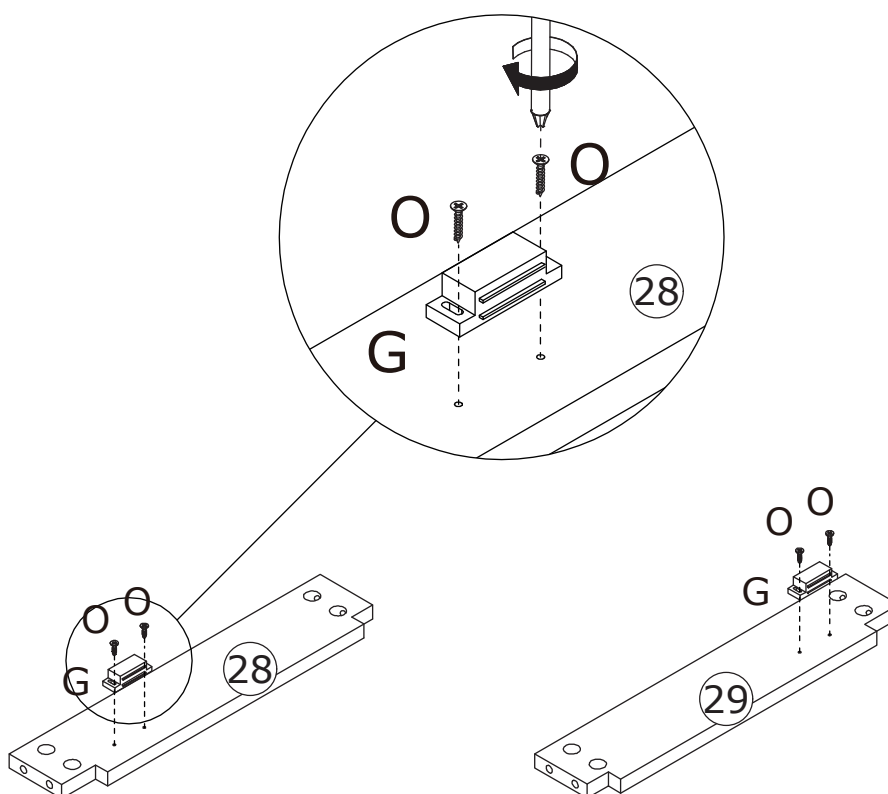


15



B x 2



    Ø15 x 9 mm

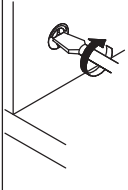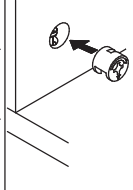

  Connect plate 28 to plate 26, tighten by turning cam lock (B) clockwise as shown.

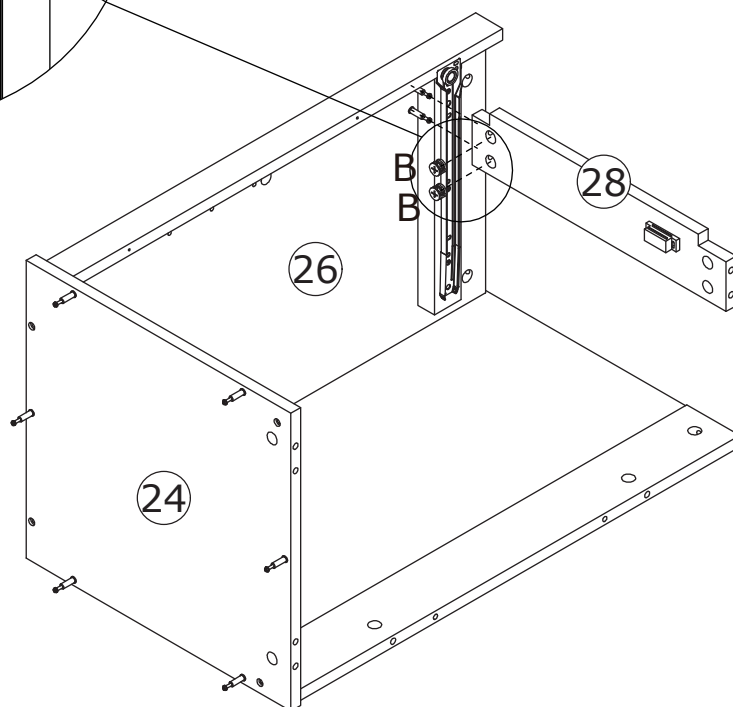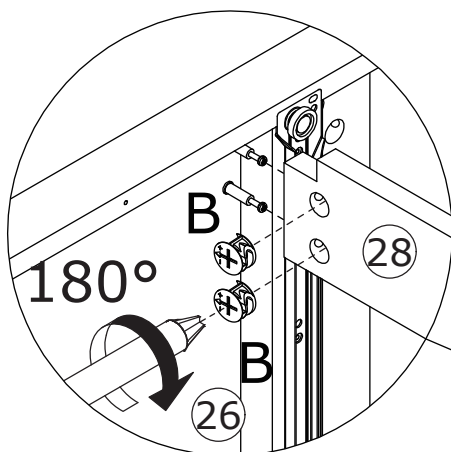

16

B x 4



Ø 15 x 9 mm

C x 2

 
 
 
 
 
 


Ø 6 x 30 mm


D x 1






Ø 4 x 35 mm

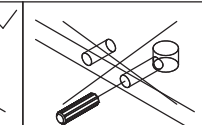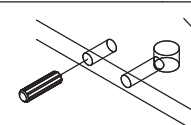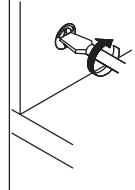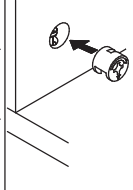

 
Connect the component and plate 34 to plate 22 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.
Secure plate 24 to plate 34 with screw (D) as shown.

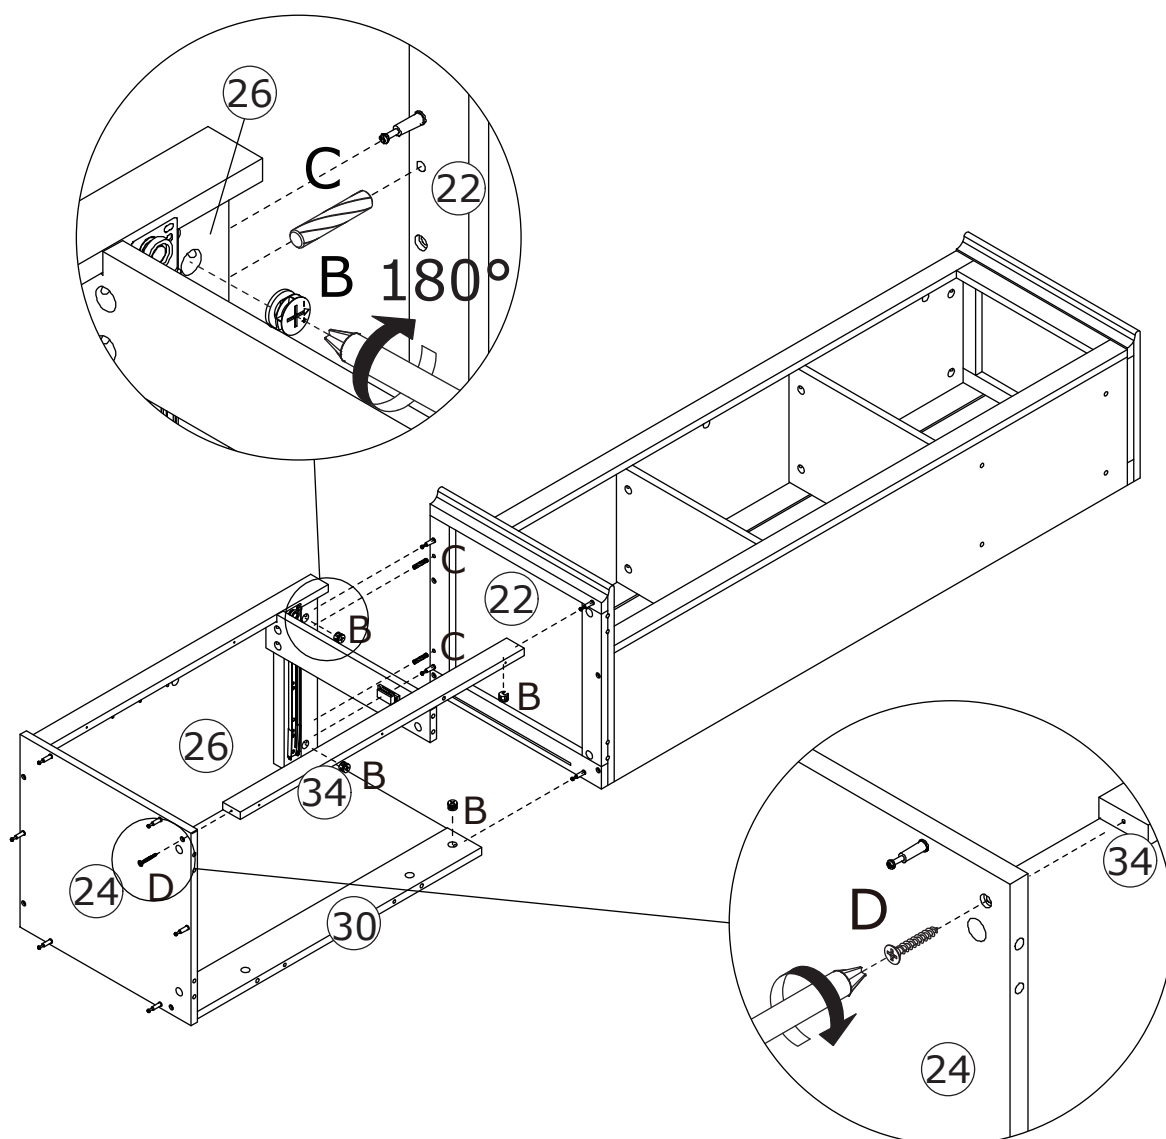

17

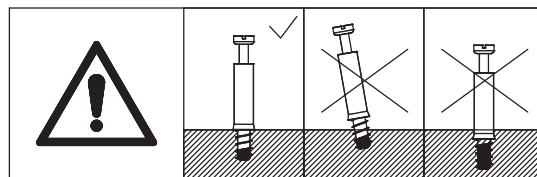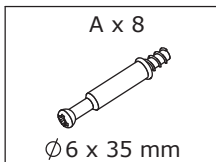   

 Screw eccentric rod (A) onto plate 38 as shown.

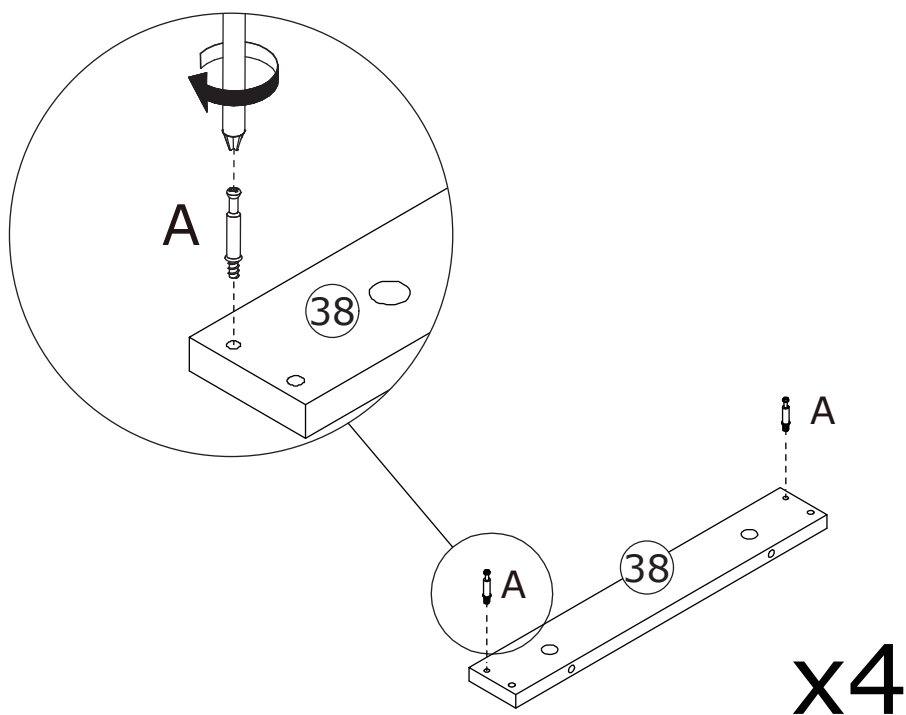

18

B x 8

 
 
 
 
 
 


Ø 15 x 9 mm



C x 8



Ø 6 x 30 mm

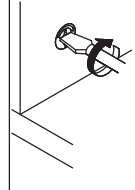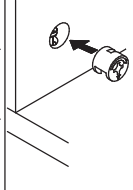

  Connect plate 38 to plate 39 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

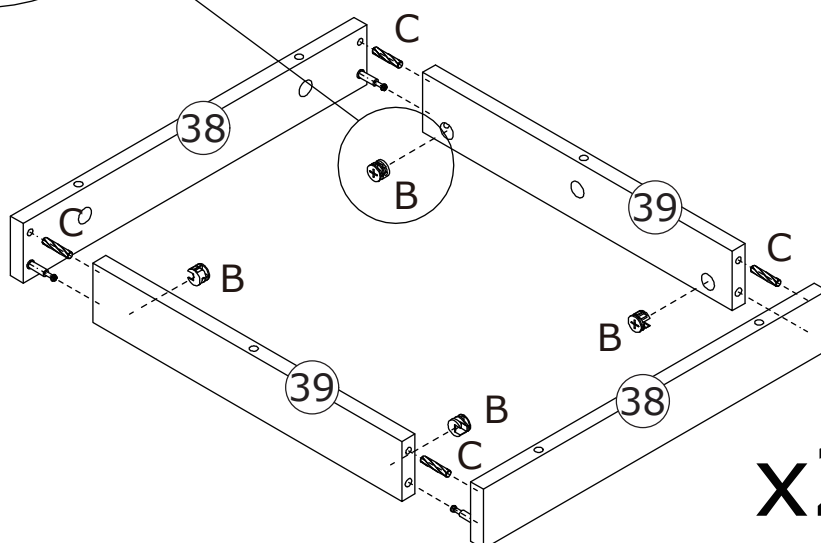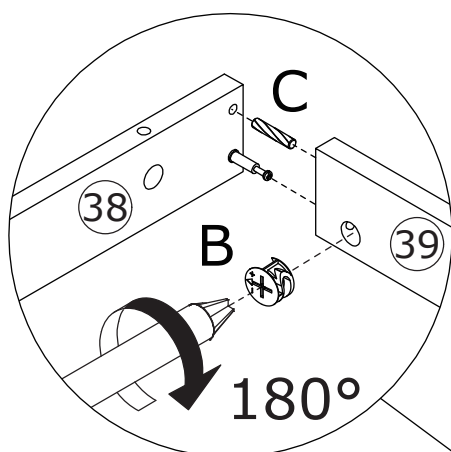



x2

19


B x 6




 
 
Ø 15 x 9 mm

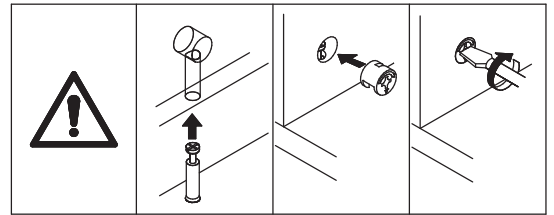







 
Connect the component to plate 24, tighten by turning cam lock (B) clockwise as shown.

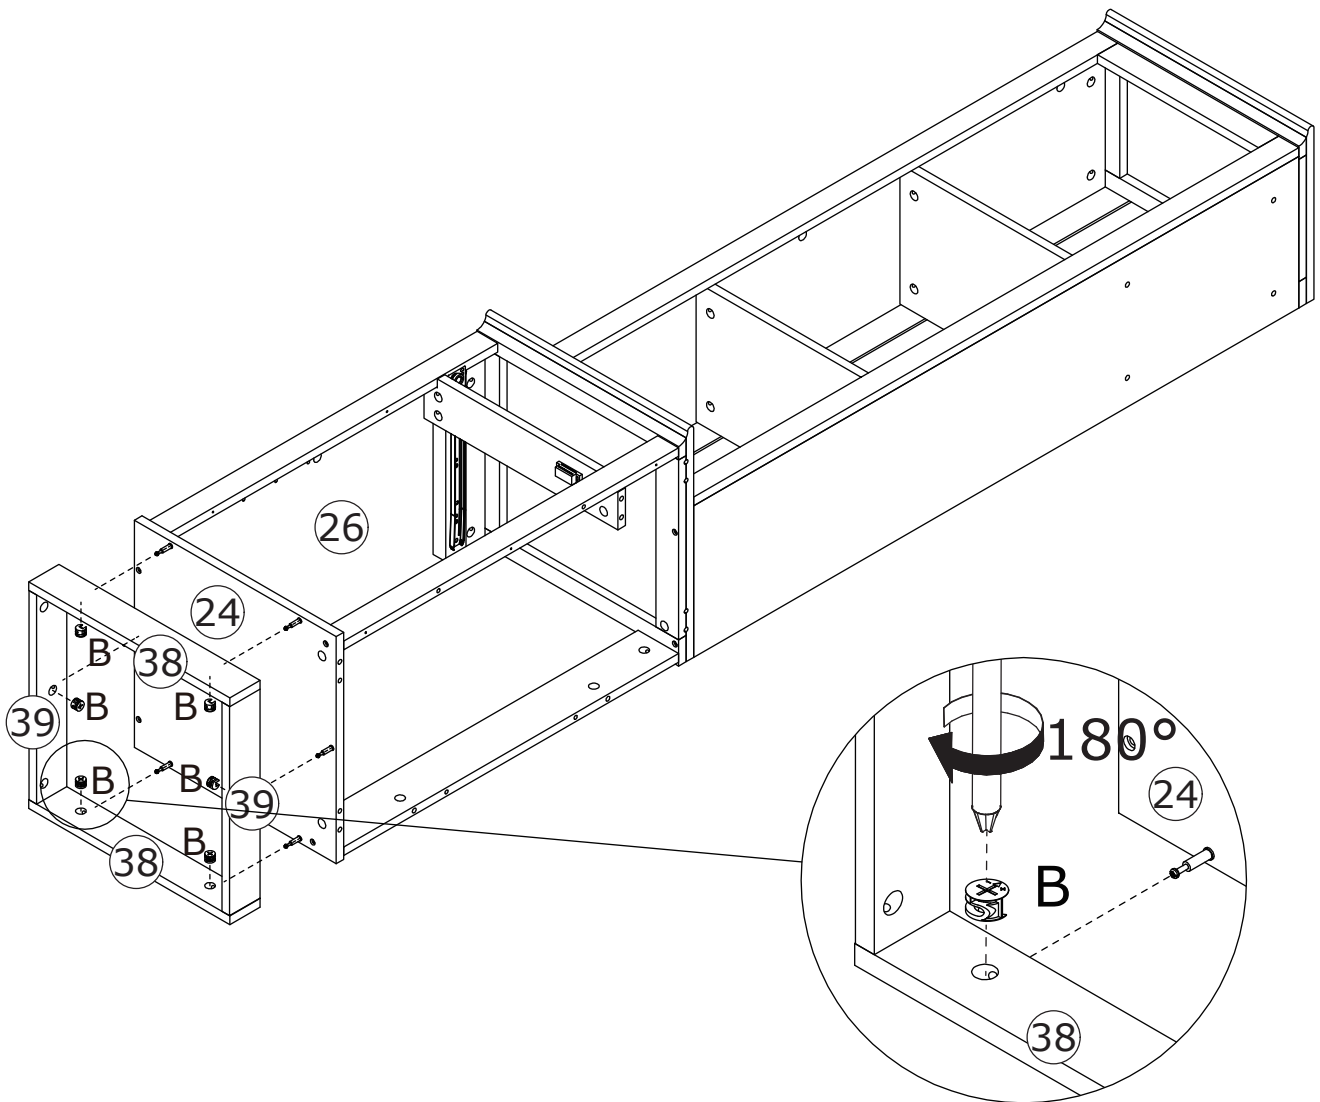

20

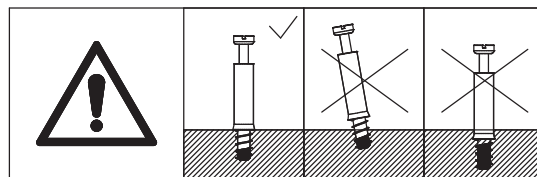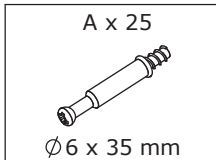   

       Screw eccentric rod (A) onto plate 12, 15, 17, 23, 25 and 33 as shown.

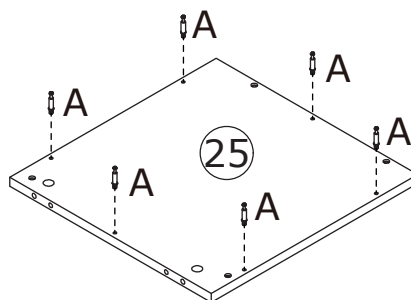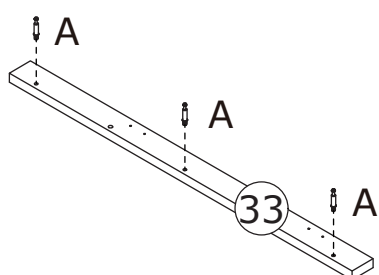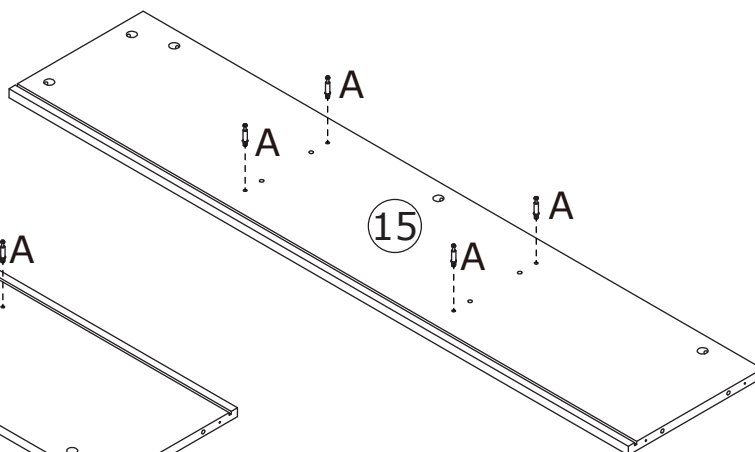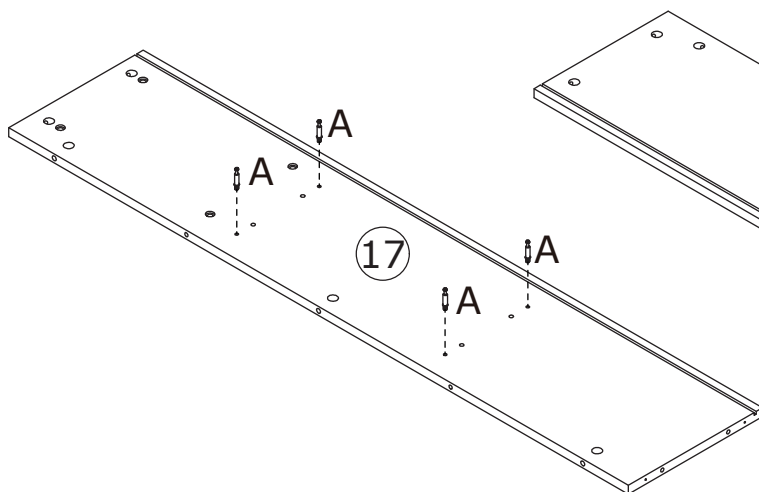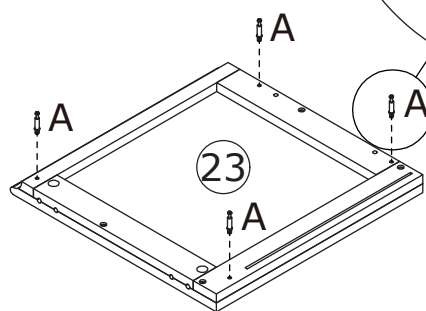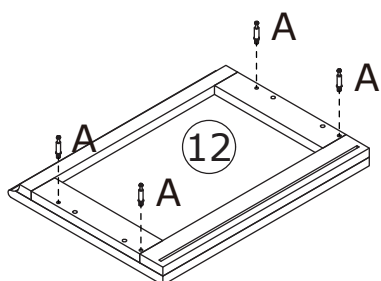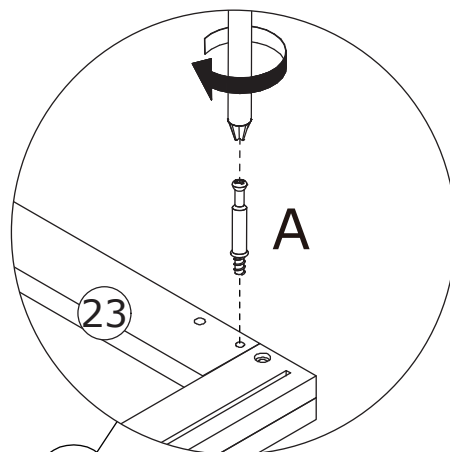

21

B x 8

 
 
 
 
 
 


Ø 15 x 9 mm


C x 8




Ø 6 x 30 mm

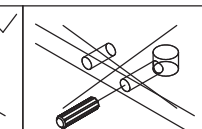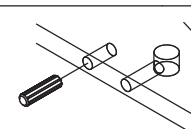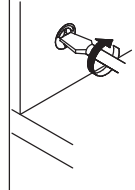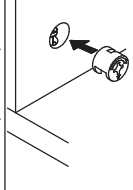


 Connect plate 13 to plate 15 and 17 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

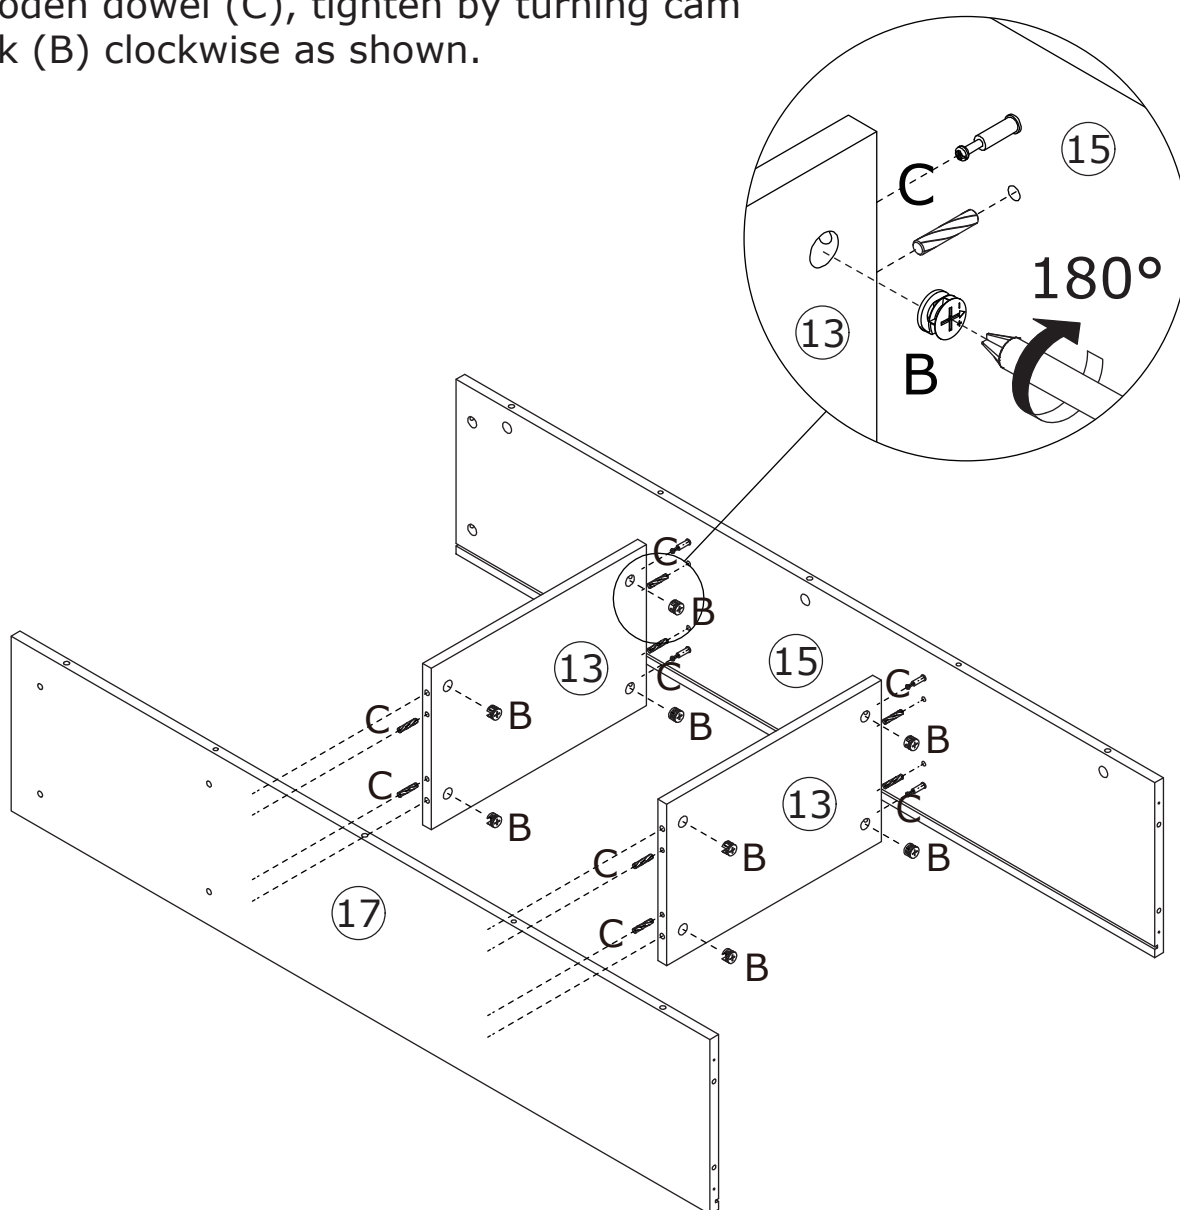


22

 
B x 4  Ø 15 x 9 mm	C x 4  Ø 6 x 30 mm	
---	---	---

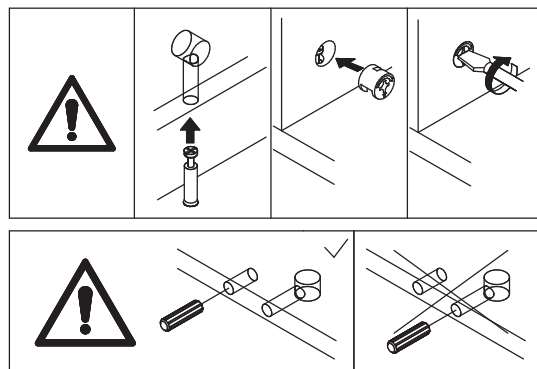 

 
Connect plate 12 to plate 15 and 17 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

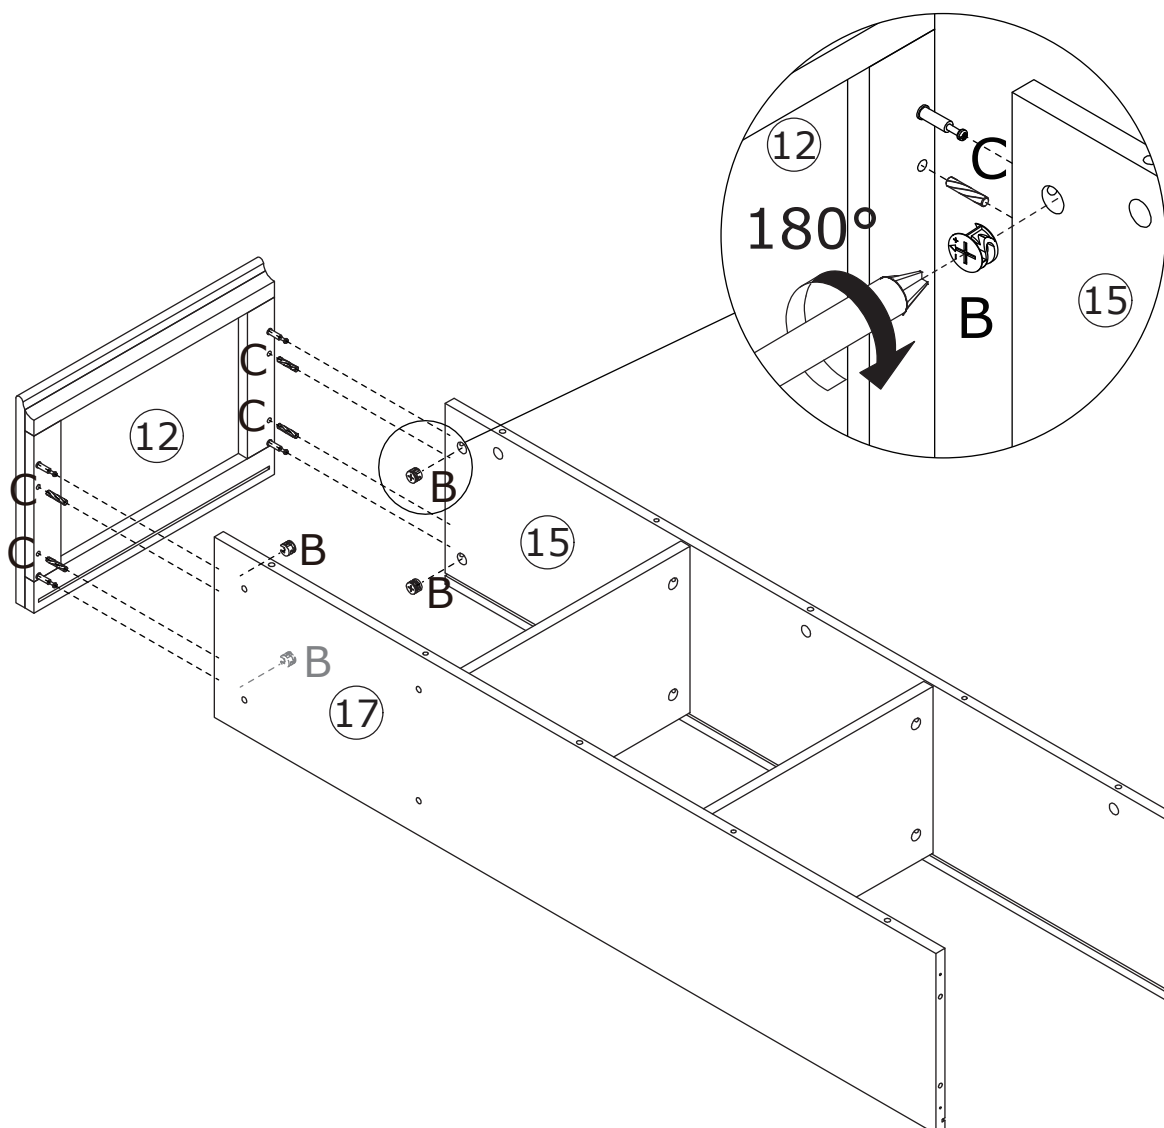

23

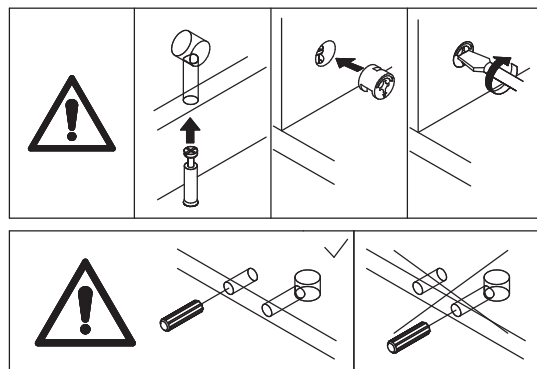 


 Connect the two assembled components using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

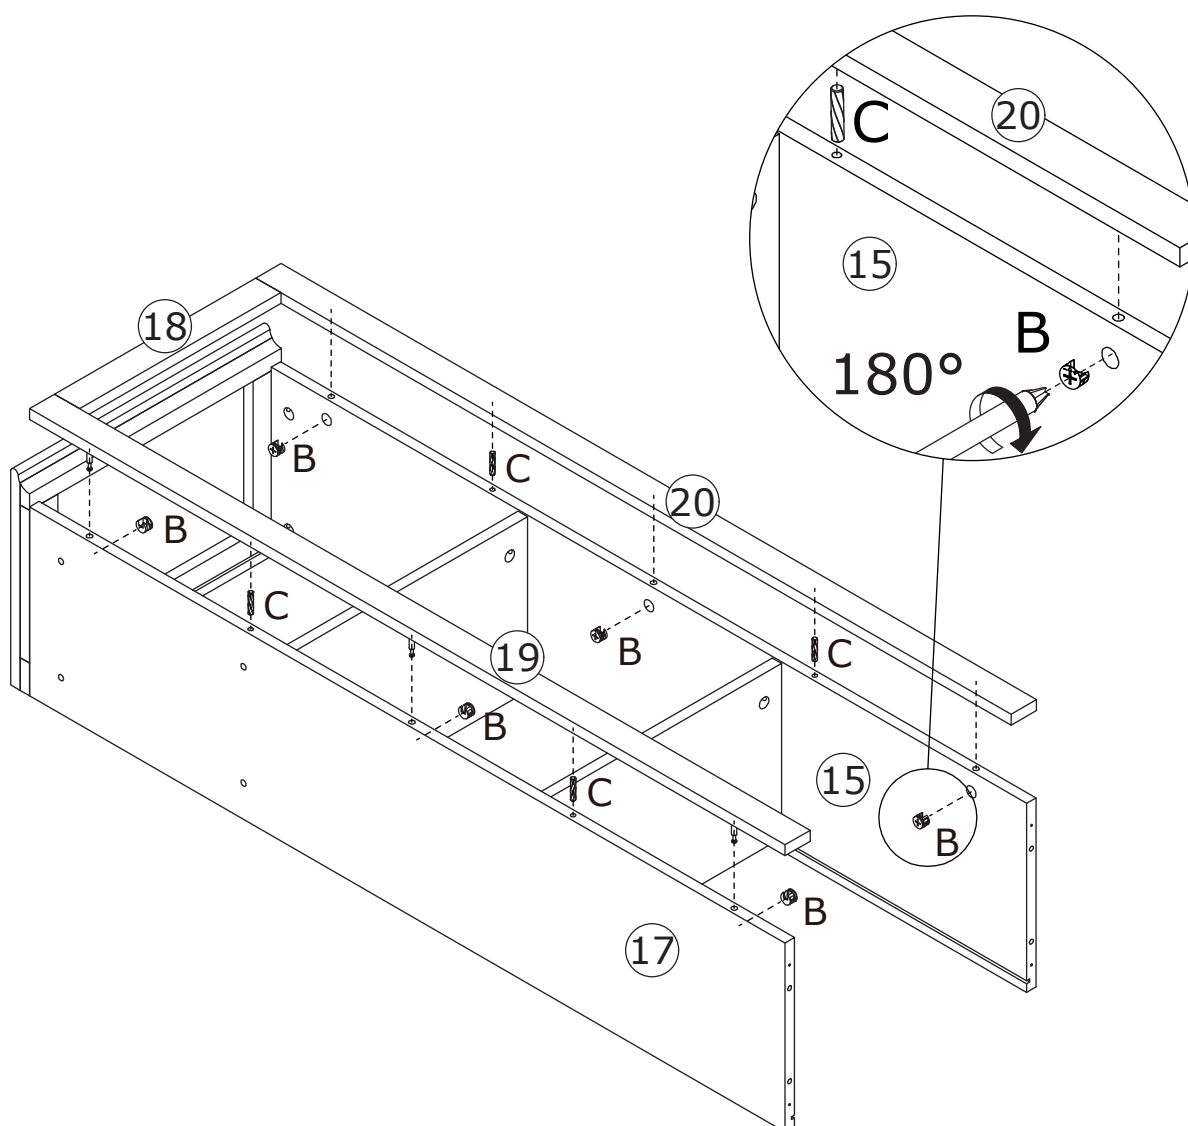


24

 
Slide plate 21 along the available grooves as shown.

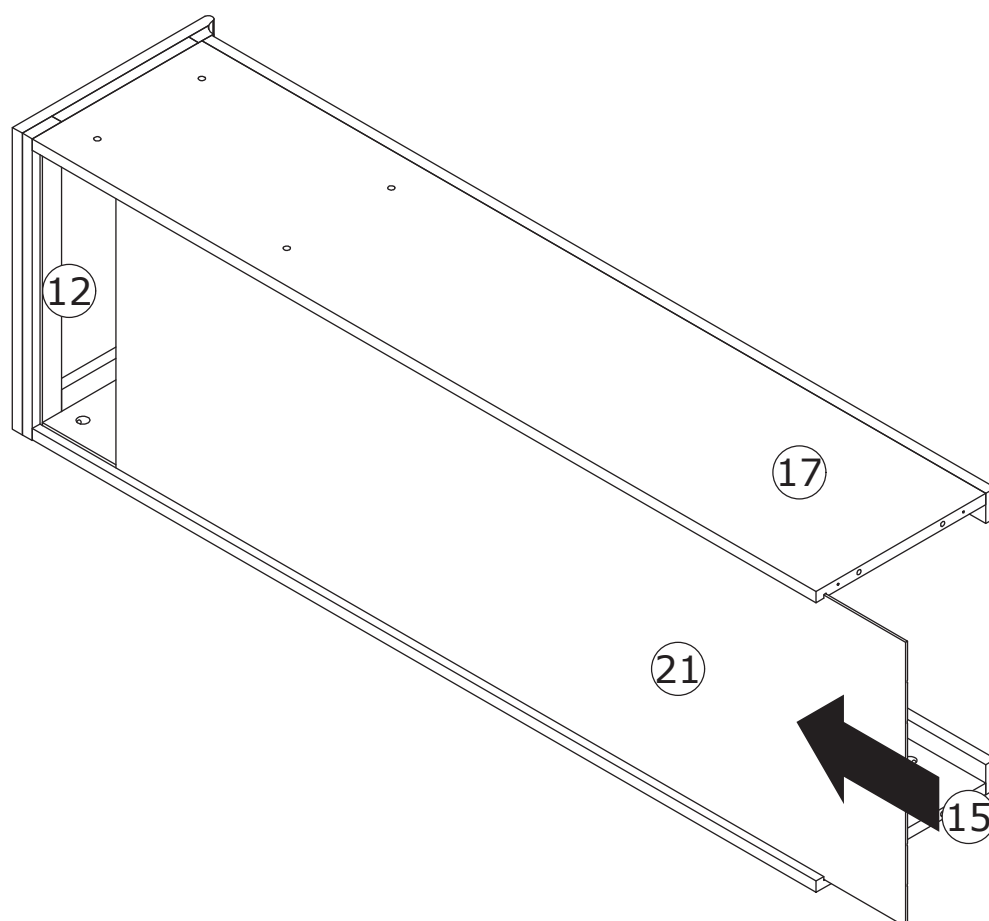


25

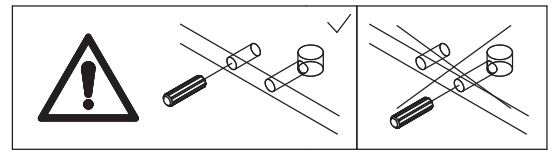 

 
Connect plate 23 to plate 15 and 17 using wooden dowel (C), and secure with screw (F) as shown.

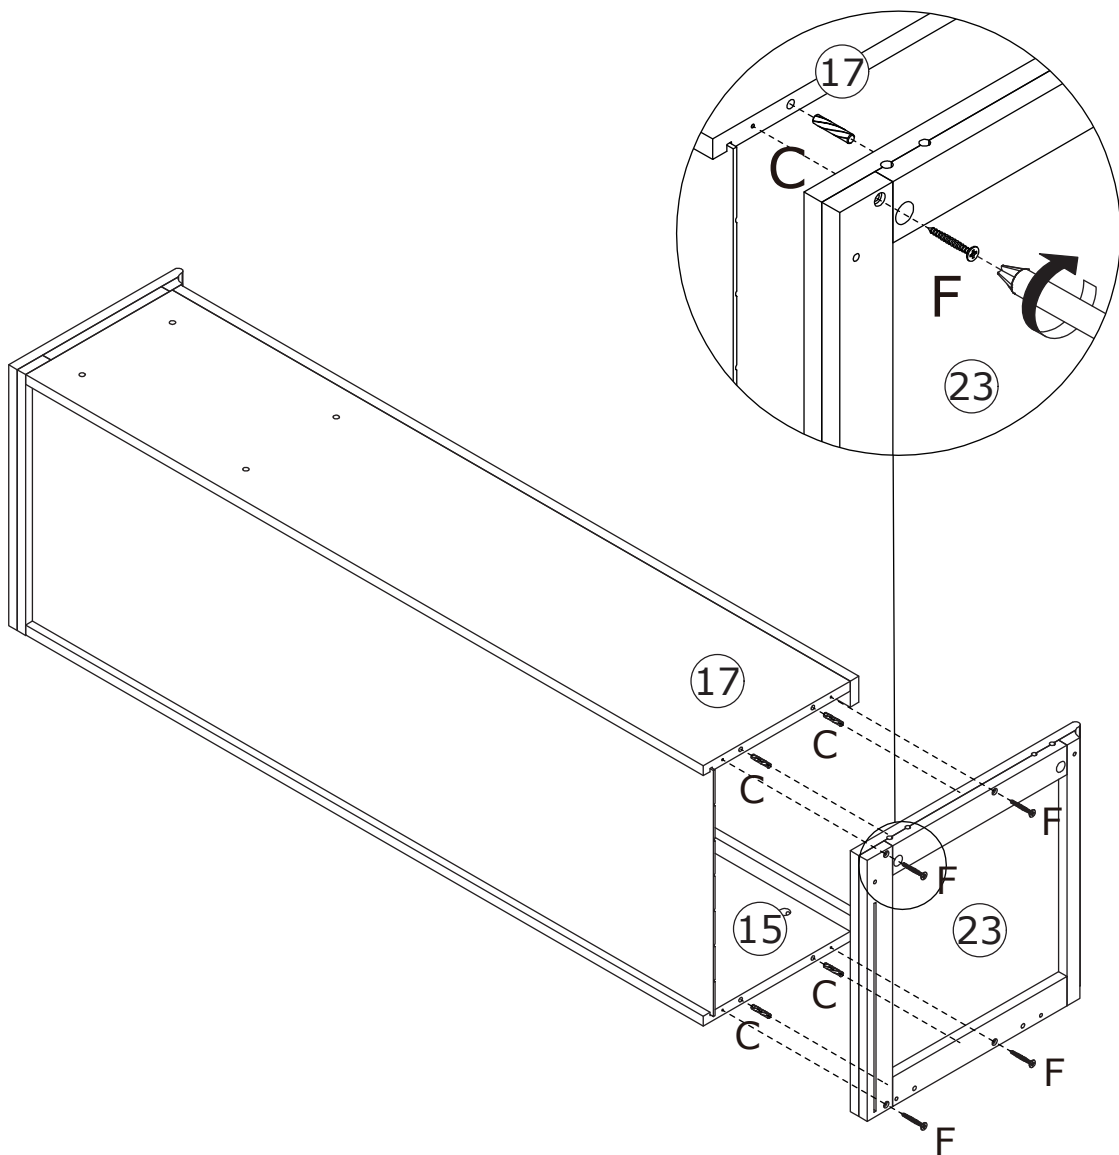





26

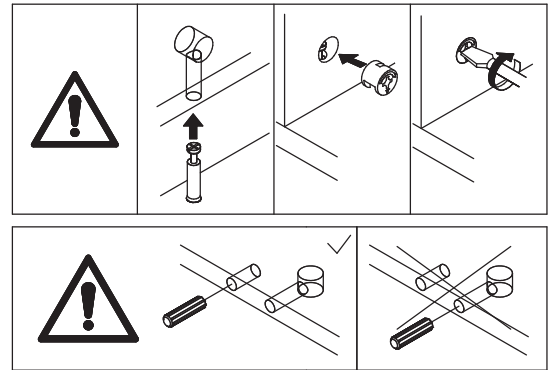 

 
Connect plate 27 to plate 33 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

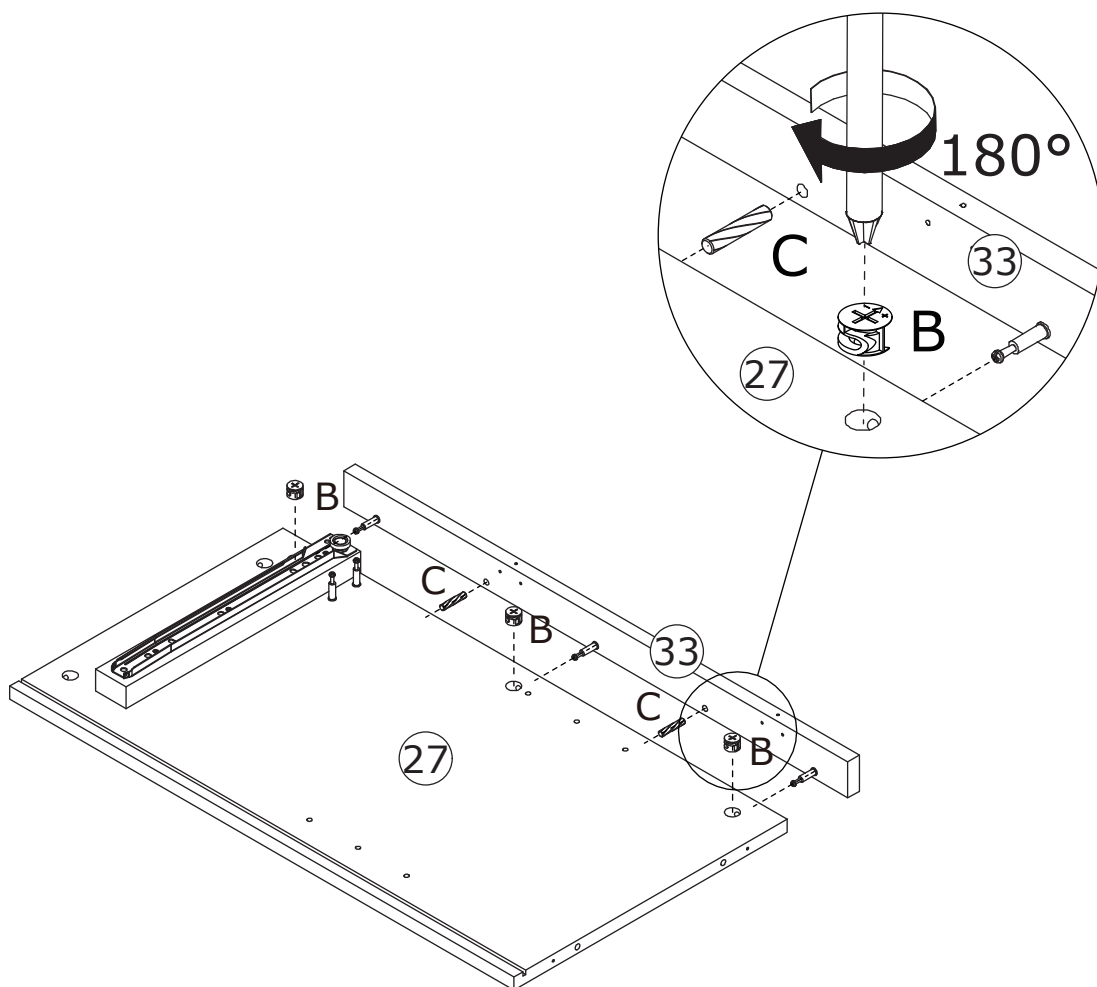


27

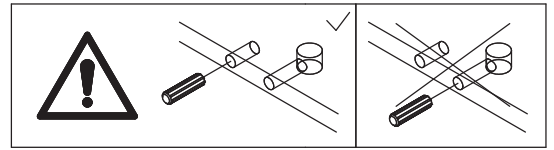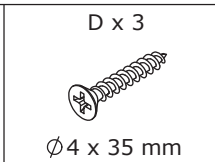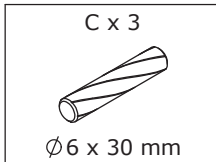    

 Connect plate 25 to plate 27 and 31 using wooden dowel (C), and secure with screw(D) as shown.

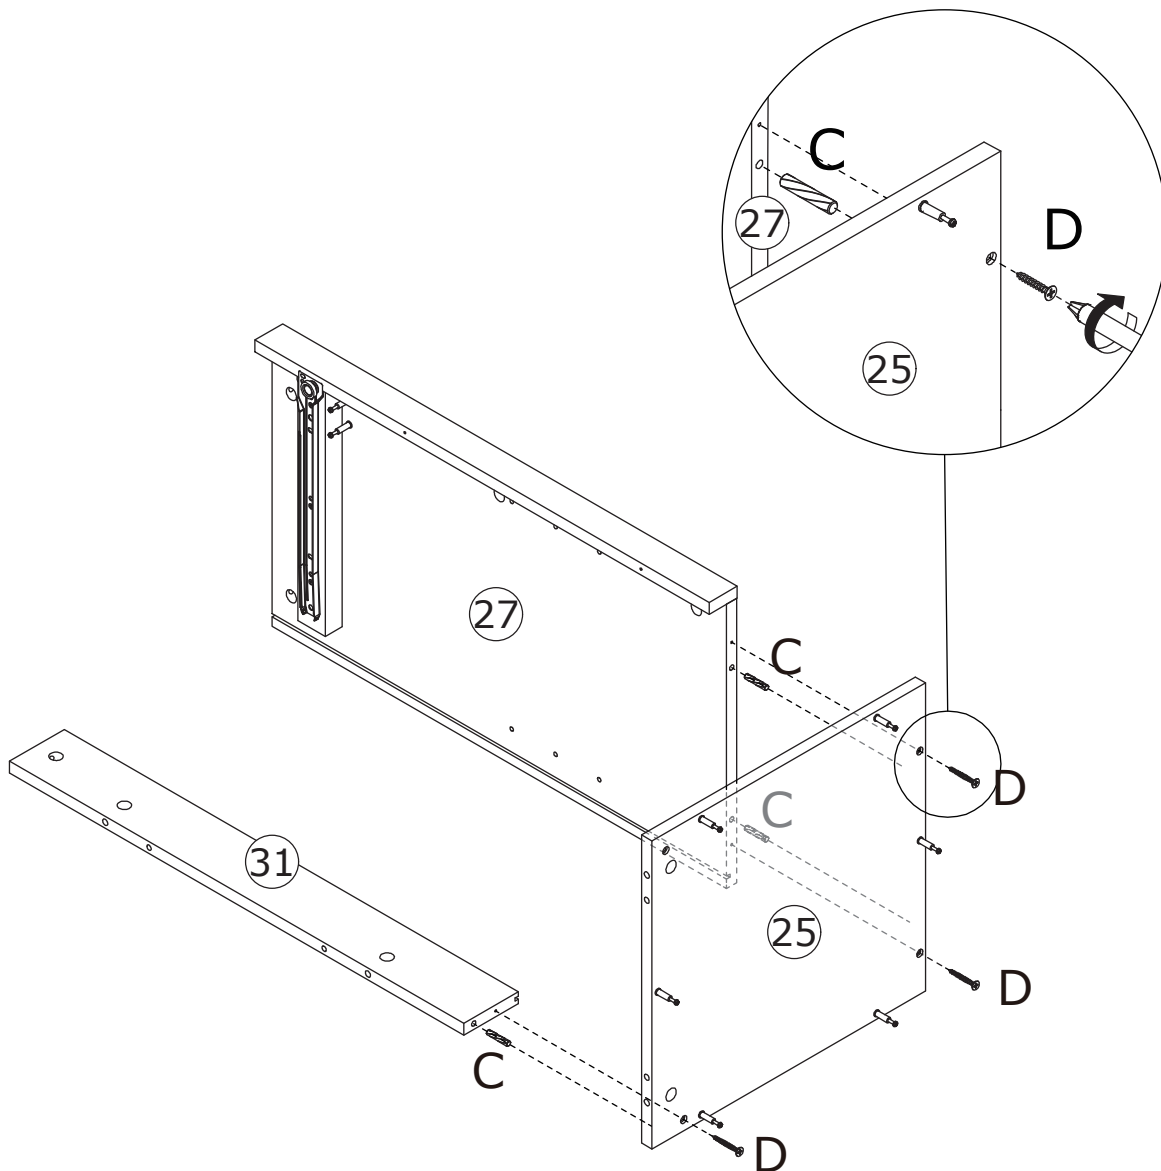

 Slide plate 48 along the available grooves as shown.


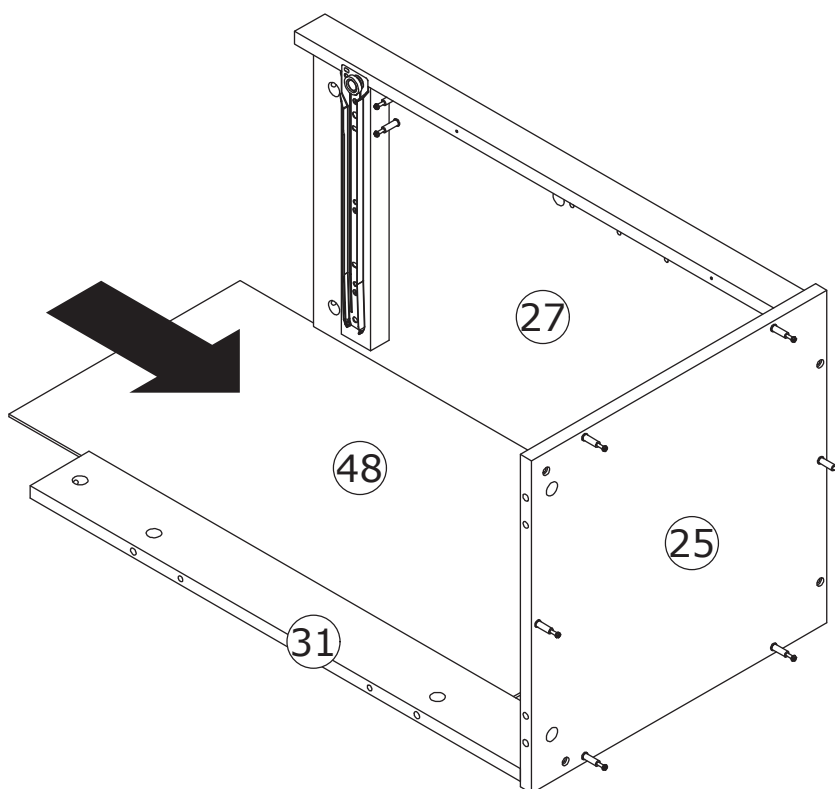


29



B x 2



  
Ø 15 x 9 mm

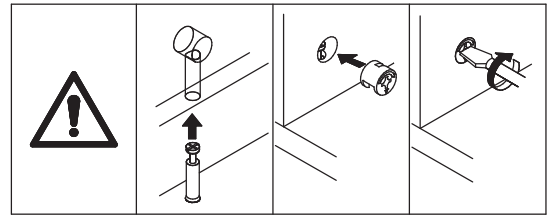


  Connect plate 29 to plate 27, tighten by turning cam lock (B) clockwise as shown.

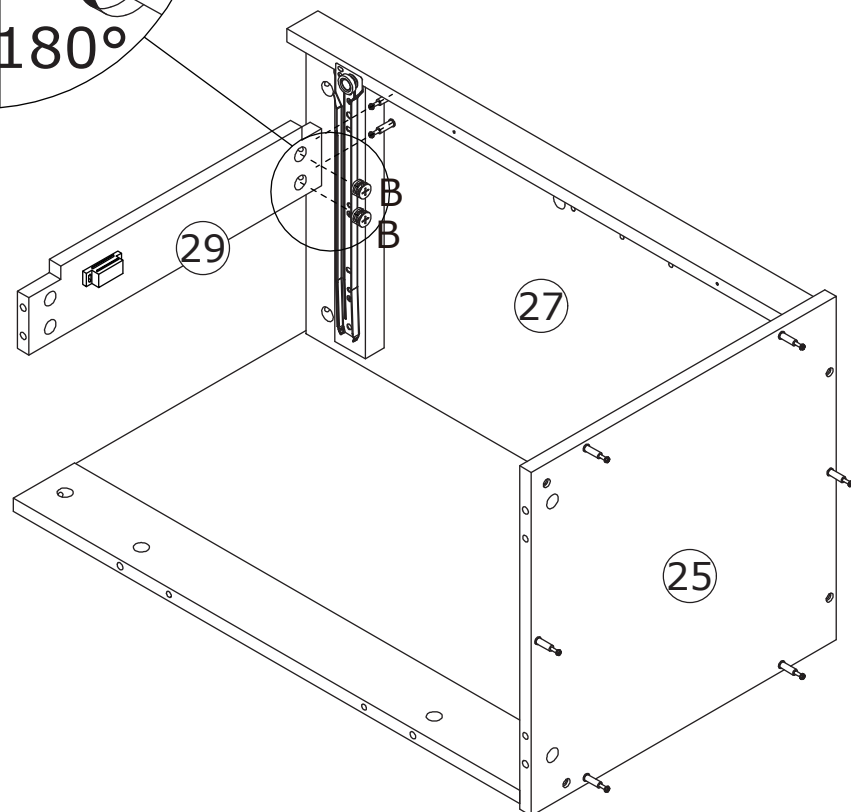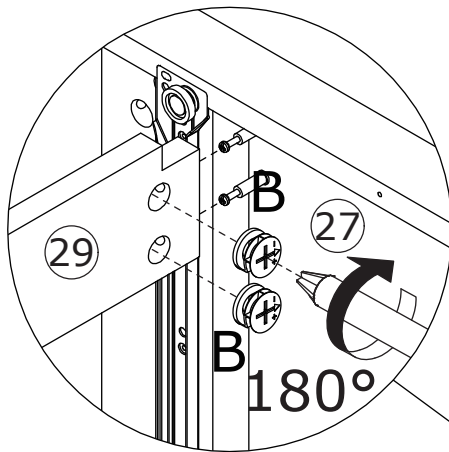


30

 B x 4  Ø 15 x 9 mm	C x 2  Ø 6 x 30 mm	D x 1  Ø 4 x 35 mm	
---	---	---	---

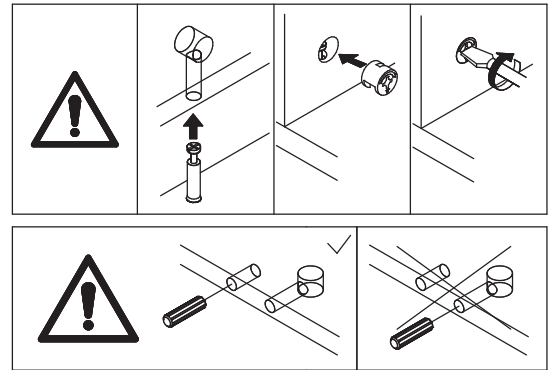 

Connect the component and plate 35 to plate 23 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

 Secure plate 35 to plate 25 with screw (D) as shown.


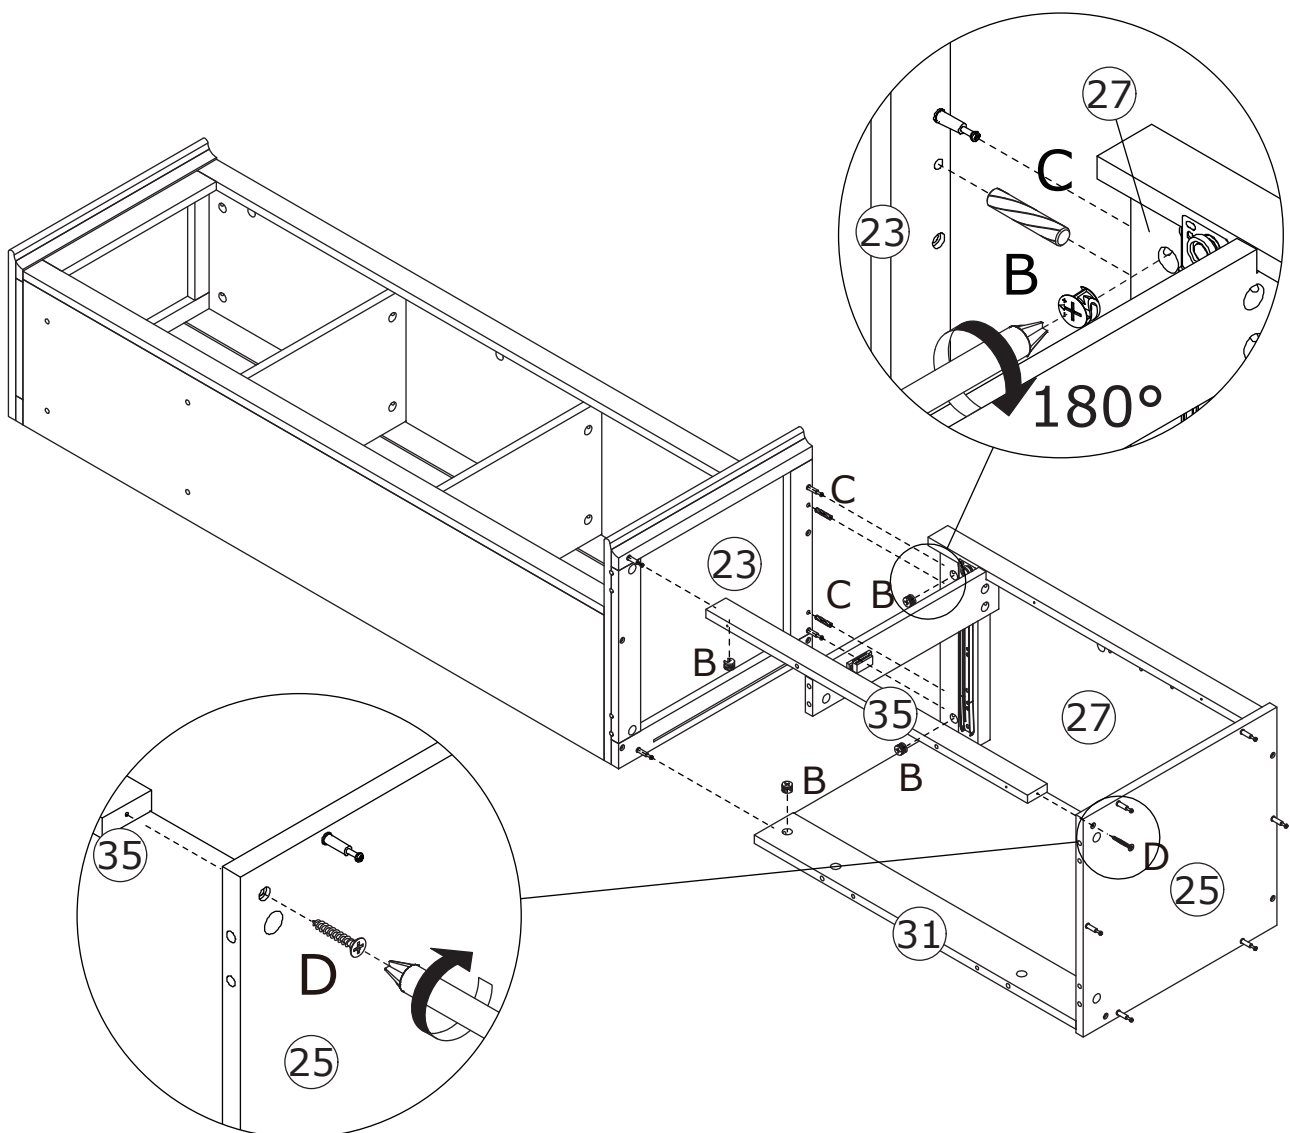


31


B x 6



  
Ø 15 x 9 mm

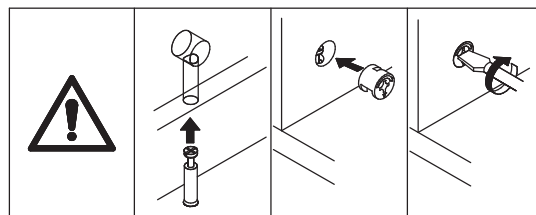

 Connect plate 38 and 39 to plate 25, tighten by turning cam lock (B) clockwise as shown.


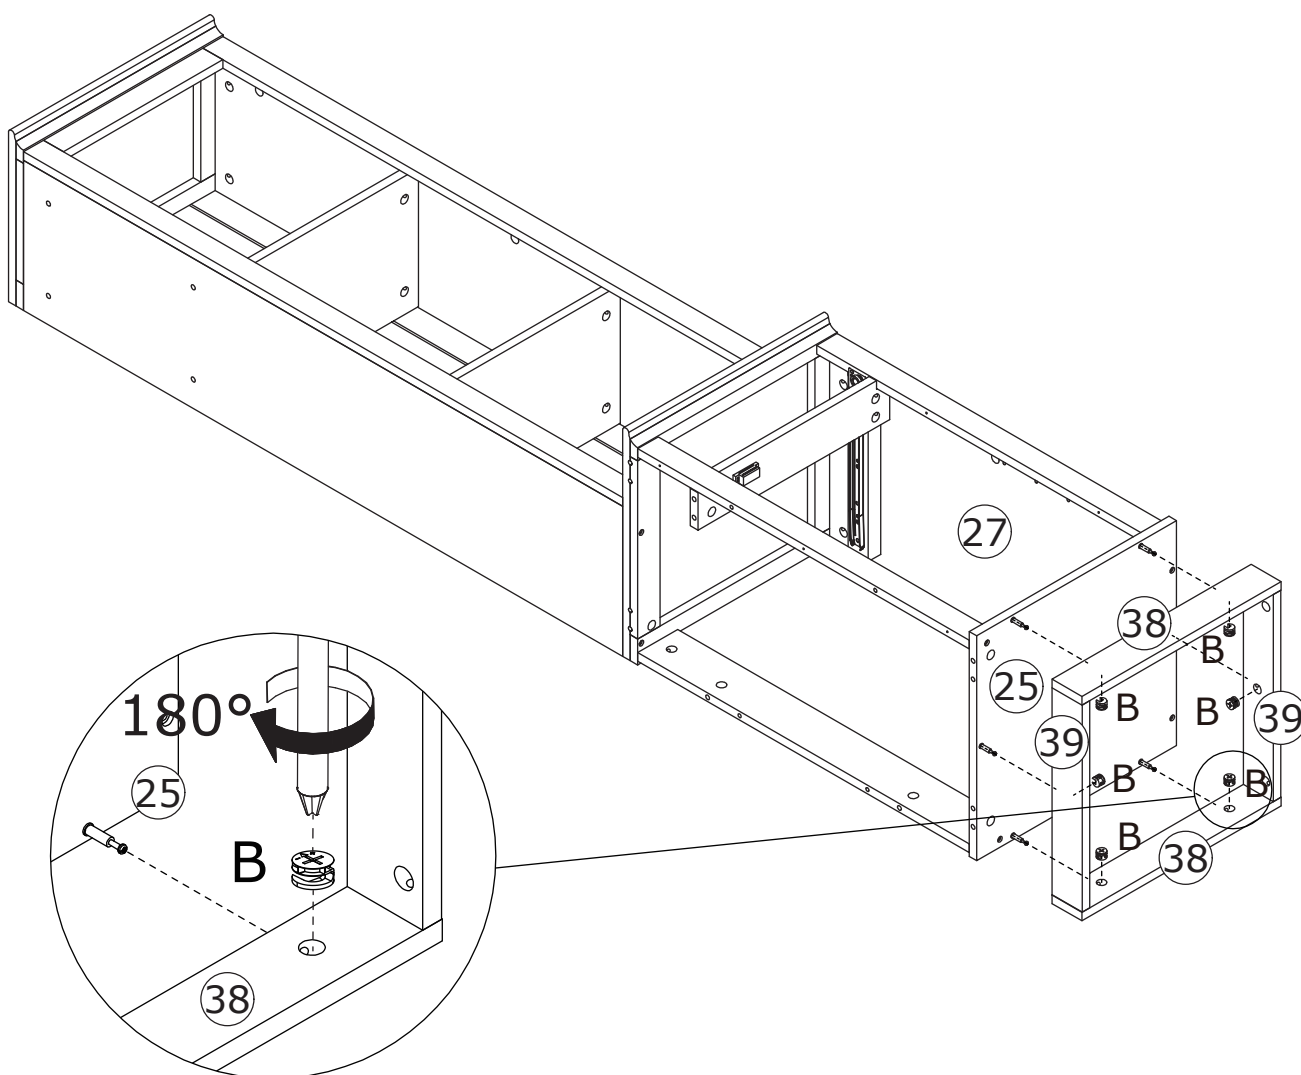


32


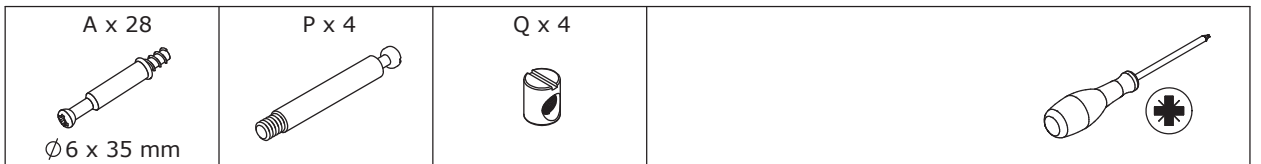 


Screw eccentric rod (A) onto plate 50, 51, 60, 61 and 62 as shown.

  Insert nut (Q) into plate 50 and 51, then screw rod (P) into the matching hole and rotate it clockwise to tighten as shown.

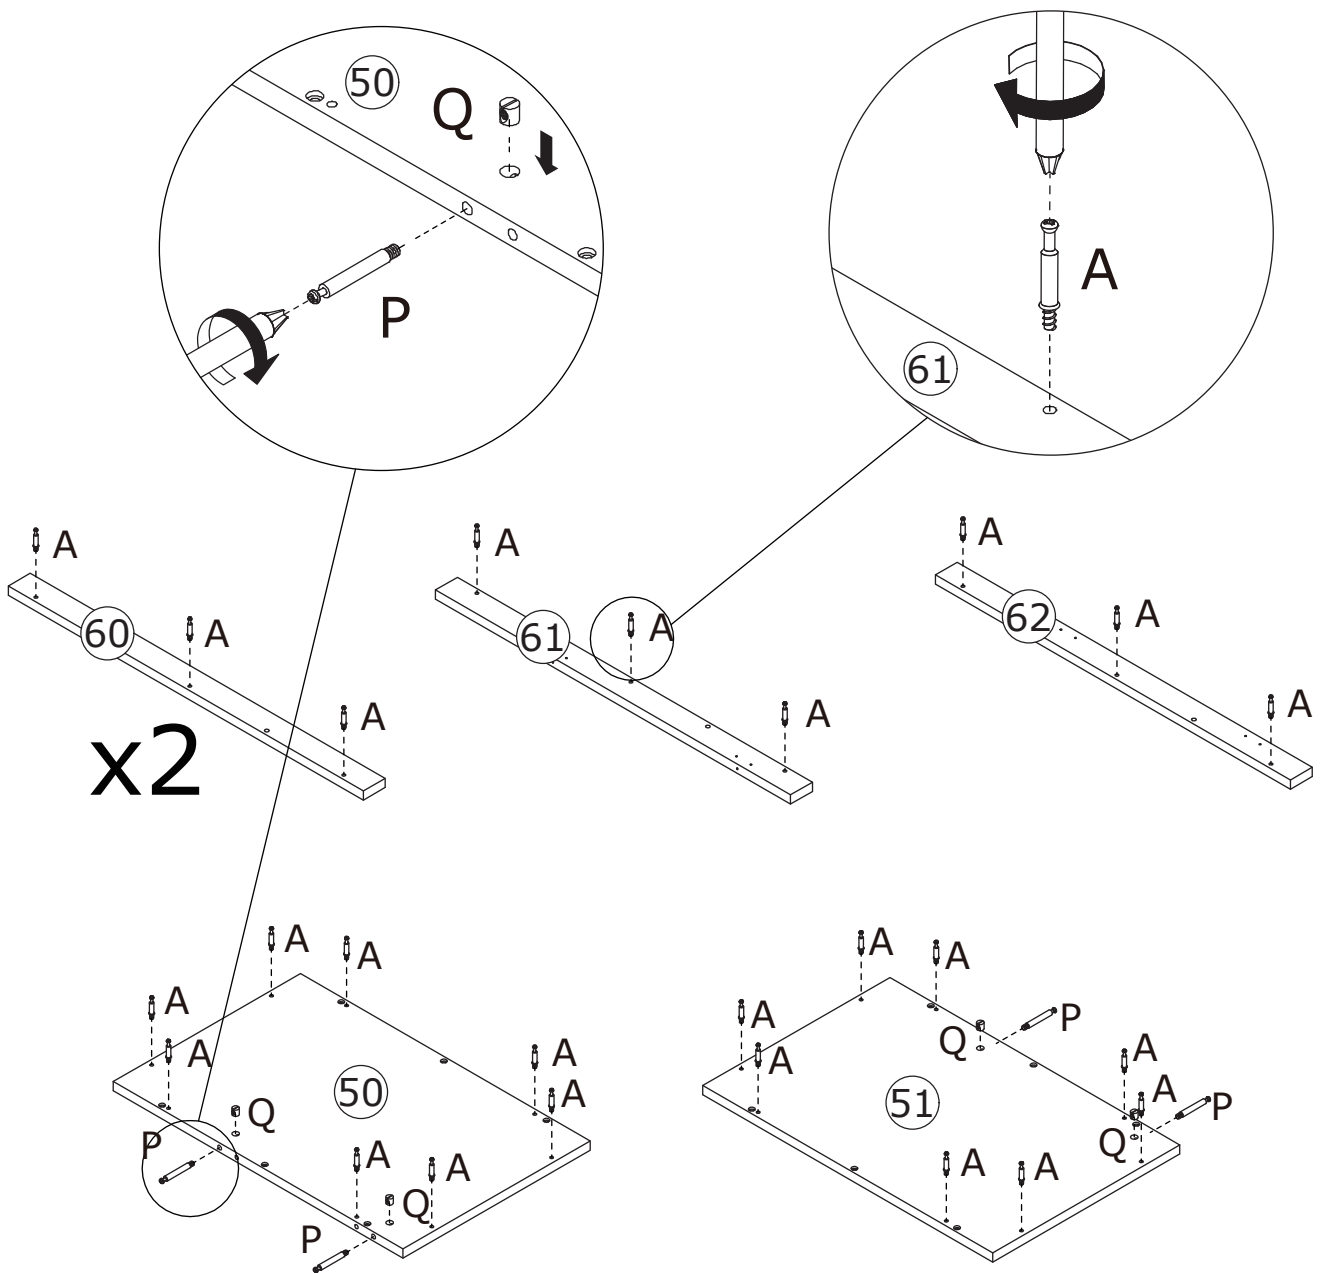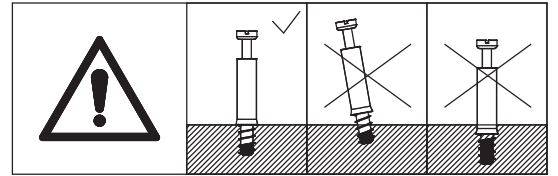


33

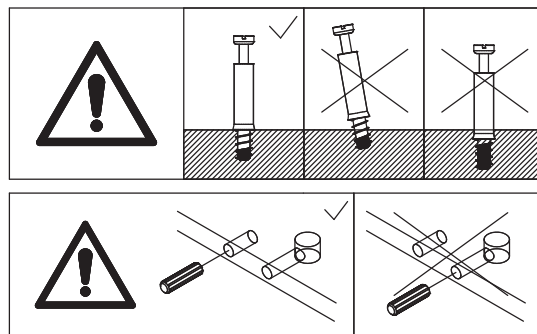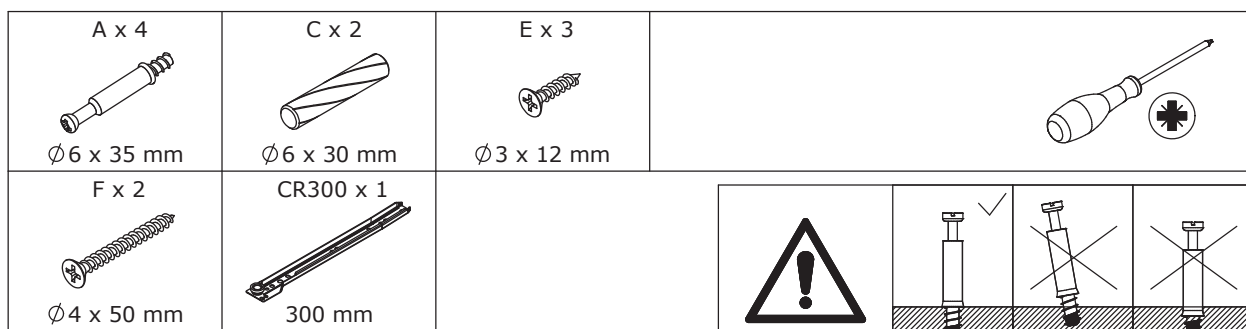  








Connect plate 37 to plate 52 using wooden dowel (C), and secure with screw (F) as shown.


Secure slide rail (CR300) to plate 37 with screw (E).

 Screw eccentric rod (A) onto plate 52 as shown.

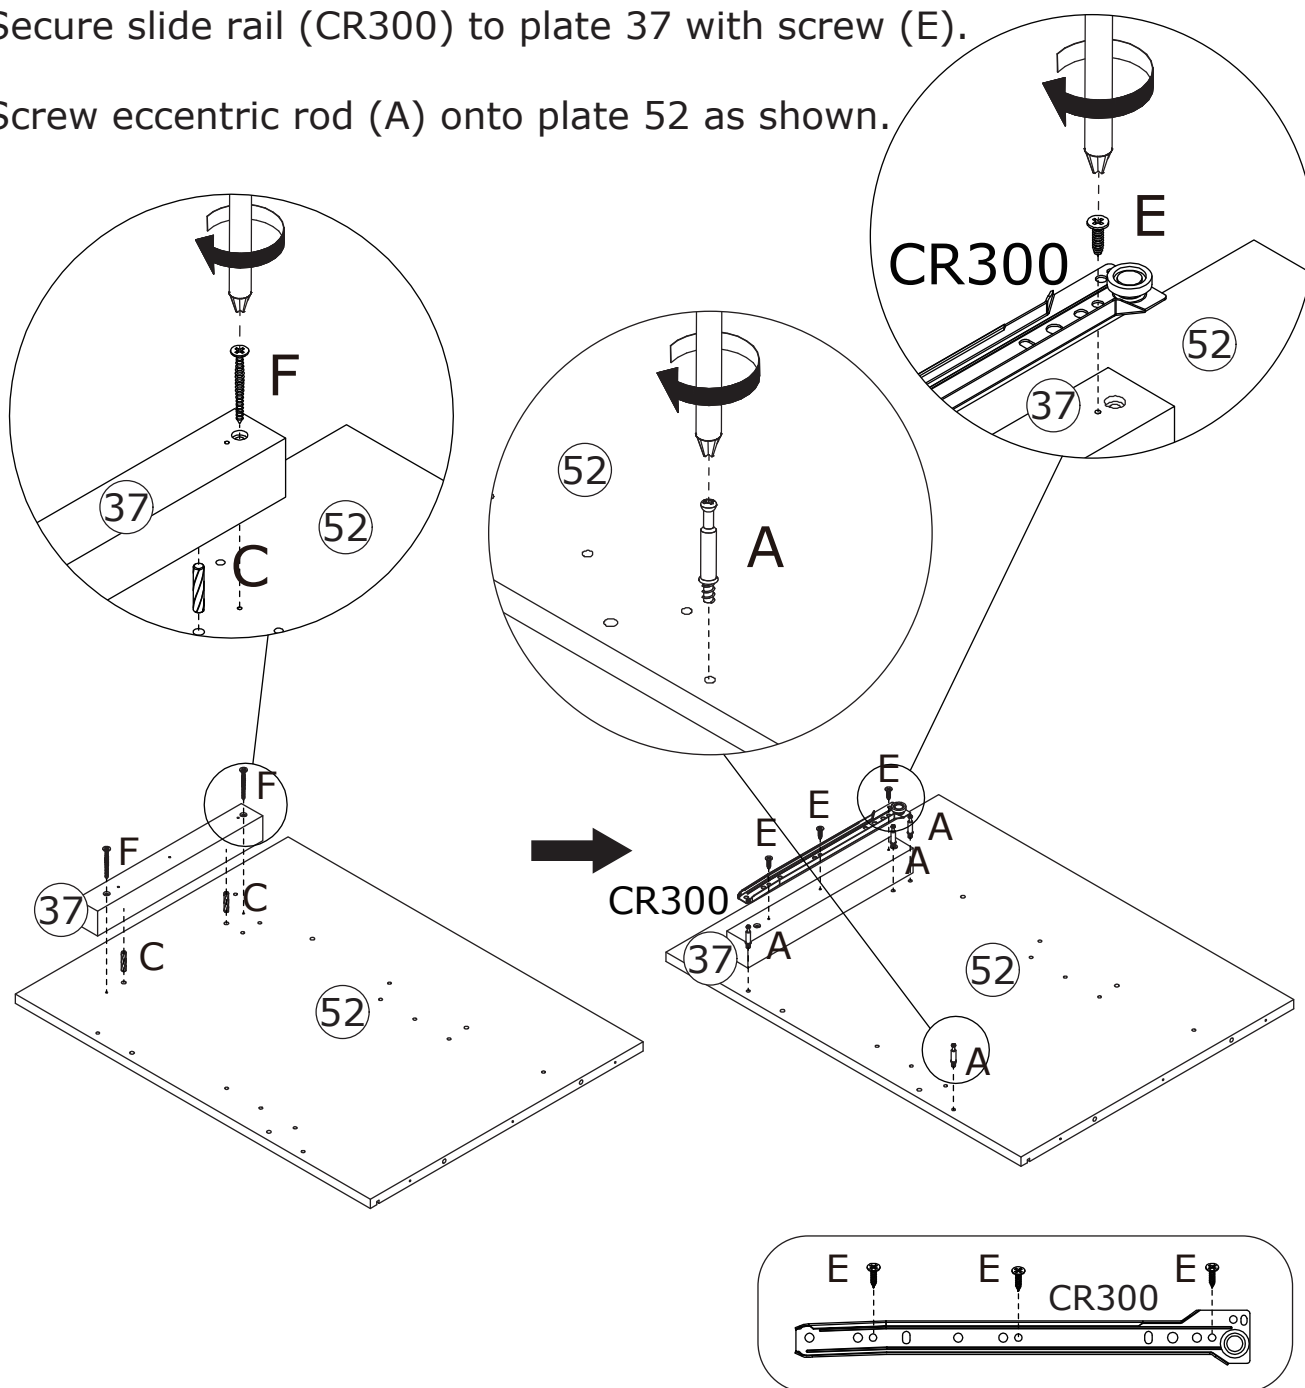

34

       
A x 2  Ø 6 x 35 mm	C x 2  Ø 6 x 30 mm	D x 2  Ø 4 x 35 mm	
E x 3  Ø 3 x 12 mm	CL350 x 1  350 mm	   	

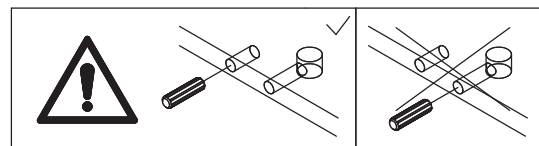 


Flip the same plate 52 to back, connect plate 63 to plate 52 using wooden dowel (C), and secure with screw (D) as shown.

Secure slide rail (CL350) to plate 63 with screw (E).

 
Screw eccentric rod (A) onto plate 52 as shown.

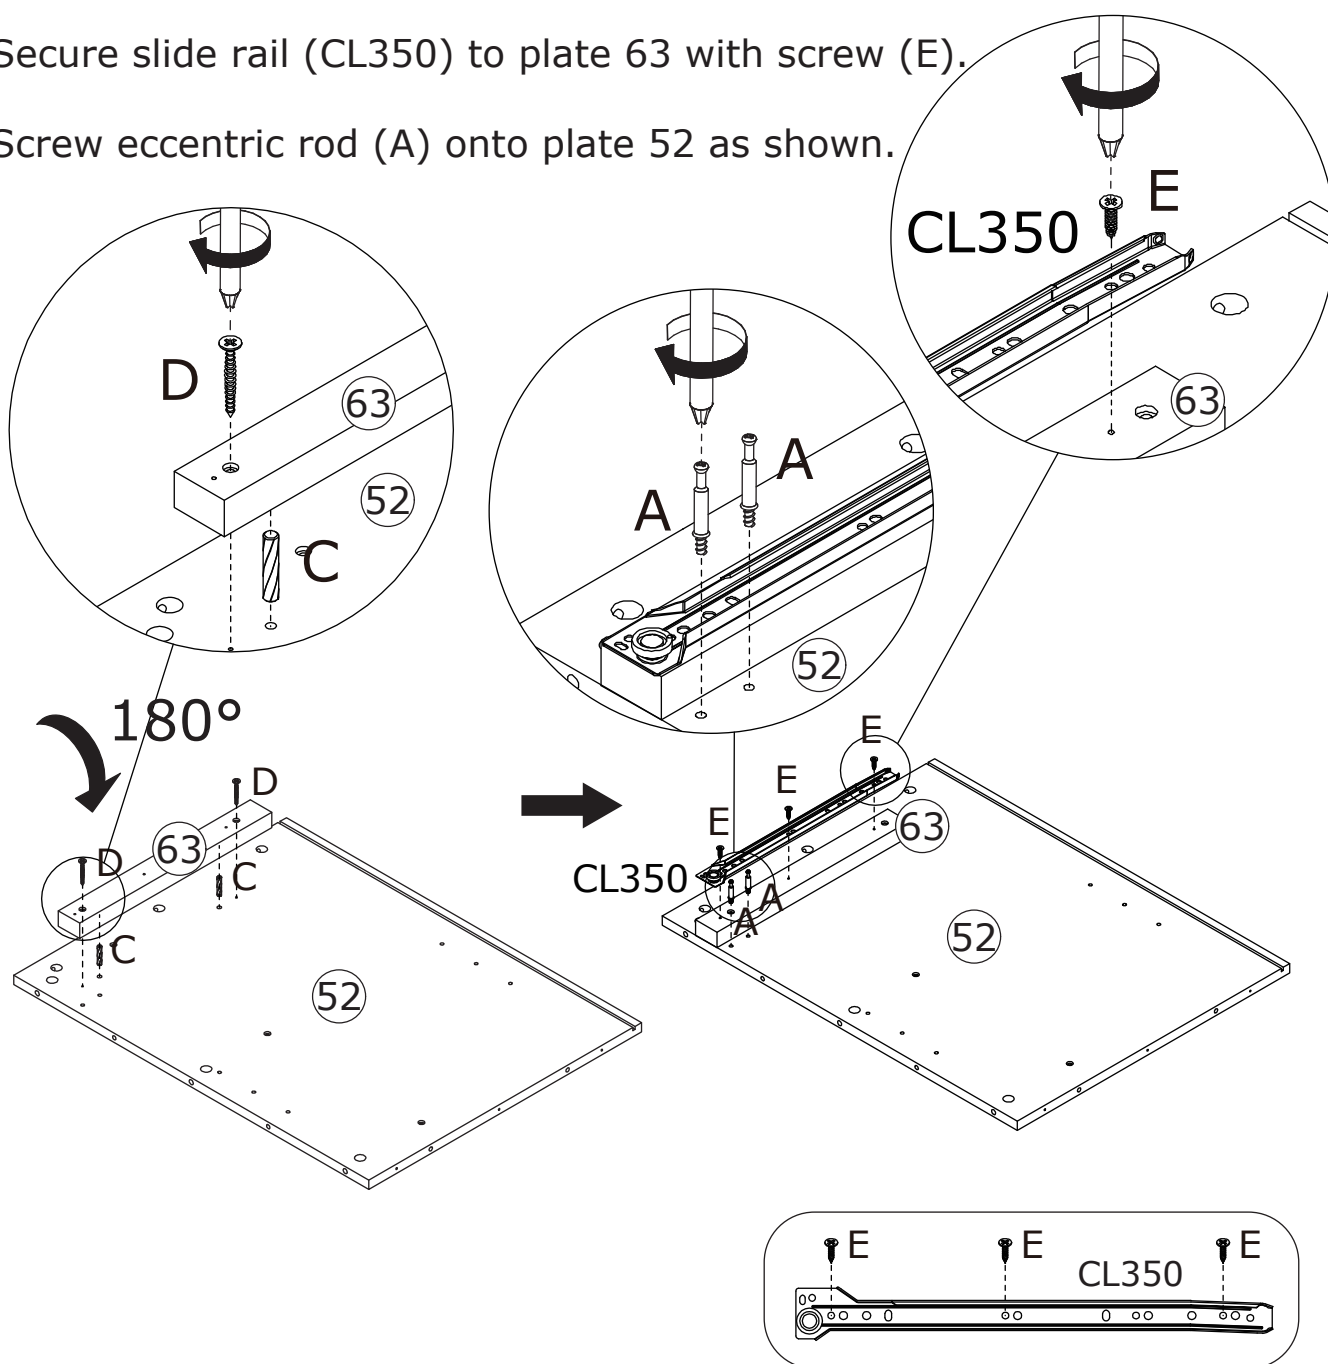



35

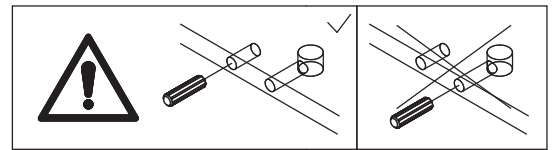 


 Connect plate 63 to plate 54 using wooden dowel (C), and secure with screw (D) as shown.

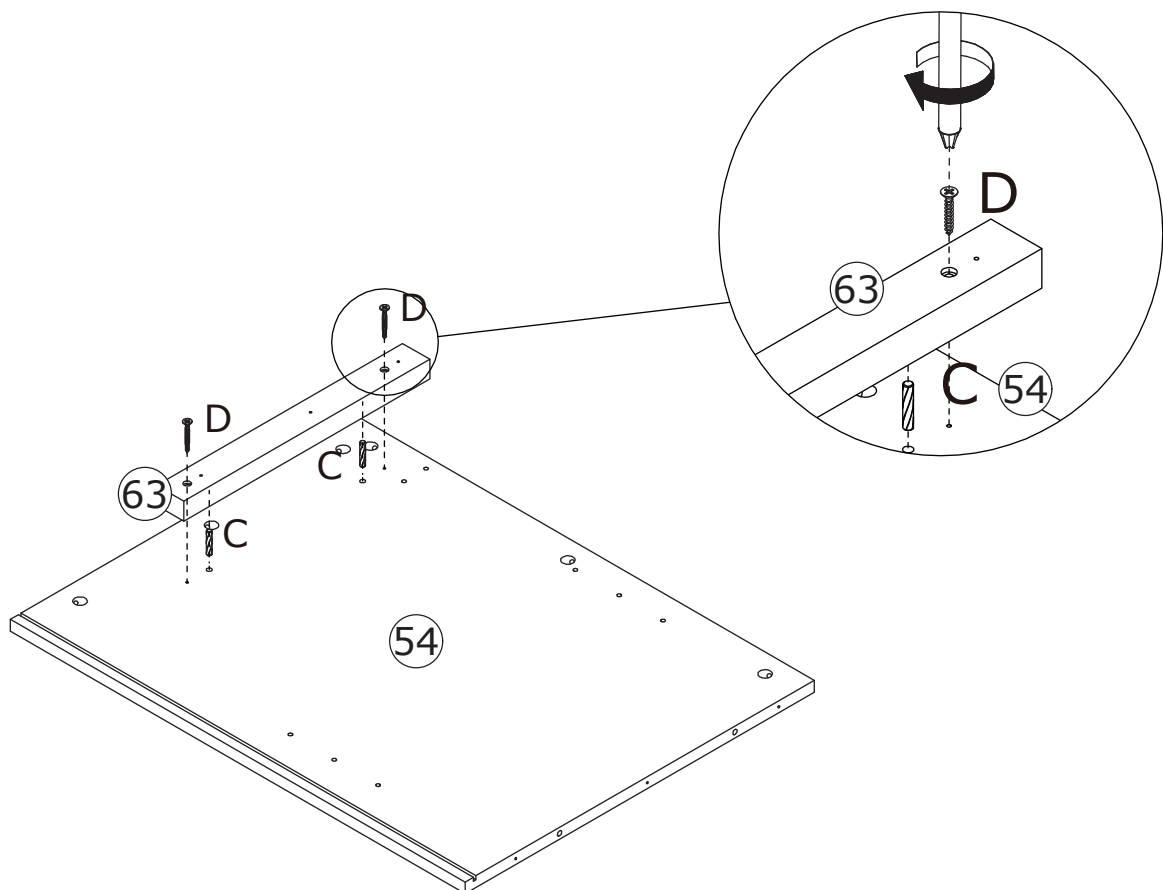


36

  A x 6  Ø 6 x 35 mm	E x 6  Ø 3 x 12 mm	CL350 x 1  350 mm	CR350 x 1  350 mm	
---	---	--	---	---


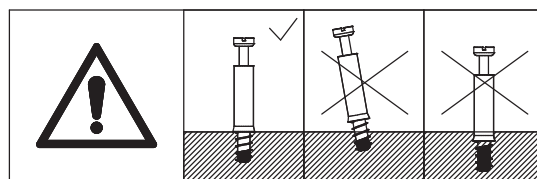 


Secure slide rail (CR350) to plate 54 with screw (E) and screw eccentric rod (A) onto as shown.

 
Flip the same plate to back, secure slide rail (CL350) and screw eccentric rod (A) onto as shown.

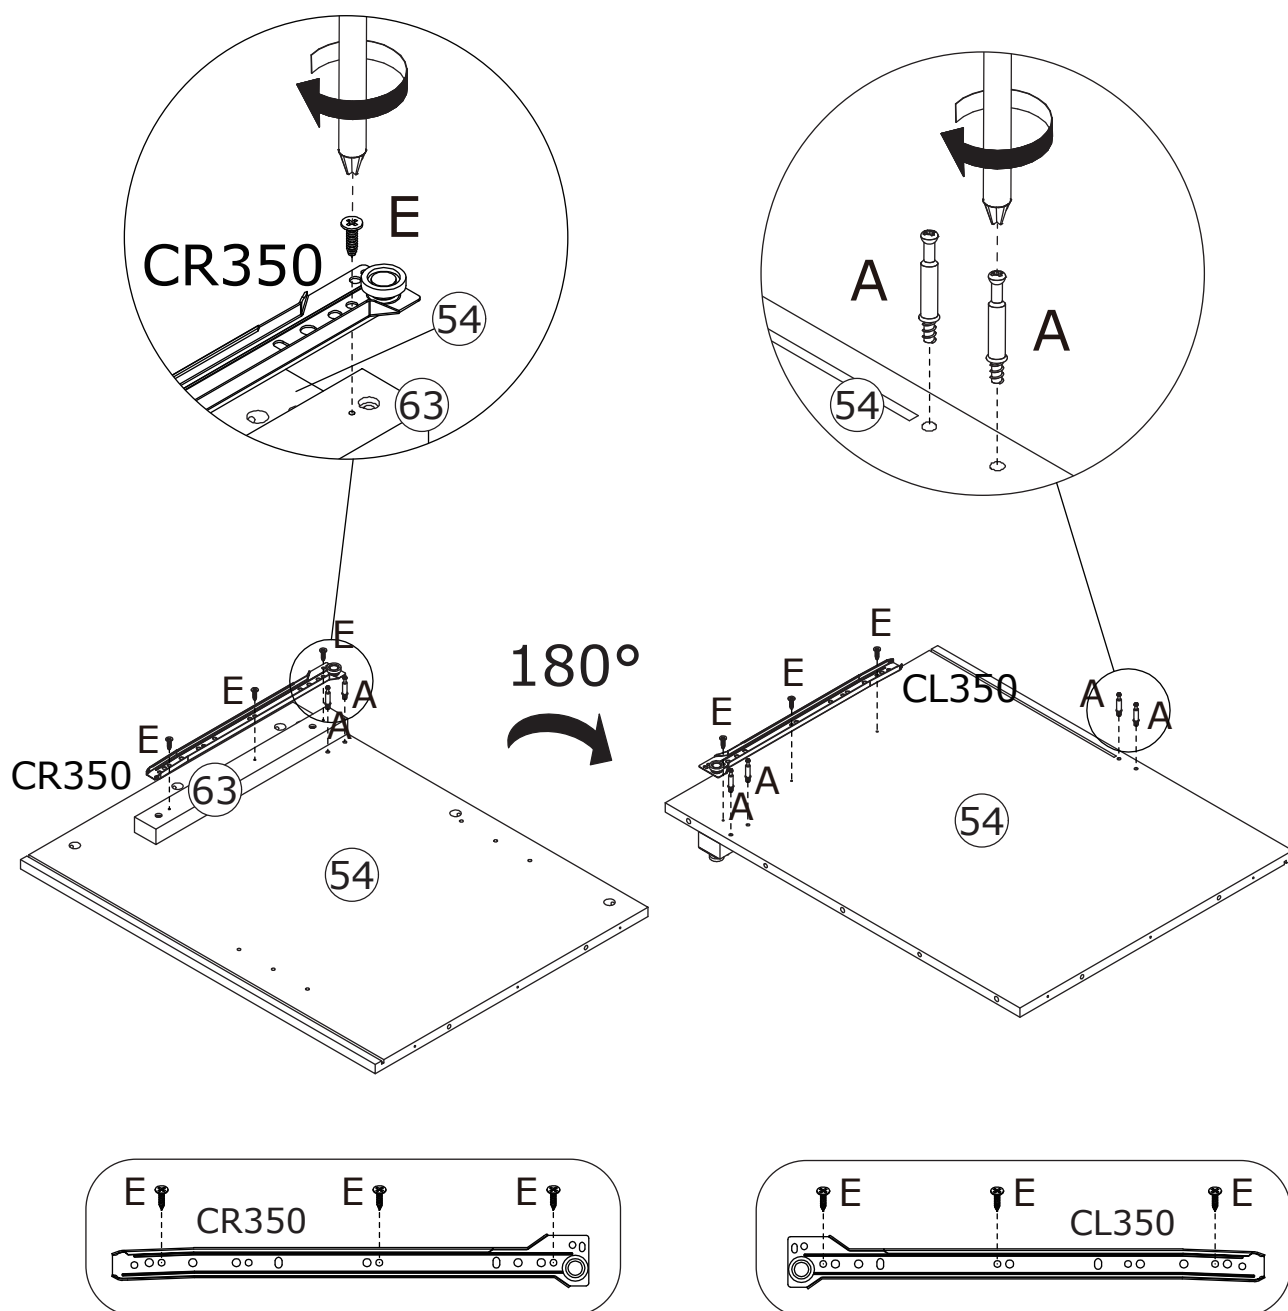


37

  G x 2 	O x 4  Ø3 x 14 mm	
--	---	---

 
Secure magnet (G) to plate 57 and 58 with screw (O) as shown.

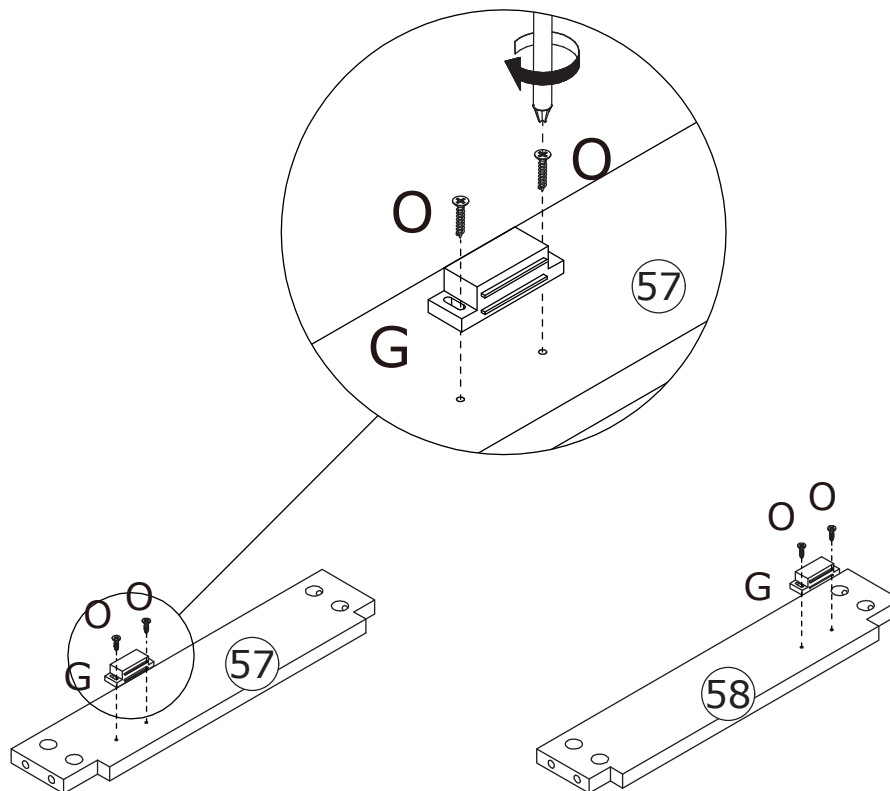

38

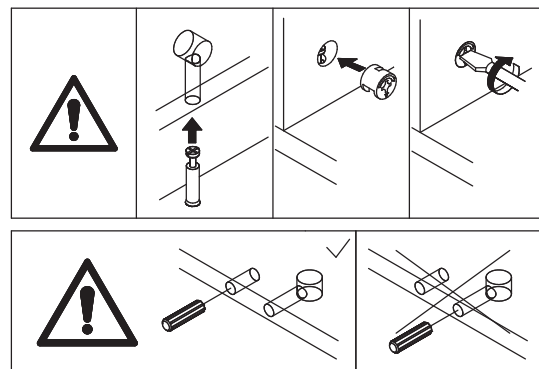 

 Connect plate 52 to plate 61, and plate 54 to plate 60 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.


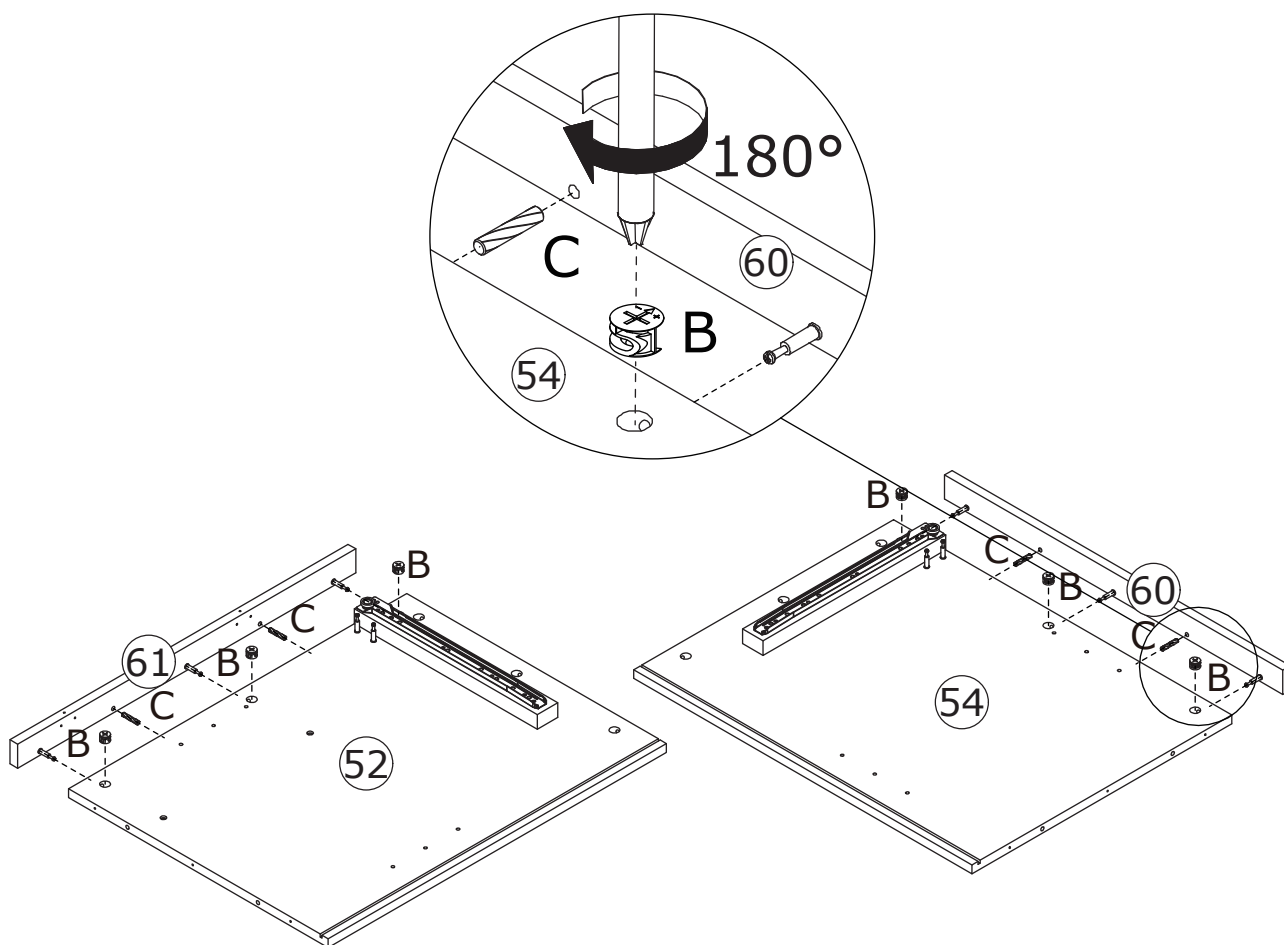


39


B x 4



  Ø 15 x 9 mm

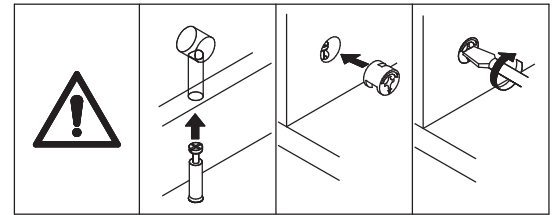

 Connect plate 57 to plate 52 and 54, tighten by turning cam lock (B) clockwise as shown.



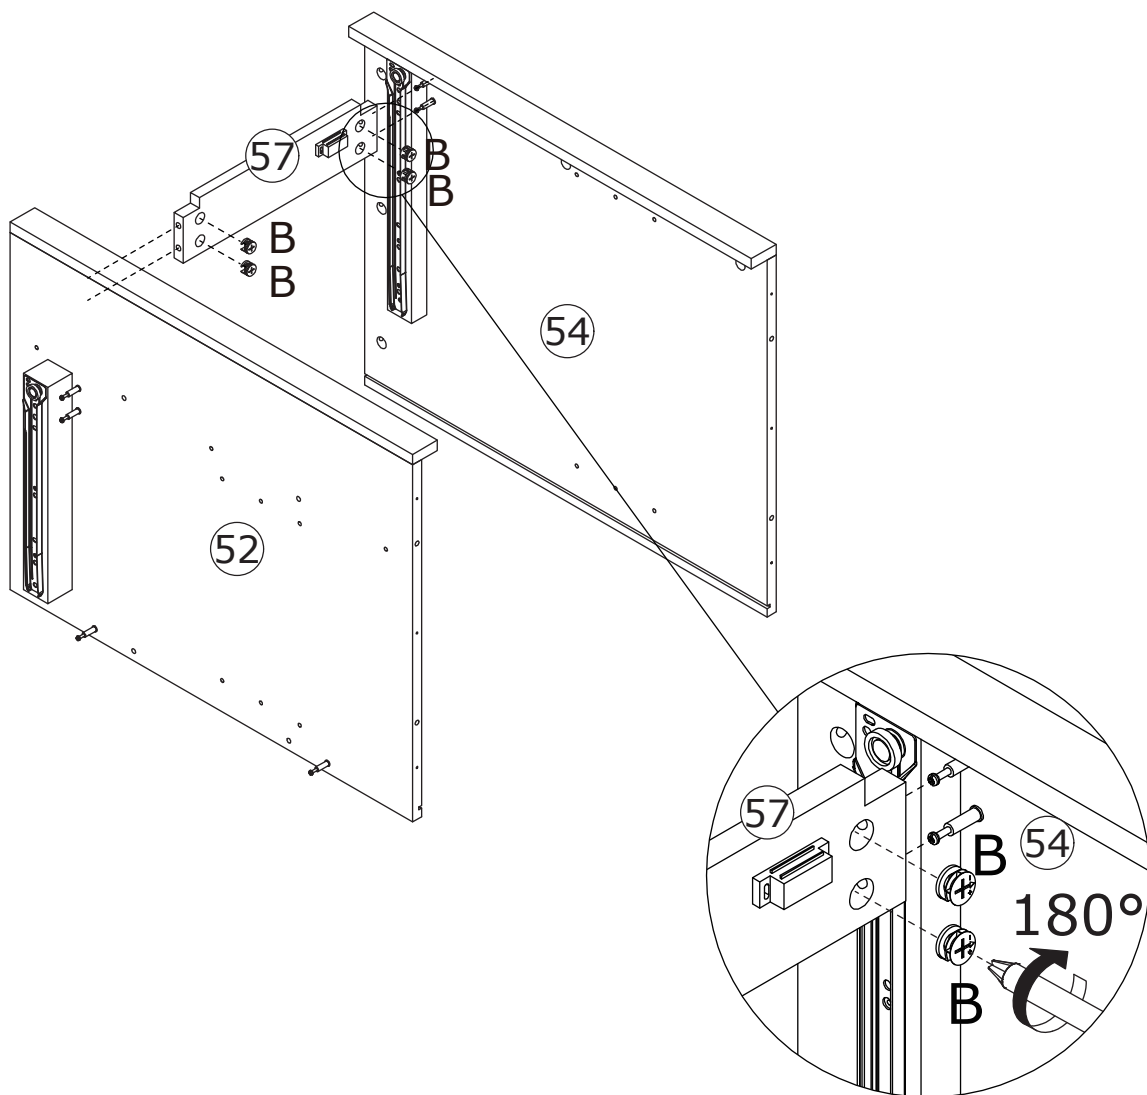


40


C x 4



   
D x 6





 Connect plate 50 to plate 52 and 54 using wooden dowel (C), and secure with screw (D) as shown.

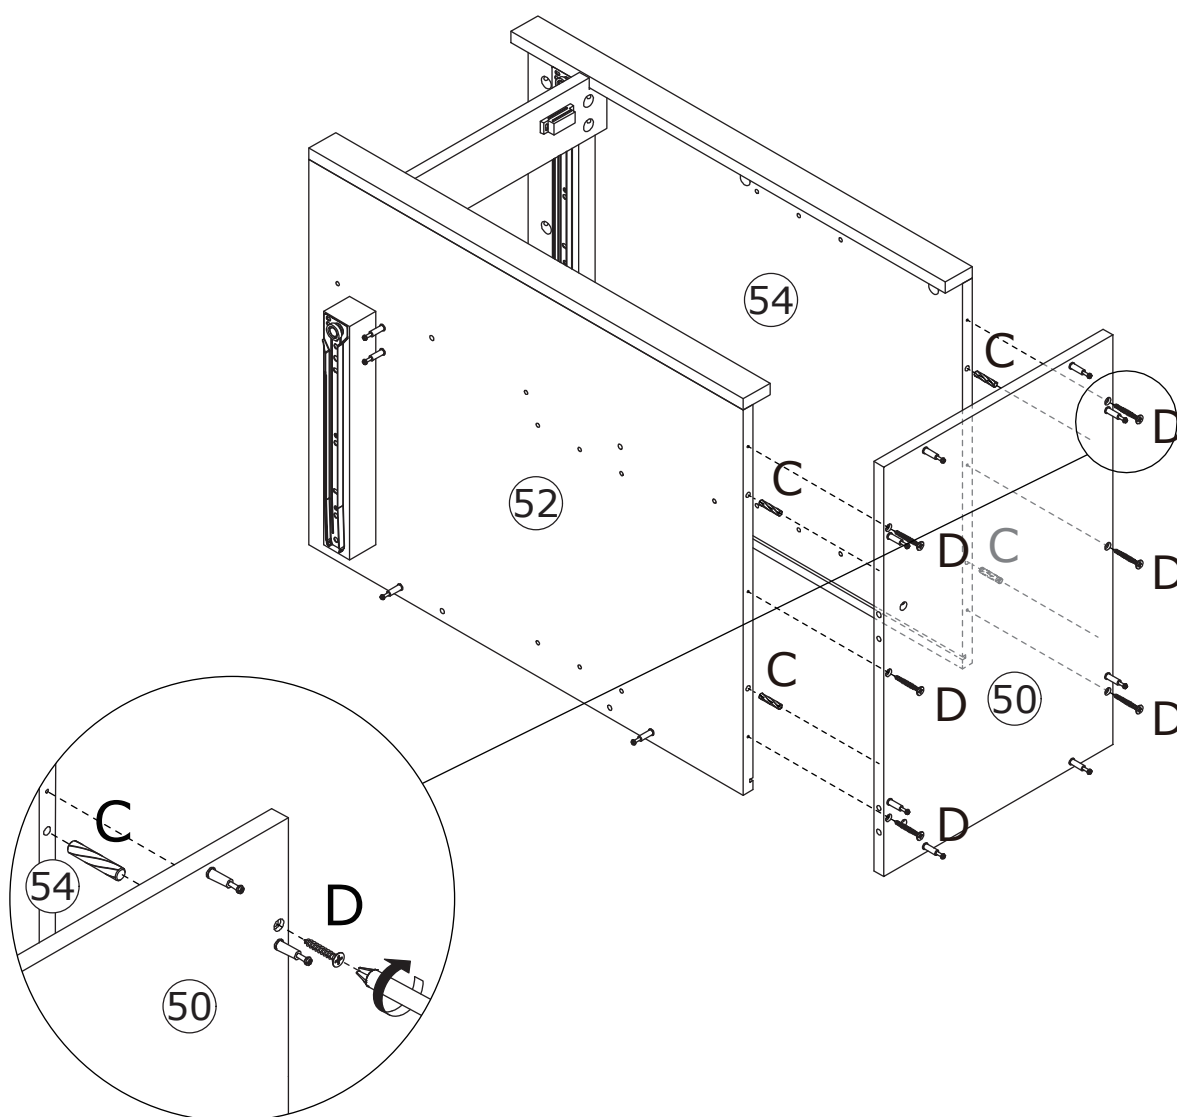


41

 A x 8

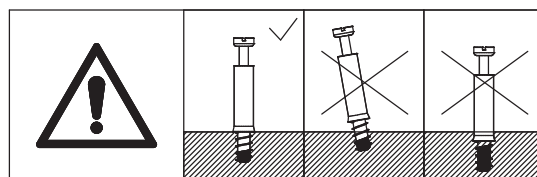   Ø6 x 35 mm

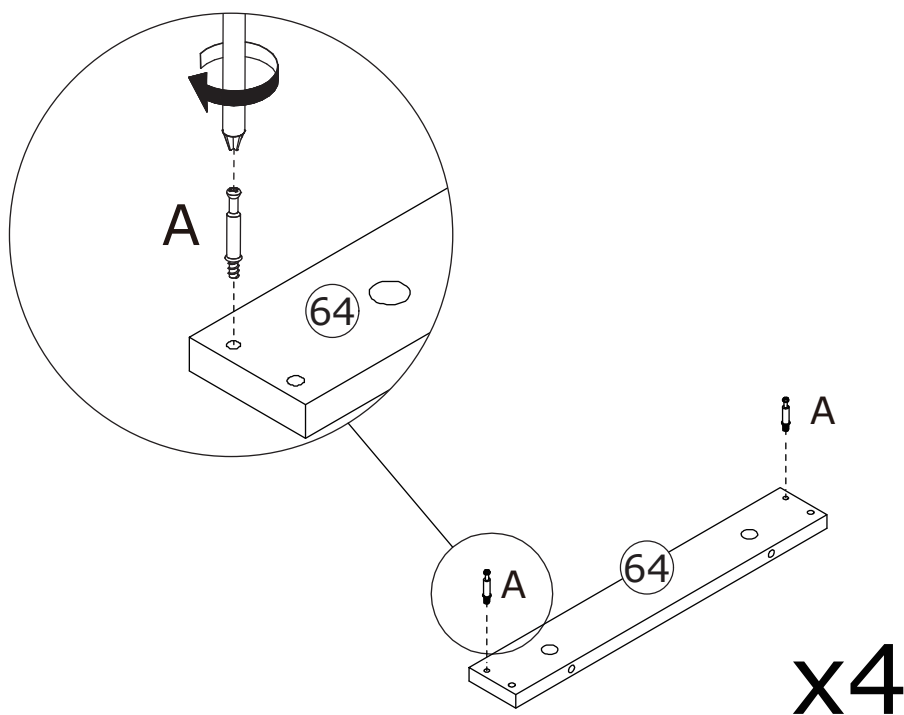 

Screw eccentric rod (A) onto plate 64 as shown.



42

B x 8

 
 
 
 
 
 


Ø 15 x 9 mm


C x 8



Ø 6 x 30 mm

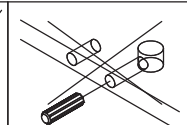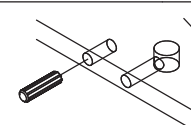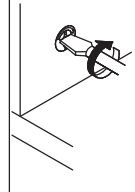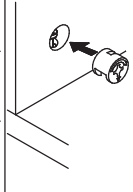

 Connect plate 64 to plate 65 using wooden dowel (C),
tighten by turning cam lock (B) clockwise as shown.




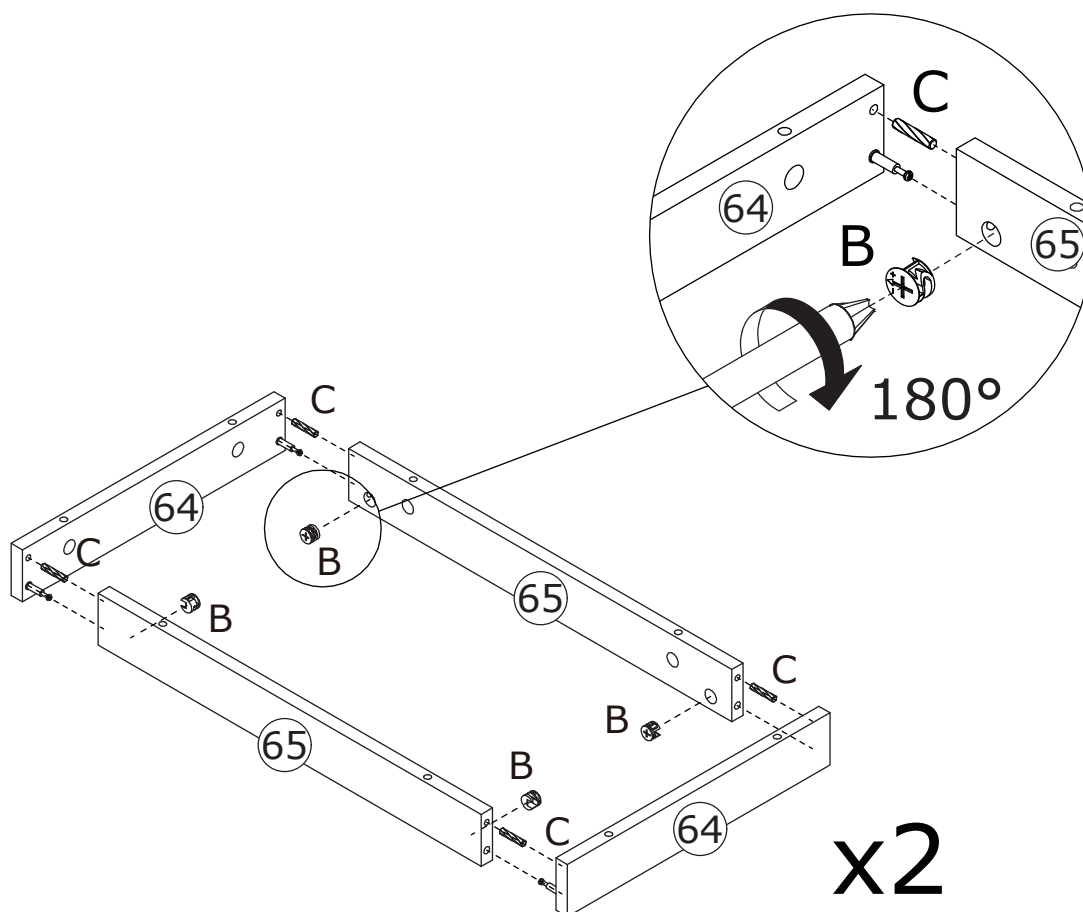


43


B x 8






 
 
 
 
Ø 15 x 9 mm

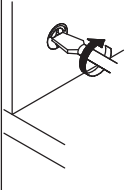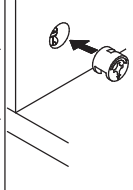

 Connect the component to plate 50, tighten by turning cam lock (B) clockwise as shown.

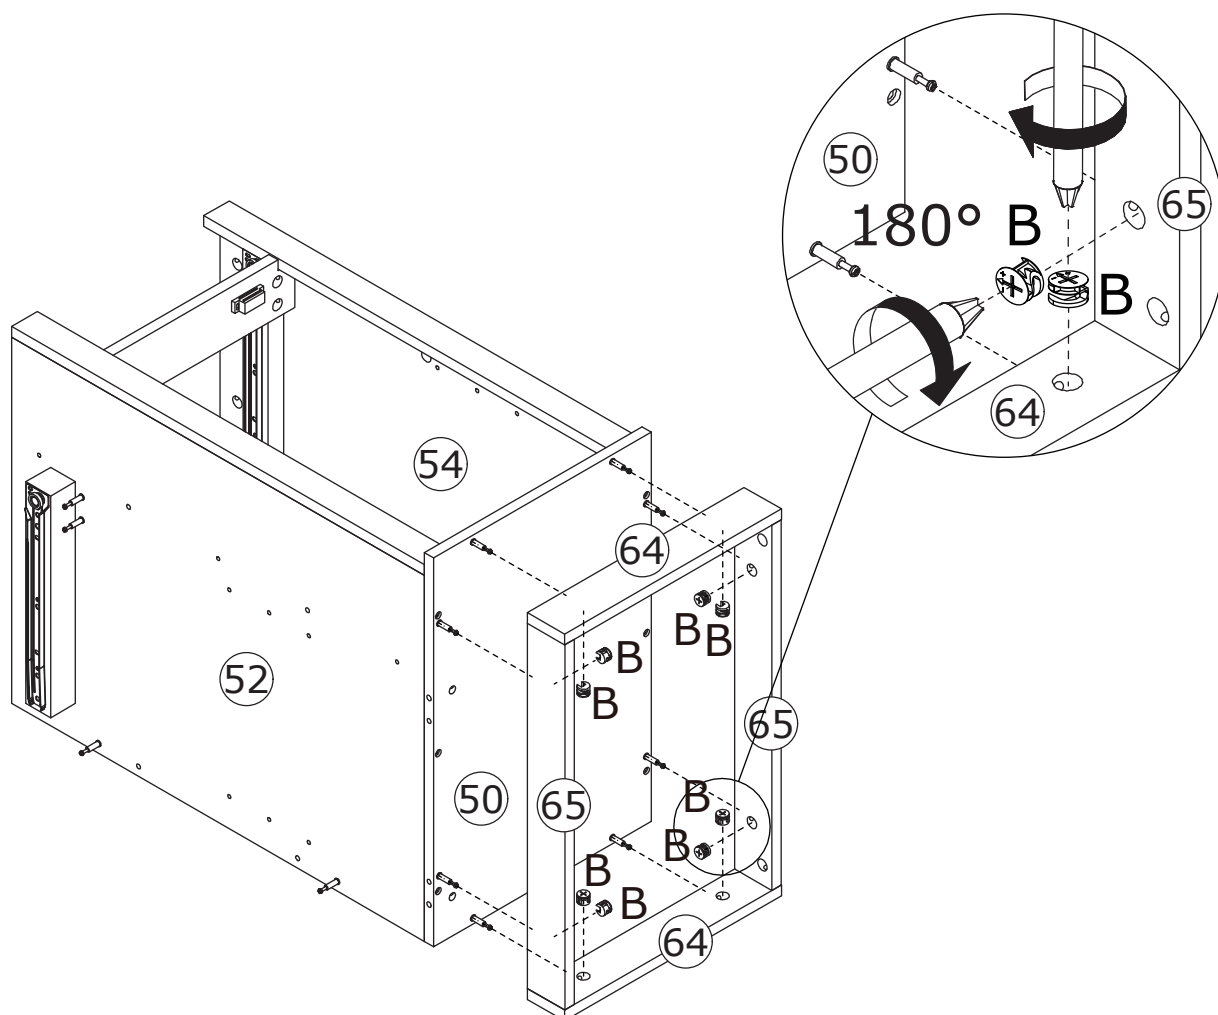


44

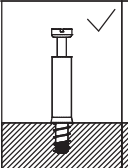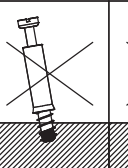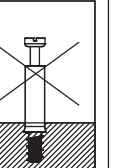       A x 2  Ø 6 x 35 mm	C x 2  Ø 6 x 30 mm	D x 2  Ø 4 x 35 mm	
E x 3  Ø 3 x 12 mm	CR350 x 1  350 mm	   	








Connect plate 63 to plate 53 using wooden dowel (C), and secure with screw (D) as shown.

Secure slide rail (CR350) to plate 63 with screw (E) as shown.

 Screw eccentric rod (A) onto plate 53.

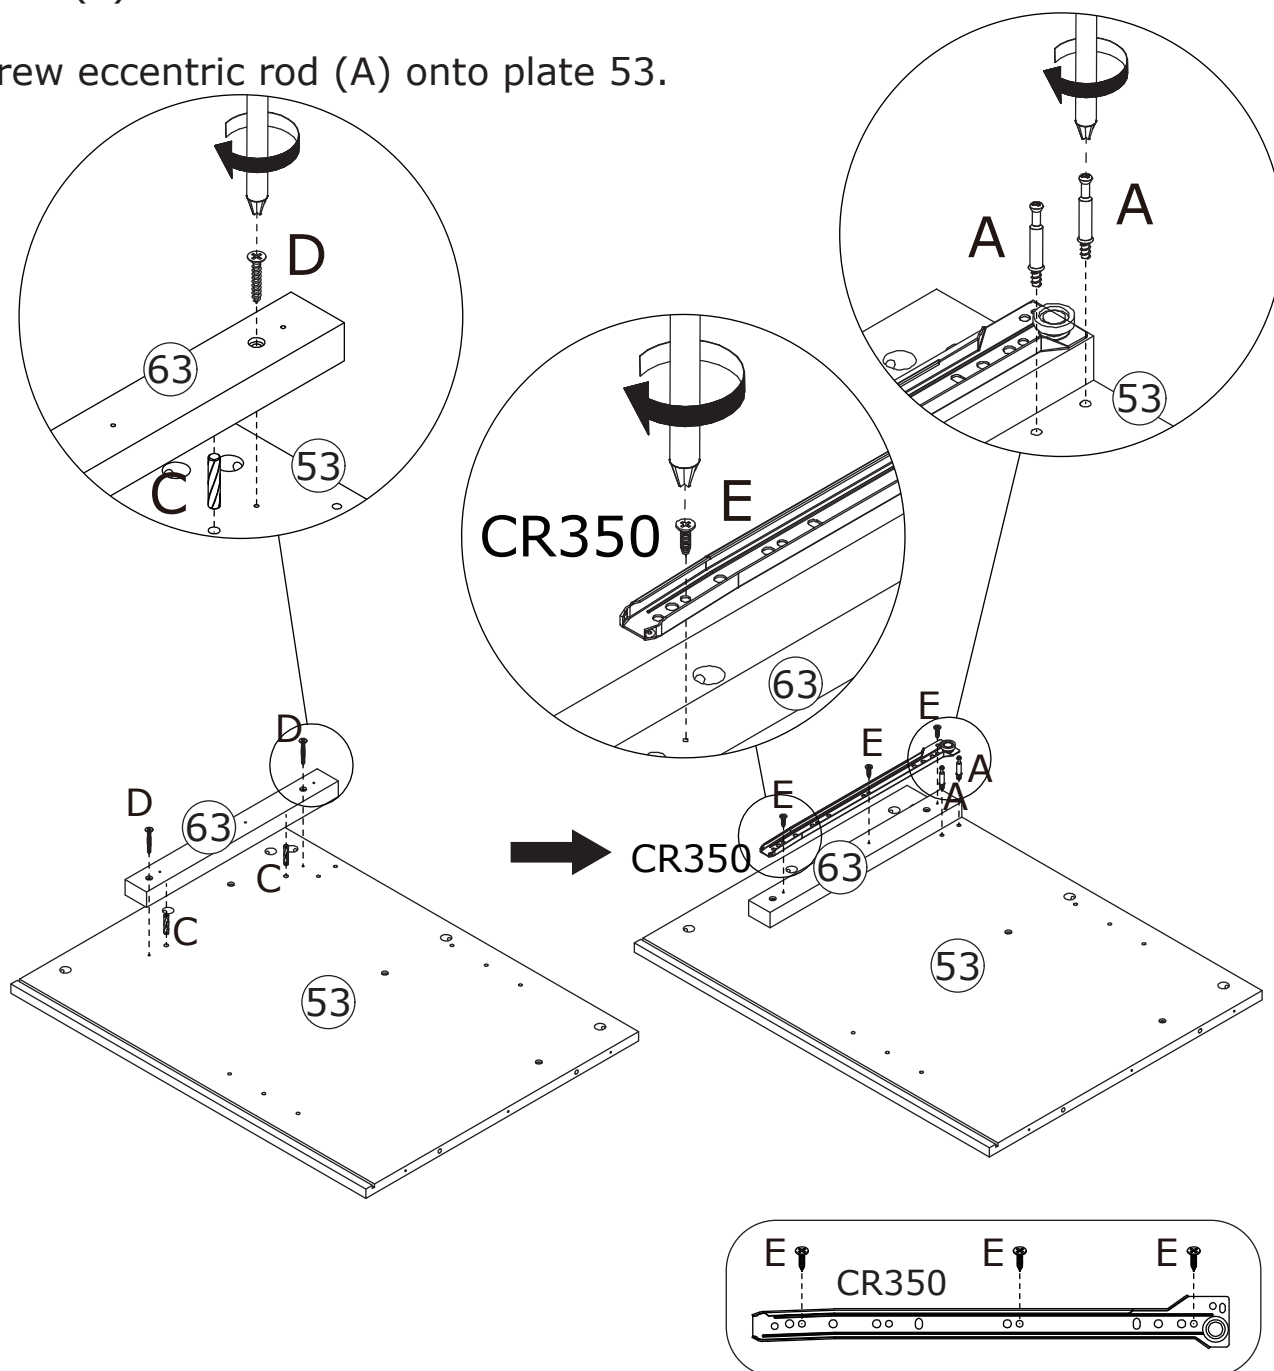







45

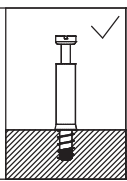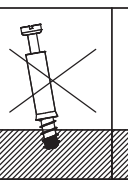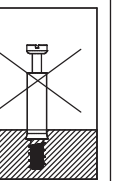       A x 4  Ø 6 x 35 mm	C x 2  Ø 6 x 30 mm	E x 3  Ø 3 x 12 mm	
F x 2  Ø 4 x 50 mm	CL300 x 1  300 mm	   	

Flip the same plate 53 to back, connect plate 37 to plate 53 using wooden dowel (C), and secure with screw (F) as shown.

Secure slide rail (CL300) to plate 37 with screw (E).

      Screw eccentric rod (A) onto plate 53 as shown.

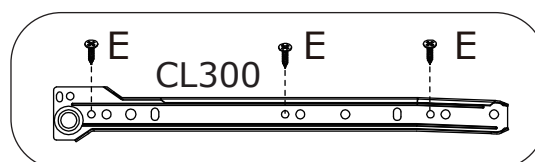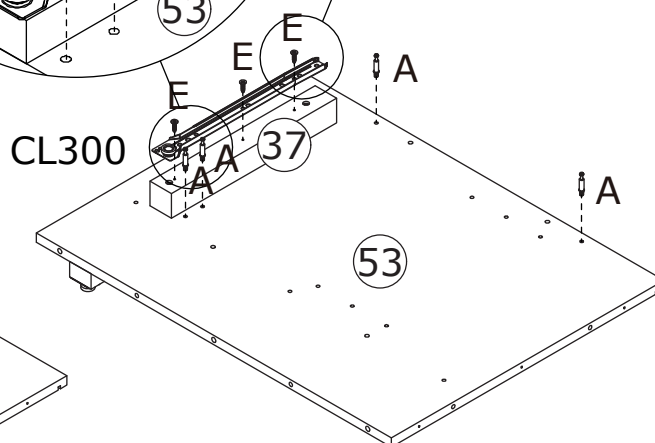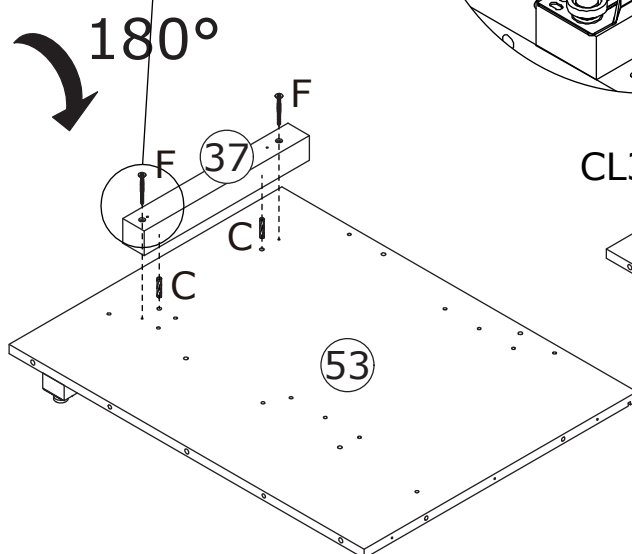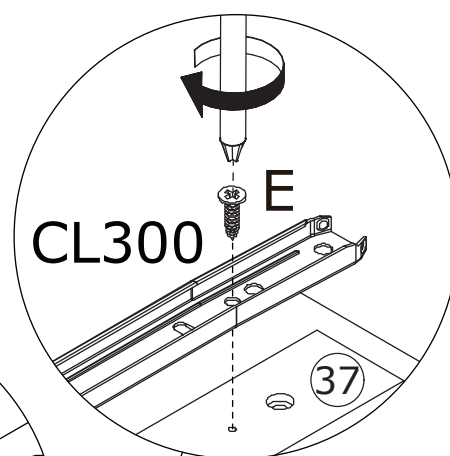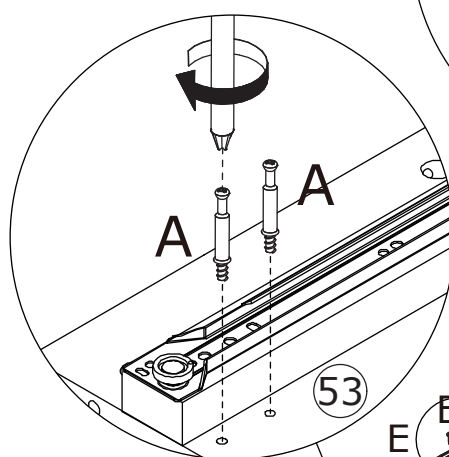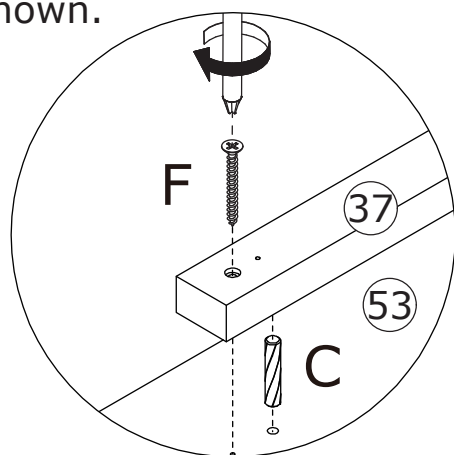

46

C x 2

 
 
 


Ø6 x 30 mm


D x 2





Ø4 x 35 mm



 Connect plate 63 to plate 55 using wooden dowel (C), and secure with screw (D) as shown.

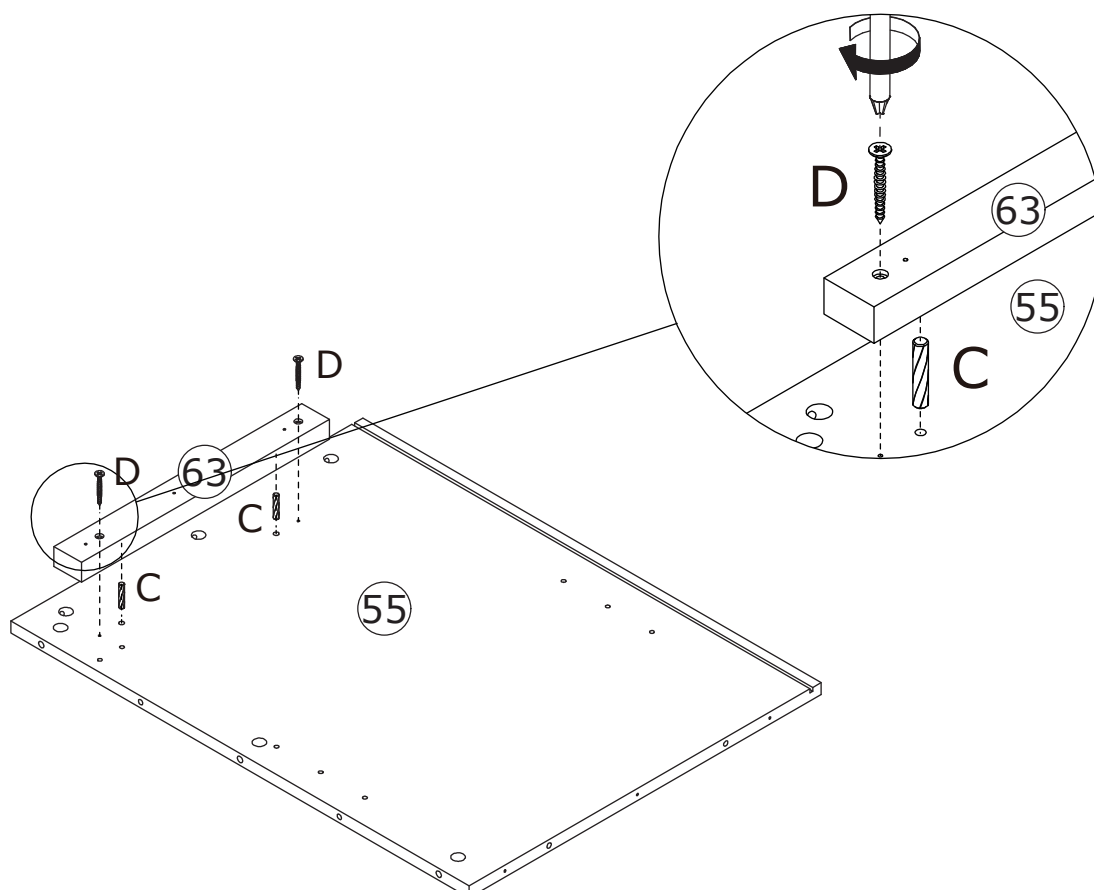


47

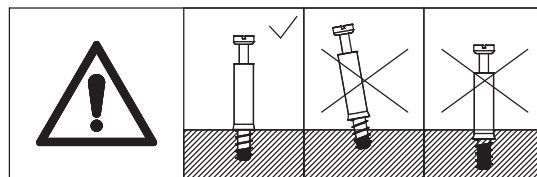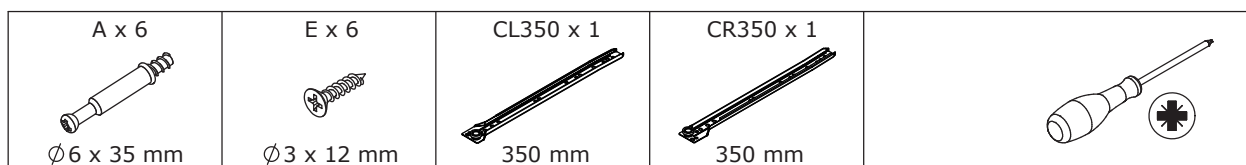  

Secure slide rail (CL350) to plate 63 with screw (E) and screw eccentric rod (A) onto as shown.

 Flip the same plate to back, secure slide rail (CR350) and screw eccentric rod (A) onto as shown.

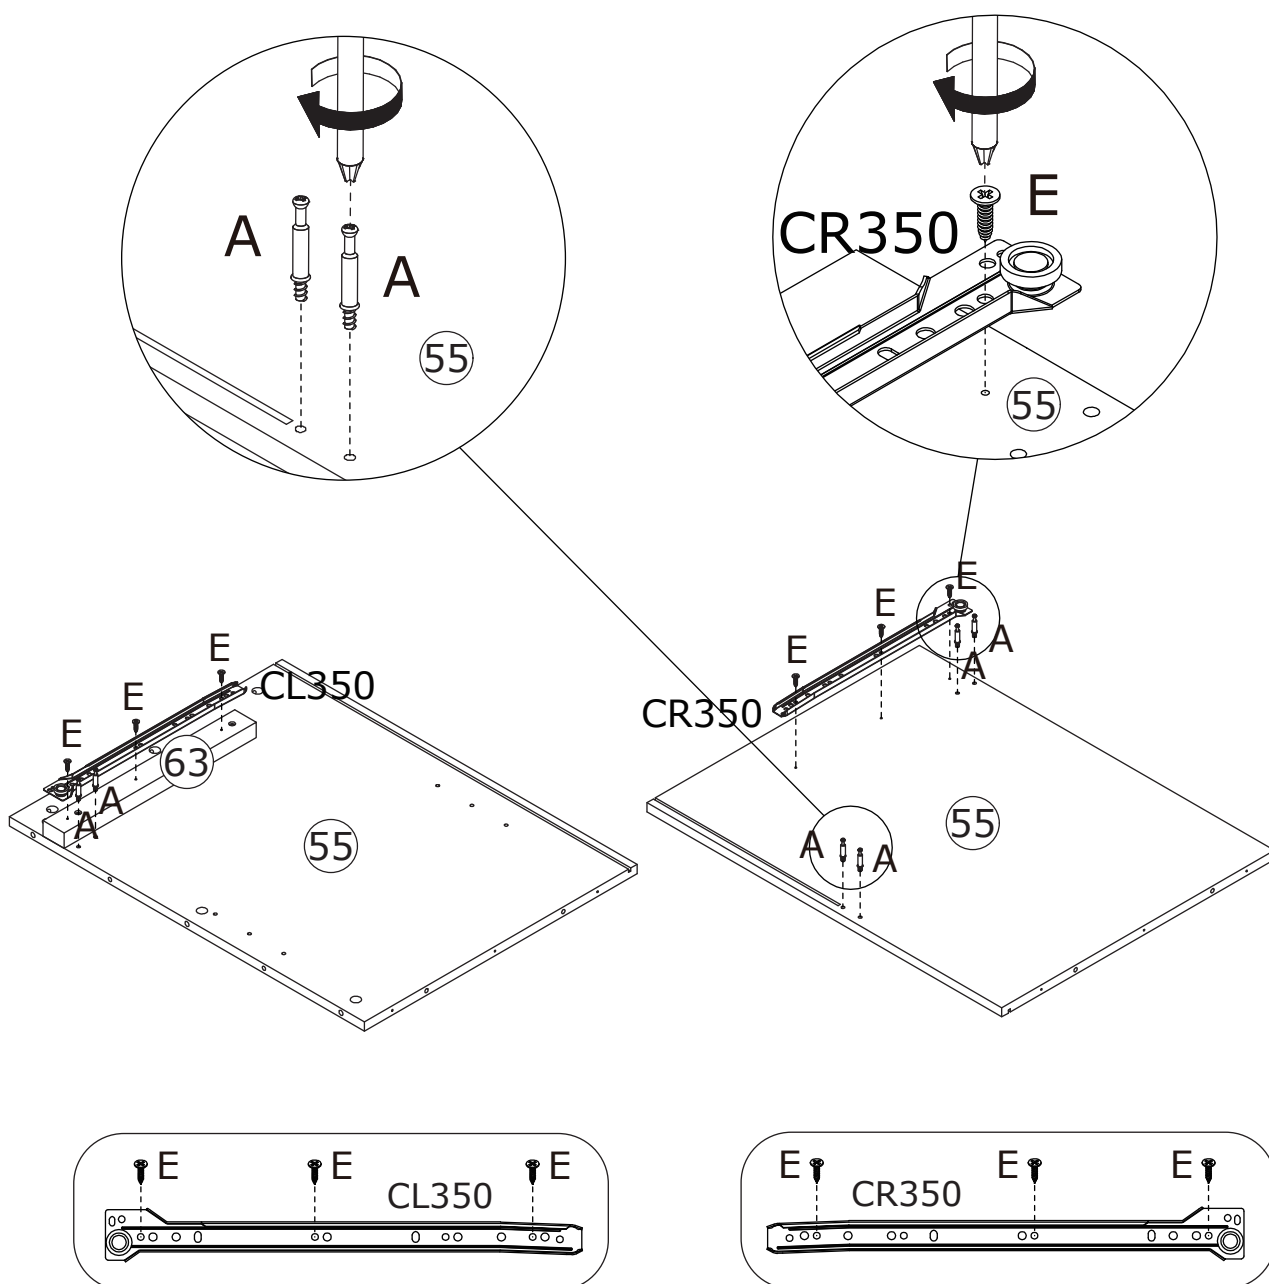

48

B x 6

 
 
 
 
 
 


Ø 15 x 9 mm




C x 4



Ø 6 x 30 mm

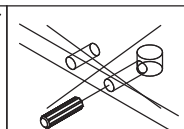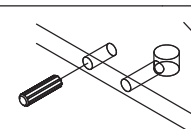

   Connect plate 60 to plate 55, and plate 62 to plate 53 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.


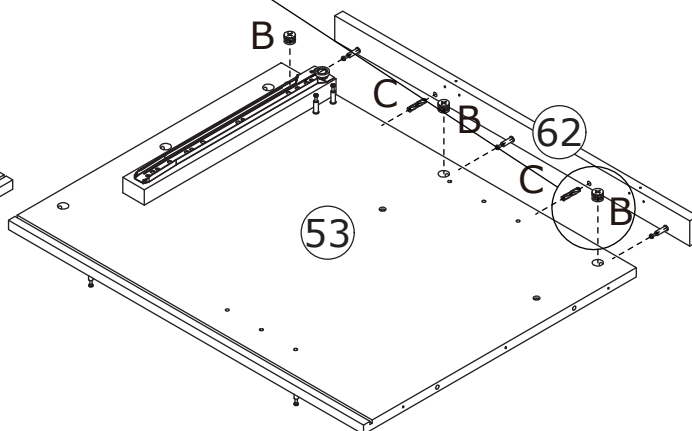
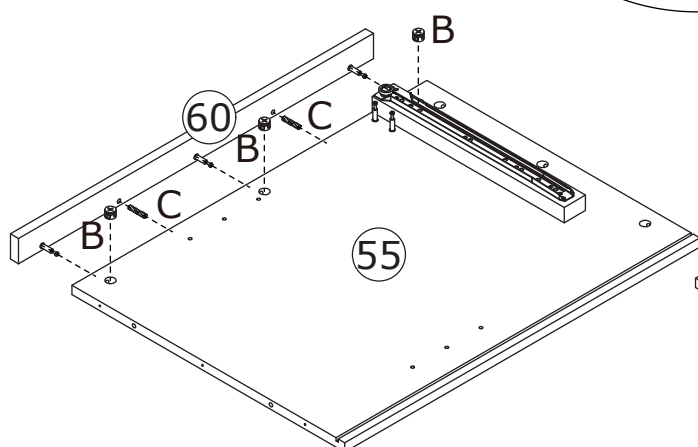
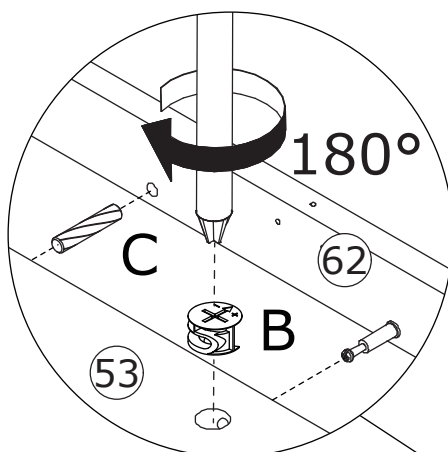


49


B x 4



    
Ø 15 x 9 mm

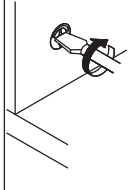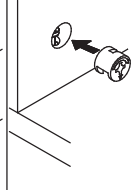

 
Connect plate 58 to plate 53 and 55, tighten by turning cam lock (B) clockwise as shown.

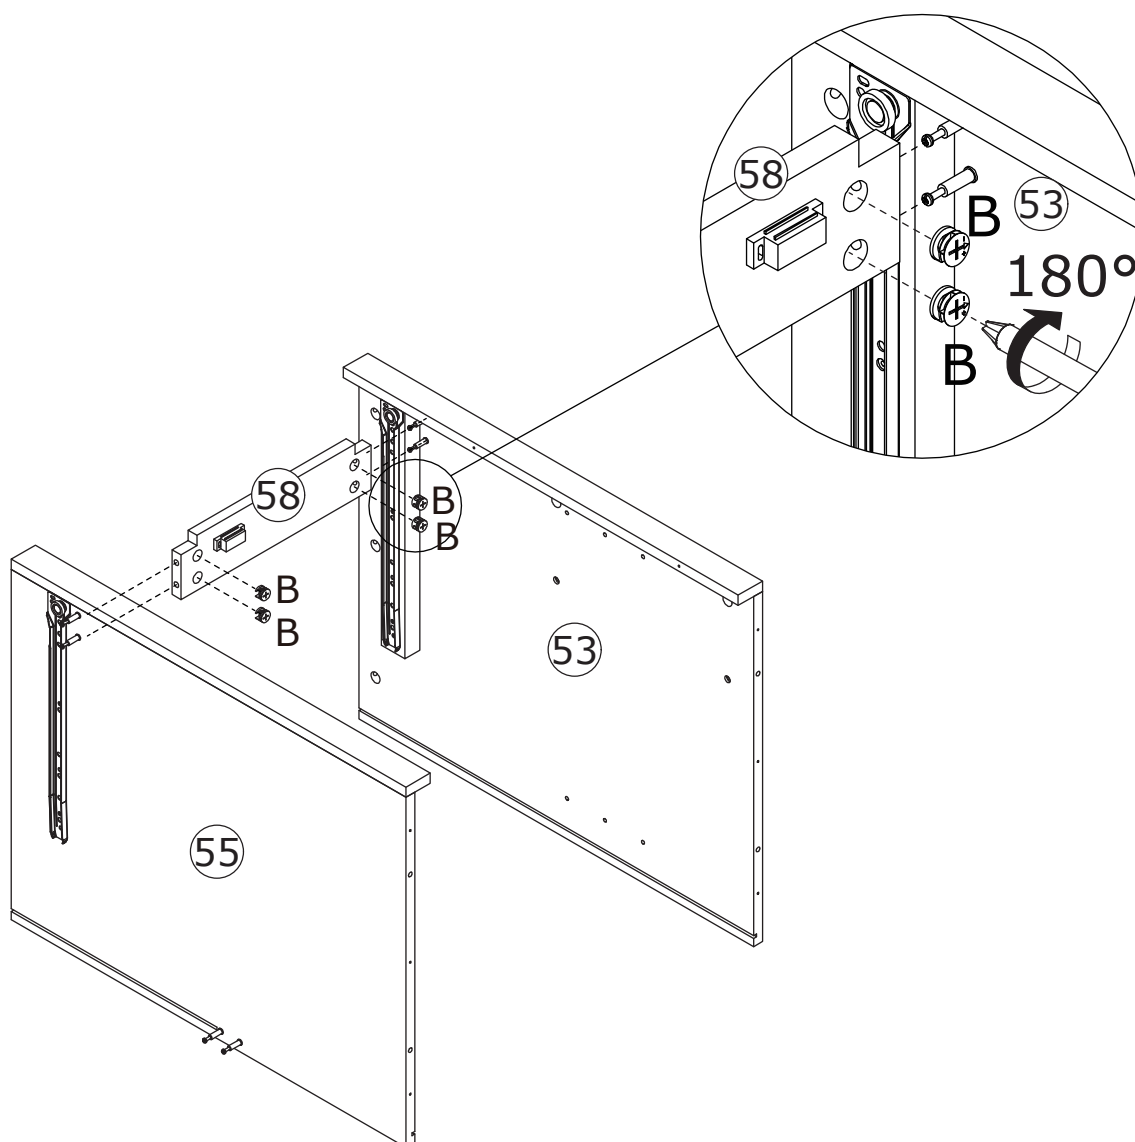

50

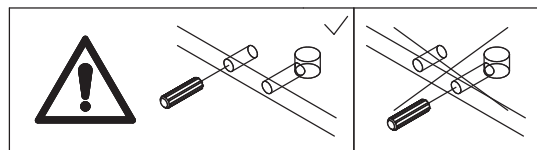 

 Connect plate 51 to plate 53 and 55 using wooden dowel (C), and secure with screw (D) as shown.


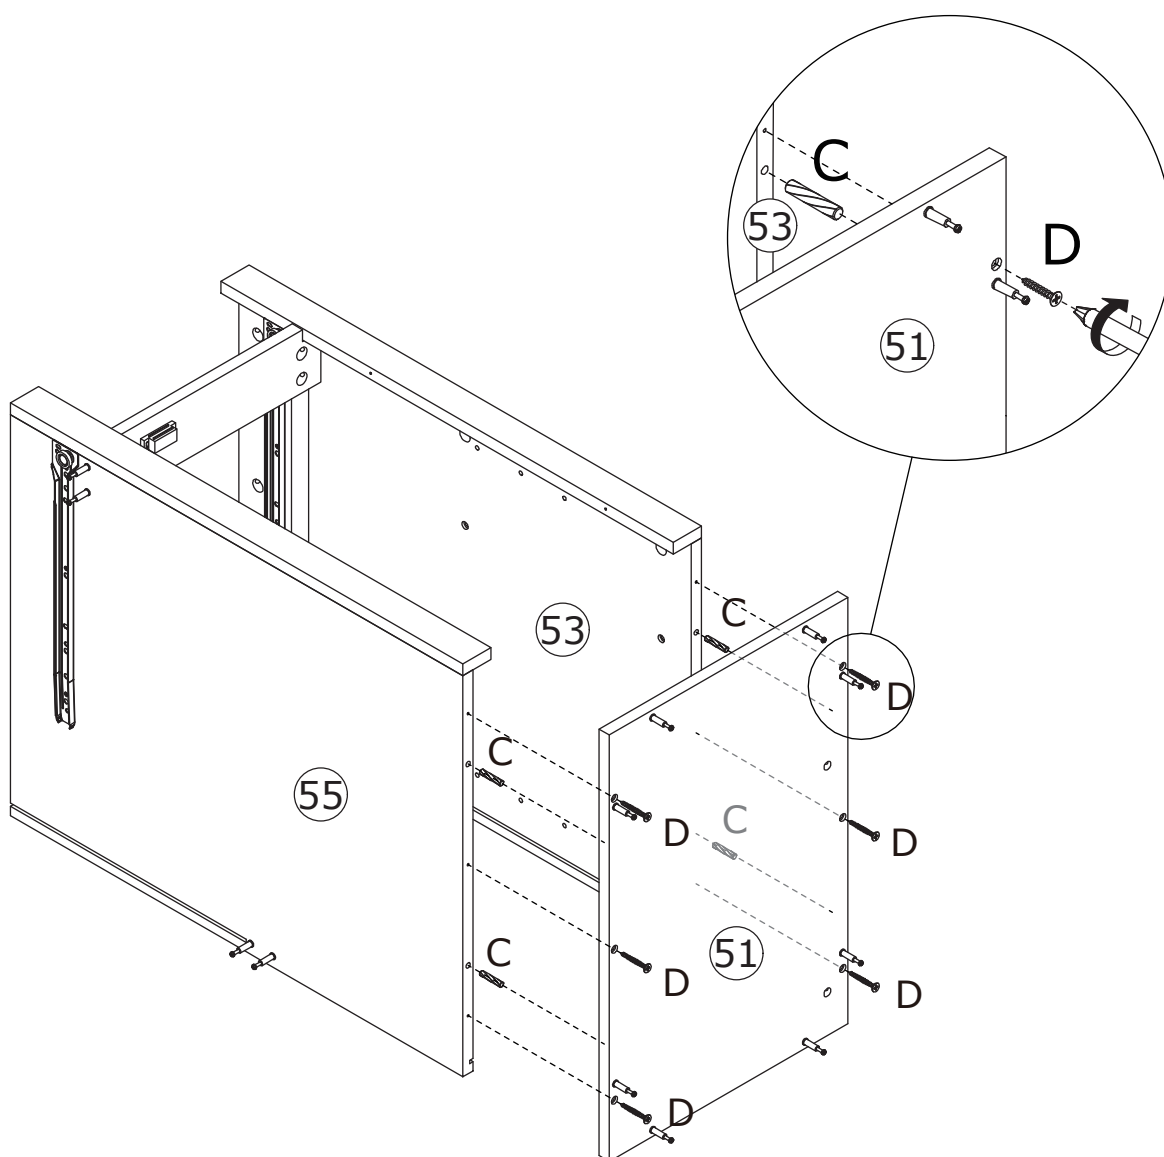


51


B x 8



  Ø 15 x 9 mm

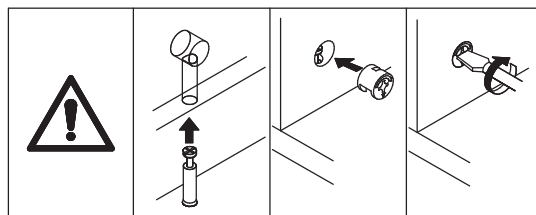

 Connect plate 64 and 65 to plate 51, tighten by turning cam lock (B) clockwise as shown.


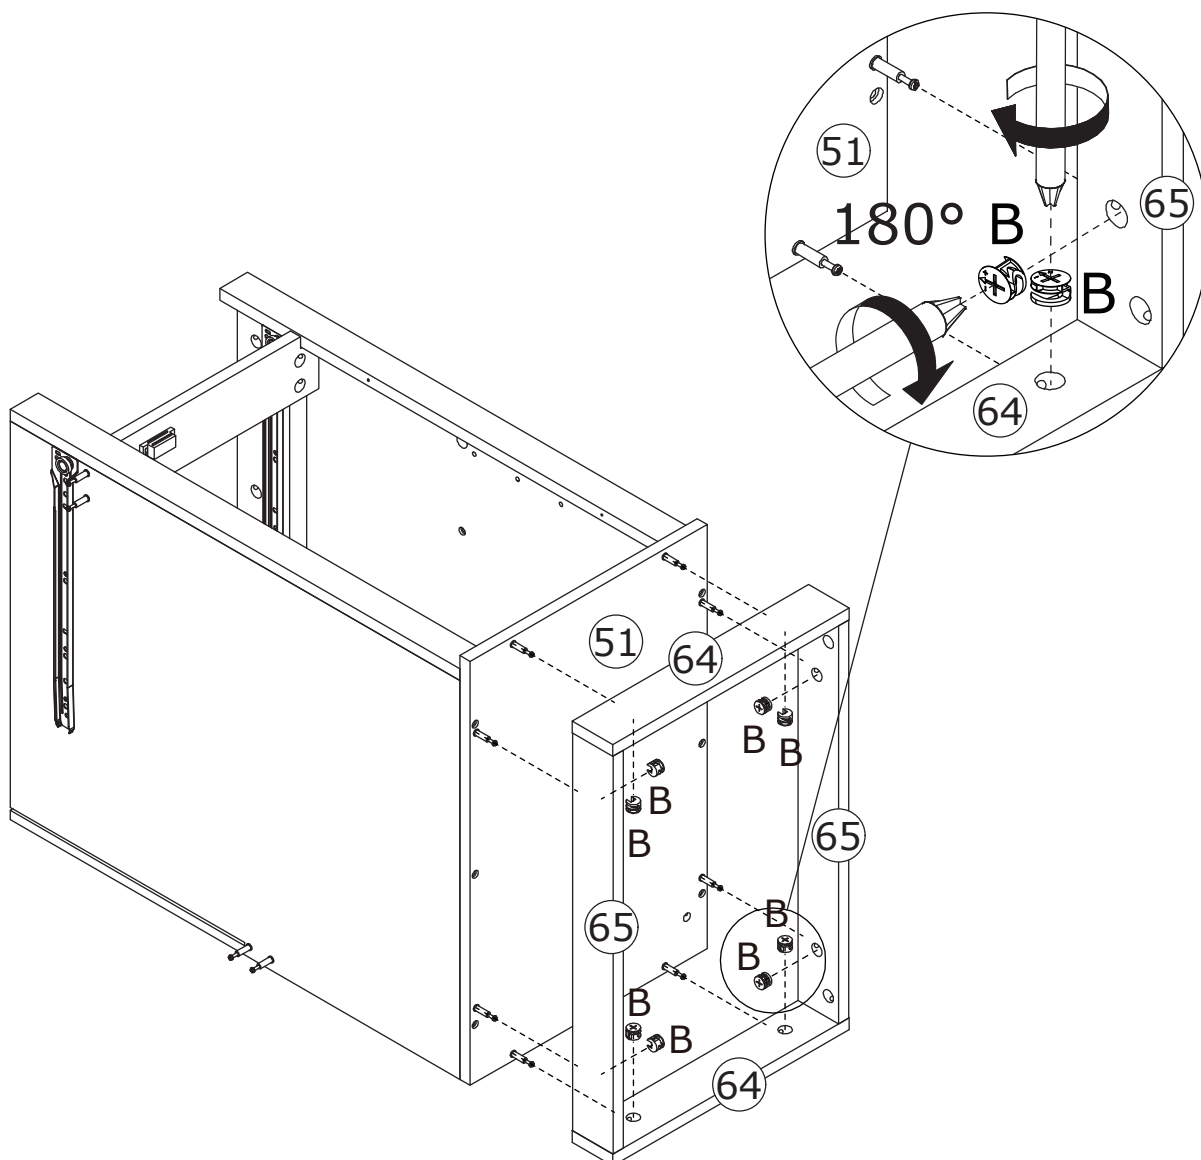


52


B x 8



  
Ø 15 x 9 mm

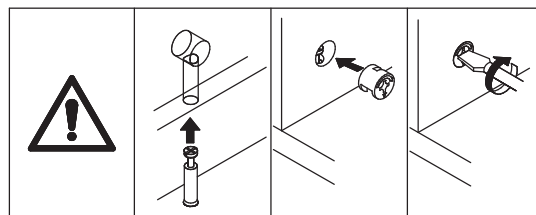


 
Connect plate 56 and 59 to plate 54 and 55, tighten by turning cam lock (B) clockwise as shown.

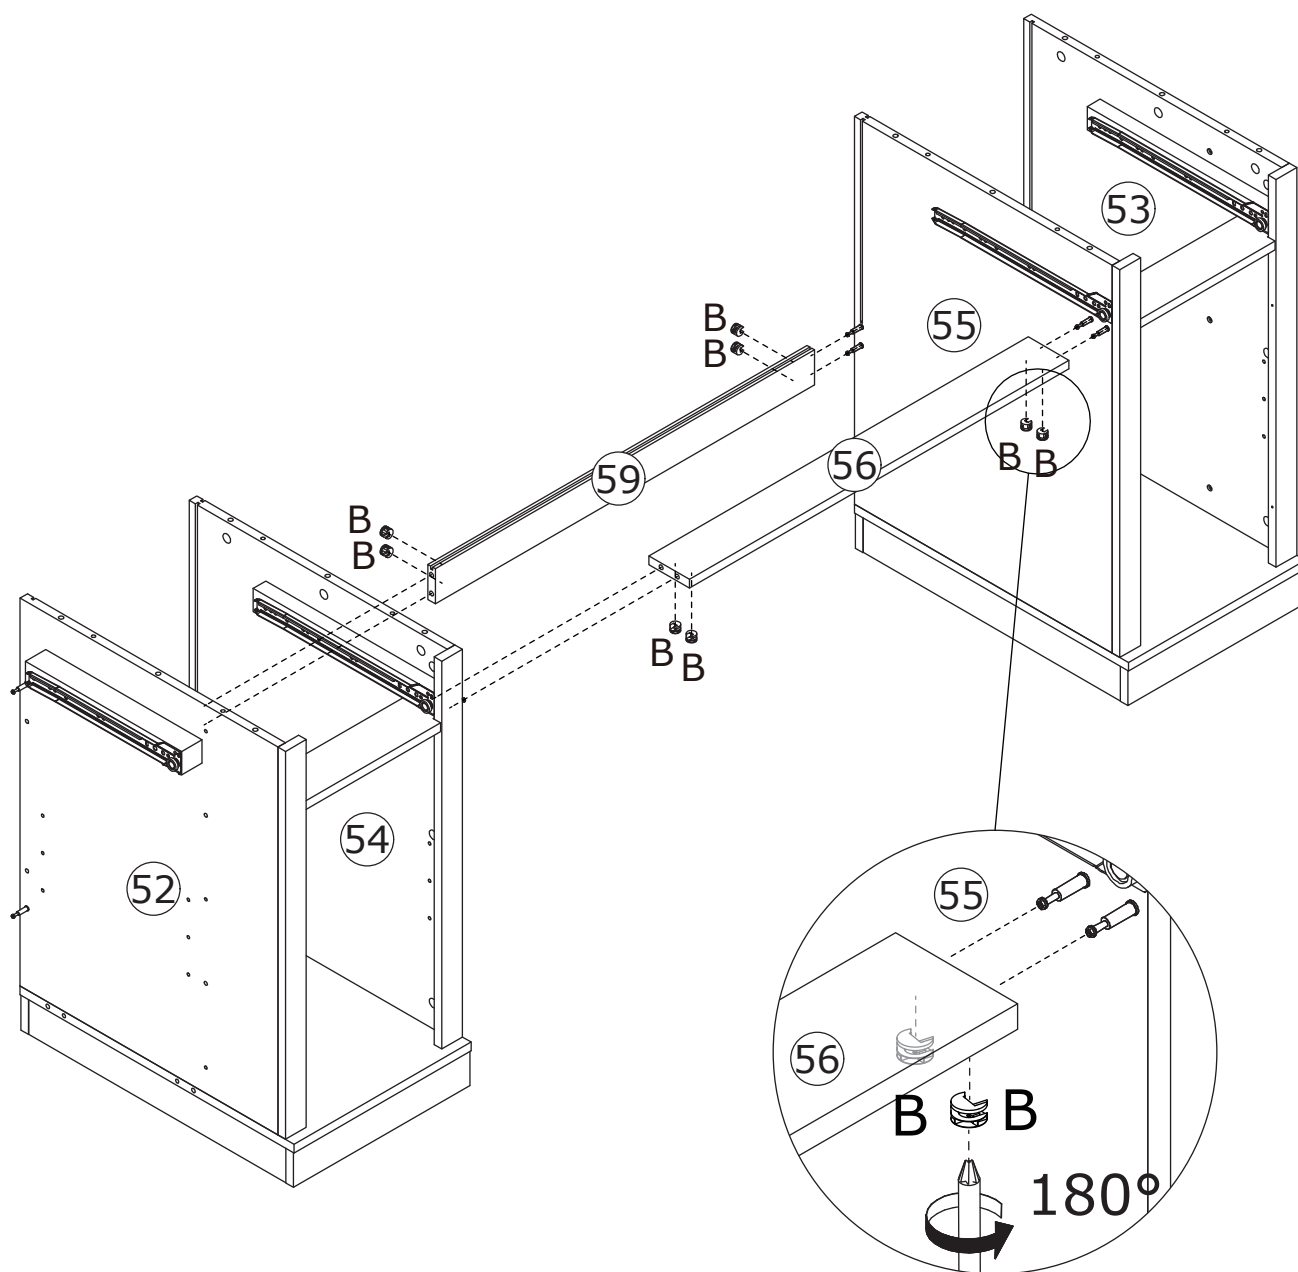

 
Slide plate 78 and 79 along the available grooves as shown.

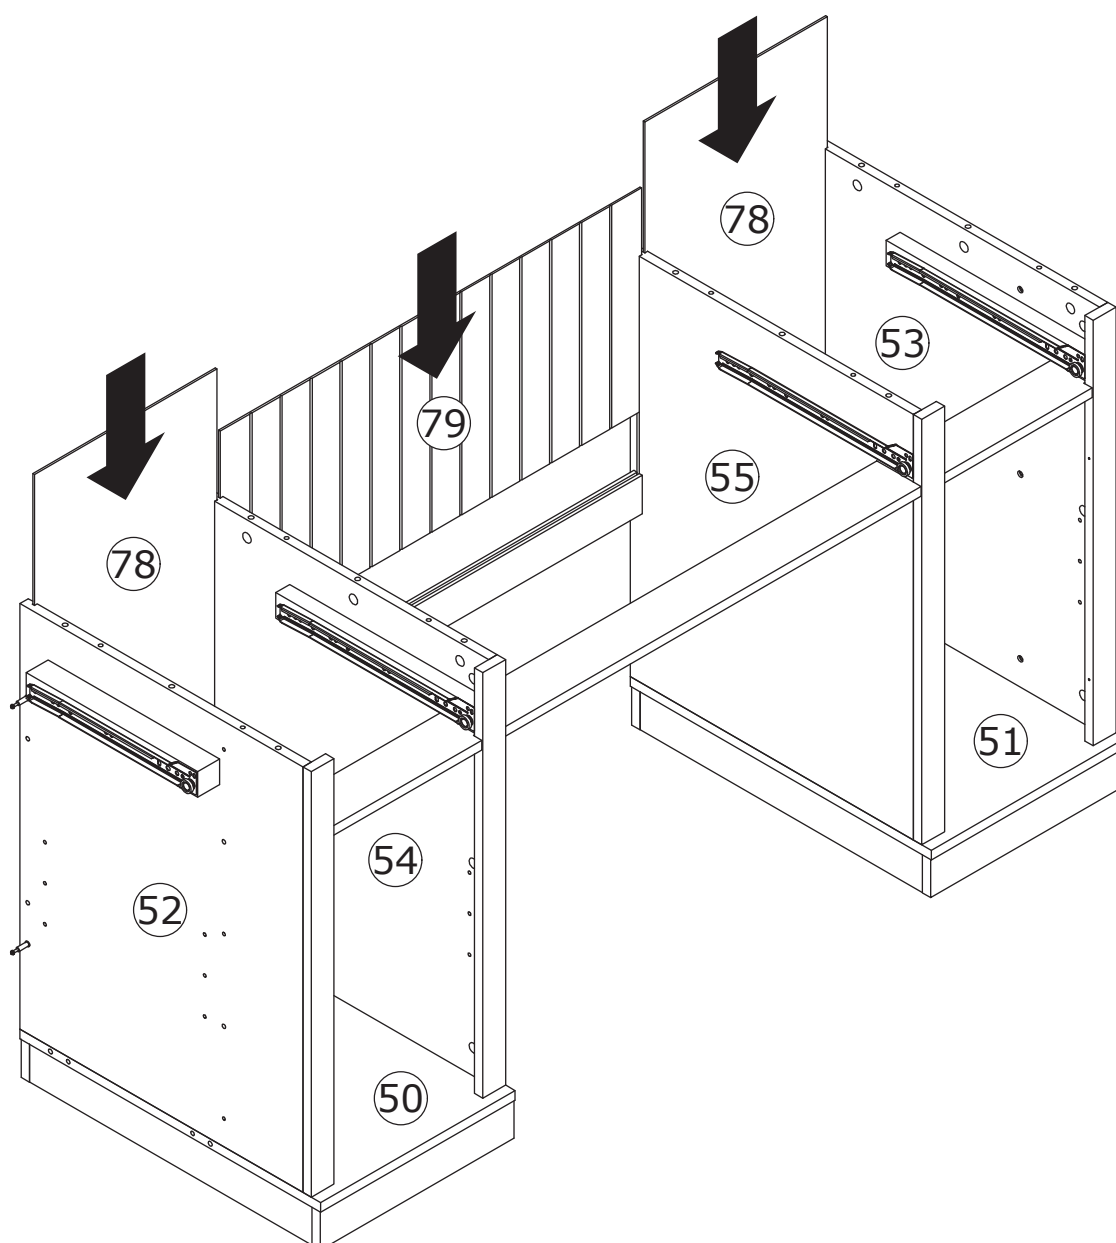





54

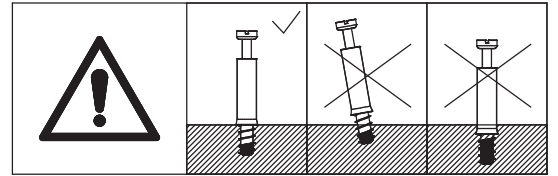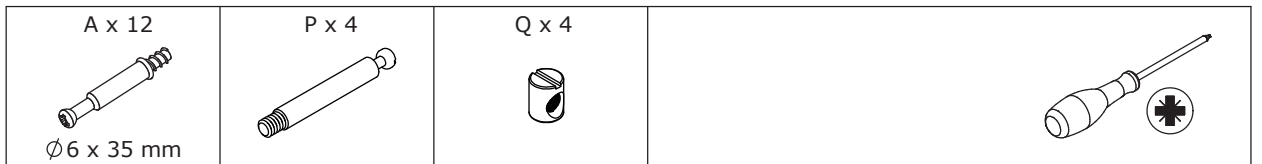  


 
Screw eccentric rod (A) onto plate 49 as shown.
Insert nut (Q) into plate 49, then screw the iron rod (P) into the matching holes and rotate it clockwise to tighten as shown.

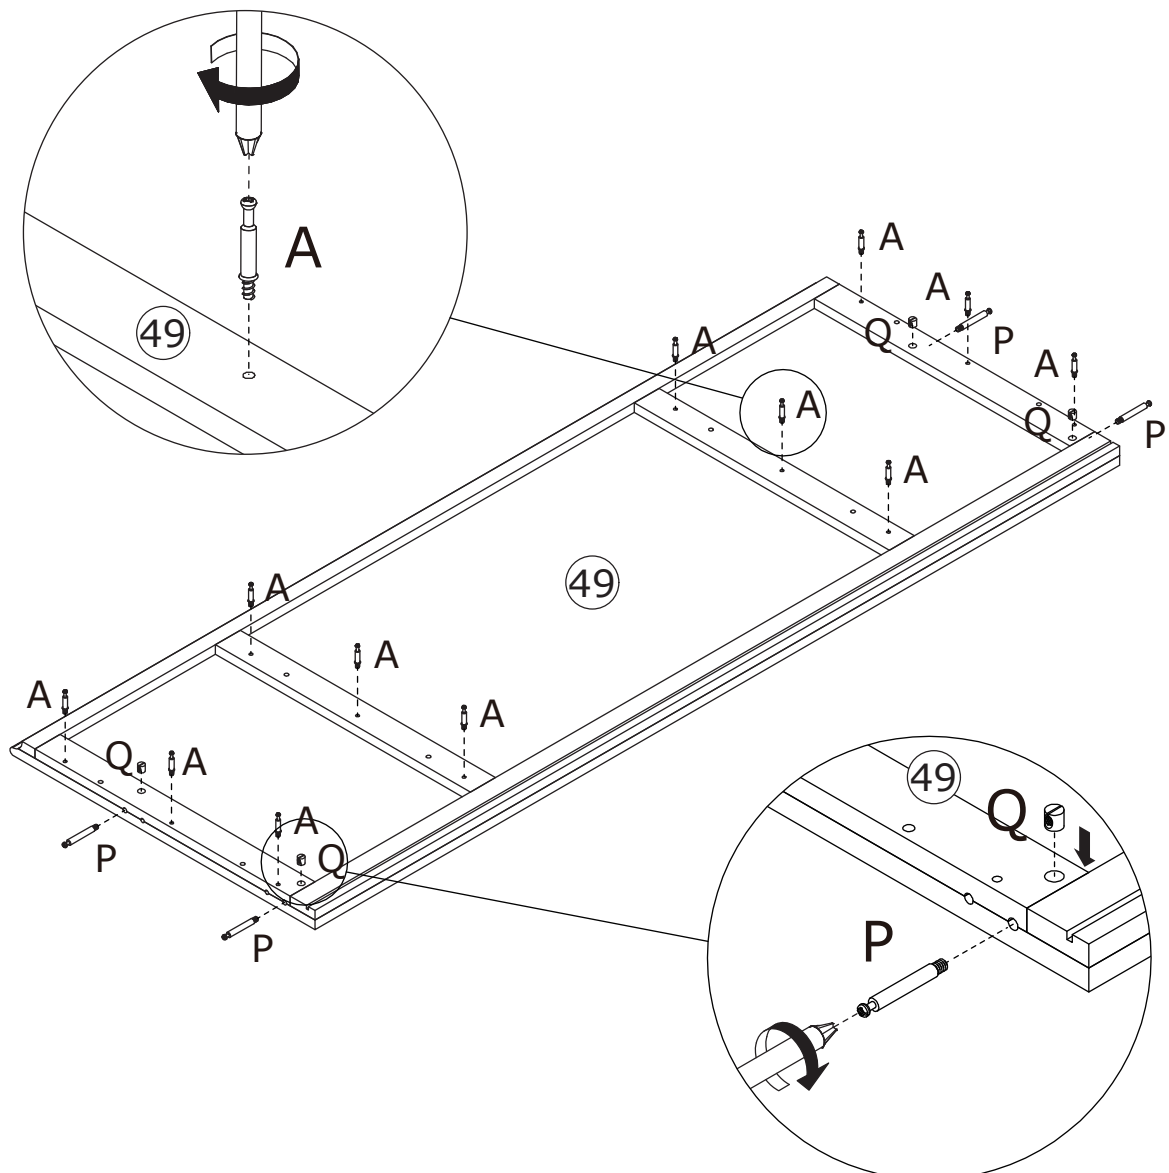



55

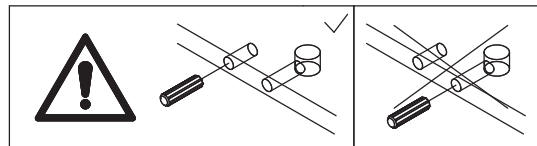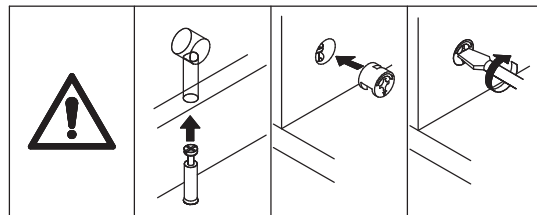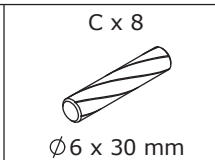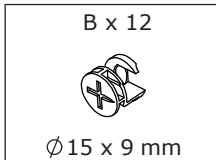    


  Attach plate 49 to the assembled component using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

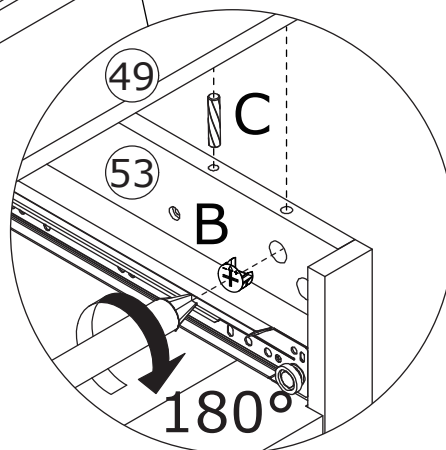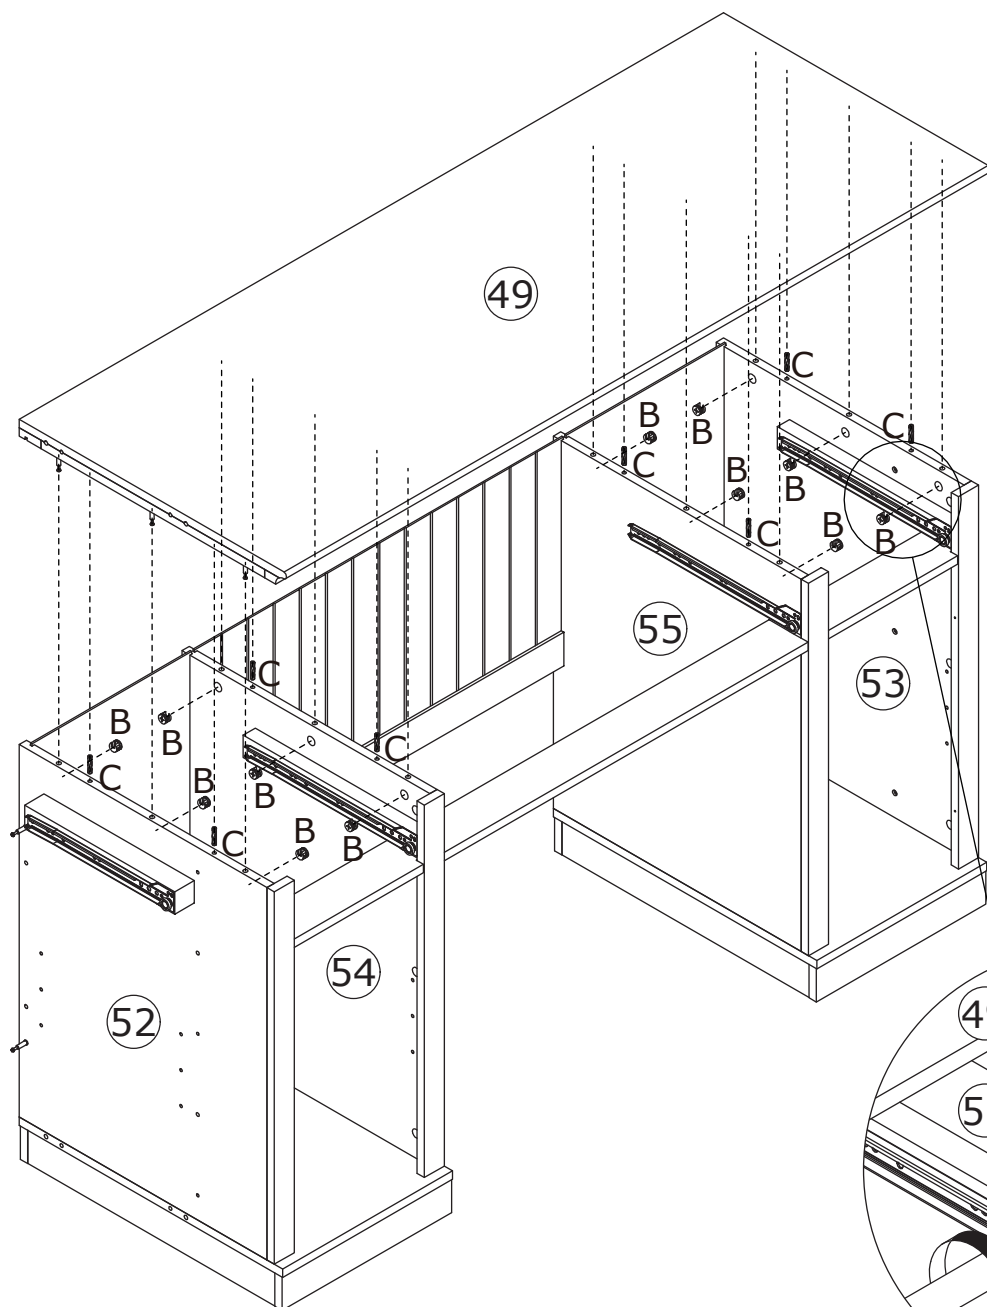


56

  B x 8  Ø 15 x 9 mm	C x 8  Ø 6 x 30 mm	D x 3  Ø 4 x 35 mm	Z x 1 	
---	---	---	---	---

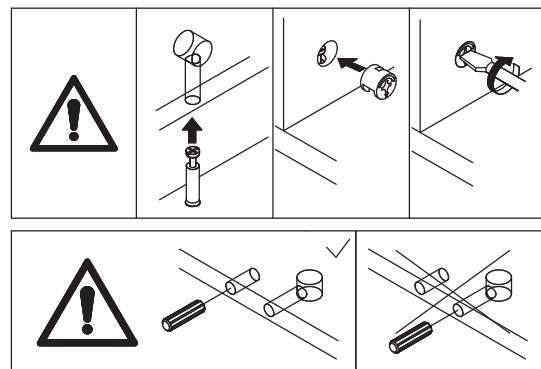 

 Connect the component to the right cabinet using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown. Secure plate 53 to plate 35 with screw (D) as shown.

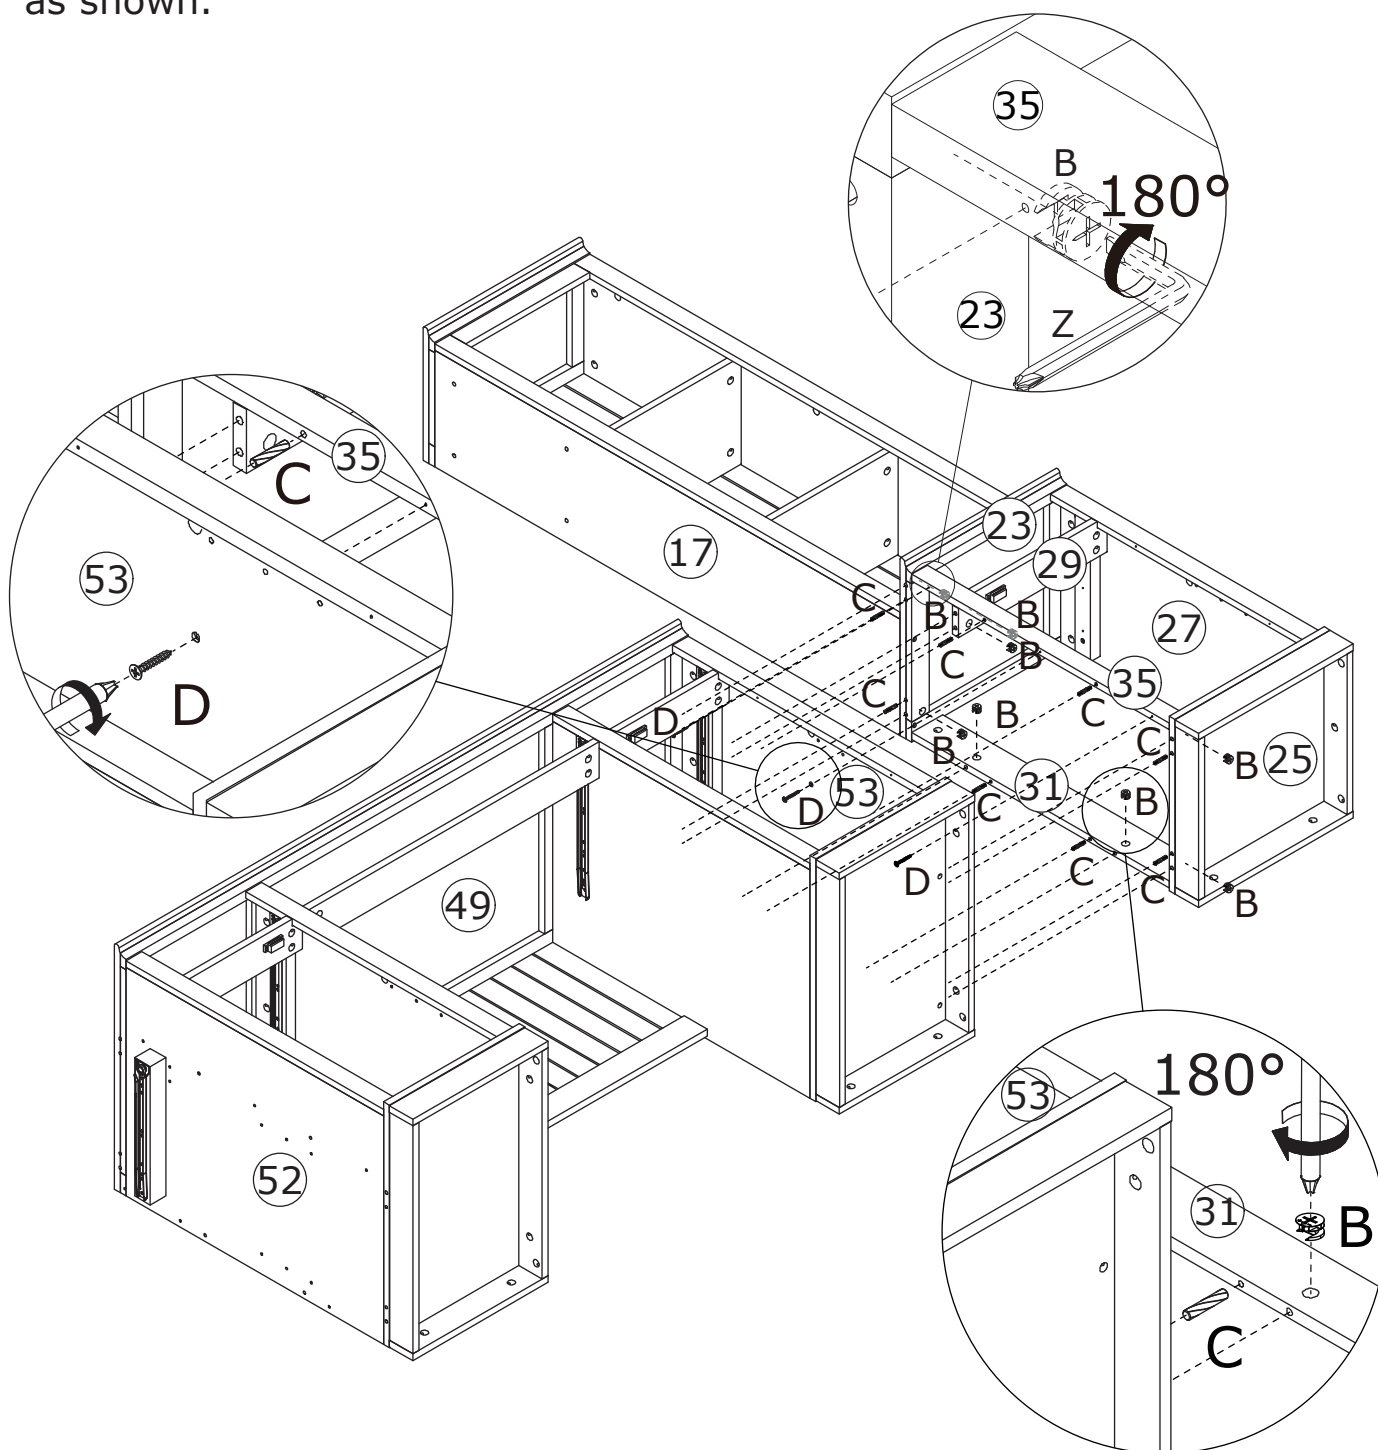


57

B x 8



Ø 15 x 9 mm

 C x 8









Ø 6 x 30 mm

D x 3




Ø 4 x 35 mm

    
 
 
Z x 1

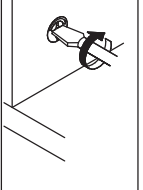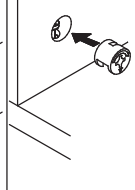

 
Connect the component to the left cabinet using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.
Secure plate 52 to plate 34 with screw (D) as shown.

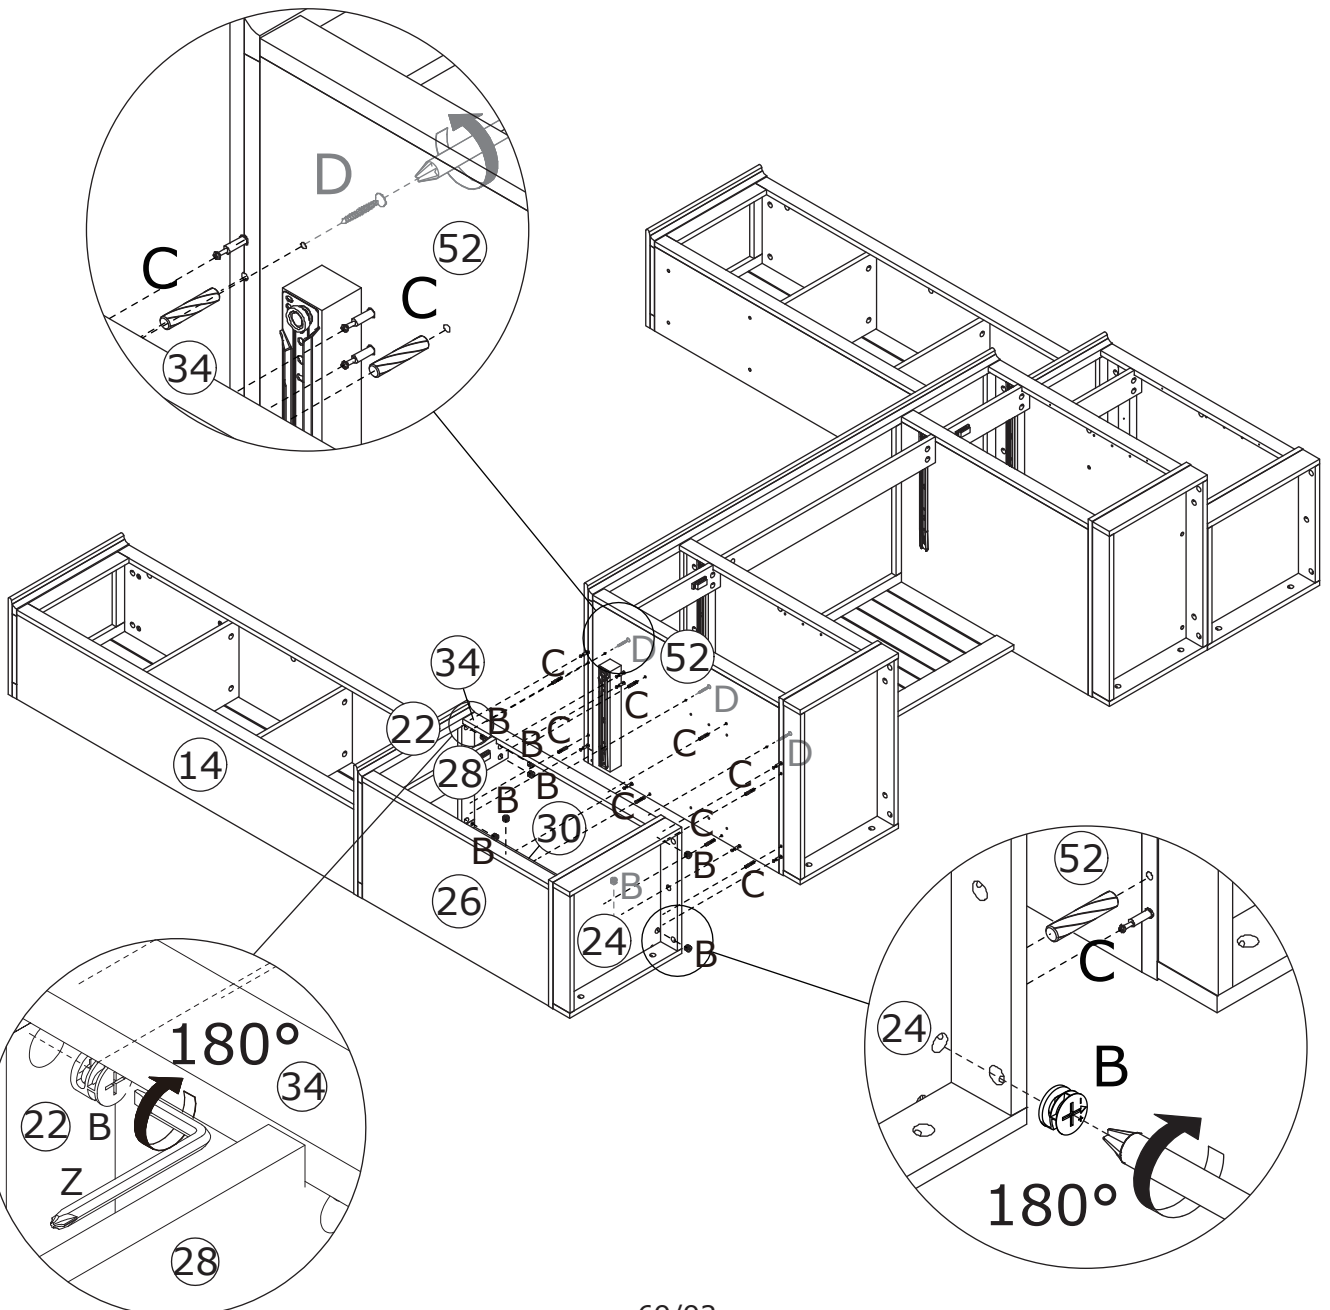


58

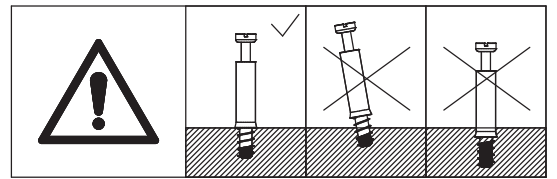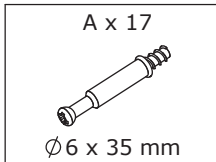   

 
Screw eccentric rod (A) onto plate 1, 7 and 8 as shown.

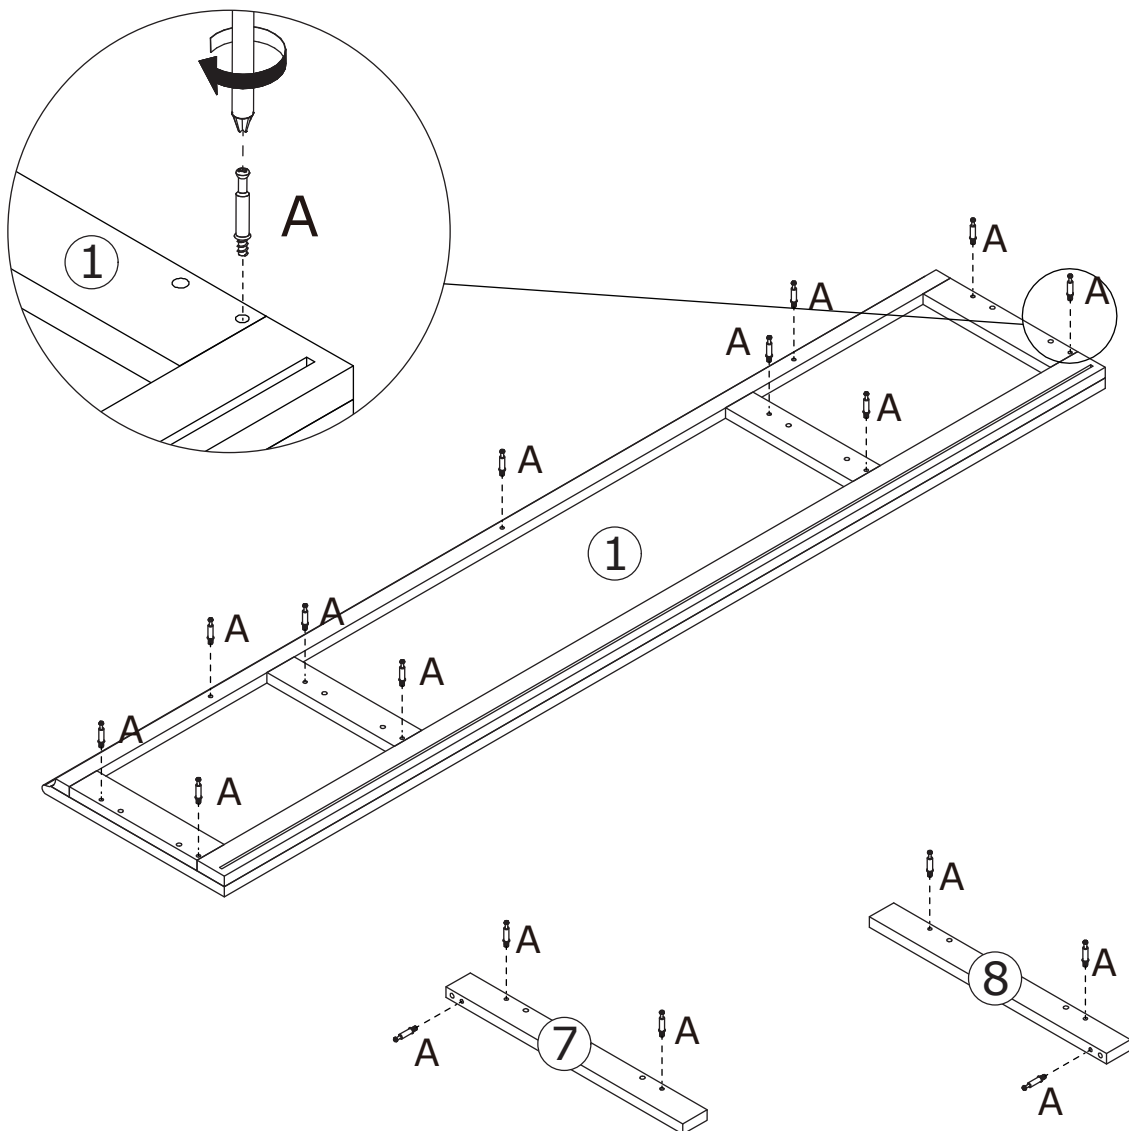

59

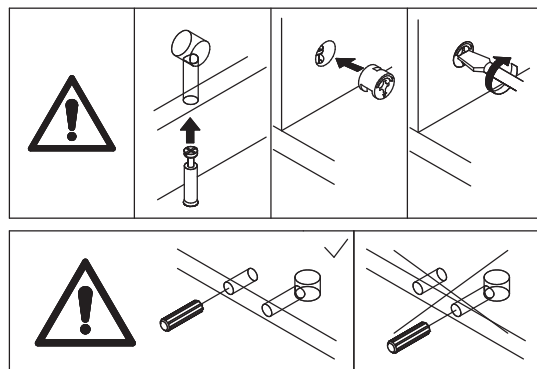 

 Connect plate 6 to plate 7 and 8 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

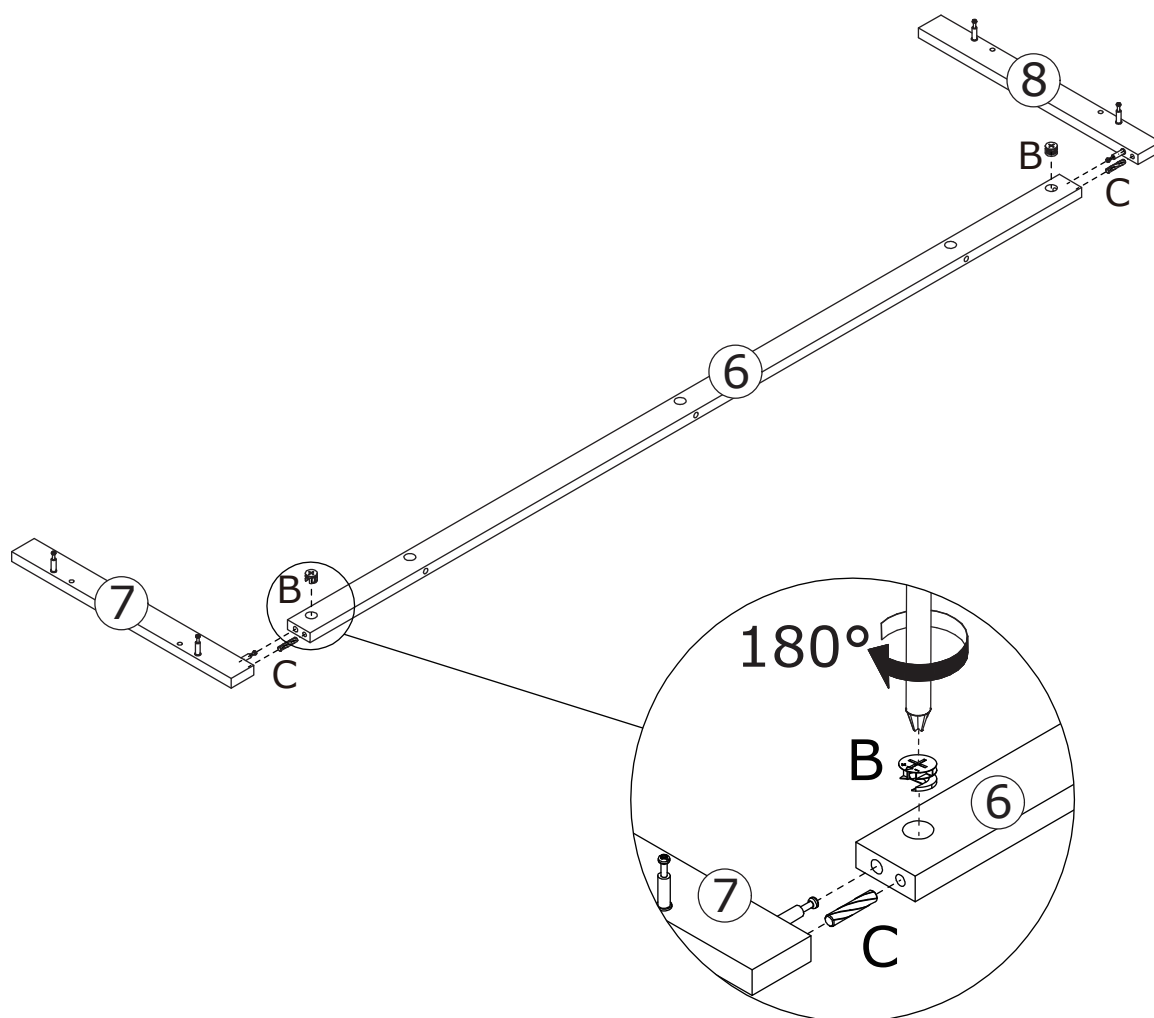

60

B x 4

 
 
 
 
 


Ø15 x 9 mm


C x 4



Ø6 x 30 mm

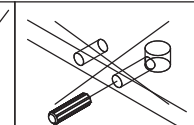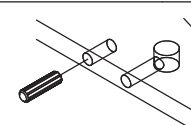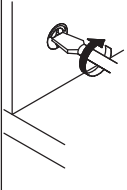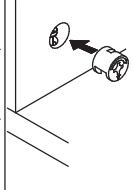

 Attach plate 3 and 4 to the assembled component using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

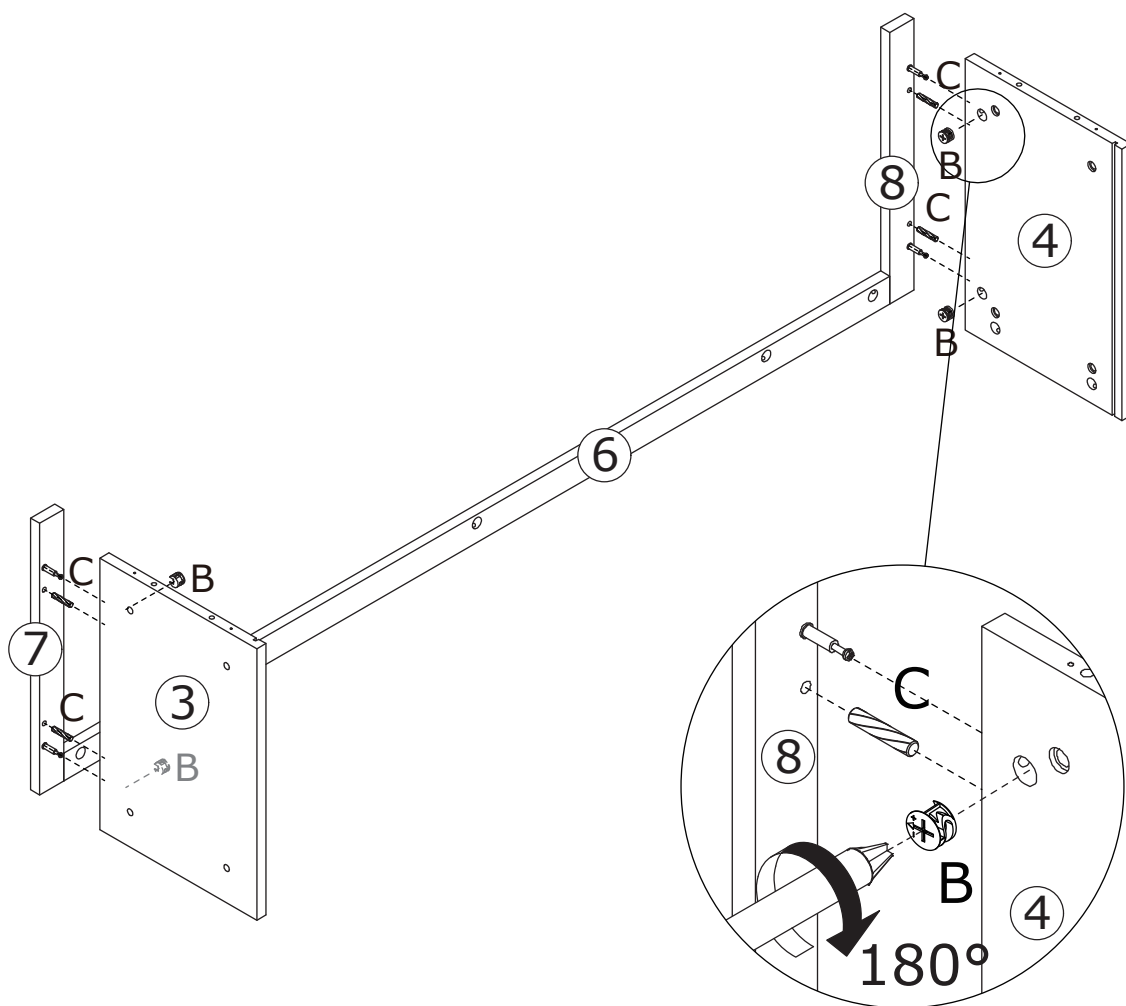

61

B x 11

 
 
 
 
 
 


Ø 15 x 9 mm


C x 8




Ø 6 x 30 mm

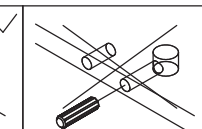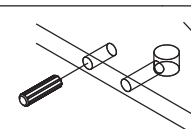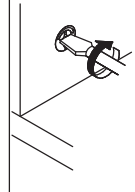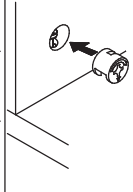

 Attach plate 3, 5, 4 and 6 to plate 1 using wooden dowel (C), tighten by turning cam lock (B) clockwise as shown.

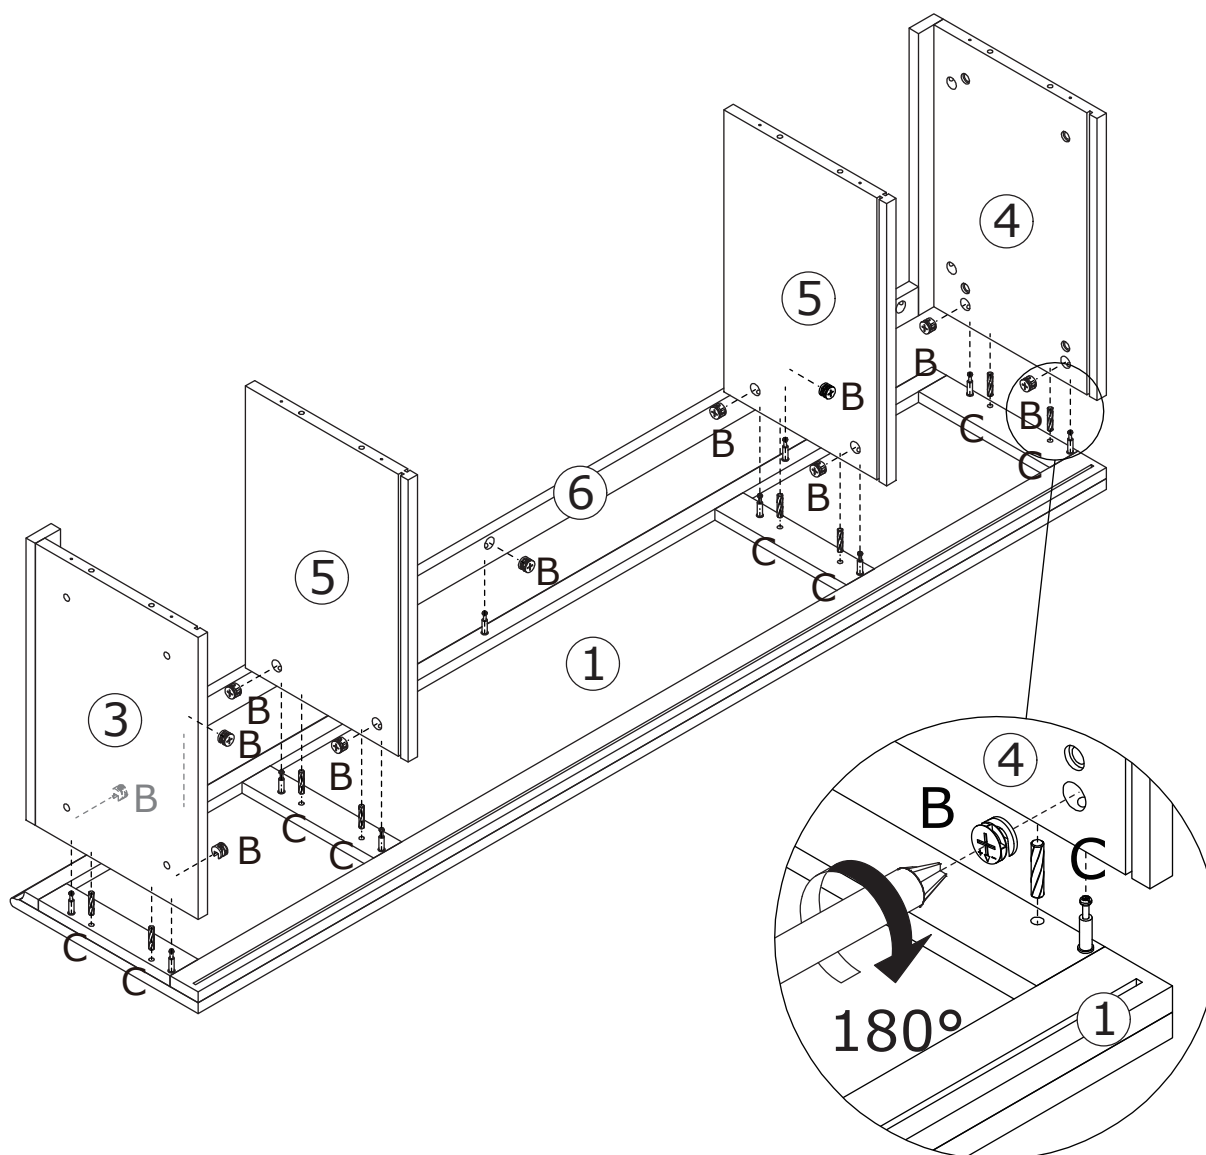

 Slide plate 9 and 10 along the available grooves as shown.

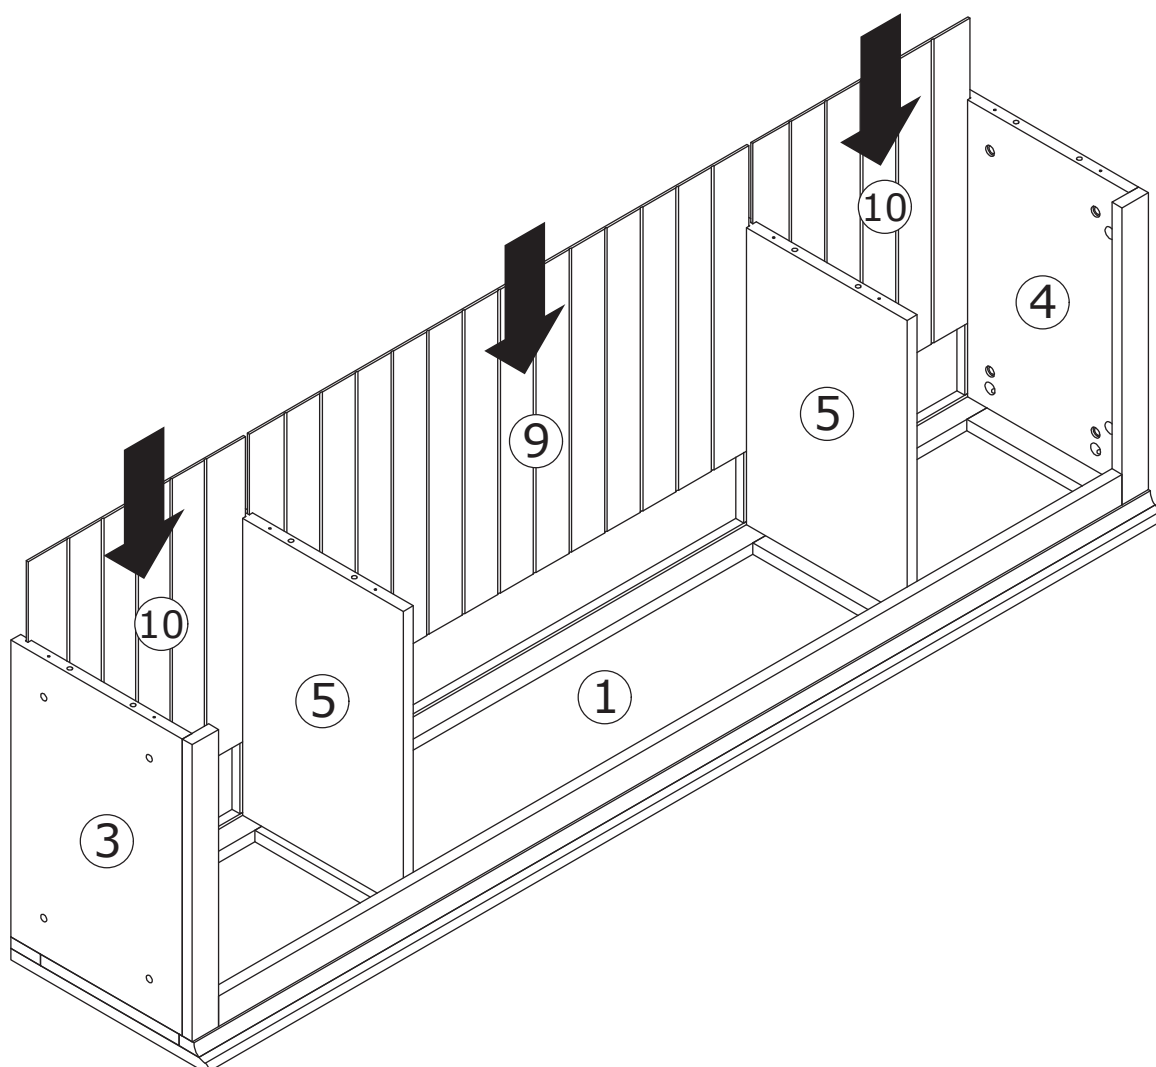


63

C x 8






Ø6 x 30 mm

 
D x 8



Ø4 x 35 mm

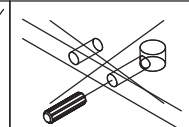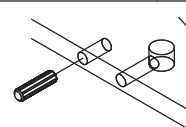   

 Attach plate 2 to the assembled component using wooden dowel (C), and secure with screw (D) as shown.

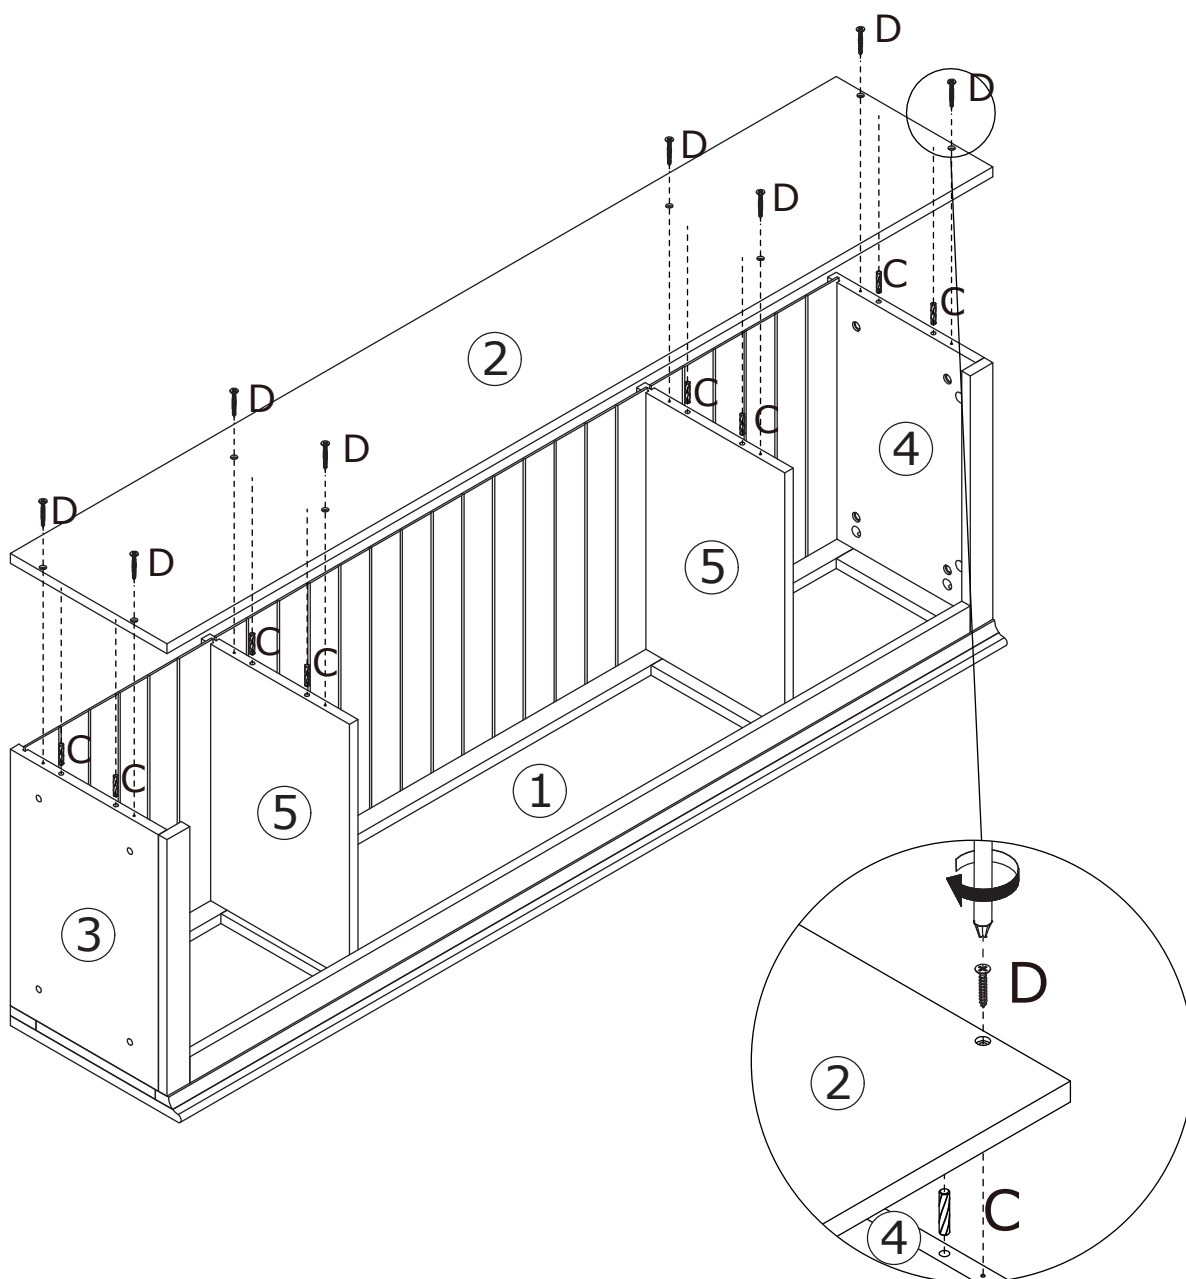

64

R x 8

 


Ø6 x 20 mm


S x 8



Ø6 x 20 mm



 Connect the assembled components with bolt (S) and nut (R), then tighten by turning bolts clockwise as shown.

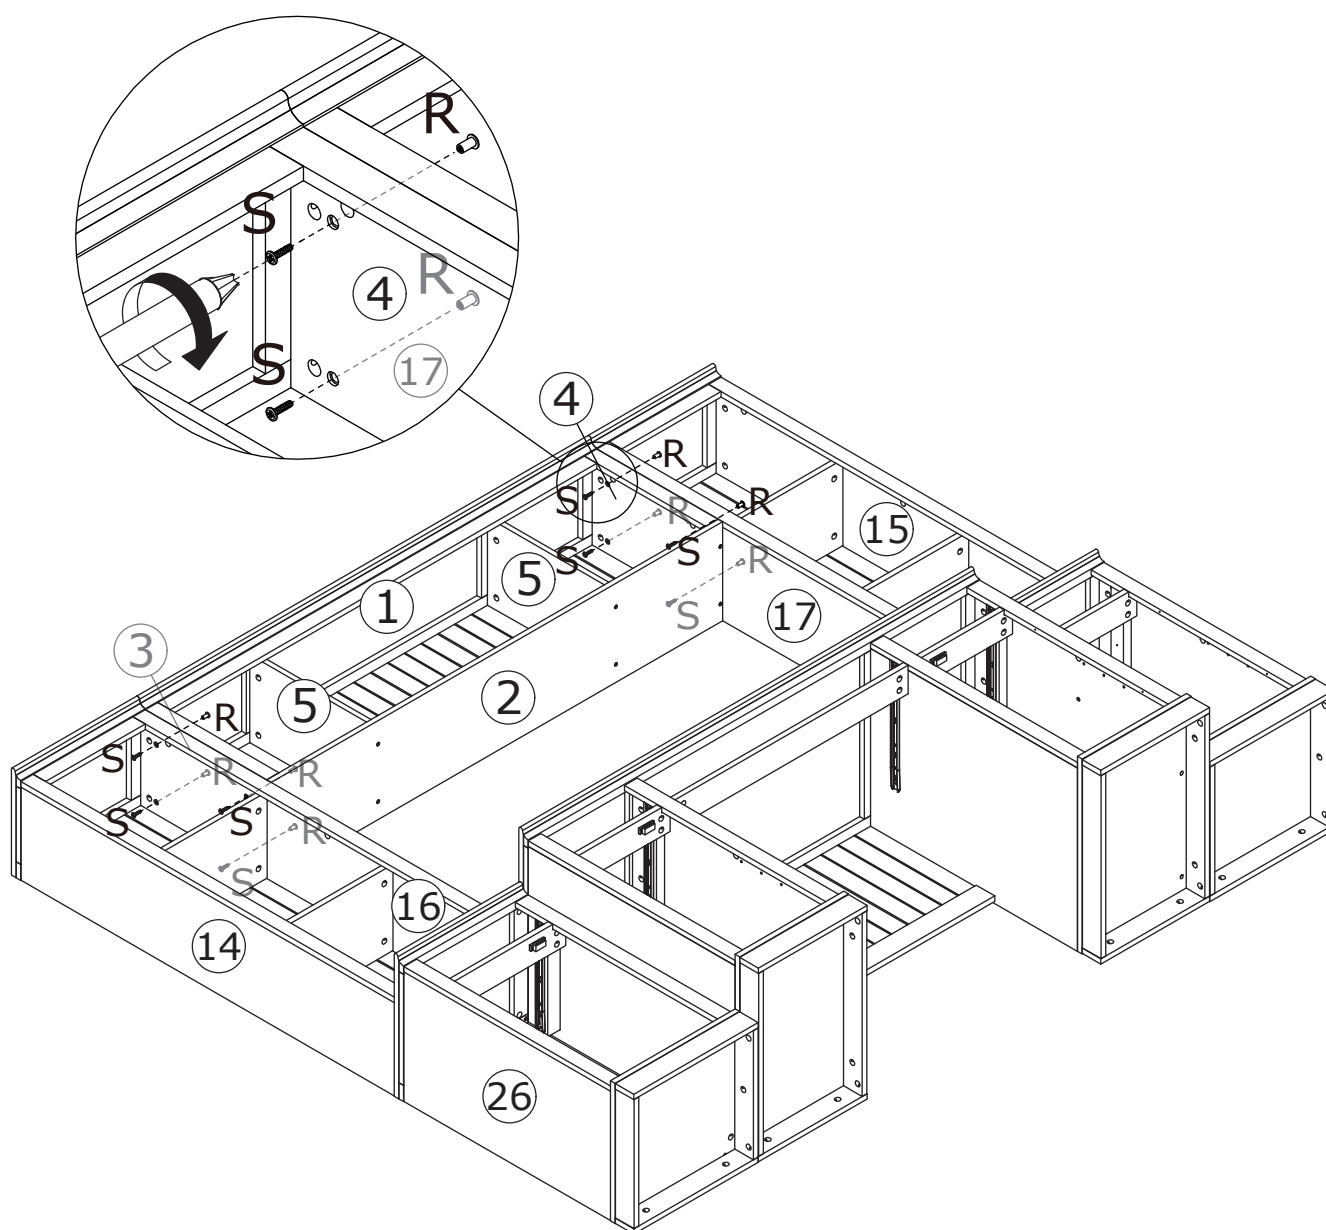

65

 
U x 4




V x 4





Ø4 x 12 mm



 
Secure iron bracket (U) to plate 1, 11 and 12 with screw (V) as shown.

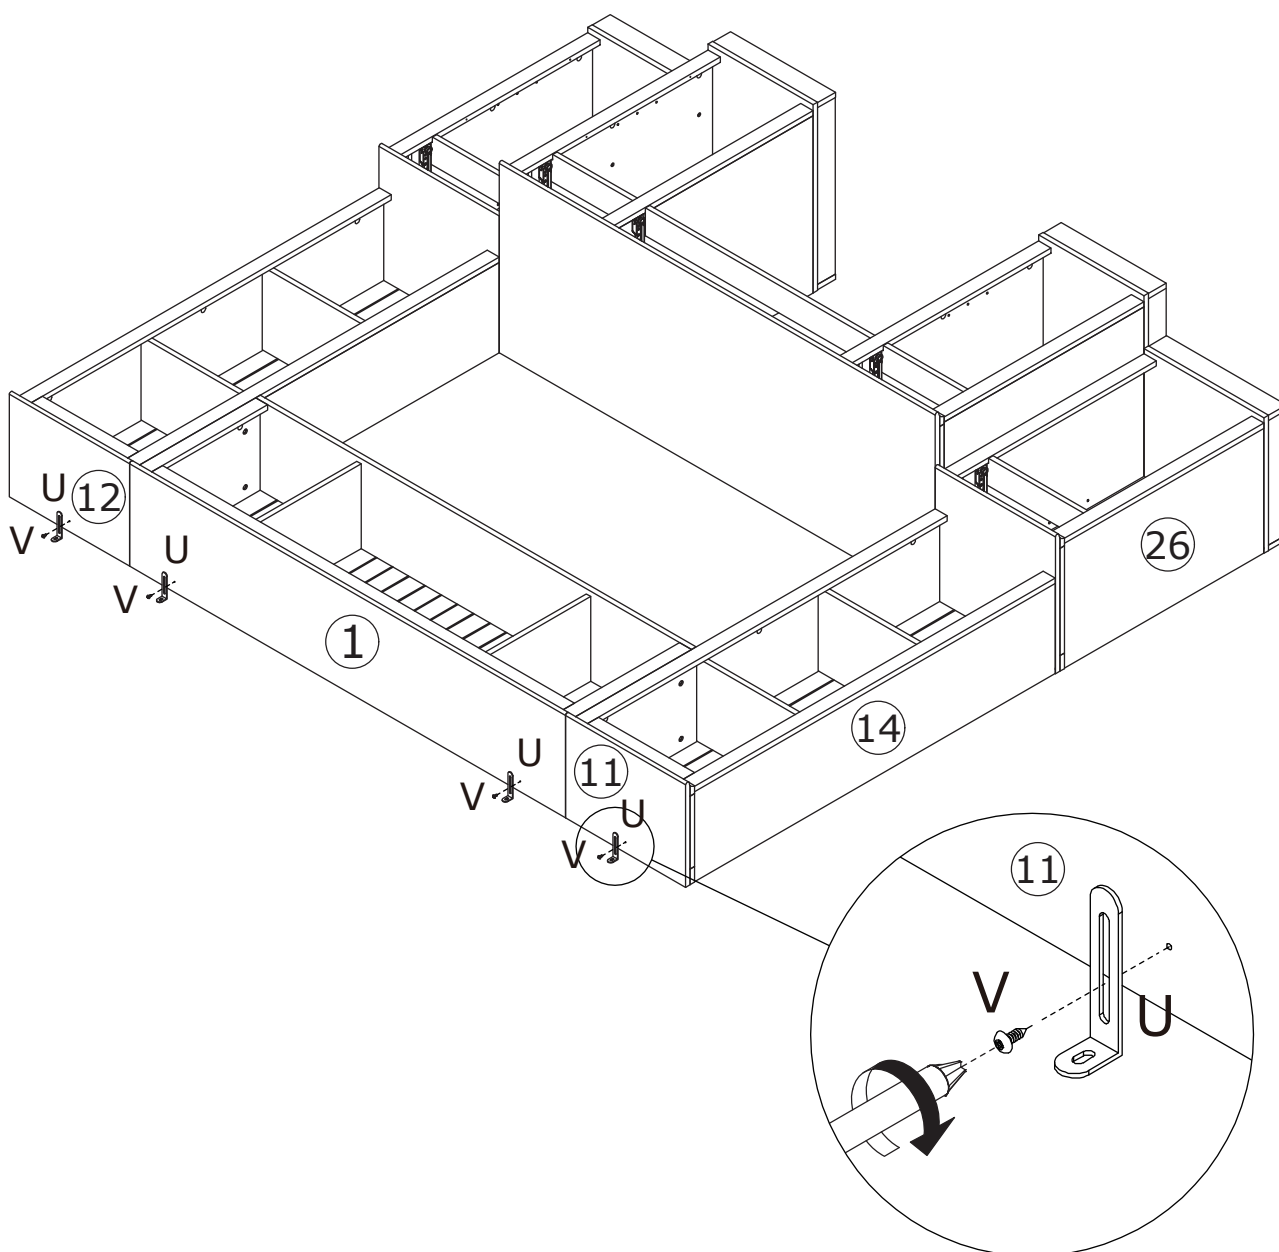

66

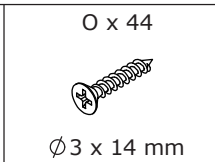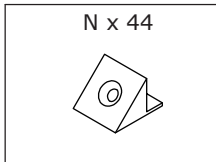  

 Insert clip (N) into back slots and secure with screw (O) as shown.

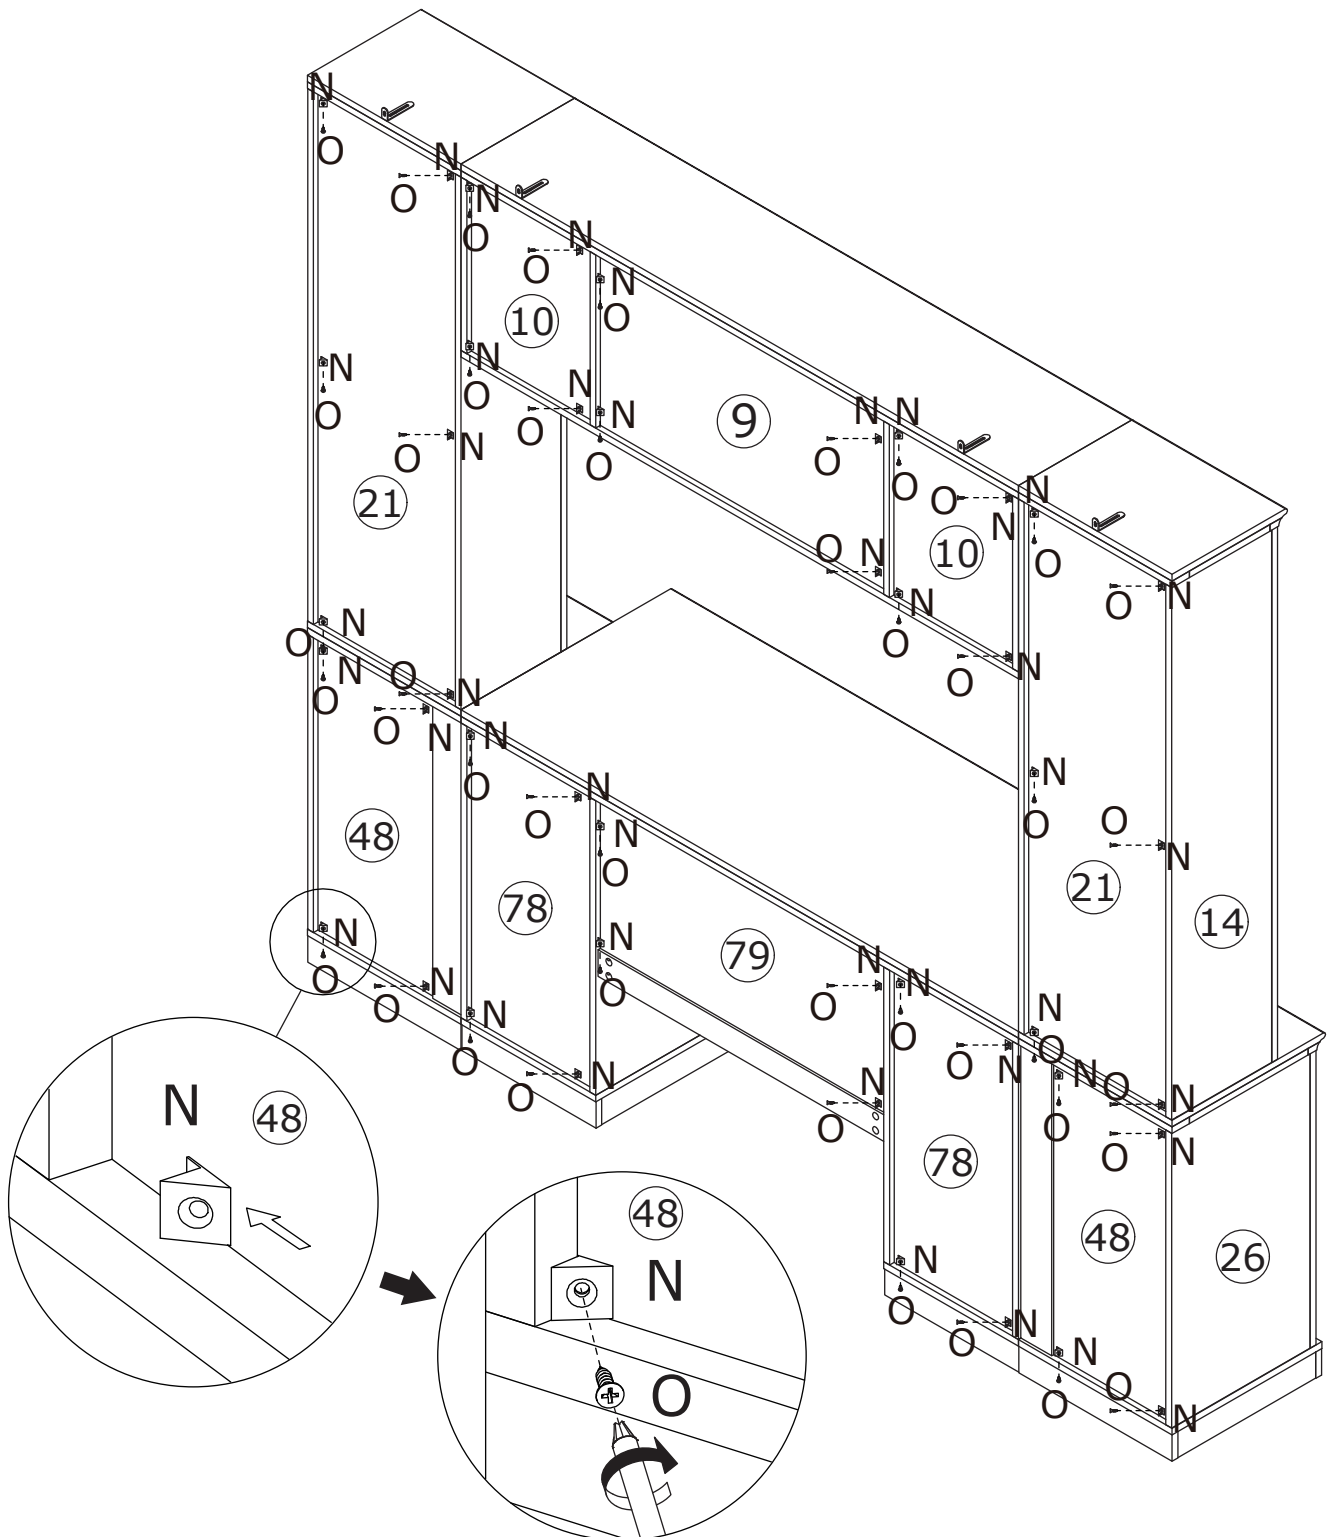




67

Y x 64






Ø 20 mm

   
Cover the holes using sticker (Y).

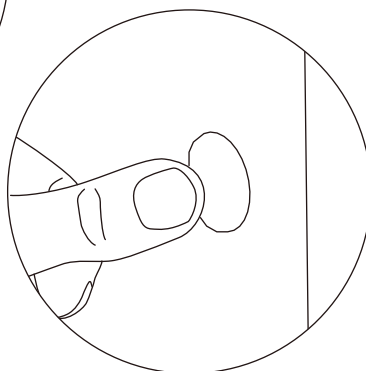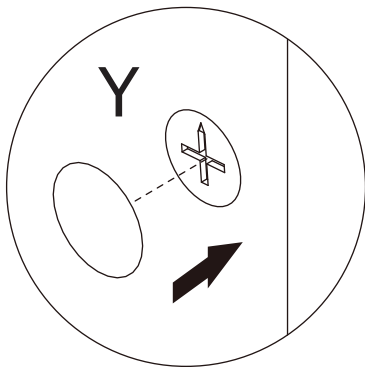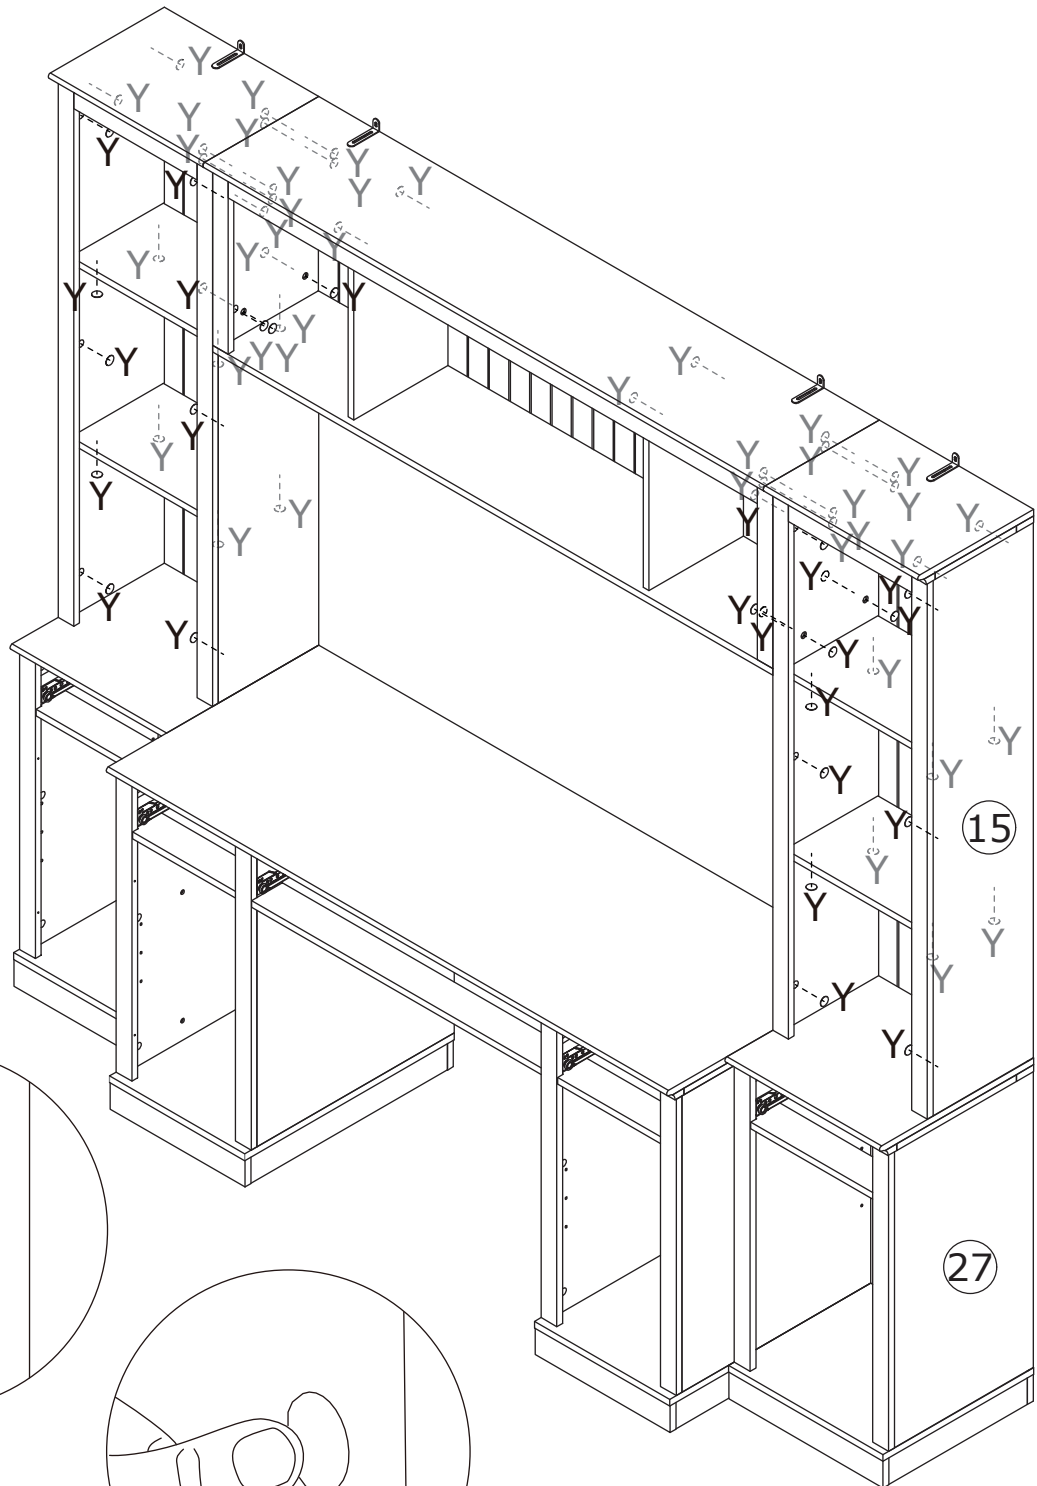


68

   E x 28  Ø3 x 12 mm	H x 4 	K x 4 	
L x 4  Ø4 x 18 mm	M x 4 		

 
Secure iron sheet (H) and hinge(M) to plate 41, 42, 67, and 68 with screw (E) as shown.
Secure knob (K) with screw (L) as shown.

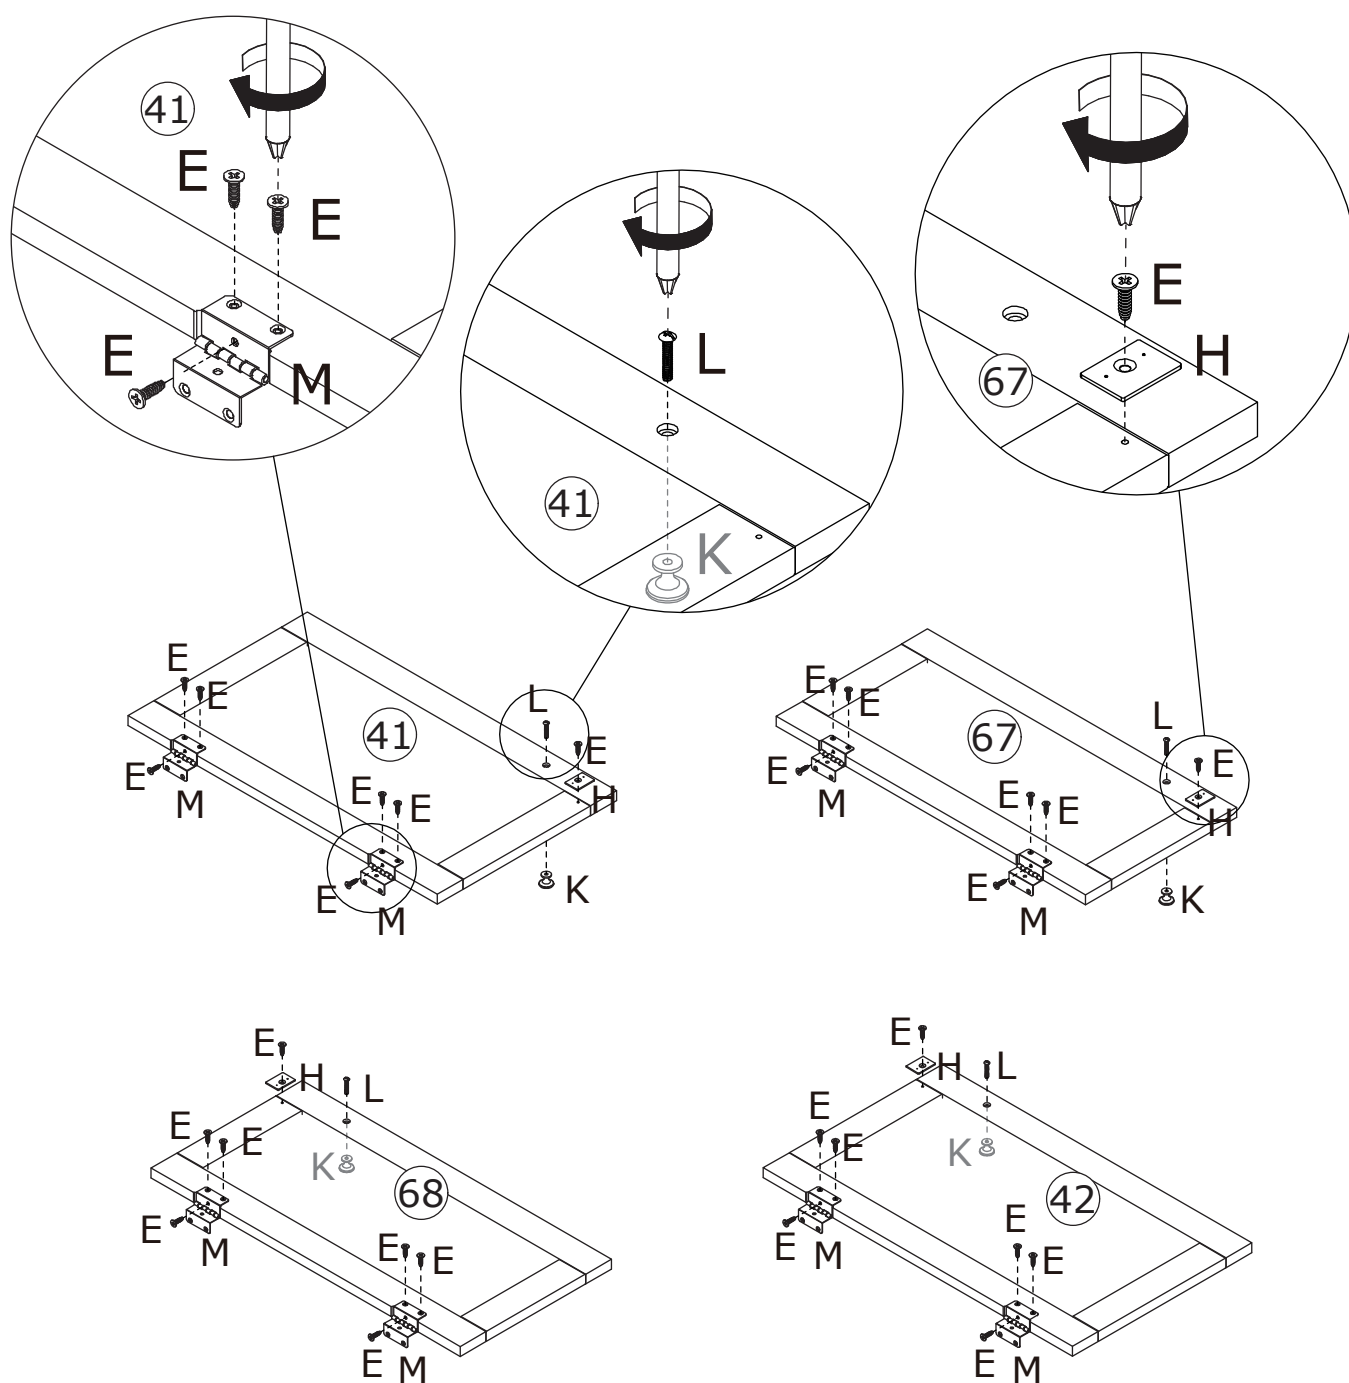

69

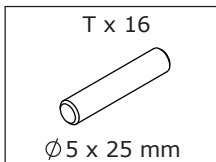 

 Insert layer pin (T) into side plates and place shelf plate 40 and 66 on.

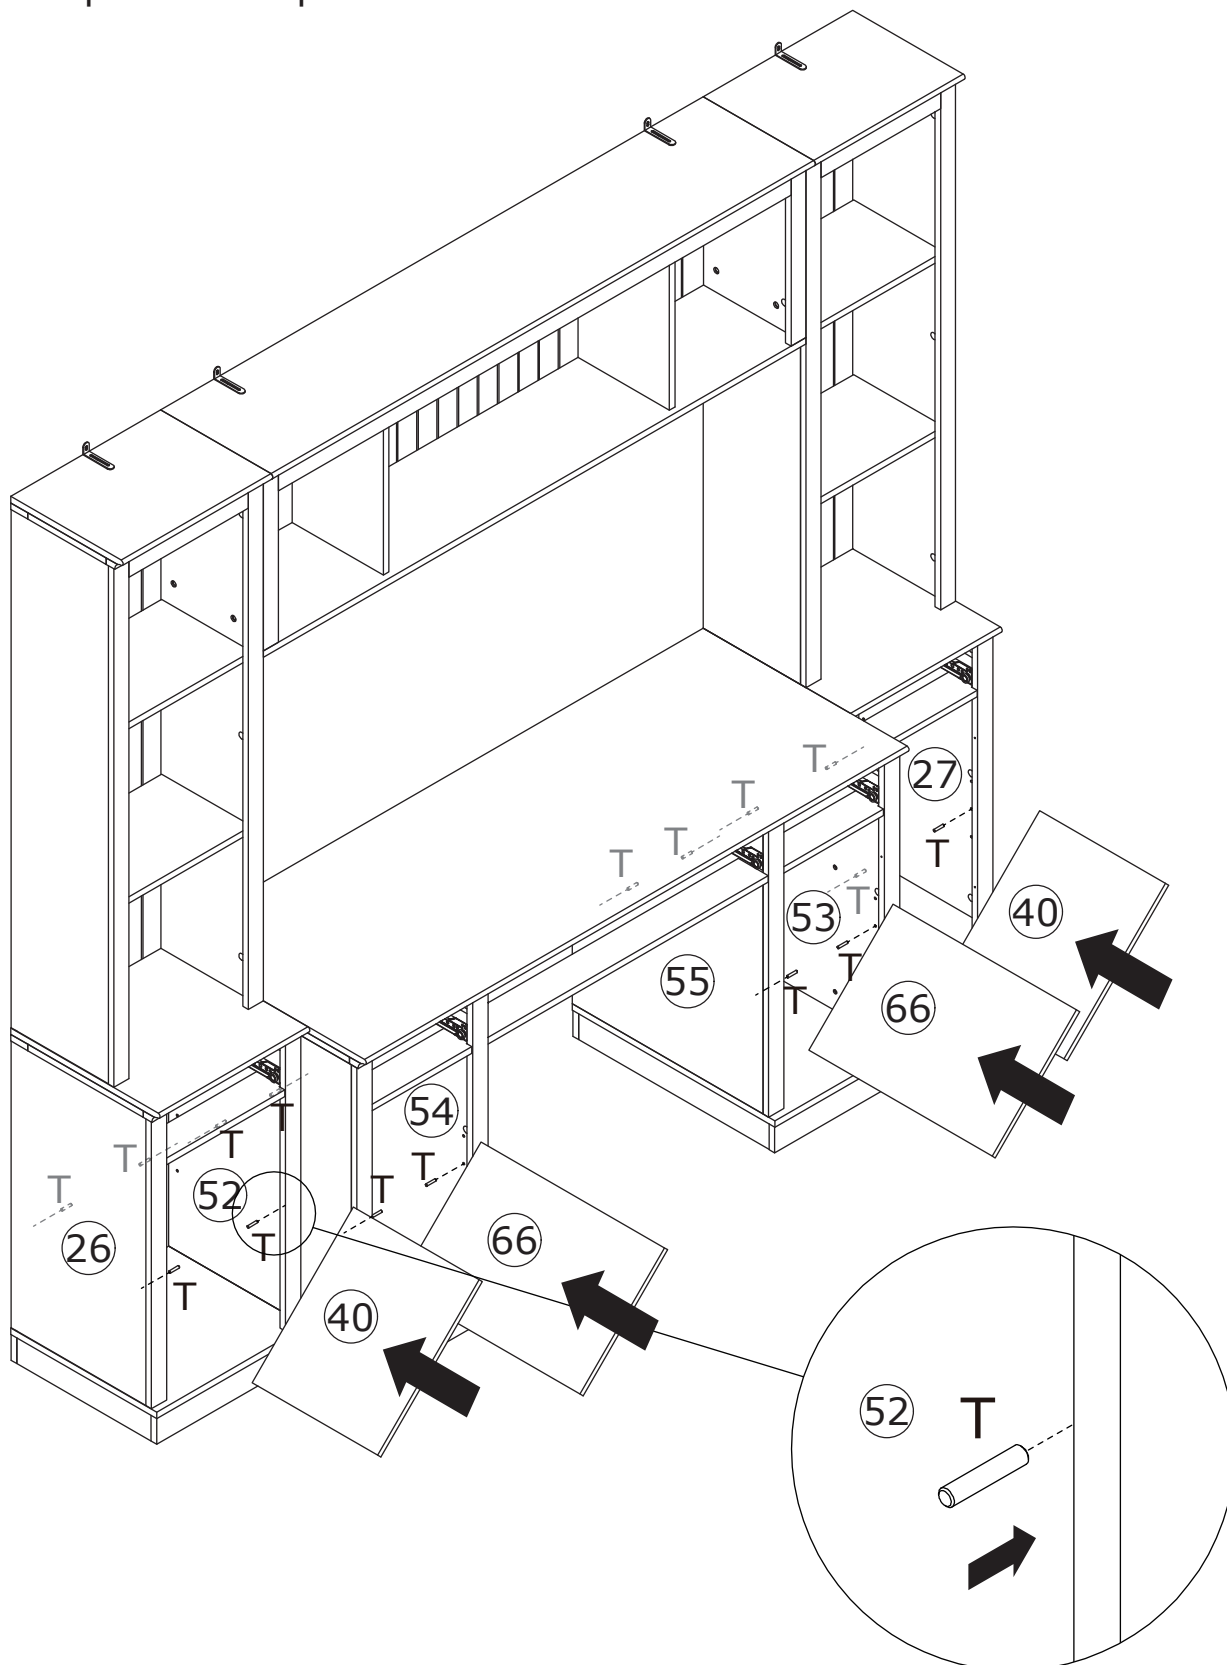


70


E x 24




 
Ø3 x 12 mm





 
Secure door plates to the unit using screw (E) as shown.

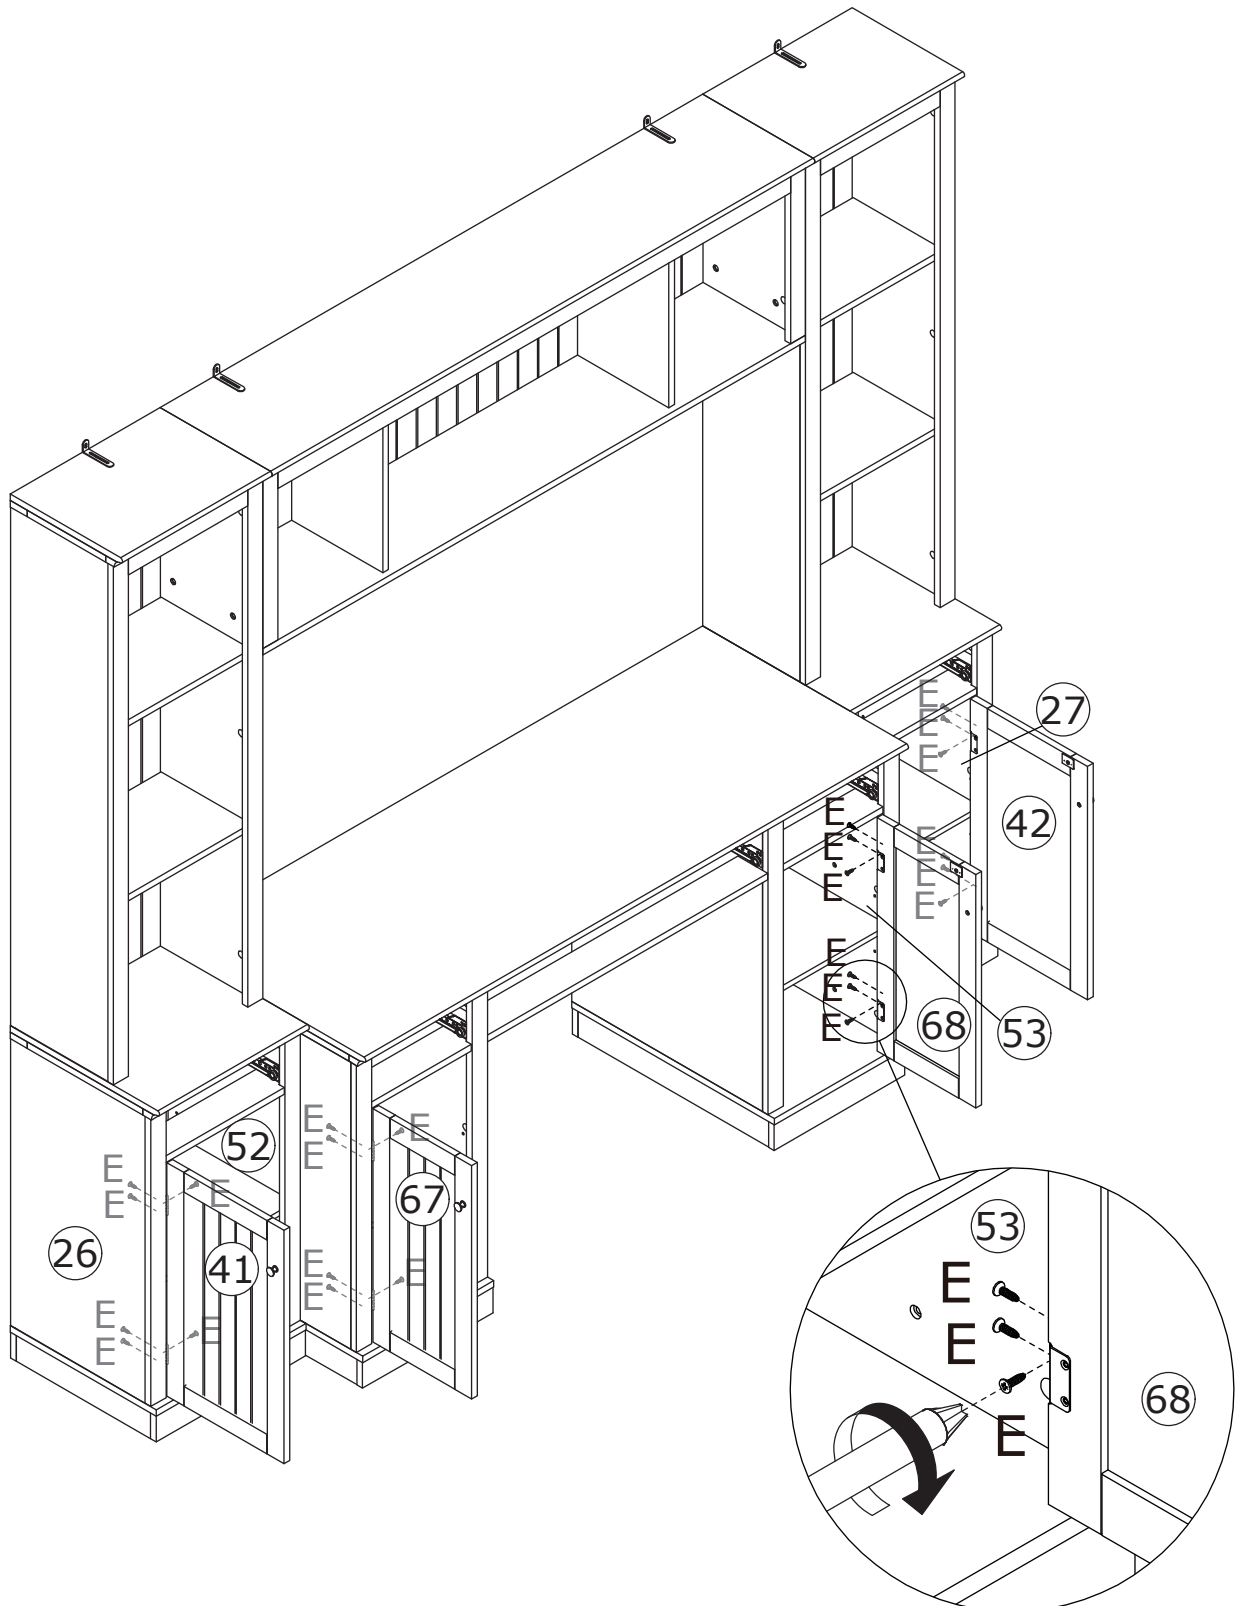



71

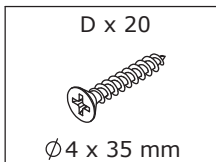  

 
 
 
Secure plate 45 and 46 to plate 44, plate 74 and 75 to plate 70, plate 74 and 75 to plate 73 with screw (D) as shown.

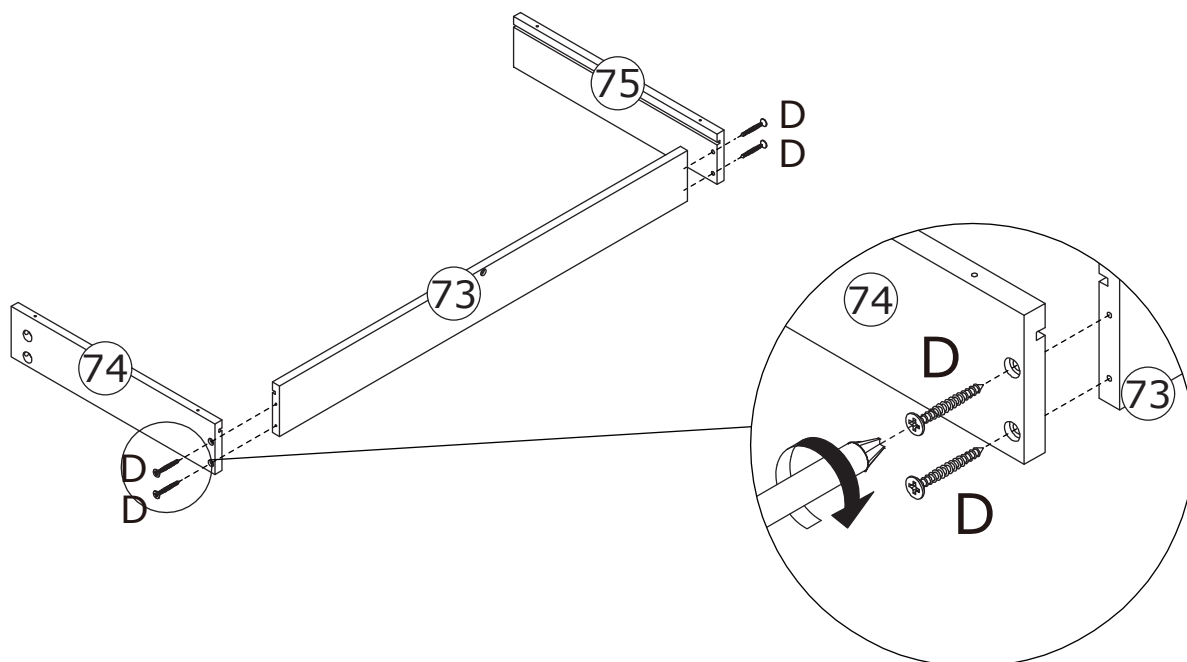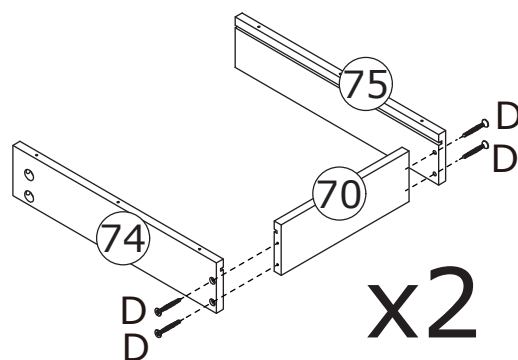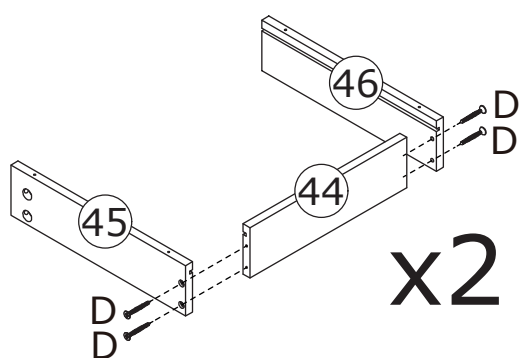



72

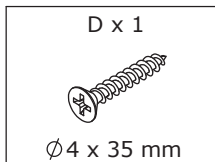  

   
Slide plate 47, 76 and 77 along the available grooves as shown.
Secure plate 71 to plate 73 with screw(D) as shown.

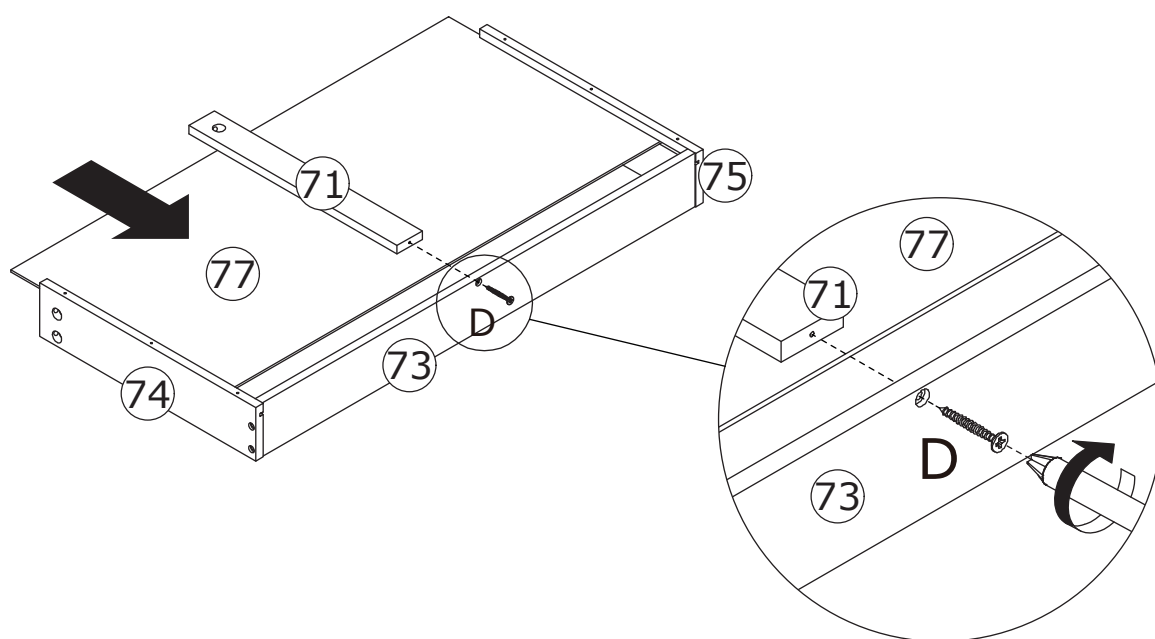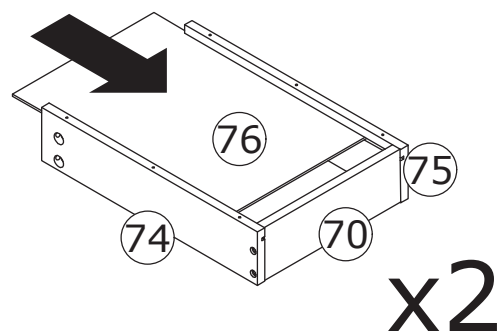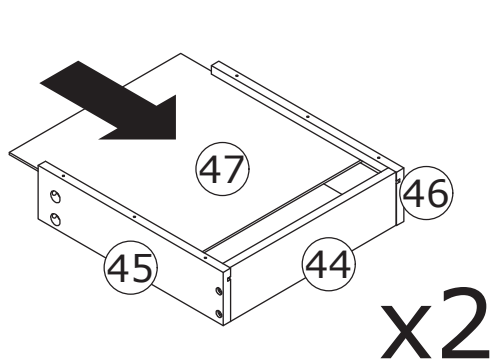

73

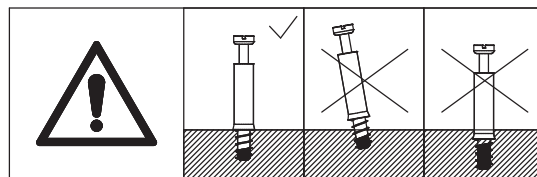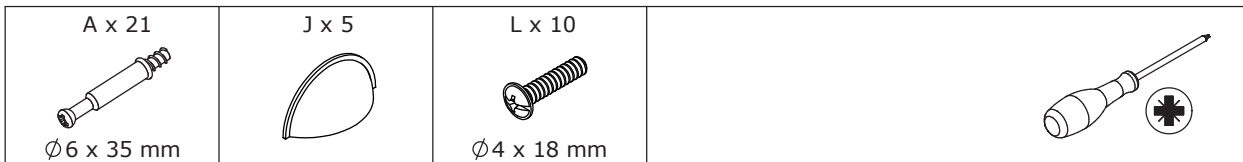  

 Screw eccentric rod (A) onto plate 43, 69 and 72.
Secure handle (J) with screw (L) as shown.


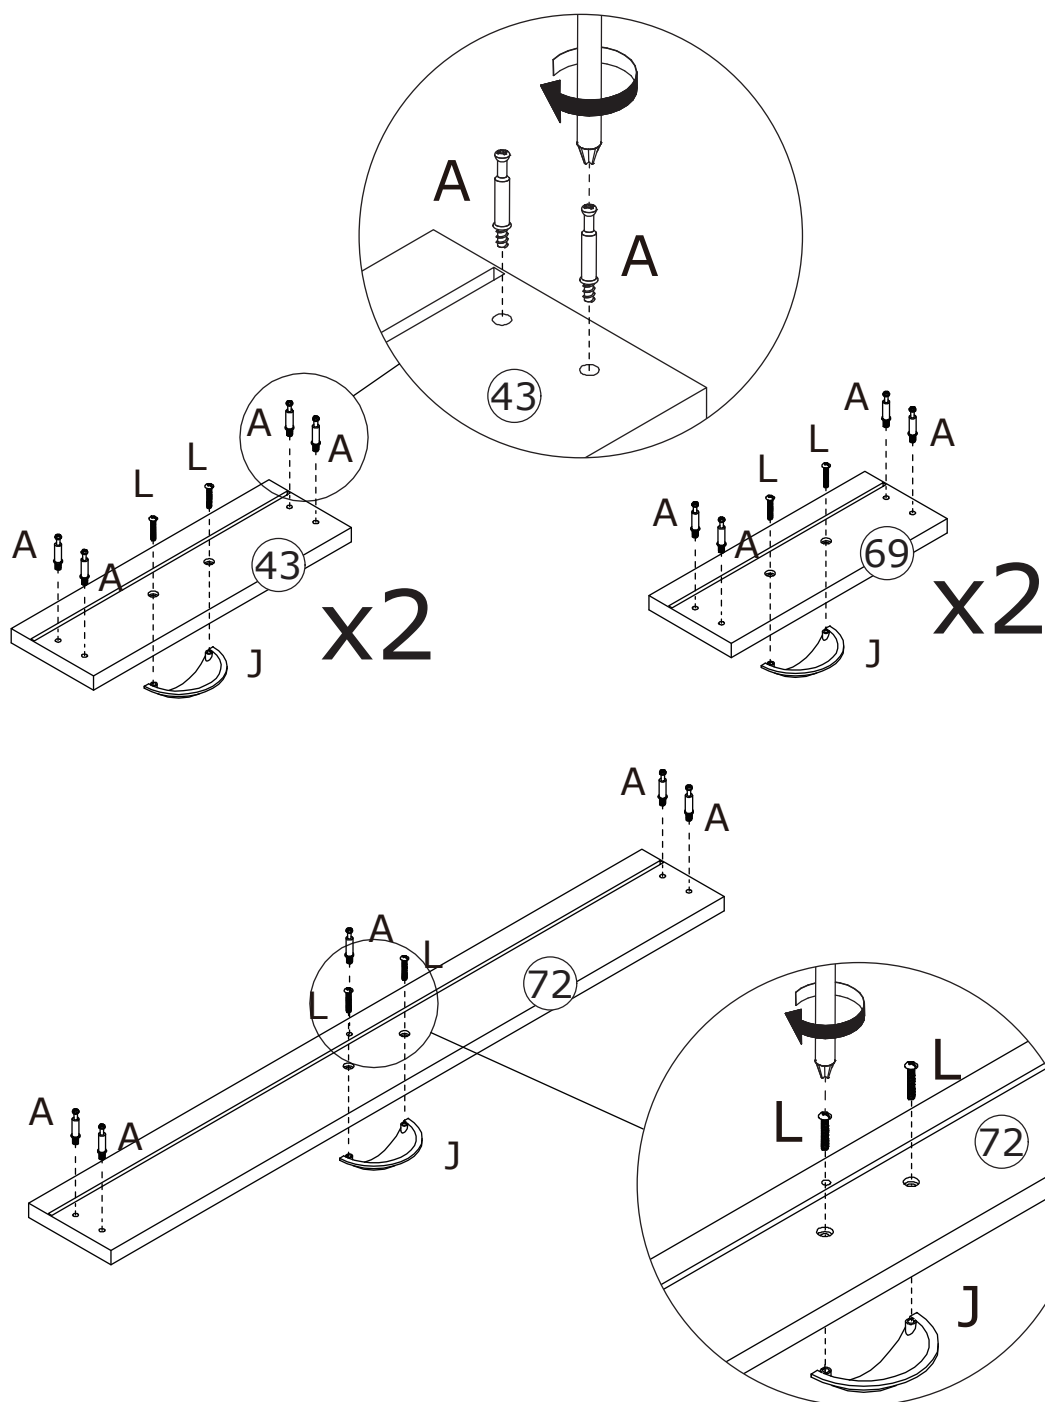


74



B x 21



 
 
Ø 15 x 9 mm

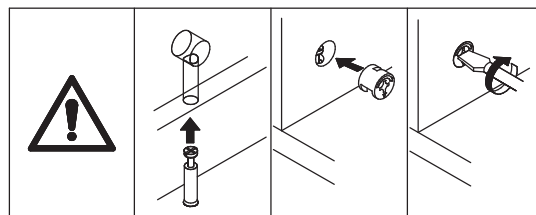

  Connect plate 43, 69 and 72 to the drawer components respectively, tighten by turning cam lock (B) clockwise as shown.





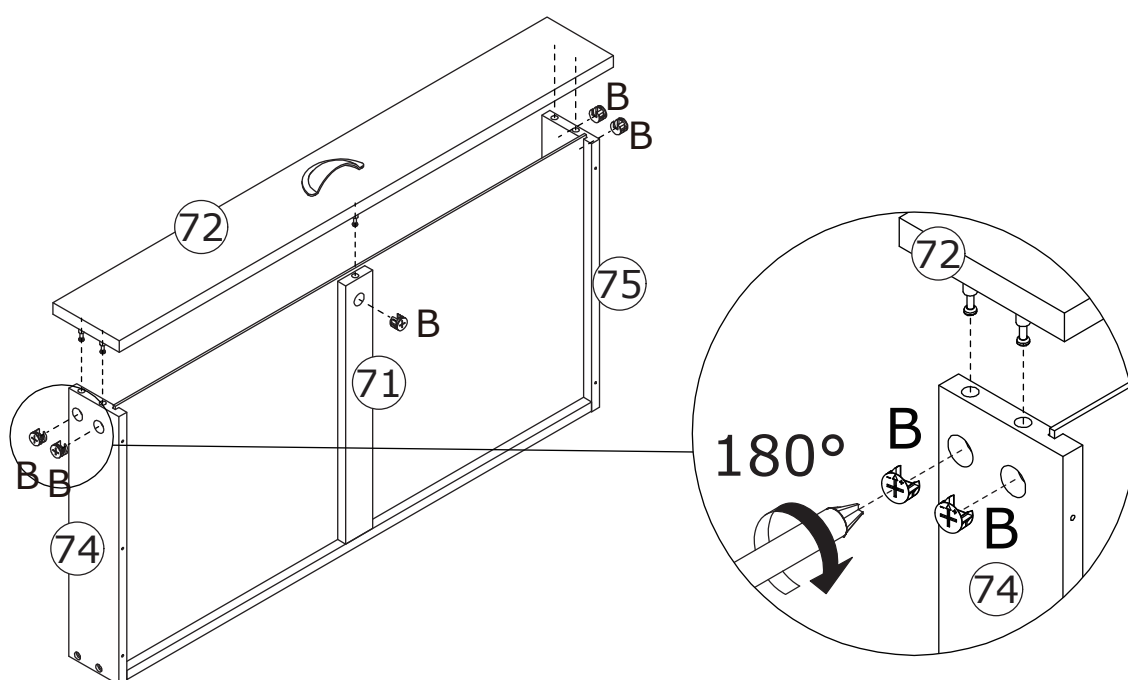
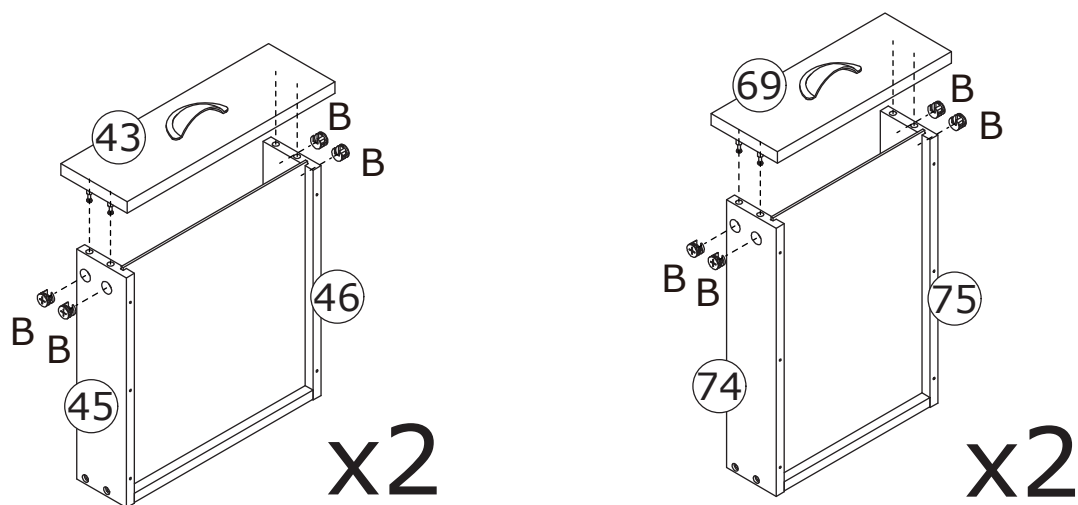


75

  
E x 15  Ø3 x 12 mm	DL300 x 2  300 mm	DR300 x 2  300 mm	
DL350 x 3  350 mm	DR350 x 3  350 mm		

Secure slide rail (DL300) and (DR300) to plate 45 and 46 with screw (E) as shown.

      
Secure slide rail (DL350) and (DR350) to plate 74 and 75 with screw (E) as shown.

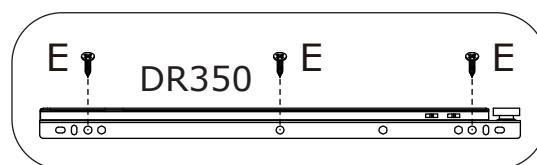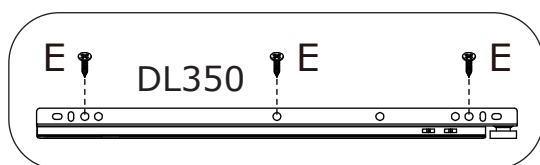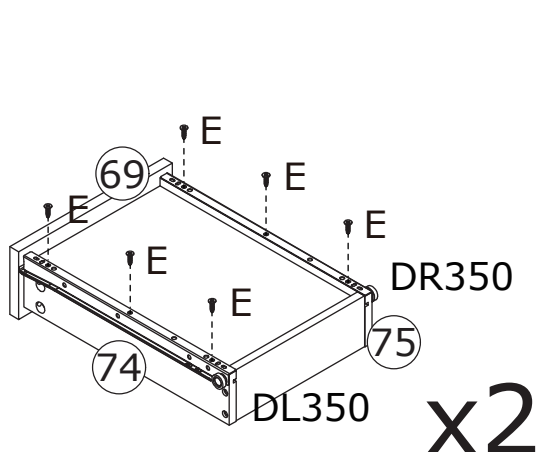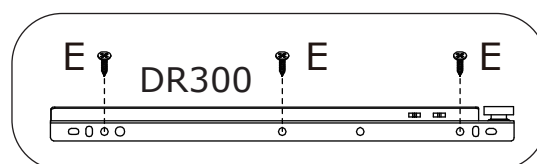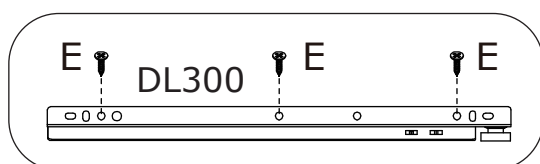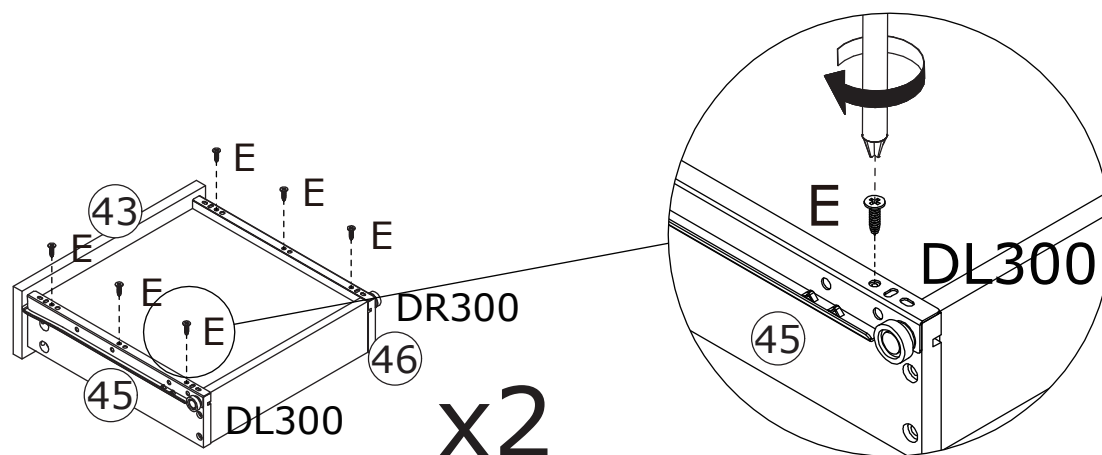


Align rails, slide the drawers.

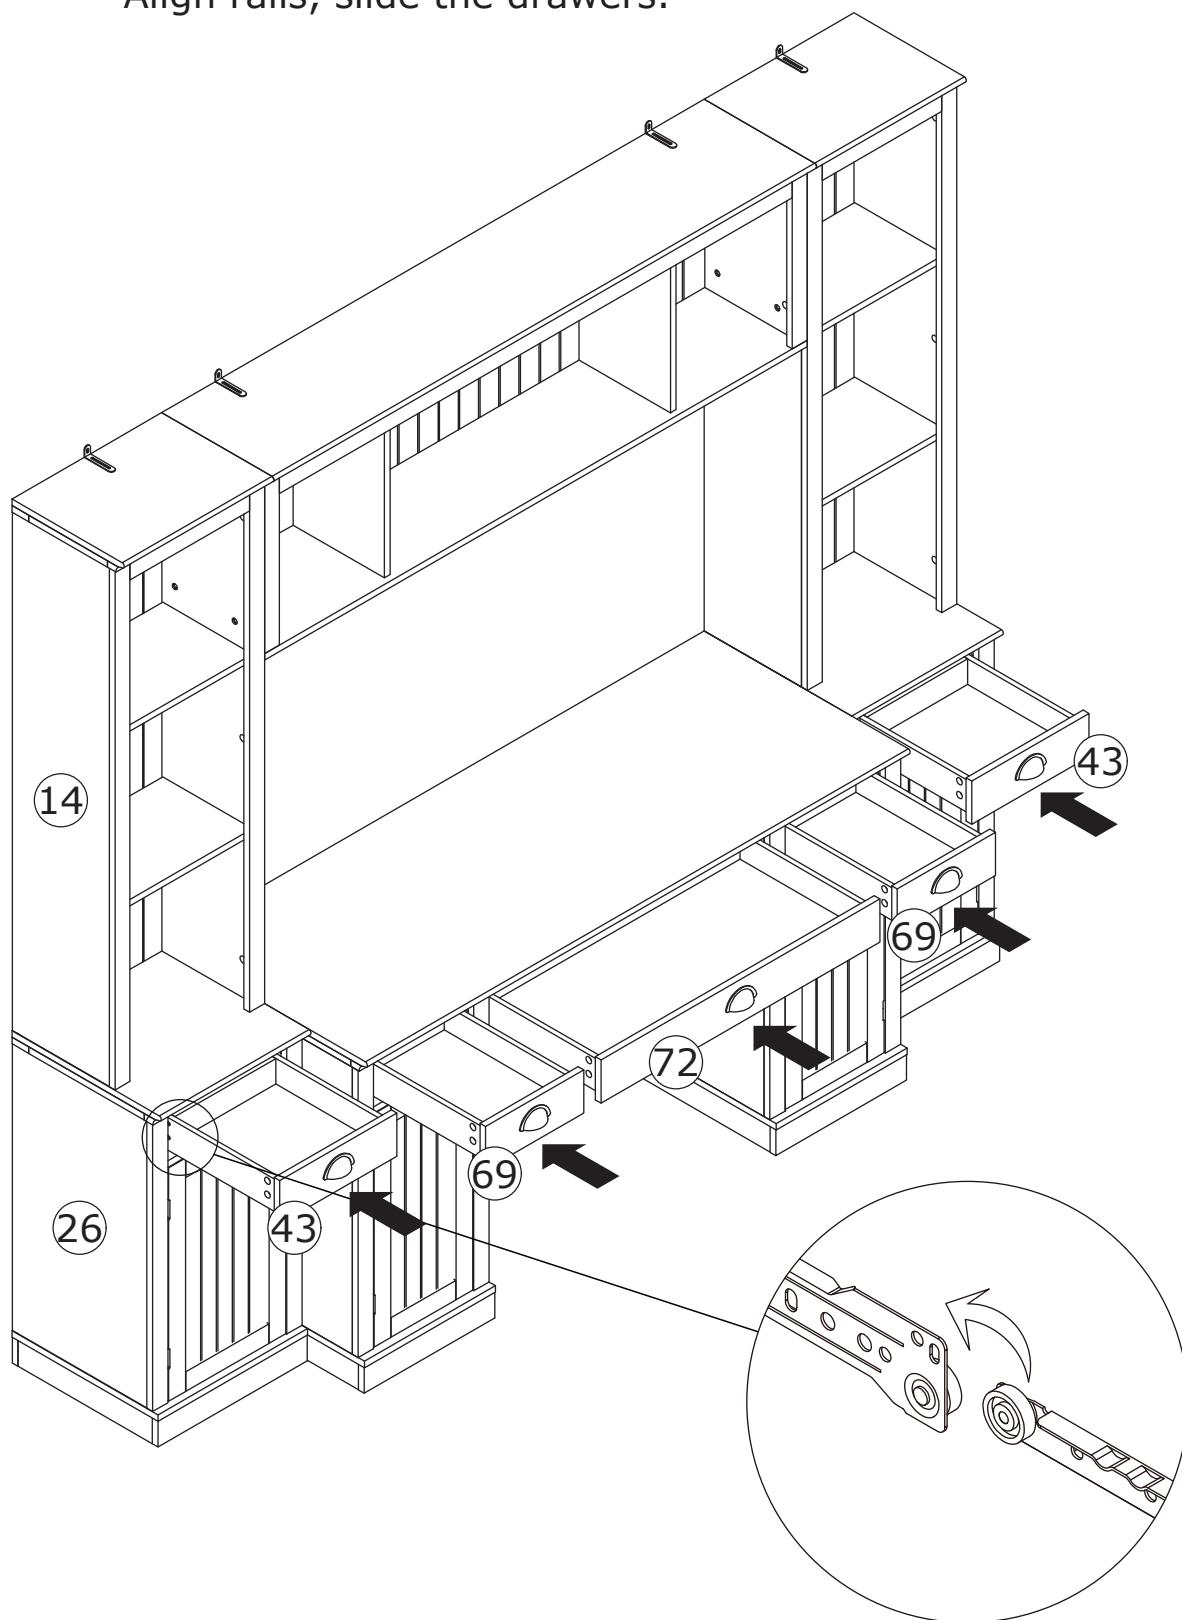 


77

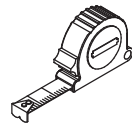 


  Please measure the distance between these holes
and the distance from the hole center to the bottom.

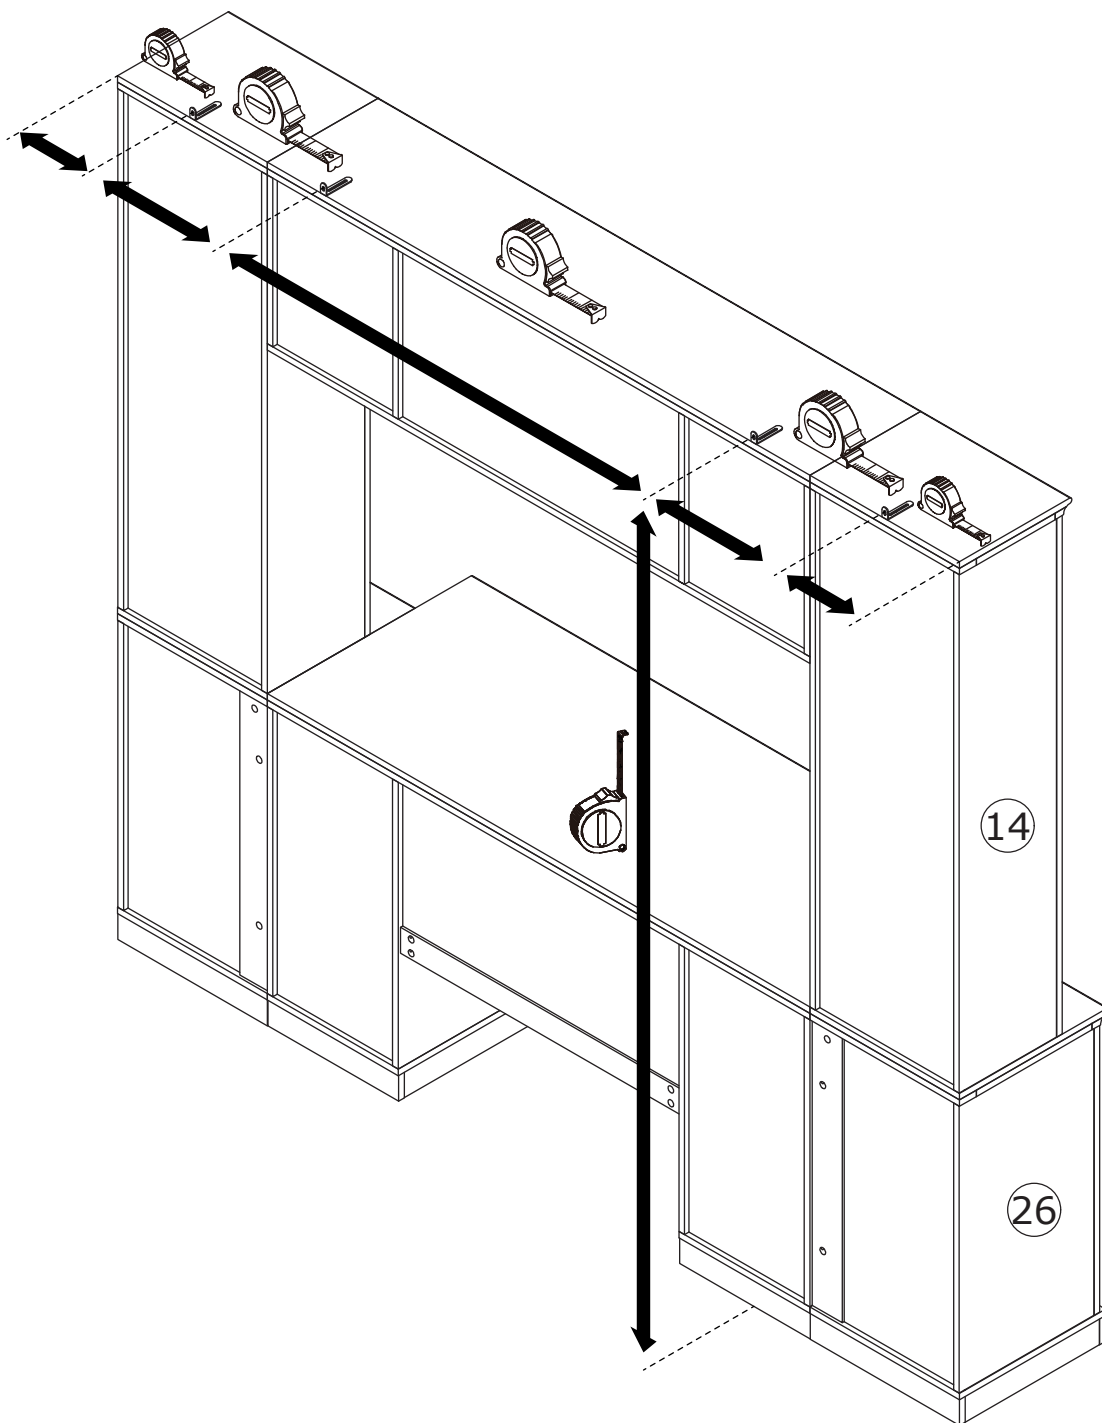




Drill holes on wall.

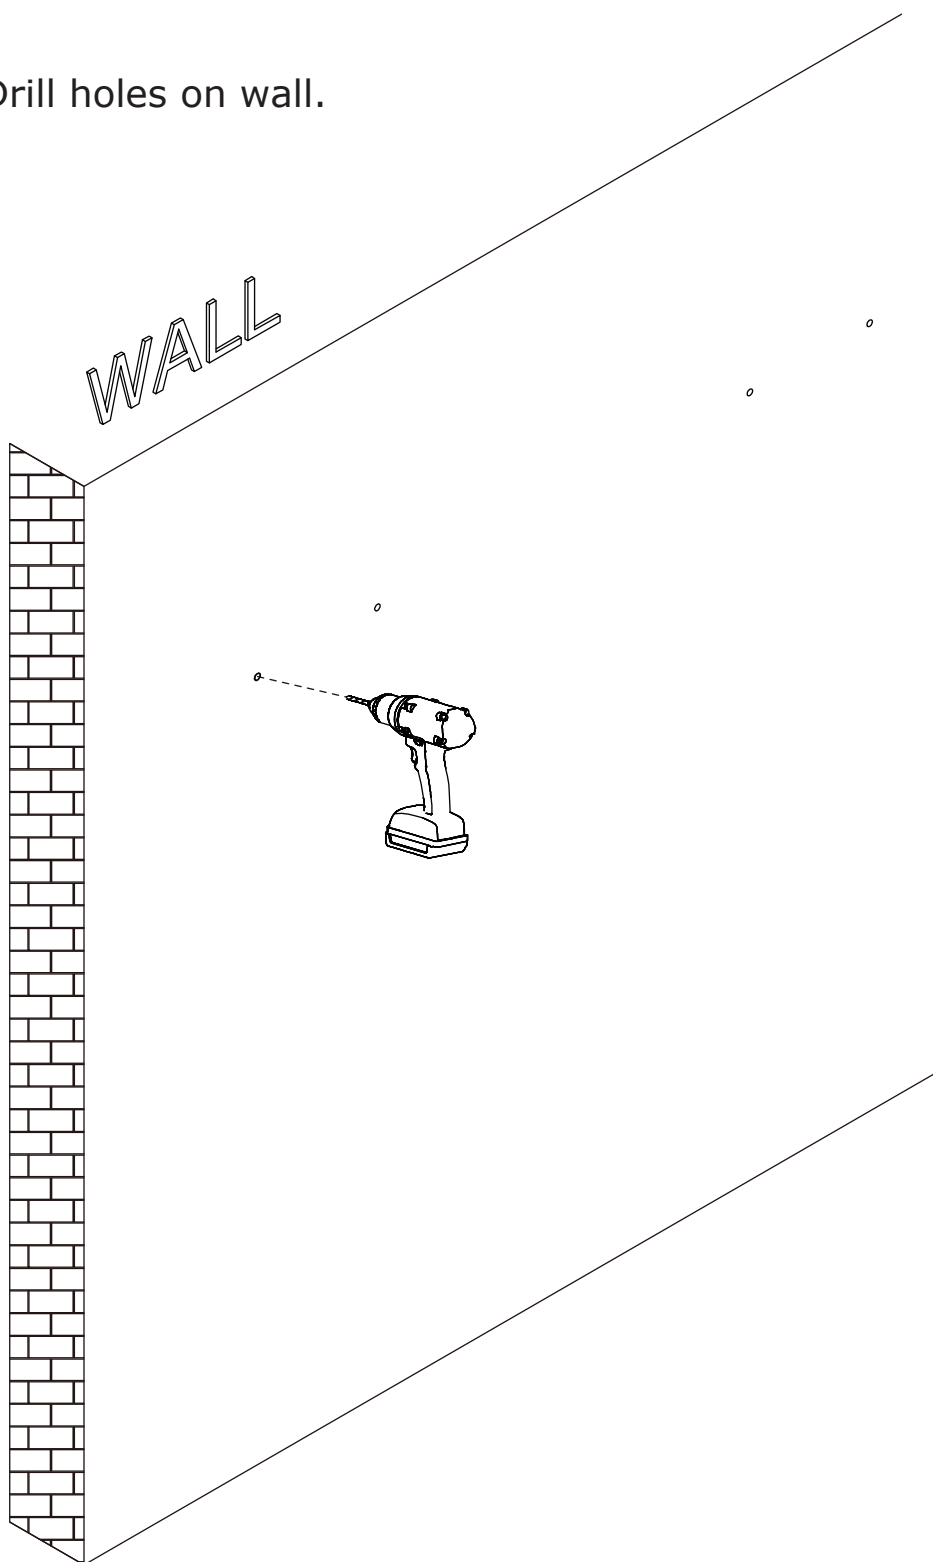 


79

 
X x 4




Ø6 x 30 mm

 


Knock part (X) into holes.

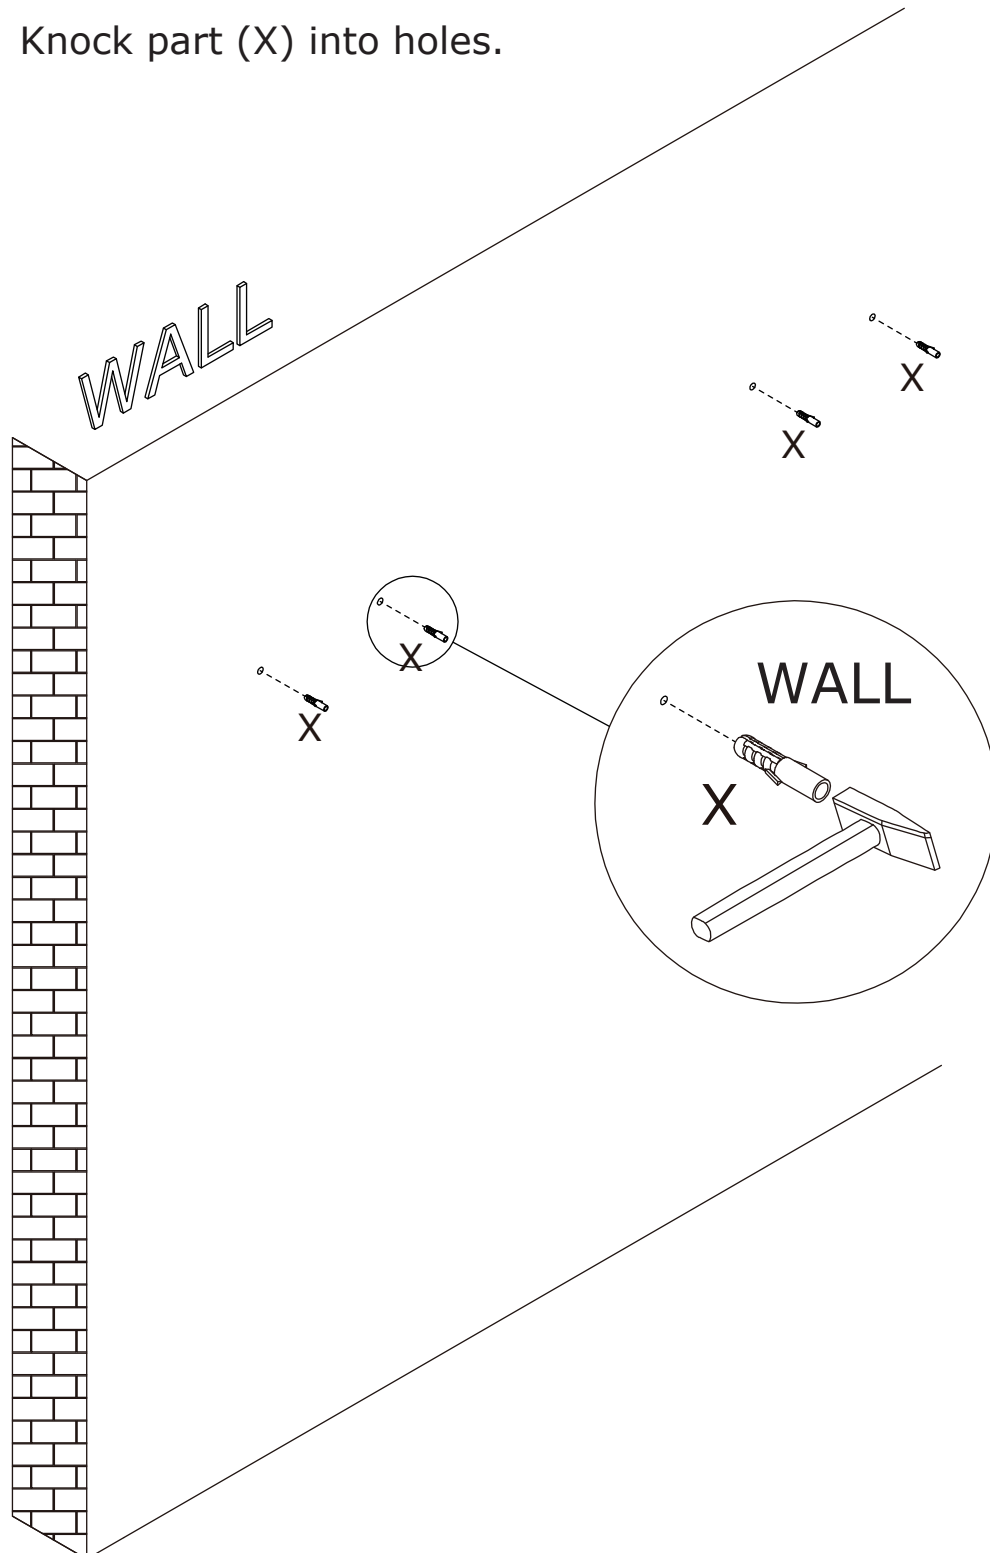 


80

 
W x 4

  Ø4 x 35 mm

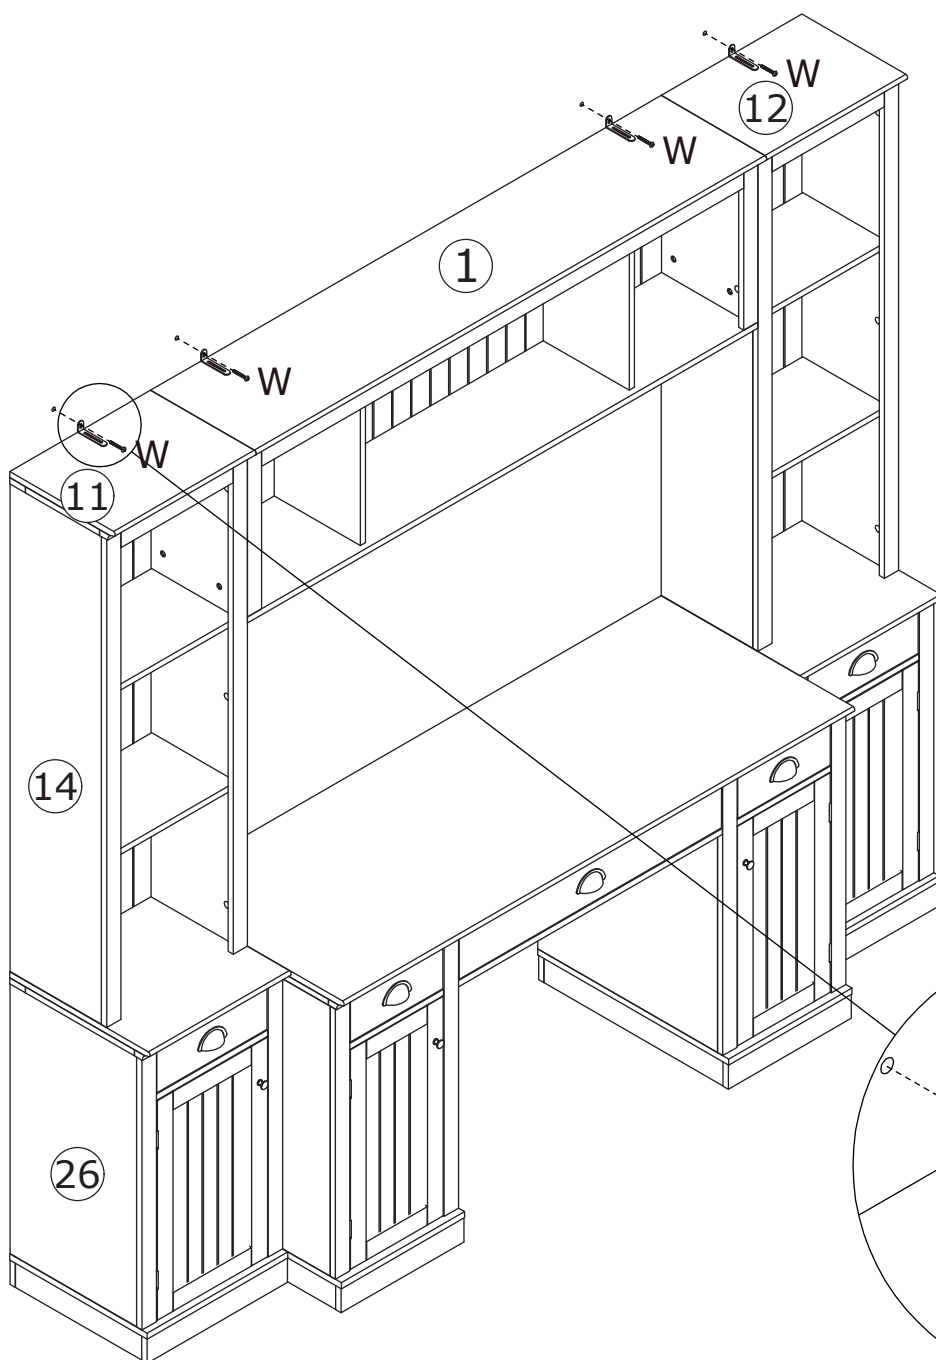 

 
Mount the cabinet to part (X) on wall
 with screw (W) as shown.

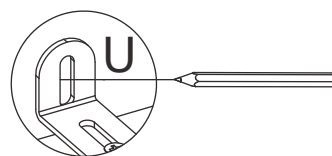


1.




 
2.

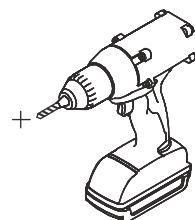

 3.

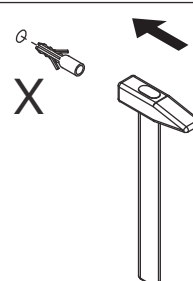

  4.

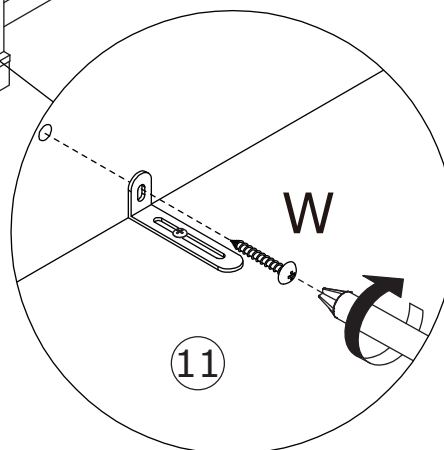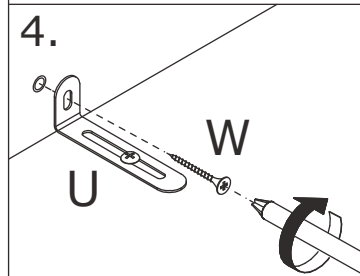

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068