 
 



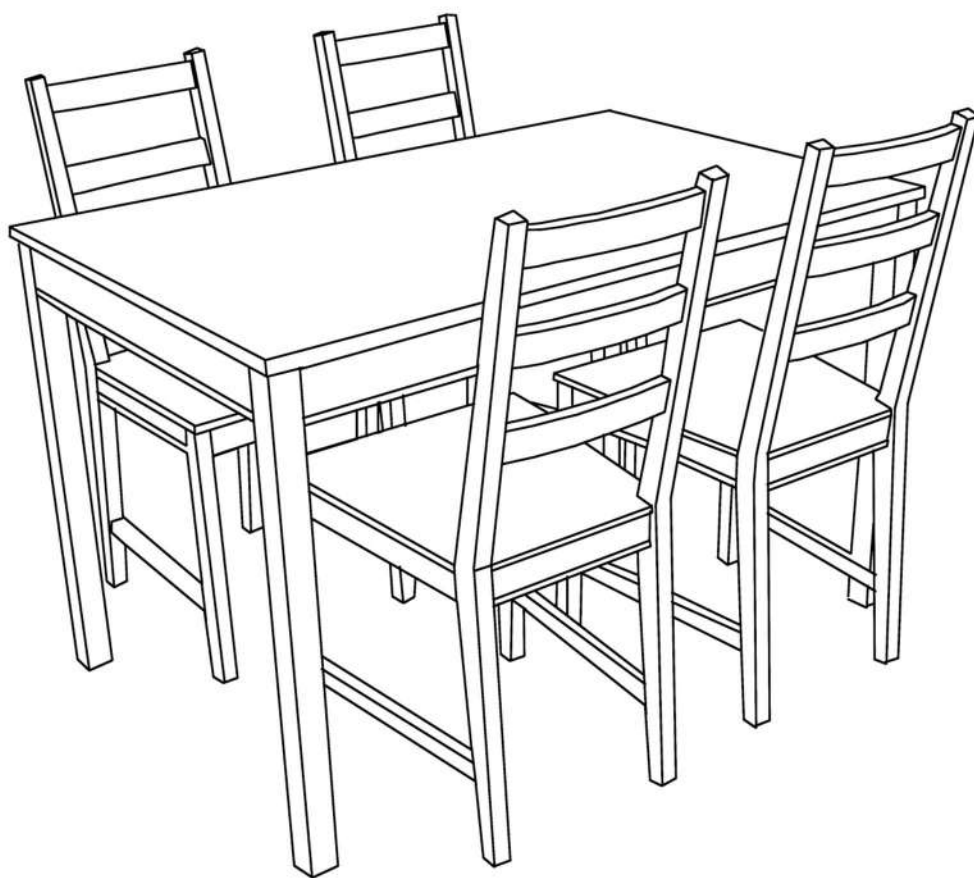



Please read these instructions and warranty information carefully before use and keep them properly for future reference.

OPERATING INSTRUCTIONS

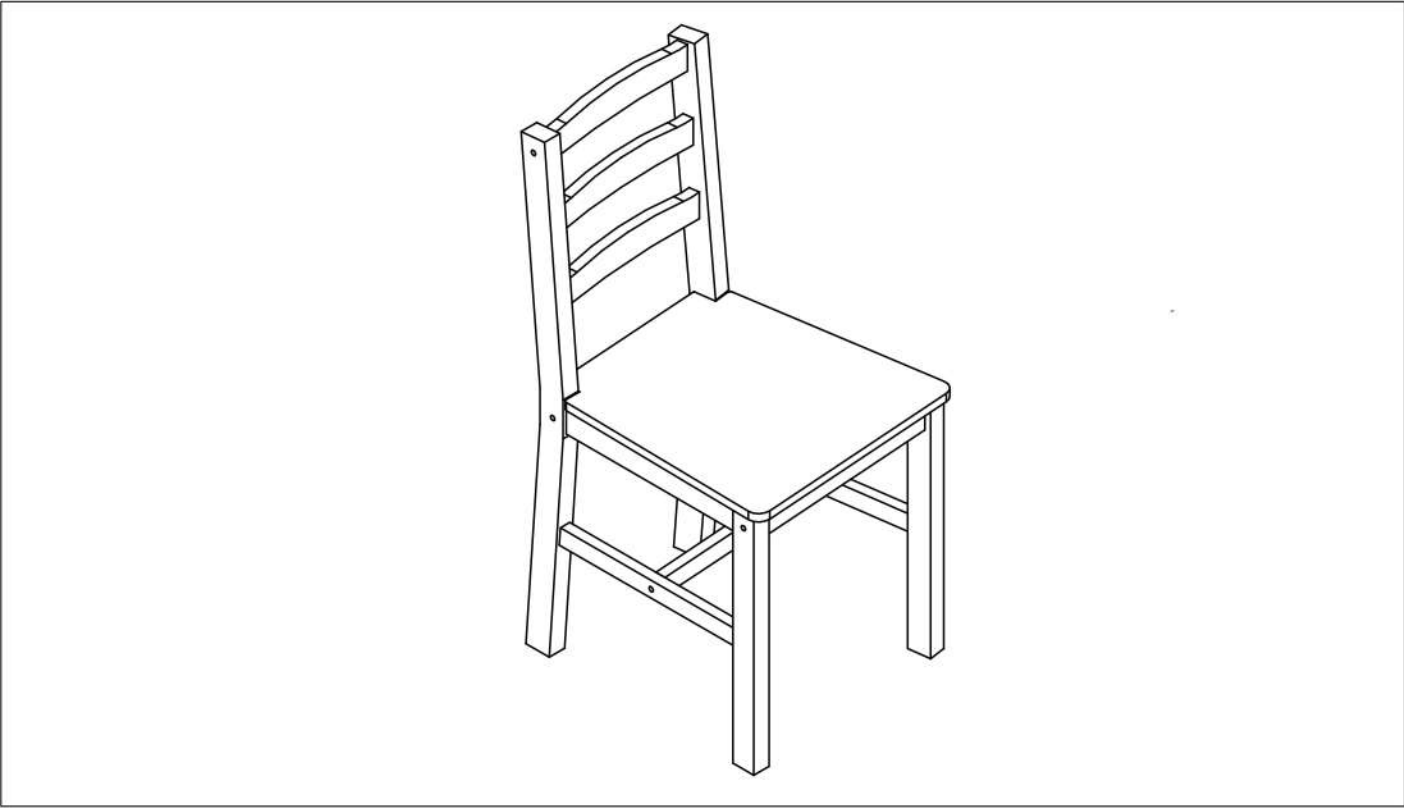


  HARDWARE

A		32	D	 M4	08
B		72	F		01
C		16			

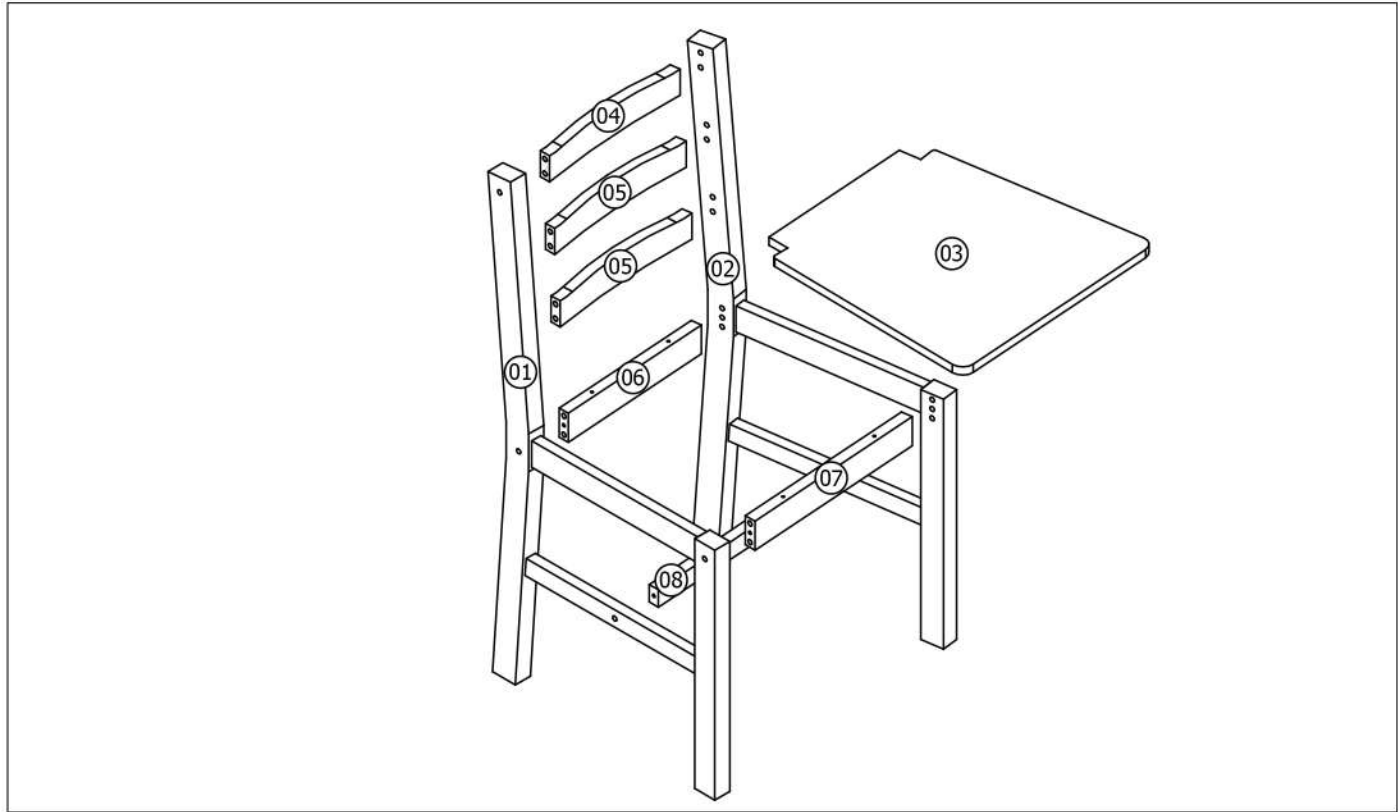 


01

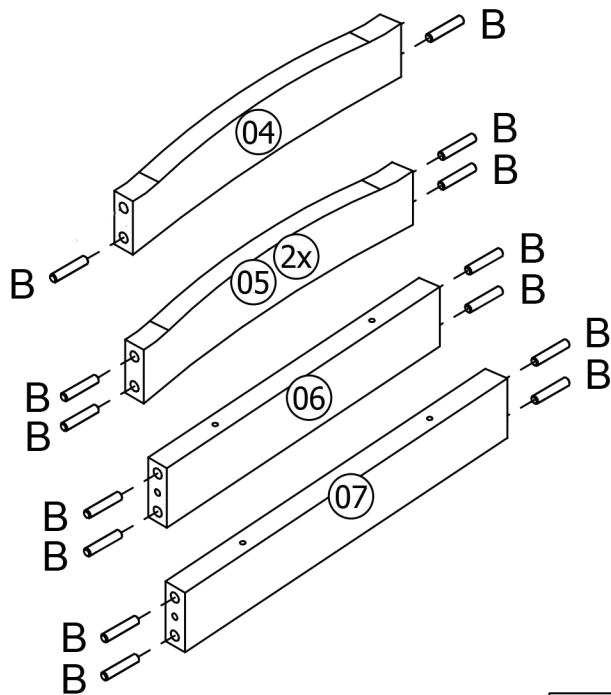 


B		18
---	---	----

 
02

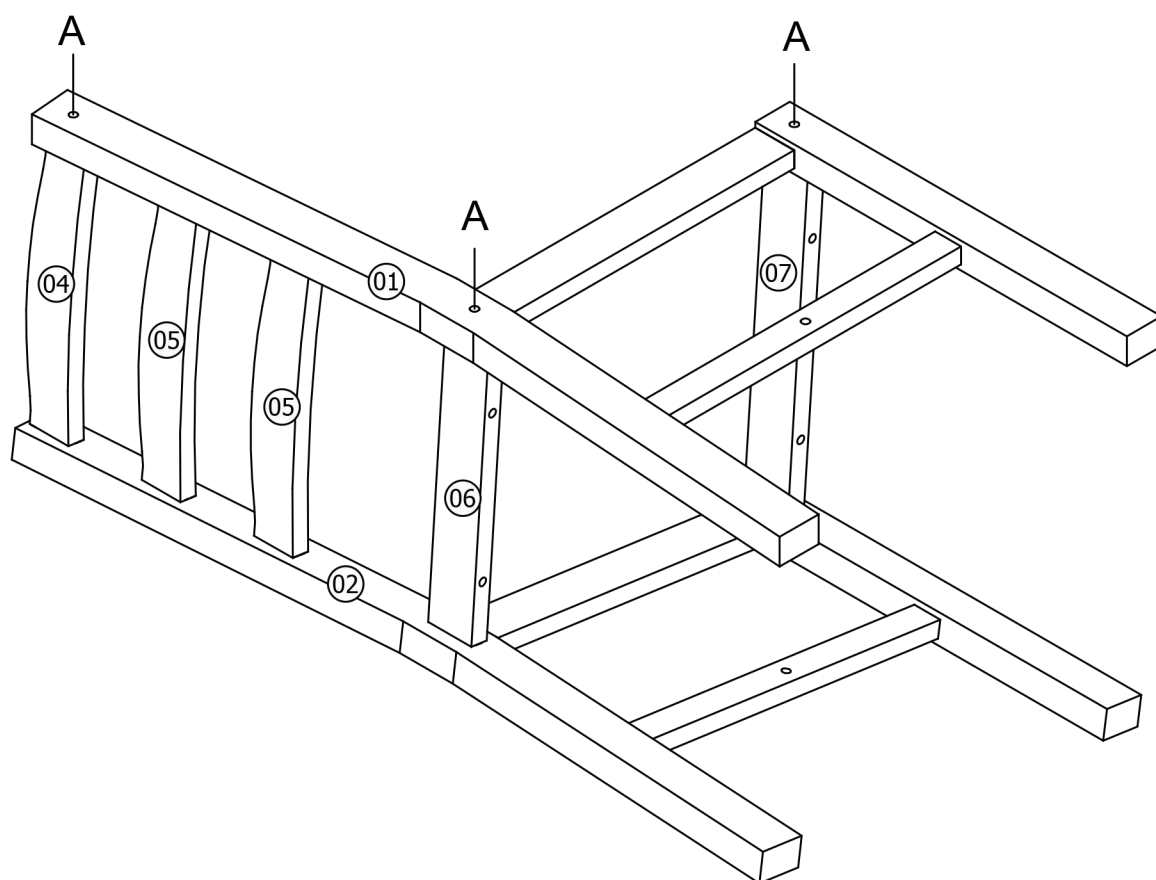


A	 	03
---	---	----

  
03

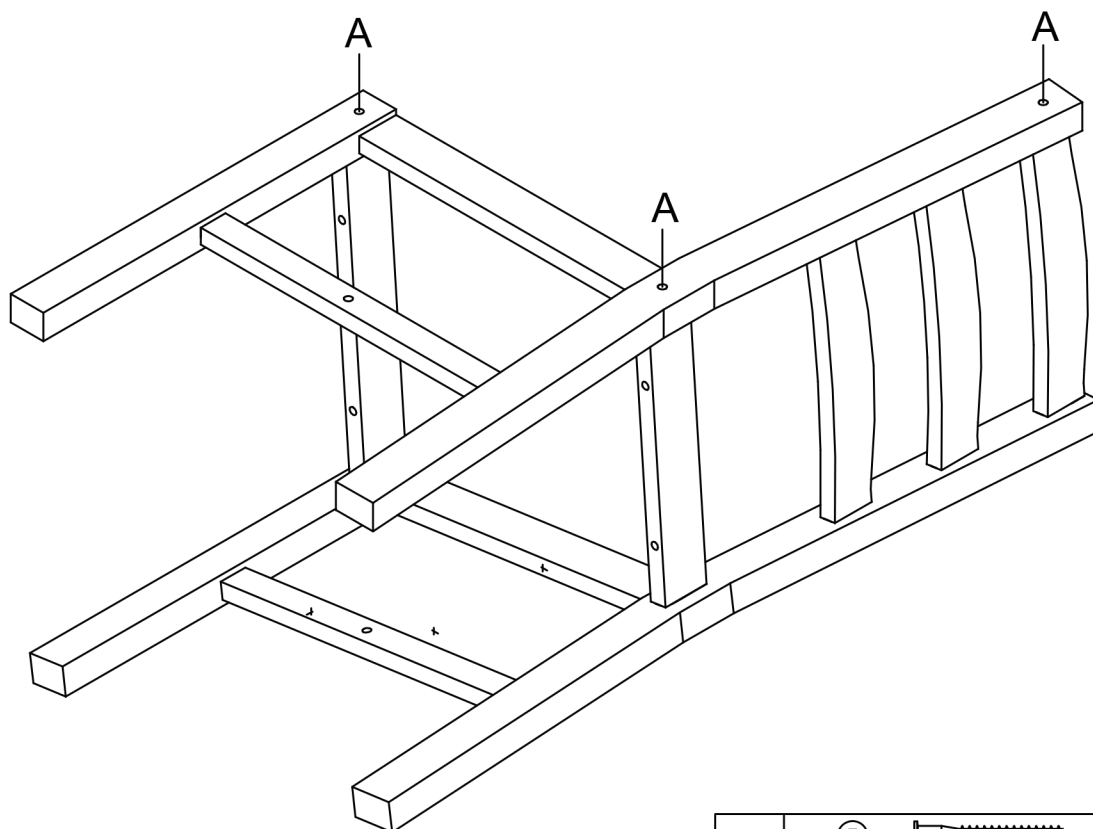


A			03
---	---	---	----

  
04

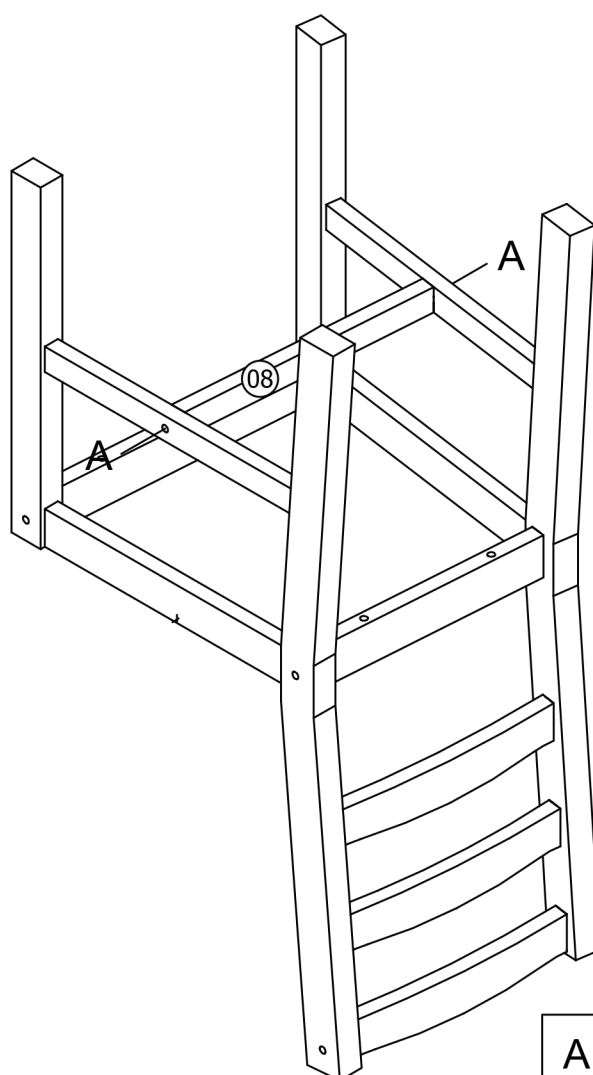


A			02
---	---	---	----

  
05

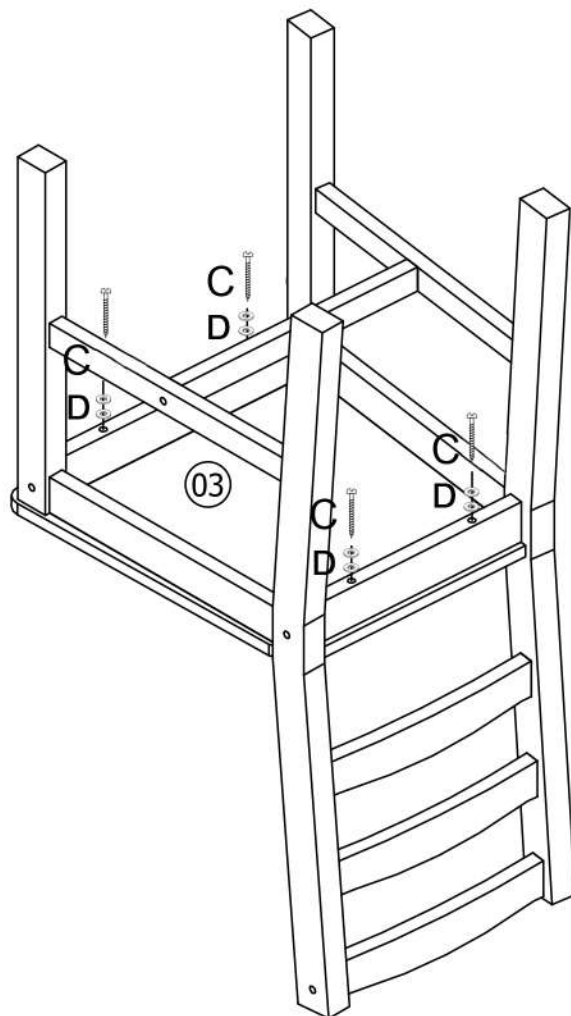

D	 M4	08
C		04

  06

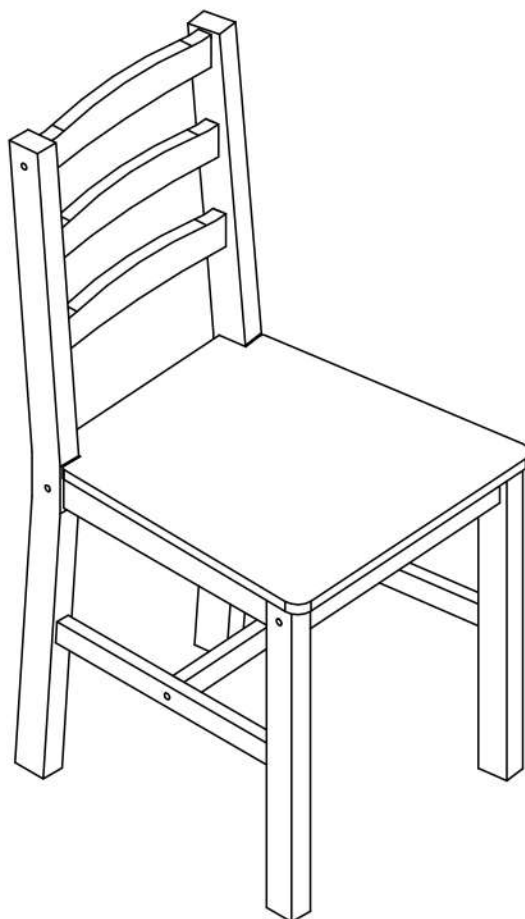


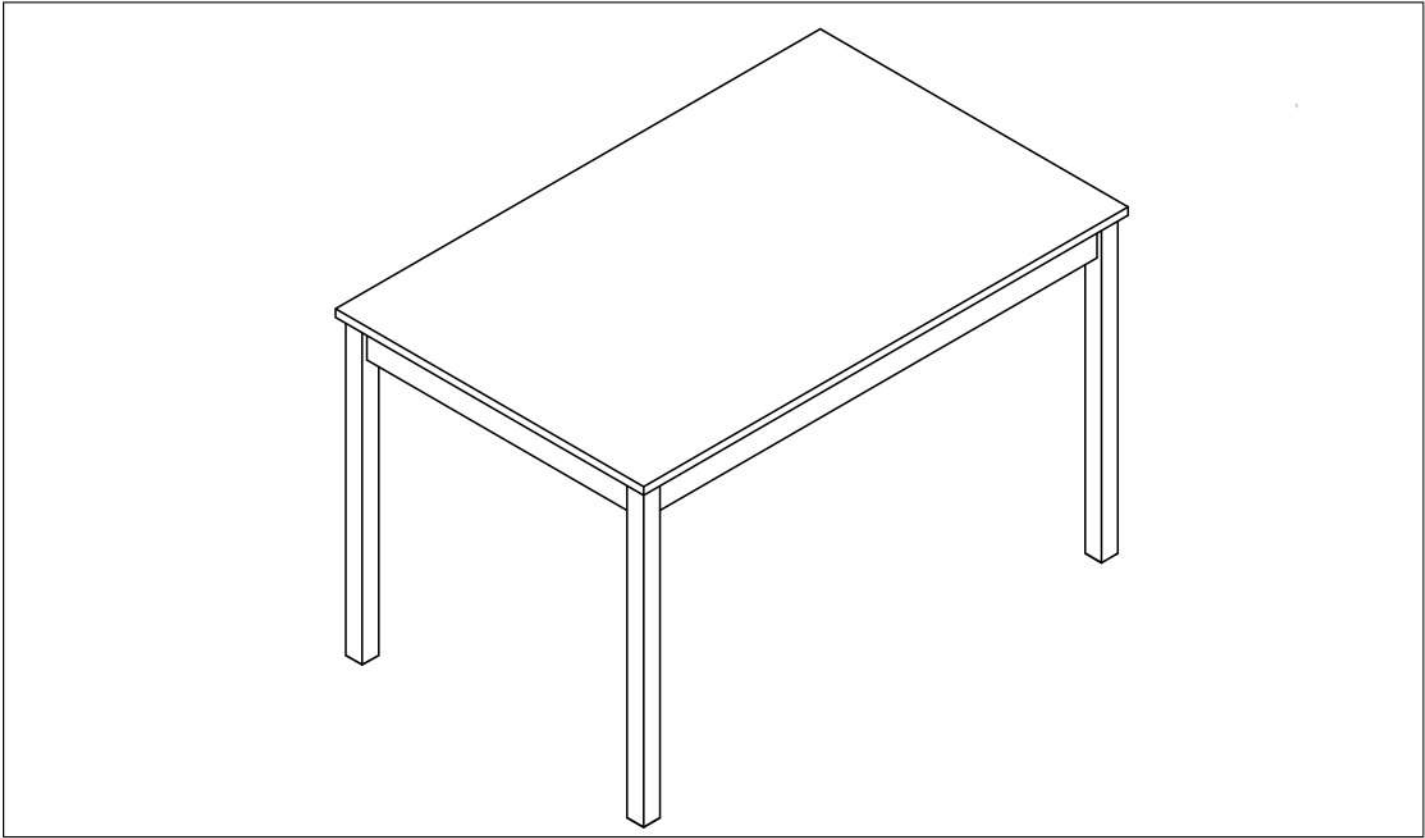


HARDWARE

A		08
B		04
C	 M8	08

D		08
E		01

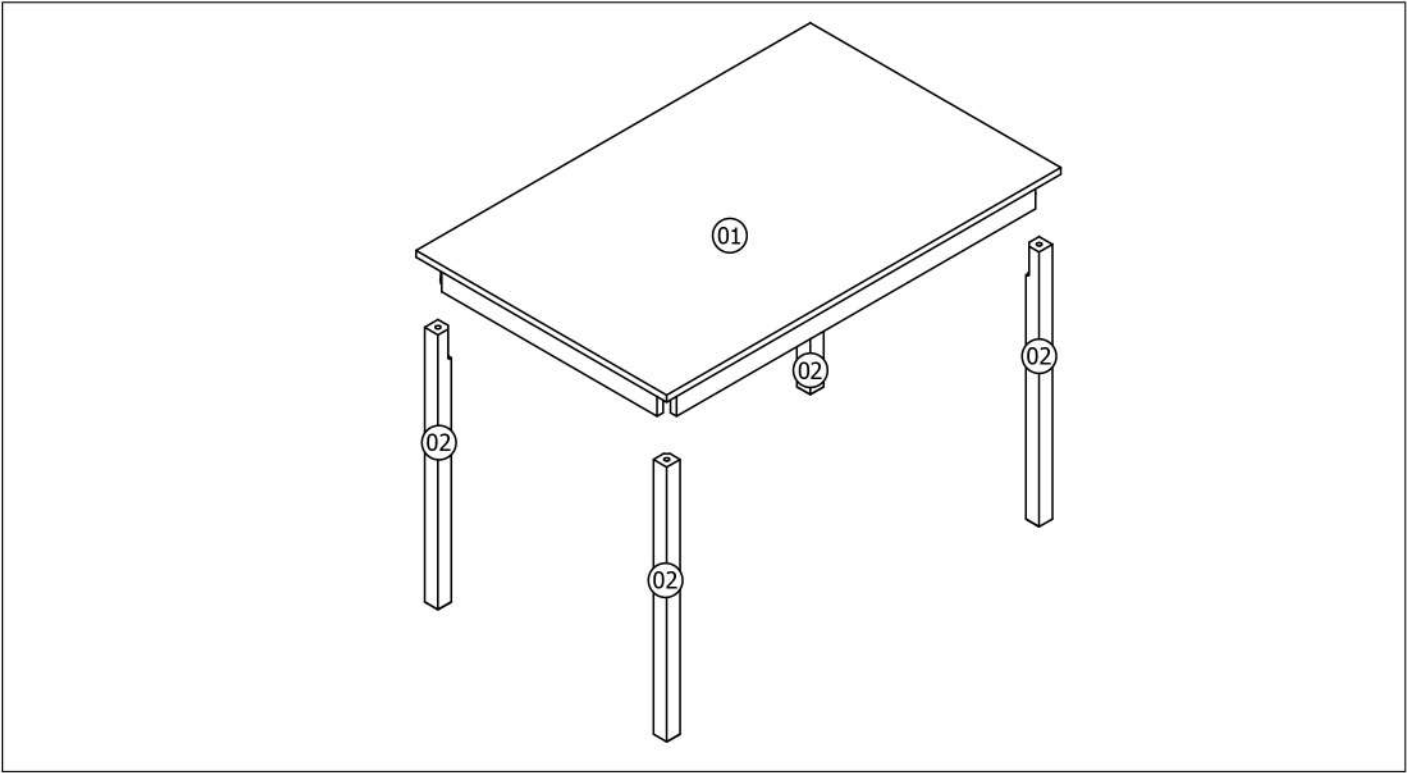 


01

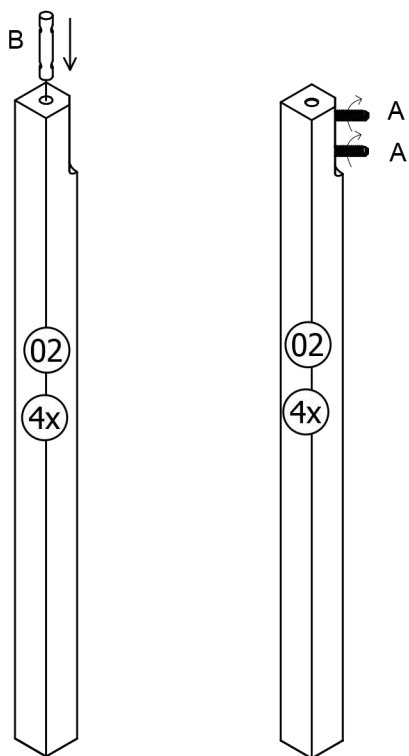 


A		08
B		04

 02

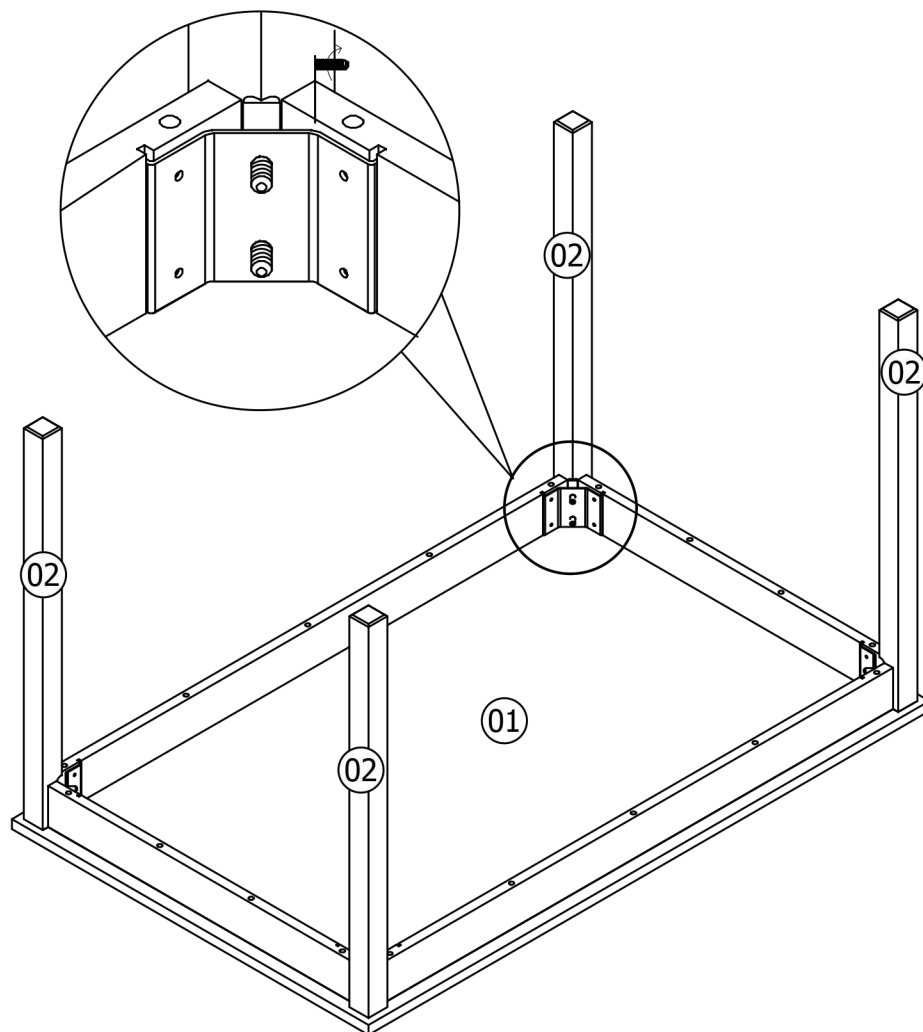

03

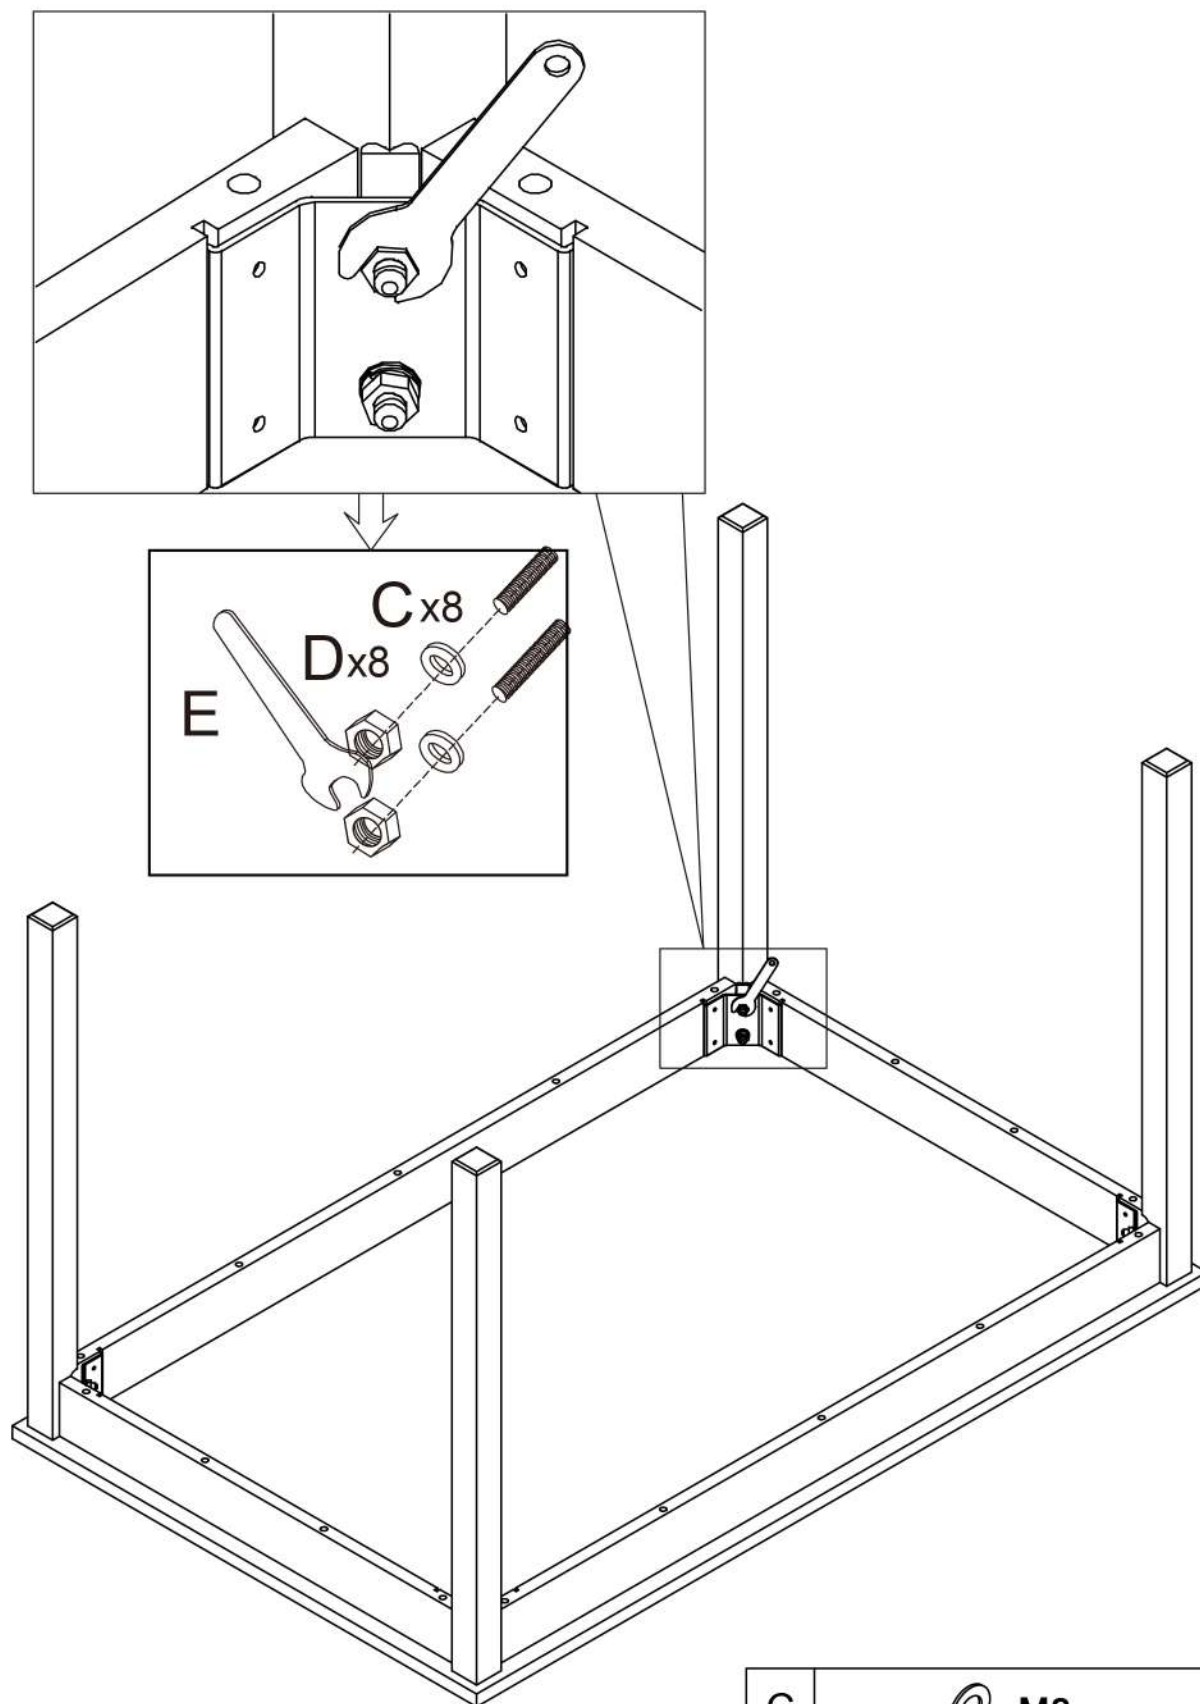 

C	 M8	08
D		08
E		01