 
 
 
 

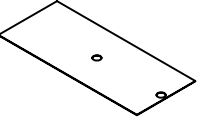 

 
 
 






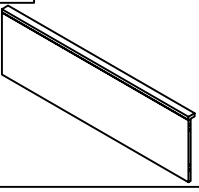


 


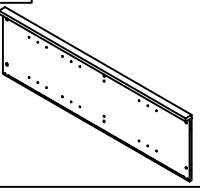

Care: Use a soft clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary. Should you choose to use polishes, test in an inconspicuous area first. Use of solvents of any kind may damage your furniture's finish. To clean, simply use a soft clean cloth moistened with lukewarm water, then buff with a dry soft clean cloth.

Parts List

A 	B 	C 	D 	E 	F 
Top panel 1 PC	Bottom panel 1 PC	Left side panel 1 PC	Right side panel 1 PC	Wood rail 2 PCS	Back panel 1 PC
G 	H 	I 	J 		
Fixed shelf 1 PC	Adjustable shelf 2 PCS	Adjustable shelf 1 PC	Door panel 1 PC		

Hardware List


1 	2 	3 	4 	5 	6 	7 
Cam bolt Ø7*42mm 14 PCS	Cam lock Ø15*12mm 14 PCS	Wood Dowel Ø8*30mm 20 PCS	Hex Socket Head Bolt M6*57mm 4 PCS	Barrel Nut M6*13mm 4 PCS	Allen Key 4mm 1 PC	Shelf holder Ø6.5mm 12 PCS
8 	9 	10 	11 	12 		
Knob 1 PC	Short Round head bolt M4**19mm 1 PC	Door Magnet L45*D15mm 1 PC	Pan Screw M3*12mm 2 PCS	Safety strap kit 1 SET		

Tools needed: Allen Key(Part#6) (Included)


Phillips Head Screw Driver (Not included)

NOTE: Wood Dowels are intended for alignment only when assembling your furniture. Additional clearance between the wood dowels & pre-drilled holes is intended for ease of assembly.


 
Step 1. Insert Cam Bolts(Part#1) into pre-drilled holes of Parts A, B, C and Part D with a Phillips Head screw driver as shown. **Do not over tighten.**

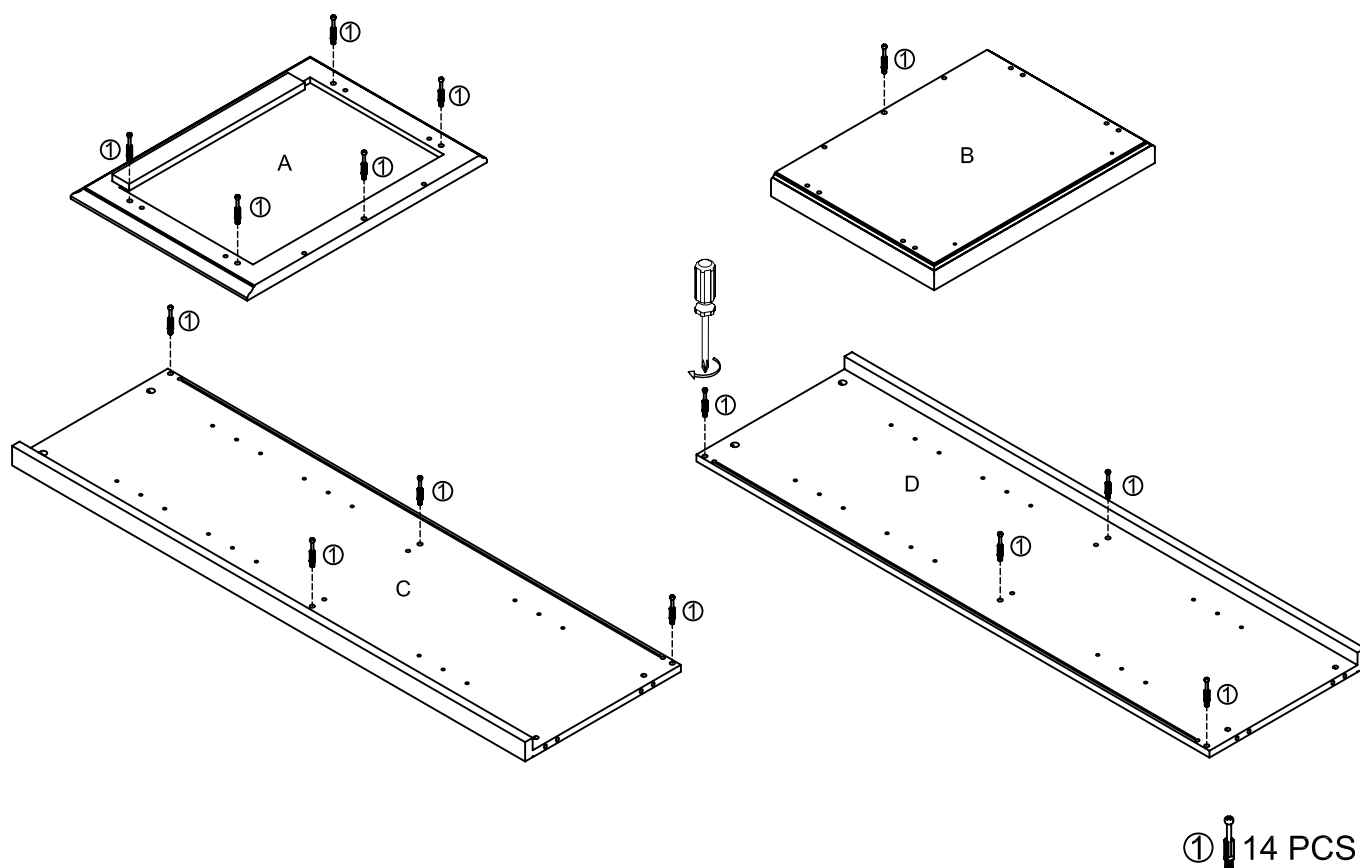

 Step 2. Insert Back Pane (part#F) into the grooves of Wood Rail (Part#E) as shown.


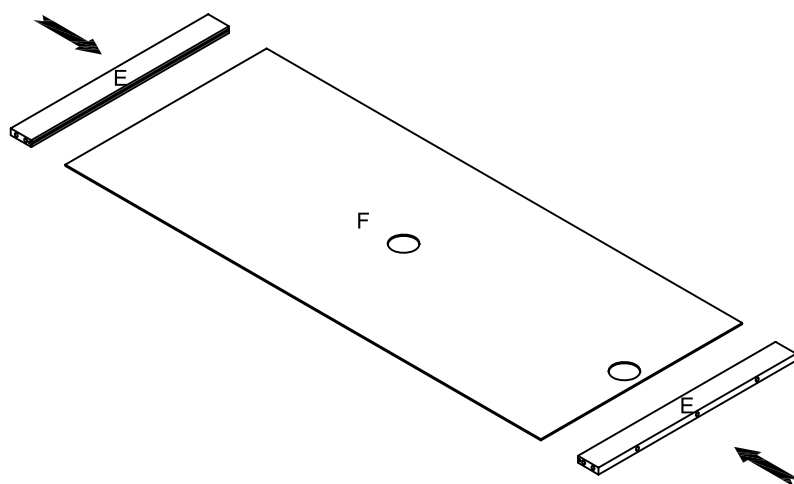


  Step 3. Attach assembled Parts E and F to Right side panel (Part#D) with Wood dowels (Part#3)& Cam locks (Part#2) as shown. Attach Fixed shelf Part G to Part D with Wood dowels and Cam locks as shown. Attach Left side panel (Part#C) to Part E and G with Wood dowels and Cam locks .

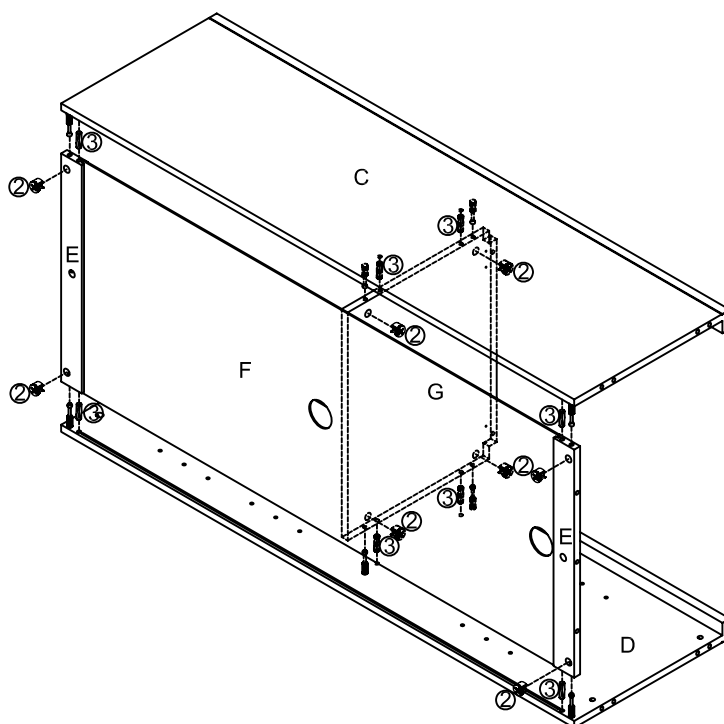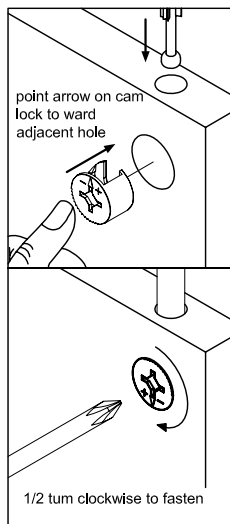


② 8 PCS
③ 8 PCS

  Step 4. Attach Top A to cabinet using Wood dowels (Part#C) and Cam Locks(Part#B) as shown. Attach Bottom panel (Part#B) to cabinet using Wood dowels(Part#3) and Hex Socket Head Bolts (Part#4) & Barrel Nuts (Part#5) . **Now attach legs using Hex Socket Head Bolts & Wood Dowels (as shown in instruction manual included in carton with legs).** Carefully turn cabinet over so that legs are on the floor.

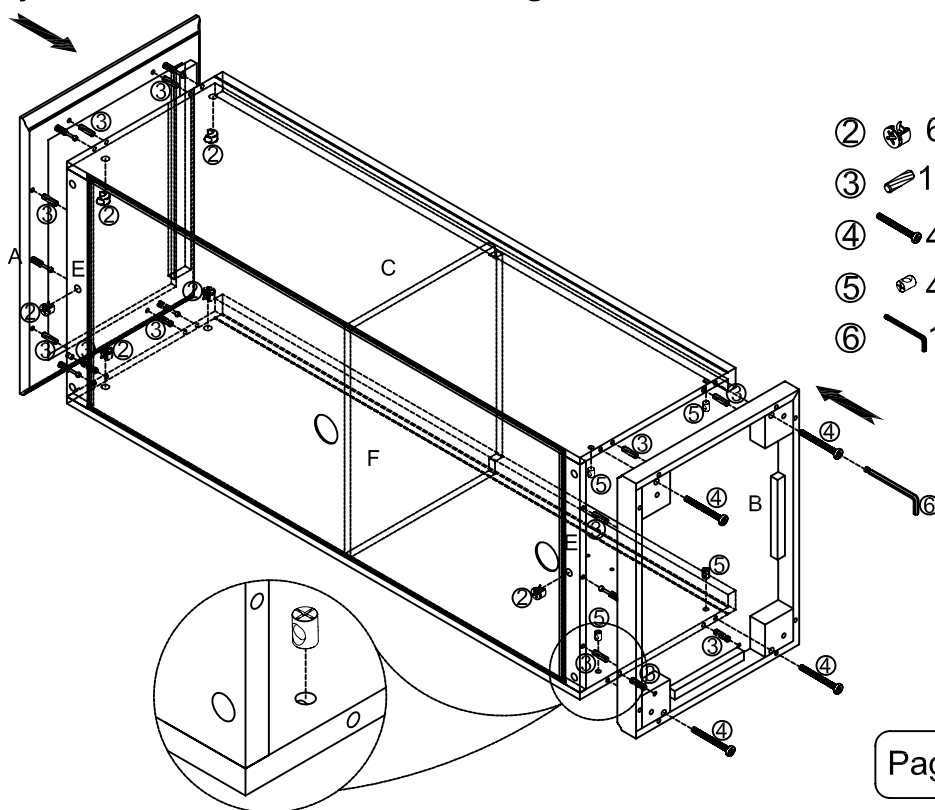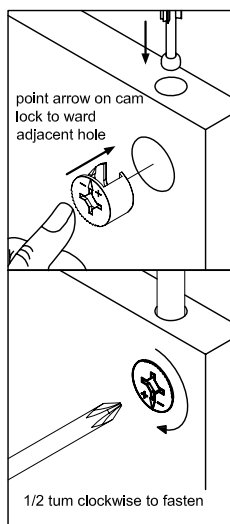

② 6 PCS
③ 12 PCS
④ 4 PCS
⑤ 4 PCS
⑥ 1 PC

 
Step 5. Insert Shelf Holders (Part#7) into desired positions. Slide Shelves H & Shelf I onto Shelf Holders (Part#7).

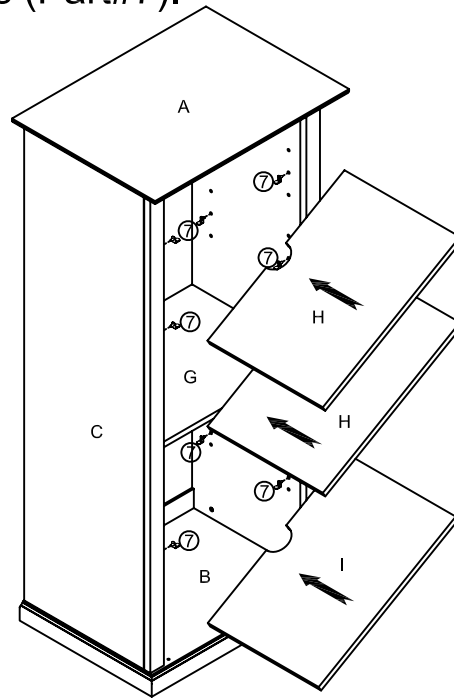







⑦ 12 PCS

 Step 6. Attach Hardware Knob (Part#8) to Door (Part J) using Round Head Bolts (Part #9) & Phillips Head screw driver as shown. Attach doors to cabinet by placing bottom Pin Hinge into pre-drilled holes in Base B & depressing top spring loaded Pin Hinge to fit door into place in Fixed shelf G. **Note: Be sure Pin Hinges (top & bottom) have fully extended into the pre-drilled holes in Base B and Fixed shelf G to secure doors into place.** Attach Magnets (Part #10) to Shelf G using Pan Screws (Part #11) with Phillips Head screw driver as shown.

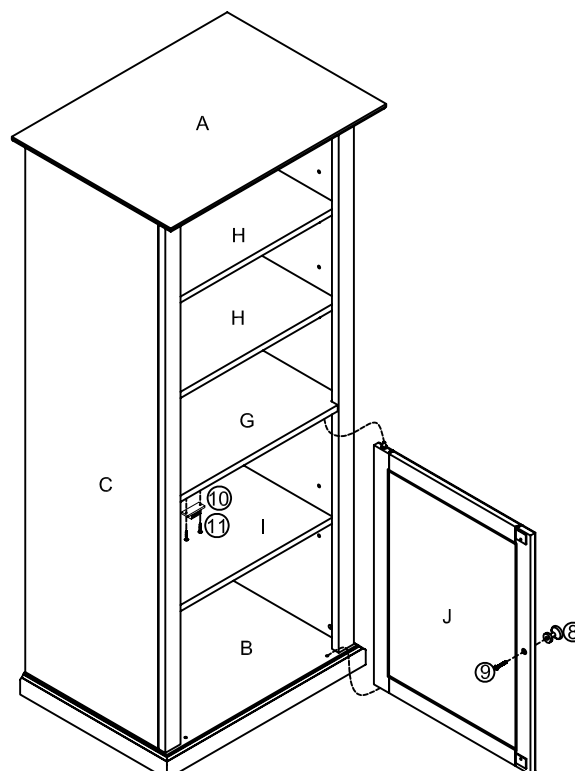- ⑧ 1 PC
- ⑨ 1 PC
- ⑩ 1 PC
- ⑪ 2 PCS

  

  Step 7.

12	a	b	c	d	e
					
Safety strap kit 1 SET	Wall Anchor 1 PC	Washer 1 PC	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

 
SAFTY WALL STRAP ASSEMBLY INSTRUCTION

- 1). Insert Short Screw(Part#c) through Washer(Part#b) and Safty Wall Strap(Part#e) and Screw it into Wood rail (Part#E).
2. Drill a 9mm hole at a point where you want to secure/attach your Audio Pier. Make sure that the height of the hole being drilled into the wall is equal to the height of the hole in Part E. Tap Wall Anchor (Part#a) into the hole.
3. Insert Long Screw (Part#d) through a Washer (Part#b) and Wall Safty Strap (Part#e) into Wall Anchor (Part#a).

⚠ WARNING



Warning, Severe Injury may occur If furniture tips over. Place heavier items on lower shelves. Do not allow children to climb or play on this product. Please follow instructions below to install anti-tipping hardware. Failure to follow these instructions can result in death or serious injury.

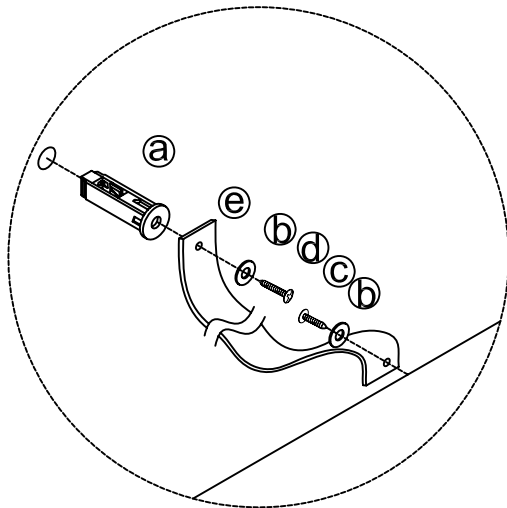

- Ⓐ 1 PC
- Ⓑ 2 PCS
- Ⓒ 1 PC
- Ⓓ 1 PC
- Ⓔ 1 PC

