 


Elite Adirondack
Adirondacks d'élite
Élite Adirondack

 
Assembly Instructions
instructions de montage
Instrucciones de montaje

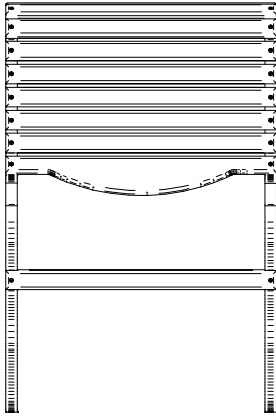


A




B

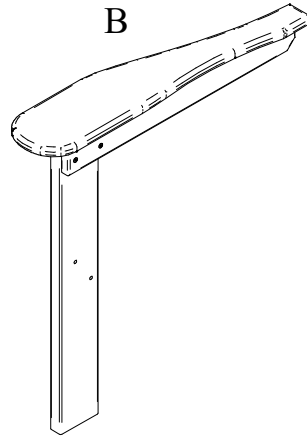


C

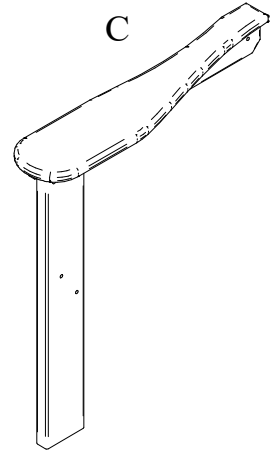 

D

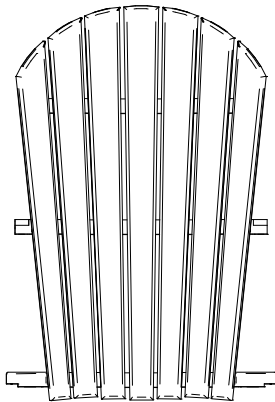 


E


 


Hardware Included
Matériel inclus
Herrajes incluidos

 
(38212) x8





(214212) x4

  

(6114) x4

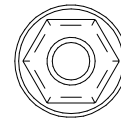 


(114212) x2

  

(9532) x1






 
Items Not Included
Articles non inclus
Artículos no incluidos

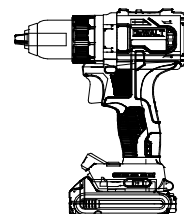




#2 Square Drive Bit
Embout d'entraînement carré #2
Punta cuadrada n.º 2



    1 (A) x1
(B) x1
(C) x1

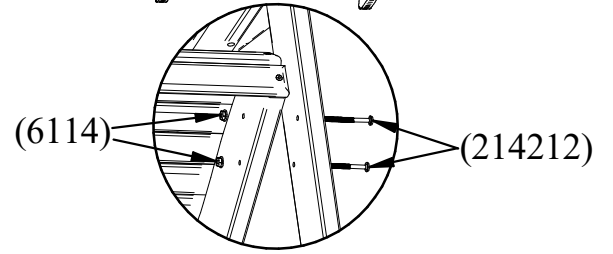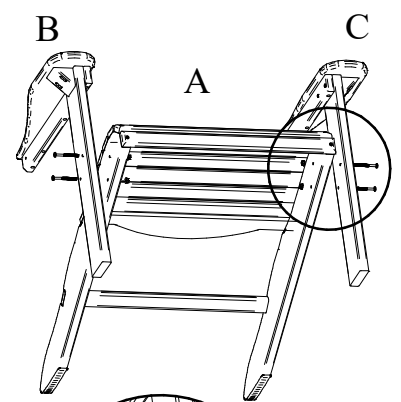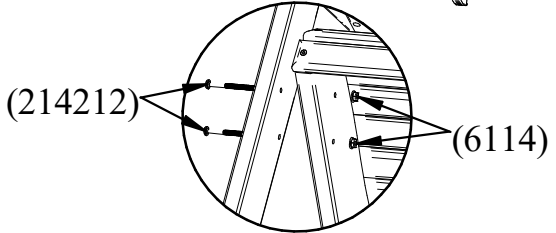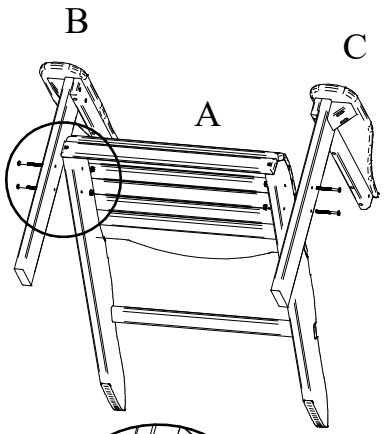

2 (D) x1

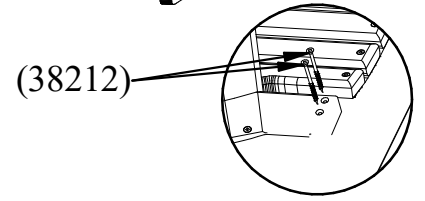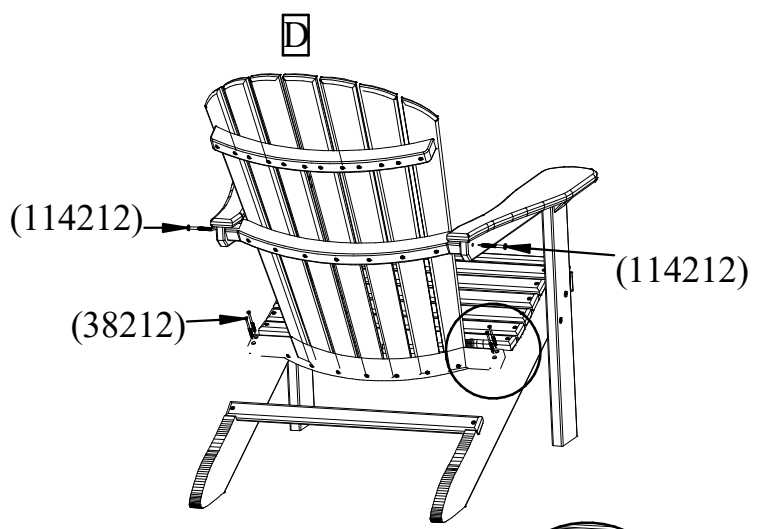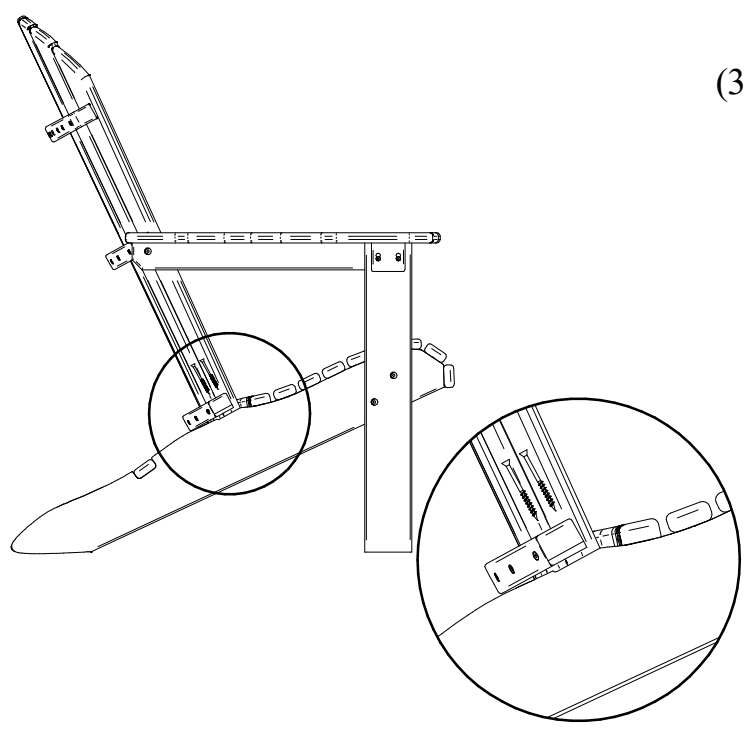   

3 (E) x1

