


Manual Book

Ceiling Fan with Lights

Model No.: CFL-1282-01/CFL-1282-03

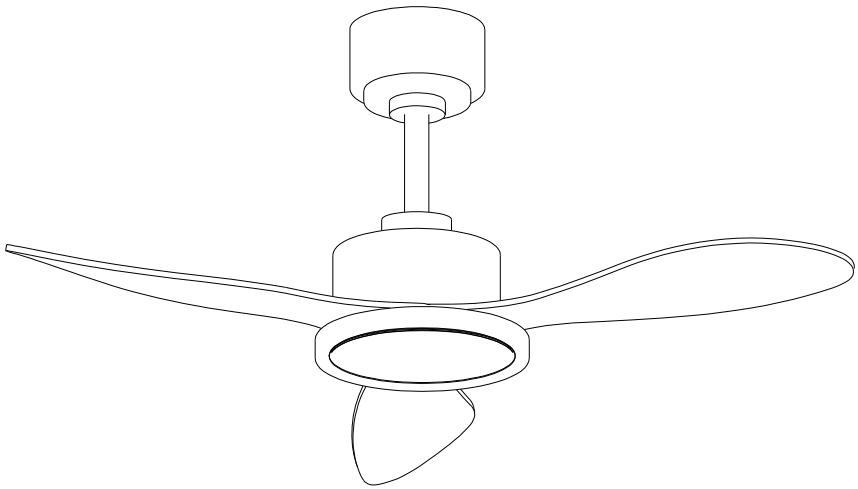

Scan For Installation Video



APP Control Applicable

Safety Rules

1. Be sure the power to the wires you are working on is disconnected, either the fuse is removed or the circuit breaker is turned off. Turning the power off using the light switch is not sufficient to prevent electrical shock.
2. A qualified licensed electrician is required for the installation.
3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 70 pounds. Use only UL (cUL for Canadian Installation) listed mounting boxes marked "FOR FAN SUPPORT".
4. The fan must be mounted with a minimum of 7 feet clearance from the trailing edge of the blades to the floor.
5. Do not operate reversing switch while fan blades are in motion (if applicable). The fan must be turned off and the blades stopped before reversing the blade direction.
6. Do not place any objects in the path of the blades.
7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened soft cloth will be suitable for the cleaning.
9. After marking electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor on one side of the outlet box.
10. Electrical diagrams are reference only, different fan lights may have different light shades and bulbs.
11. Use only our replacement parts.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.

These limits are to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

Warning:


To reduce the risk of personal injury, use only the two steel screws and washers provided with the outlet box for mounting to the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and need to be replaced, consult a qualified electrician if in doubt.

To reduce the risk of fire, electric shock, or personal injury, mount the fan to the outlet box marked "acceptable for fan support".

To reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.

Installation Preparation


Tools You Need

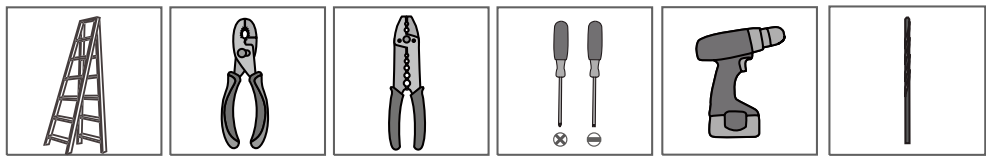

- ☒ Ladder
- ☒ Pliers
- ☒ Wire Strippers
- ☒ Screwdrivers
- ☐ Power Drill (optional)
- ☐ Drill Bit (optional)

If mounting to a support structure, you will also need the optional tools.

What to Expect with Your Installation

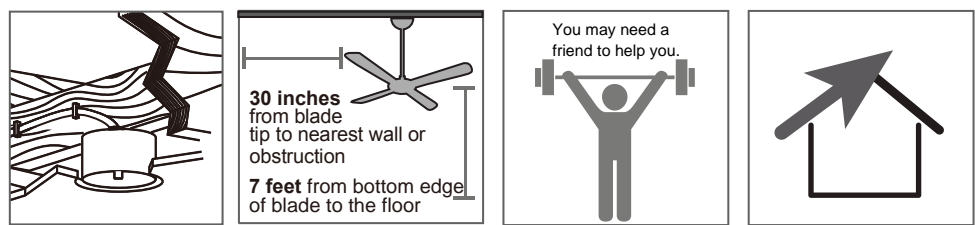


- ☒ Must be able to secure the fan to building structure or fan-rated outlet box
- ☒ Assess location
- ☒ Check the box to see the weight of the fan
- ☒ Not applicable for angled ceiling


Switch Selection

Note: Using a dimmer switch to control the fan may damage the fan. To reduce the risk of fire or electrical shock, do not use a dimmer switch to control the fan.


The recommended switches are as follows:




Recommended:

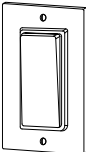


Single Pole Switch
(Not Included)




Not Recommended:

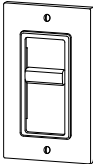


Dimmer Switch

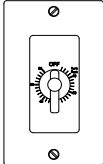

Timer Switch

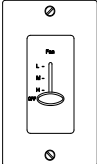


Fan Speed Control
Switch

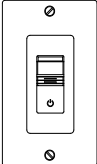

Motion Sensor
Switch


Installation Recommended

Room Size:

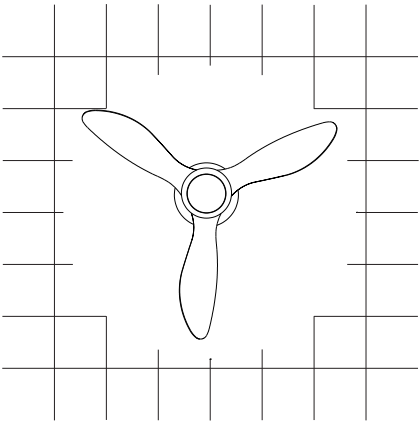


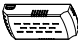

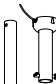




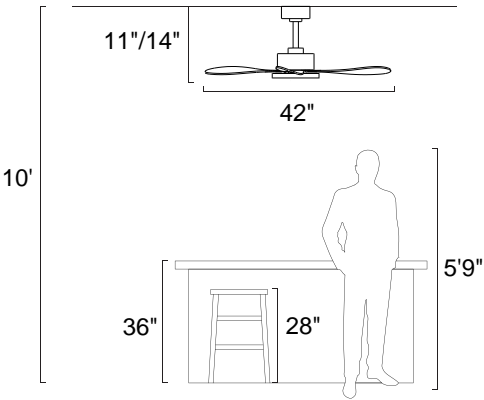




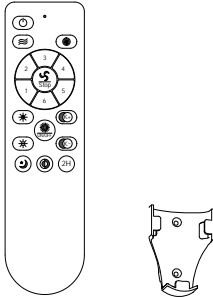





UP TO 12 ft x 14 ft

Room Height:



Recommended ceiling height: 8 to 12 ft.

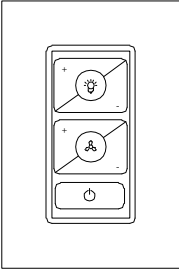Packing List


<div>  <div>A Mounting Bracket x1</div> </div> <div>  <div>B Receiver x1</div> </div> <div>  <div>C Canopy x1</div> </div> <div>  <div>D 5-inch Downrod Assembly x1</div> </div> <div>  <div>E 8-inch Downrod x1</div> </div> <div>  <div>F Coupling Cover x1</div> </div> <div>  <div>G Fan Motor Assembly x1</div> </div> <div>  <div>H Fan Blade x3</div> </div> <div>  <div>I Light Kit x1</div> </div>		<div>AA 3x</div> <div>  <div>Wire Nut</div> </div>	<div>BB 2x</div> <div>  <div>Outlet Box Screw</div> </div>
		<div>CC 4x</div> <div>  <div>Wood Screw And Washer</div> </div>	<div>DD 1x</div> <div>  <div>Pair of Gloves</div> </div>
<div>  <div>Handheld Remote and Holder</div> </div>		<div>  <div>Anchor x2</div> </div> <div>  <div>Screw x2</div> </div>	<div>  <div>Wall-Mounted Remote Control</div> </div> <div>  <div>Anchor x2</div> </div> <div>  <div>Screw x2</div> </div>

NOTE:
 The listed quantity is for installation, extra hardware may be included.


Installation Instructions

1. Assemble the Fan


Step 1. Take off fan blade screws from fan motor assembly (G).

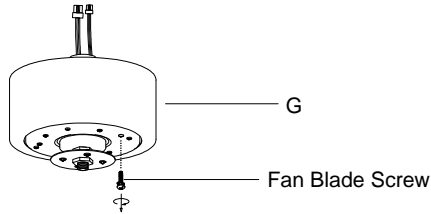

Step 2. Align the fan blade (H) with the holes on the fan motor assembly, secure them with fan blade screws.

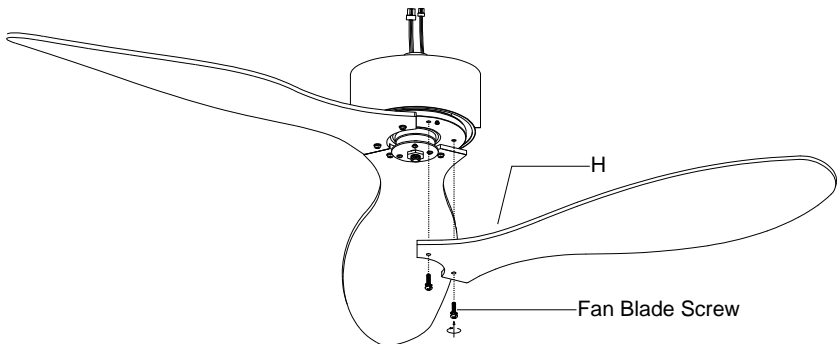


Step 3. Remove the "R" pin and clevis pin from the 5-inch downrod assembly (D).

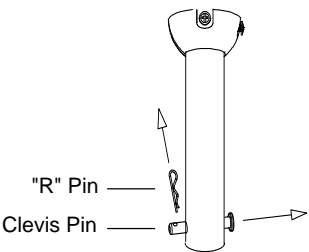


Step 4. Pass the downrod (D/E) through the canopy (C) and coupling cover (F). Loosen the cap on the bottom of canopy (C).


Step 5. Thread the power cord through downrod (D/E).

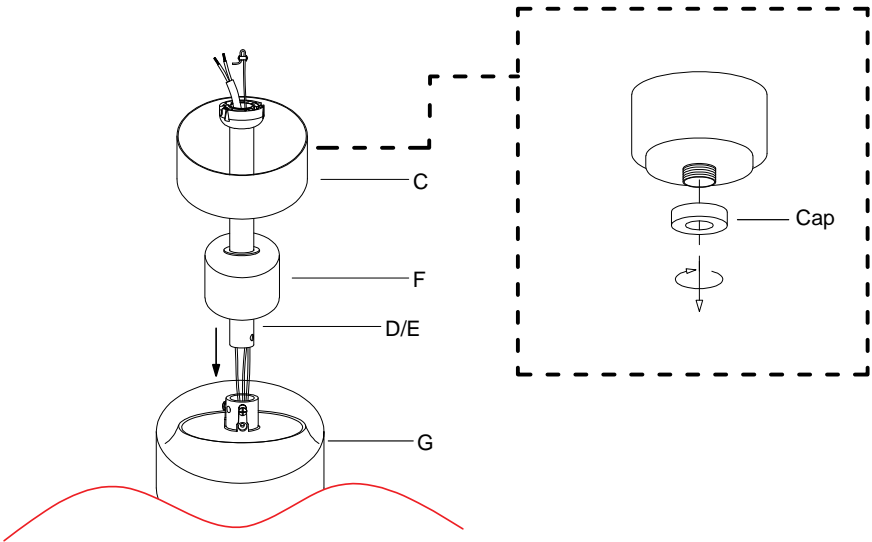

Step 6. Align the hole at the bottom of the downrod with the hole in the fan motor assembly (G). Carefully insert the clevis pin and "R" pin (Be careful not to jam the clevis pin against the wires inside the downrod). Tighten the set screws to secure the downrod.

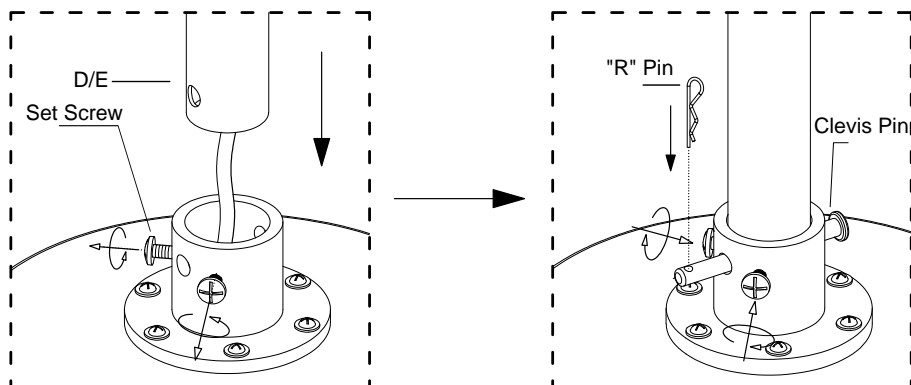


Step 7. Fit the coupling cover (F) onto the fan motor assembly (G).

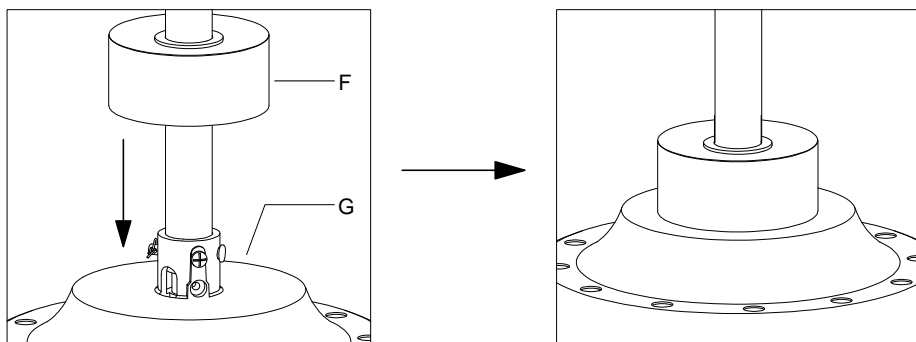


2. Mount the Bracket And Hang the Fan


Step 1. Secure the mounting bracket (A) to the outlet box with screws taken off from outlet box or screws provided (BB). Or mount the mounting bracket to the solid wood structure with wood screws and washer (CC).

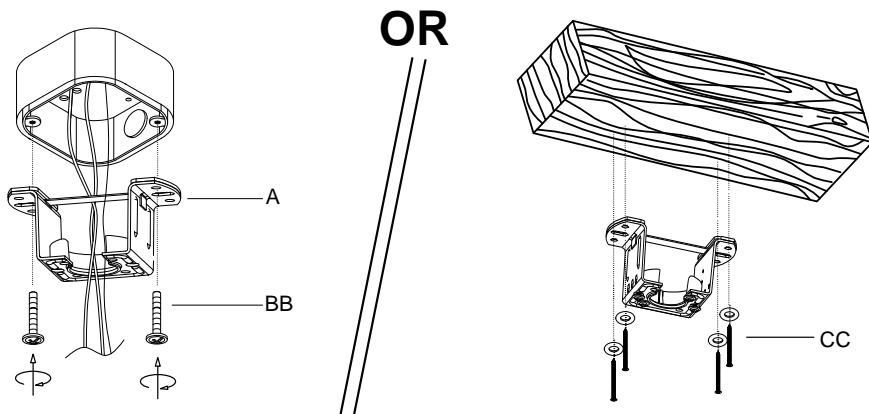

Step 2. Lift the downrod (D/E) into the mounting bracket (A). Rotate the downrod until the tab in the mounting bracket is seated in the groove in the downrod ball.

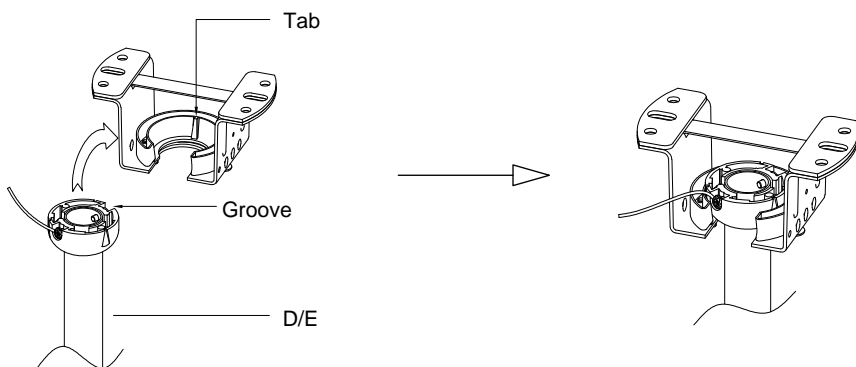


Step 3. Insert the receiver (B) into the gap of mounting bracket (A).

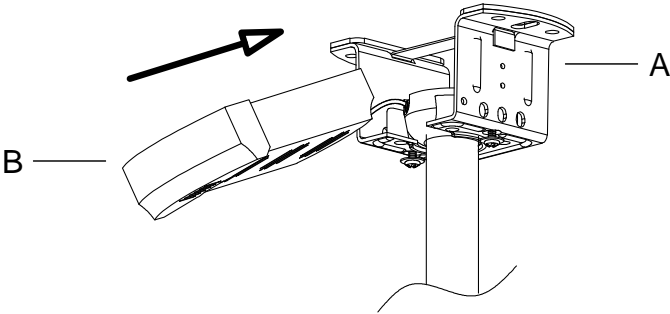


Step 4. Connect the wire terminals between the fan motor assembly and the receiver.

Step 5. Connect the wires from the receiver to the house supply wires with wire nuts (AA), ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire. Wrap the connection with electrical tape.

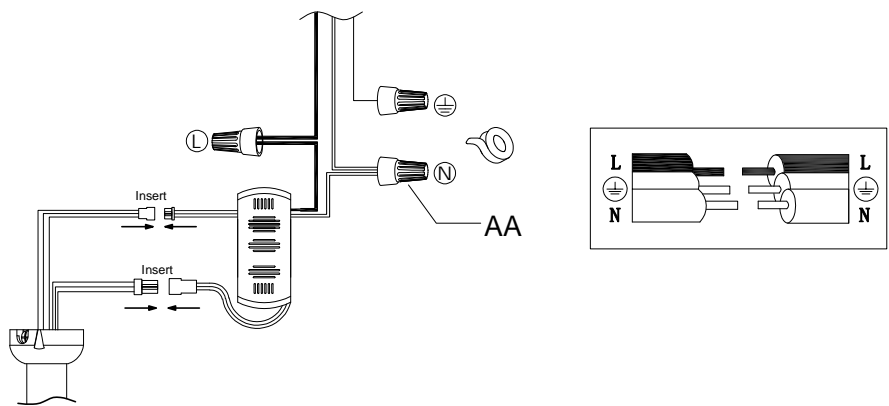


Step 6. Push canopy (C) up to the ceiling, then rotate cap to make it lock onto the canopy.

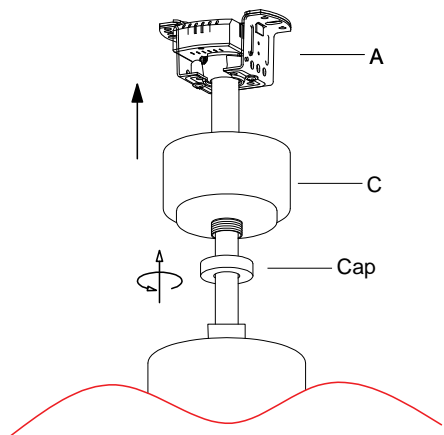


3. Install the Light Kit

Step 1. Loosen the set screws at the bottom of fan motor assembly (G).

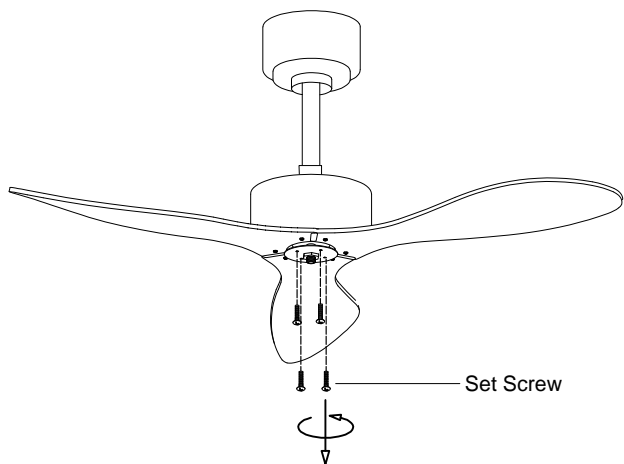


Step 2. Take off the plate on the light kit (I).

Step 3. Attach the plate onto the fan motor assembly, then secure the plate by locking all set screws.

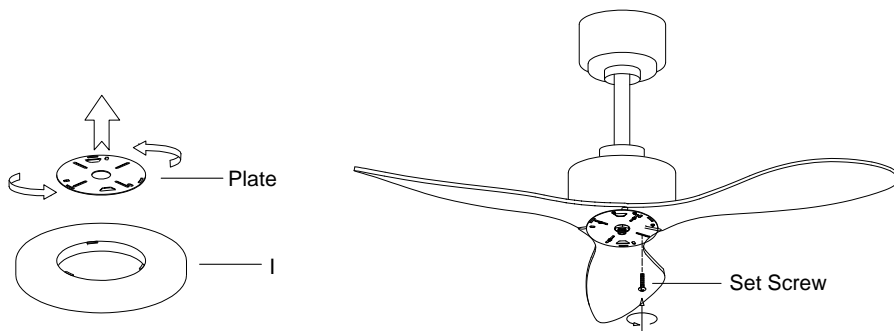

Step 4. Connect the light wire terminal to the interface on the light kit (I).

Step 5. Rotate the light kit (I) to the plate.

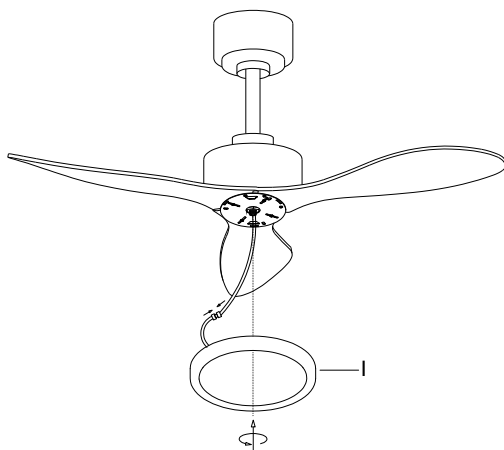



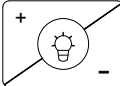
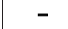

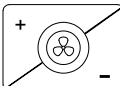
 

Remote Control Instructions

		Turn off fan and light.
		Turn on/off the light.
		Quick switch of the light color: Yellow Light → White Light → Natural Light
		Adjust the brightness of the light.
		Adjust the light color temperature.
		Night mode, lights will be dimmed when press this button.
		Fan speeds 1 through 6.
		Fan moves forwards or reversely.
		Natural Wind Mode: Fan speed automatically adjusts.
		Turn off the fan.
		Timing for 2 hours for the fan.

NOTE:
Please insert 2 batteries before using. AAA 1.5V battery x 2pcs (not included).


REMOTE SIGNAL PAIRING:
If the Wall-Mounted Remote Control loses signal of the fan, press and hold the button at the very beginning after it's turned on from Wall Remote Control. After the fan light flashes or beeps, it's done.

Remote Control Instructions

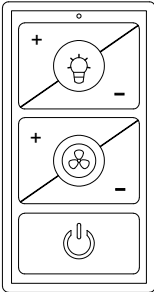		Turn on/off the Light.	
		+	Increase Brightness.
		-	Reduce Brightness.
		Click : Turn on/off the Fan. Long-Click : Fan forward & Fan reverse.	
		+	Increase Fan Speed.
		-	Reduce Fan Speed.
			Turn off the Fan and Light.



NOTE:
Please insert 2 batteries before using. AAA 1.5V battery x 2pcs (not included).

REMOTE SIGNAL PAIRING:

If the Wall-Mounted Remote Control loses signal of the fan, press and hold the button  at the very beginning after it's turned on from Wall Remote Control. After the fan light flashes or beeps, it's done.

APP Control Instructions

Install the "FanLamp Pro" app from Google Play, Apple App Store, or other app stores by scanning the QR code or searching for the app name. Ensure that your phone is connected to the internet and Bluetooth enabled.

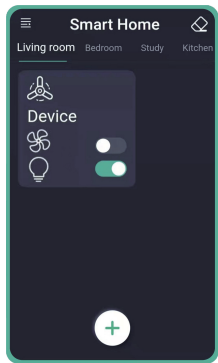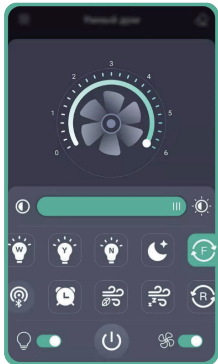

	Pairing: Click the Pair button within 5 seconds after turning on the fan from the wall switch. Once the fan flashes or beeps, it has been successfully paired with your phone and can now be controlled through the app.
	Turn on/off the light.
	Quick switch for "White" light color.
	Quick switch for "Yellow" light color.
	Quick switch for "Natural" light color.
	Night mode: Dim the lights.
	Slide the slider to change the brightness of the light.
	Slide the slider to change the fan speed.
	Fan moves forward.
	Fan moves reversely.
	Change the direction of the wind. (Not supported)
	Timing the fan.
	Natural wind: The fan speed will change automatically when you use this function
	Sleeping wind. (Not supported)
	Turn on/off the fan.
	Unpairing: Click the unpair button within 5 seconds after turning on the fan. Once the fan flashes or beeps, it has been successfully unpaired from your phone.

Trouble Shooting

1. Fan doesn't work

- Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.
- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is on.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

2. Lights Do Not Light Up / Flicker / Noisy Operation

- Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.
- Check your power and switch to make sure it's powered on.

3. Noisy Operation

- Tighten the light fitting and blade bottom cover.
- Re-tighten all screws on the bracket, downrod, and fan blades (do not over tighten).
- Check to see if any of the blades are cracked. If so, replace all of the blades.

4. Remote does not work

- Make sure the battery is installed correctly.
- Pair the remote control again (See Remote Control Instructions).
- Install 2 new batteries.

Clean And Care

To clean, wipe the fixture with a soft cloth. Spraying from chemical cleaners can discolor the finish of the fixture. Do not use scouring pads, powders, steel wool, or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from the place of purchase. Use exact wording from diagrams when ordering parts.