 
 


TV stand

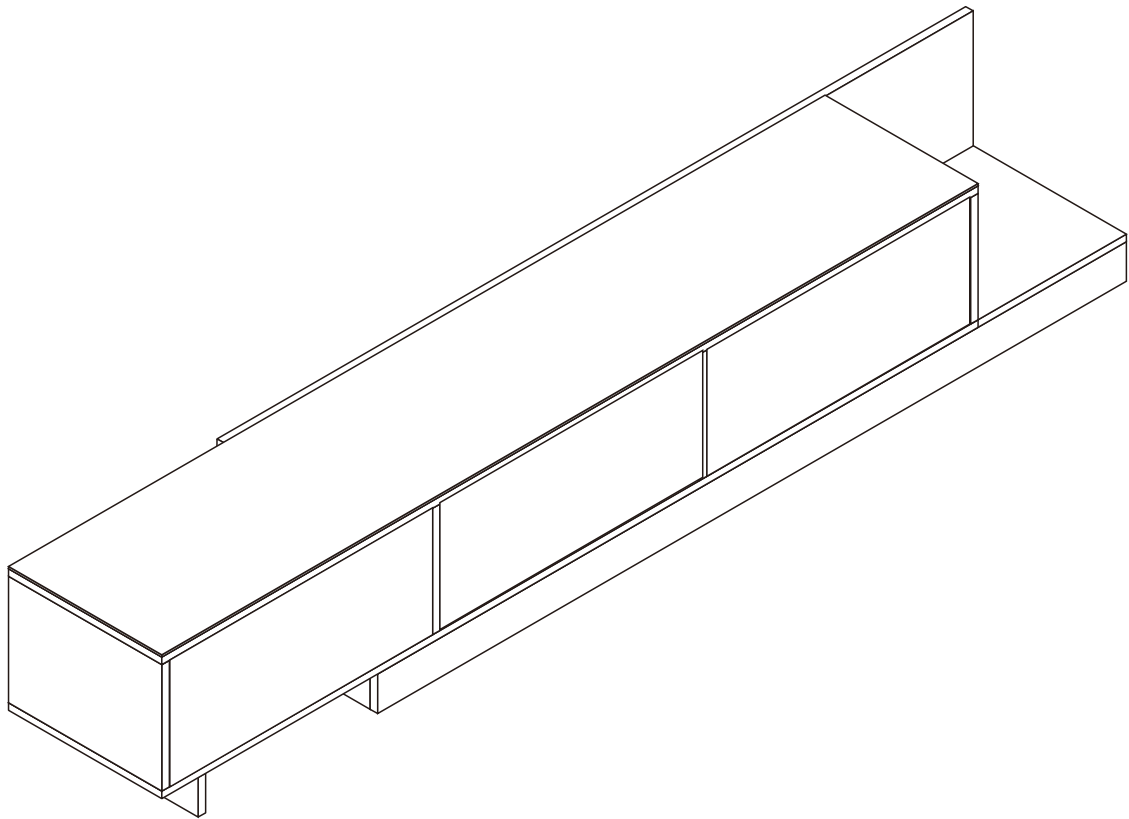 


Left and right interchangeability

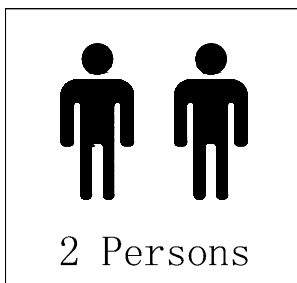


Installation Instructions











Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

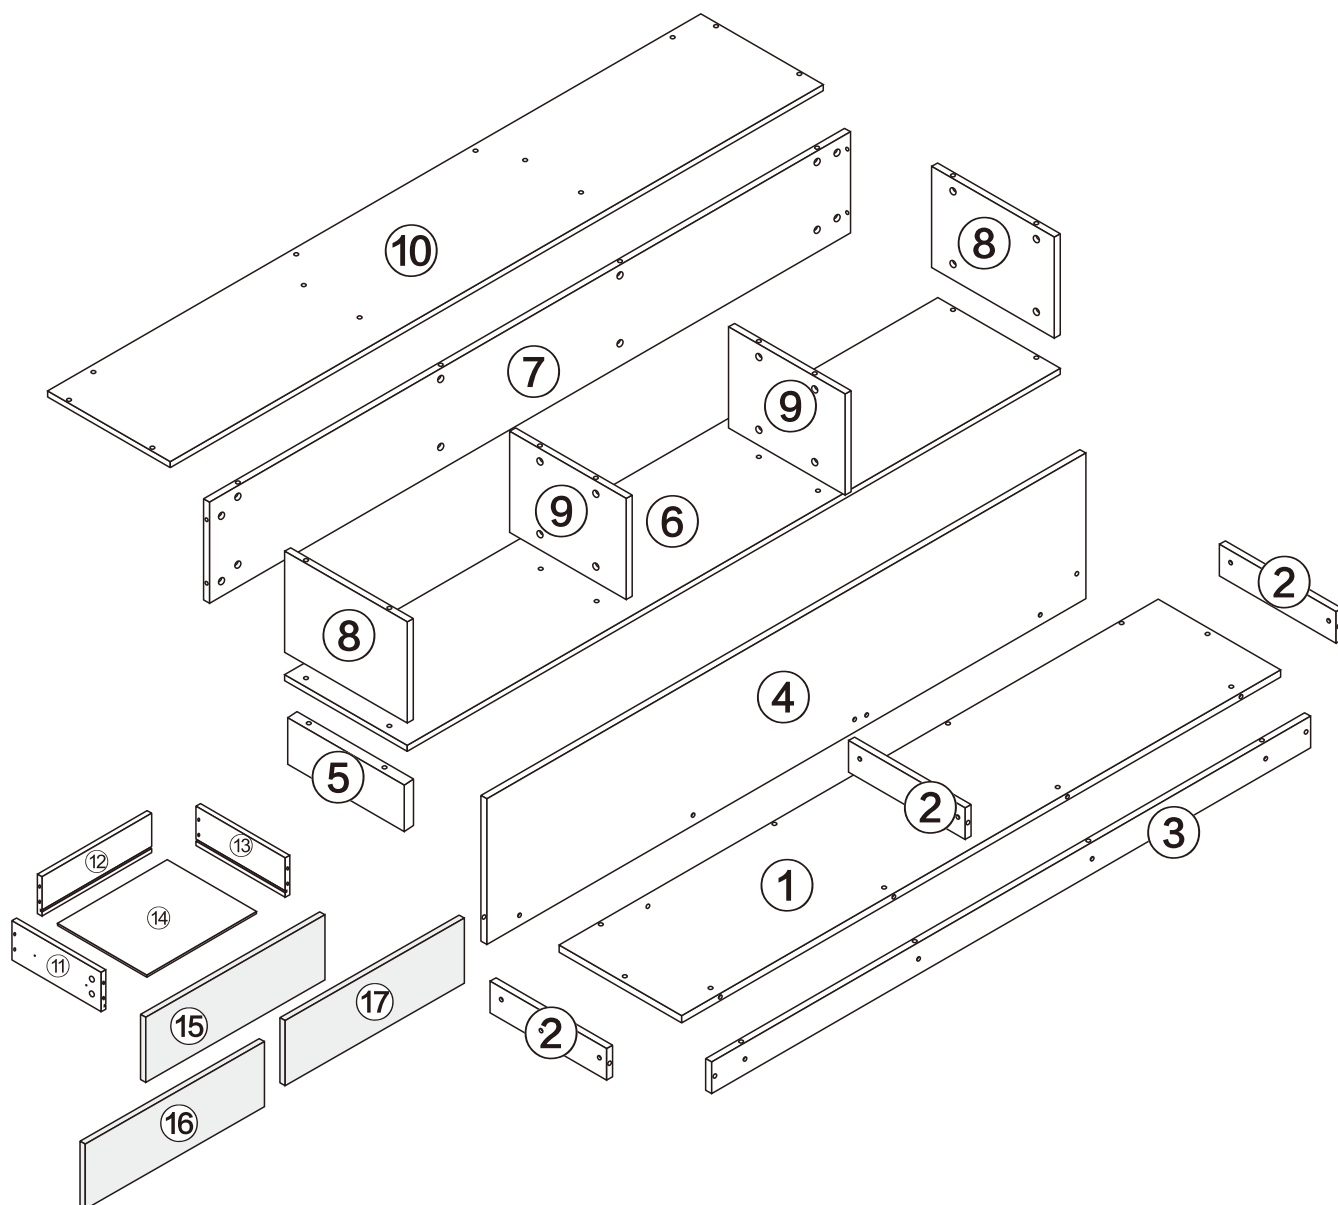

 
Disassembly and installation of accessories

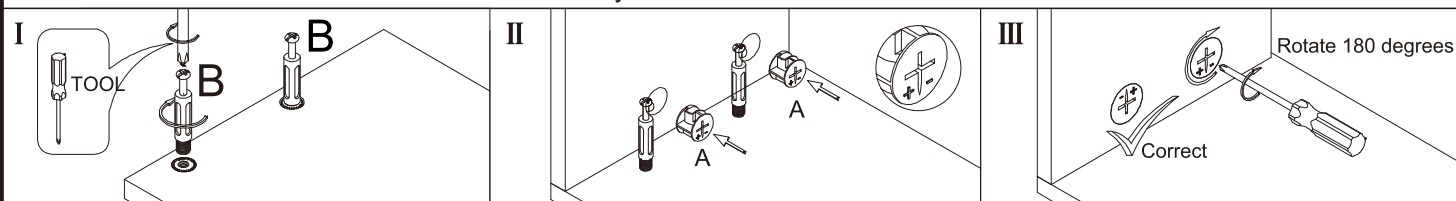

A 57PCS	B 57PCS	C 36PCS	D 3PCS	E 12PCS	F 13PCS	G 2 PCS	
							
15*10mm	6*28mm	3.5*14mm	Three-section Rail	3.5*40mm	15mm	6*30mm	Tools Recommended

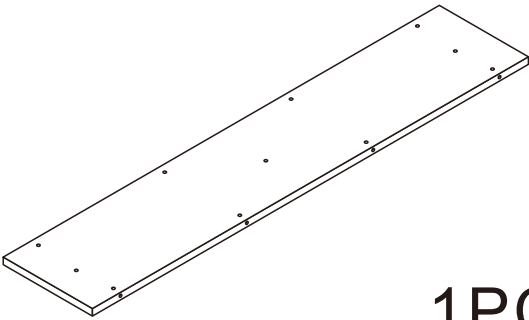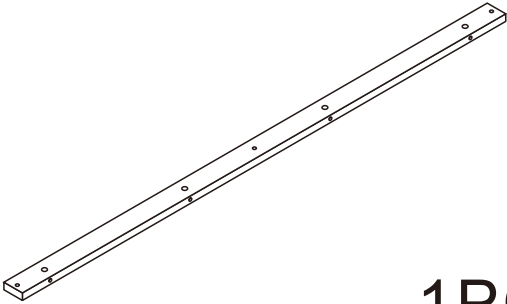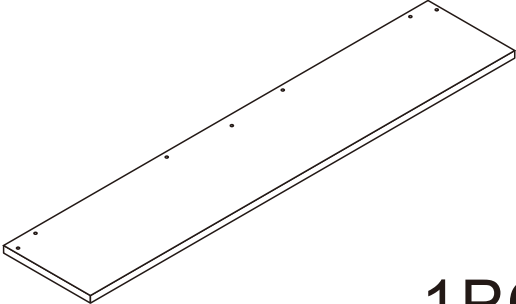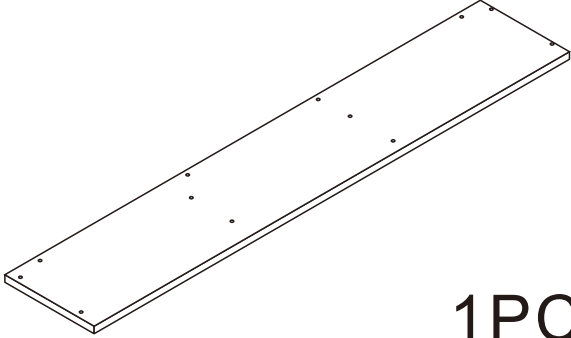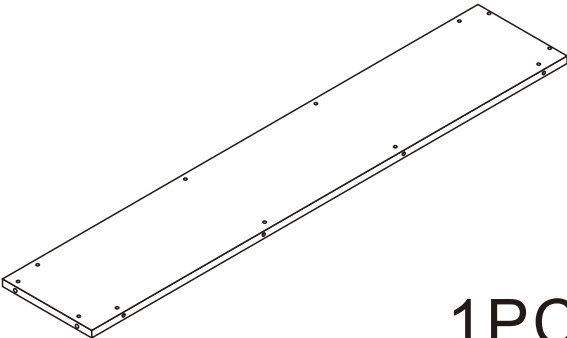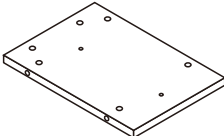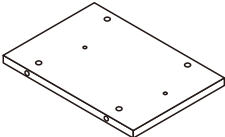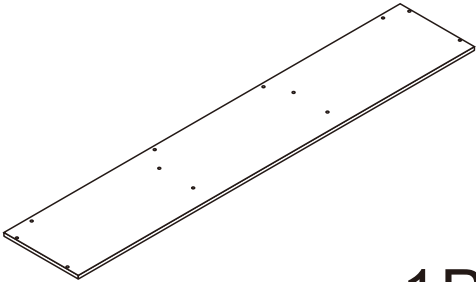          
1  1PCS	2  3PCS
3  1PCS	4  1PCS
5  1PCS	6  1PCS
7  1PCS	8  2PCS
9  2PCS	10  1PCS

 11

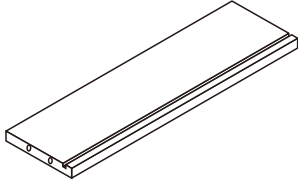


3PCS

 12

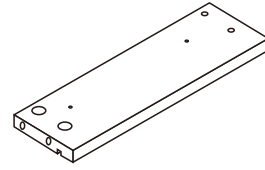


6PCS

 13

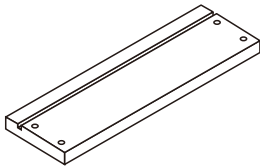


3PCS

 14

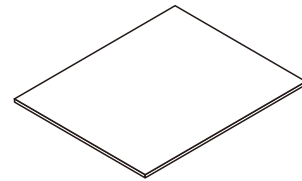


3PCS

 15

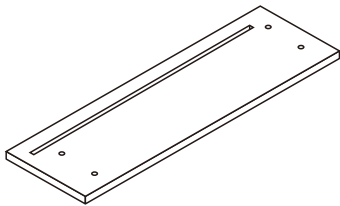


3PCS









 
16

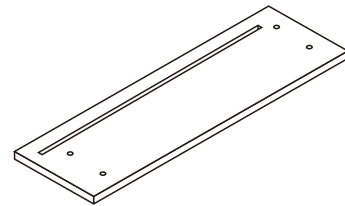

17

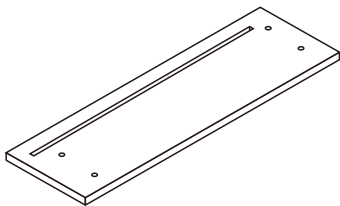 


1

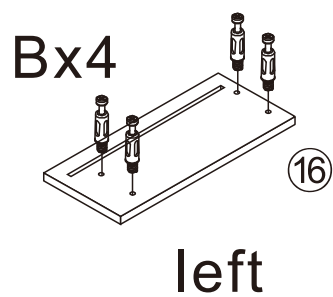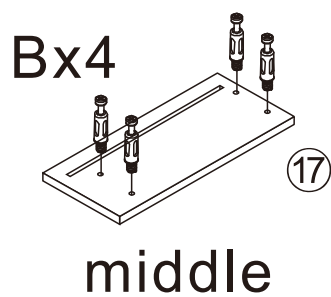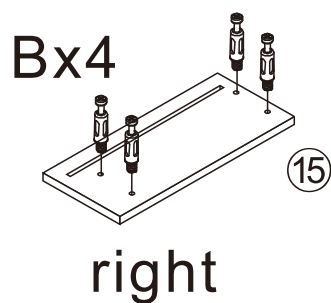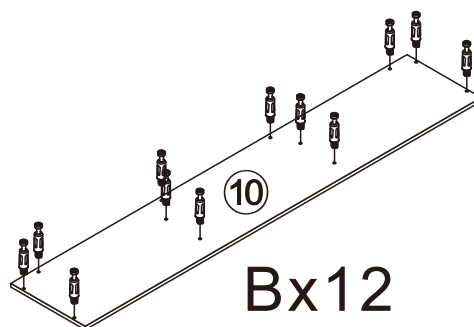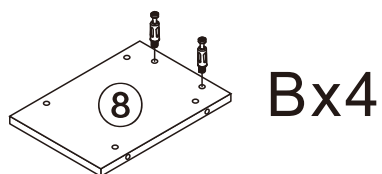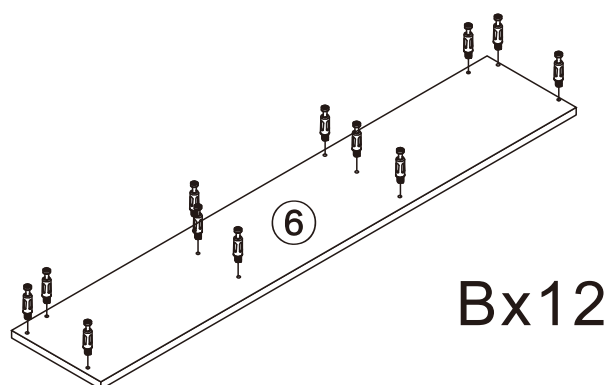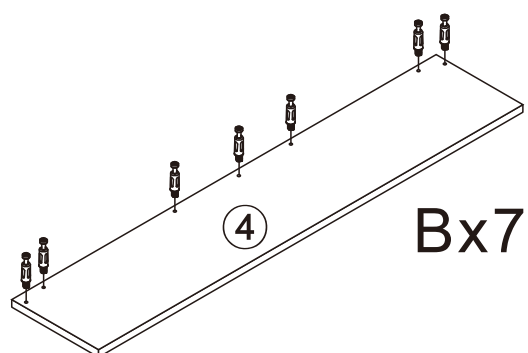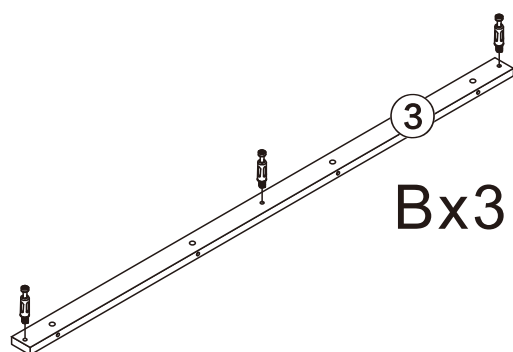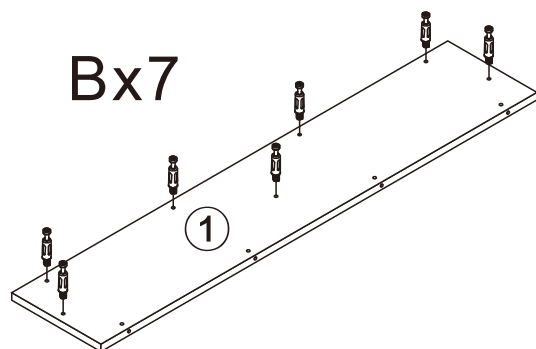         

B	102PCS
6*28mm	


2

 Ax10

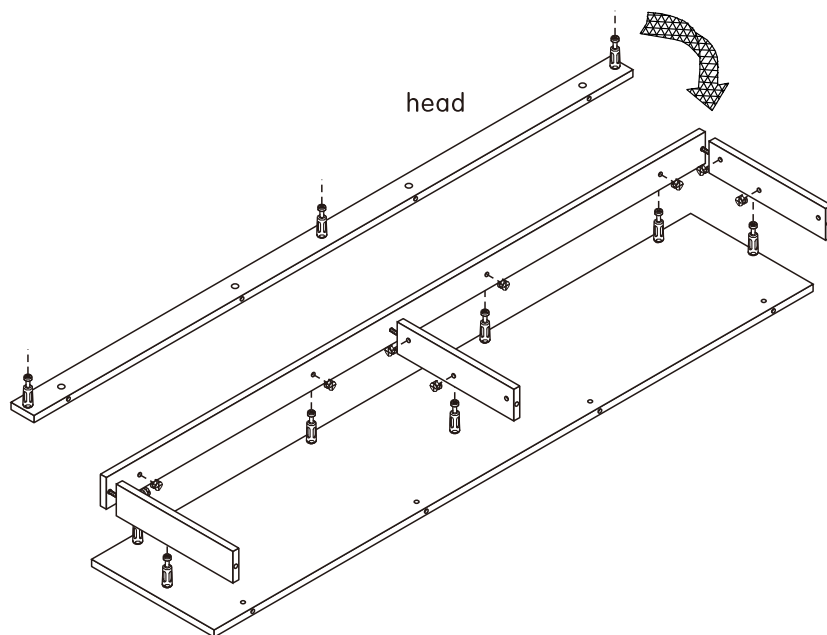

A	10PCS
15*10mm	

 
3

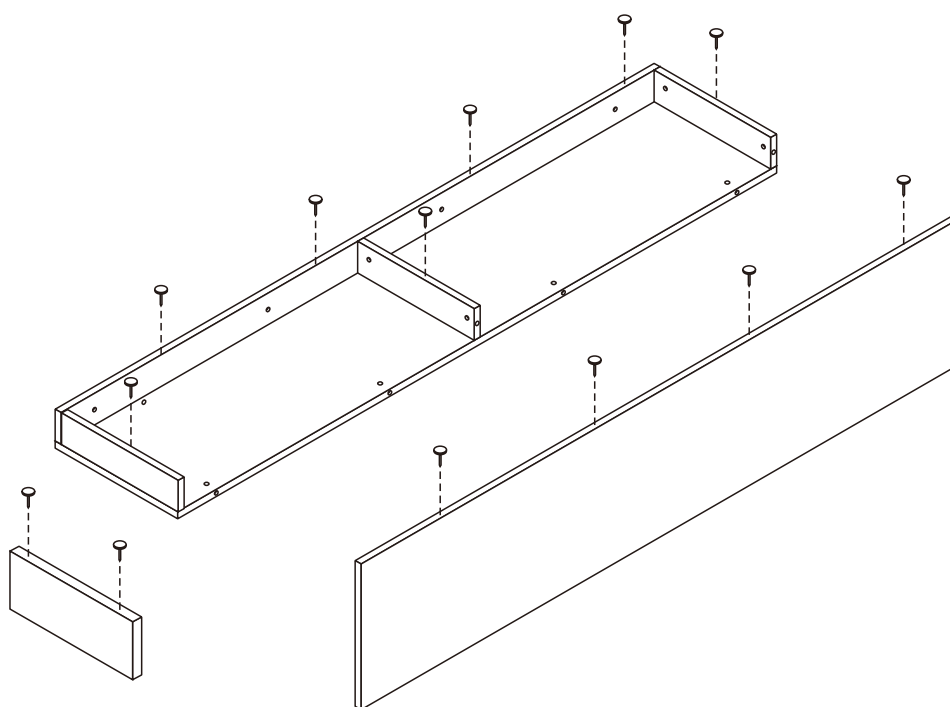

F	13PCS
15mm	


2

 Ax7

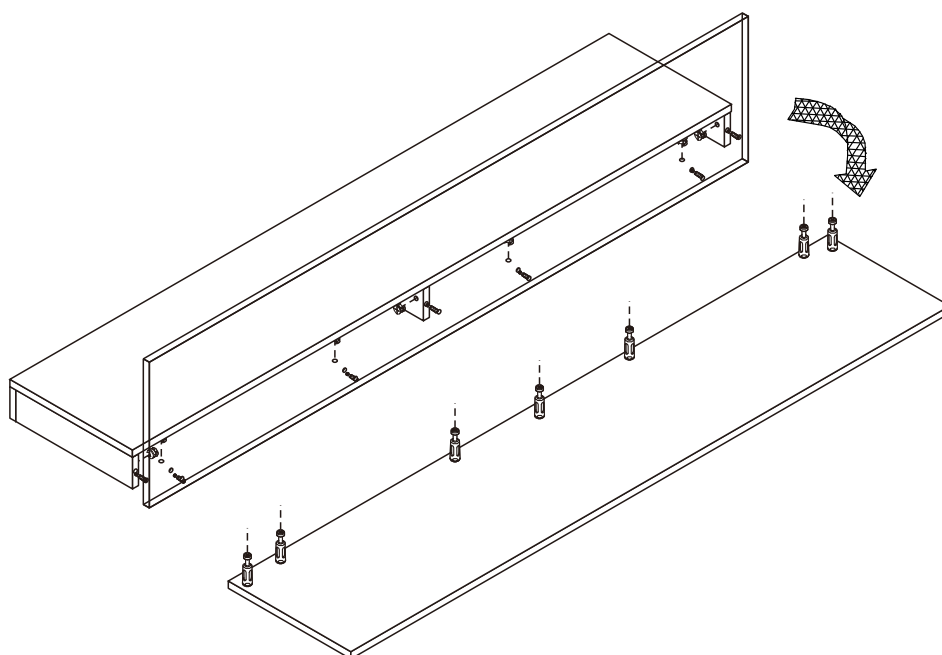


A	7PCS
	
15*10mm	

 3

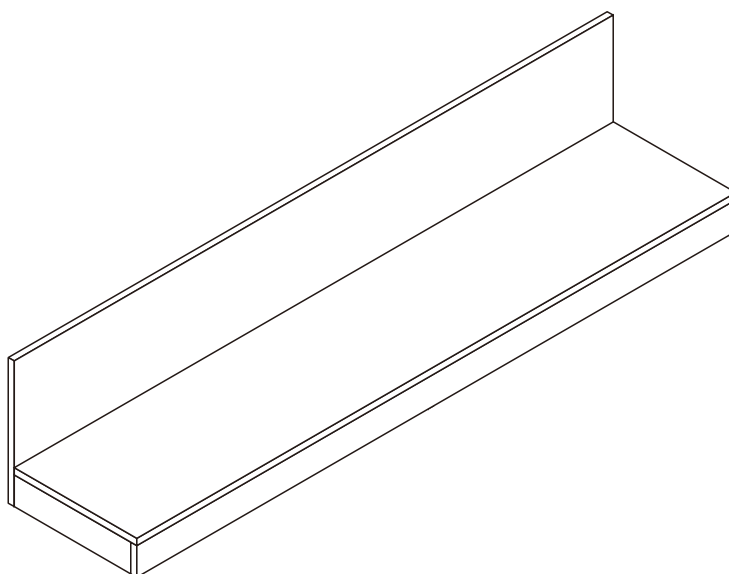

2

 Gx2

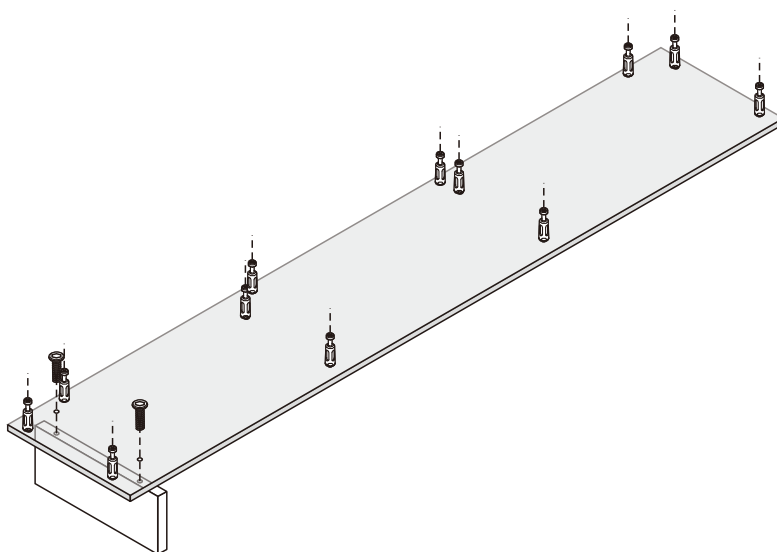


G 2 PCS



4*12mm

3

 Ax4

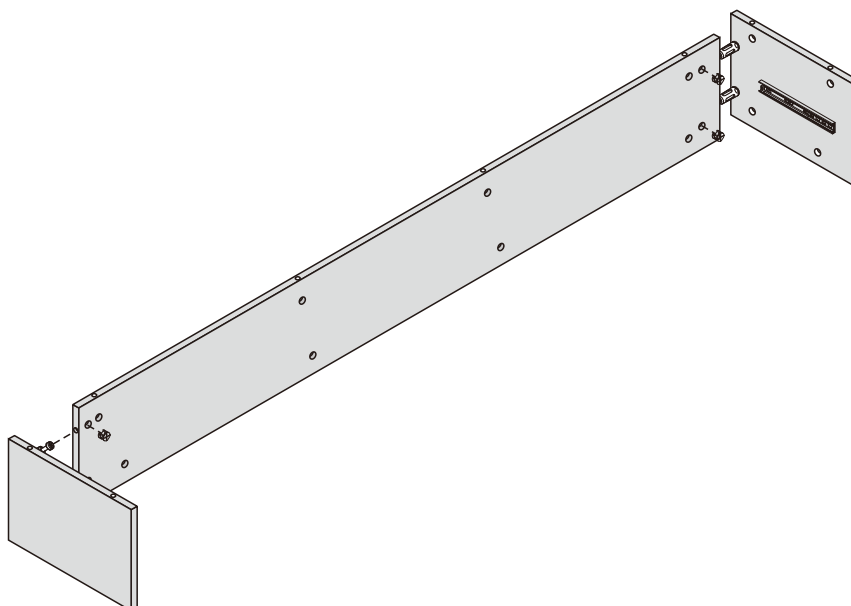


A 4PCS



15*10mm

4

 Dx6

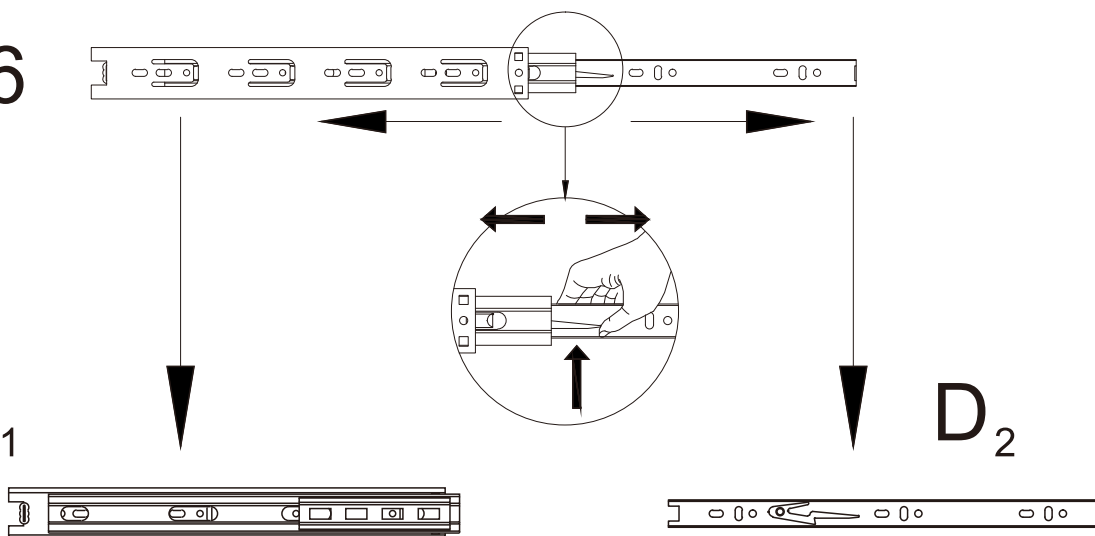
D₁D₂D₁ 6PCS

Three-section Rail

5

D₁x6

 Cx6

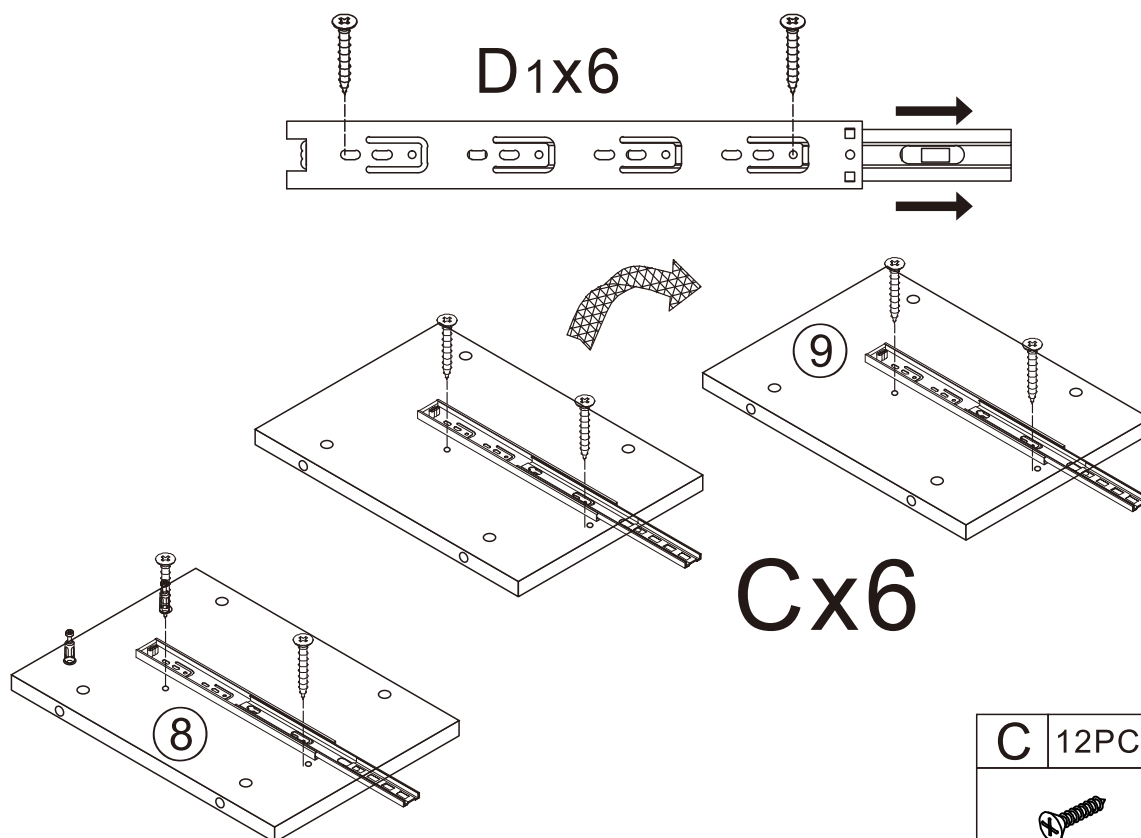

C 12PCS




3.5*14mm

D₁ 6PCS

Three-section Rail

2

 Ax12

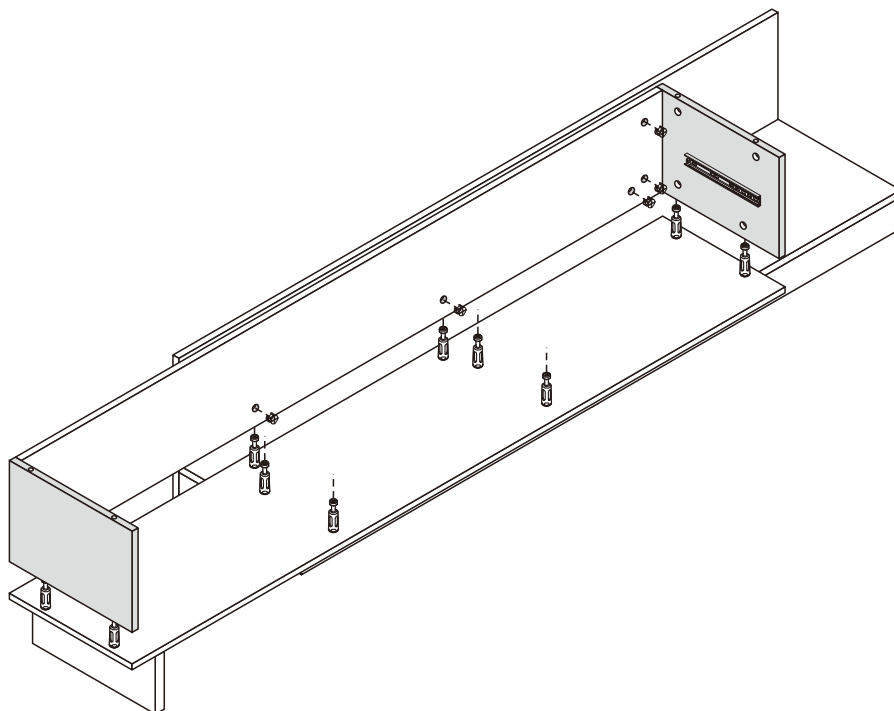


A 12PCS



15*10mm

3

 Ax4

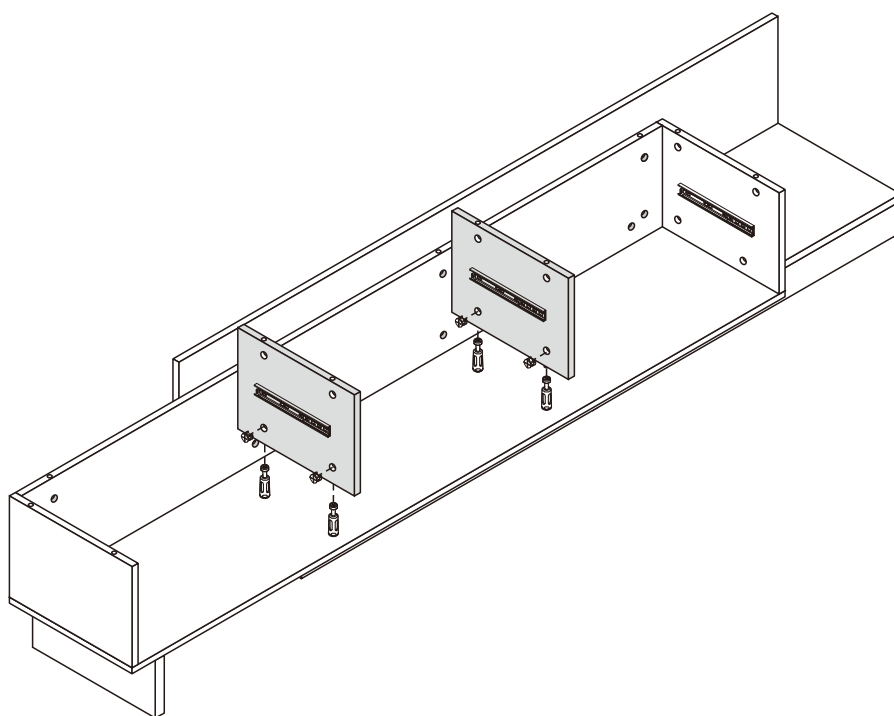


A 4PCS



15*10mm

 2

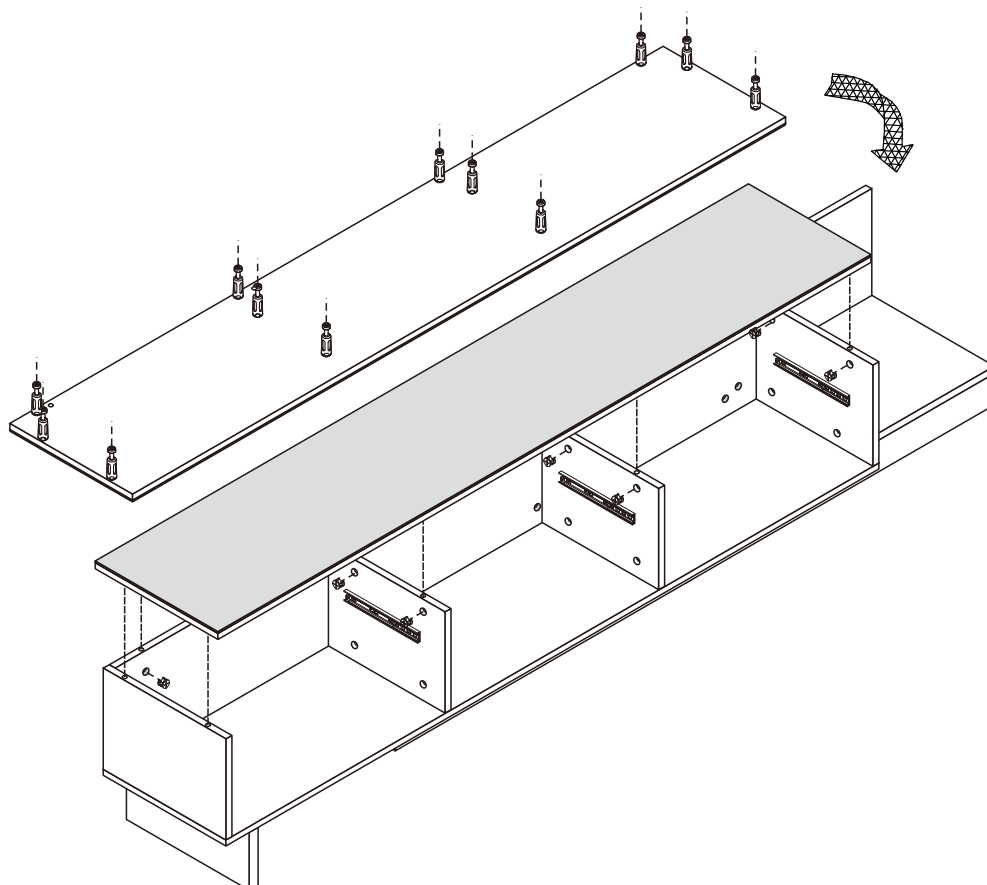


Ax12

A 12PCS



15*10mm

 3


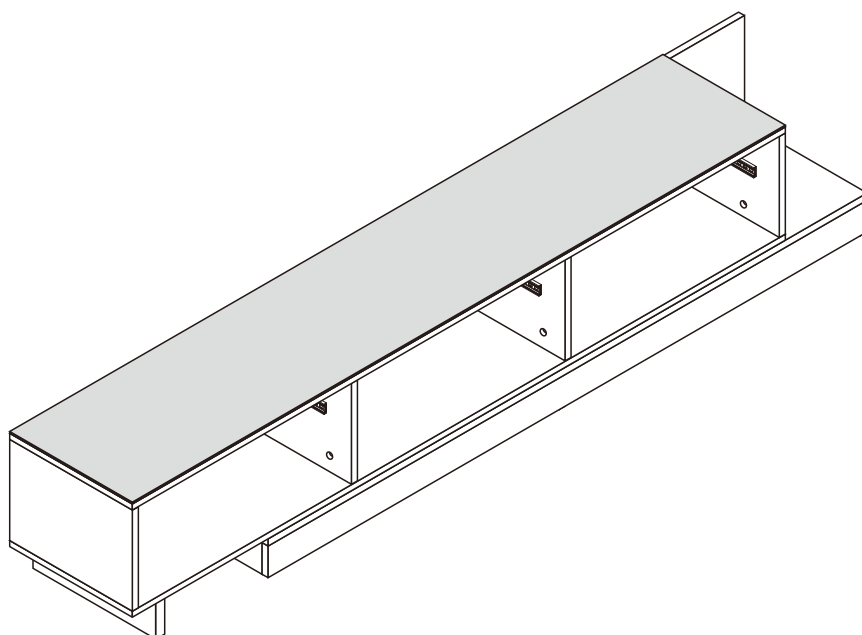


A 20PCS





15*10mm

  14

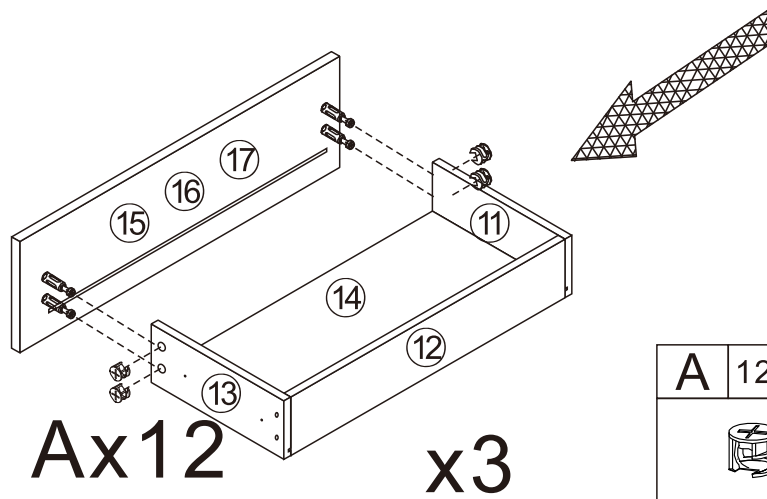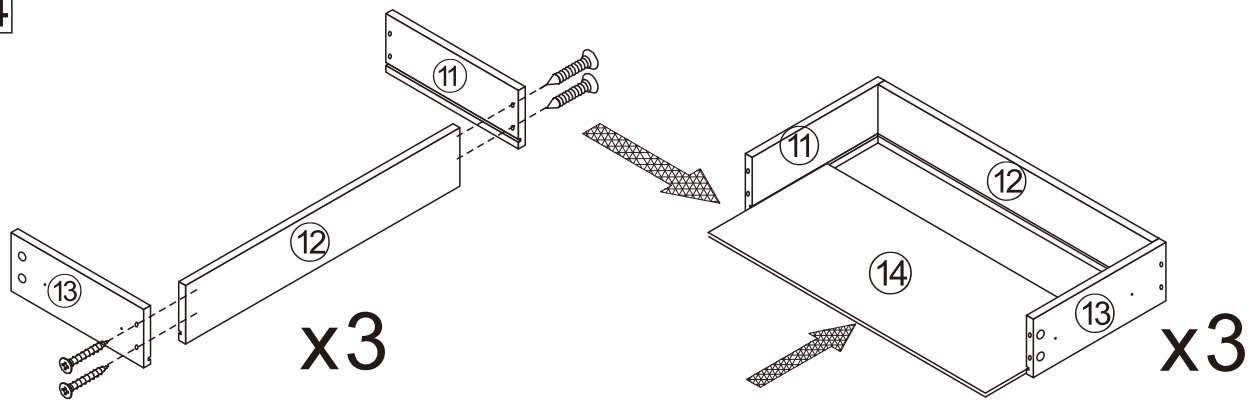


A	12PCS	E	12PCS
15*10mm		3.5*40mm	

  15

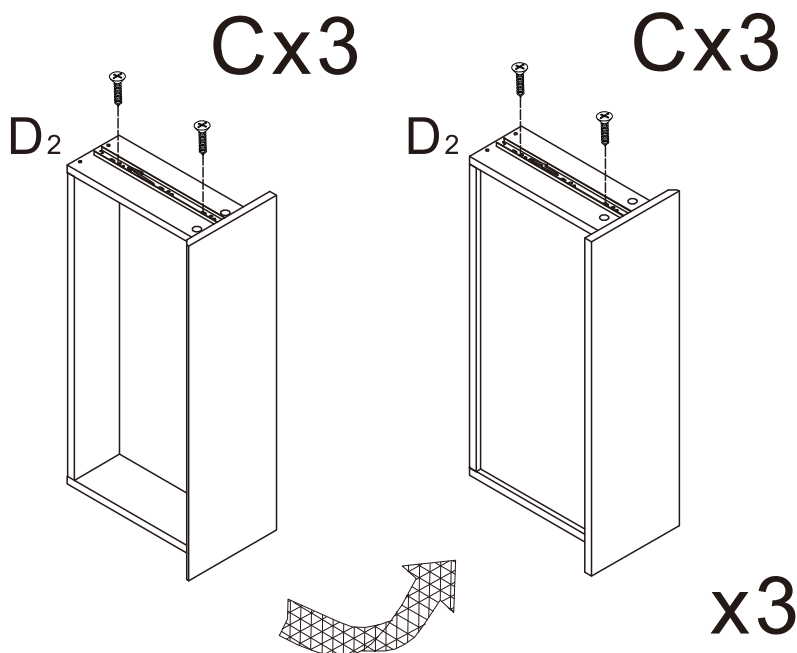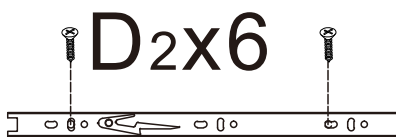


C	12PCS	D ₂	6PCS
3.5*14mm		Three-section Rail	

 16

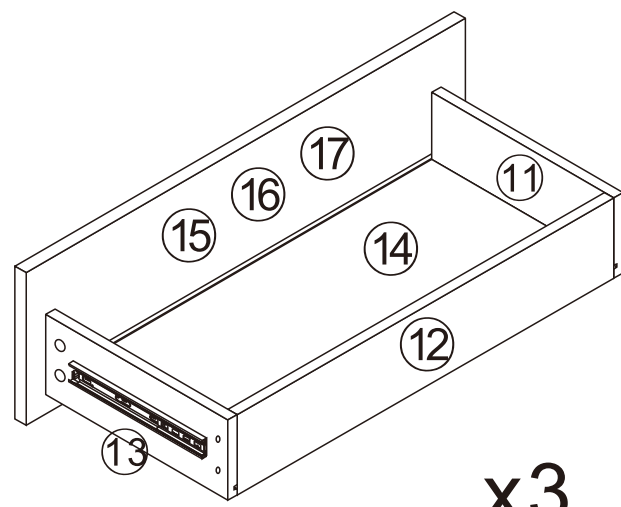

x3

 17

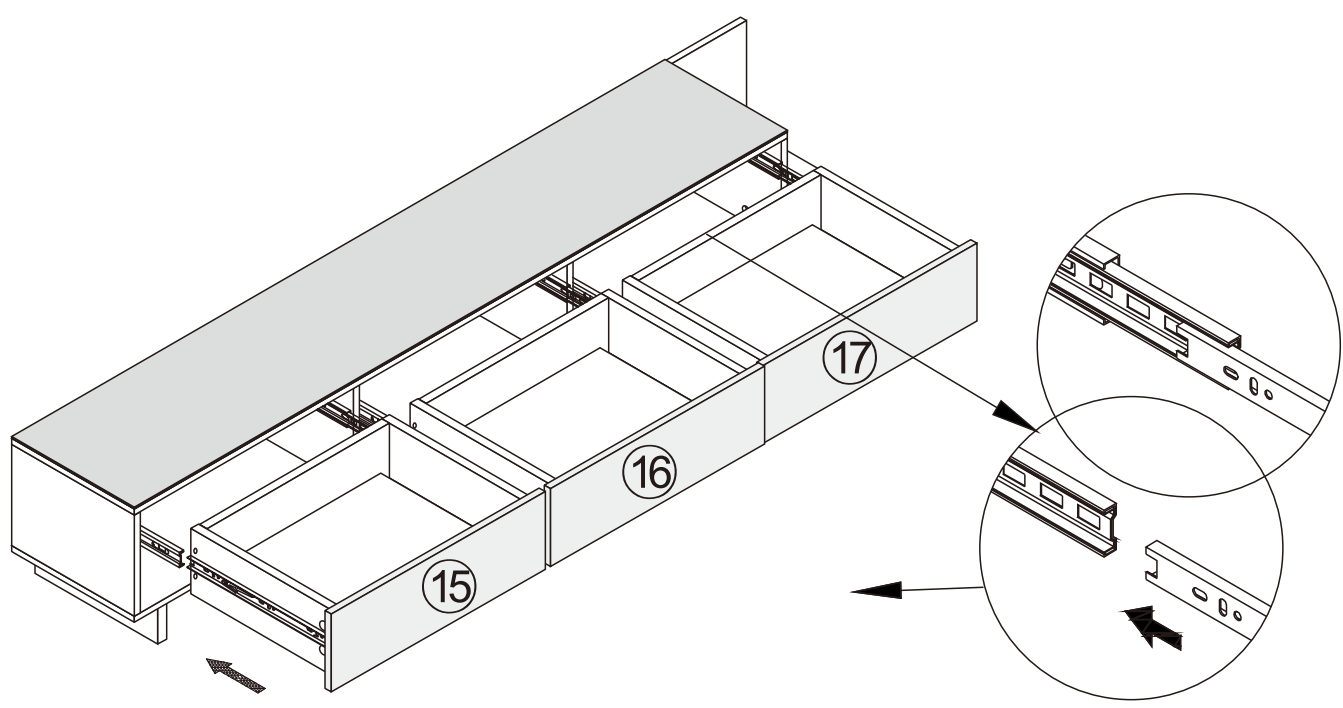

OK