 



910254 Instructions

Desc.		Qty	Desc.		Qty
Head		1	Tail		1
Body		1	Foot		1
Wings		1set	"U" Ground plug rod		2

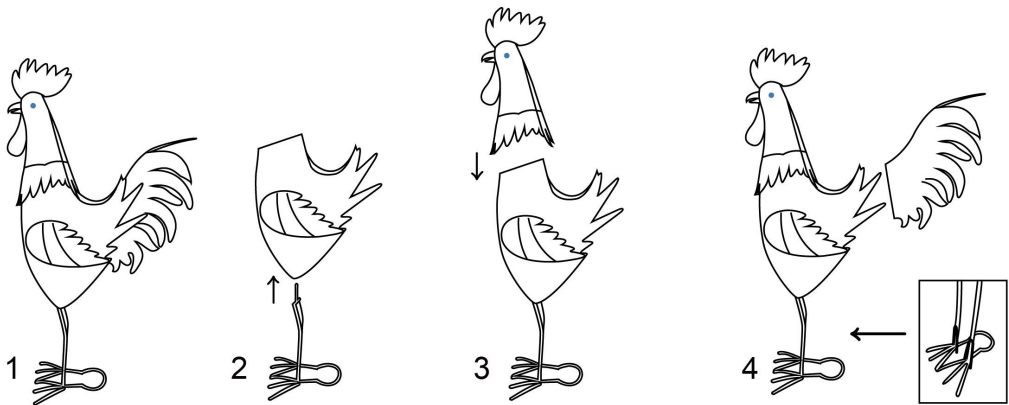

Before you begin assembly and use your product, please read all instructions. This product may contain small parts that may be easily lost or pose a choking hazard if ingested -keep children and pets away from the assembly area. Compare the parts with the parts list and if any part is missing or damaged, do not attempt to assemble. Contact customer service for assistance. Please refer to the customer service page for contact information. Your purchase receipt will be necessary when contacting customer service.

1. Unwrap all packaging materials and make sure you have all the parts listed.
2. Prepare the necessary tools and have plenty of space for assembly.
3. When assembling, tighten all bolts at the end of the assembly process. If tightened before, you may not be able to fully assemble the product.

Warnings:

1. Outdoor use only. Never use in enclosed area.
2. This product should be assembled and used on firm, level ground. If used on unlevel ground, tipping may occur.
3. Do not use this unit on or near combustible surfaces or structures such as wood decks, dry leaves or grass, vinyl or wood siding, etc.
4. Keep away from all combustible materials including gasoline and other flammable liquids and vapors
5. Never use flammable accelerants, such as: gasoline, alcohol, paint thinners, kerosene, etc. to start a fire. Serious injury or property damage could result.
6. Screen lifting tool may become hot when in use. Wearing protective gloves is recommended when handling hot metal screen and lift tool
7. Avoid using during dry and windy conditions. Contact local authorities regarding possible burn restrictions in your area.
8. Never leave unattended while hot or in use. Completely extinguish fire before leaving. Ashes can remain hot for an extended period of time after fire is extinguished. Dispose of cold ashes properly.
9. Do not overfill or use to burn leaves or trash.
10. Check all screws and/or bolts regularly to ensure they are tight and secure. It is recommended to check screws and/or bolts monthly. Do not use product if parts are missing, damaged or worn.
11. It is recommended to move and place in a protected area when not in use, especially during wind or rain events.
12. Manufacturer is not responsible for weather related damages due to winds and adverse weather conditions.
- 13.

Care Instructions:

1. Clean with water and mild detergent.
2. Do not use abrasive detergents or pads to clean as they can damage the product.
3. Store product in a cool dry place during bad weather and during winter months. Before storage, ensure frame and seats are clean and dry.
4. As with any outdoor grill, periodic maintenance is recommended to return painted steel surface to original appearance. Remove any rust with sandpaper or steel brush and repaint with grill paint suitable for high temperature surfaces. Follow manufacturer's instructions.
5. The frames are manufactured using a powder coated steel tubing. When steel is exposed to air and moisture it will rust. Touch up any scratches with touch up paint to prevent further exposure and rusting.



Customers and Stores - Please help us give you the best possible service by emailing your parts and service needs to: **customerservice@ddicorp.com**

Emails are responded to quickly and are the fastest and most accurate way to communicate item/parts needs.

PLEASE KEEP ORIGINAL RECEIPT AND INSTRUCTION MANUAL for possible future reference. **Original receipt is required for any warranty claims**

In addition to your purchase receipt please include the following information in your email:

Item Name	63" Metal Colorful Rooster
Item Code /UPC Code (Begins with 6-81129-)	68112910254
Specific Issue	
Part Needed — Please Identify from Assembly Instructions	
Your Shipping Address	

Parts and parts listings for many of our products can be found at:
<https://backyard-expressions.com/collections/replacement-parts>

PRODUCT WARRANTY SHALL NOT APPLY TO ANY PRODUCT OR ANY PART THEREOF, WHICH HAS BEEN SUBJECT TO ACCIDENT, NEGLIGENCE, WEATHER RELATED DAMAGE, ALTERATION, ABUSE, OR MISUSE OR TO PRODUCT SOLD AS-IS, END OF SEASON, OPEN BOX OR OTHER SUBSTANTIALLY DISCOUNTED PRODUCT. DDI MAKES NO WARRANTY WHATSOEVER IN RESPECT TO ACCESSORIES OR PARTS NOT SUPPLIED BY US.

DDI IS NOT RESPONSIBLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHICH MAY ARISE OUT OF THE PURCHASE OR USE OF ANY DDI PRODUCT. PRODUCT LIABILITY FOR ANY BREACH OF THIS WARRANTY SHALL BE AT THE DISCRETION OF DDI AND LIMITED TO REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT.

WARRANTY CLAIMS RECEIVED 90 DAYS AFTER PURCHASE DATE (RECEIPT REQUIRED) MAY BE SUBJECT TO ADDITIONAL COSTS AND ARE ASSESSED BY THE WARRANTY CLAIM DEPARTMENT.

If you prefer you may also leave a message or send a text to **1-612-888-7550**
Your message will be responded to during normal weekday business hours in the order received.