

## Model No.s

9281 or 9879

## Specifications

- Center Height - 90 inches
- Footprint - 94 total square ft.
- Hub-to-Hub - 140x140 inches
- Weight - 34 lbs.



p/n's 109281  
and 109879

Instruction No. 104665

## - Clam Customer Service Information -

**NOTICE:** Please contact Customer Service directly at the email address or phone number below for any quality issues.

- Customer Service Hrs: 9am to 4pm, Monday – Friday CST
- Phone: 763-231-4120
- Fax: 763-231-4121
- Email: [customerservice@clamcorp.com](mailto:customerservice@clamcorp.com)

**\*\* Warranty cannot be honored without an original, dated receipt \*\***

### **IMPORTANT! PLEASE READ: Warranty Information**

This product is warranted to the original retail purchaser (not transferable) to be free from manufacturers defects for one (1) year from the date of the original purchase. Warranty does not cover screen tears, tent tears, or broken or bent poles due to high wind weather conditions or unattended use. The part will be replaced or repaired (manufacturer's option) if found defective within the one (1) year time frame. Warranty will be void if product has been subject to neglect, misuse, improper installation, misapplication, alteration, or accident including, but not limited to, improper maintenance or use of unauthorized parts or attachments. Please read this entire owner's manual to ensure proper installation, use, storage, and care for your Clam shelter.

**To submit a Warranty Claim Request, please use one of the following methods:**

- Email: [CustomerService@ClamCorp.com](mailto:CustomerService@ClamCorp.com) (Preferred Method)
- Call: 763-231-4120
- Write: Customer Service – Warranty Department  
12135 Brockton Lane N.  
Rogers, MN 55369

**Information needed to submit a warranty claim:** If you need to submit a warranty claim, please e-mail Clam's Customer Service Department at [customerservice@clamcorp.com](mailto:customerservice@clamcorp.com). In your e-mail, please include your full name, address, phone number, a copy of your receipt, a brief description of the problem, and pictures to clearly show the area(s) of concern. Clam's warranty department will review your request and a Clam representative will contact you regarding your claim status. If instructed by warranty department, all returns must be returned with postage pre-paid.

## - Limitation of Liability -

*It is expressly understood that Clam Corporation's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product as stated above. Clam Corporation is not liable for any injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Clam Corporation products. Clam Corporation reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. Clam shall not be obligated to make such alterations or modifications to products already in service.*

## SAFETY INSTRUCTIONS

Please fully understand and follow all safety instructions outlined in this booklet. Failure to do so could result in severe injury.

- Do not use open flame heaters in your screen tent.
- Tent fabric will melt when contact is made with hot surfaces (i.e., heaters).
- Use external tie-downs and stakes during excessive wind conditions(15+mph)



## WARNING

Injury or death may result from fire if tent fabric is exposed to open flame.

Tent fabric is not fireproof. Fabric will burn with extended exposure to open flame. Do not use open flame products inside tent. Tent fabric is treated with fire retardant. Application of any foreign substance may render the flame retardant properties ineffective.

This tent is made with flame resistant fabric which meets CPAI-84 specifications.

## PARTS LIST

	<u>ITEM #</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>PART NO.</u>
	1	HUB ASSY - Walls	6	103507
	2	HUB ASSY - Roof	1	103750
Customer service hours:	3	STAKE, SCREEN HUB	7	103802
9am – 4pm, (CST) Monday-	4	TIE DOWN ROPE	5	102458
Friday.	5	HUB & POLE KIT WALLS (4 POLES & 1 HUB)	6	109077
customerservice@clamcorp.com	6	HUB & POLE KIT ROOF (6 POLES & 1 HUB)	1	109221
	7	CARRY BAG	1	103801
	9	INSTRUCTIONS/OWNER'S MANUAL	1	103803

Replacement parts can be ordered on-line at [www.clamcorp.com](http://www.clamcorp.com).

## SET-UP INSTRUCTIONS

**BEFORE ATTEMPTING TO USE THIS PRODUCT** go to [www.clamcorp.com](http://www.clamcorp.com), click on your shelter model, and watch the set-up video provided. Then practice setting up and taking down at home in an area such as a garage or basement. Repeat several times until comfortable. This will make your set-up much easier.

**NO TOOLS ARE NEEDED FOR SET-UP OF YOUR CLAM SCREEN TENT.**

**NOTE:** When setting up your shelter, poles should be on the inside of the tent. Only pull outward on the hub pulls (loops) on the exterior of the tent.

1. Unzip the storage bag completely and remove the shelter. Use care not to misplace the stake & rope pouch. It is advised to store your stakes, ropes, and pouch in your carry bag until they're needed.

# SET-UP INSTRUCTIONS

2. It is advised to have at least two people to set up a Clam Six Pack screen tent.

Open the screen tent so that one wall is facing upward. Make sure that the tent is not twisted or overlapping any of the poles. Do NOT force the screen tent while unfolding.

3. Grasp the loop onto the eyelet in the center of one of the wall panels. Pull upward and outward on the loop until the wall section pops up.

Step 3



Step 4

4. Walk around the entire screen tent and pull each loop sewn onto the eyelet in the center of the wall until all sides are popped out (5x).



Step 5

5. Have a person hold down the shelter while a second person goes inside the shelter and pushes the ceiling hub straight up so the ceiling pops up.



## SET-UP INSTRUCTIONS

6. Secure the vertical rods on either side of the screen tent's door. Remove rods from Velcro retaining loop on either side of the door. When free, install one end of the rod into the other's end to make one long rod. Once the rod has been assembled, place the bottom of the rod in the pocket or sleeve located at the bottom of the panel directly below where the rods are mounted. Once the rod is installed into the pocket, secure the rod with the Velcro loop just above waist level on the panel(2x).



7. Install securing stakes on the interior of the screen tent.

In each corner of the inside of the screen tent's panels there is an eyelet. Place the tip of a stake inside the eyelet and step down on it driving it into the ground so that the hook catches the eyelet and holds the tent in place(6x). On windy days, secure the outside of the tent by tying one of the tie strings on each of the pull loops on each panel, then pull snug and attaching it to a stake by making a loop in the cinch clip that the stake hook will catch, and then drive the stake into the ground approximately 3 to 4 feet from the outside wall.



# TAKE-DOWN INSTRUCTIONS

1. Remove all stakes from interior and exterior of the screen tent(11x).

2. Remove vertical door support rods from pockets at the bottom of the panel, pull apart, and refasten them to storage positions located diagonally on the panels immediately next to each side of the door with Velcro straps(2x).

Step 2



3. Pull down on top hub loop (on the inside of the tent), causing it to relax.

4. Push in on all side panels until screen tent is fully collapsed and laying flat on the ground.

Step 4



5. Once shelter is laying flat on ground, carefully lift and insert into the carry bag-paying attention not to twist or distort flex rods and fabric while inserting into bag. Place stakes into their bag and put the stake bag into the carry bag as well.

## - Safety Instructions -

***Please fully understand and follow all safety instructions as outlined. Failure to do so could result in severe injury or death.***

- ***Do not use open flame heaters in your screen tent. Injury or death may result from fire if tent fabric is exposed to open flame. The tent is not fireproof, but the fabric is treated with a fire retardant that meets CPAI-84 specifications. Application of any foreign substance may render the flame retardant properties ineffective. Fabric will melt when contact is made with hot surfaces (i.e., heaters).***

### **WARNING**

Injury or death may result from fire if tent fabric is exposed to open flame.

Tent fabric is not fireproof. Fabric will burn with extended exposure to open flame. Do not use open flame products inside tent. Tent fabric is treated with fire retardant. Application of any foreign substance may render the flame retardant properties ineffective.

Night time: exterior reflectors must be visible to reduce risk of collisions.

This tent is made with flame resistant fabric which meets CPAI-84 specifications.

***\*For replacement parts, frequently asked questions, shelter information, videos, and all of your ice fishing or screen tent needs visit our web site at [www.clamcorp.com](http://www.clamcorp.com).***

## FREQUENTLY ASKED QUESTIONS

Q: How do I set-up my hub shelter/screen tent?

A: Go to [www.clamcorp.com](http://www.clamcorp.com) to watch an instructional video on the proper & simplest way to set-up and take-down a hub style shelter/screen tent.

Q: Is there anything can be put on outside of the tent to prevent water from coming through, when we are using it? A: Customers have been known to spray or apply water repellent on the outside of the shelter that you would use for camping tents or boots. (Camp Dry would be an example of this type of product). These products will not damage your tent in anyway.

Q: What will help keep mice or rodents from eating my Clam screen tent?

A: Some of our customers have had success with the following ways to keep mice out.

- Keep your tent in a sealed plastic tote with DRYER SHEETS and or MOTH BALLS

Q: The zipper on my tent freezes up and or sticks; is there anything I can use to help prevent this from happening?

A: Yes, there are a couple of zipper lubricants out there that our customers and pro staff have had good luck with.

- Zipper Lube - A gel that you can apply just by squeezing it onto the zipper and moving the zipper back and forth. This brand can be found in the camping section of most sporting goods store.
- Silicone spray may also be used as well.

Q: Would it be best to completely dry my screen tent for storage if it gets wet?

A: It is recommended to dry your tent out completely, if not dried completely moisture may cause damage to your tent.

Q: How do I wash my screen tent?

A: You can use a bleach and water solution (10 parts water to 1 part bleach) to get rid of the mildew smell. If you want to wash the tent you can use a standard soap to wash it.

\*\*\* Please note - We **do not** recommend placing your shelter canvas/tent into a washing machine for cleaning.

Q: Am I able to order parts and accessories from your website?

A: Absolutely, if you would like to order parts you can go to [www.clamcorp.com](http://www.clamcorp.com) under “Resources” “Parts”

Q: Although this shelter has already been treated for waterproofing, is there anything I can do to make it more water repellent?

A: Yes. Even though the roof seams have been stitched with waterproof taping, you can treat the roof with a coating of 3M Scotchguard spray or treat the seams and Velcro loops for the roof poles’ stitching with Seam Grip.

**Due to Clam’s continued product development, Clam reserves the right to change specifications without notice. For complete details, see the assembly and/or operating instructions that are provided and packaged with the purchased product.**

