


# MID CENTURY TV STAND

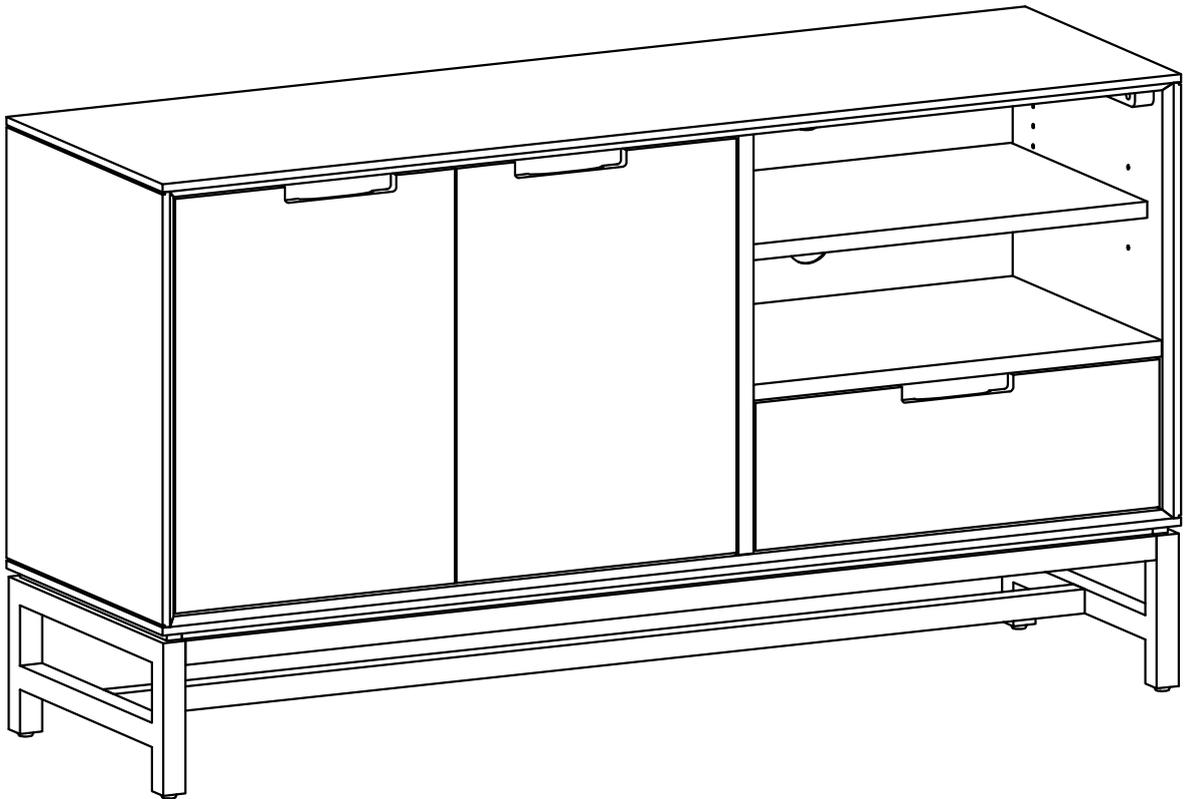



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your replacement parts free of charge

In order to assist you in a timely manner, please have the following information ready:

Model # \_\_\_\_\_ Part Number or Letter \_\_\_\_\_

Purchased at \_\_\_\_\_ Date of Purchase \_\_\_\_\_

If you wish to return the product, please contact the retailer where the product was purchased.

**IMPORTANT** : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## SAFETY INFORMATION

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

**May require 2 people for ease of assembly.**

**IMPORTANT** : Keep this manual for future reference.

## CARE and MAINTENANCE

**This furniture is designed for indoor use.**

Damage to furniture can come from temperature changes in relative humidity (RH) in our homes. Humid air oxidizes metal which results in rusting, corrosion, tarnishing and roughness. Wood absorbs water as relative humidity rises and falls, and in doing so it swells and shrinks.


To protect against the humidity effect, the metal is powder coated. The powder coat layer protects the metal from oxidizing, corrosion, tarnishing and scratching and keeps it looking good for years to come. The wood is sealed and lacquered to protect against humidity.

**To help protect your furniture, follow these steps:**


- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly.
- Dust with soft dry cloth.
- Wipe up spills promptly. Clean with a dry cloth.
- Do not use abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach, and furniture polish.
- Use soft felt base coasters, placemats to help prevent scratches.
- Keep furniture out of direct sunlight, which can cause cracking or roughness on the protective layer.
- If it can be avoided, do not put furniture near heating vents. Keep the furniture 3 to 4 inches away from the wall, giving heat and air space to circulate.

# PRE-ASSEMBLY INFORMATION


## PART DESCRIPTION

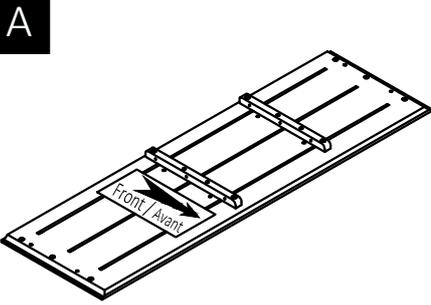


TOP  
QTY 1

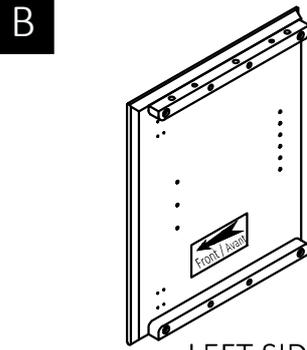


LEFT SIDE  
QTY 1

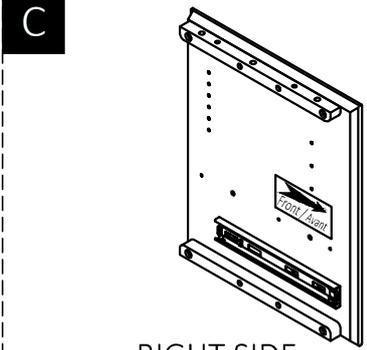


RIGHT SIDE  
QTY 1

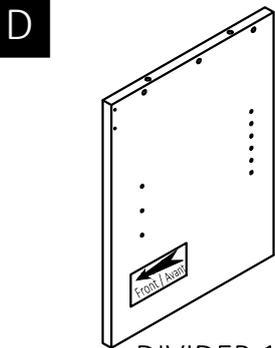


DIVIDER 1  
QTY 1

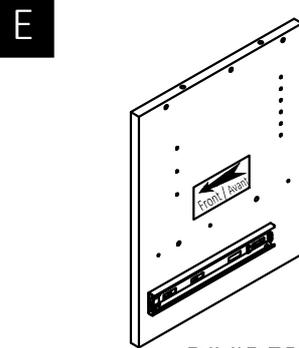


DIVIDER 2  
QTY 1

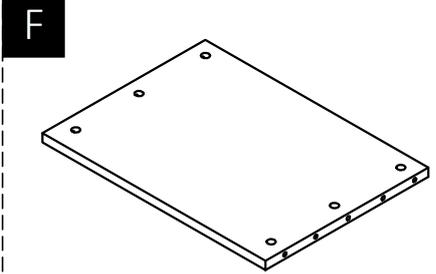


MIDDLE SHELF  
QTY 1

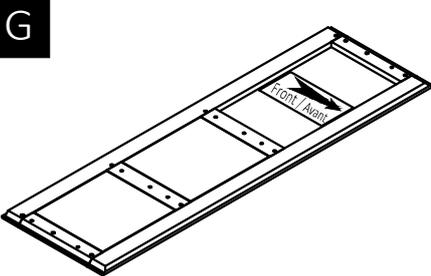


BOTTOM SHELF  
QTY 1

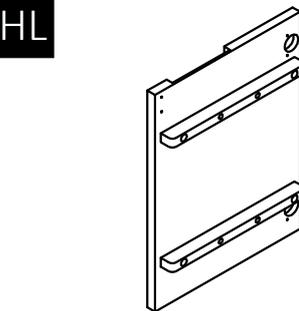


LEFT DOOR  
QTY 1

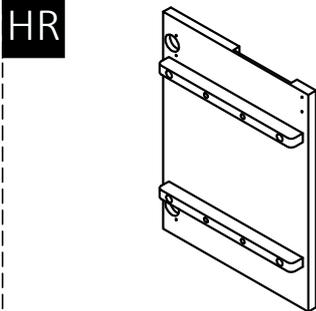


RIGHT DOOR  
QTY 1

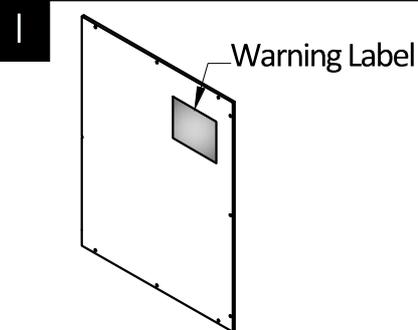

LEFT BACK PANEL  
QTY 1

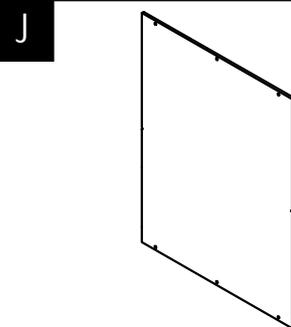

MIDDLE BACK PANEL  
QTY 1

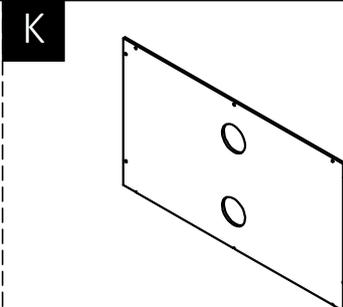


TOP BACK PANEL  
QTY 1

**NEED HELP?** For help with assembly or if you are missing a part, please call customer service.

# PRE-ASSEMBLY INFORMATION


## PART DESCRIPTION

L

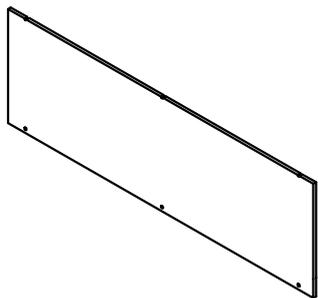


BOTTOM BACK PANEL  
QTY 1

M

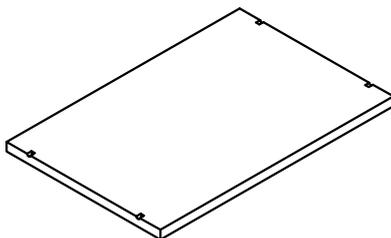


LARGE SHELF  
QTY 1

N

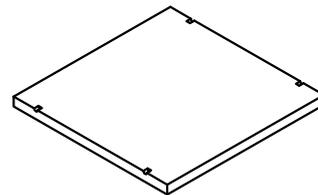


SMALL SHELF  
QTY 2

O

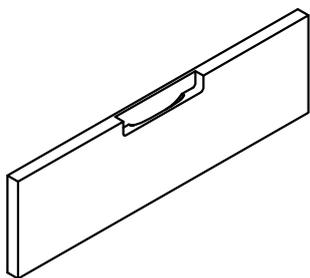


DRAWER FRONT  
QTY 1

PL

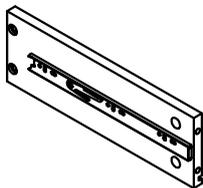


LEFT DRAWER SIDE  
QTY 1

PR

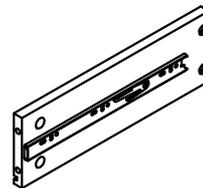


RIGHT DRAWER SIDE  
QTY 1

Q

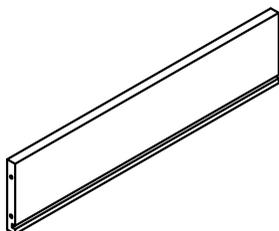


DRAWER BACK  
QTY 1

R

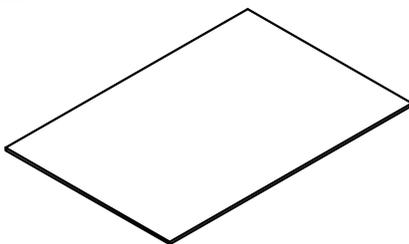


DRAWER BOTTOM  
QTY 1

S

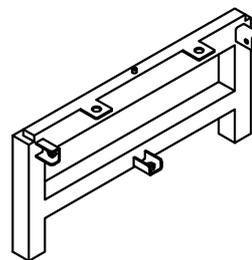


LEG (L&R Same)  
QTY 2

T

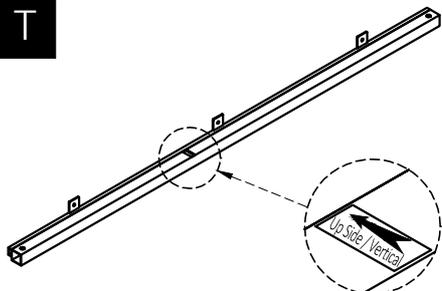

LEG UPPER CONNECTOR  
QTY 2

U







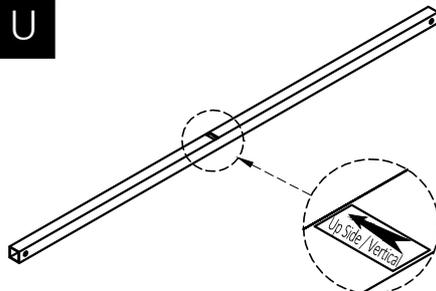



LEG LOWER CONNECTOR  
QTY 1

**NEED HELP?** For help with assembly or if you are missing a part, please call customer service.

# PRE-ASSEMBLY INFORMATION

## HARDWARE DESCRIPTION
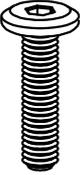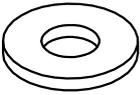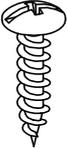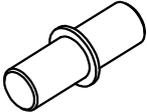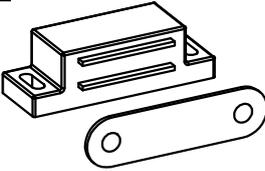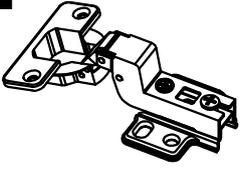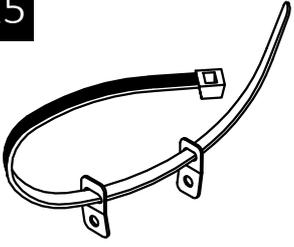
<p><b>1</b></p>  <p>WOOD DOWEL Ø8 X 30mm QTY 20</p>	<p><b>2</b></p>  <p>ALLEN KEY QTY 1</p>	<p><b>3</b></p>  <p>CAM LOCK PIN CAM LOCK QTY 10 SETS</p>	<p><b>4</b></p>  <p>ALLEN KEY SCREW M6 X 30mm QTY 16</p>
<p><b>5</b></p>  <p>ALLEN KEY BOLT M6 x 30 mm QTY 12</p>	<p><b>6</b></p>  <p>ALLEN KEY BOLT M6 x 15 mm QTY 10</p>	<p><b>7</b></p>  <p>LOCK WASHER Ø10 / Ø6.5 x 1.5 mm QTY 10</p>	<p><b>8</b></p>  <p>WASHER Ø16 / Ø6.5 x 1.5 mm QTY 16</p>
<p><b>9</b></p>  <p>PHILLIPS SCREW ROUND HEAD M4 X 15mm QTY 34</p>	<p><b>10</b></p>  <p>SHELF SUPPORT QTY 18</p>	<p><b>11</b></p>  <p>MAGNET AND PLATE QTY 2 SETS</p>	<p><b>12</b></p>  <p>PHILLIPS SCREW M3 X 15mm QTY 8</p>
<p><b>13</b></p>  <p>ADJUSTABLE HINGE QTY 4 SETS</p>	<p><b>14</b></p>  <p>PHILLIPS SCREW M3.5 X 15mm QTY 24</p>	<p><b>15</b></p>  <p>FURNITURE TIP OVER RESTRAINT QTY 1 SET</p> <ul style="list-style-type: none"> <li>a.  M4X25mm-QTY2 (1 is extra)</li> <li>b.  M4X15mm-QTY1</li> <li>c.  M4X25mm-QTY1</li> </ul>	



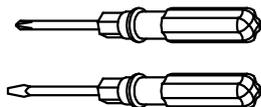


Required -  
Flathead screwdriver  
Phillips screwdriver  
Rubber mallet  
**Not Included**




**NEED HELP?** For help with assembly or if you are missing a part, please call customer service.

# COMPONENTS-KEY DIAGRAM

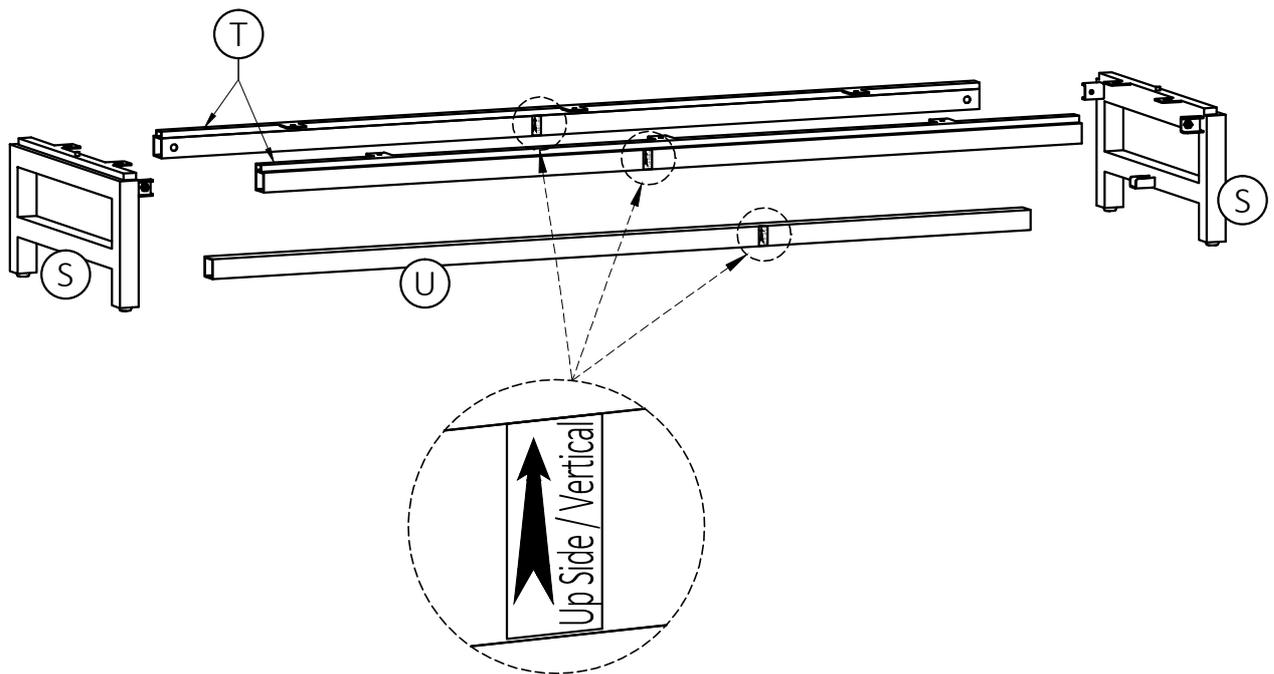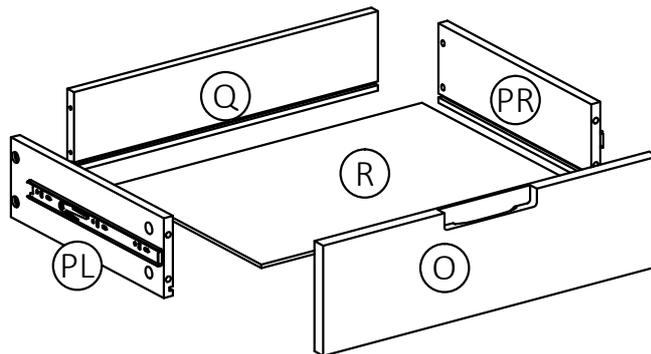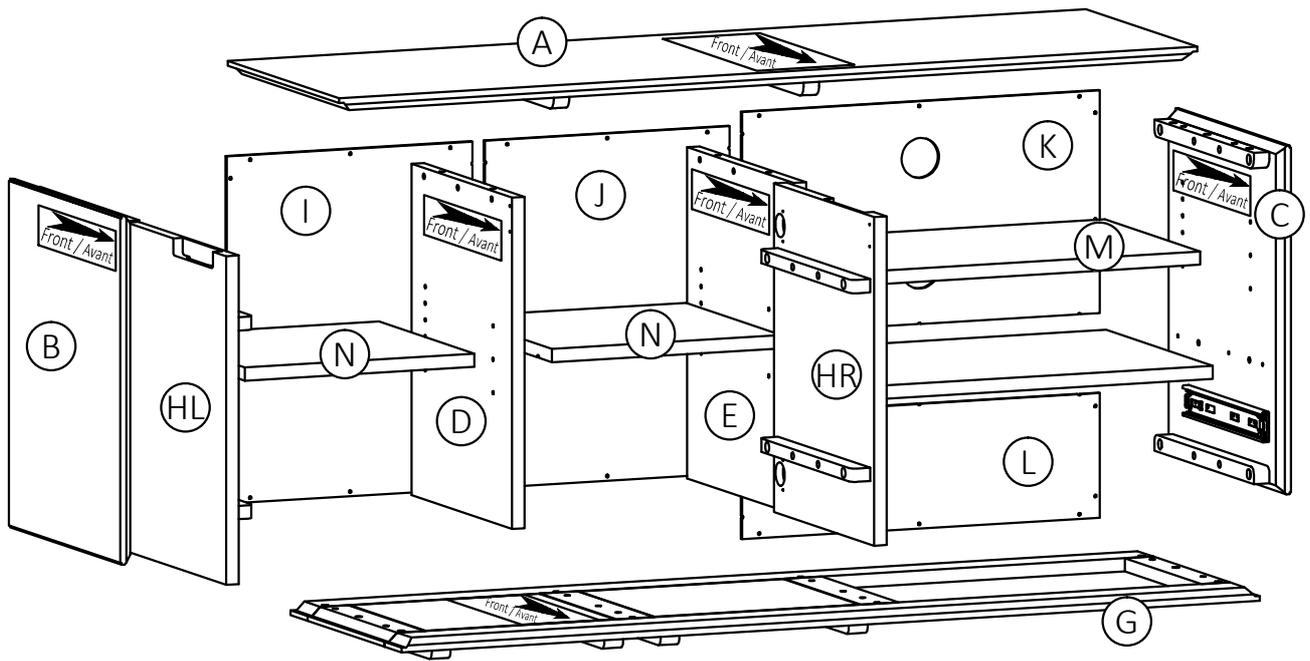


# ASSEMBLY

## STEP-1

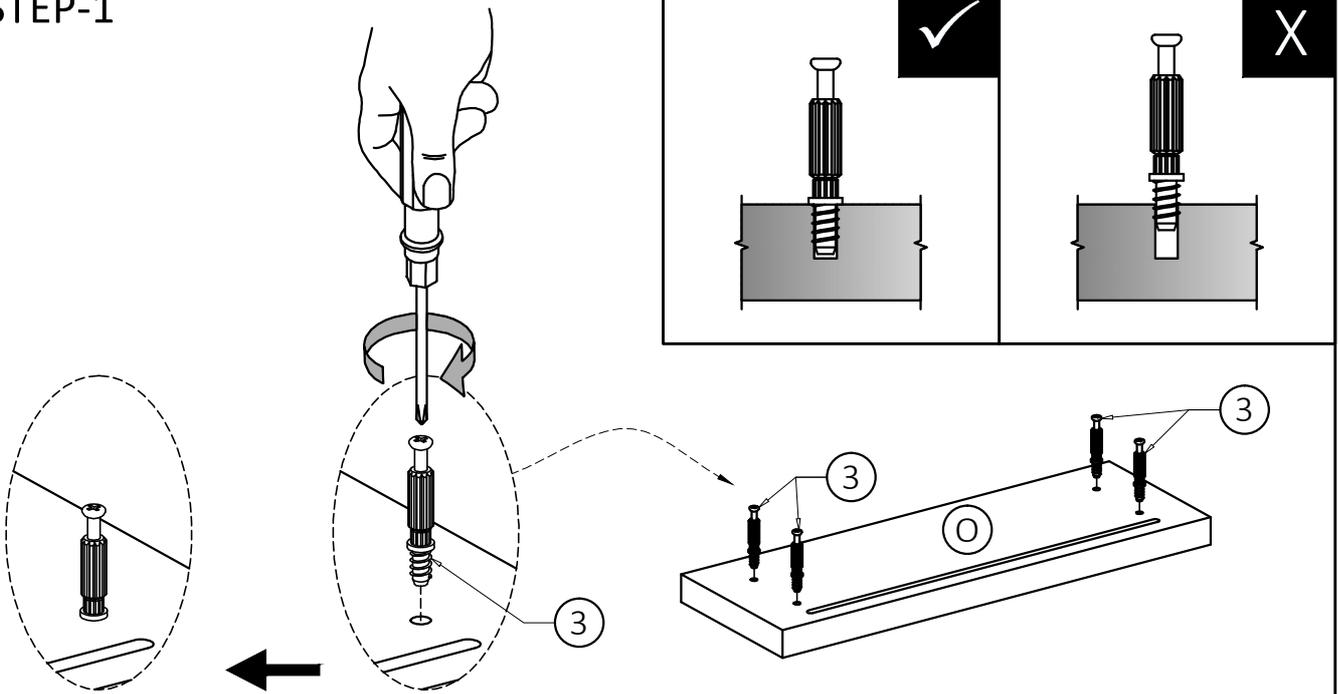

1. Attach four Cam Lock Pins (3) into pre-drilled holes on back of Drawer Front (O).
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.


## STEP-2

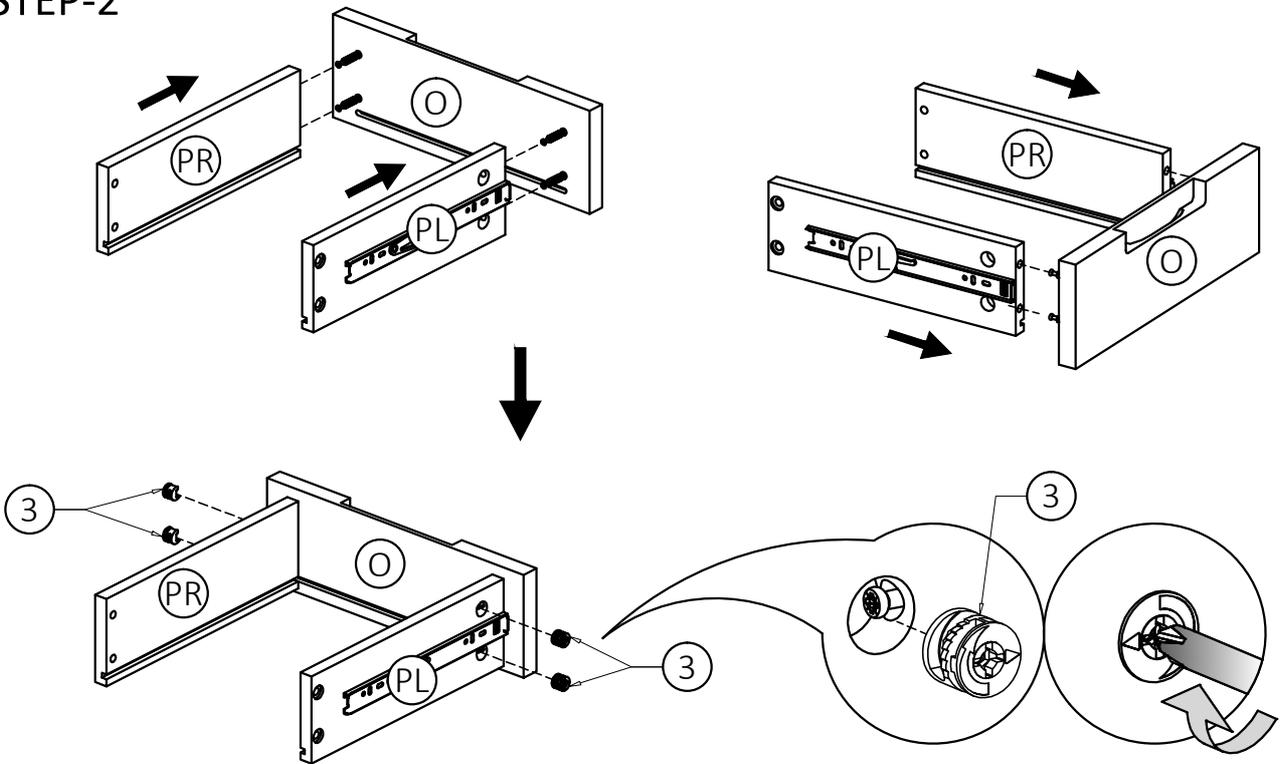

1. Align Cam Lock Pins with guide holes and attach Drawer Sides (PL, PR) to Drawer Front (O).
2. Insert two Cam Locks (3) into guide holes on each Drawer Side (PL, PR).
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.


# ASSEMBLY

## STEP-3

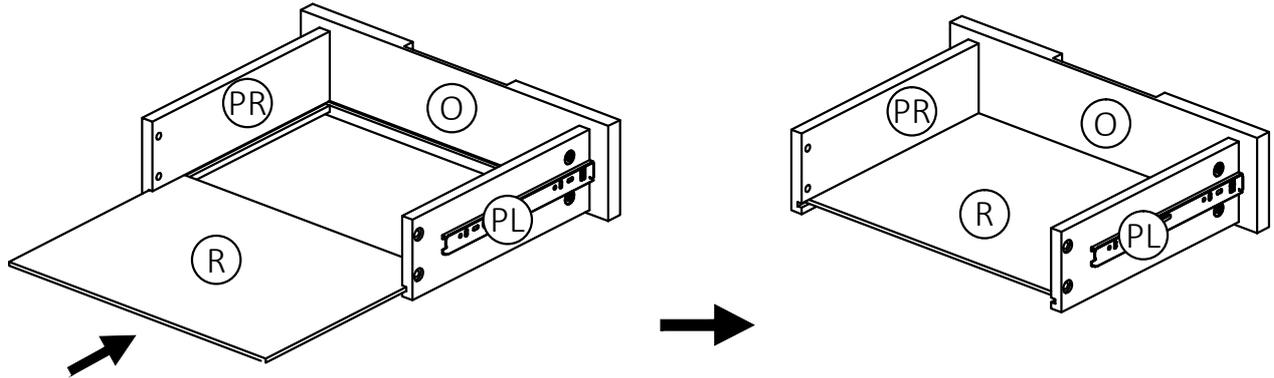

1. Slide Drawer Bottom (R) firmly into slots on Drawer Sides (PL, PR) and Drawer Front (O).




## STEP-4

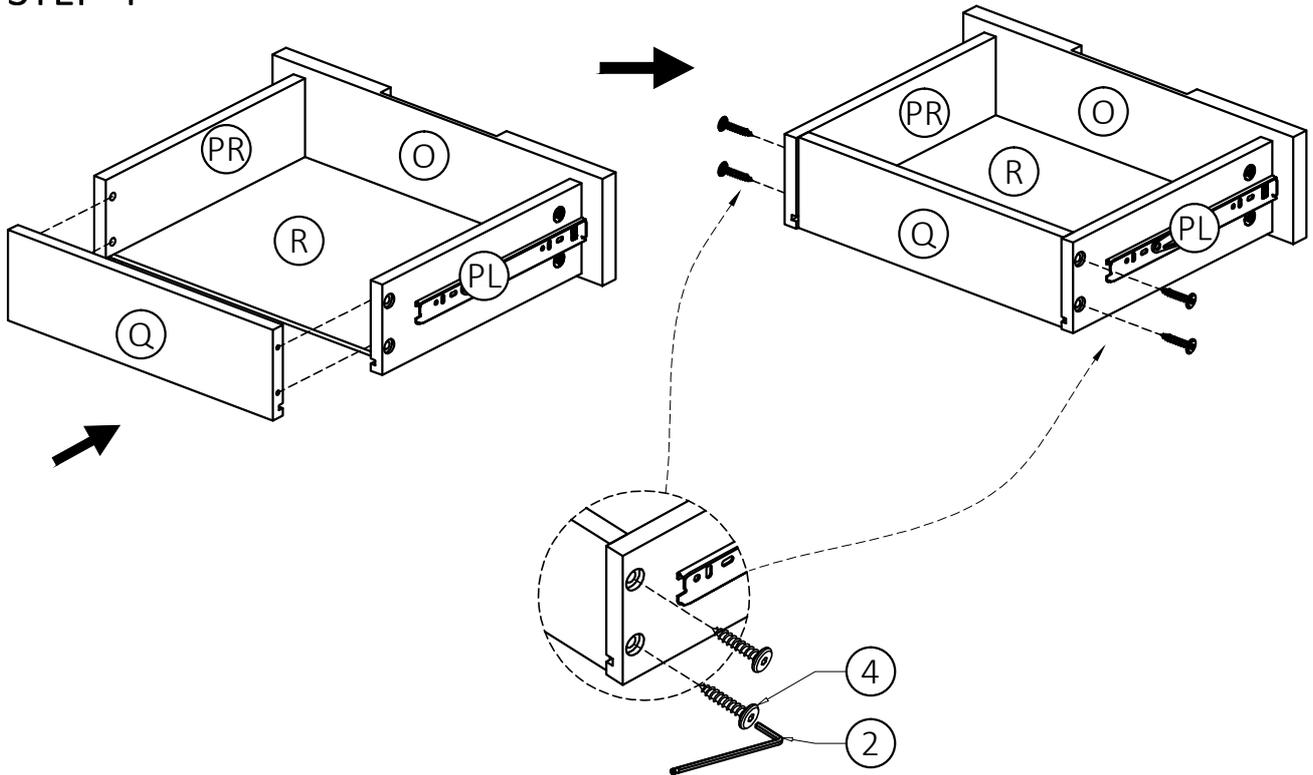



1. Align Drawer Back (Q) with Drawer Bottom (R) and press firmly into slot .
2. Attach Drawer Back using two Allen Key Screws (4) through drilled holes on each Drawer Side (PL, PR).
3. Use Allen Key (2) to tighten Screws. Do not over-tighten

# ASSEMBLY

## STEP-5

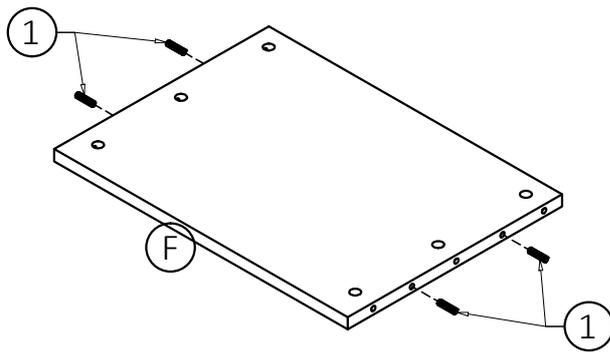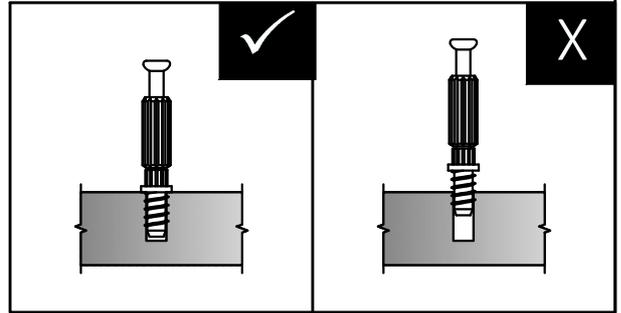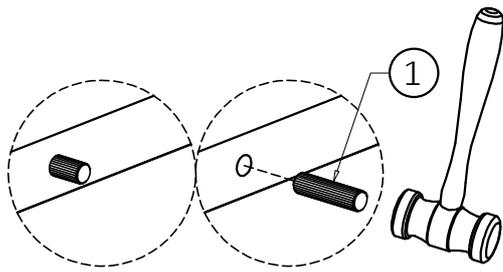


1. Insert four Dowels (1) into guide holes on Middle Shelf (F).
2. Use rubber mallet to tap Dowels (1) into bottom of holes securely. 1/2 length of Dowels should be exposed.

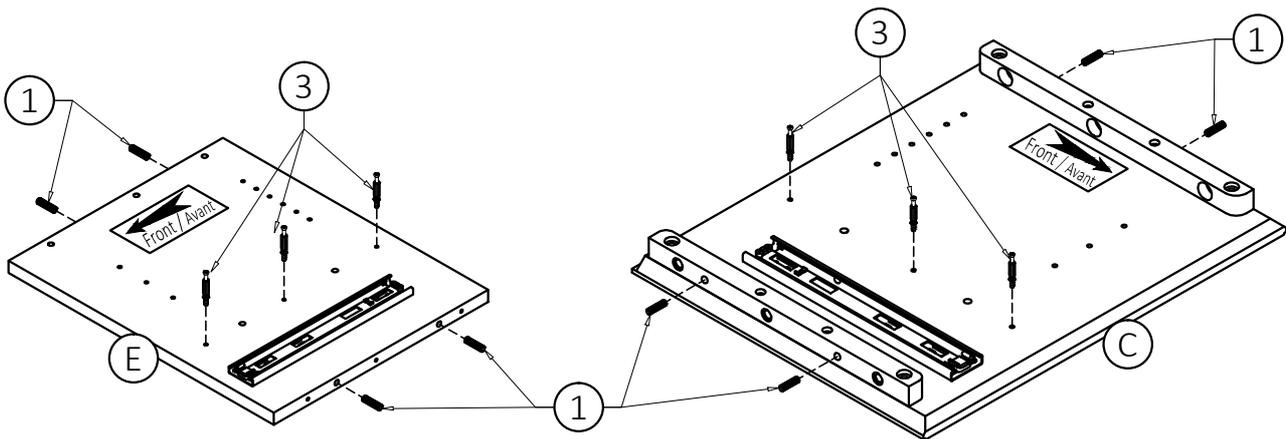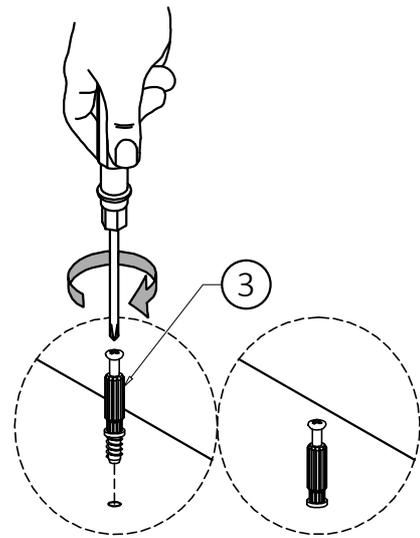


3. Insert four Dowels (1) into guide holes on each Divider 2 (E) and Right Side (C).
4. Use rubber mallet to tap Dowels (1) into bottom of holes securely. 1/2 length of Dowels should be exposed.
5. Attach three Cam Lock Pins (3) into pre-drilled holes on each Divider 2 (E), Right Side (C).
6. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

# ASSEMBLY

## STEP-6

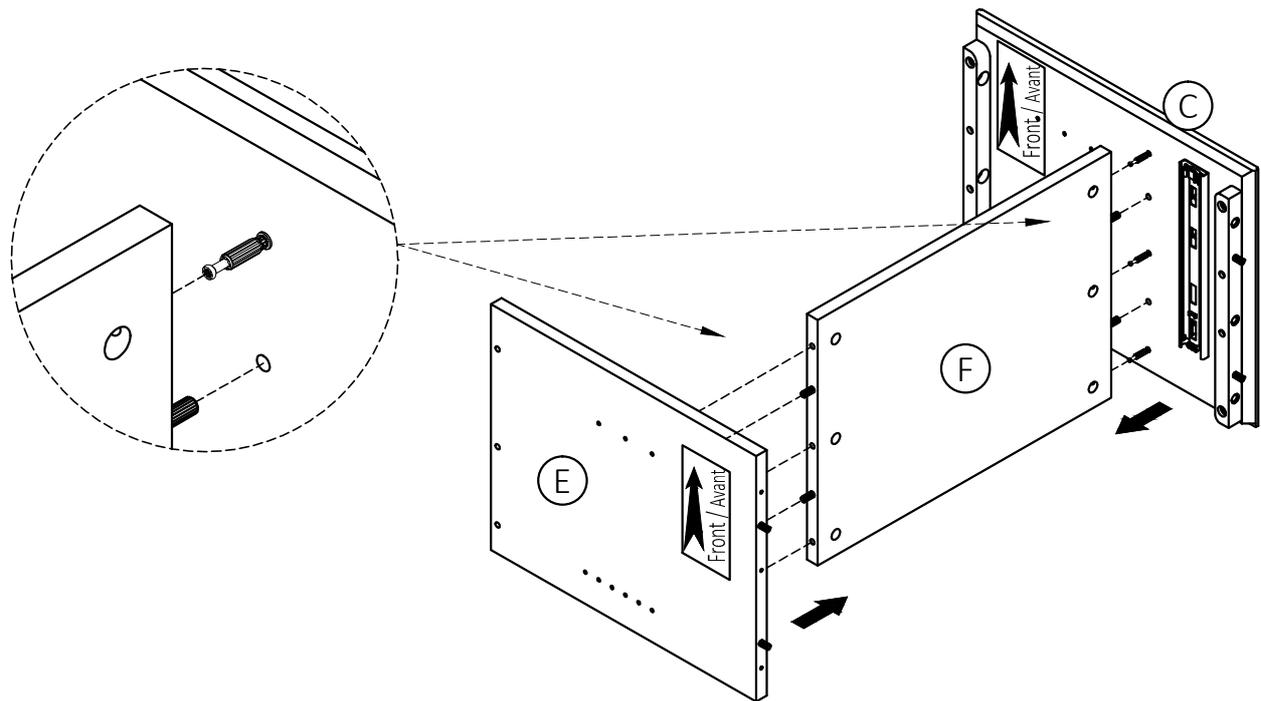


1. Align Wood Dowels with guide holes on parts (C),(E); align Cam Lock Pins with guide holes on Middle Shelf (F) and attach Middle Shelf (F) to parts (C), (E).

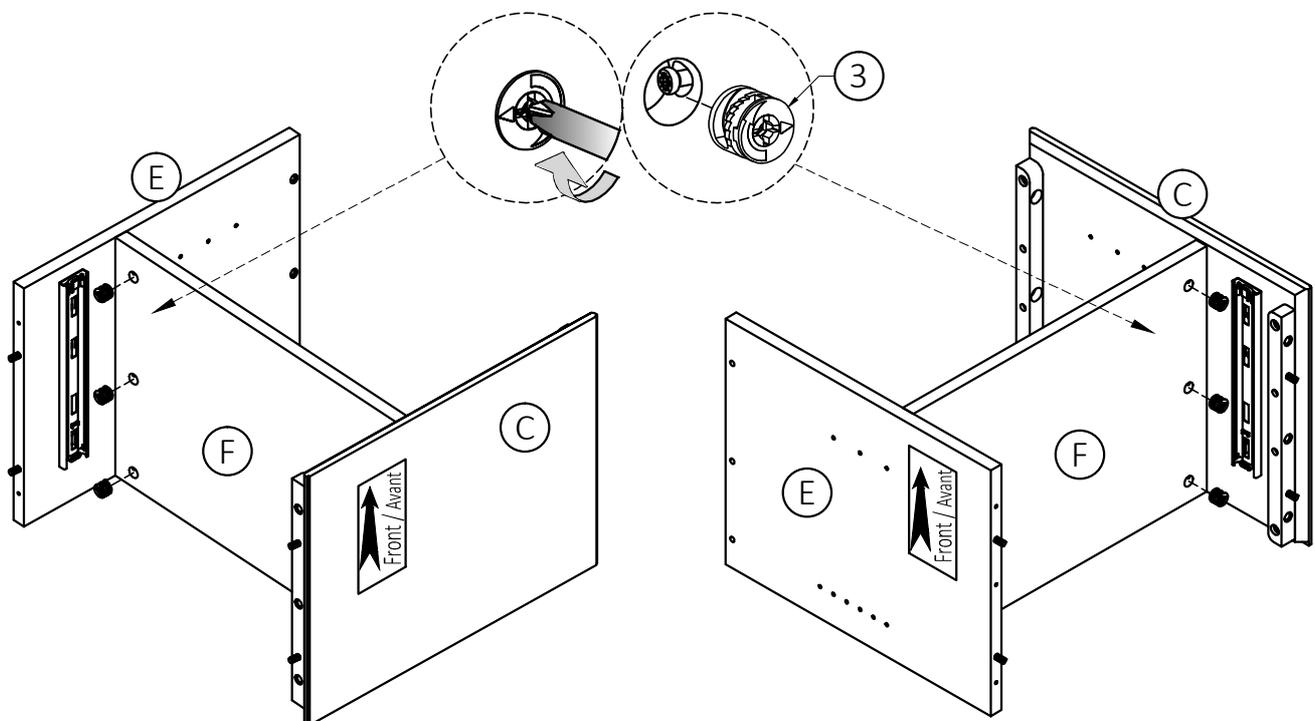


2. Insert six Cam Locks (3) into drilled holes on Middle Shelf (F).  
Use Phillips screwdriver to secure Cam Locks.

# ASSEMBLY

## STEP-7

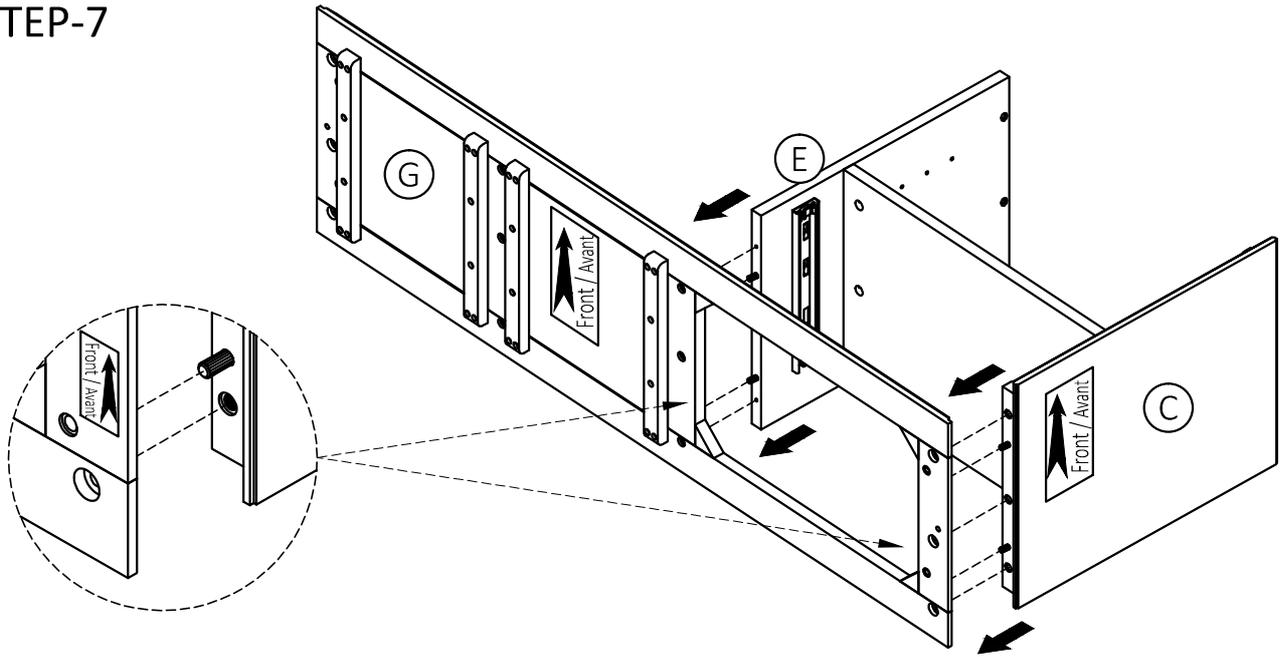


1. Align Wood Dowels with guide holes on Bottom Shelf (G) and attach Divider 2 (E), Right Side (C) to Bottom Shelf (G).

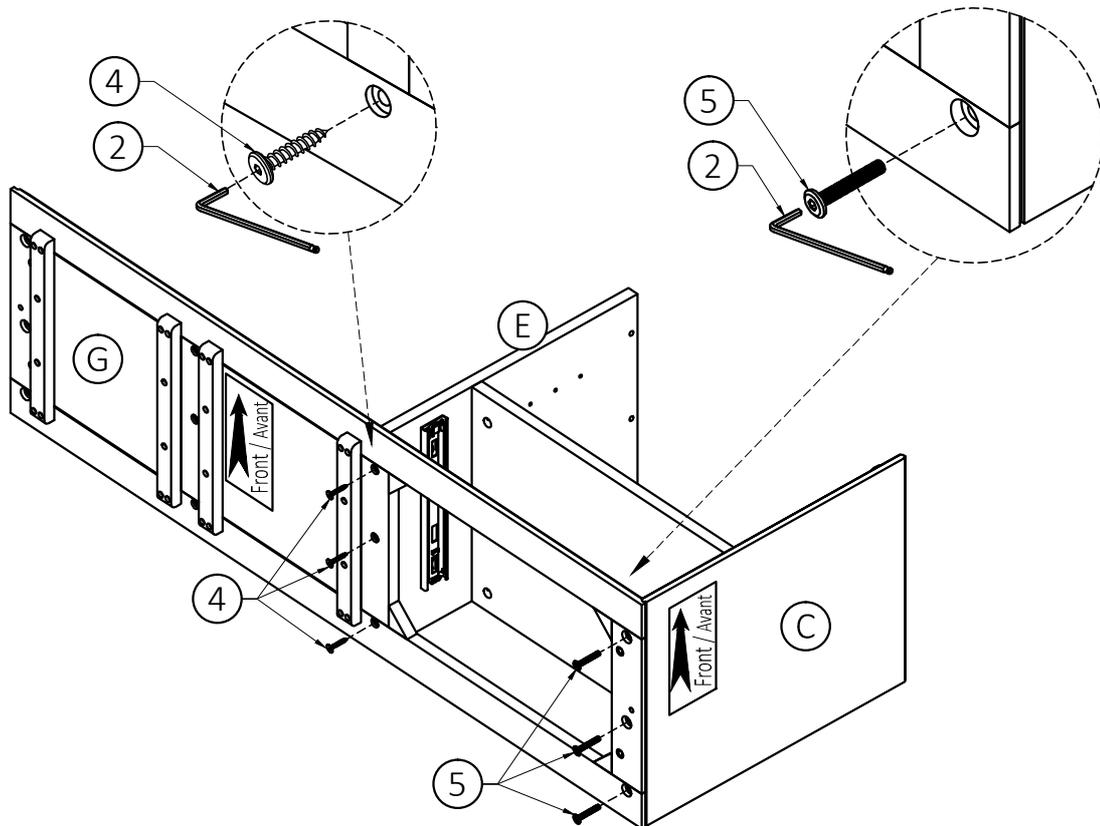


2. Use three Allen Key Bolts (5) to attach Right Side (C) through guide holes from Bottom Shelf (G) to Right Side (C).
3. Use three Allen Key Screws (4) to attach Divider 2 (E) through guide holes from Bottom Shelf (G) to pre-drilled holes of Divider 2 (E).
4. Use Allen Key (2) to tighten Screws and Bolts. Do not over-tighten.

# ASSEMBLY


## STEP-8

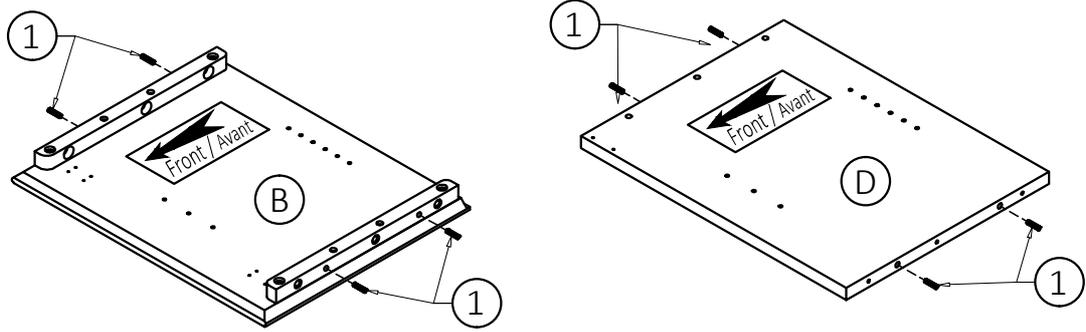



1. Insert four Dowels (1) into drilled holes on each Left Side (B), Divider 1 (D).
2. Use rubber mallet to tap Dowels (1) into bottom of holes securely. 1/2 length of Dowels should be exposed.

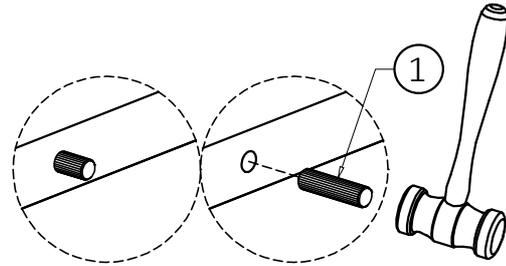

## STEP-9

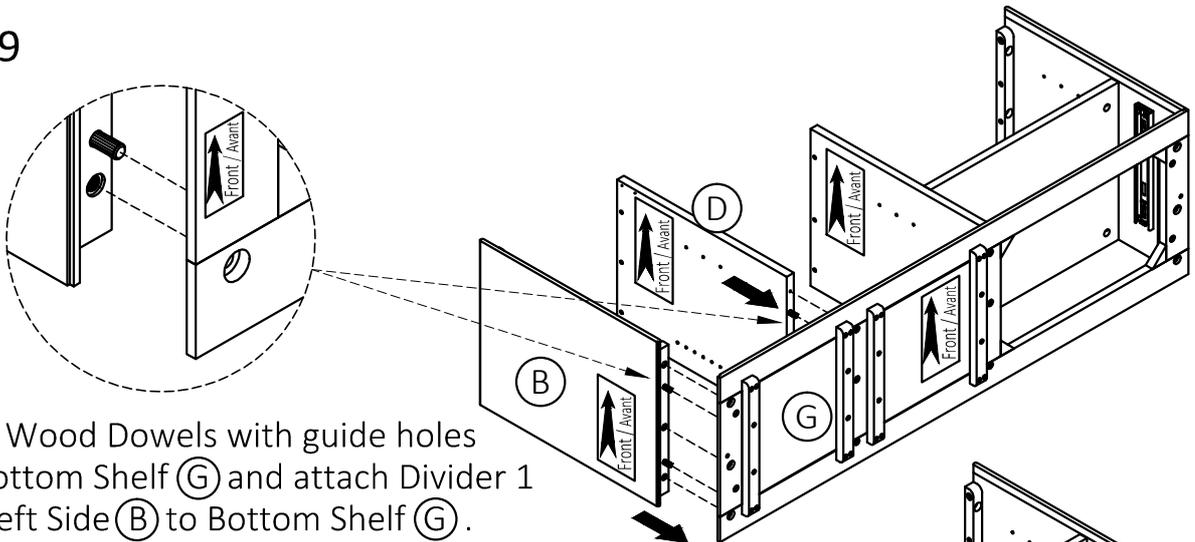


1. Align Wood Dowels with guide holes on Bottom Shelf (G) and attach Divider 1 (D), Left Side (B) to Bottom Shelf (G).

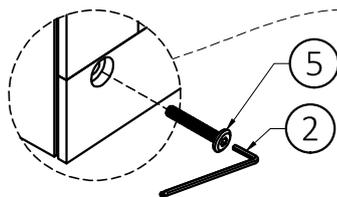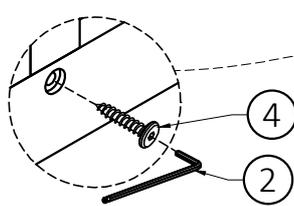


2. Use three Allen Key Bolts (5) to attach Left Side (B) through guide holes from Bottom Shelf (G) to Left Side (B).
3. Use three Allen Key Screws (4) to attach Divider 1 (D) through guide holes from Bottom Shelf (G) to pre-drilled holes of Divider 1 (D).
4. Use Allen Key (2) to tighten Screws and Bolts. Do not over-tighten.

# ASSEMBLY

## STEP-10

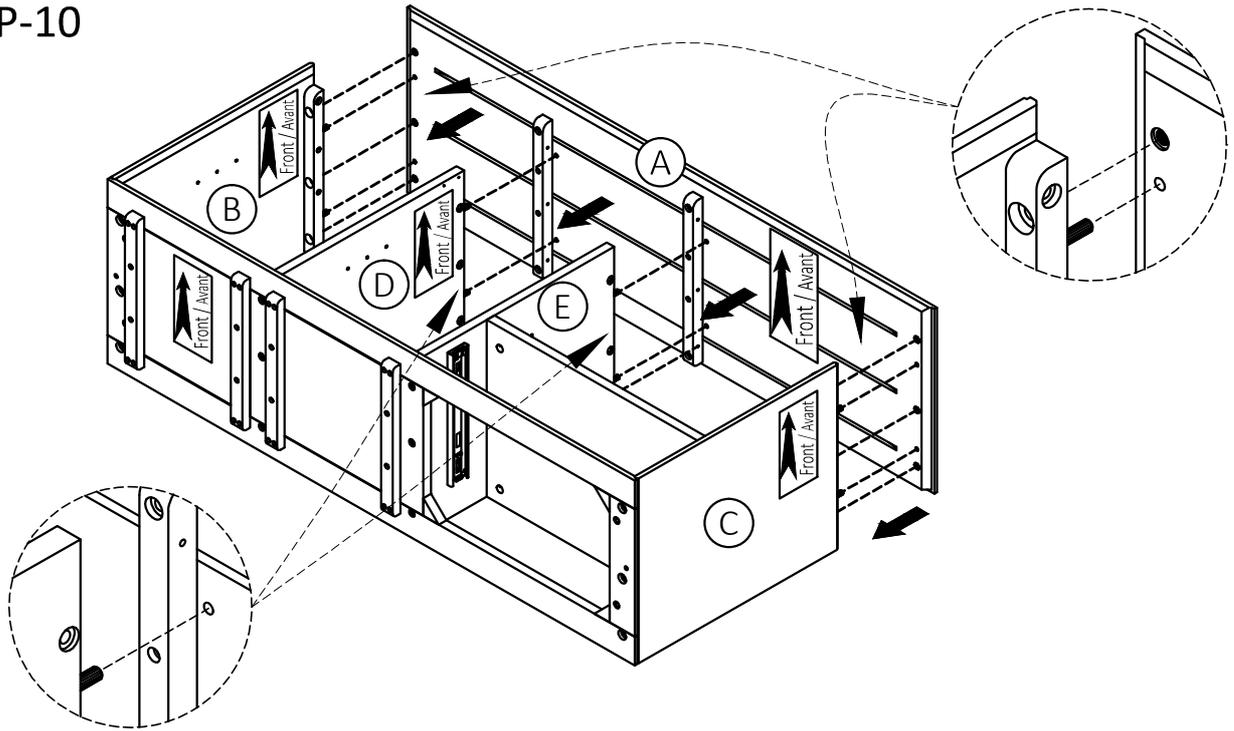


1. Align Wood Dowels with guide holes on Top (A) and attach Top (A) to Sides (B), (C) and Dividers (D), (E).

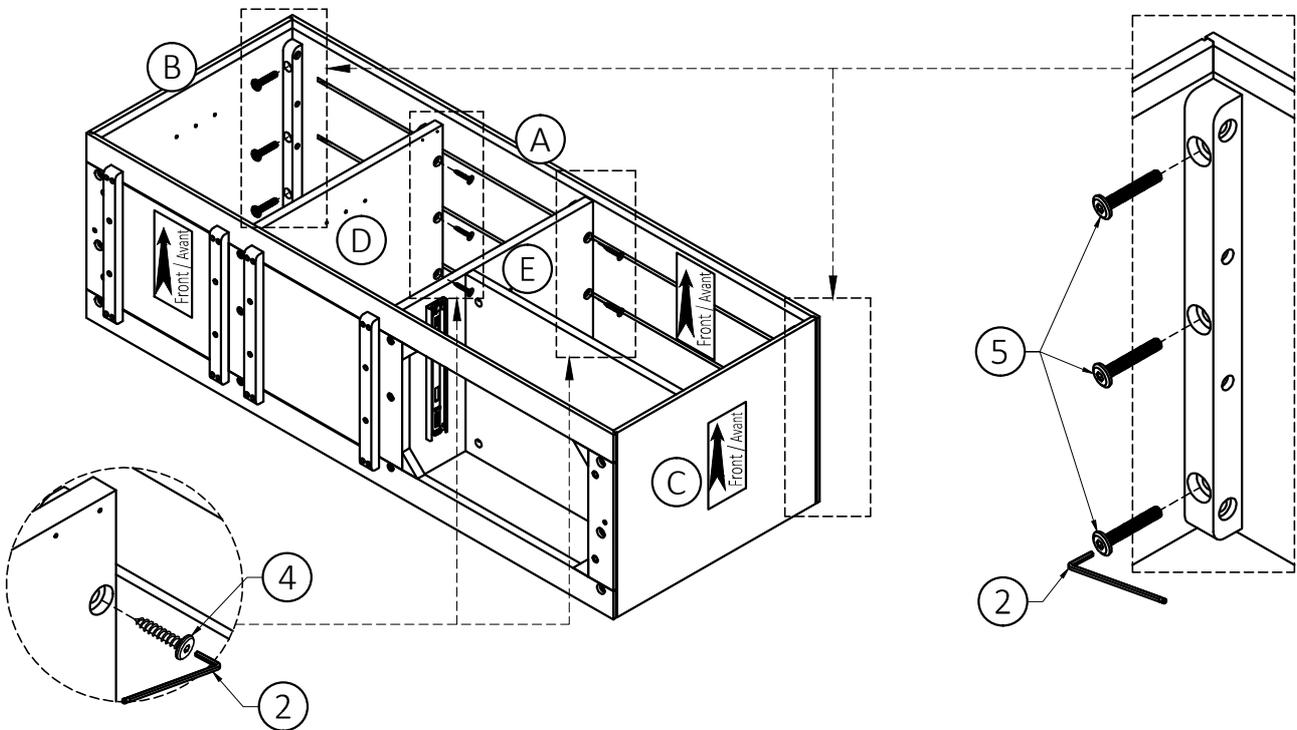



2. Use six Allen Key Bolts (5) to attach each Sides (B), (C) through guide holes to Top (A).
3. Use six Allen Key Screws (4) to attach each Dividers (D), (E) through guide holes to pre-drilled holes of Top (A).
4. Use Allen Key (2) to tighten Bolts. Do not over-tighten.

# ASSEMBLY

## STEP-11

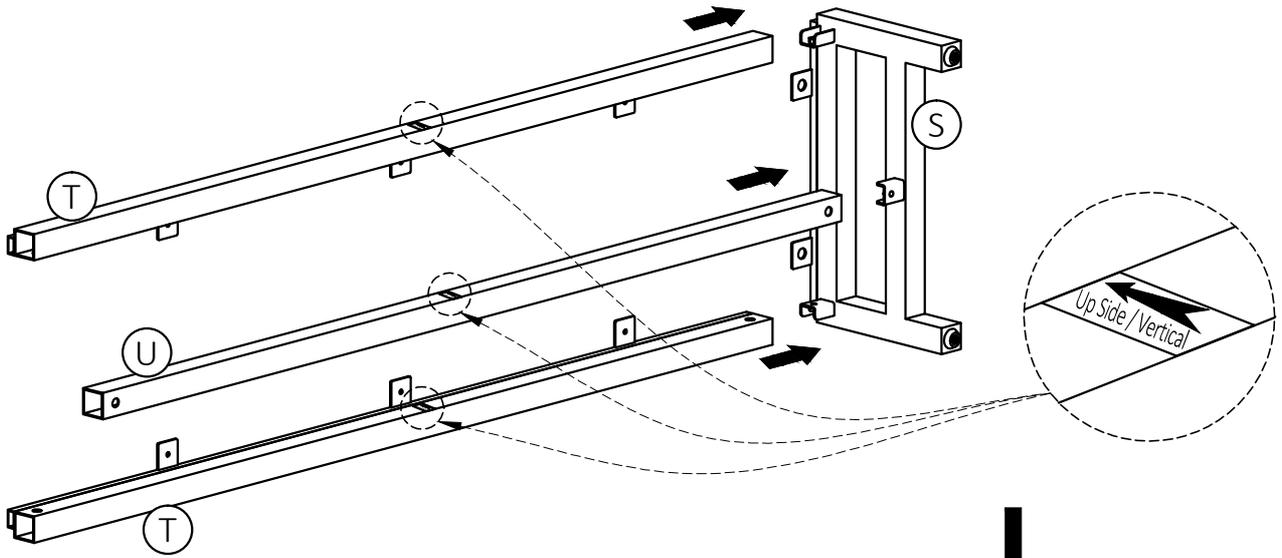



1. Align Parts (T), (U) to Leg (S).

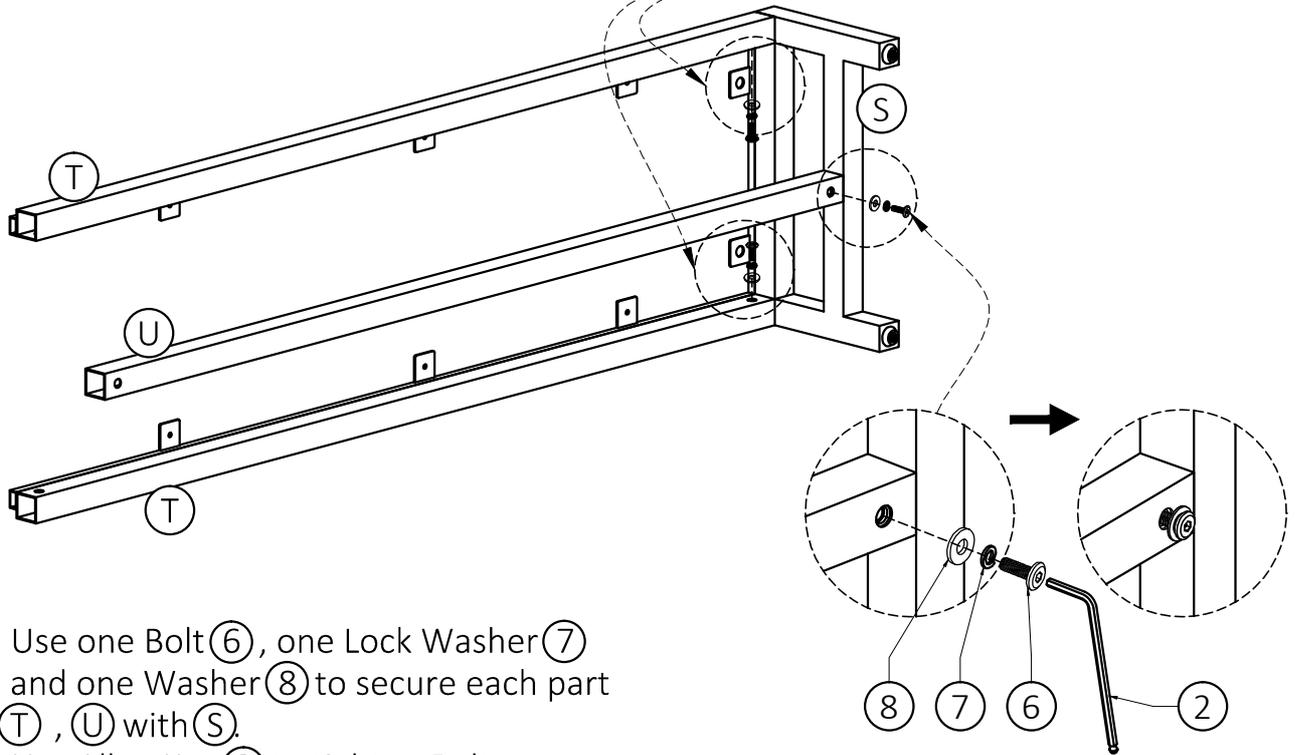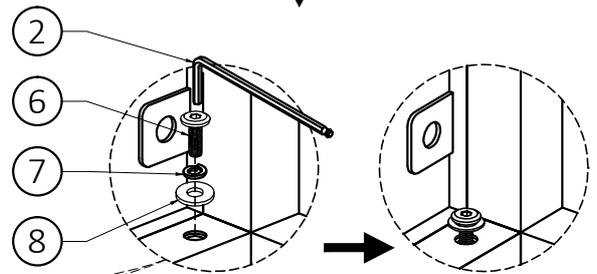


2. Use one Bolt (6), one Lock Washer (7) and one Washer (8) to secure each part (T), (U) with (S).
3. Use Allen Key (2) to tighten Bolts. Do not over-tighten.

# ASSEMBLY

## STEP-12

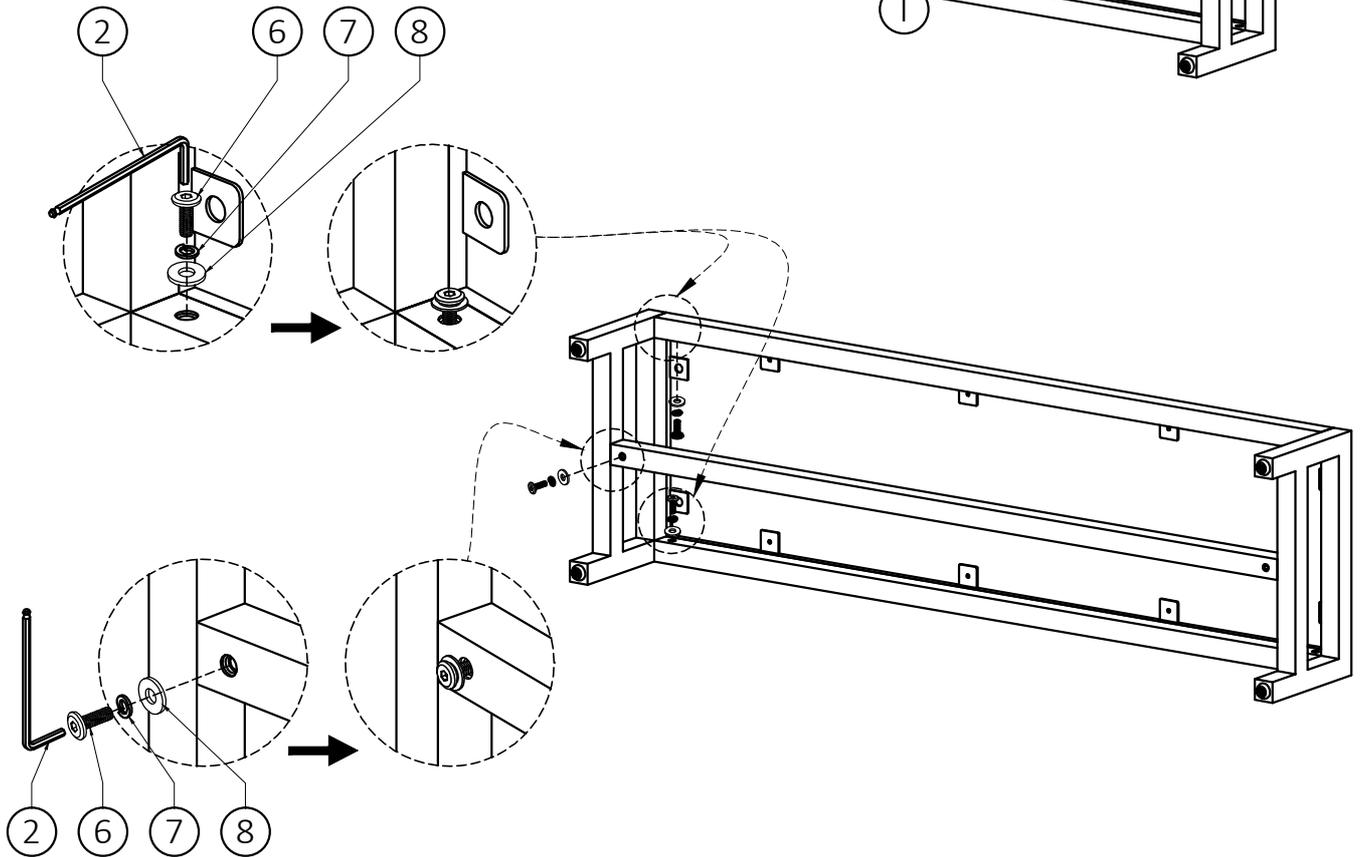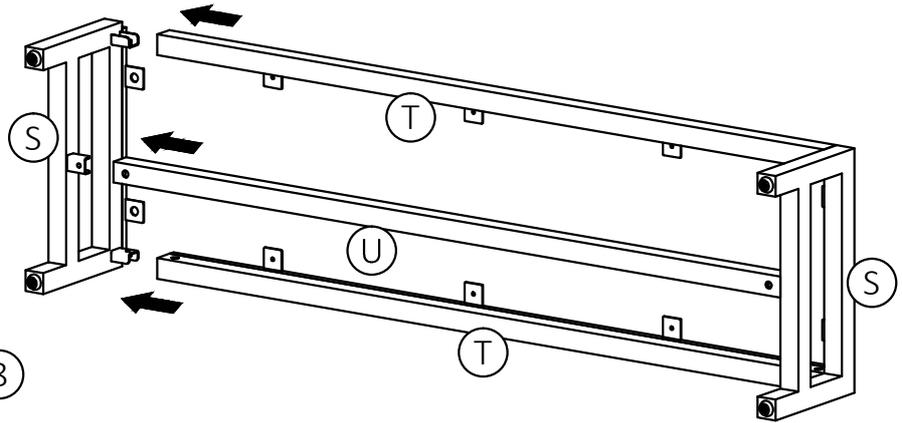


1. Repeat Step-11 for second Leg (S).

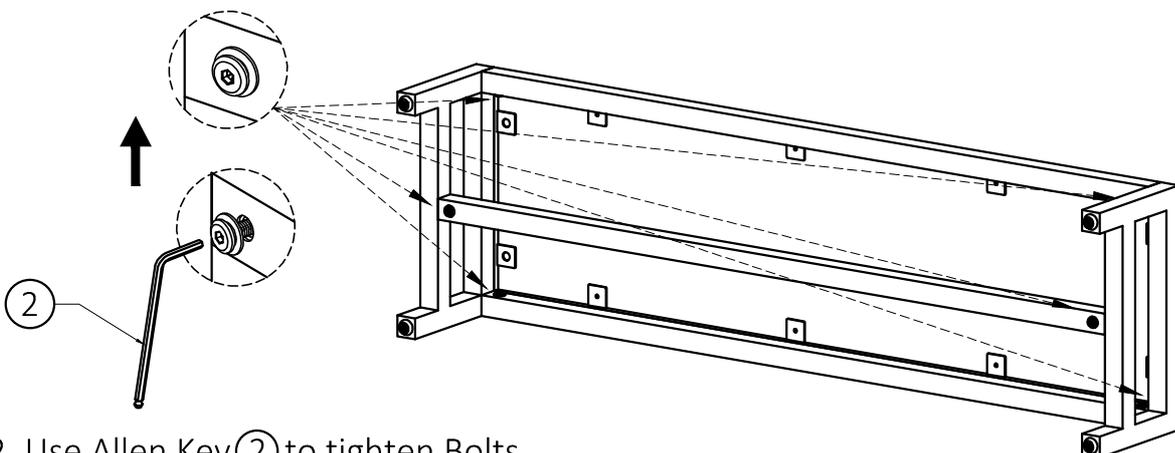


2. Use Allen Key (2) to tighten Bolts.

# ASSEMBLY

## STEP-13

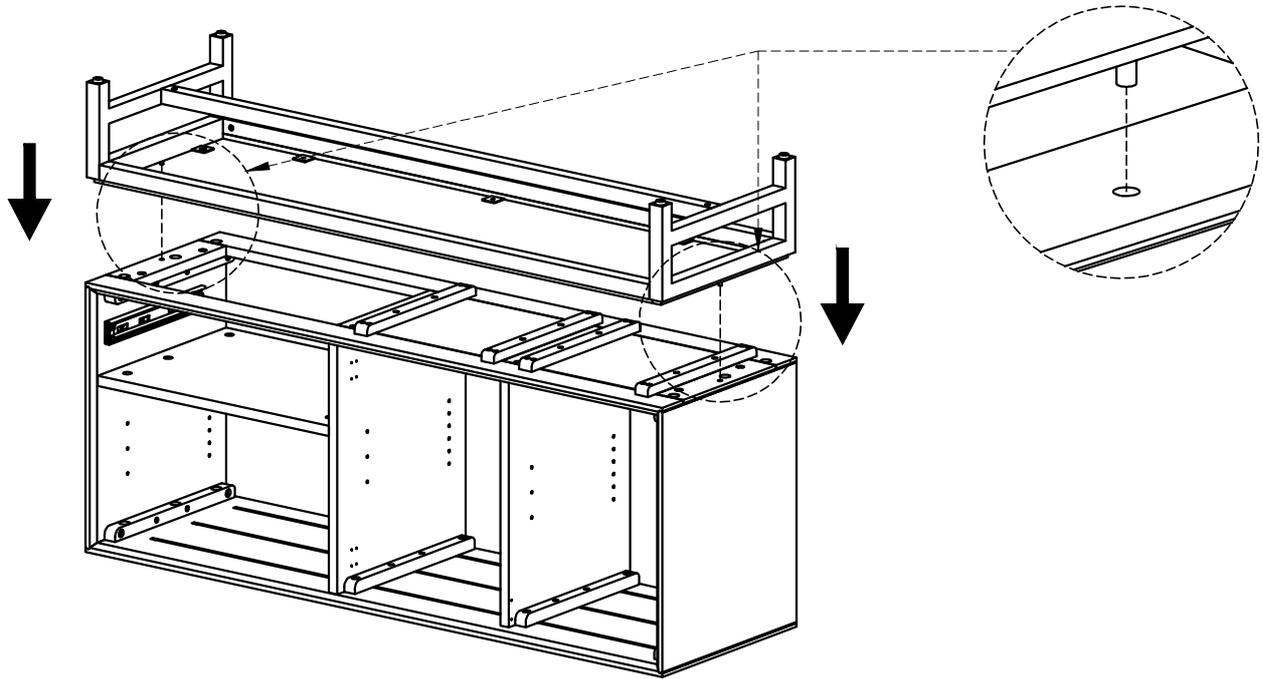


1. Align iron dowels with guide holes on wooden frame and attach the assembled metal frame to bottom wooden frame .

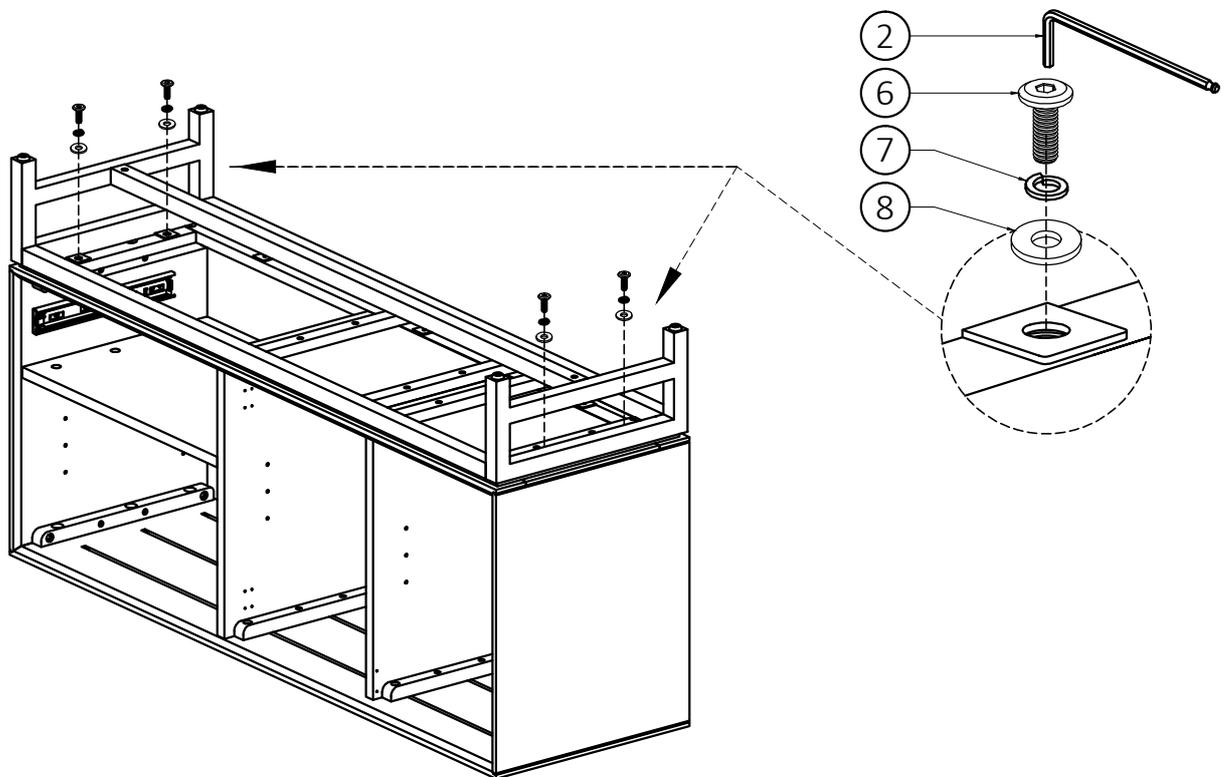


2. Use four Bolts (6), four Lock Washers (7) and four Washers (8) to secure metal frame to wooden frame .
3. Use Allen Key (2) to tighten Bolts.

# ASSEMBLY

## STEP-14

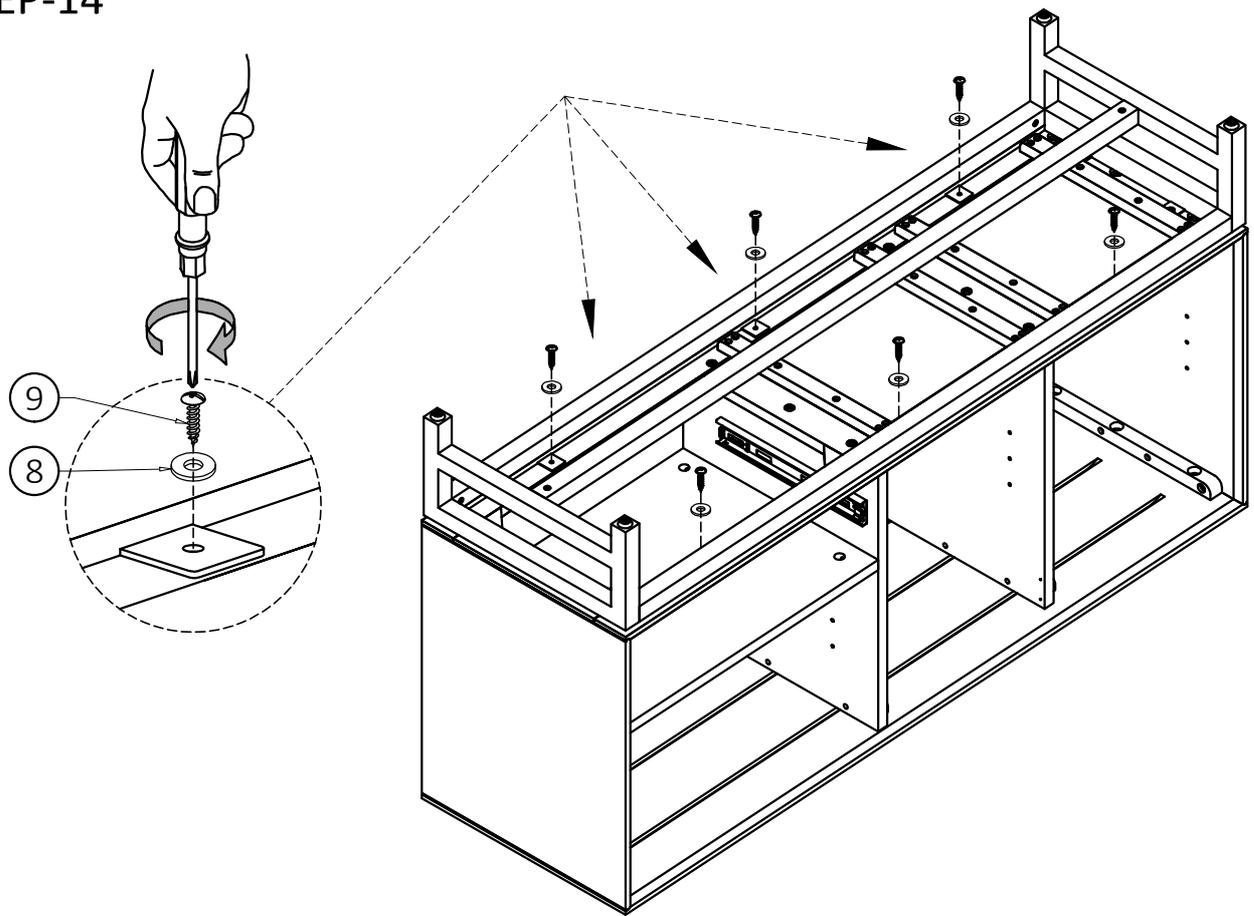

1. Use six Phillips Screws Round Head (9) and four Washers (8) to secure wooden frame and metal frame.
2. Use Phillips screwdriver to snugly tighten Screws.

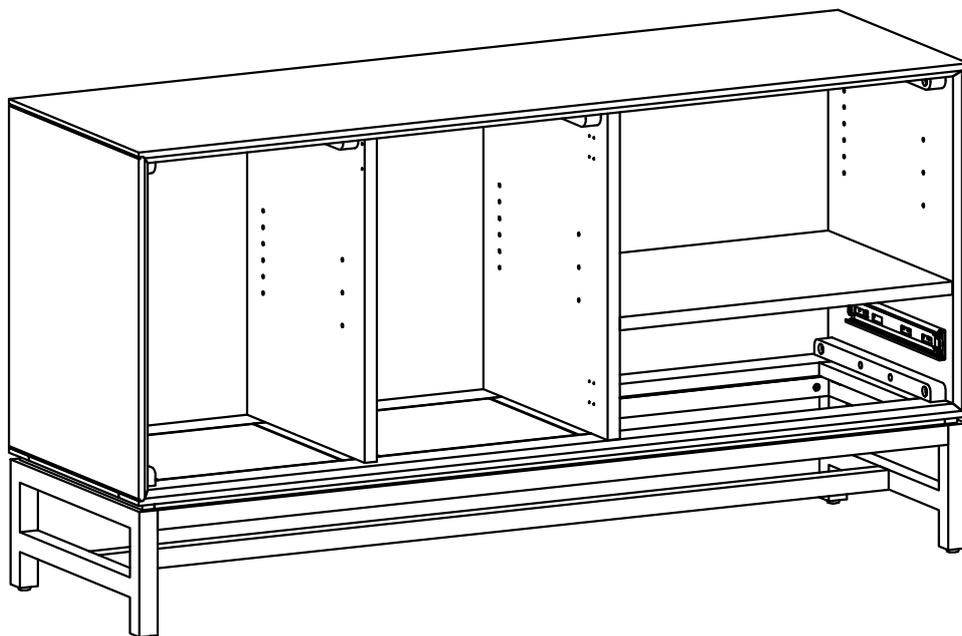


# ASSEMBLY



## STEP-15

Note:

The back of the cabinet frame does not have pre-drilled holes to attach the back panels.

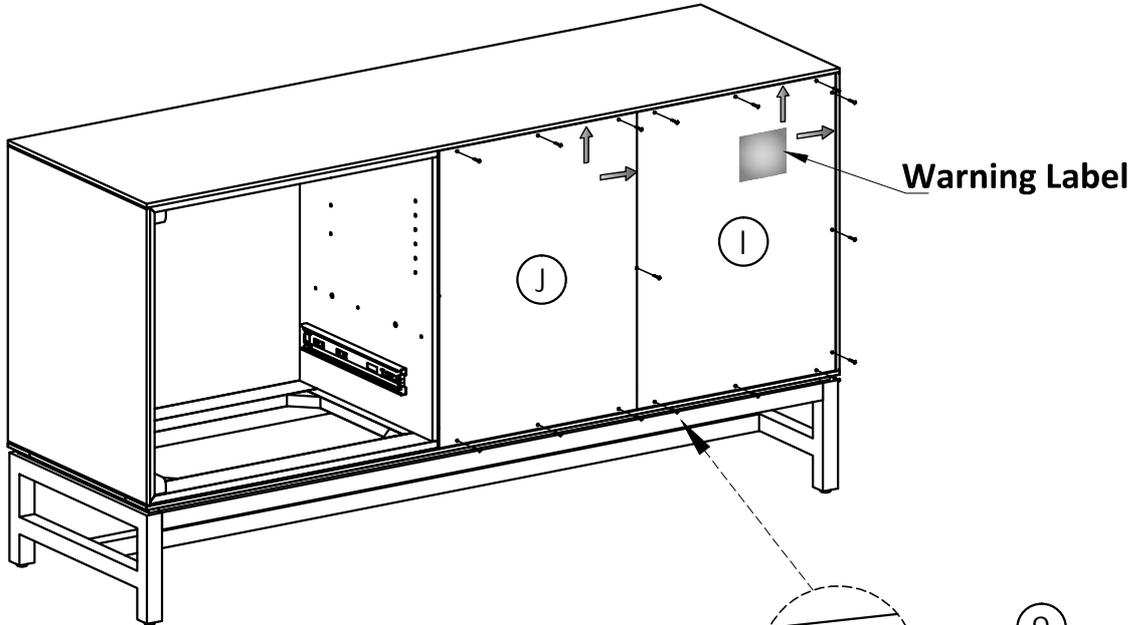


1. Attach the Back Panels (I), (J) to back frame using Phillips Screws Round Head (9) through guide holes.

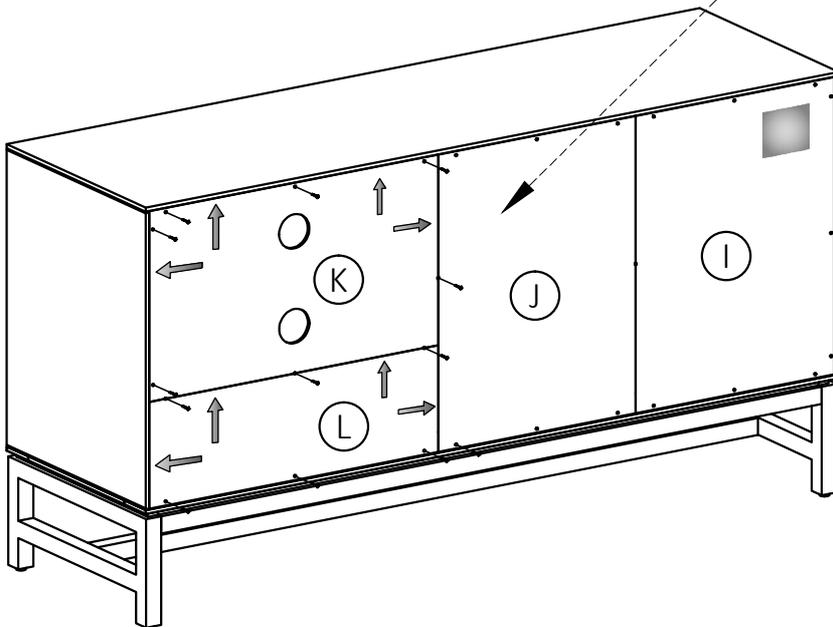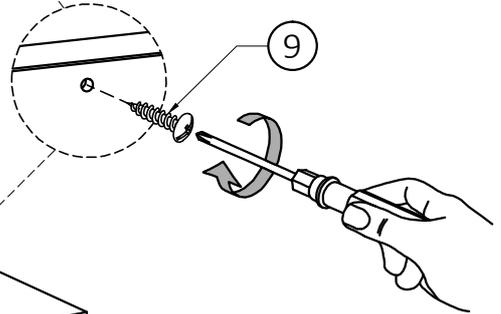

2. Attach the Back Panels (K), (L) to back frame using Phillips Screws Round Head (9) through guide holes.
3. Use Phillips Screwdriver to tighten screws. Do not over-tighten.


# ASSEMBLY

## STEP-16

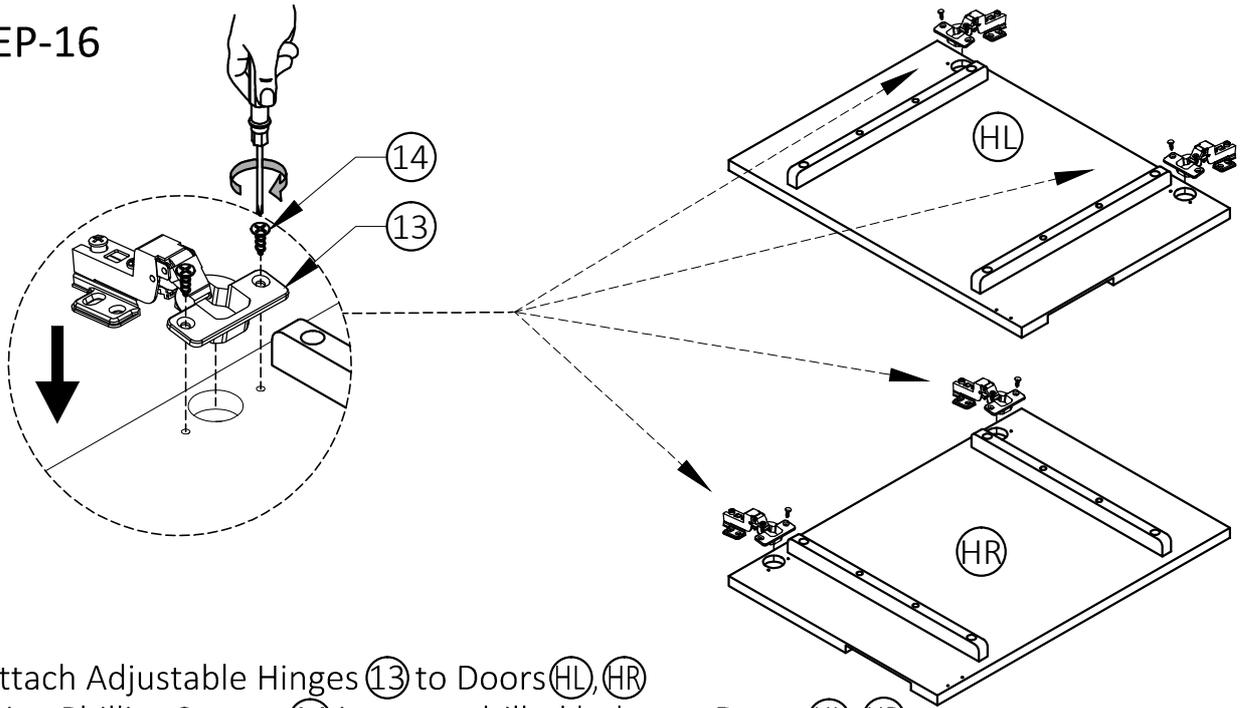



1. Attach Adjustable Hinges (13) to Doors (HL, HR) using Phillips Screws (14) into pre-drilled holes on Doors (HL, HR).

## STEP-17

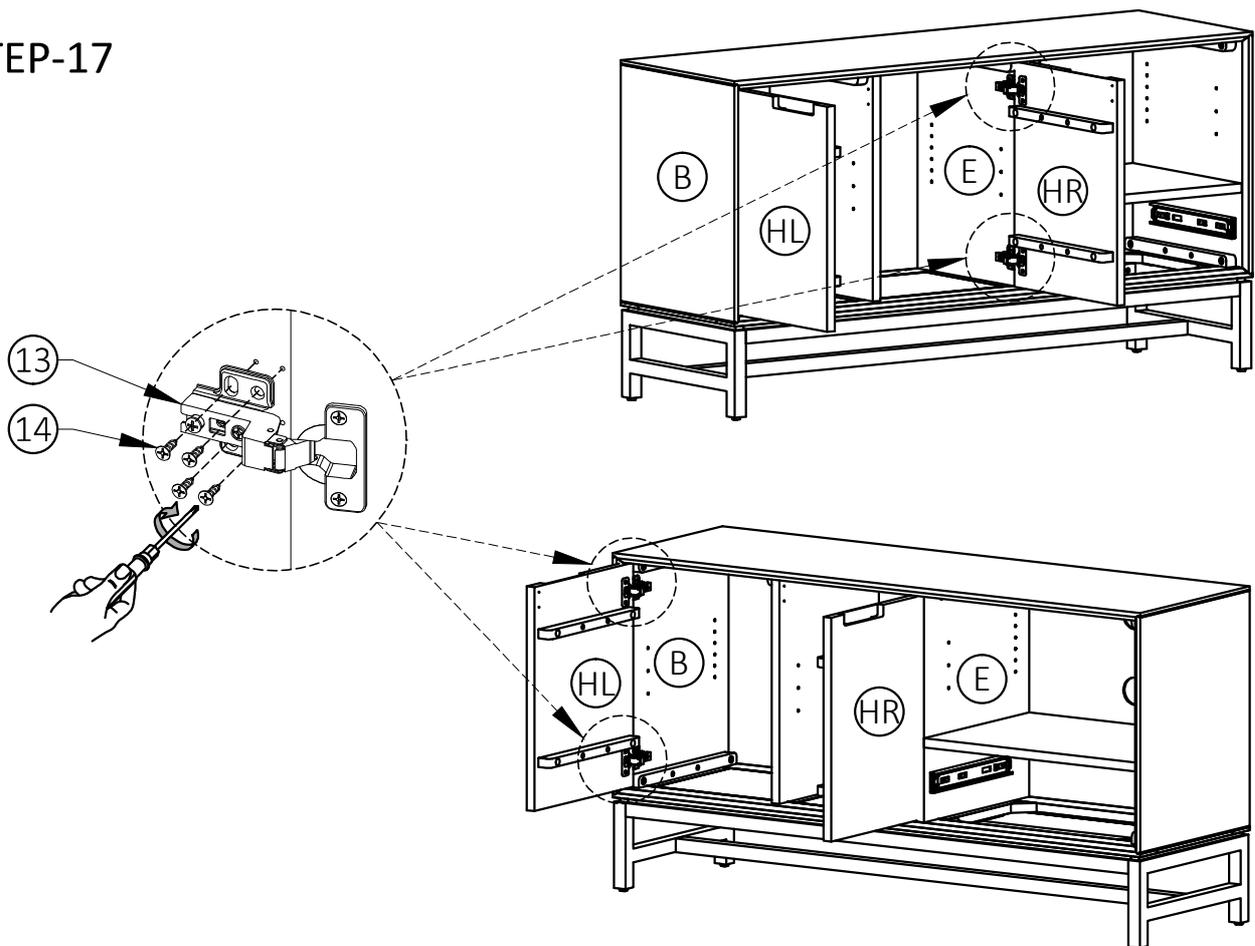

1. Attach Adjustable Hinges (13) on Doors (HL, HR) to Left Side (B), Divider 2 (E) using Phillips Screws (14) into pre-drilled holes on Left Side (B), Divider 2 (E).
2. Use Phillips screwdriver to snugly tighten screws.

## IMPORTANT NOTE:

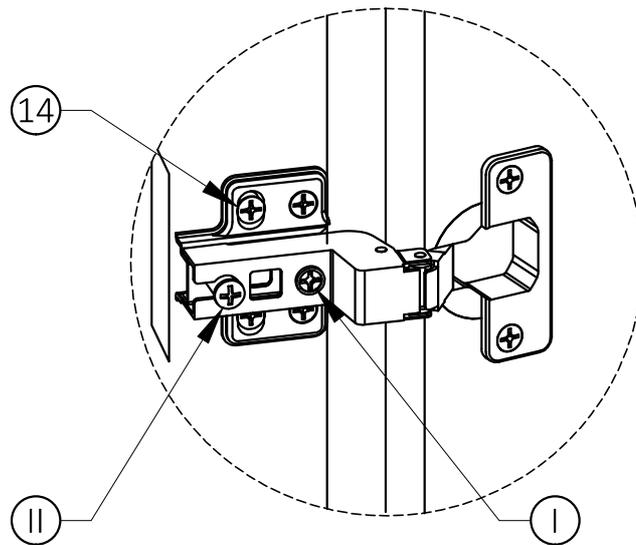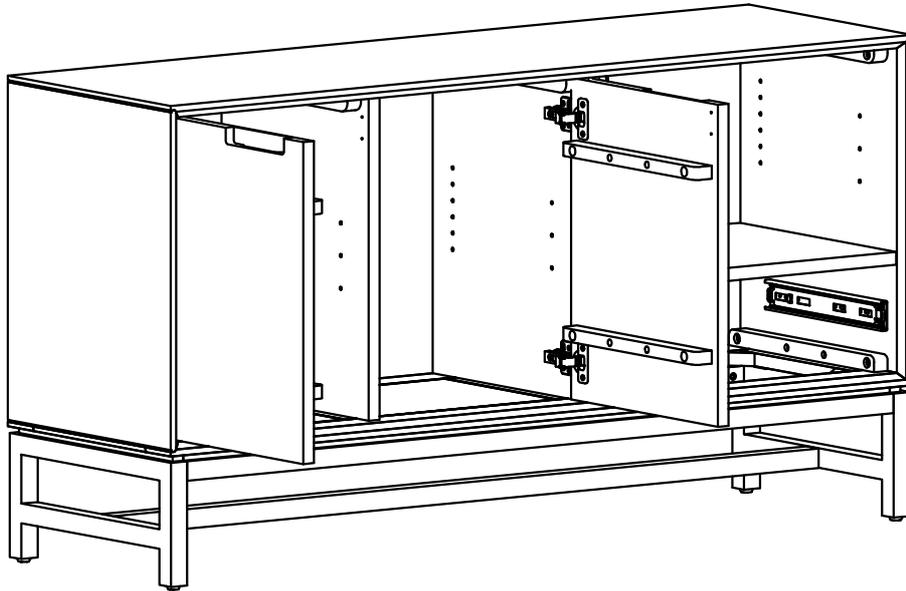

Tighten the Screw marked ⑪ to fasten hinge. The door may need to be adjusted so that all the spaces between the door and the unit sides are equal. To adjust, follow instructions:

1. Side adjustment 4 mm

To move the door towards the side panel, loosen screw ① and tighten screw ⑪.

To move the door away from the side panel, loosen screw ⑪ and tighten screw ①.

2. Depth adjustment 4 mm


Loosen screw ⑪ ( just one turn ), adjust door to desired position, re-tighten screw .

3. Height adjustment

Loosen screw ⑭ , adjust door to desired position, re-tighten screw .

# ASSEMBLY


## STEP-18

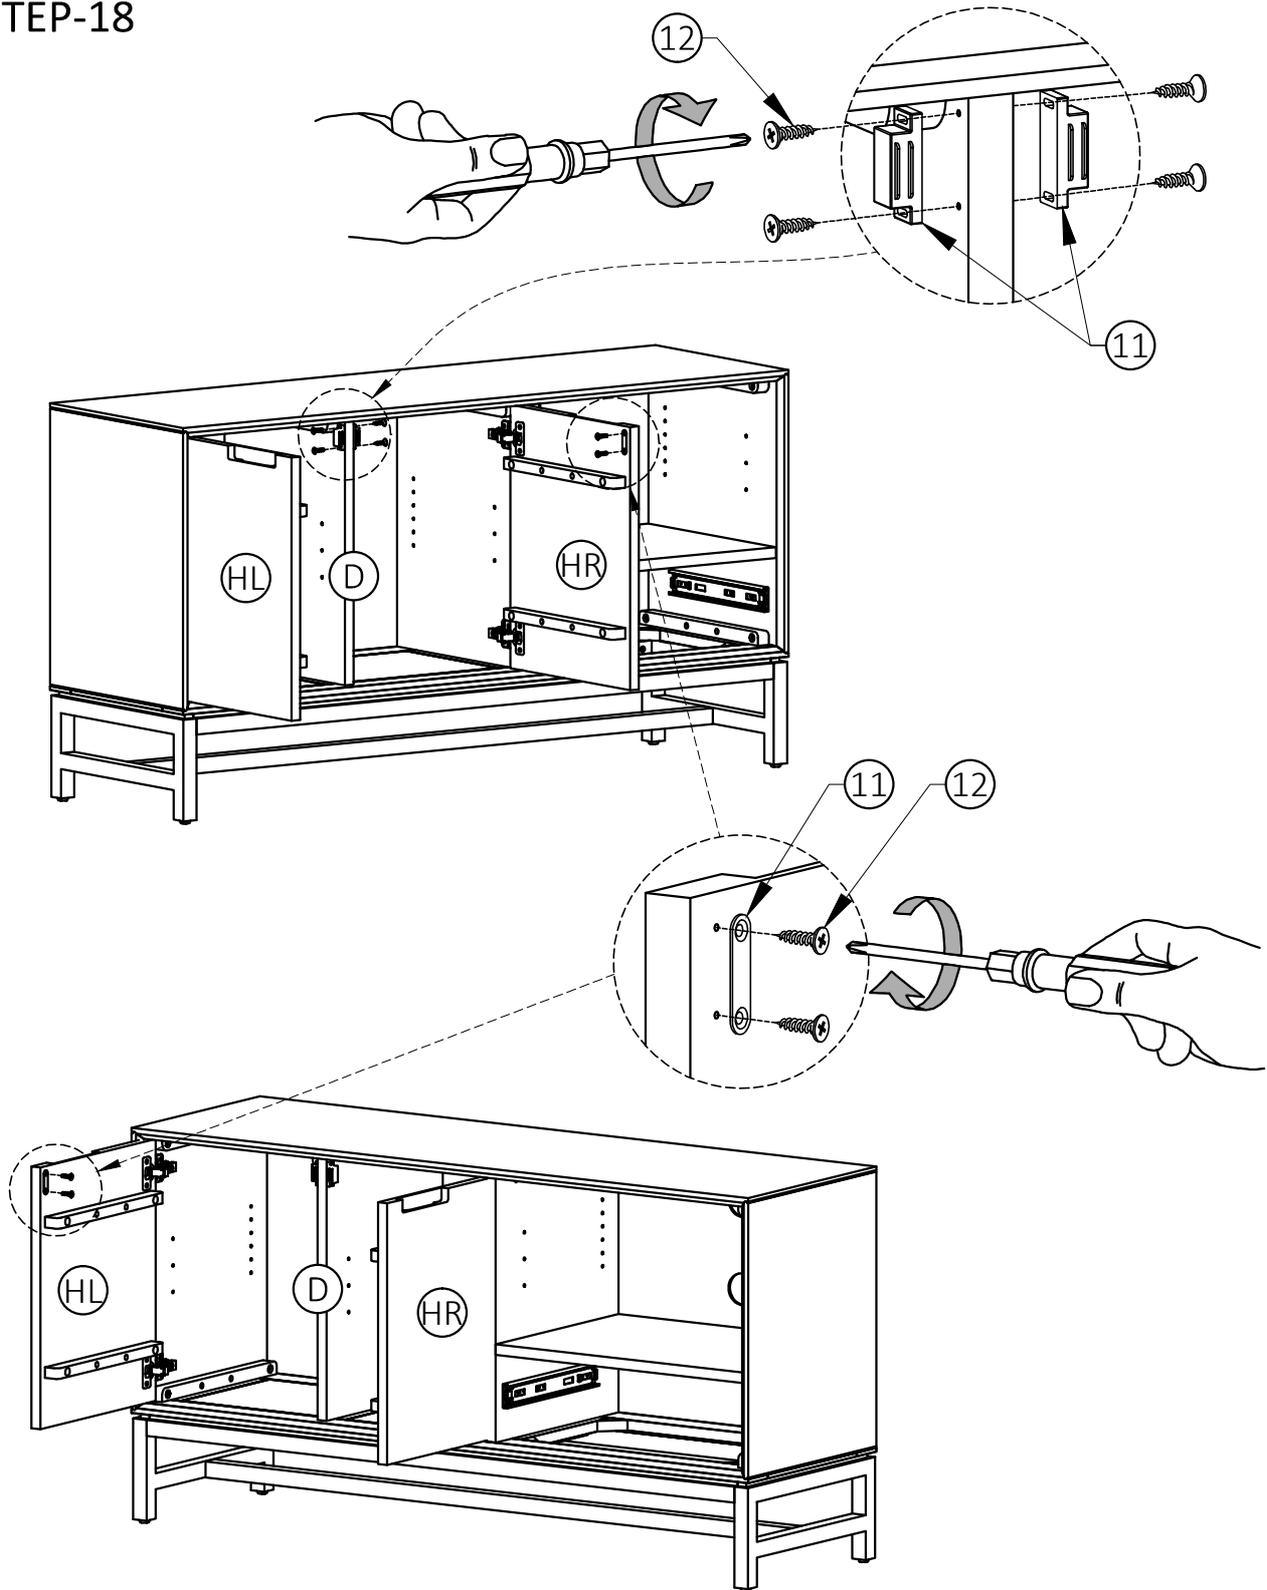

1. Attach Magnet Plates (11) to top corner of Doors (HL), (HR) using Phillips Screws (12) into pre-drilled holes on Doors (HL), (HR).
2. Attach Magnets (11) using Phillips Screws (12) into pre-drilled holes on Divider (D).
3. Use Phillips screwdriver to snugly tighten screw.

# ASSEMBLY



## STEP-19

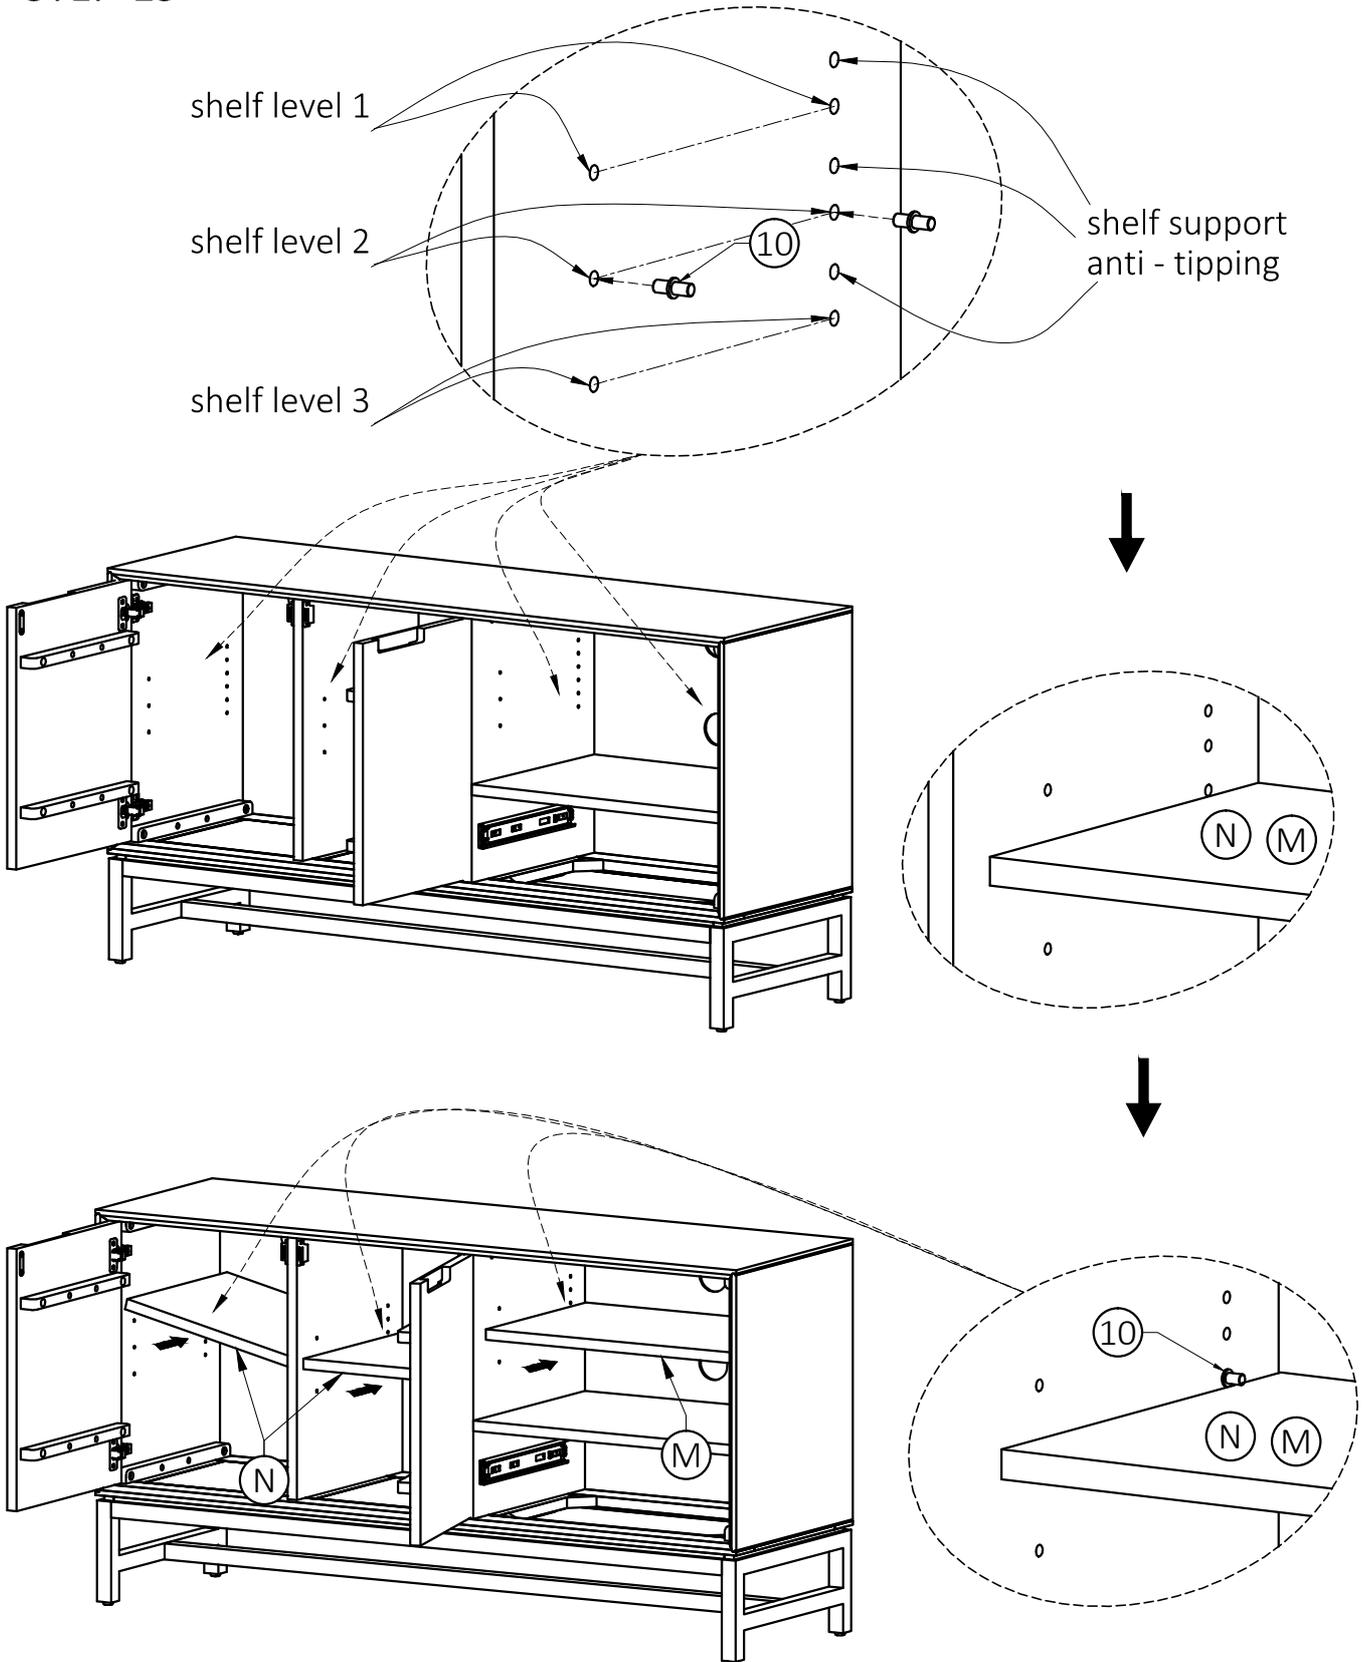





1. Use four Shelf Supports ⑩ for each Cabinet Shelf ④, ⑤ in desired location .
2. Two Shelf Supports ⑩ may be used on back top of each Cabinet Shelf ④ , ⑤ as a tipping restraint.

# ASSEMBLY

## STEP-20

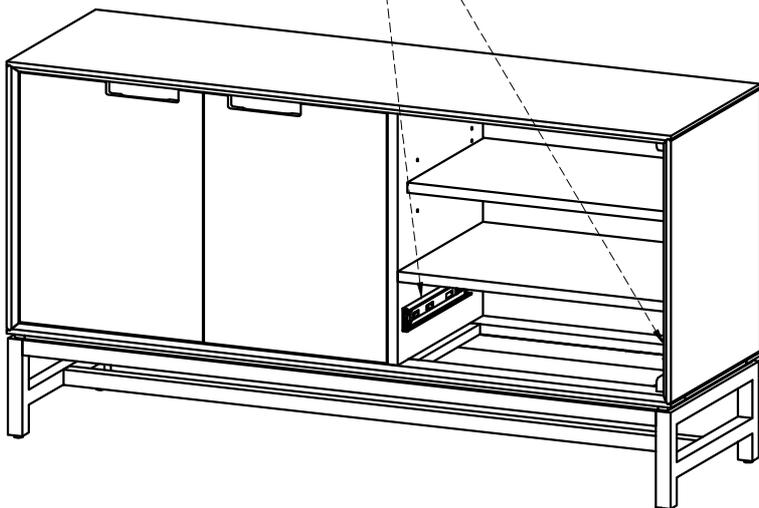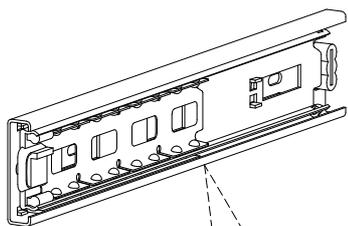

1. Insert assembled drawers into glides on assembled TV.

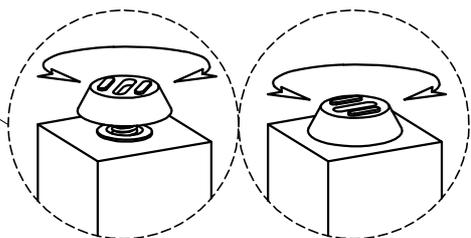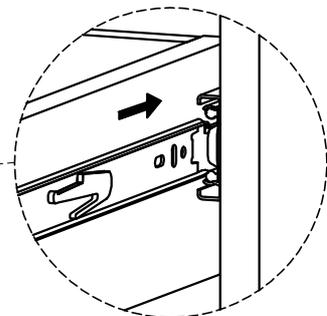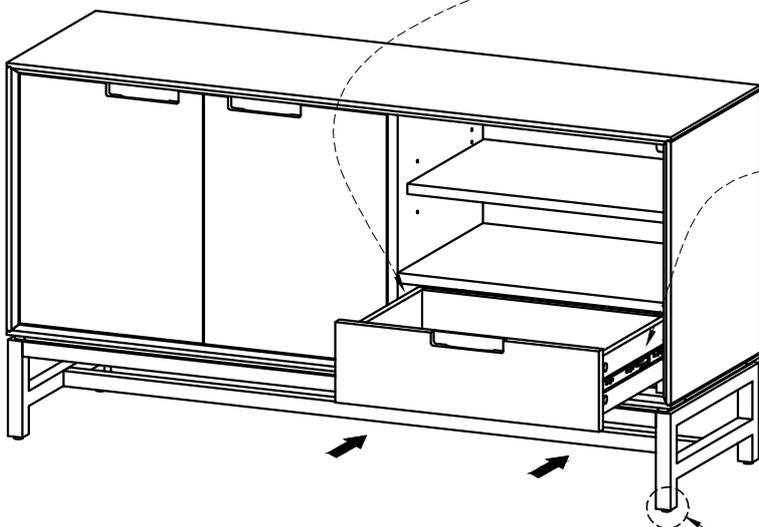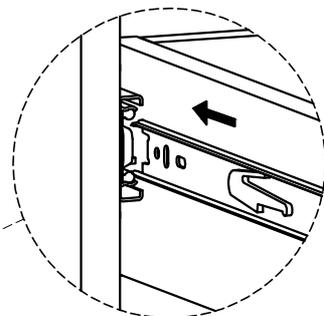

Note: Levelers on bottom of legs can be adjusted if floor is uneven.


## FURNITURE TIP OVER RESTRAINT ASSEMBLY




### WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.  
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

### STEP-21

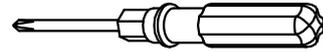


NOTE: The screwdriver is not included in the hardware pack.

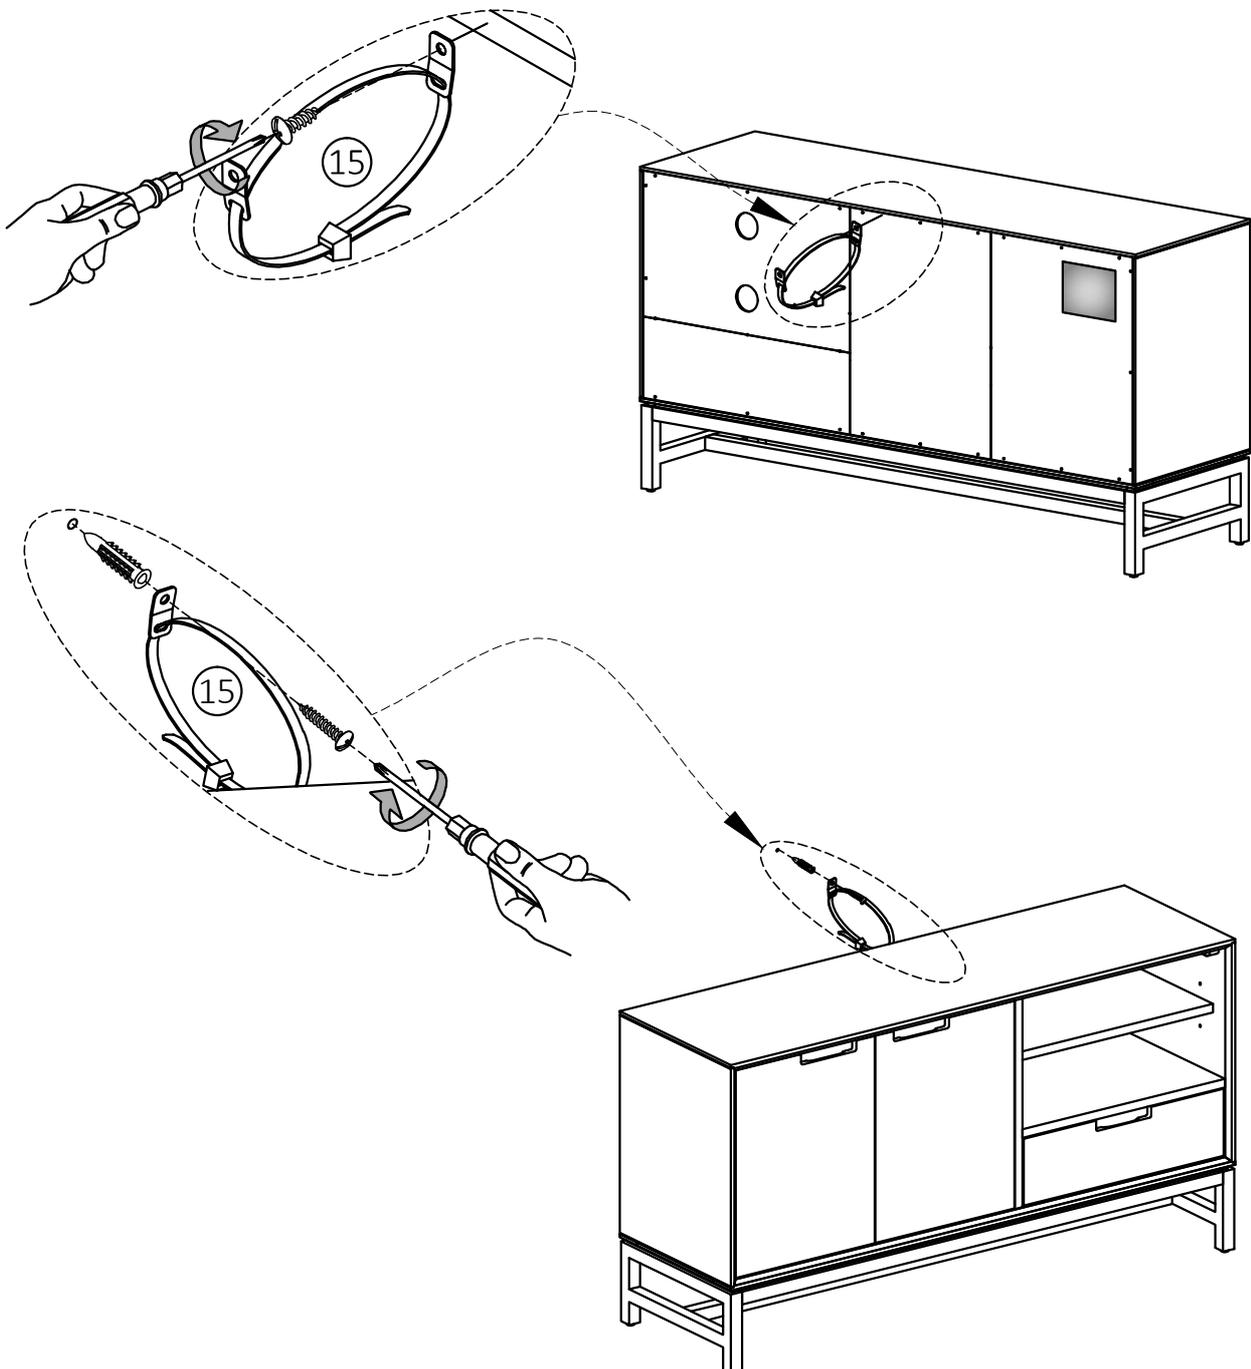


## FURNITURE TIP OVER RESTRAINT ASSEMBLY

### Furniture Tip Over Restraint Instructions:


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

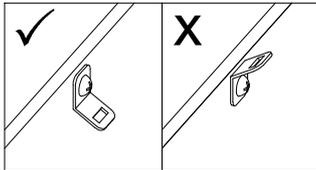

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches **below** the bracket mounted to the furniture.

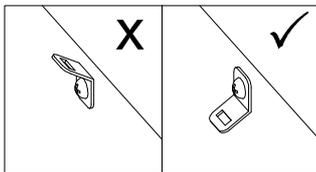

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

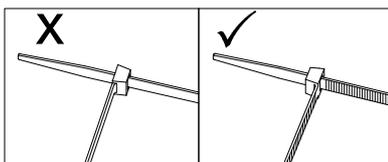

- **DO NOT** put a TV or other heavy objects on top of a chest of drawers or any other furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers
- **DO NOT** let children climb or hang on drawers, doors or shelves

## WARRANTY

Thank you for purchasing our product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.