


Purchase Date: ____ / ____ / ____ Order/Customer Reference Number: _____

Thank you for choosing us. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested with the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion.

CROSS-BACK GARDEN BENCH




Review all assembly and care information before using this product. Save this manual for future reference.

Assemble components on a soft, clean surface to avoid damaging the finish.

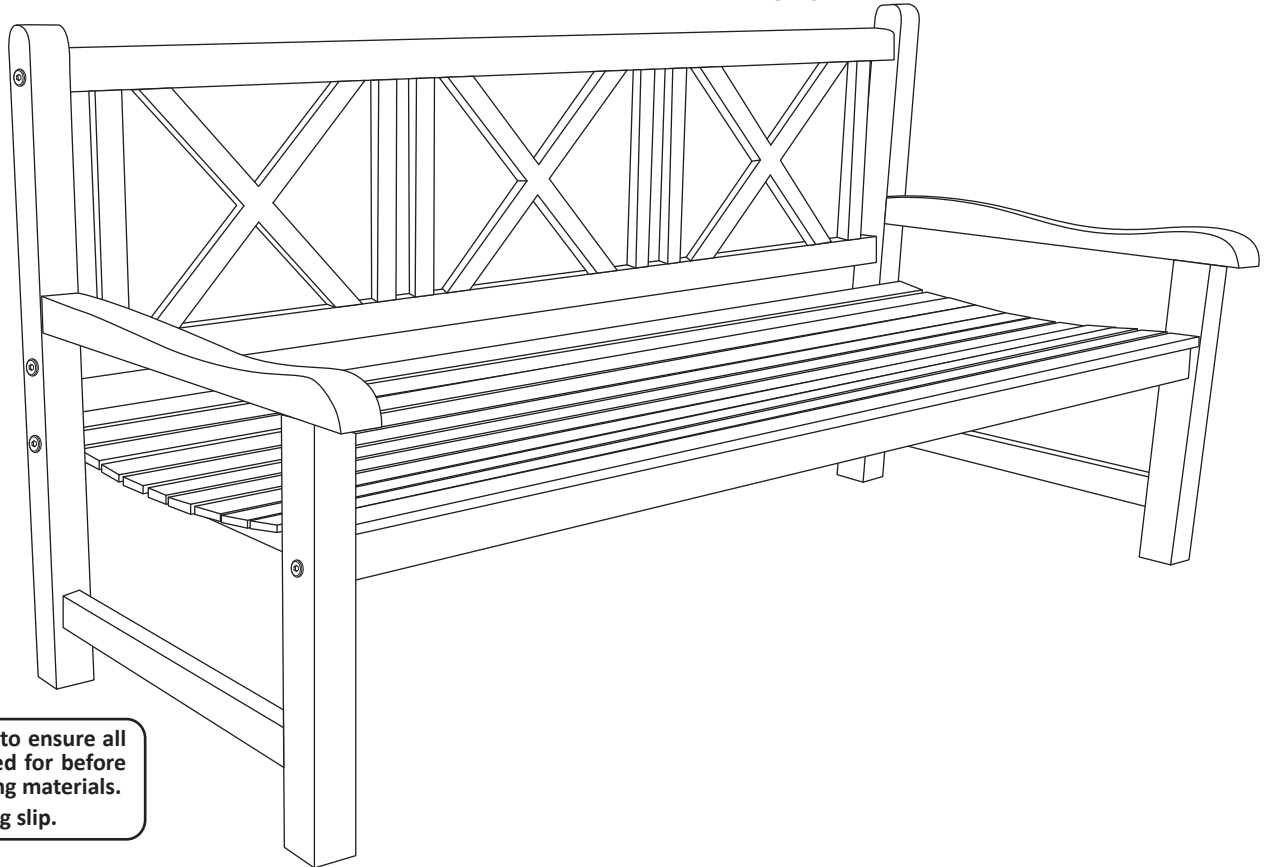

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

  Save the packing slip.

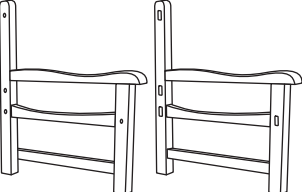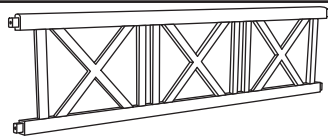No.	PARTS		QTY.
A		Side Panel (L/R)	2
B		Seat	1
C		Backrest	1
D		6cm Bolt	8
E		3cm Screw	4

INCLUDED TOOLS



Hex Key

NOTE: Save the included tool. Wood expands and contracts with changes in temperature and moisture, which may require hardware to be tightened.

TOOLS REQUIRED (not included)



Phillips Screwdriver


WARNING

CHOKING HAZARD—This item contains small parts that can be swallowed. Keep children and pets away during assembly.

ASSEMBLY

STEP 1


A: 1
C: 1
D: 2

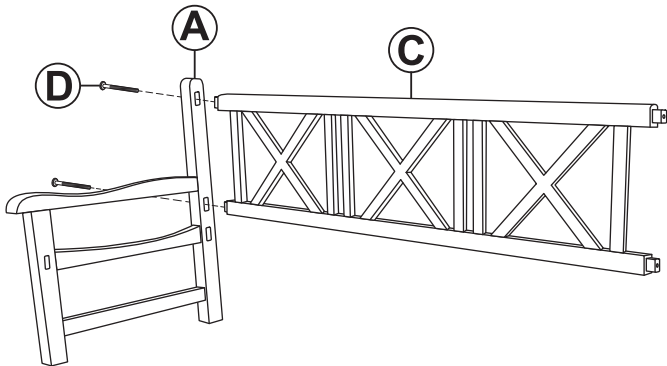

Secure Backrest (C) to the right Side Panel (A) using two 6cm Bolts (D).

STEP 2


B: 1
D: 2

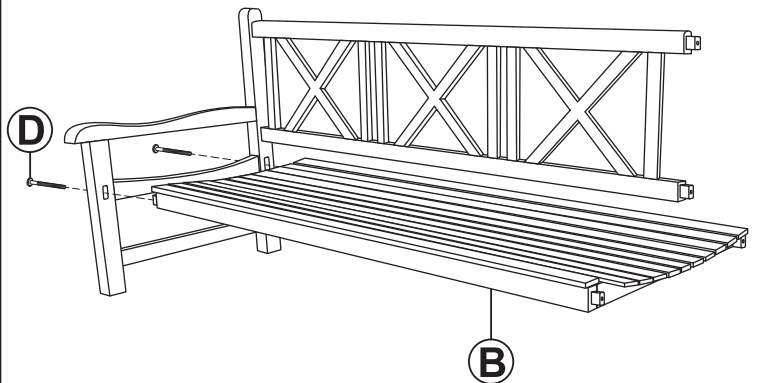

Secure Seat (B) to the right side panel using two 6cm Bolts (D).

STEP 3


A: 1
D: 4

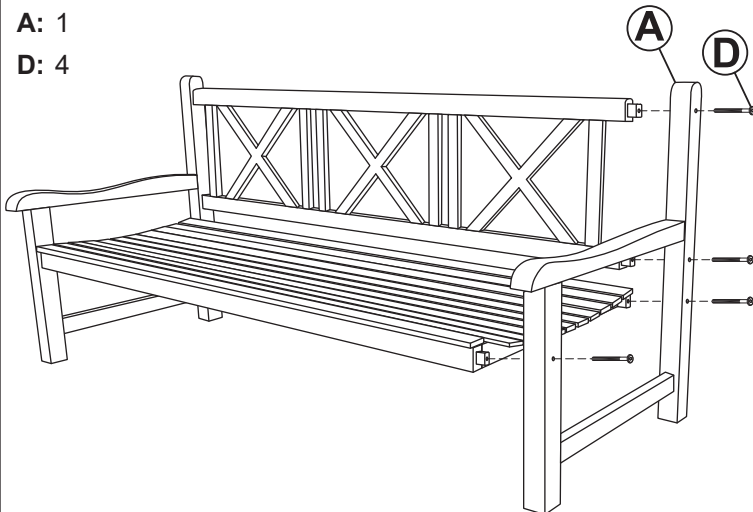

Secure the left Side Panel (A) to the backrest and seat using four 6cm Bolts (D).

STEP 4

E: 4

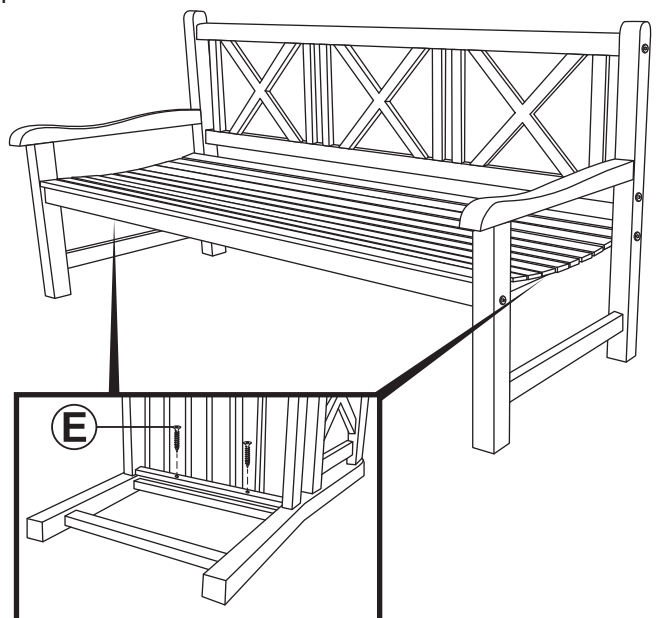

On the underside of the seat, secure each side of the seat to the side panels using two 3cm Screws (E).

Care & Maintenance

SAFE USE: Use on a flat, level surface. Do not exceed the weight capacity. Do not stand or climb on the unit.

EXPOSURE: Over time, sunlight and weather elements will cause the wood to oxidize, turning it to a silvery gray color. Additionally, long-term exposure to sun, rain, and high humidity may cause wood swelling. Stress caused from swelling can lead to splitting or cracking, cause hardware to loosen, and glued joints to fail. Maintenance is required to keep teak furniture in tip-top condition.

INSPECT: Periodically check assembly points and tighten fittings as necessary.

CLEANING: Identify the direction of the woodgrain. Following the direction of the woodgrain, wipe surfaces with a soft, dry cloth. Do not use harsh chemicals, abrasive materials, or a pressure washer to clean the unit.

CARE & STORAGE: Protect this item from inclement weather, especially ice and snow. Move to a dry indoor location when not in use.

Covering while in storage is recommended to help prevent dust build-up.

MAINTENANCE: If left untreated, the wood may weather. To maintain the appearance, apply a suitable penetrating wood oil (not included) at least once per year or when the wood looks particularly dry.

Before applying a suitable wood oil, clean the unit and bring it into a dry, warm, indoor location. Allow the unit to dry thoroughly before applying oil; drying may take several days. Only apply oil to wooden surfaces. Apply oil as directed by the wood oil manufacturer.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, OR CLEANING PRODUCTS.

SAFETY STATEMENTS & WARNINGS

- Do not exceed the weight capacity.
- Inspect hardware often and tighten as necessary.
- Do not put hot items on or near furniture.
- Do not use this item in the proximity of open flame or flammable/combustible chemicals.
- Keep this unit a safe distance from heat sources such as fire pits, patio heaters, and grills.
- Do not use harsh chemicals or abrasive materials to clean this unit.
- This product is for residential use only; institutional or commercial use will void this warranty.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.

Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.