

Manual for LED paper gun

Product warranty card

Product name _____ Product model _____

Manufacturing date _____ User purchase date _____

The end user

Company Name: _____ Contacts: _____
Address: _____ Telephone: _____
store

Contact person: _____ Tel: _____

Note: The above blanks must be truthfully filled in and stamped by the end user and the point of sale, otherwise no warranty will be issued.

Warranty period: the product is guaranteed for one year from the purchase date.

Warranty:

- 1, the warranty period within the normal state of the use of the product failure, according to the contents of the warranty terms, show this warranty card and purchasing machine ticket sample (copy), in the designated service center and manufacturers to enjoy free maintenance services.
2. Within the warranty period, paid maintenance services will be provided in the following cases.
 - 1) Cannot produce valid warranty card;
 - 2) Failure and damage caused during transportation and unloading;
 - 3) Failure and damage caused by failure to follow the operation instructions;
 - 4) Failure and damage caused by disassembly, repair and modification of the products without authorization of the manufacturer or by non-professionals;
 - 5) Failure caused by the use of control series not approved by the factory or not supported by the factory;
 - 6) Consumables (light bulbs);
3. Please keep this warranty card properly, and it will not be replaced if lost.

Please read this instruction carefully before use

1. Product description

Thank you for using our company's products. Please read the product instructions carefully before using our company's products.

LED paper gun is a unique design, durable, beautiful stage effects products, it is driven by DC12V lithium battery, easy to use in different venues, built-in lithium battery can be repeatedly charged, long service life.

The LEDDJ gun is fully manual controlled, easy to operate.

2. Machine operation

After receiving the newly purchased machine, first open a battery inside the backplane of the machine. After receiving the goods, it needs to be charged for 12 hours before use. If it is not enough, please charge it first and then use it.

1. Open the machine and put the colored paper (about 1 kg at a time). After that, there is a 5 meter tube, button down the gun switch, namely can launch smoke, also spout paper, (the use of the consumable material is carbon dioxide) (please gently button the machine, in case of damage) LED light belt switch on the machine, open to light!

3. Matters needing attention and troubleshooting after the DJ gun is fired, please release the handle immediately to prevent the battery short circuit for a long time, which may shorten the battery life.

When the power display is too low, please charge it in time.

After the machine is used, please turn off all switches.

The built-in battery of the machine is consumable.

If the battery is low or invalid due to long time use, please purchase a new battery from the supplier.

This machine is not waterproof design, such as outdoor use, please pay attention to rain and moisture.

Tips: Please fully charge the battery before use! 100% charge!

4. Technical parameters

Color; Three colors: red, blue, green (can mix colors)

Power: 150 w

Consumer: carbon dioxide gas

Jet distance: 8-10 meters

Machine size: 76*39*24cm

Machine weight: 4kg