


2 Attach Backrest (A) to Seat Deck (B) using Bolt (H), Washer (E) and Lock Washer (F). Tighten using provided Allen Key (D).

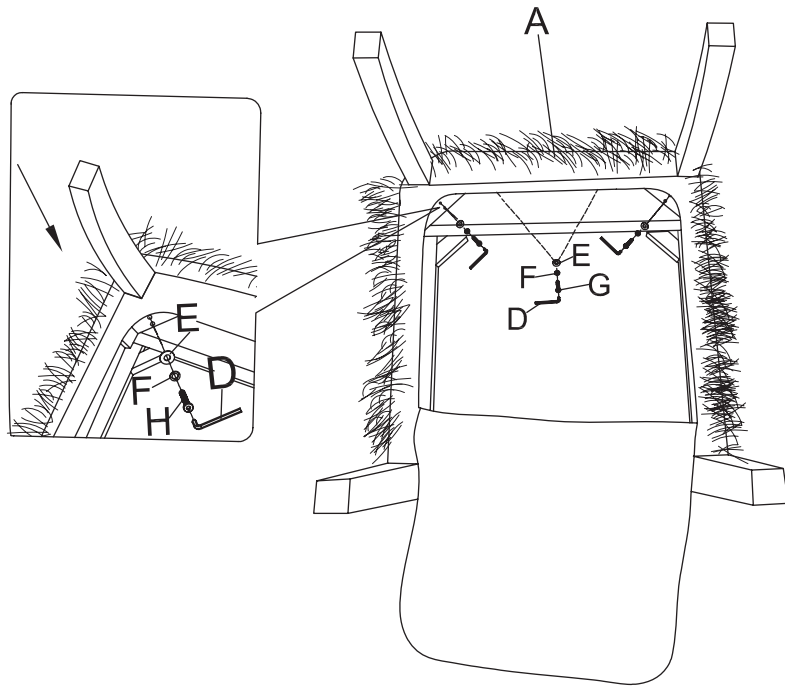

FUR SLIPPER CHAIR



ADULT ASSEMBLY REQUIRED


If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.



WARNING: This product may contain small components, please ensure they are kept away from small children.

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.

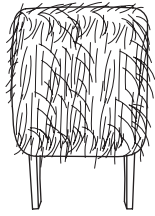

A. Backrest
1x



 
B. Seat Deck
1x



C. Front Legs
2x



D. Allen Key
1x



E. Washer
8x



F. Lock Washer
8x



G. Bolt
6x



H. Bolt
4x

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

- 1 Attach Front Legs (C) to Seat Deck (B) using Bolt (G), Washer (E) and Lock Washer (F). Tighten using provided Allen Key (D).

