

The washing machine suddenly stopped working?

It's probably the heat protector that's keeping you safe! When the washing machine is overheated (such as too much clothing, the poor ventilation) or abnormal load (such as clothing entanglement), the thermal protector will automatically cut off the power to prevent motor damage.

In this case please:


1. Suspend the use until the motor is cooled for more than 3 hours (the thermal protector automatically resets);
2. Take out some clothes to avoid overload;
3. Clean the vents at the bottom to ensure heat dissipation.

Daily attention: the amount of laundry should not exceed the fixed capacity, and regular cleaning of the filter screen and ventilation holes can effectively prevent abnormal shutdown.

## Portable Single Bucket Washing Machine


# Operating Manual

SKU:DSN090BL301A

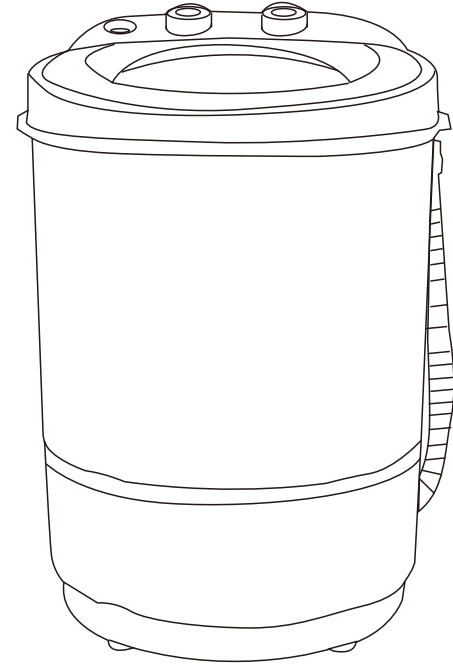

Before using the washing machine, please read this Manual carefully and keep it properly for reference.

### Name of Product Part


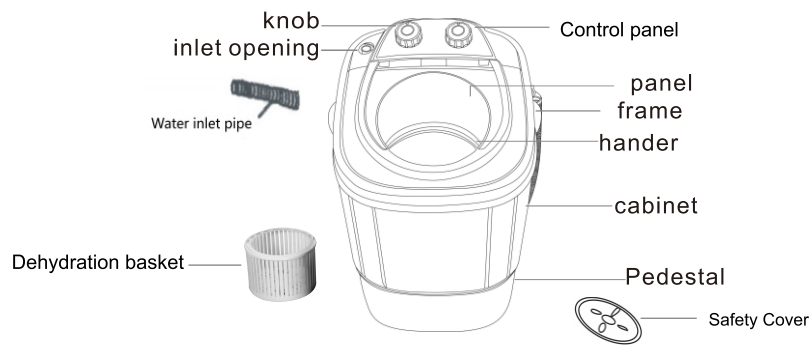


Notes: The figures in this Manual are all schematic diagrams. Due to the variety and constant updating of the products, the products you purchased may be inconsistent with the illustrations in this Manual. We apologize for the inconvenience caused to you!





\* The picture is for reference only, and the material object shall prevail.
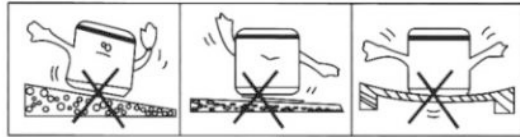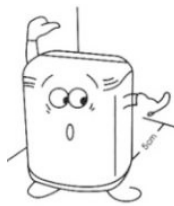
### Install the Washing Machine on a Solid and Flat Ground


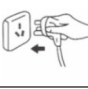


- ★ Place the washing machine on a solid and flat ground, with a maximum allowable angle of inclination of 2°.
- ★ Place the washing machine at least 5cm away from the wall to prevent any noise during operation.




### Preparation Before Operation

	Take out keys, pins, coins, etc. from the clothes.		Do not wash clothes stained with chemical reagents in the washing machine.
	When washing wool clothes, turn the inside out.		When washing high-end clothes and down jackets, wrap them in a washing net.

### Washing Operation Method

	Connect the tap faucet and insert the other end into the water inlet.		Plug the power cord into the socket.
	When washing, hang the drain pipe. When draining, put down the drain pipe. Please follow the Manual.		Place clothes in the washing machine and add a proper amount of washing powder.

- Add an appropriate amount of water according to the laundry load, ensuring it does not exceed the maximum water level line. Excessive water will overflow automatically, causing waste. After the washing cycle is complete, turn on the drain switch to drain the water.
- Set the washing time  (rotate the "Washing Timing" button)

When the water reaches the set water level, rotate the "Washing Timing" button clockwise to set the required time, and the washing machine will start working.

Washing Selection	Silk, Wool and High-end Clothes	Standard Common Cotton and Linen Products	Dirty Clothes	Water (L)	Volume	Washing Powder Amount
Maximum (43)				40-57g		
Moderate (36)				30-48g		
Minimum (30)				25-40g		
Washing Time	3-5min	5-9min	9-15min			





### Dewatering

1. After washing is finished, put down the drain pipe to drain the water in the bucket.
2. Place the clothes flat into the spin dryer, then align them with the positioning slot of the impeller, put it in, and rotate it counterclockwise to get stuck. The sound of "click" indicates that the dewatering bucket and the impeller are fully connected in place. Cover the safety cover, set the program selection knob to "Dewatering Position", and rotate the knob to the required dewatering time according to the type of clothes to start dewatering.
3. Caution: The clothes should be placed flat and pressed with a pressing board to avoid the machine shaking caused by left and right unevenness.
4. When the dewatering time is up, open the cover and rotate the dewatering bucket clockwise to take out the clothes.

### After Washing

- ★ Unplug the power cord.
- ★ Remove debris from the bucket, wipe off the water stains and open the door cover to release internal moisture.

### Precautions

	Do not install the washing machine in a damp place.		Do not get the electric knobs wet.
	Please do not connect hot water source, please use cold water source to work		Do not wipe the washing machine with volatile solvents such as gasoline.

- ★ Unplug the power cord after washing.

★ The length of the extended drain pipe should not exceed 2cm, and the drop height of the drain pipe must be above 15cm.

★ Do not seal the outlet of the drain pipe in the sewer, for no air will enter the drain pipe in the event of drainage under sealed condition, which will cause poor drainage or undrained phenomenon.

★ If the power cord is damaged, it must be replaced by a professional of the manufacturer, its maintenance department or similar department in order to avoid danger.