
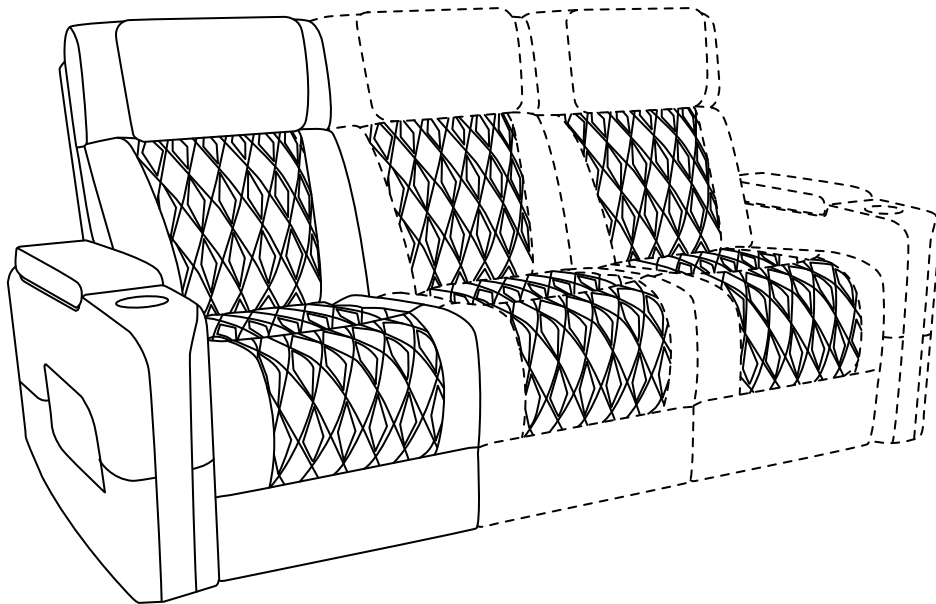
 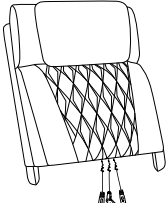

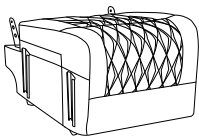
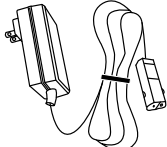


Power Left Chair **Assembly Manual**

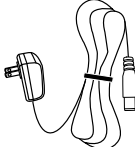


THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Parts


A-L  Back	B-L  Left Armrest	C-L  Seat
D  Power Supply (Output: 29V / 3A)	E  Power Supply (Output: 12V / 1A)	

Before you begin: Locate the Power Supply (D) and the Power Supply (E) at the bottom of Power Left Chair Seat.

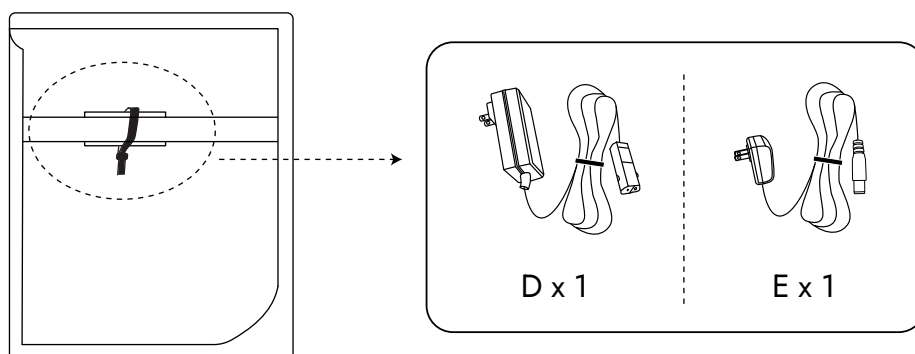


Step 1: Slide the Left Armrest (B-L) into the Seat (C-L). Push down the Left Armrest (B-L) firmly until it is locked into place.


Note: Not allow to sit on the armrest after it is installed.

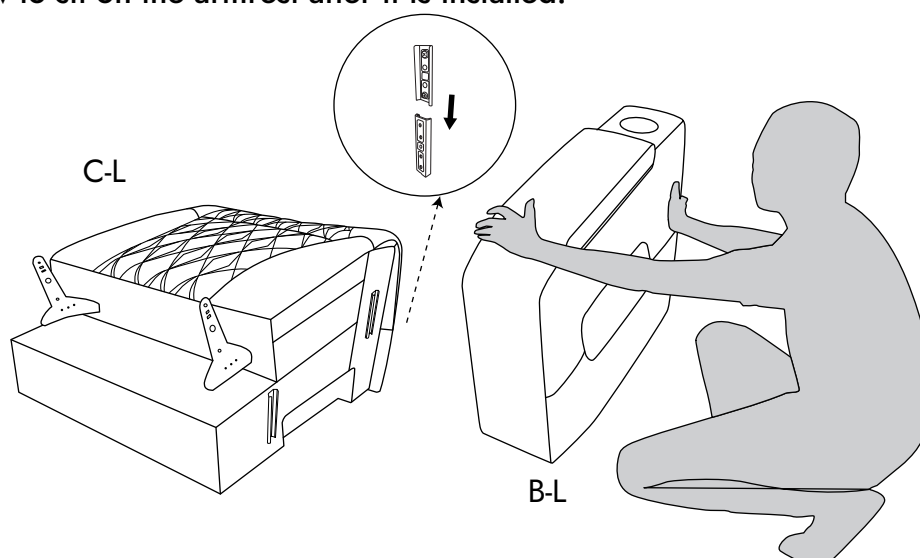


Step 2: Zip up the Back (A-L) and the Seat (C-L) together.

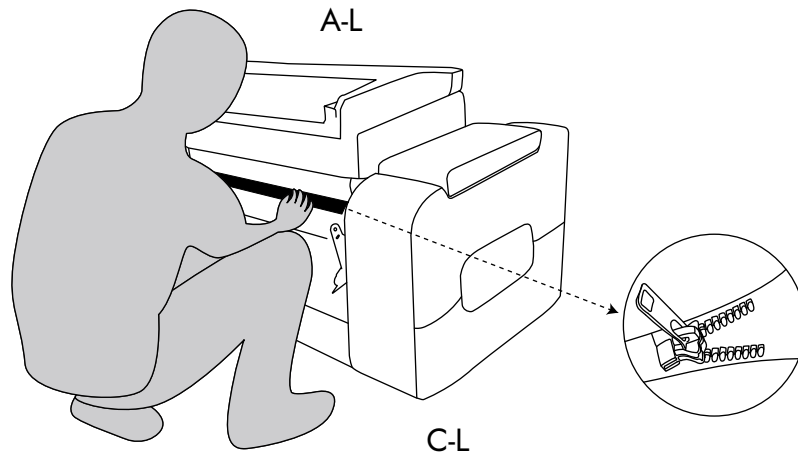


Step 3: Slide the Back (A-L) into the metallic quick connectors of the Seat (C-L). Push down the Back (A-L) firmly until each side is locked into place and an audible “click” is heard.

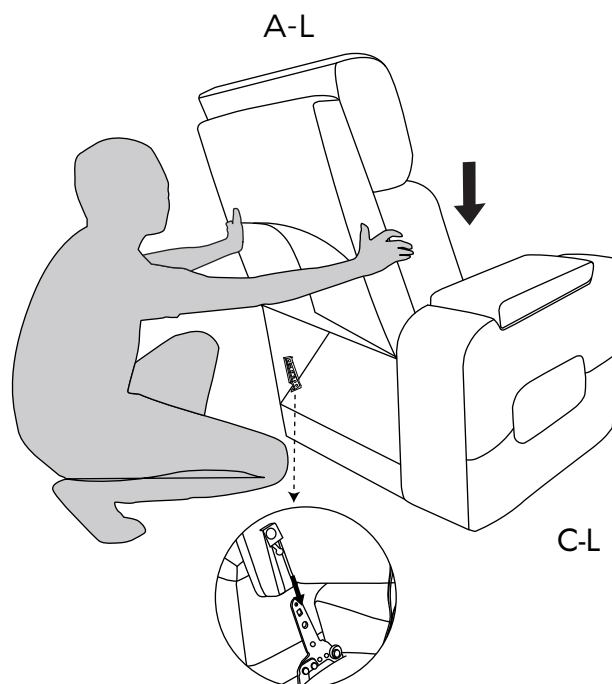

Step 4: Connect the wires by matching the colors (white to white, red to red, and black to black) at the back of the Seat (C-L). Connect the wires according to the corresponding labels. (Mc to Mc) at the back of the Seat (C-L).

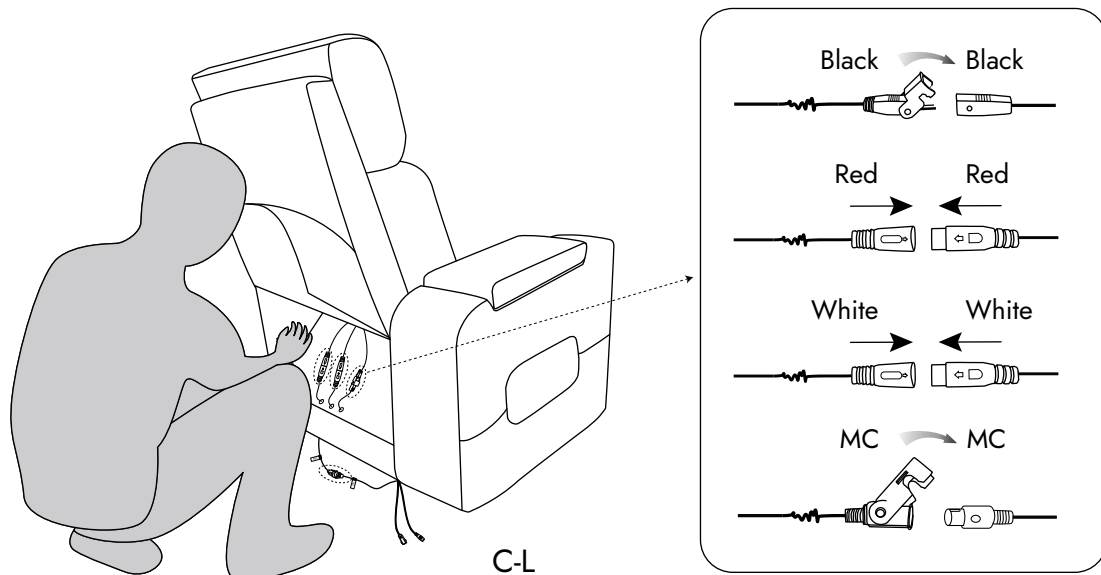


Step 5: Attach the back cover to the bottom of the Seat (C-L) with Velcro.

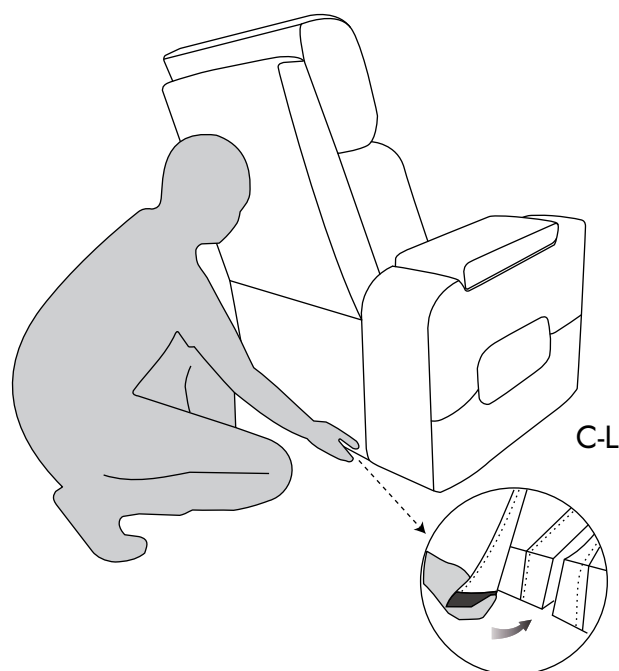


How to Connect

Step 1: Attach each piece with brackets on the side. Kindly note to attach from Right hand to Left hand.

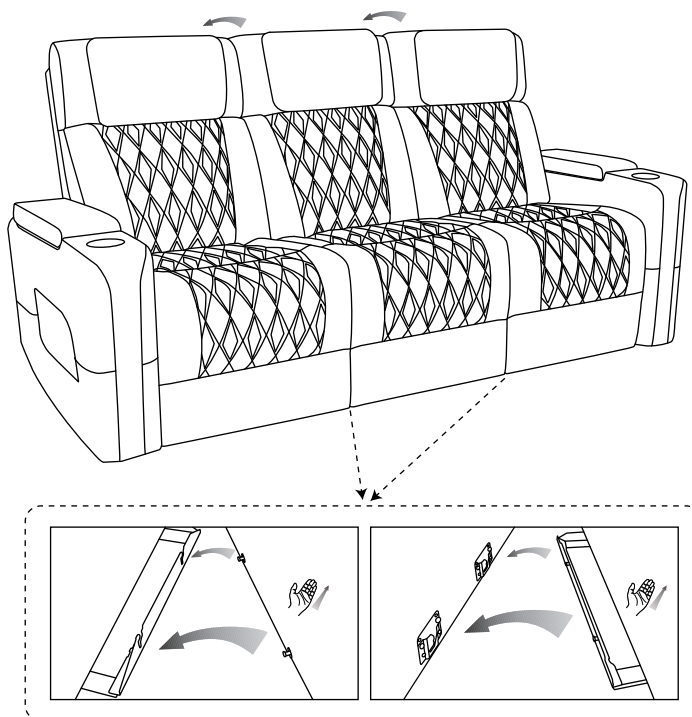


Step 2: Once installed, flip the sofa over and connect the light strip. After connection is complete, put on the protective cover.


Note: After three seats are securely connected, tilt them backward together, connect the light strip terminals, then flip back the entire assembled sofa as a whole. Do not connect the light strip terminals first, otherwise they may be pulled off and damaged.

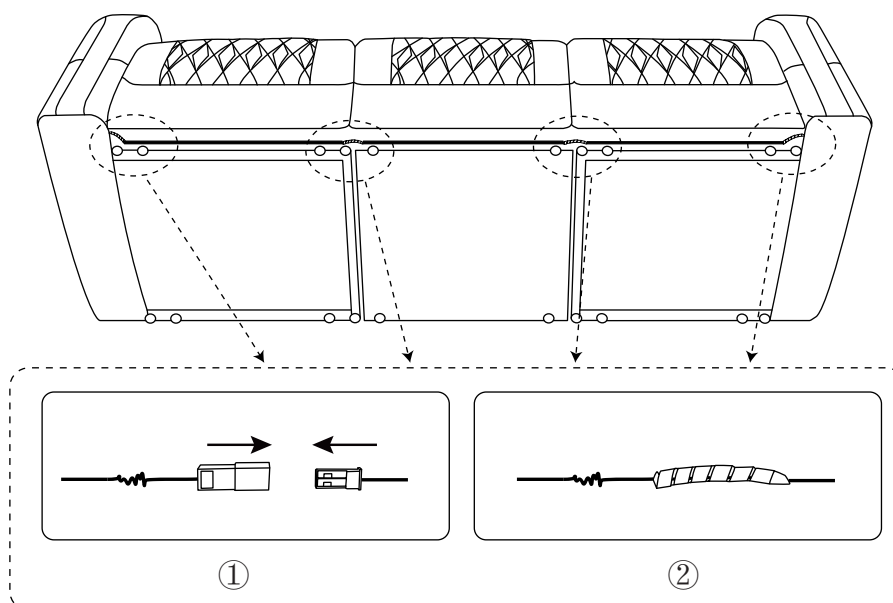


Step 3: After turning the sofa right side up. Take out the 3Y cable from the Right Armrest storage box. Using 3-Y cable (from Console parts) to connect your Console and Power Left Recliner together. Plug the Power Supply into the power outlet.

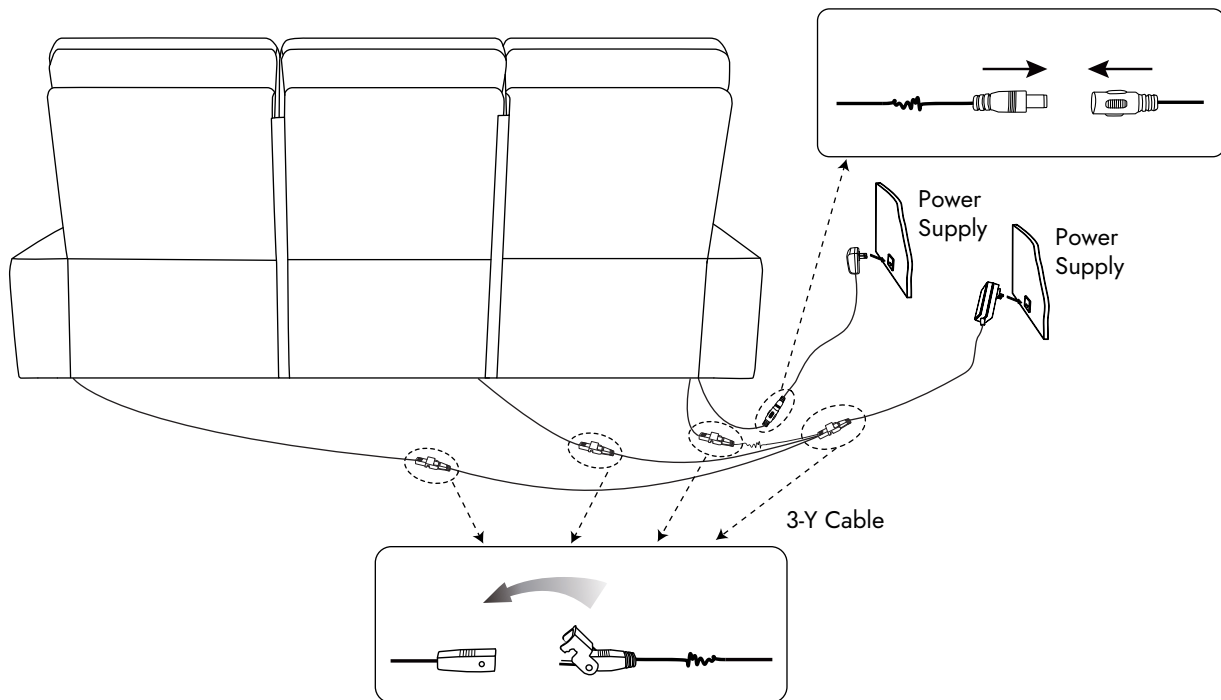

Step 4: After the chair is powered on, you can enjoy by adjusting it with the Hand Controller. (The Hand Controllers are in the storage boxes.)

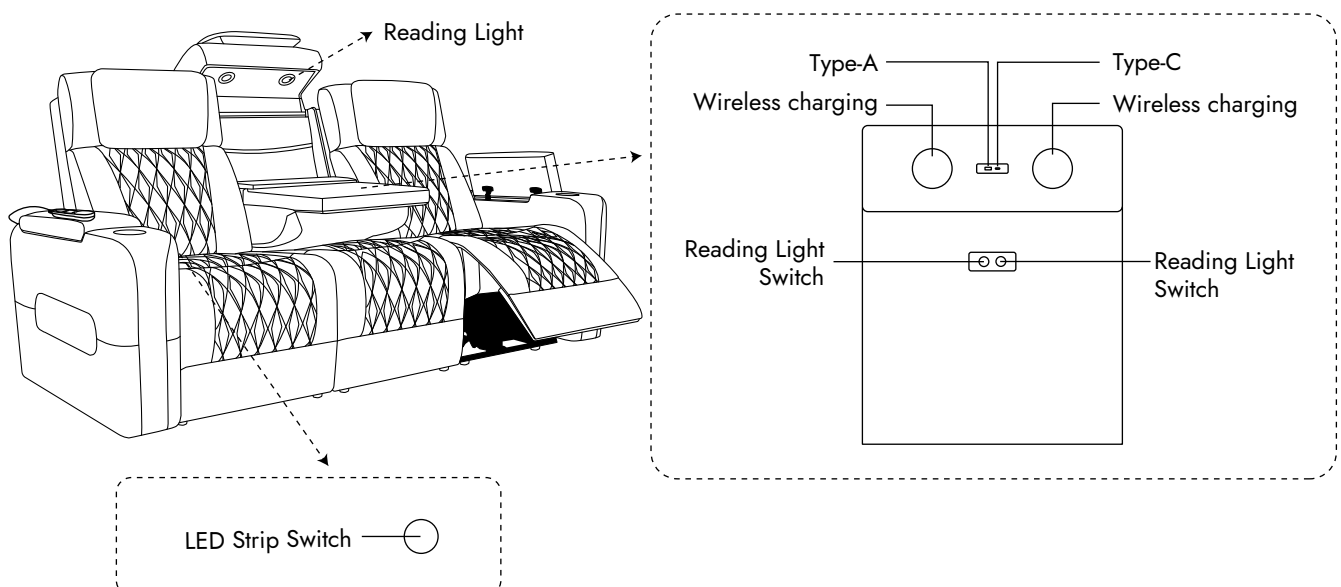

Hand Controller User Manual

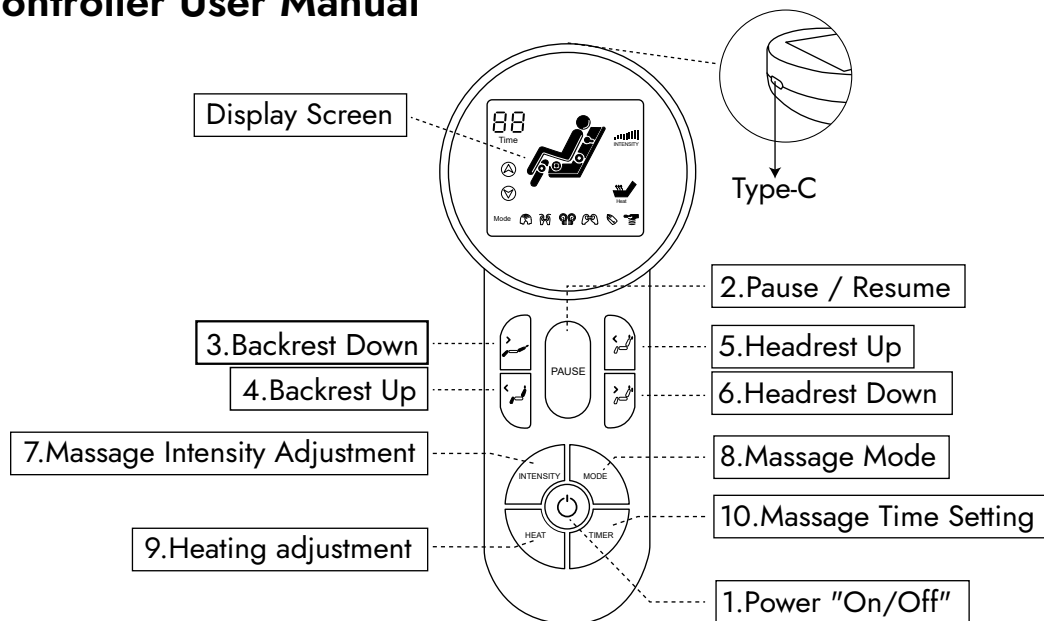

Button Operation Instructions

1. : Press and hold the "On / Off" button for 2 seconds.

Press once to turn it on. It will be in low-grade heating mode, and the icon will flash slowly.

Press once more, and it will be in medium-grade heating mode, with the icon flashing more quickly.

Press once more, and it will be in high-grade heating mode, and the icon will flash rapidly.

Continue to press, and the heating function will be turned off.

2. PAUSE: Pause or resume the massage.

With the heating and vibration massage functions activated, press this button once to pause both heating and vibration massage operations, and the countdown timer will also pause. Press it again to resume all functions.

Instructions

(1) During pause mode: Press the [HEAT] button first. The heating function will keep running, the vibrator will remain paused, and the countdown timer will start. When the timer expires, both the vibrator and heating function will turn off automatically.

(2) During pause mode: Press the [PAUSE] button first. Both the heating function and vibrator will keep running, and the countdown timer will start. When the timer expires, both the vibrator and heating function will turn off automatically.

3. : Long-press to lower the backrest.

4. : Long-press to raise the backrest.

5. : Long-press to raise the headrest.

6. : Long-press to lower the headrest.

7. INTENSITY: Massage intensity with 3 levels: Low / Medium / High.


Default to Low when powered on.

8. MODE: 6 kinds of massage modes for switching.

9. HEAT: 3 heating levels selectable: press once for Low, press again for Medium, press a third time for High, and press a fourth time to turn off heating.

10. TIMER: Massage Time Setting: Maximum setting is 60 minutes; 15 minutes is the default upon power-on.

Instructions for Screen Display Area

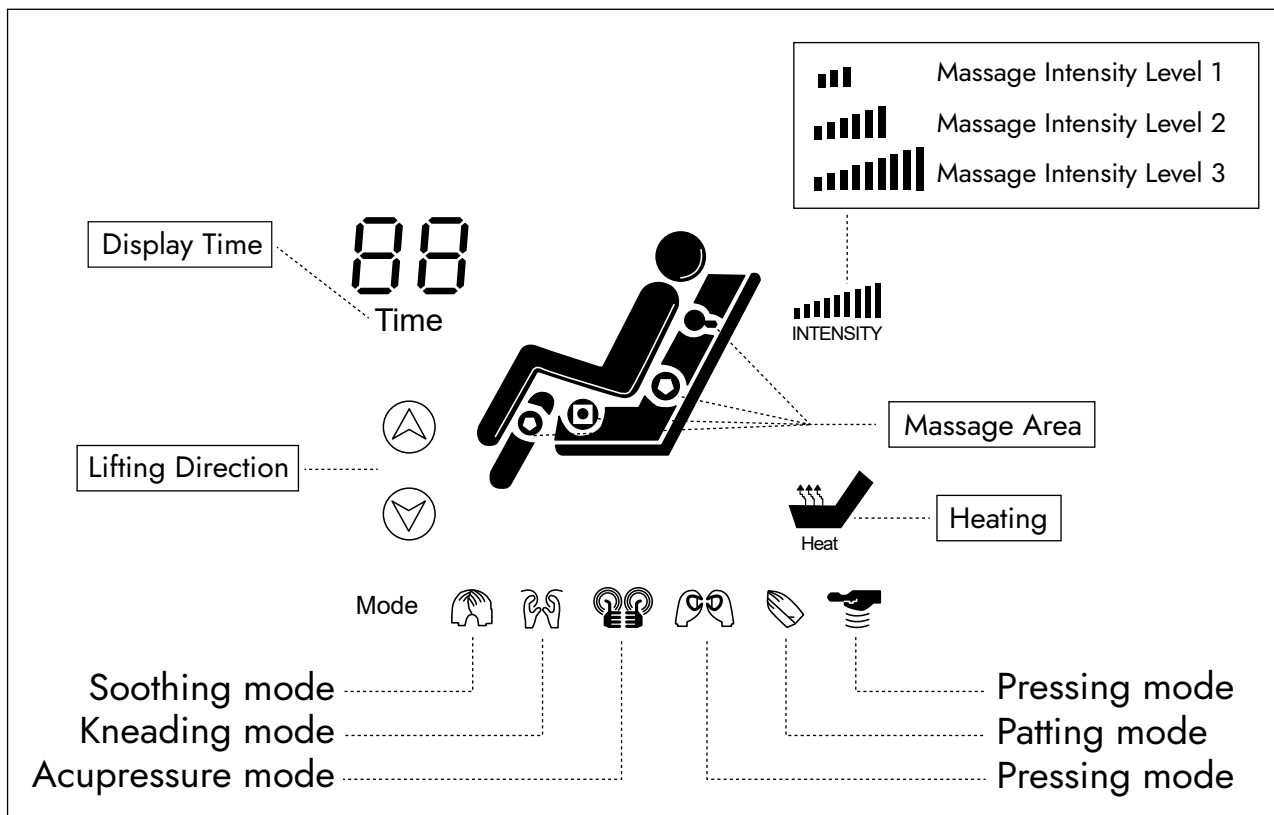

Common Troubleshooting

Fault	Possible Causes and Solutions
No power	1. Power not connected. 2. Power cord disconnected or plug not properly inserted. 3. Connected outlet is faulty.
Light strip not lit.	1. Check if the light strip power is connected. 2. Check if the connection of the light strip terminals at the bottom is loose.