


INSTRUCTION MANUAL

ELECTRIC FIREPLACE

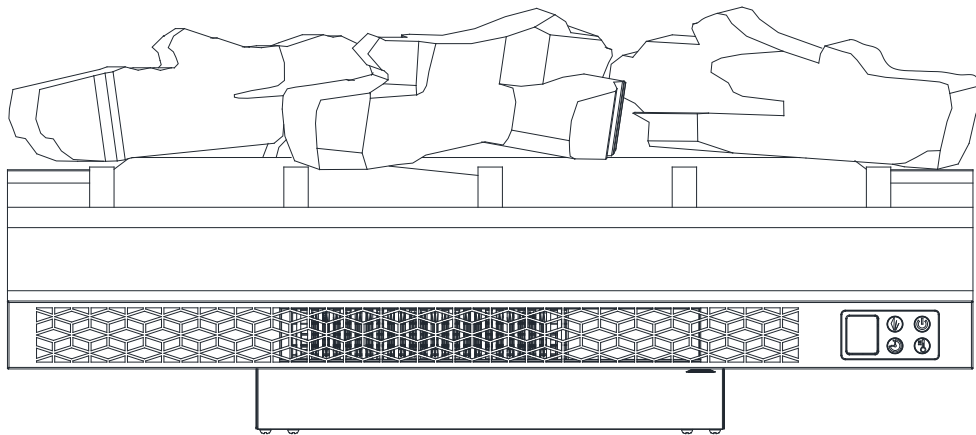

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Safety Information.....3

Pre-installation.....6

Assembly.....7

Operation.....9

Using the Remote Control.....12

Care and Maintenance..... 13

Troubleshooting..... 14

Safety Information

IMPORTANT SAFETY INFORMATION

PLEASE READ ALL OF THE INFORMATION IN THIS OPERATING MANUAL, INCLUDING ALL SAFETY, OPERATING, AND MAINTENANCE INFORMATION. TO AVOID THE POTENTIAL RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, USERS SHOULD FOLLOW THE DIRECTIONS AND WARNINGS IN THIS MANUAL

Read all instructions before using this heater.

Do not use this heater outdoors.

This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container.

Do not run the power cord under carpeting. Do not cover the power cord with throw rugs, runners, or the like.

Arrange the power cord away from traffic areas and where it will not be tripped over.

To disconnect the heater, first turn the controls to "Off", then unplug it from the power outlet.

Connect to properly grounded outlets only. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

To prevent a possible fire, do not block firebox air intakes or the exhaust in any manner. Do not operate the firebox on soft surfaces, like a bed, where openings may become blocked.

There is a thermostat limiter inside the heater. When the inner temperature over heats or abnormal heating occurs, the thermostat protective device cuts off the power supply to avoid fireplace damaged or risk of fire.

Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.

SAVE THESE INSTRUCTIONS



WARNING

There are no user-serviceable parts inside the fireplace/heater. If the unit malfunctions, turn it off, unplug it from the wall immediately, and contact Customer Service.



WARNING

This heater becomes hot during use. To prevent burns, avoid contact between bare skin and hot surfaces. If available, use the handles when moving the heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet (0.9 meters) away from the front, sides, and rear of the heater.



WARNING

Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.



WARNING

Always unplug the heater when not in use.



WARNING

Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return the heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.



WARNING

Do not insert or allow foreign objects to enter any ventilation or exhaust openings as this may cause an electric shock or fire, or damage the heater.



WARNING

Heater has hot and arching or sparking parts inside. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.



CAUTION

While the heater is in use, the top center of the fireplace can get hot to the touch, and may cause serious injury or burns. Always supervise small children around the fireplace / heater. Do not place any cloth or decorations over the heater outlet of the fireplace, or obstruct it in any way, as this may cause a fire and result in serious injury.

Safety Information (continued)

GROUNDING INSTRUCTIONS





DANGER

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product must be grounded. In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current, reducing the risk of electric shock. This product is equipped with a cord that has an equipment-grounding conductor and a grounding plug. The plug must be inserted into a properly installed and grounded outlet in accordance with all local codes and ordinances.

This heater is designed for use with 120-volt circuits and has a grounded plug. If needed, an adapter can be purchased from a local electronics store or online supplier to connect three-prong grounding plugs to two-slot outlets. The green grounding lug on the adapter must be connected to a permanent ground, such as a properly grounded outlet box. Do not use the adapter if a three-slot grounded outlet is available.

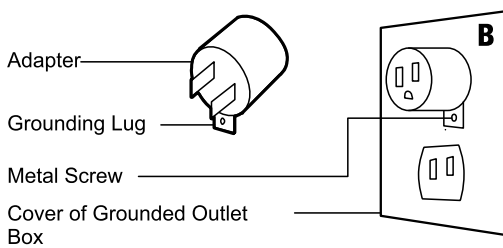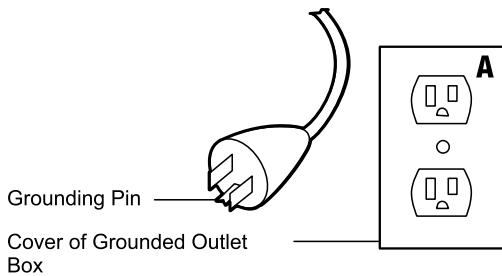


Pre-installation


TECHNICAL SPECIFICATION

Model Number	Description
Power Rating	1400W
Voltage	120V
Frequency	60Hz


PACKAGE CONTENT

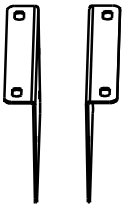

Bracket A

 


Remote Control

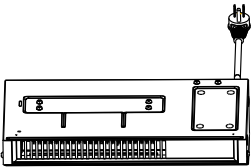


Heater



 Front panel



Ember

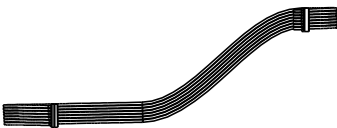


USB Cable

Operation


Identifying the control panel

- The control panel is located on the top right corner of the fireplace/heater unit.
- The control panel contains the display unit (1), function indicator (2), timer function (3), heater control (4), flames control (5), and main power(6).
- The display unit (1) displays information about the flame level, time, and current temperature.

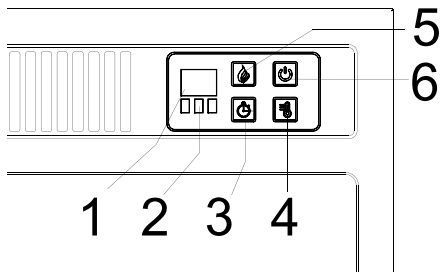

Understanding the function indicator

- The function indicator (2) features three square LEDs: red, green, and blue. The red LED indicates that the Fahrenheit temperature heating function is active, the green LED shows that the Celsius temperature heating function is running, and the blue LED signifies that the timer function is engaged.
- Located below the three LEDs is the infrared receiver module, which communicates with the remote control to operate the heater.

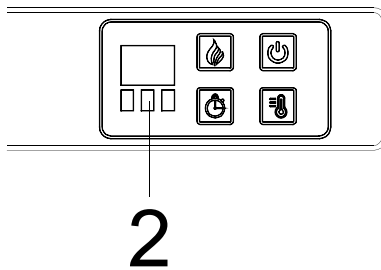


Operation

Using the timer function

The timer button (3) allows you to set the amount of time you want the fireplace/heater to run. It controls both the flames and the heater function. When the timer is set, it will manage whichever function is operating: if the heater is on, the timer will control the heater; if the flames are on, the timer will control the flames. If both the heater and flames are operating, the timer will control both.

Pressing the button in sequence will set the timer for a specific interval, which is displayed in blue on display (1). The set intervals are listed in the accompanying table. The timer starts counting down from the moment the interval is selected. Note that there is no clock function for scheduling the heater or flames to turn on or off at a specific time.

Button Press	Timer Interval
1st press	30 Minutes
2nd press	1 Hour
3rd press	2 Hours
4th press	3 Hours
5th press	4 Hours
6th press	5 Hours
7th press	6 Hours
8th press	OFF

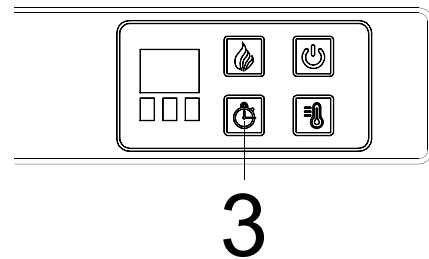


Using the heater control

1. Press the heater on/off button(4) to turn on the heating function. When turn it on, the heater will keep in "ON" mode automatically.
2. When the heater is on, long press the heater button for 5 seconds to enter the temperature setting adjustment. The LCD screen(1) will start flashing.
3. Press the heater button to cycle through the temperature level.
4. After choosing your heat level, wait for the LCD screen(1) to flash 2 times. Your temperature is now set.
5. When the heater is activated, press the POWER button for 5 seconds to change the temperature unit from Fahrenheit (°F) to Celsius (°C).

Note: The heater will automatically pause after reaching the set temperature in your room, If the heater control is set to "on" the heater will work nonstop until you shut it off manually.

Botton Press	Celsius Temperature
1	17°C
2	18°C
3	...
...	21°C
6	22°C
7	23°C
8	...
...	26°C
11	27°C
12	ON

Botton Press	Fahrenheit Temperature
1	62°F
2	63°F
3	64°F
...	...
11	72°F
12	73°F
13	74°F
...	...
20	81°F
21	82°F
22	ON

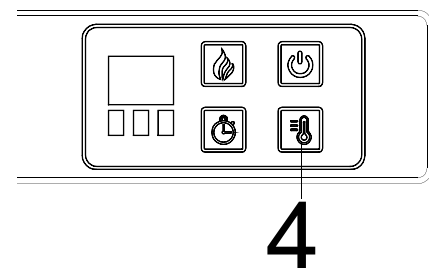

Operation

Using the flame control

Press the flame control button (5) manually set flame color,. The flame color settings are as follows:


Button Press	Display Value	Flame Appearance	Button Press	Display Value	Flame Appearance
1st press	L1	Orange	5th Press	L5	Red&Orange
2nd press	L2	Blue	6th Press	L6	Red&Orange&Blue
3rd press	L3	Red	7th Press	L7	Cycle
4th press	L4	Red&Blue			

Brightness Control

Long press the flame button(5) for approximate 3 seconds to control the brightness of the flame display. The brightness setting are as follows:


Display	Actual Brighiness
b5	Brightest
b4	Bright
b3	Medium
b2	Slightly Darker
b1	Darker

NOTE: Flame brightness is set to 100% by default.

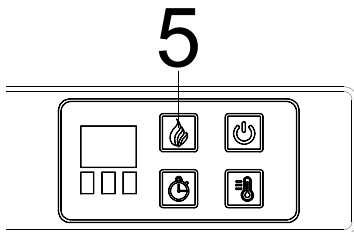


Using the main power button

•Press the power button(6) to turn the fireplace / heater unit on and off. Press the power button (6) once to turn the unit on. Press again to turn the unit off.

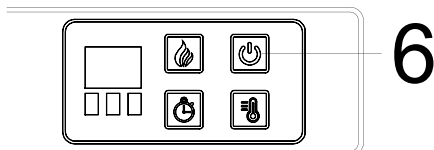

Using the Remote Control

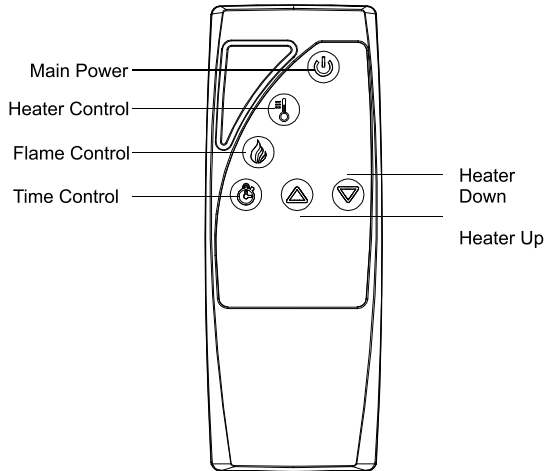

Using the Remote control

The operation of the remote control buttons work the same as button on the control panel.

Install the battery

For replacement batteries, use AAA batteries.

Press down and slide back cover off the battery compartment.

Insert two AAA batteries into the battery compartment making sure that the ends of the batteries with the negative(-) symbols are against the springs in the battery compartment.

Replace the battery compartment cover, making sure it snaps into position.



WARNING

Do not ingest batteries.

Non-rechargeable batteries are not to be recharged.
Batteries are to be inserted with the correct polarity.
Exhausted batteries are to be removed from the product.
Always purchase the correct size and grade of battery suitable for the intended use.
Replace all batteries in a set at the same time.
Clean the battery contacts and also those of the device prior to battery installation.
Remove batteries from equipment when not used for an extended period of time.



NOTE:
Battery disposal
Please always dispose
of batteries at a suitable
recycling point.



Care and Maintenance

 **WARNING**

Always disconnect from the power supply before cleaning the heater.
First turn off the main power.
Then remove the electrical plug from the wall outlet.

 **WARNING**

Do not use this fireplace insert if any part of it has been under water.
Immediately call a qualified service technician to inspect the firebox and
replace any part of the electrical system which has been underwater.

The blower motor and flame motor are pre-lubricated for long-term use and require no further lubrication or maintenance. To remove dust or debris, occasionally use the soft brush attachment of a vacuum cleaner to clean the outlet grille of the fan heater.

Use a soft, clean cloth that will not scratch the surface when dusting.

Use a clean soft cloth dampened with warm water to clean the fireplace surface.

Do not use household or abrasive cleaners, as these products may damage the surface.

When cleaning the glass viewing screen, use a non-abrasive damp cloth with liquid cleaner or mild soap if necessary.

Do not use cleaning powders or any abrasive substances, as they can scratch the glass.

If your appliance becomes stained or damaged during use, we recommend calling a professional for repair.

Under no circumstances should this product be operated with a broken or chipped glass panel.

Do not strike or slam the glass.

When not in use, please unplug the cord from the outlet to prevent damage or accidents.

Troubleshooting

Problem	Solution
The unit does not turn on.	Check that the unit is fully plugged into a standard 120 V outlet. Press the power button on the control panel.
Flame effect is on, but there is no flame effect.	Open the top and back panels to check if the flame spindle has fallen off from the spindle motor.
The heater does not blow warm air.	Make sure the set temperature is higher than the room temperature.
The heater does not work.	Turn all switches to the "OFF" position and unplug the unit from the wall outlet. Wait 5 minutes before plugging the unit back in and operating it as normal.
Remote control does not work.	Use it closer to the unit / change battery.