 


# TOSHIBA

## MICROWAVE SOLO OVEN INSTRUCTION MANUAL

### EM925A5A-SS

Please review this instruction manual before operating.

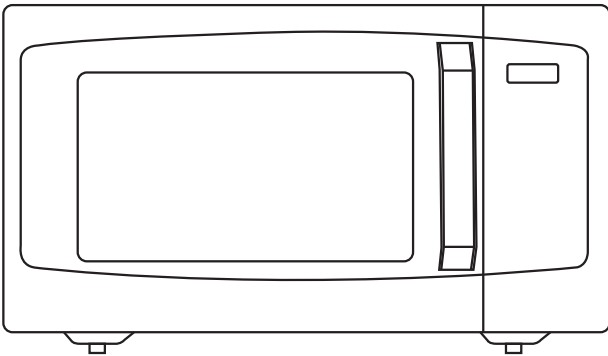

# CONTENTS

## PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy .....	EN-01
Important safety instructions .....	EN-03
Grounding instructions.....	EN-07
Radio interference .....	EN-09
Utensils.....	EN-10
Materials you can use in microwave oven .....	EN-11
Materials can not be used in microwave oven .....	EN-13

## PRODUCT SETTING

Setting up your oven .....	EN-14
----------------------------	-------

## INSTRUCTION FOR USE

Before using for the first time .....	EN-18
Operation .....	EN-19
1. Power levels.....	EN-20
2. Clock setting.....	EN-21
3. Kitchen timer.....	EN-21
4. Microwave cook .....	EN-22
5. One touch start .....	EN-23
6. Time defrost.....	EN-24
7. Weight defrost function .....	EN-24
8. Popcorn.....	EN-25
9. Potato .....	EN-25
10. Frozen vegetable.....	EN-25

11. Beverage .....	EN-26
12. Dinner plate .....	EN-26
13. Pizza .....	EN-27
14. Memory function .....	EN-27
15. Turn on/off the buzzer sound .....	EN-28
16. Multi-stage cooking .....	EN-28
17. Energy saver mode .....	EN-30
18. Lock function .....	EN-30
19. Inquiring function .....	EN-30
20. Cooking end reminder function .....	EN-31
21. Other specifications .....	EN-31
Cleaning .....	EN-32

## MAINTENANCE

Trouble shooting .....	EN-34
One year limited warranty .....	EN-36



### NOTE

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

 
# PRODUCT SAFETY

## PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

---

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.  
It is important not to defeat or tamper with the safety interlocks.

- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

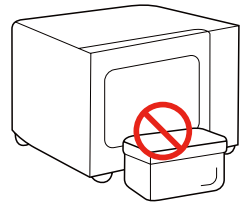

- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:
- (1). DOOR (bent)
  - (2). HINGES AND LATCHES (broken or loosened)
  - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## SPECIFICATIONS

---

MODEL	EM925A5A-SS
RATED VOLTAGE	120V~ 60Hz
RATED INPUT POWER(MICROWAVE)	1350W
RATED OUTPUT POWER(MICROWAVE)	900W
OVEN CAPACITY	0.9 cu.ft.
TURNTABLE DIAMETER	∅ 10.6 inch
EXTERNAL DIMENSIONS	19.15x15.91x11.48 inch
NET WEIGHT	Approx. 27.3 Lbs

---



### NOTE

All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

# IMPORTANT SAFETY INSTRUCTIONS



## WARNING

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic safety precautions, including the following:



Read all instructions before using the appliance.

---



Read and follow the specific:  
**"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"** found on page 1.

---



As with most cooking appliances, close supervision is necessary to reduce the risk of a fire in the oven cavity.

---



This appliance must be grounded. Connect only to properly grounded outlet. See **"GROUNDING INSTRUCTIONS"** found on page 7.




To reduce the risk of fire in the oven cavity:

1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes.


# IMPORTANT SAFETY INSTRUCTIONS

Do not leave paper products, cooking utensils, or food in the cavity when not in use.


---

 Install or locate this oven only in accordance with the installation instructions provided.


---


 As with any appliance, close supervision is necessary when used by children.

---

 This microwave should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.

---

 Keep cord away from heated surfaces.

 
 Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.


THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.

1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.

 
# IMPORTANT SAFETY INSTRUCTIONS


4. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
5. Use extreme care when inserting a spoon or other utensil into the container.

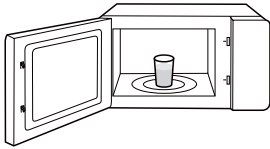


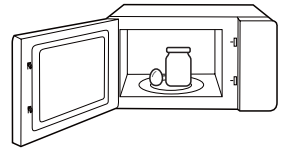 
 When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth. Please keep the wave guide area clean. Use soft damp cloth to clean it up when there is food splash residue on the wave guide area or the cavity. Failure to clean food residue may cause innocuous sparking


or some smoke in the microwave cavity, discoloration of the cavity may also occur.

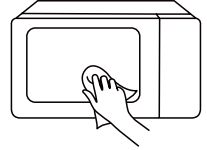

 This appliance is for private household use only.

 Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.




 Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type


# IMPORTANT SAFETY INSTRUCTIONS

of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.


---


 Do not operate this oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.

 
---


 Do not cover or block any openings on the oven.

---


 Do not store or use this appliance outdoors.

 Do not use this oven near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

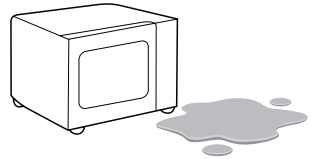

 Do not immerse cord or plug in water or any other liquid.



 Do not let cord hang over edge of table or counter.

## SAVE THESE INSTRUCTIONS HOUSEHOLD INDOOR USE ONLY

# GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. To protect against electrical shock, this appliance is equipped with a cord having a 3 prong grounding-type plug for insertion into a proper grounding-type receptacle. DO NOT alter the plug for use in a 2-prong receptacle. If the plug will not fit into a receptacle, have the proper receptacle installed by a qualified electrician.



**CAUTION**

Do not insert your fingers into any gaps or holes; it may cause injuries.



**WARNING**

Improper use of the grounding can result in a risk of electric shock.

Three-pronged  
(grounding) plug



**DANGER**

Electric Shock Hazard:  
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

# GROUNDING INSTRUCTIONS

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-pronged grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



**WARNING**

 
## Electric Shock Hazard:

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord sets or extension cord is used:
  - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - (2). The extension cord must be a grounding -type 3-wire cord.
  - (3). The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

# RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
  - (1).Clean door and sealing surface of the oven.
  - (2).Reorient the receiving antenna of radio or television.
  - (3).Relocate the microwave oven with respect to the receiver.
  - (4).Move the microwave oven away from the receiver.
  - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

**This device complies with part 18 of the FCC Rules.**

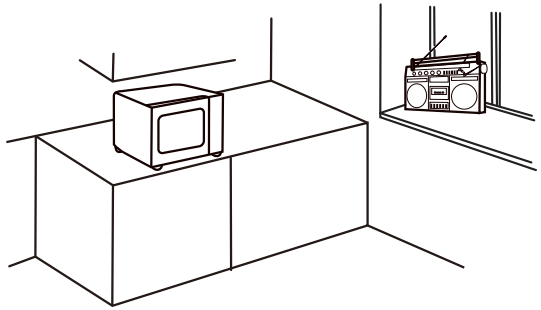

# UTENSILS



Personal Injury Hazard:

 
Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven.**"

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

 
## Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

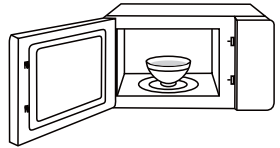





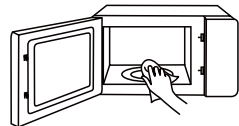







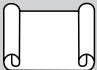



**NOTE**





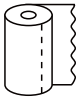 



KEEP THE CAVITY CLEAN







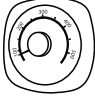









# MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. 
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. 
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. 
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. 
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. 
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking. 
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. 
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming. 

# MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 <p data-bbox="169 438 240 470">Plastic</p>	<p data-bbox="349 343 900 486">Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.</p> 
 <p data-bbox="147 630 262 654">Plastic wrap</p>	<p data-bbox="349 542 900 630">Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.</p> 
 <p data-bbox="131 790 278 813">Thermometers</p>	<p data-bbox="349 734 889 766">Microwave-safe only (meat and candy thermometers).</p> 
 <p data-bbox="152 949 256 973">Wax paper</p>	<p data-bbox="349 885 819 941">Use as a cover to prevent splattering and retain moisture.</p> 

# MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish. 
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish. 
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing. 
 Metal twist ties	May cause arcing and could cause a fire in the oven. 
 Paper bags	May cause a fire in the oven. 
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. 
 Wood	Wood will dry out when used in the microwave oven and may split or crack. 

## SETTING UP YOUR OVEN

### NAMES OF OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:

 


**Glass Tray**

(Can be used under all functions)



**Instruction Manual**

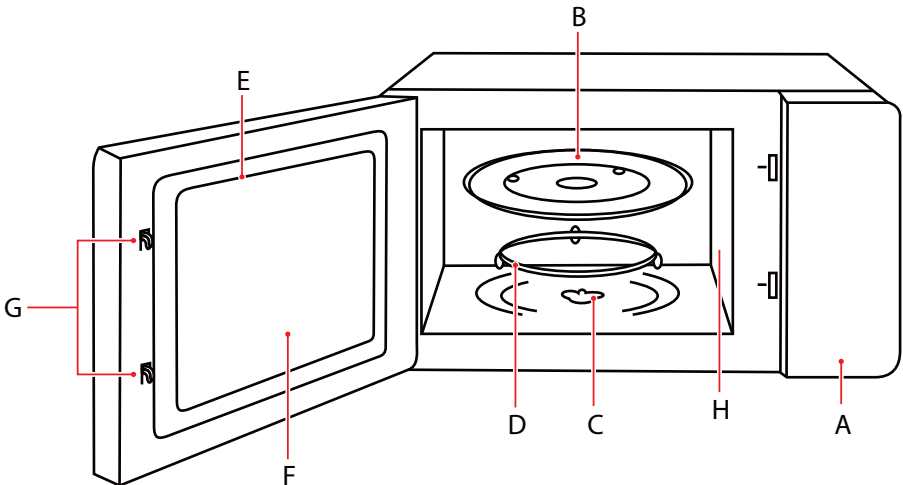

- A. Control panel
- B. Glass tray
- C. Turntable shaft
- D. Turntable ring assembly

- E. Door assembly
- F. Observation window
- G. Safety interlock system
- H. Waveguide cover

# SETTING UP YOUR OVEN

## TURNTABLE INSTALLATION

Cleaning the cooking compartment and putting the turntable in place.

 
 
For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.

Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

How to put the turntable in place:

1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ③.

Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the center of the cooking compartment floor. The rollers on the shaft should fit inside the turntable bottom ridge.

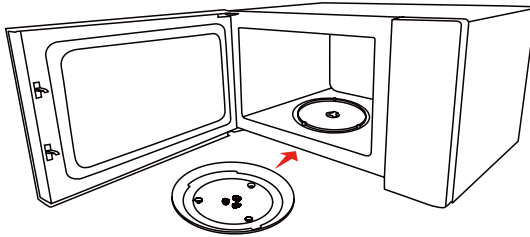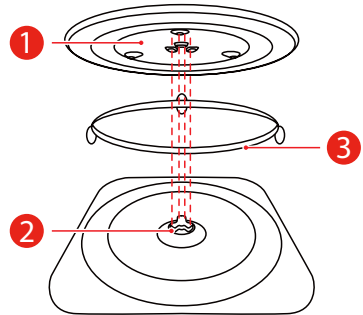

**NOTE**

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

# SETTING UP YOUR OVEN

## COUNTERTOP INSTALLATION

---

 
Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown waveguide cover that is attached to the oven cavity to protect the magnetron.

## INSTALLATION

---

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
  - a. The minimum installation height is 3.0 ft.
  - b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top and 1.0 inch in the rear.
  - c. Do not remove the legs from the bottom of the oven.
  - d. Blocking the intake and/or outlet openings can damage the oven.
  - e. Operation of microwave oven may cause interference to your radio or TV reception.  
Please place the oven as far away from radios and TV as possible.

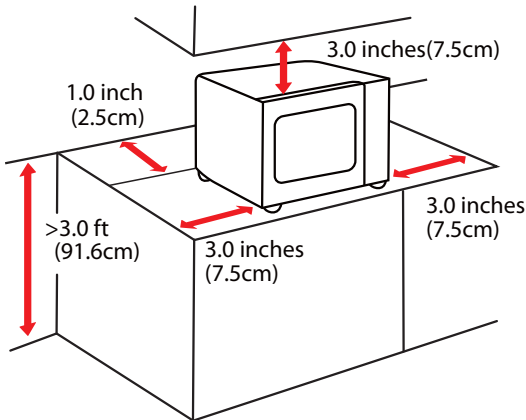


# SETTING UP YOUR OVEN

2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



**NOTE**

 - Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be avoided.

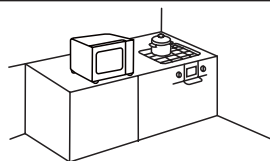

The accessible surface may be hot during operation

# INSTRUCTION FOR USE

## BEFORE USING FOR THE FIRST TIME

The appliance may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**IMPORTANT SAFETY INSTRUCTIONS**" beforehand on page 3.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.



 
### NOTE

- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

# OPERATION

## CONTROL PANEL AND FEATURES


---

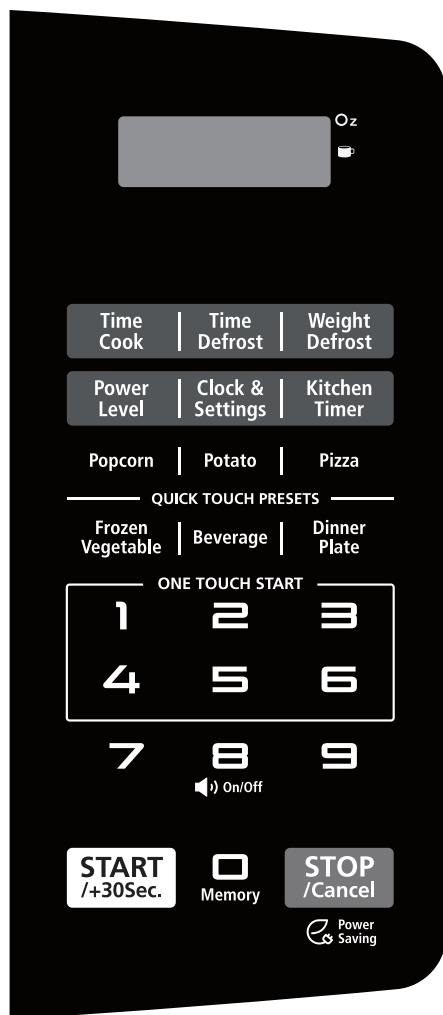

# 1. POWER LEVELS

Ten power levels are available.

 - a Press "Time Cook", "00:00" will display, then press number pads.

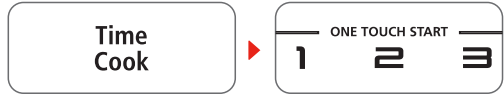

- b Press "Power Level" and "PL10" will display. Then press number pads to select a different power level.



- c In cooking state of microwave, press "Power Level", the current power will be displayed for 3 seconds. Then press number pads to change a different power level.



**Example : To cook the food with 50% microwave power for 15 minutes.**

- Press "Time Cook", "00:00" will display.



- Press "1, 5, 0, 0" in order for 15:00 to appear in the display.



- Press "Power Level", then press "5" to select 50% microwave power.



- Press " START/+30Sec. " to start cooking. Buzzer sounds once. The remaining cooking time will display.



LEVEL	POWER	DISPLAY
10	100%	PL10
9	90%	PL9
8	80%	PL8
7	70%	PL7

LEVEL	POWER	DISPLAY
6	60%	PL6
5	50%	PL5
4	40%	PL4
3	30%	PL3
2	20%	PL2
1	10%	PL1

## 2. CLOCK SETTING

When the microwave oven is plugged into an outlet, "0:00" will display.

- a Press "Clock & Settings" once, "00:00" will appear in the display.



- b Press the number pads to enter the current clock time. For example, if the time is now 10:12, press " 1, 0, 1, 2 " in order.



- c Press "Clock & Settings" to finish clock setting, ":" will flash and the numbers will appear as a clock time in the display.



**NOTE**

- If the numbers entered are not within the range between 1:00 to 12:59, the setting will not be accepted until valid numbers are entered.
- In the process of setting clock, if the " STOP/Cancel " pad is pressed or if there is no operation within 1 minute, the display will automatically return to the previous clock setting.

## 3. KITCHEN TIMER

- a Press "Kitchen Timer" once, "00:00" will appear in the display.



- b Press the number pads to enter the time amount. The maximum amount of time that can be entered is 99 minutes, 99 seconds.



- c Press "START/+30Sec." to confirm setting, and the timer will start to count down.



- d When the time amount elapses, the oven will beep 5 times.



- The Kitchen Timer setting is different from the Clock setting; it is simply a timer.
- During the Kitchen Timer function, no cooking function can be set into operation.
- Kitchen Timer amount cannot be increased by pressing "START/+30Sec.".
- Pressing "STOP/Cancel" will cancel the Timer countdown.

## 4. MICROWAVE COOK

---

- a Press "Time Cook", "00:00" will appear in the display.



- b Press number pads to enter the cooking time. The maximum cooking time is 99 minutes, 99 seconds.



- c Press "Power Level", PL10 will flash. Press number pads 0 through 9 to select a different power level if desired. See the POWER LEVEL table above.



- d Press "START/+30Sec." to start cooking. The remaining cooking time will display.



## Example : To cook the food with 50% microwave power for 15 minutes.

- Press "Time Cook" , "00:00" will display.

Time  
Cook

- Press "1, 5, 0, 0" in order for 15:00 to appear in the display.

ONE TOUCH START

1 2 3

- Press "Power Level" , then press "5" to select 50% microwave power.

Power  
Level

4 5 6



- Press " START/+30Sec. " to start cooking. The remaining cooking time will display.

START  
/+30Sec.



 
**NOTE**

- In the process of setting, if the " STOP/Cancel " pad is pressed or if there is no operation within 1 minute, the oven will automatically return to display the clock.

## 5. ONE TOUCH START

Instant cooking at 100% power level and 1 to 6 minutes cooking time can be started by pressing number pads 1 to 6. Press " START/+30Sec. " to increase the cooking time by 30 seconds with each press. The maximum cooking time is 99 minutes, 99 seconds.

a

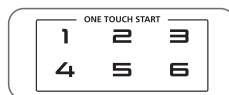

Instant cooking at 100% power level and 30 seconds cooking time can be started by pressing " START/+30Sec. ". Each repeated press will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes, 99 seconds.

b

START  
/+30Sec.



**NOTE**

- Time can also be added in 30 second increments by pressing " START/+30Sec. " during Microwave Cooking, Time Defrost and Multi-stage Cooking.
- Time cannot be added by pressing " START/+30Sec. " during Weight Defrost and Kitchen Timer functions.

## 6. TIME DEFROST

- a Press "Time Defrost", "dEF2" will appear in the display.

**Time  
Defrost**

- b Press the number pads to input the defrost time.



- c The default microwave power is power level 3. If you want to change the power level, level, press "Power Level" once, and PL3 will display; then press the number pad for the desired power level.

**Power  
Level**



- d Press " START/+30Sec. " to start defrost cooking. And the remaining defrost time will display.

**START  
/+30Sec.**

## 7. WEIGHT DEFROST FUNCTION

- a Press " Weight Defrost " once,"dEF1" will display.

**Weight  
Defrost**

- b Press number pads to input weight to be defrosted.  
Input the weight range between 4 to 100 Oz.



- c If the weight input is not between 4 to 100 Oz, the input will be invalid. A beep will sound and the unit will not work until valid numbers are entered.

- d Press "START/+30Sec." to start defrosting and the cooking time remaining will be displayed.

**START**  
/+30Sec.

## 8. POPCORN

---

- a Press "Popcorn", "1.75" will appear in the display.

Popcorn

- b Press "Popcorn" two more times to choose the weight, "3.0" and "3.5" will display in order.

Popcorn

- c Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

**START**  
/+30Sec.

## 9. POTATO

---

Press "Potato" repeatedly until the number you wish appears in the display "1", "2", "3" will display in order.

- a Press once : 1 potato (approx. 8.0 oz)  
Press Twice: 2 potatoes ( approx. 16.0 oz)  
Press 3 Times: 3 potatoes ( approx. 24.0 oz)

Potato

- b Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

**START**  
/+30Sec.

## 10. FROZEN VEGETABLE

---

- a Press "Frozen Vegetable", "4.0" will appear in the display.

Frozen  
Vegetable

- b** Press "Frozen Vegetable" two more times to choose the weight, "8.0" and "16.0" will display in order.

**Frozen  
Vegetable**

- c** Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

**START  
/+30Sec.**

## 11. BEVERAGE

---

- a** Press "Beverage", "1" will appear in the display.

**Beverage**

- b** Press "Beverage" two more times to choose the weight, "2" and "3" will display in order. One cup is about 4.0 Oz.

**Beverage**

- c** Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

**START  
/+30Sec.**

## 12. DINNER PLATE

---

- a** Press "Dinner Plate", "9.0" will appear in the display.

**Dinner  
Plate**

- b** Press "Dinner Plate" two more times to choose the weight, "12.0" and "18.0" will display in order.

**Dinner  
Plate**

- c** Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

**START  
/+30Sec.**

## 13. PIZZA

- a Press "Pizza", "4.0" will appear in the display.

Pizza

- b Press "Pizza" two more times to choose the weight, "8.0" and "14.0" will display in order.

Pizza

- c Press "START/+30Sec." to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

START  
/+30Sec.

## 14. MEMORY FUNCTION

- a Press "Memory" to program and choose up to three cooking procedures. Each procedure will be indicated by 1, 2 or 3 in the display.

Memory

Press "Memory" until your desired procedure number appears in the display.

- b Press "START/+30Sec." to begin it. A maximum of two cooking stages can be set for each procedure.

Memory

START  
/+30Sec.

To program a procedure, follow the steps listed below.

**Example: Cook food at 80% Power Level for 3 minutes and 20 seconds; save as memory 2.**

- Press "Memory" twice; screen displays 2.

 
Memory

- Press "Time Cook", then press "3","2" and "0" in order.

Time  
Cook

ONE TOUCH START  
1 2 3

- Press "Power Level" once, then press "8" for "PL8" to display.

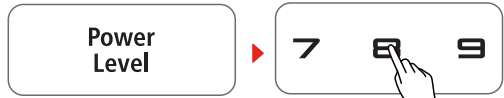

- Press "START/+30Sec." to save the procedure. Oven beeps once. Or press "START/+30Sec." twice directly save and start cooking.



- To choose the procedure from the memory list, press "Memory" twice. Screen will display "2". Press "START/+30Sec." to run procedure.




**NOTE**

 
- Auto Menu cannot be set in Memory function.

## 15. TURN ON/OFF THE BUZZER SOUND

- a** It is default that the buzzer sounds is open. In waiting state, long pressing on number 8 for 3 seconds, it sounds a long beep, turns off the sound. All the buttons has no beep when they are pressed, including the ending cooking sounds is turn off too.

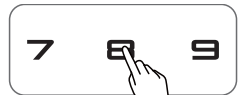

 - b** When the sounds turn off, long pressing on 8 f or 3 seconds, it sounds a long beep and the sound turn on.

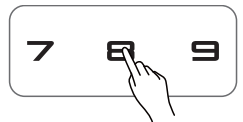

**NOTE**

- All models has mute function and energy-saved function. This function can work under lock function too.

## 16. MULTI-STAGE COOKING

At most 2 stages can be set for cooking. If one stage is Defrost, it will automatically set to be the first stage.



- Auto Menu cannot be set in Multi-stage Cooking.

 
**Example: 80% Power Level for 5 minutes followed by 60% Power Level for 10 minutes; saved as memory 3.**

- Press "Memory" 3 times; screen displays 3.




- Press "Time Cook", then press "5", "0" and "0" to set first stage cook time.

Time  
Cook

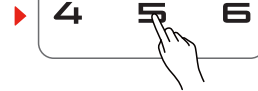

- Press "Power Level" once, then press "8" to choose 80% first stage cooking power.

 Power  
Level

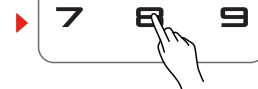

- Press "Time Cook" again, then press "1", "0", "0" and "0" to set second stage cook time.

Time  
Cook



- Press "Power Level" again, then press "6" to choose 60% second stage cooking power.

Power  
Level



- Press " START/+30Sec. " twice to immediately start multi-stage cooking.

START  
/+30Sec.

- To choose the procedure from the memory list, press "Memory" three times. Screen will display "3"; press " START/+30Sec. " to run procedure.

Memory

START  
/+30Sec.



- If you do not want to save a particular multi-stage program as a procedure, do not press "Memory" as the first step.
- Press " START/+30Sec. " after programming both stages.

## 17. ENERGY SAVER MODE

---

- a In standby mode, press the " STOP/Cancel " once (less than 3 seconds to avoid starting the child lock function ) to enter the Energy Saver mode.
- b In child-locked mode, press the " STOP/Cancel " once (less than 3 seconds) and release to enter the Energy Saver Mode.
- c Above operation is the only way to start the Energy Saver mode.
- d The Energy Saver mode works only if the door is closed.

**STOP**  
**/Cancel**

**STOP**  
**/Cancel**

## 18. LOCK FUNCTION

---

- a To lock the microwave so that it cannot be operated by children or other unintended users, press " STOP/Cancel " pad for 3 seconds. You will hear a long beep. " **⏸** " will display.
- b To Unlock, press " STOP/Cancel " for three seconds, you will hear a long beep and " **⏸** " will disappear.

**STOP**  
**/Cancel**

**STOP**  
**/Cancel**

## 19. INQUIRING FUNCTION

---

- a When oven is cooking, press "Clock & Settings" for the time of day to appear for three seconds in the display.
- b When oven is cooking, press "Power Level" pad for cooking power to appear for three seconds in the display.

**Clock &**  
**Settings**

**Power**  
**Level**

## 20. COOKING END REMINDER FUNCTION ---

The oven will beep five times to alert the user that cooking time has ended.

## 21. OTHER SPECIFICATIONS ---

- a "START/+30Sec." must be pressed to continue cooking if the door is opened during cooking.



- b A single beep sounds to indicate that a pad is correctly pressed; if pad is not correctly pressed, no beep sounds.

# CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



## WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape.  
Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

## Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information below. Wash new sponge cloths thoroughly before use.

 
### Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels

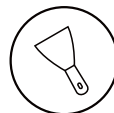

Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

## APPLIANCE FRONT

### Hot soapy water:

Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

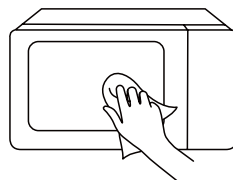


# CLEANING

## APPLIANCE FRONT PLATE

---

### Hot soapy water:

 Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

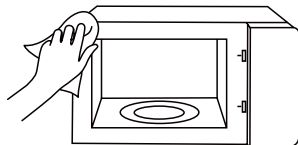


## APPLIANCE CAVITY

---

### Hot soapy water or vinegar solution:

 Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

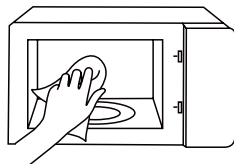


## RECESS IN THE COOKING COMPARTMENT

---

### Damp cloth:

 Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

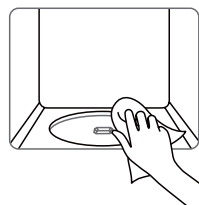

## TURNTABLE AND ROLLER RING

---

### Hot soapy water:

When placing the turntable back into its recess, it must engage properly.



## DOOR PANEL

---

### Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

## TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	<ul style="list-style-type: none"> <li>a. Electrical cord for oven is not plugged in.</li> <li>b. Door is open.</li> <li>c. Wrong operation is set.</li> </ul>	<ul style="list-style-type: none"> <li>a. Plug into the outlet.</li> <li>b. Close the door and try again.</li> <li>c. Check instructions</li> </ul>
Arcing or sparking	<ul style="list-style-type: none"> <li>a. Materials to be avoided in microwave oven were used.</li> <li>b. The oven is operated when empty.</li> <li>c. Spilled food remains in the cavity.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use microwave-safe cookware only.</li> <li>b. Do not operate with oven empty.</li> <li>c. Clean cavity with wet towel.</li> </ul>
Unevenly cooked foods	<ul style="list-style-type: none"> <li>a. Materials to be avoided in microwave oven were used.</li> <li>b. Food is not defrosted completely.</li> <li>c. Cooking time, power level is not suitable.</li> <li>d. Food is not turned or stirred.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use microwave-safe cookware only.</li> <li>b. Completely defrost food.</li> <li>c. Use correct cooking time, power level.</li> <li>d. Turn or stir food.</li> </ul>
Overcooked foods	<ul style="list-style-type: none"> <li>Cooking time, power level is not suitable.</li> </ul>	<ul style="list-style-type: none"> <li>Use correct cooking time, power level.</li> </ul>
Undercooked foods	<ul style="list-style-type: none"> <li>a. Materials to be avoided in microwave oven were used.</li> <li>b. Food is not defrosted completely.</li> <li>c. Oven ventilation ports are restricted.</li> <li>d. Cooking time, power level is not suitable.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use microwave-safe cookware only.</li> <li>b. Completely defrost food.</li> <li>c. Check to see that oven ventilation ports are not restricted.</li> <li>d. Use correct cooking time, power level</li> </ul>
Improper defrosting	<ul style="list-style-type: none"> <li>a. Materials to be avoided in microwave oven were used.</li> <li>b. Cooking time, power level is not suitable.</li> <li>c. Food is not turned or stirred.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use microwave-safe cookware only.</li> <li>b. Use correct cooking time, power level.</li> <li>c. Turn or stir food.</li> </ul>

# TROUBLE SHOOTING

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Sensor cooked foods not properly cooked	<ul style="list-style-type: none"><li>a. Cover or lid on food not vented.</li><li>b. Door opened before sensor-detected cooking time appears in display.</li></ul>	<ul style="list-style-type: none"><li>a. Cover or lid over food must contain vent hole for escaping steam.</li><li>b. Do not open door to stir or turn food before sensor-detected cooking time appears in display.</li></ul>

---

# ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

## IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. ( Read directions carefully. )
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of United State.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

customercare@us.toshiba-lifestyle.com

855-204-5313

**Midea America Corp.** expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : \_\_\_\_\_

Serial Number : \_\_\_\_\_

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer' s warranty rights.

## SAVE THIS FOR YOUR RECORDS

Made in China

PN:16170000A89753

**#DetailsMatter**

Customercare@us.toshiba-lifestyle.com  
855-204-5313