 
 
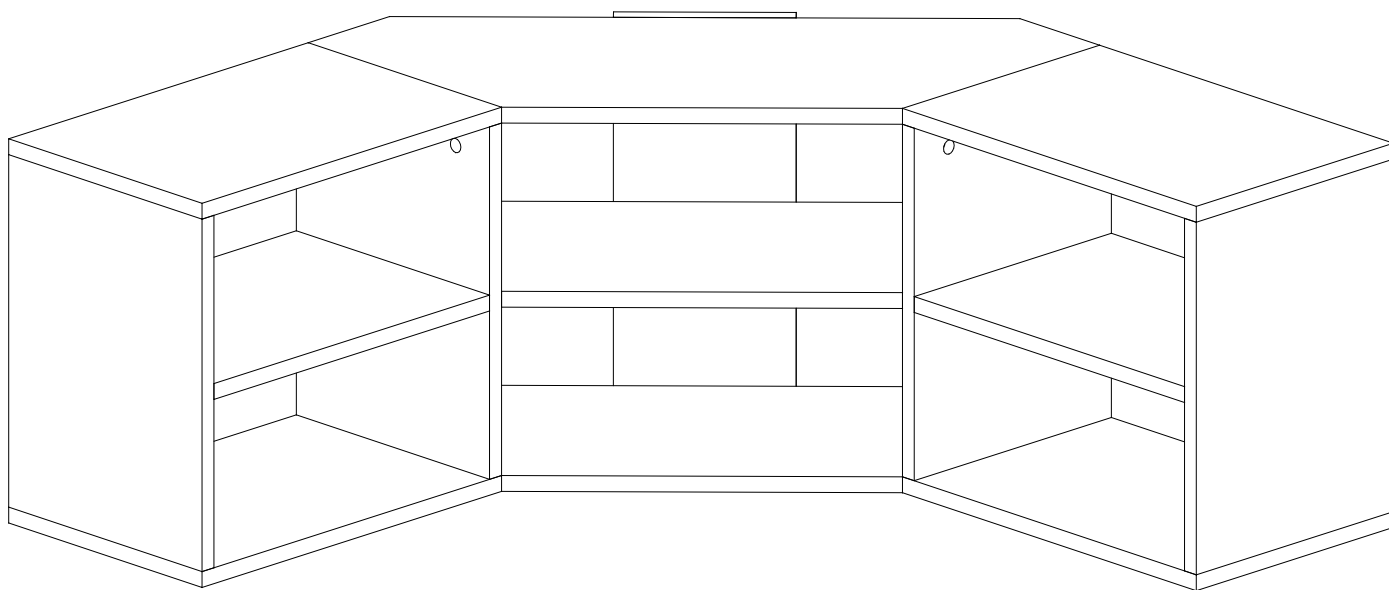 
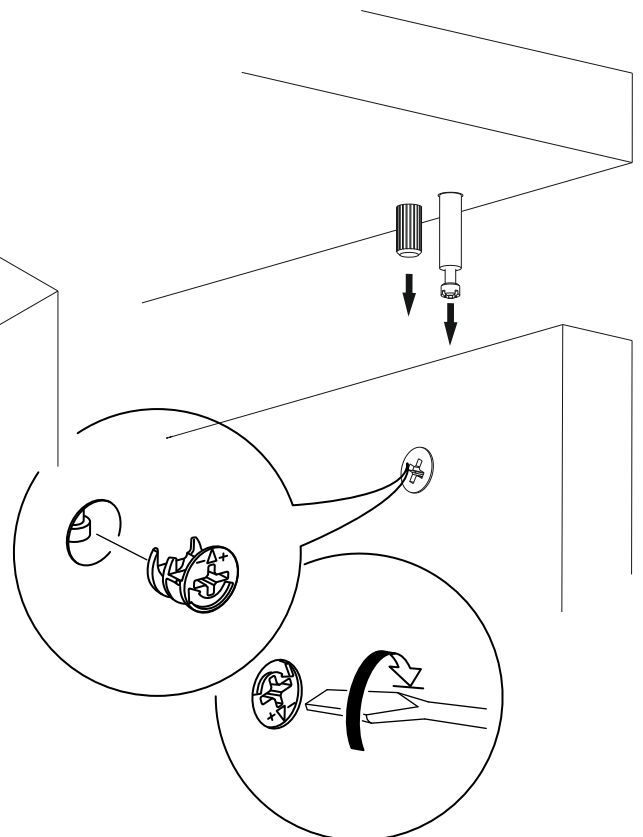 
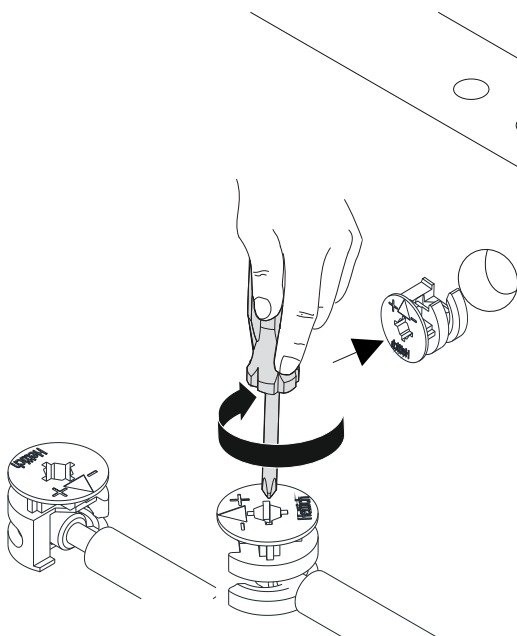 
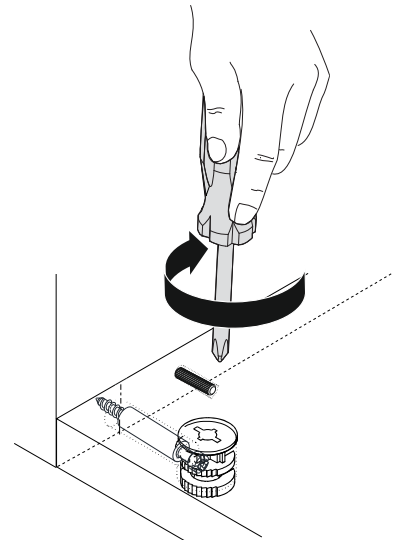 
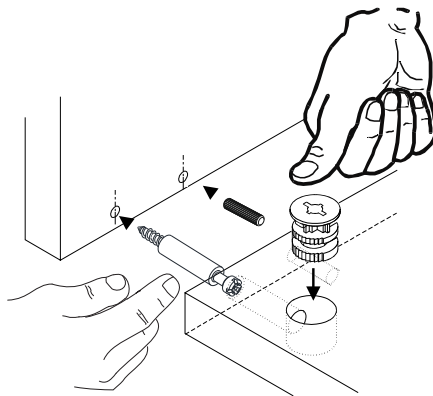 
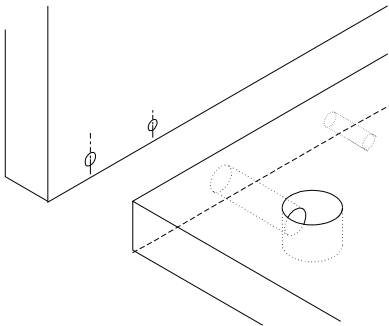 
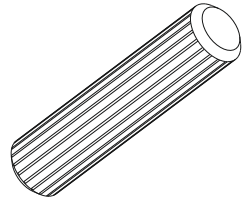 


 
 
CORNER TV STAND

MONTAJ KLAVUZU / ASSEMBLY MANUAL

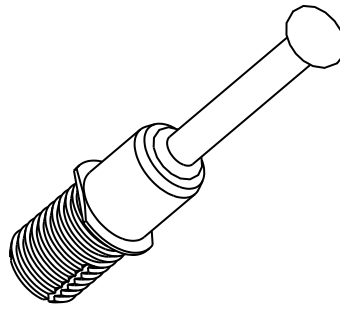 


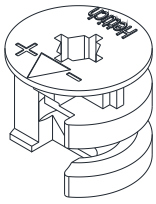

 
AKSESUAR LİSTESİ / ACCESSORY LIST

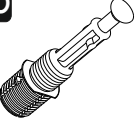A23  28x	A22  28x	A04  28x	A17  14x	A06  18 mm 2. RENK 16x
A06  18 mm 1. RENK 12x	A10  14mm 2. RENK 8x	A10  14mm 1. RENK 6x		

PARÇA KODLAMA / DISASSEMBLED VIEW

 
 
 
 
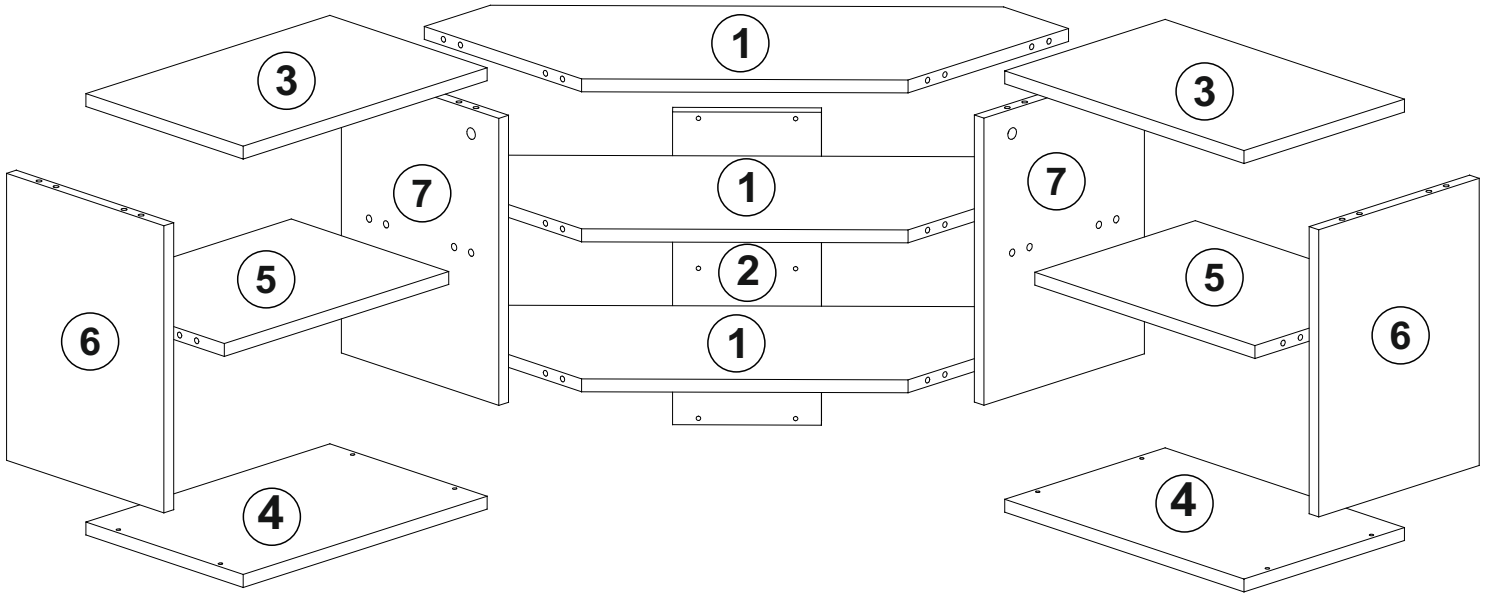 


X2

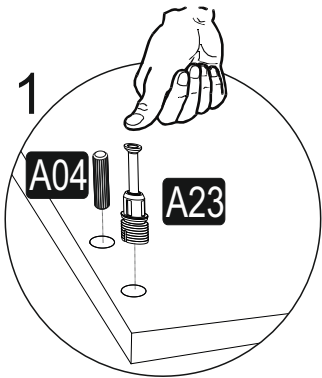

3

X2

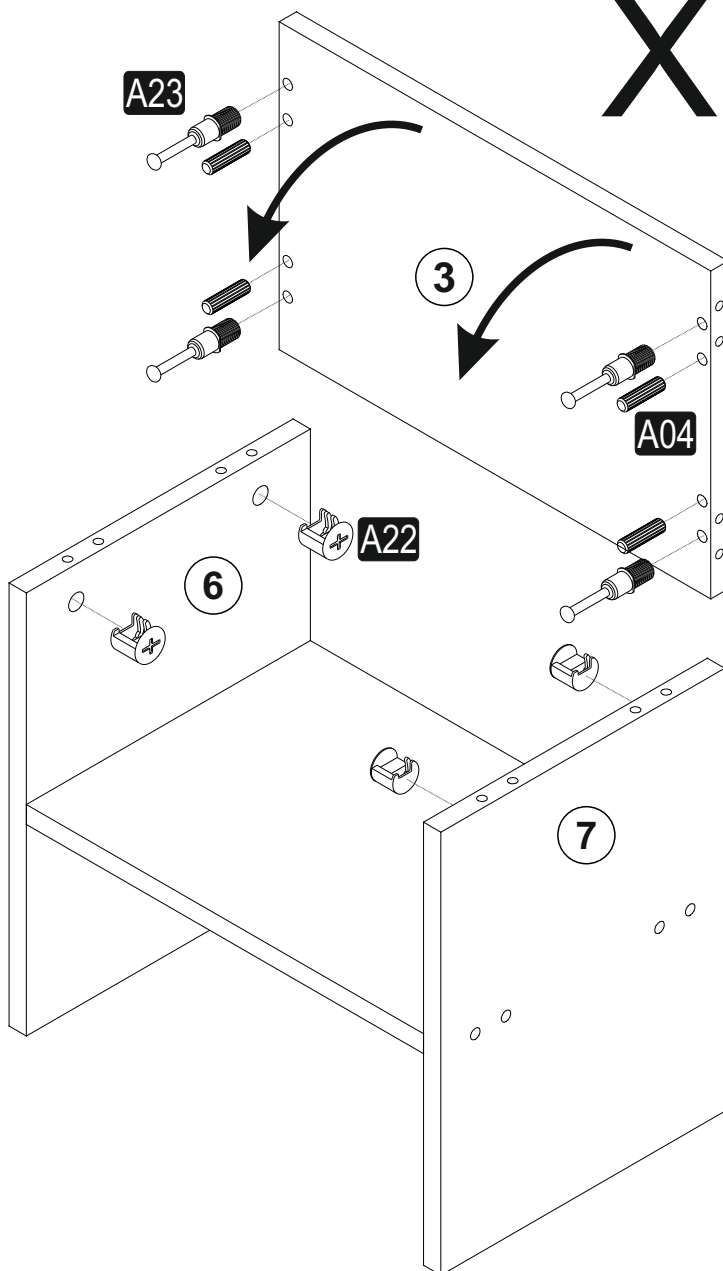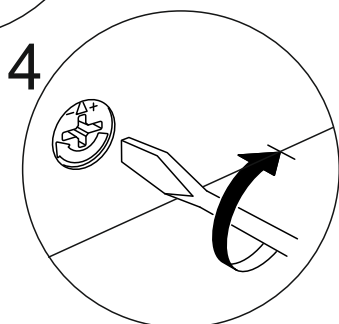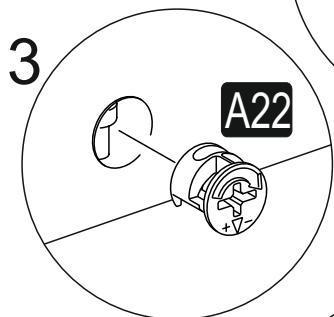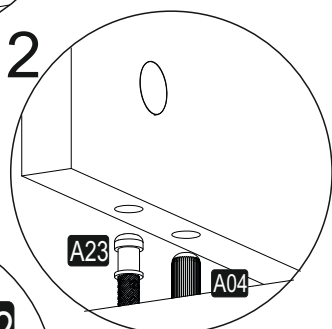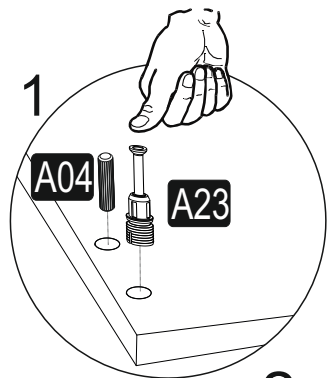

4

 
 
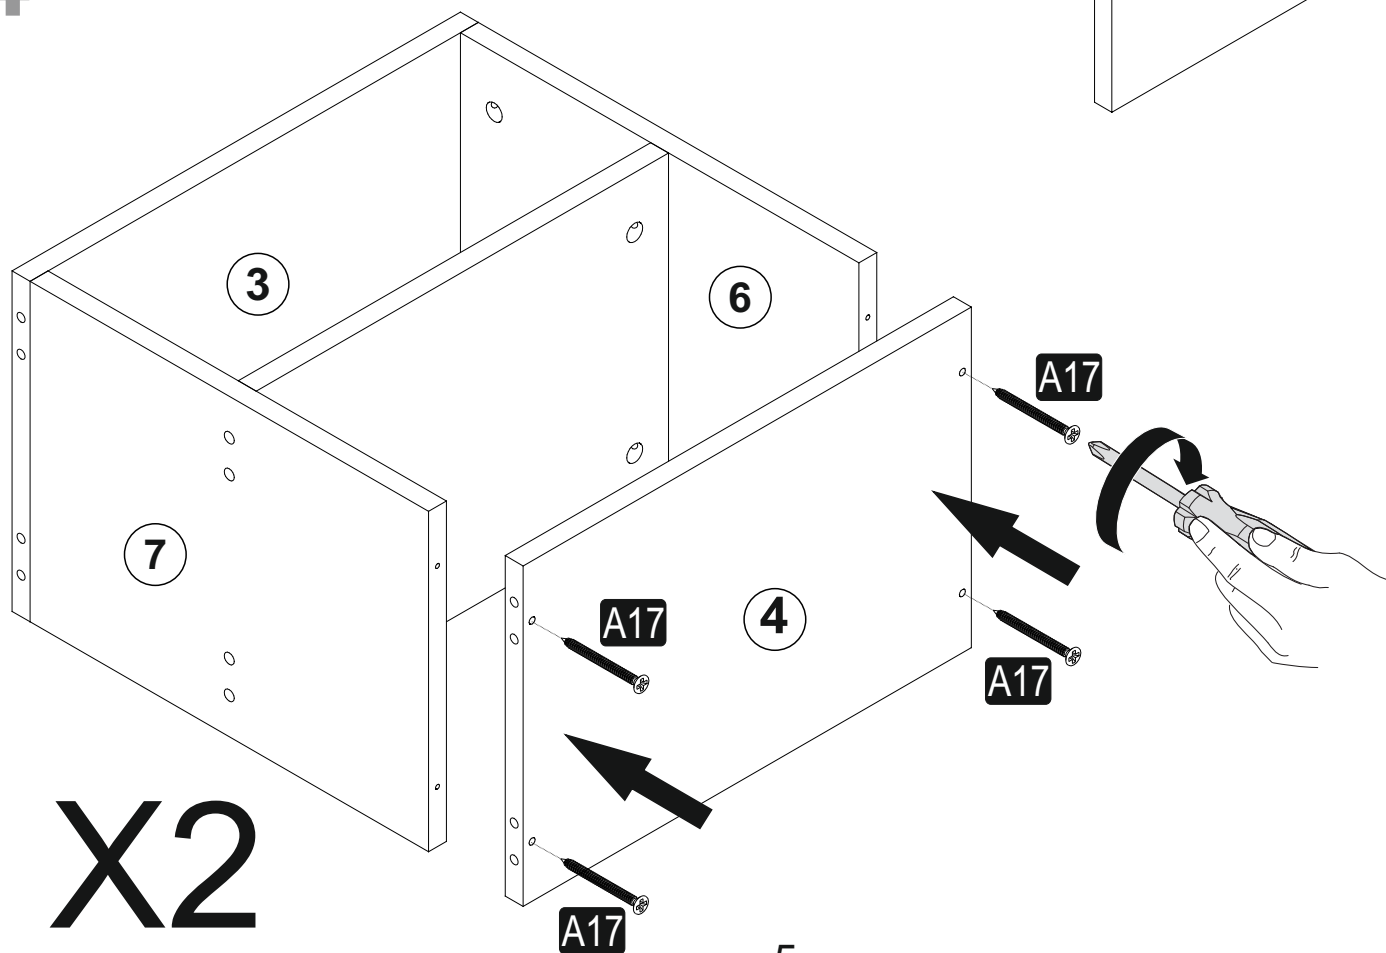 


Diagram 1 shows a hand using a screwdriver to tighten the A23 screw into the A04 bracket, securing the bracket to the wall.

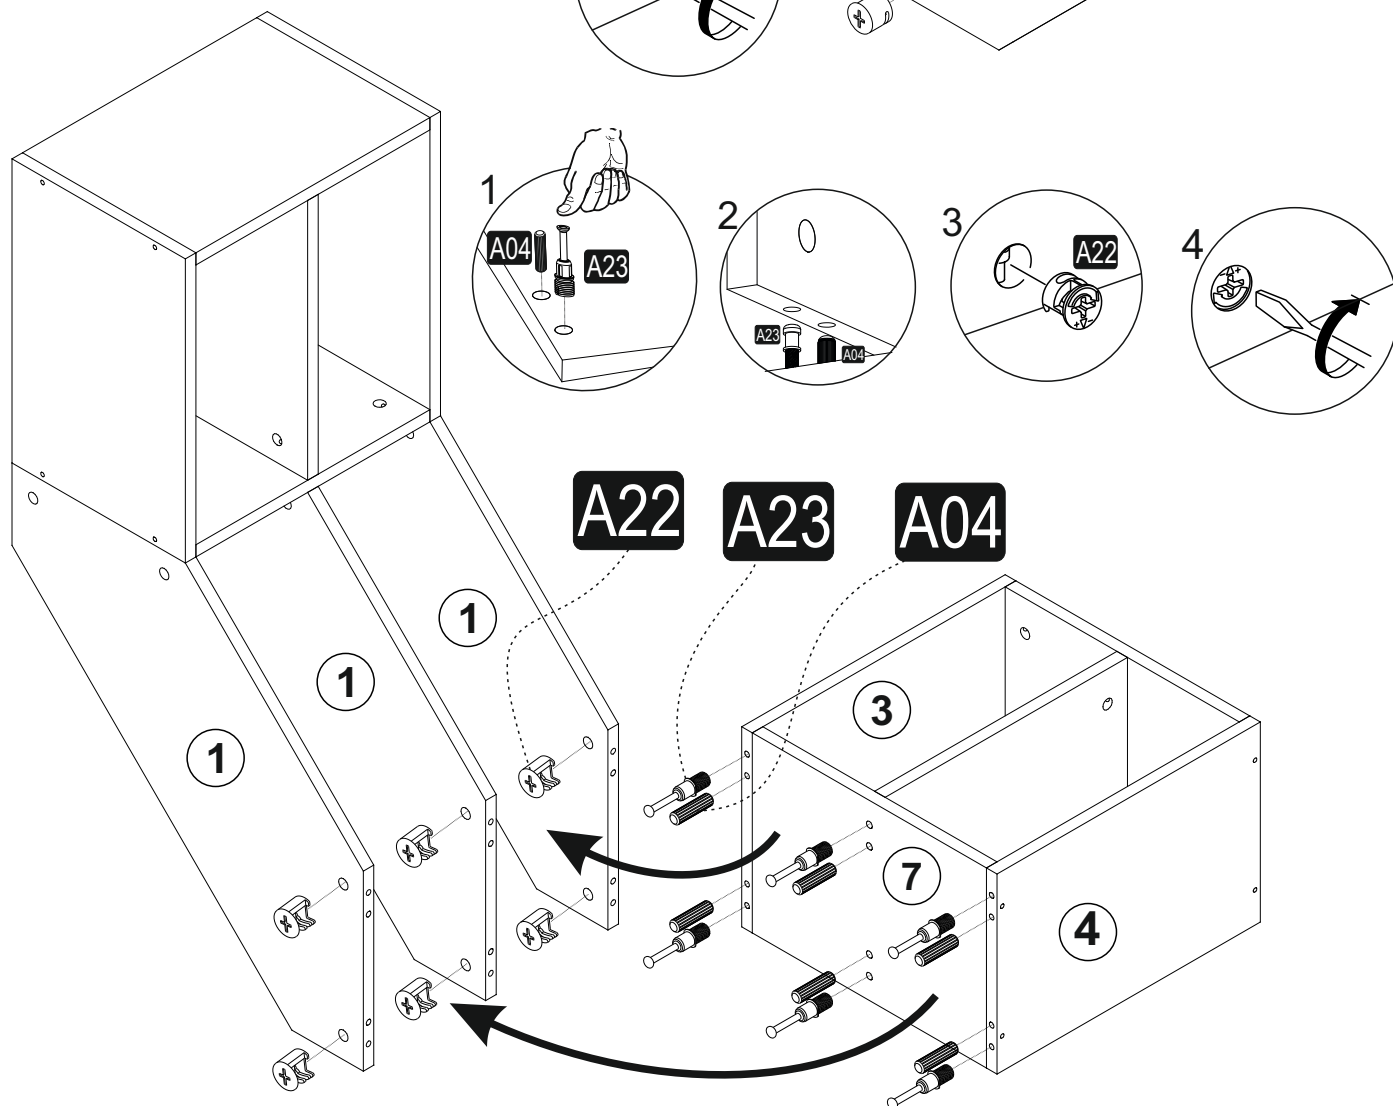

7

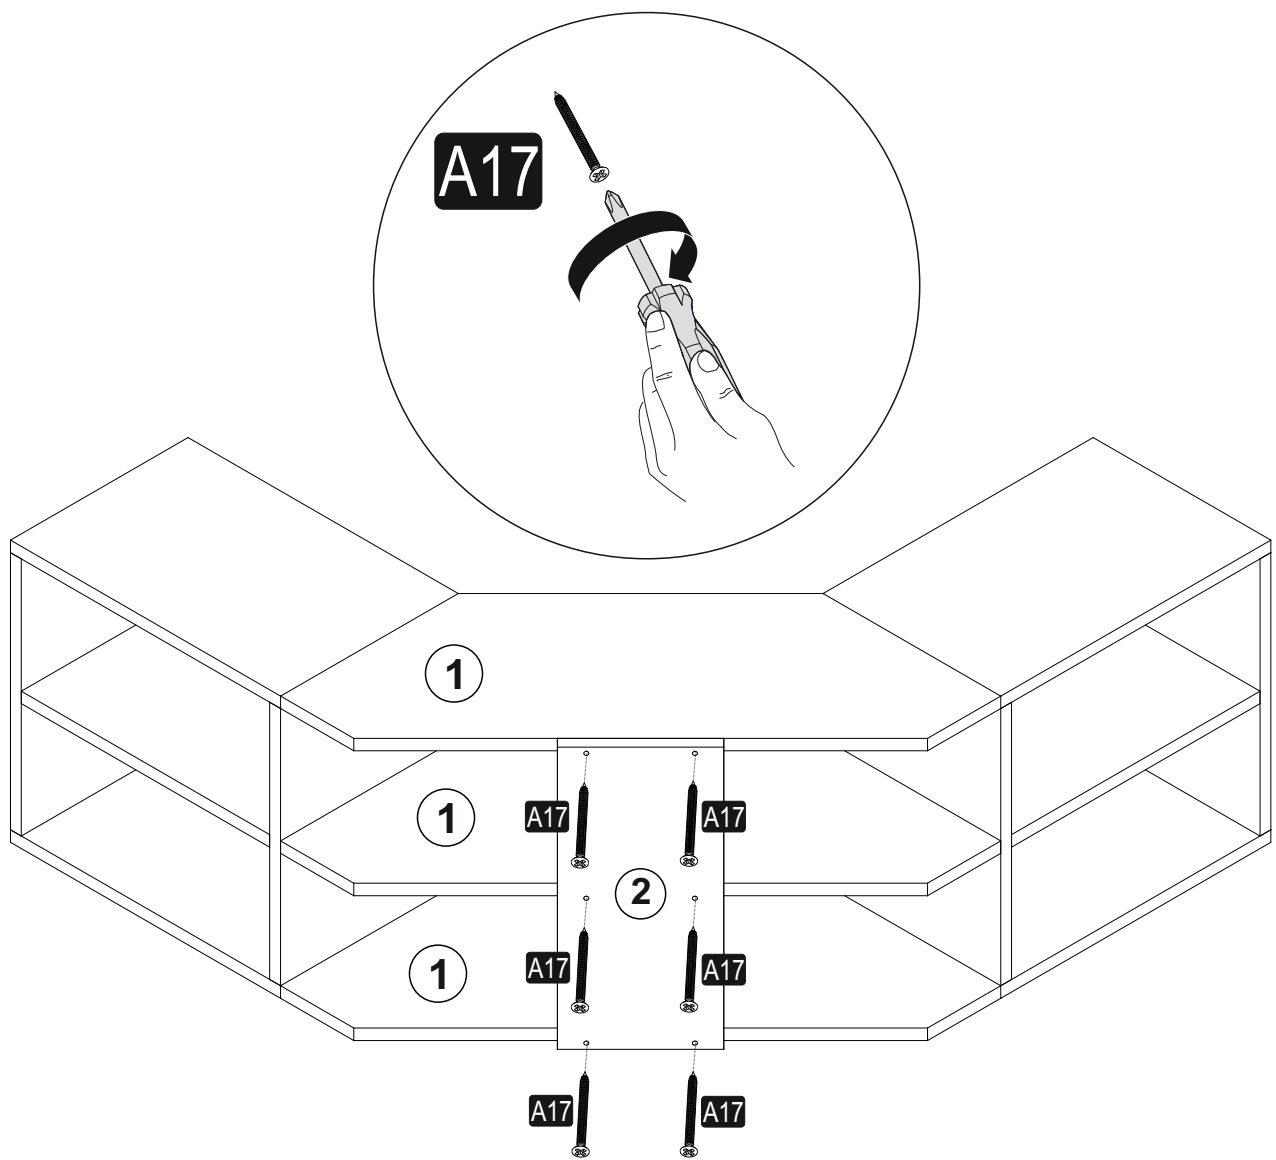

8

