


Water Cooling Fan

INSTRUCTION MANUAL

TF-2108Y

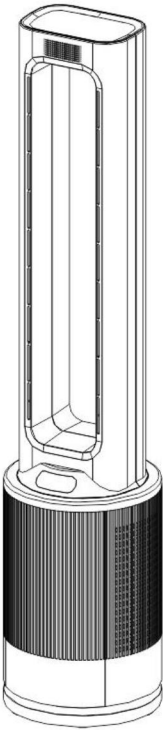

It is important that you read these instructions before using your product and we strongly recommend that you keep them in a safe place for future reference.

1

SAVE THIS INSTRUCTIONAL MANNUAL FOR FUTURE REFERENCE


Definitions: Safety Guidelines

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.

WARNING: Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.

CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.

NOTE: Indicates a practice not related to personal injury which, if not avoided, **may** result in **property damage**.


 **WARNING!** Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

GENERAL SAFETY RULES

- Carefully read the instructions before operating the unit. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.
- This appliance is only for indoor use.

2

READ AND SAVE THESE INSTRUCTIONS

 **WARNING:** To reduce the risk of fire,electric shock, injury or sickness when using your fan, follow these basic precautions:

- Plug into a grounded 3 prong outlet.
- Do not remove ground prong.
- Do not use an adapter. This unit must only be connected to a 120V earthed outlet.
- Never connect the appliance to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician.
- Never use the plug as a switch to start or turn off the unit. Use the provided power button located on the control panel or remote controller.
- Do not use the appliance for any purpose other than for its intended use.
- Always place or store the unit on a dry and stable place. Do not move or tilt the unit.
- The appliance should not be installed in laundry or wet rooms.
- Do not operate the appliance in explosive atmospheres, such as in the presence of flammable liquids,gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Avoid keeping/storing the unit in direct sunlight.
- This appliance is not intended for use by persons (including children)with reduced physical, sensory, or mental capabilities, or lack experience and knowledge, unless they have been given supervision or careful instruction concerning the use of appliance by a person responsible for their personal safety.

3

- Children should be supervised to ensure that they do not play with the appliance.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings.
- Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Disconnect the power from the unit before dismantling, assembling, or cleaning the unit.
- Avoid touching any moving parts of the unit.
- Do not clean the unit by spraying immersing it in water.
- Do not operate the appliance with a damaged cord or plug. Ensure the power cord is not stretched, exposed to sharp objectives, or routed under the unit.
- Always inspect electrical cord for damage before and after use. A damaged cord can cause electrical shock.
- High velocity fans are designed to create rapid air movement, therefore ensure the fan is not placed near curtains or any other object that may be drawn into the fan inlet.
- The remote contains a lithium battery, keep out of children. Remove the battery from the remote before storage, or if exhausted to prevent leakage.
- Keep the appliance at least 20 inches away from walls and other items. Keep enough space around the hunt to allow for proper ventilation.

ELECTRICAL SAFETY

This fan must be grounded. The unit is equipped with a power supply cord having a grounded 3-prong plug. To minimize possible shock hazard, the cord must be plugged into a mating, grounded 3-prong outlet, grounded in accordance with all local codes and ordinances. If a matching outlet is not available, it is the customer's responsibility to have a properly grounded 3-prong outlet installed by a qualified electrician. It is also the customer's responsibility:

- To contact a qualified electrician;
- To assure that the electrical installation is adequate and in conformance with National Electrical Code,ANSI/NFPA 70- latest edition, and all local codes and ordinances.

DISPOSING

- When you need to dispose of the unit, please consult with your local recycling center for information about how to dispose of the unit in an environmentally responsible manner.
- Please recycle or dispose the packaging material for the product in an environmentally responsible manner.

5

COMPONENTS AND SPECIFICATIONS

Digital Display

Control Panel

LED Light


Air Outlet

Air Inlet

Base

Air Inlet


CONTROL PANEL

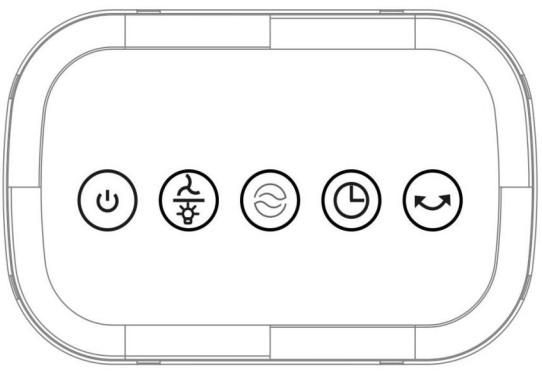



6


- Plug in first


Put the plug into the socket, products in standby, power indicating light is on.


 Push **this** button to working state, push it again to standby .

 Short push this button to choose speed level between 01-12.

 Long push this button to turn on the LED light, repeat push to choose white color or orange color light.

 Push this button to set from Normal wind- natural wind-sleeping wind.


 Push this button to choose time from 00-15 hours


 Push this button to oscillate the fan, push it again to stop the function.


After 180 seconds automatically turn off the screen


7


REMOTE CONTROL


 ON/OFF

 SPEED level from 01-12

 WIND MODE: normal-natural-sleeping


 Controls the TIMER function


 Controls the oscillation function

 Controls the LED light function

Install batteries

- Slide out the battery cover A, then remove the cover A.
- Load 2pcs AAA battery C in the battery bay B, ensuring that the positive and negative poles are on the correct side.
- Close the battery cover A and push up.

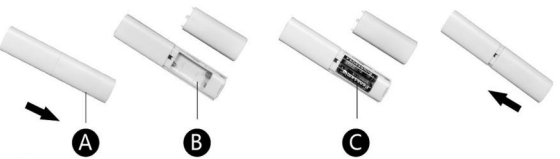

 **NOTE!** Be sure to direct the remote control toward the receiver on the manual control panel.

- Use the remote control within 16 Ft. From the heater. If the remote control is not directed towards the receiver, the effectiveness will be reduced.
- Do not place any obstacle between the receiver and remote control.
- Please treat your remote control with care. Knocking or dropping it will reduce its reliability.
- Please store the remote control carefully when not in use.

8

Problems	Probable Causes	Solutions
The fan will not start	<ul style="list-style-type: none">The unit is unpluggedThe fuse is blown/circuit breaker is trippedPower failure	<ul style="list-style-type: none">Make sure the power supply cord is plugged into a grounded 3-rong outlet.Check the house fuse/circuit breaker box and replace the refuse or reset the breaker.In the even of power failure, the tower fan will immediately stop.
Strong vibrations and noise	<ul style="list-style-type: none">Sitting unevenlyNot secured together correctly	<ul style="list-style-type: none">Ensure fan is sitting on flat surface.Make sure all components are secured correctly.
The tower fan does not blow at a consistent speed.	<ul style="list-style-type: none">The mode control is set to Natural	<ul style="list-style-type: none">For a steady, consistent fan speed, set the mode control to Normal.
Remote control is not working.	<ul style="list-style-type: none">Remote control battery needs to be replacedRemote not pointed at sensor on the unit or sensor is blocked	<ul style="list-style-type: none">See "Replacing the Battery".Be sure to point the remote control toward the sensor (manual control panel) on the unit. Make sure that the path between the remote control and sensor is not blocked by furniture or other objects.

CLEANING AND MAINTENANCE

- Unplug the appliance before cleaning.
- Do not use any chemical-based solutions for cleaning fan surfaces.
- In order to remove the dust from the protective fan grilles,use a vacuum cleaner upholstery attachment.
- Slightly moisten a cloth and then wipe off the surfaces of the fan.
- Ensure the fan is completely dry before storage or reconnecting to electrical supply.
- Never immerse the fan or fan motor in water or other liquid.
- If the fan is not used for long periods,protect with a suitable cover after cleaning, then store in a dry place.
- Regular cleaning will ensure the optimum performance and appearance of the fan.
- DO NOT kink the power cord when storing or while in use.

NOTE: Dust, dirt, pet fur, etc can diminish your fan performance and can lead to unwanted odors. For best performance clean your fan frequently, at least once per season.

ALWAYS TURN OFF AND UNPLUG THE FAN BEFORE CLEANING.

SPECIFICATION

Model NO.	TF-2108Y
Voltage	120V
Frequency	60Hz
Output Power (Watts)	40W maximum