 


Assembly Instructions

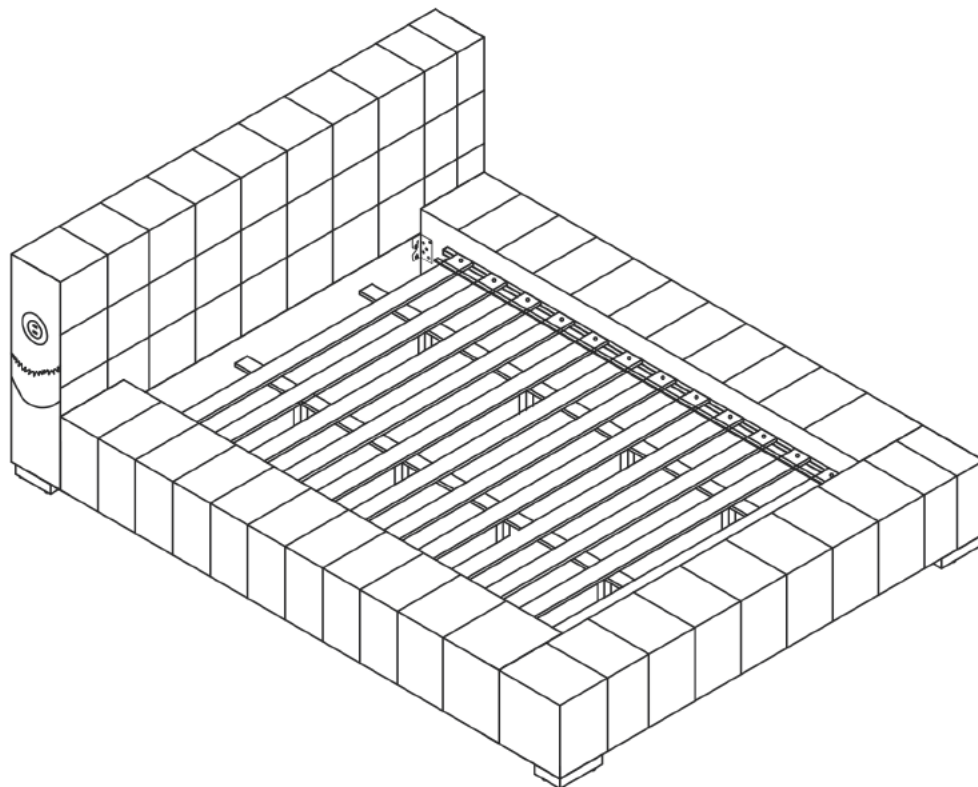

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



Phillips Screwdriver

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

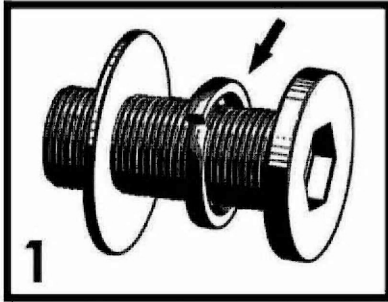

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

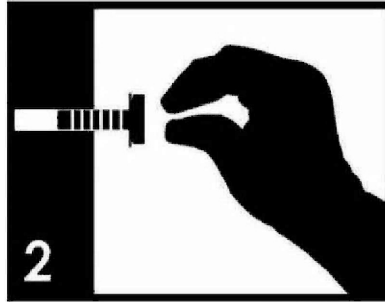

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

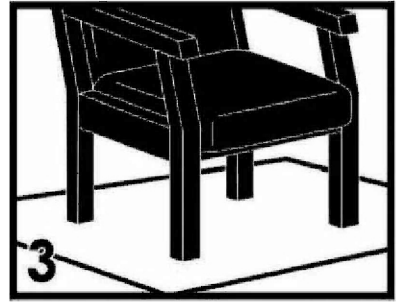

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

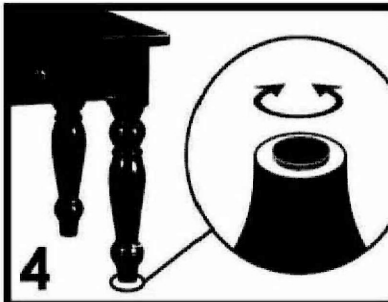

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

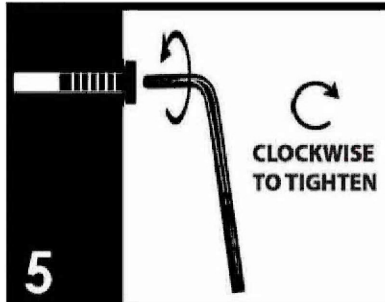

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

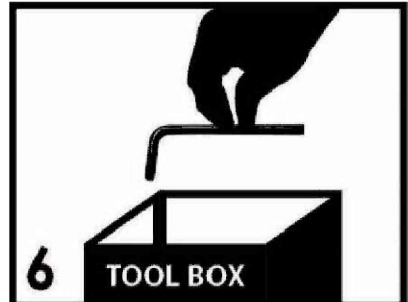


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.








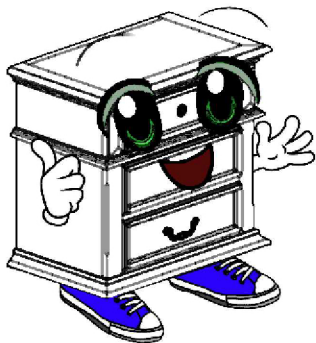


    FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.






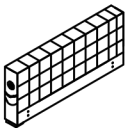



Before you begin, please read Page 2 of "Assembly and Care Advice".

 And remember, do not tighten until each step is completed or instructed.


Parts List

	#1 x 1pc Headboard
	#2 x 2pcs Side Rail
	#3 x 1pc Footboard
	#4 x 2pcs Center Support Rail
	#5 x 4pcs HB/FB Leg
	#6 x 1Set Slat (13pcs)
	#7 x 8pcs Ø5/16" Support Leg 30x30x143mm
	#8 x 7pcs Ø5/16" Side Rail Leg

Hardware List


	#A x 8pcs Bolt Ø5/16" x 1-1/2"
	#B x 8pcs Lock Washer Ø5/16"
	#C x 8pcs Flat Washer Ø5/16"x19mm
	#D x 26pcs Screw #8 x 1-1/2"
	#E x 16pcs Screw #8 x 2"
	#F x 1pc Allen Wrench 5mm
	#G x 2pcs Power line

 Exploded View

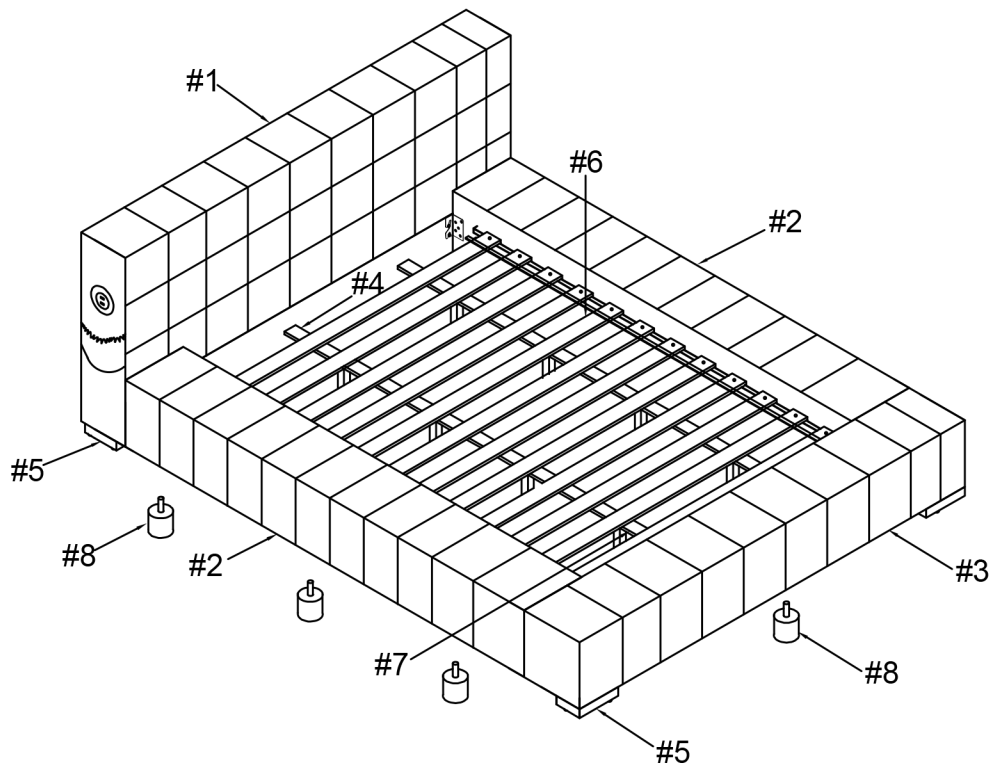

#E x 8pcs

 
Align feet (#5) to the bottom corner block of the headboard (#1), then secure by using screws (#E). There will be no pre-drilled holes.

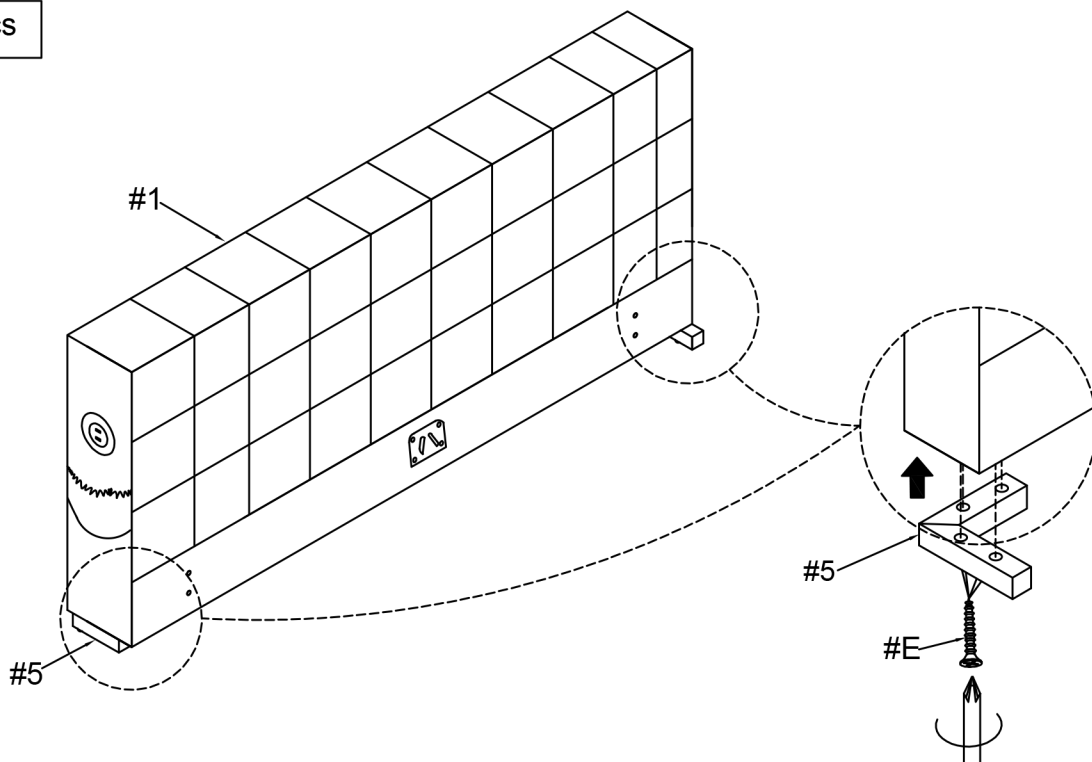




#E x 8pcs

 Align feet (#5) to the bottom corner block of the footboard (#3), then secure by using screws (#E).
There will be no pre-drilled holes. Attach side rail leg (#8) to footboard (#3).

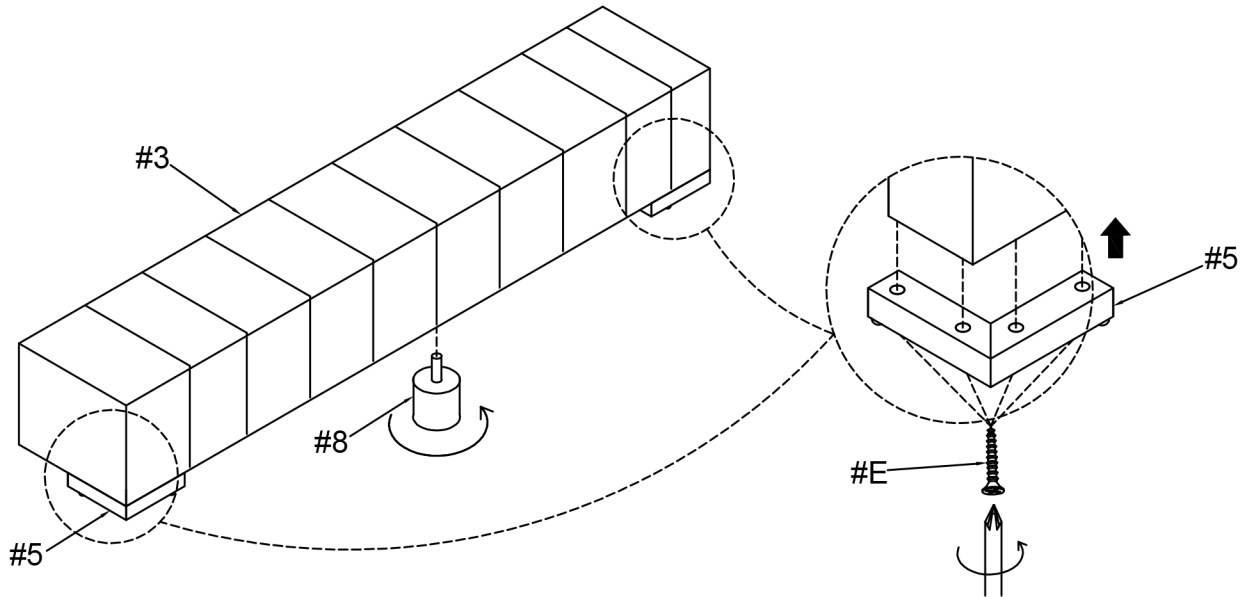

 
Attach side rail legs (#8) to the side rails (#2).

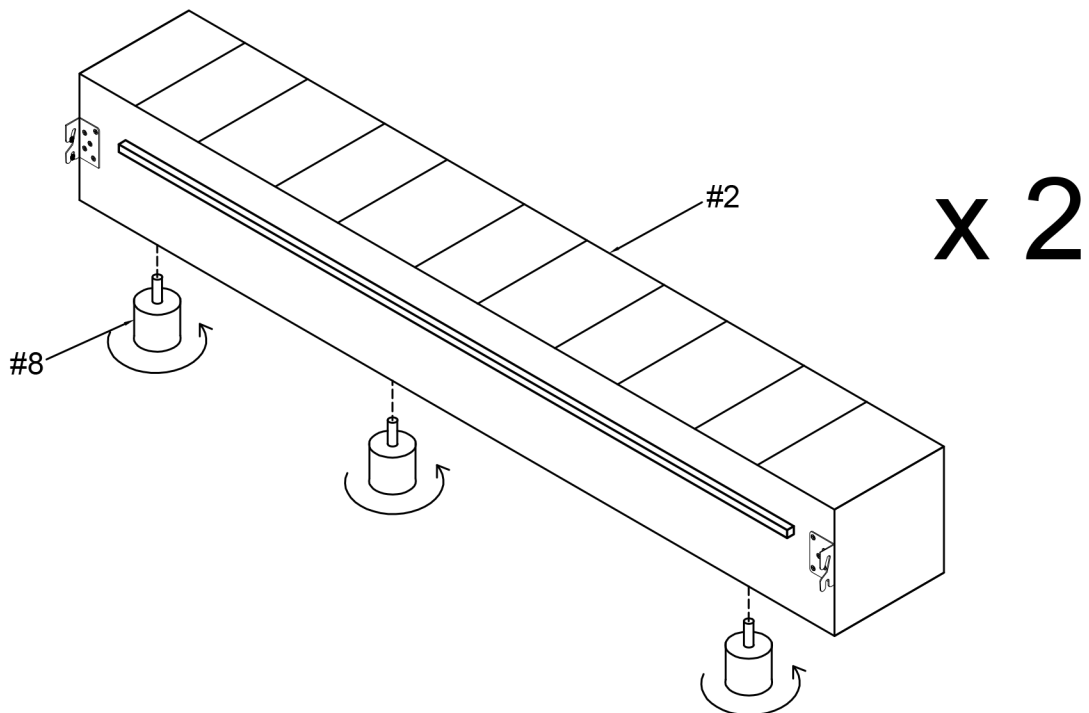




Align side rails (#2) to the headboard (#1) and footboard (#3), then secure by using bolts (#A) with washers (#B,C).

#A x 8pcs
#B x 8pcs
#C x 8pcs

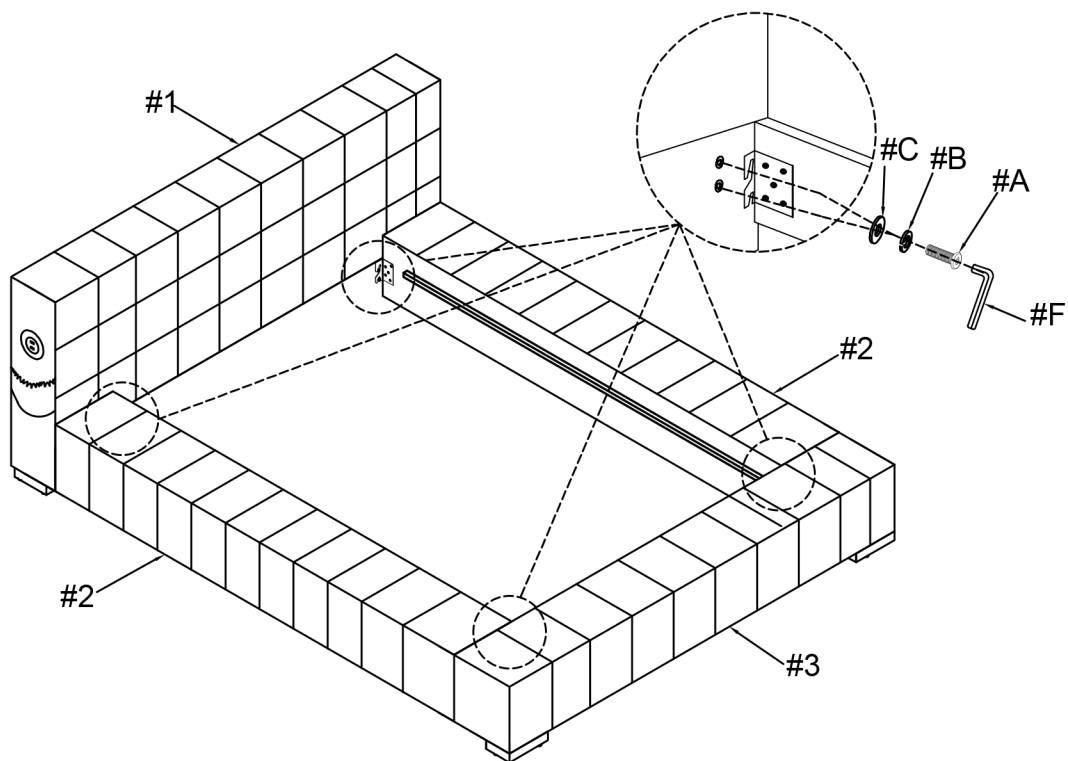 


 Align support slats (#4) to the slats (#6), then secure by using support legs (#7).
Adjust the leveler of the support legs (#7) according to ground level.

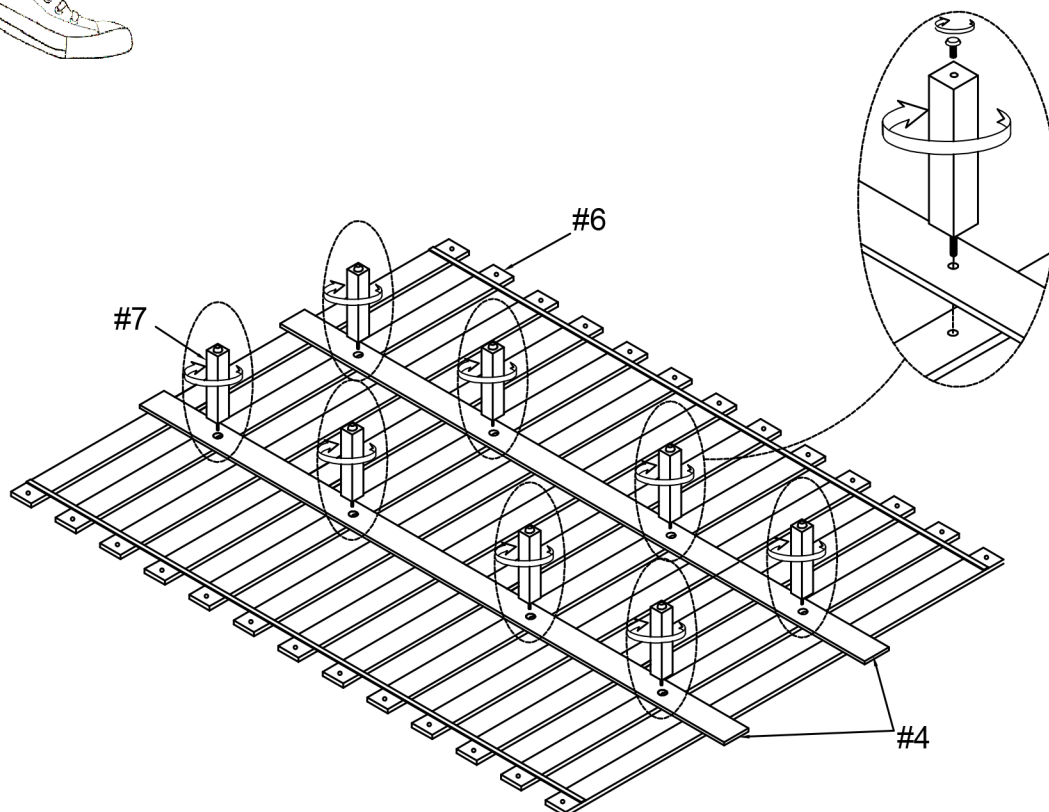



#D x 26pcs

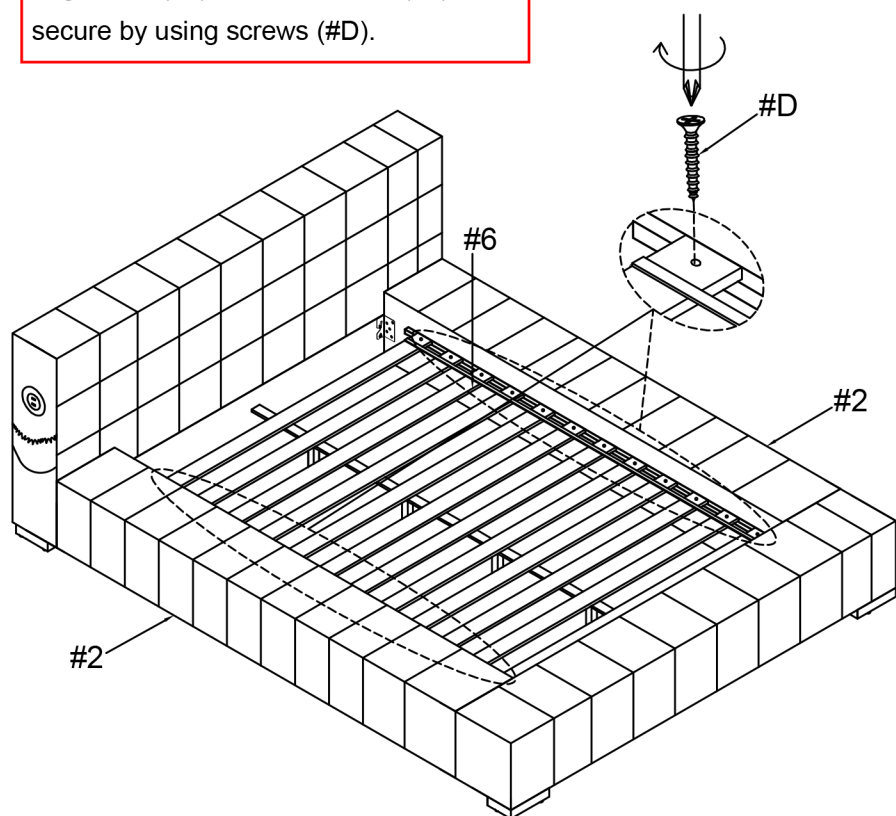 

#G x 2pcs

