

 
ASSEMBLY INSTRUCTIONS

PLEASE KEEP THIS FOR FUTURE REFERENCE

1.0 hr


APPROXIMATE ASSEMBLY TIME **1 PERSON ASSEMBLY**

FLOOR AREA
2.0M X2.0M

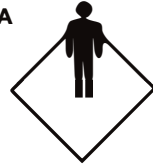

REQUIRED ASSEMBLY SPACE

 ASSEMBLED DIMENSIONS

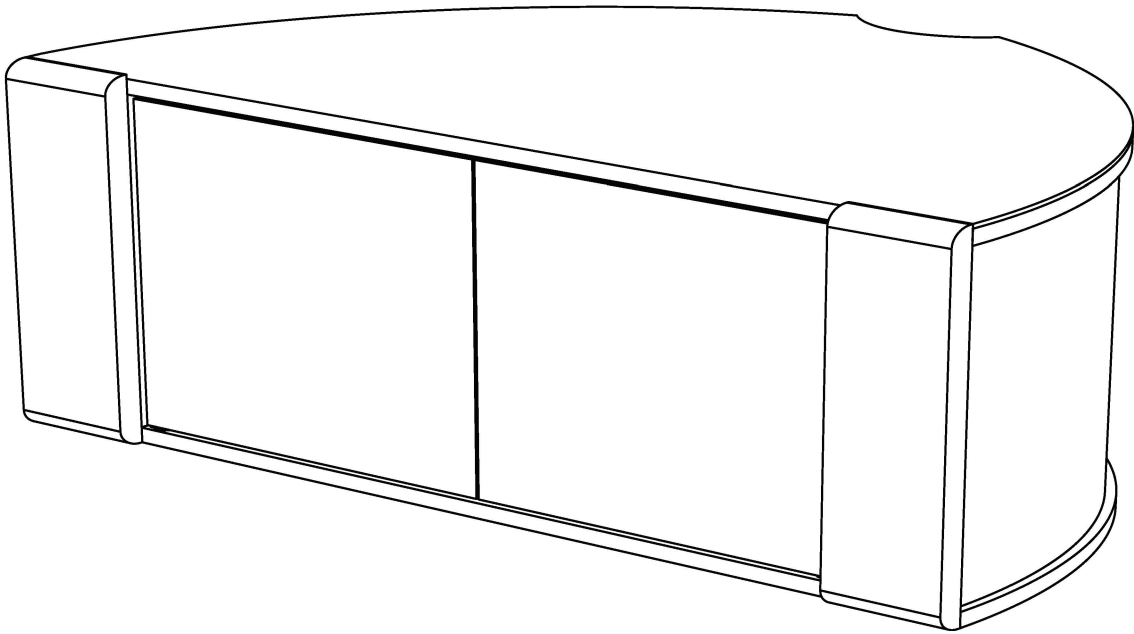











Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.




Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- Please do not sit or stand on this item.
- Never allow any kind of liquid to remain on your furniture, Absorption can cause wood to warp or finishes to de-laminate
- Please do not drag and pull your furniture.
- If the glass is chipped or broken, stop using the product and consult the manufacturer or supplier.
- Please do not place very hot or very cold items on the glass surface, unless adequately thick table mats are used to prevent such items from coming into contact with the glass.
- Please do not use the glass as a chopping surface. Do not strike the glass with hard or pointed items.
- When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary, do not use washing powders or any other substances containing abrasives since these substances scratch glass.
- The glass used in this product is toughened and complies with BS EN 12150-1:2000, clauses 8.3 & 8.4

         
 
Parts List

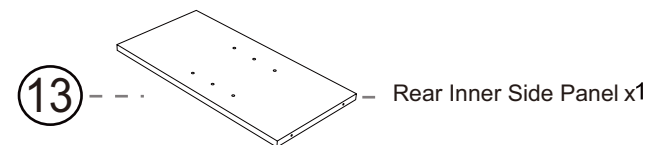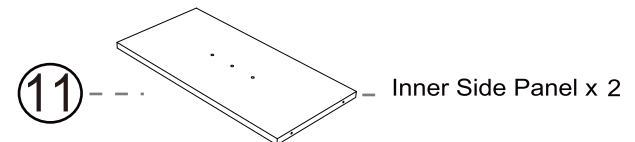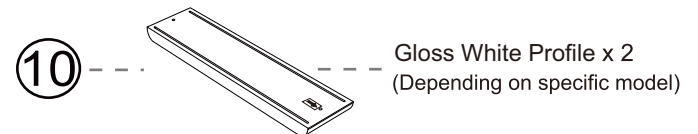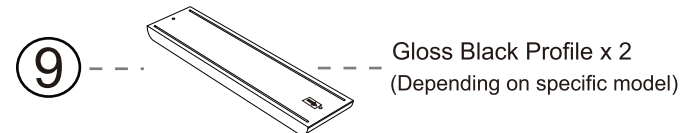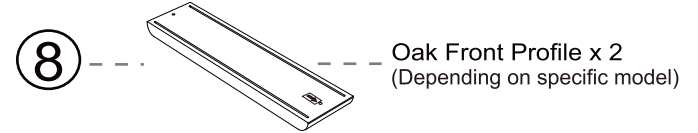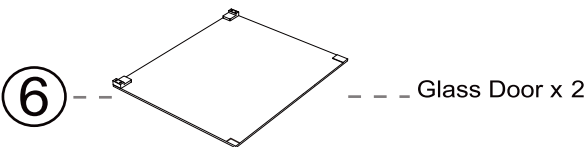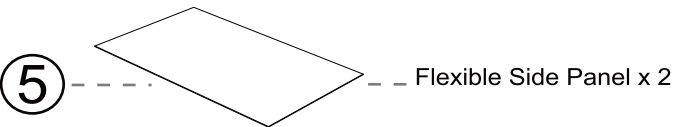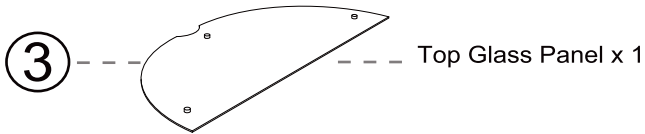



Fixings Identification

   

 
 
STEP 1

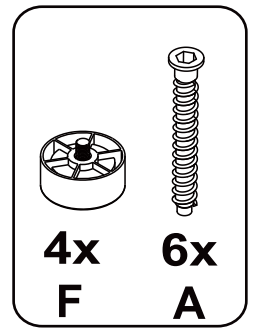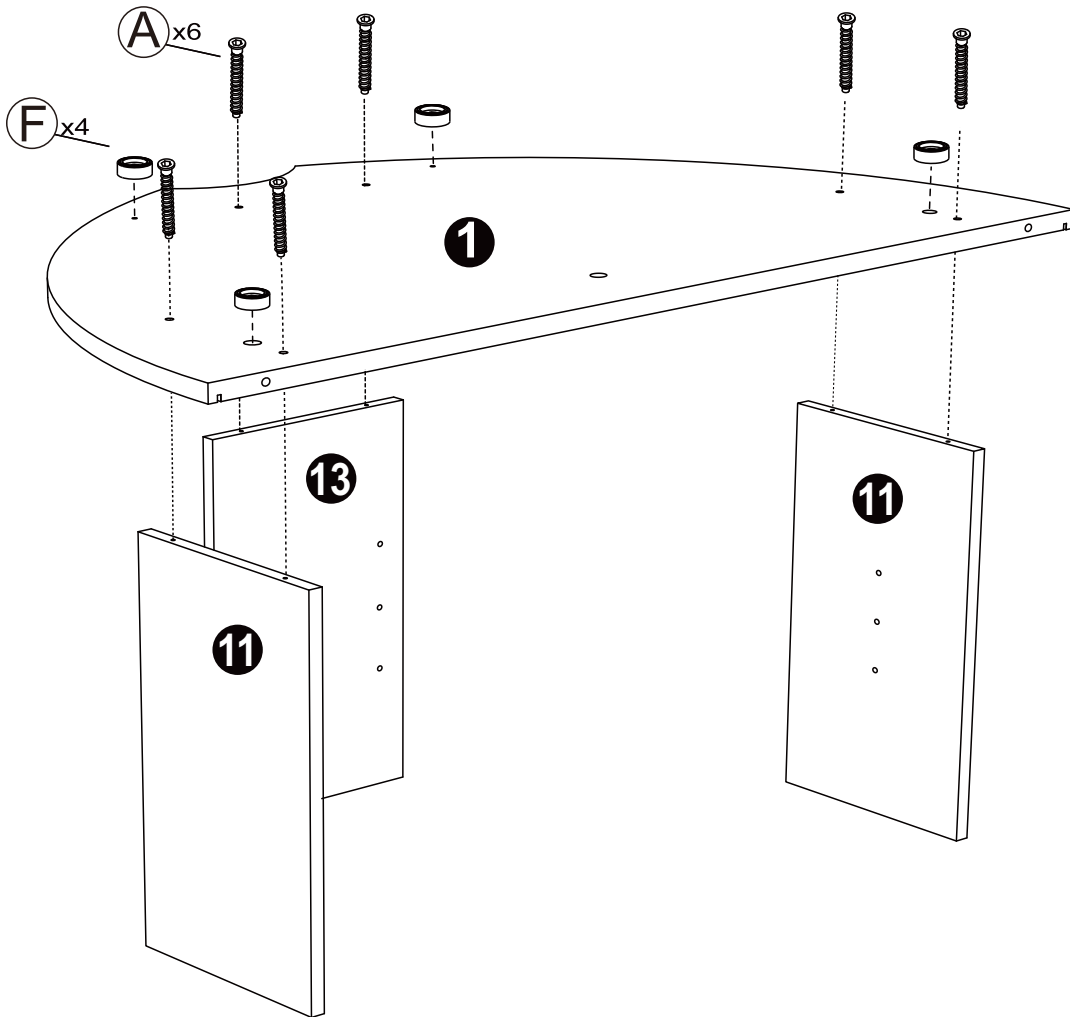

  STEP 2

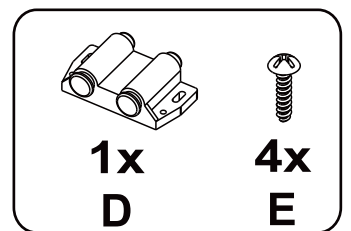
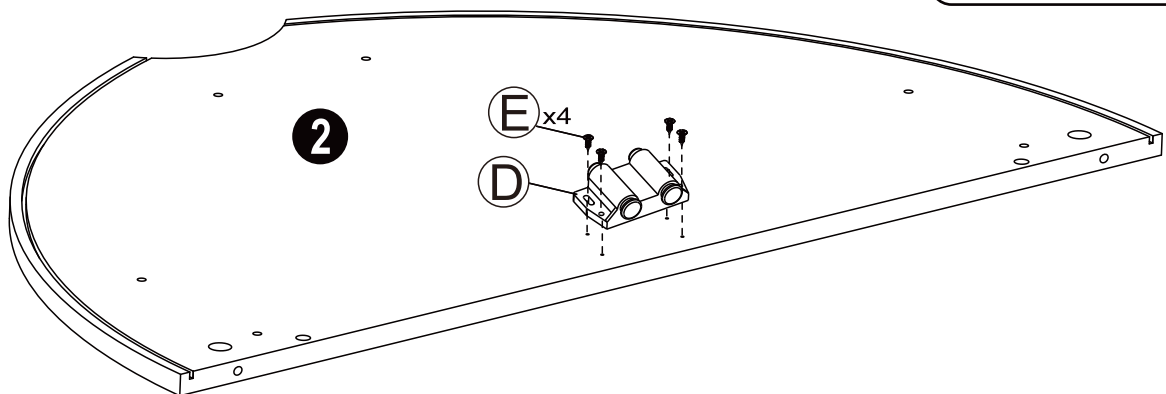


  STEP 3

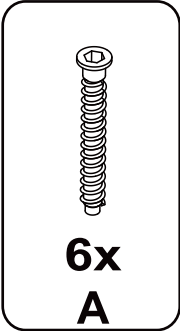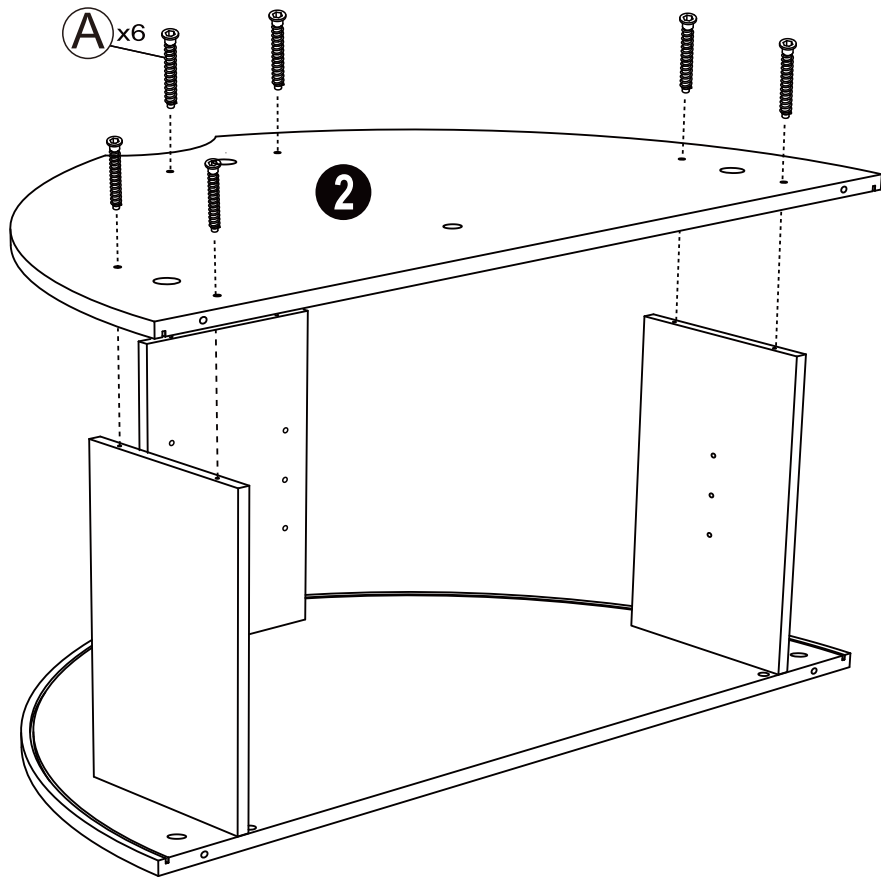



STEP 4

  This TV cabinet is supplied with both Walnut (7) & Oak (8) & Gloss Black (9) Gloss White (10) finish front profiles. Please select your desired profile before commencing Stage 4.

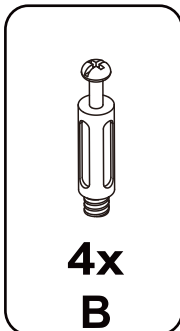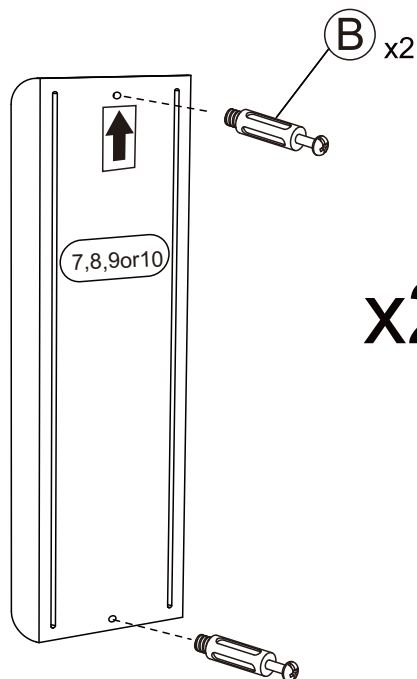


x2

 
 
STEP 5

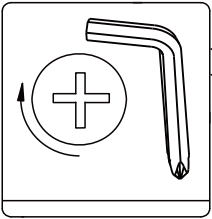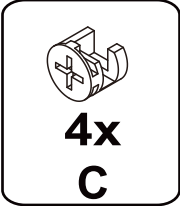

 Ensure Cam locks are fully tightened by turning clockwise

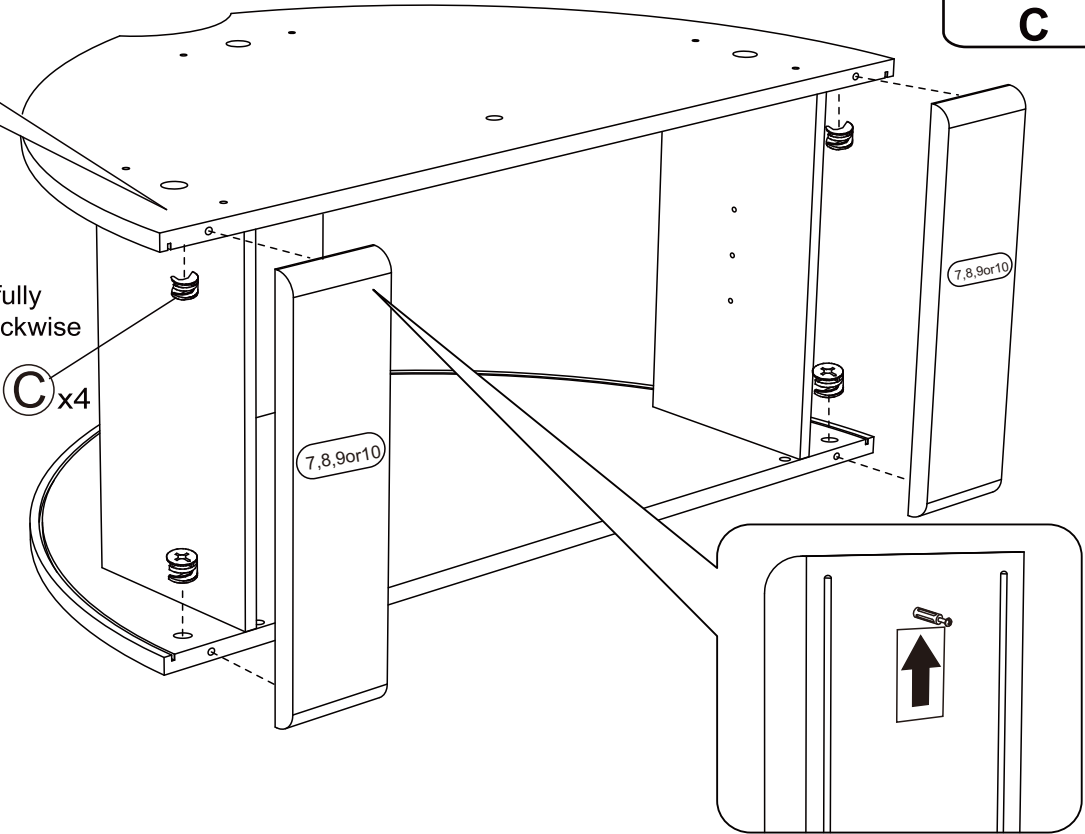


  STEP 6

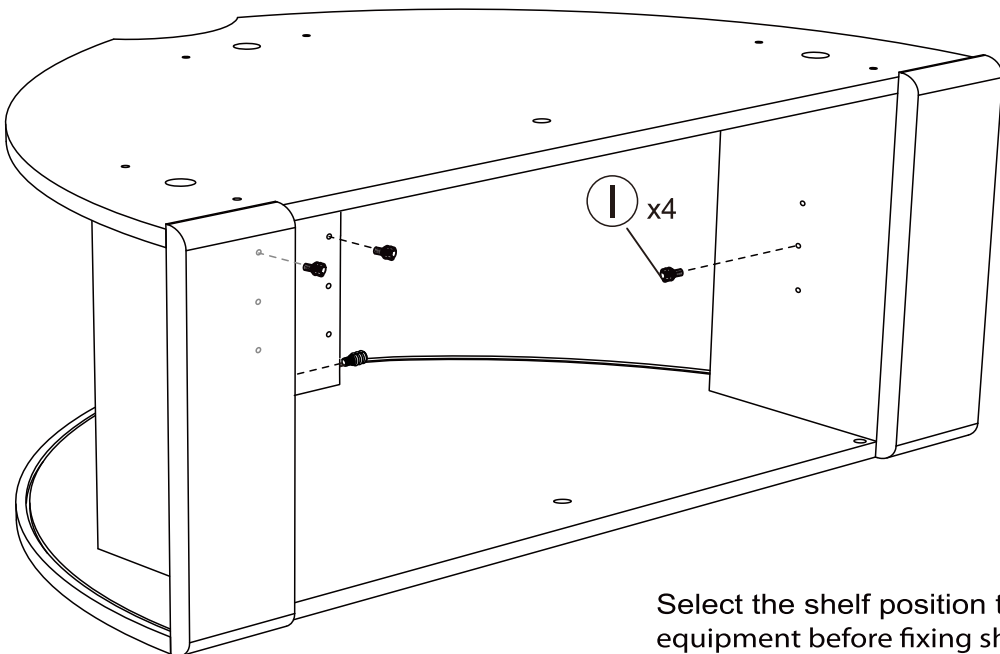
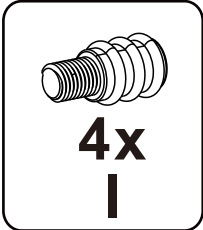


 Select the shelf position that best suits your equipment before fixing shelf clamps (I) in position

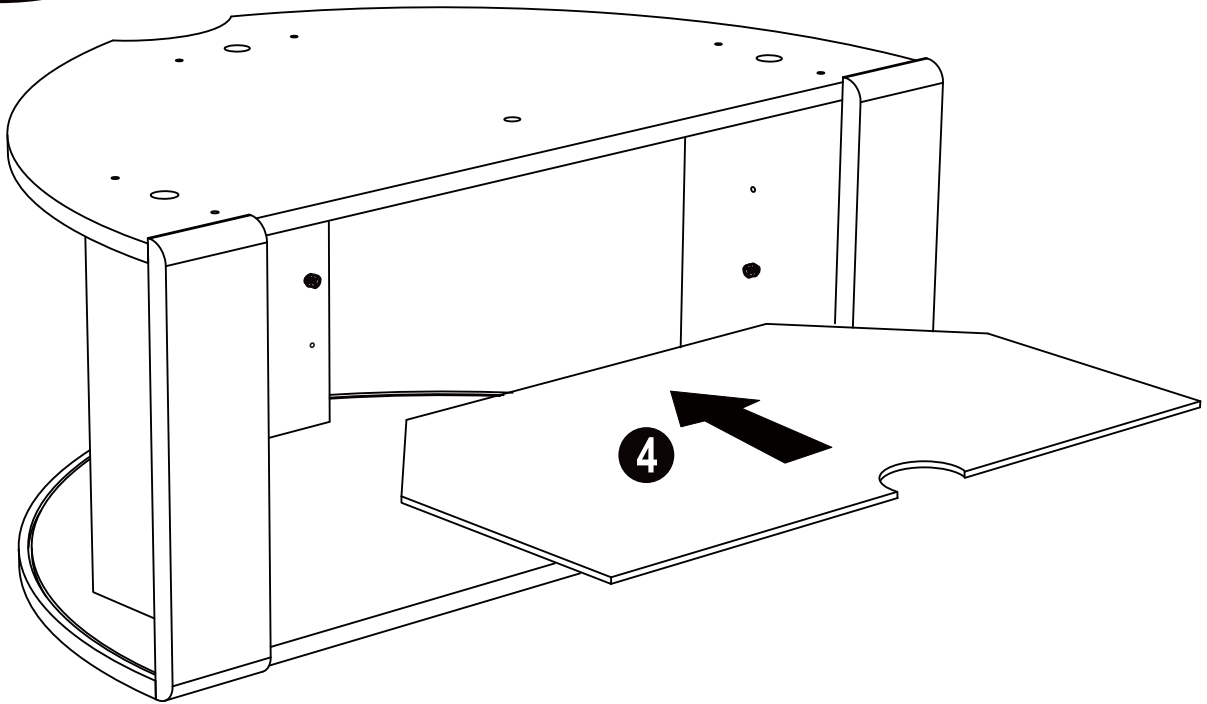

  STEP 7

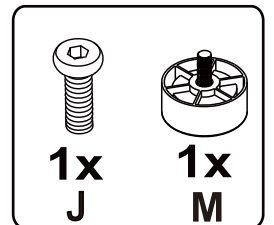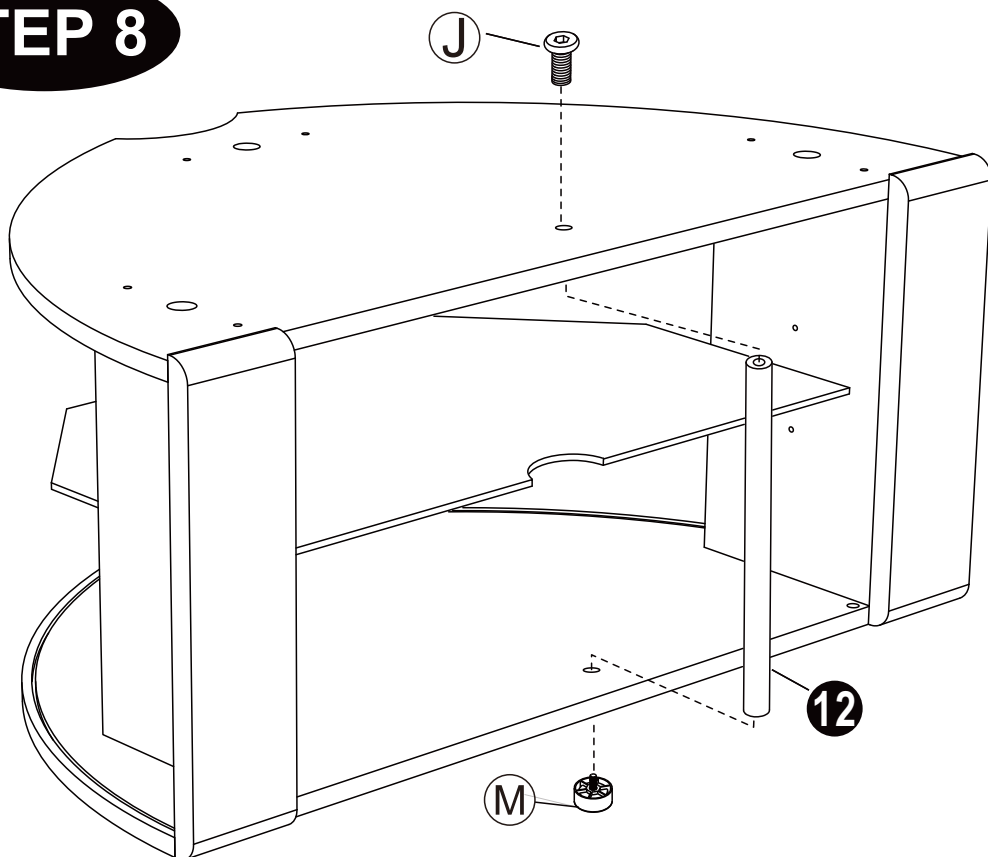


STEP 8







STEP 9

	
4x G	8x H

 Front left hand view

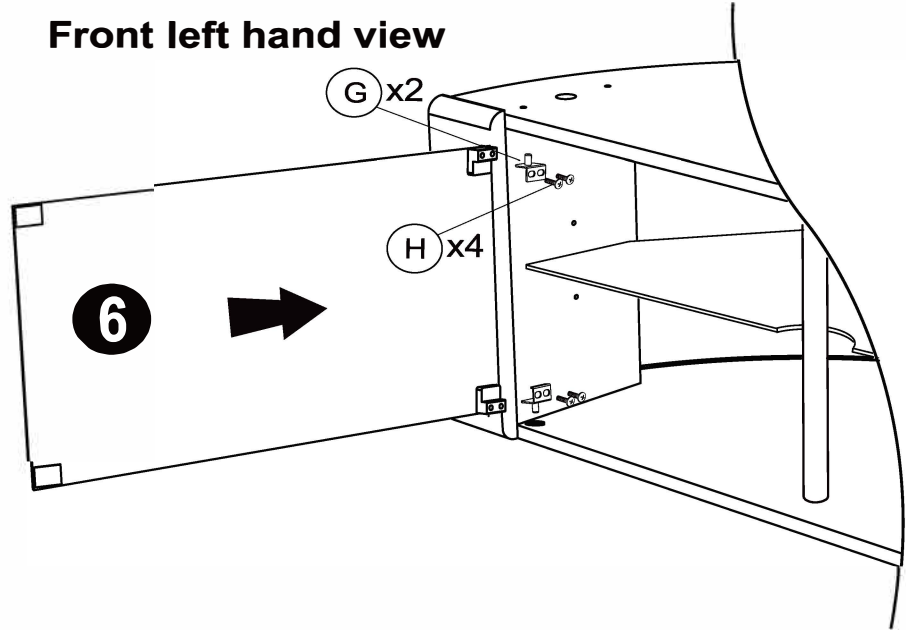


Front right hand view

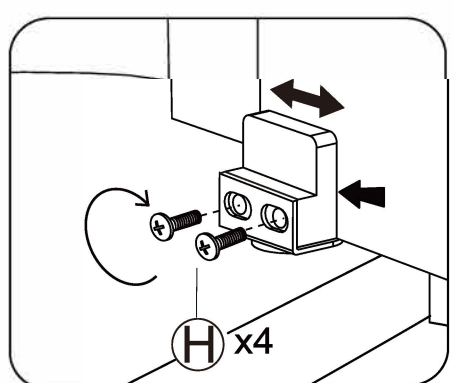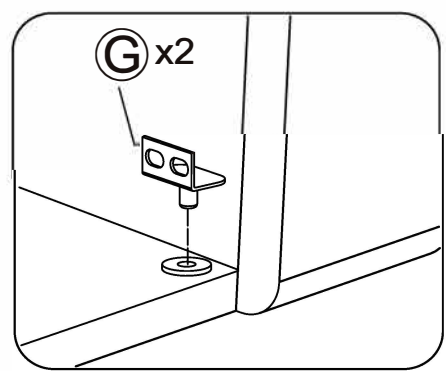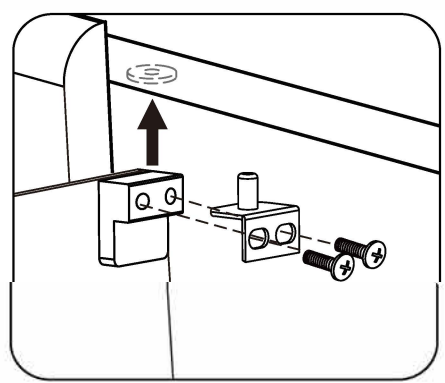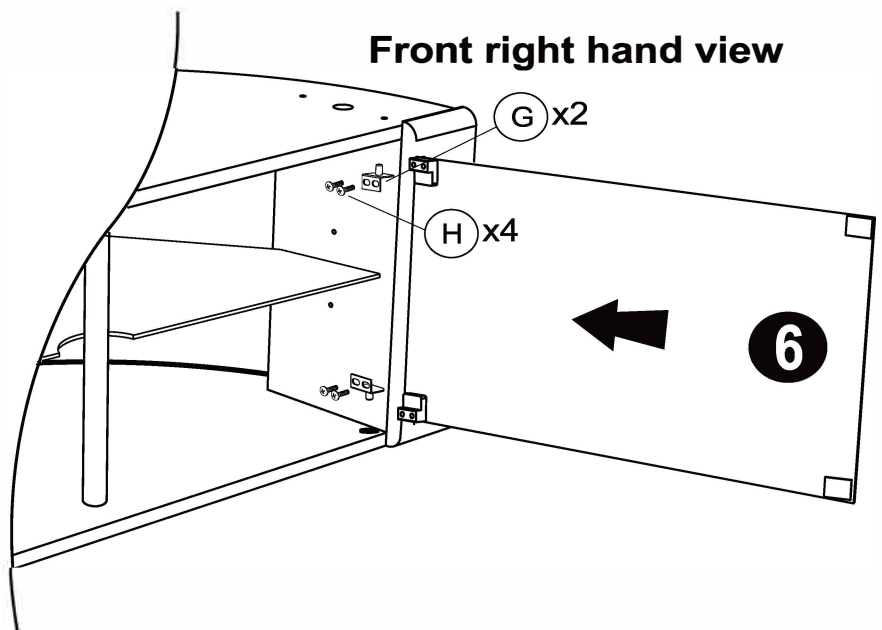    

NOTE : DOOR ALIGNMENT CAN BE ADJUSTED BY LOOSENING SCREWS (H) & RE-POSITIONING BEFORE TIGHTENING SCREWS

 STEP 10

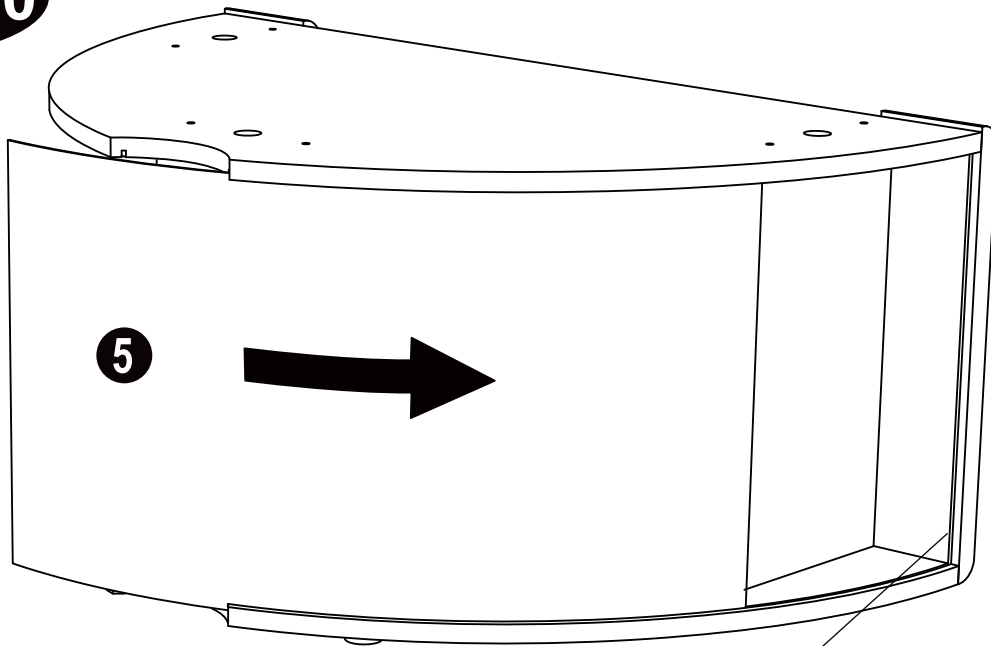

Locate edge of flexible side panel (5) into groove on front profile (7,8,9or10)

STEP 11

