 


Instruction Manual

Wall Cabinet

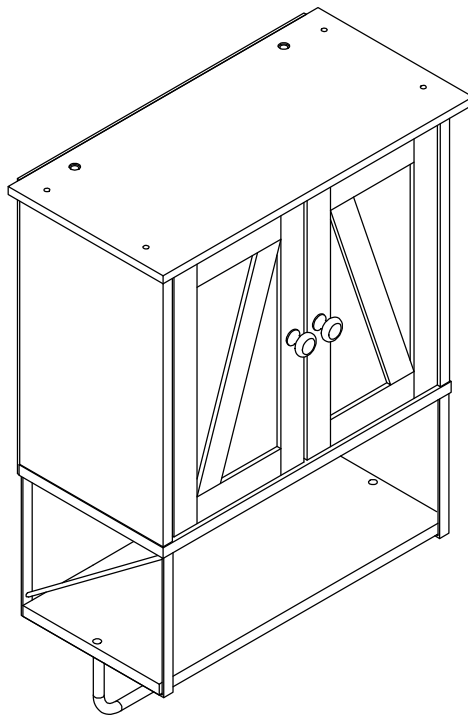

Thank you for shopping with us!

If any part is missing, broken upon receipt or you need any help from us.
For the FASTEST SOLUTION, please FIRSTLY CONTACT US

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

 
 
 
 
 
 
 
 
 
 
2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.








3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.


PART LIST

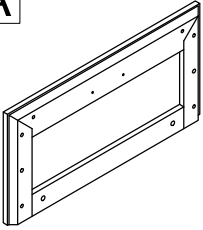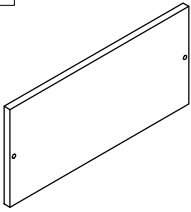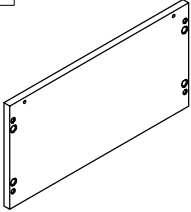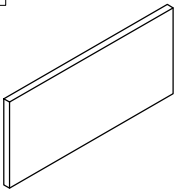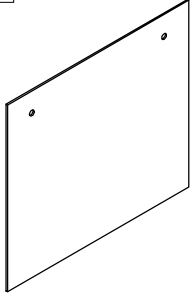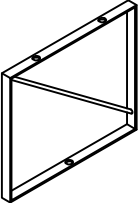A 	B 	C 	D 	E 
Top Panel 1 PC	Bottom Panel 1 PC	Fixed Shelf Panel 1 PC	Adjustable Shelf 1 PC	Left Door 1 PC
F 	G 	H 	I 	J 
Right Door 1 PC	Left Panel 1 PC	Right Panel 1 PC	Back Panel 1 PC	Side Iron Frame 2 PCS

      
 
HARDWARE LIST
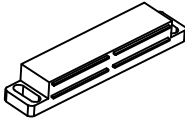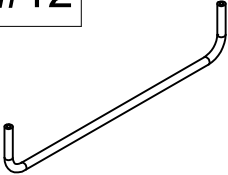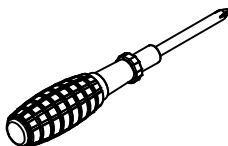
#1		#2		#3		#4		#5	
	Ø5*40mm		Ø6*30mm				M4*22mm		70*17*13mm
	Screw		Wood Dowel		Handle		Round Head Bolt		Door Magnet
	8 PCS (Extra 2)		4PCS (Extra 2)		2 PCS		2 PCS		1 PC
#6		#7		#8		#9		#10	
	30*22*1mm		Ø3*12mm		Ø3.5*14mm		Ø6.5*19.5*11.5mm		30*30*17mm
	Door Small Plate		Screw		Screw		Shelf Holder		Angel Iron
	2 PCS		2 PCS (Extra 1)		2 PCS (Extra 1)		4 PCS (Extra 1)		2 PCS
#11		#12		#13		#14		#15	
	M6*10mm		366*75*Ø10mm		M5*20mm		4mm		
	Bolt		Towel Bar		Bolt		Allen Wrench		Wall Anchor
	4 PCS (Extra 1)		1 PC		4 PCS (Extra 1)		1 PC		2 PCS
#16		#17							
	Ø4*45mm								
	Long Screw		Piton		Hammer		Phillips Screwdriver		
	2 PCS		16 PCS (Extra 4)		1 PC		1 PC		


 
ASSEMBLY OVERVIEW

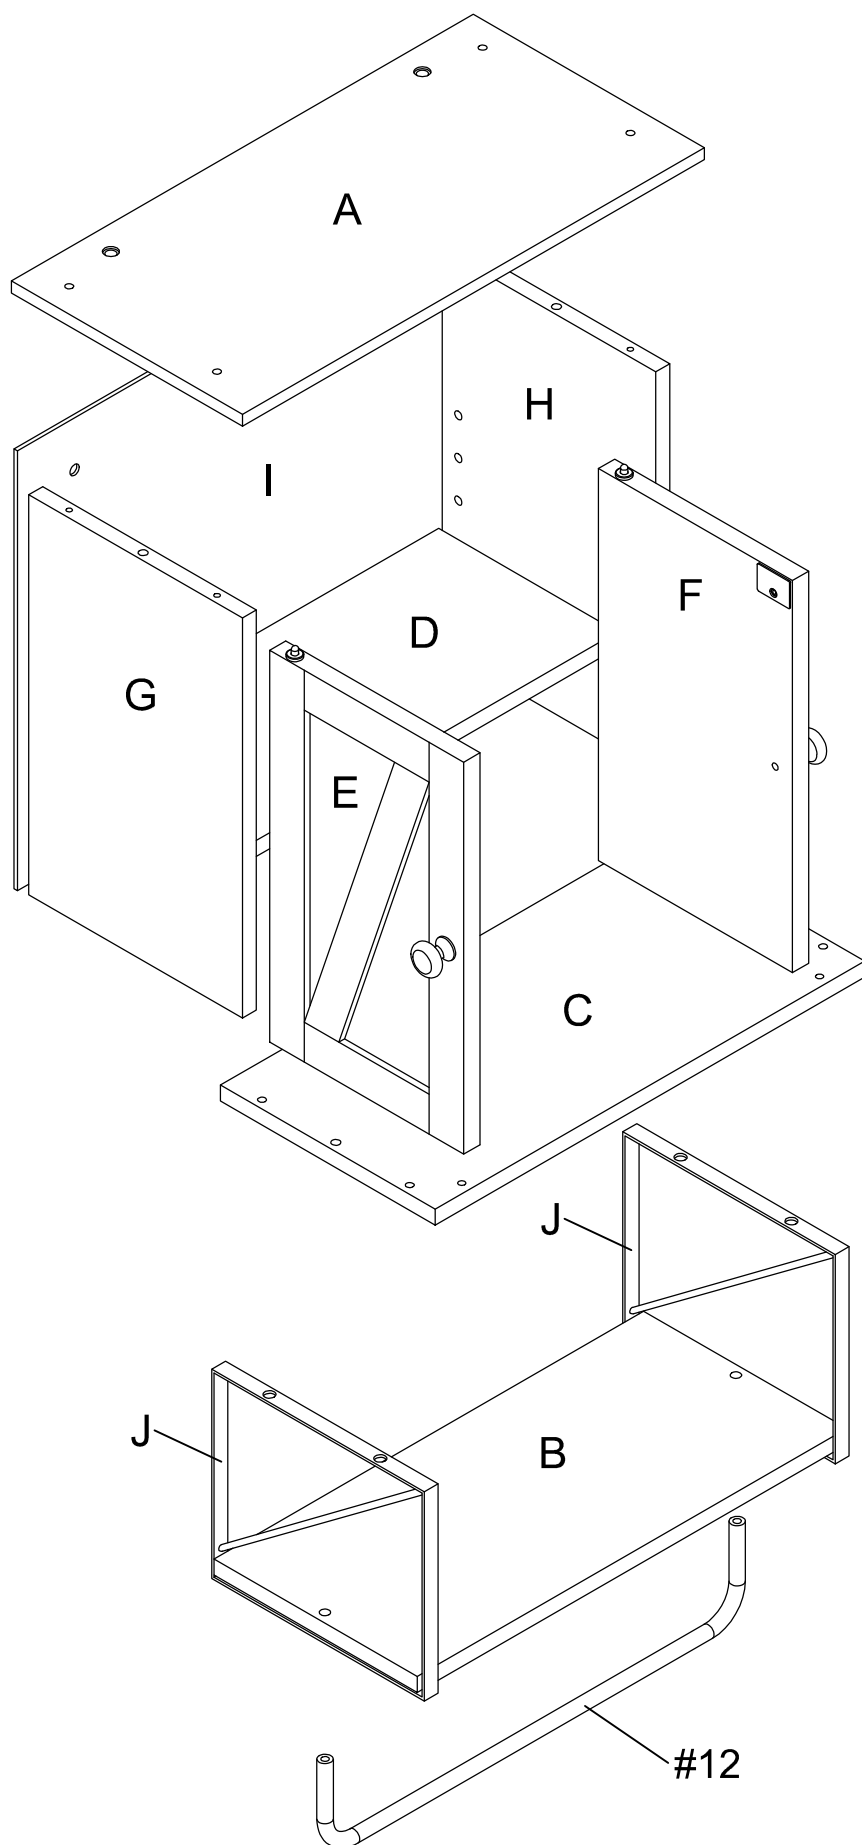

  
Step 1.

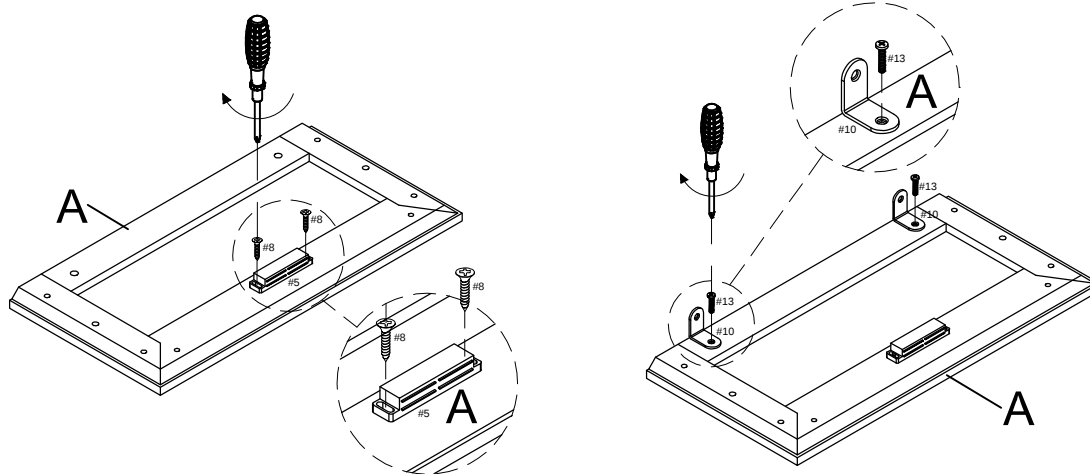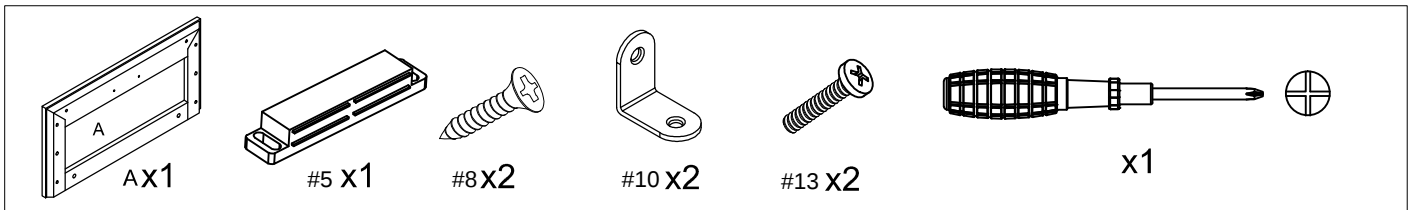

  
Step 2.

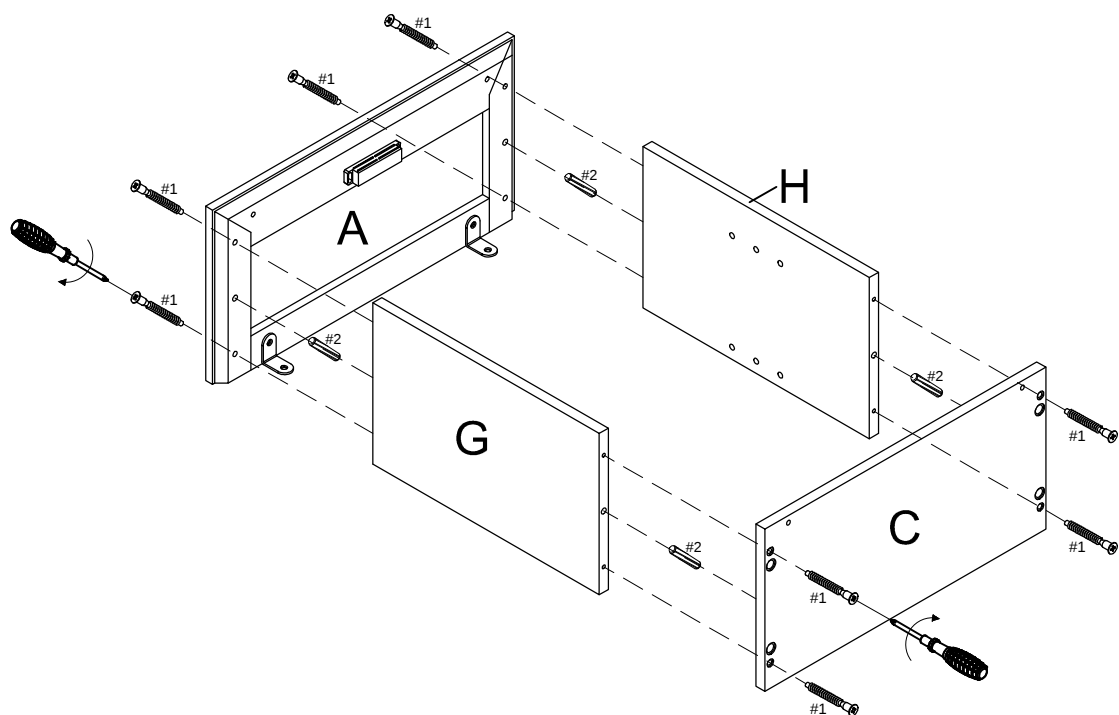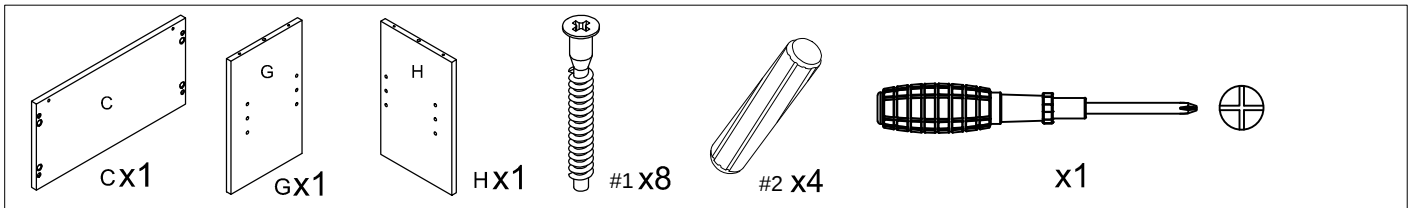

 
Step 3.

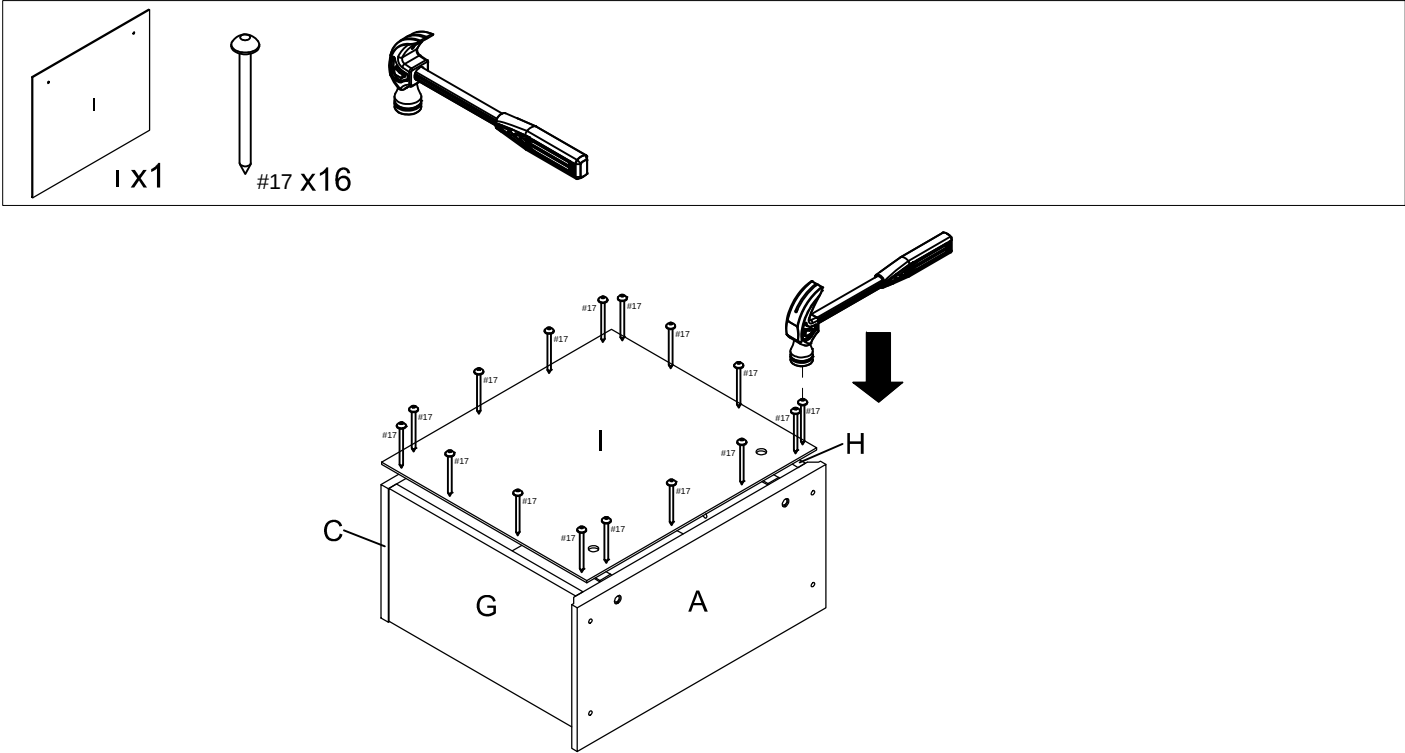

 
Step 4.

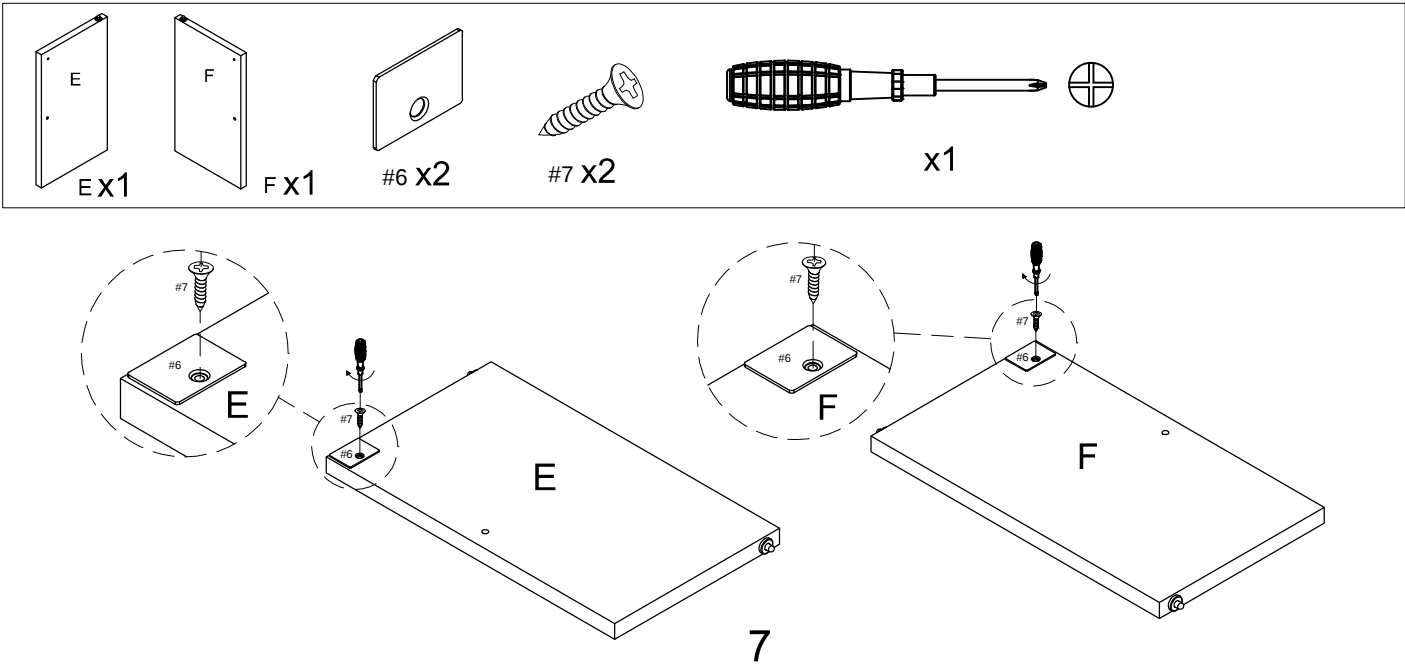

 
Step 5.

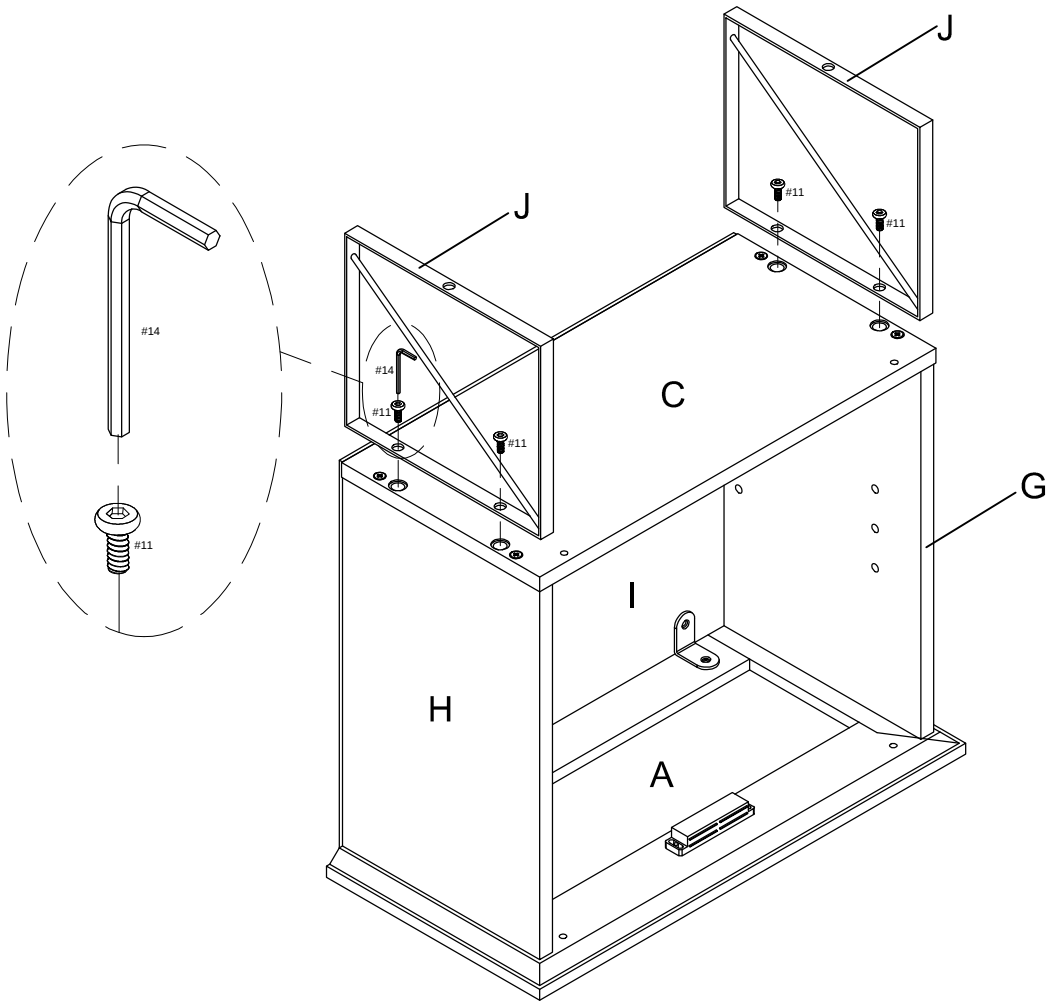

 
Step 6.

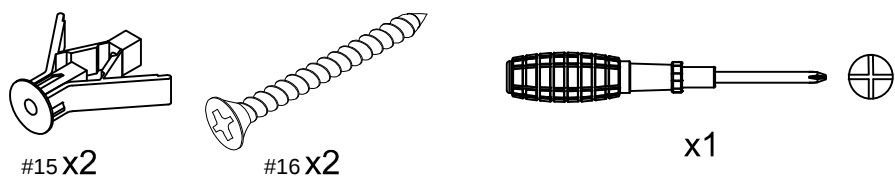

 
Safety strap kit must be installed to prevent tipping, damage and/or injury.

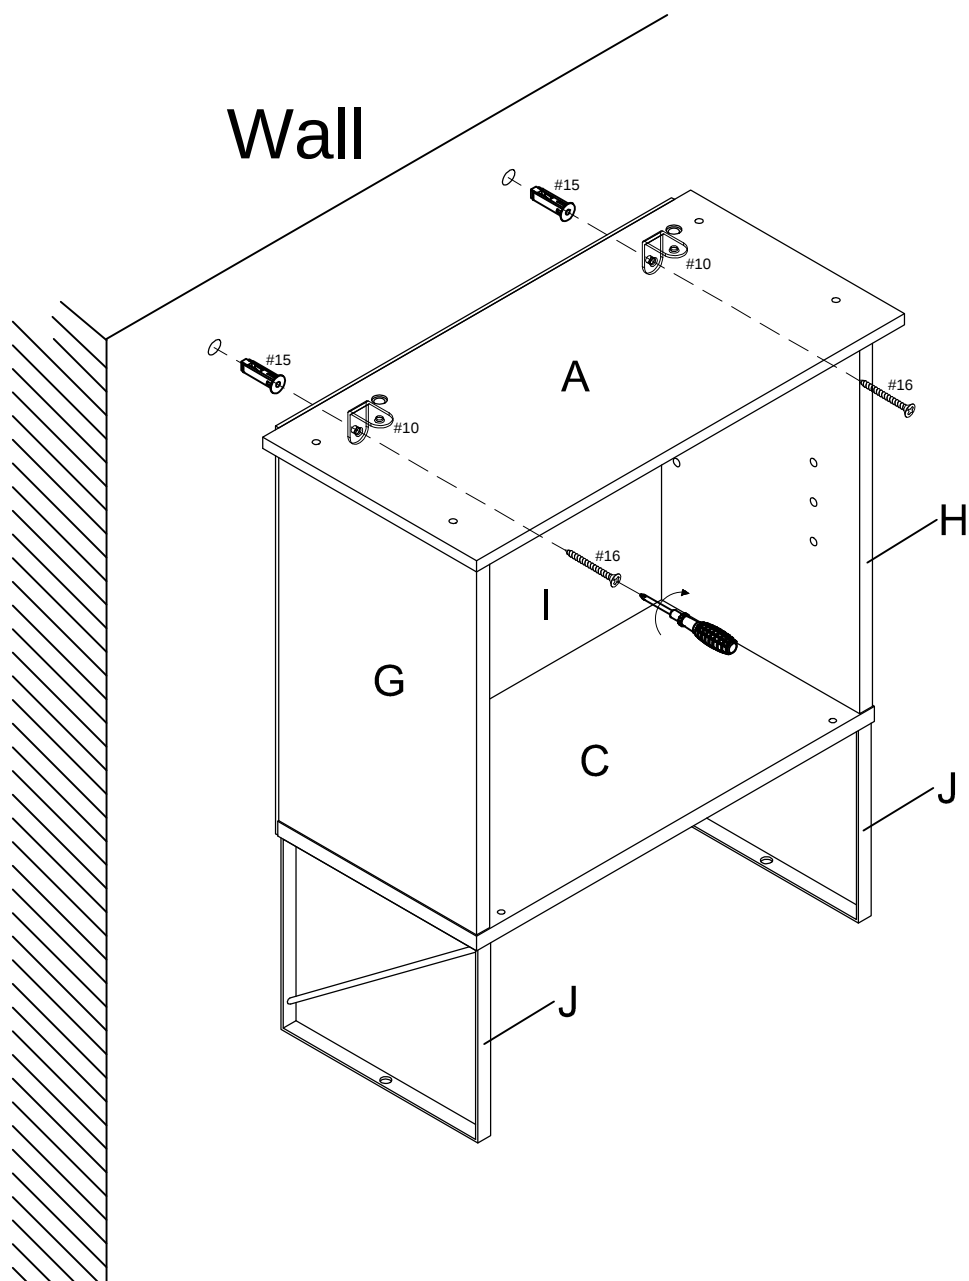


 
Step 7.

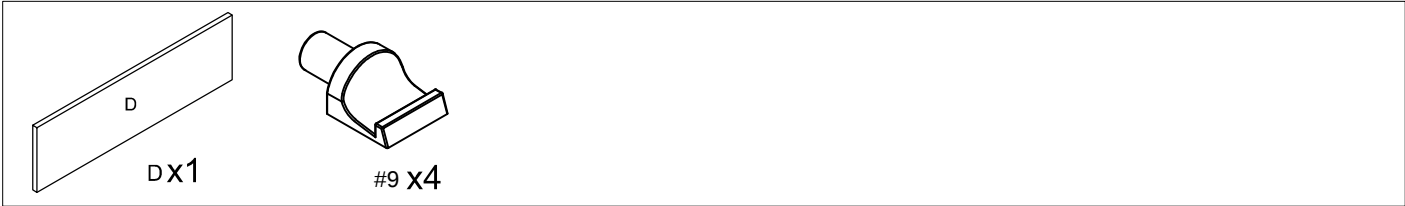



Note: Adjustable for three heights.

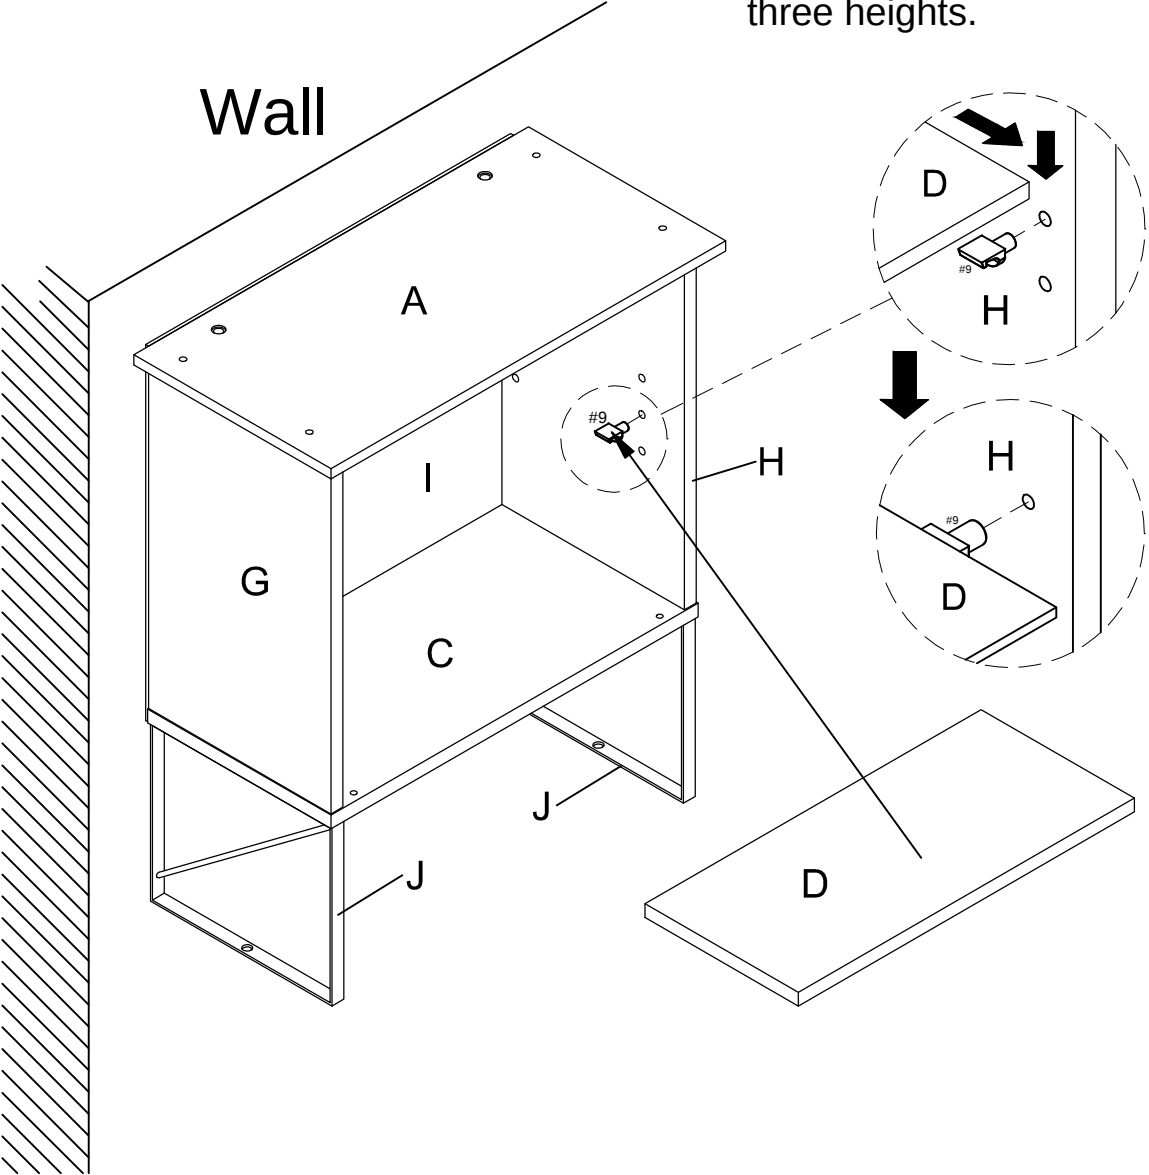 

  Step 8.

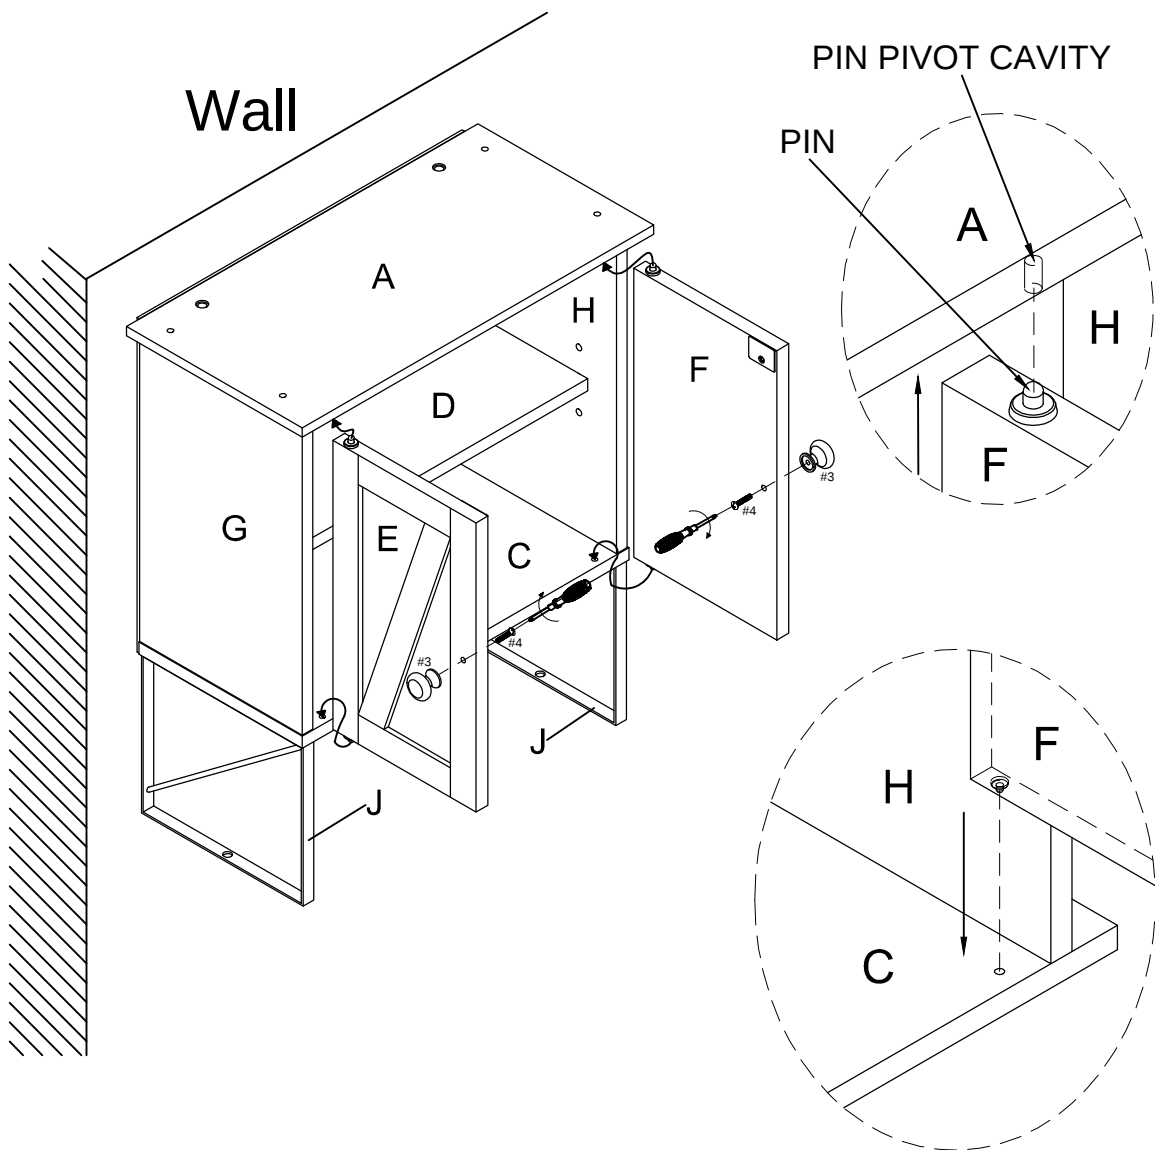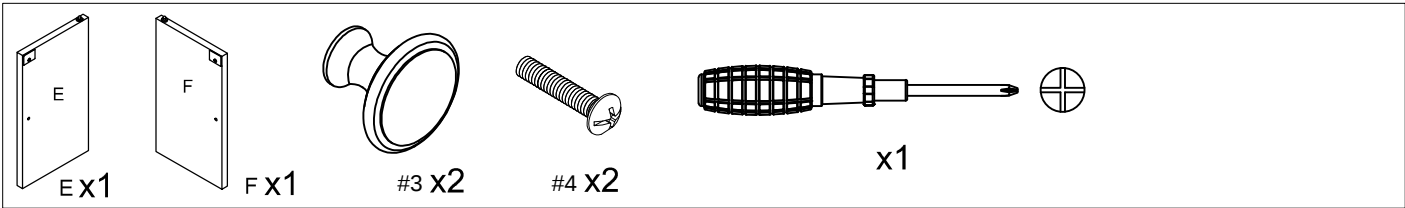

  Step 9.

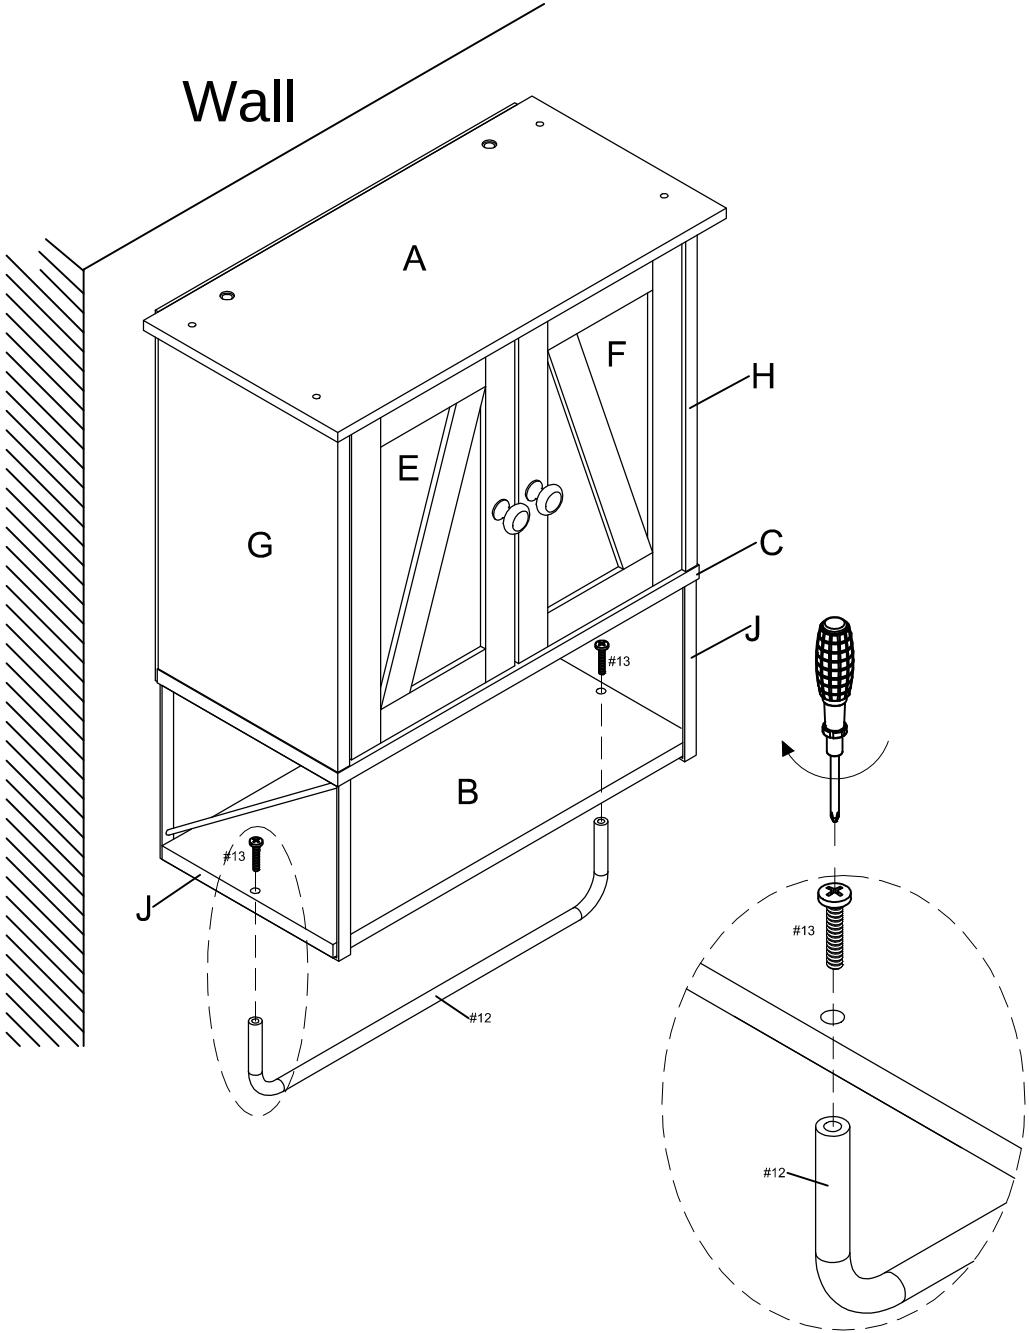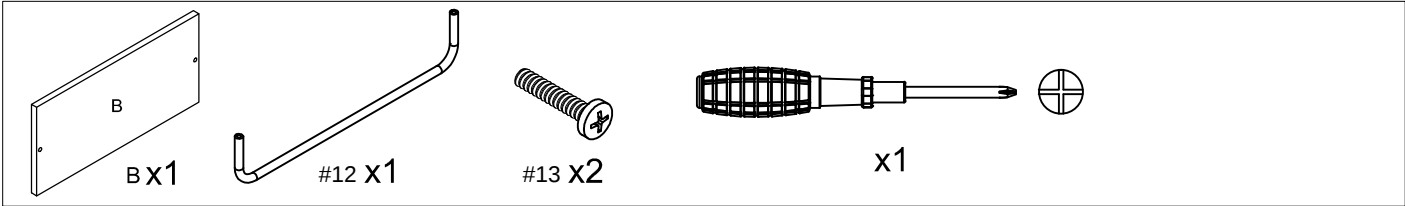

Warning:

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.