

# **INSTALLATION**

## *Product Manual*

Version: 210387US-01-26A-AA



### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.



 
 
### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.



### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

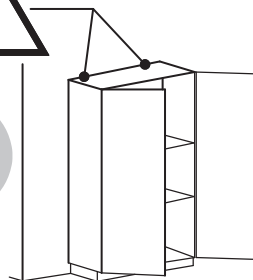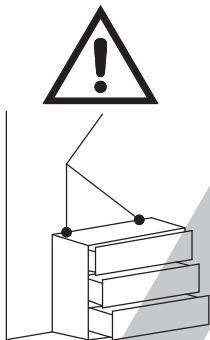

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

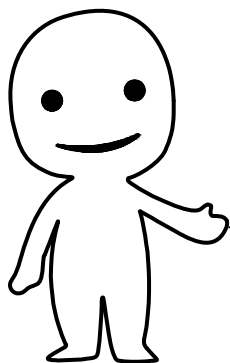


Please prepare the following tools

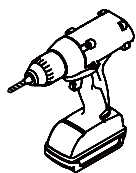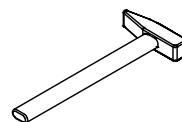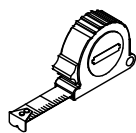     

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 84




CRA0635B

B x 102




CRB1595A

 C x 84




D x 50

 


CRF0630A

 E x 42




CRC0540A

 F x 6

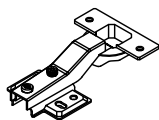

DGA861B

 G x 6

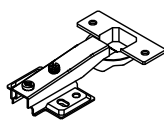


DGA861A

H x 86



CRD3514A

 J x 6

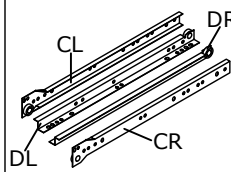


WX1014A

K x 48




CRD3512A

 L x 2

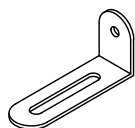


M x 4

 


CRD3535A

 N x 2



P x 48

 


Q x 48




CRD0314A

 R x 20




CRD3520A

 U x 18



CRA0635A

 
V x 2






W x 10



 X x 10



CRE0418A

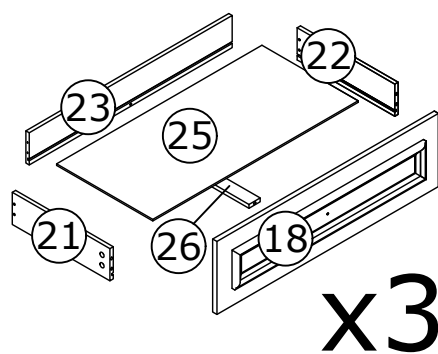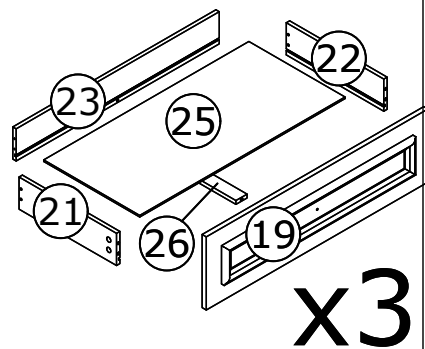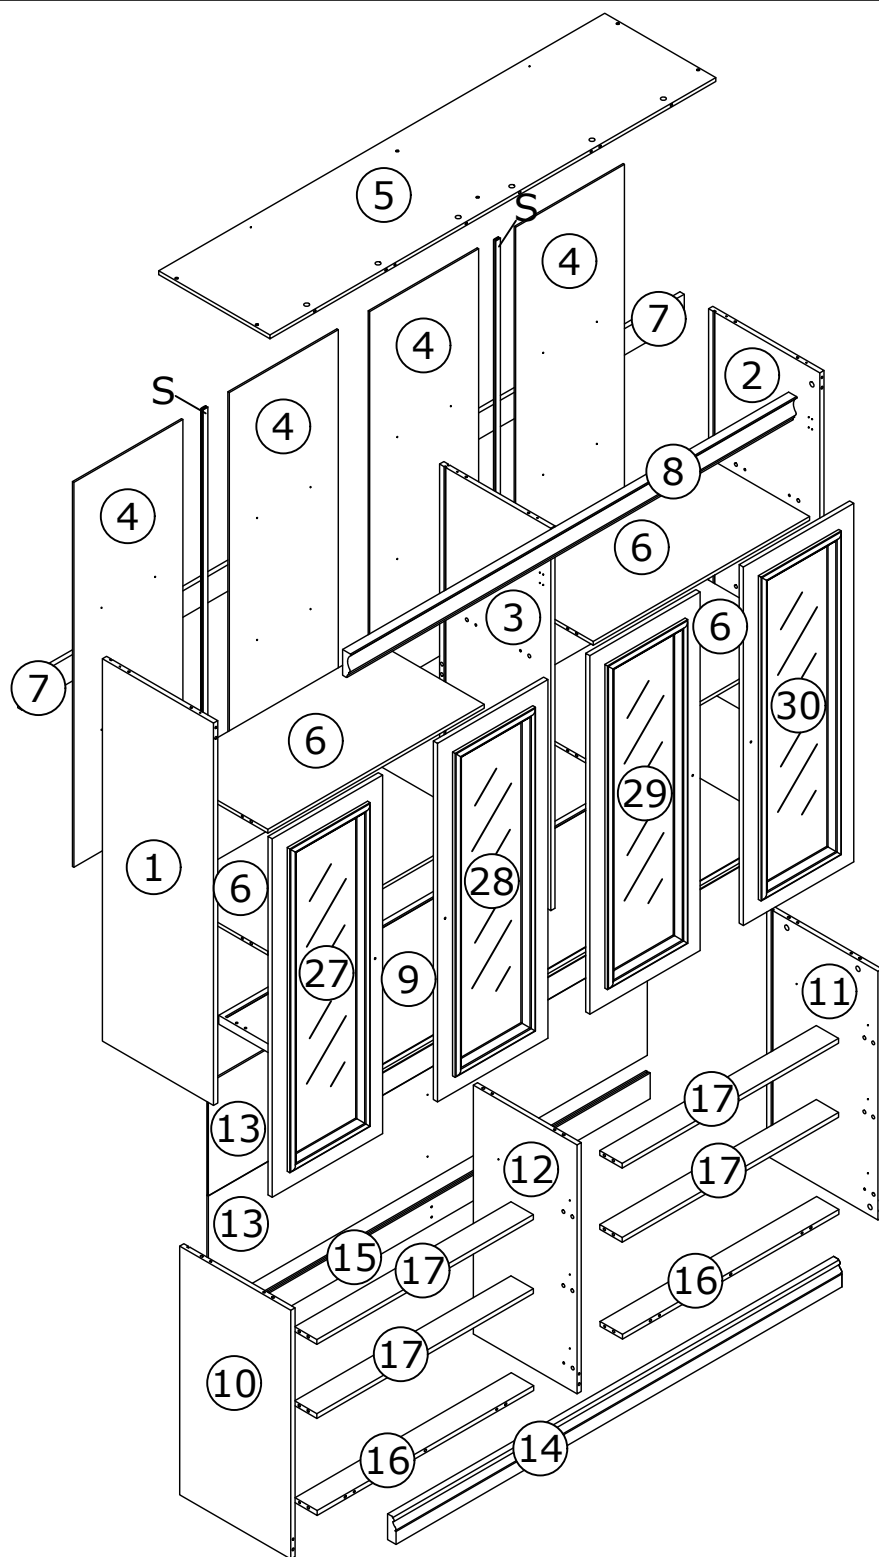   







## ⚠ WARNING

**Children have died from furniture tipover. To reduce the risk of furniture tipover:**




- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

      *This is a permanent label.  
Do not remove!*





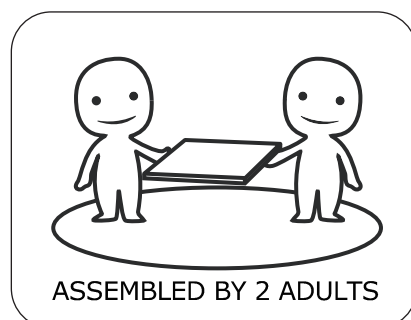


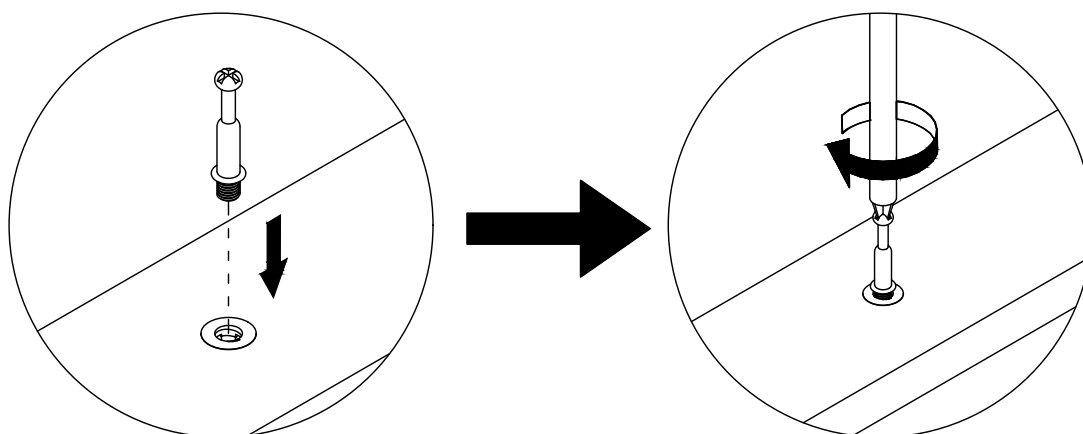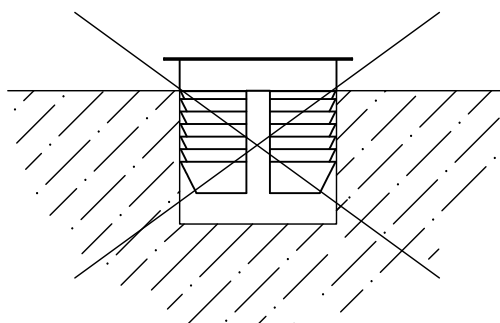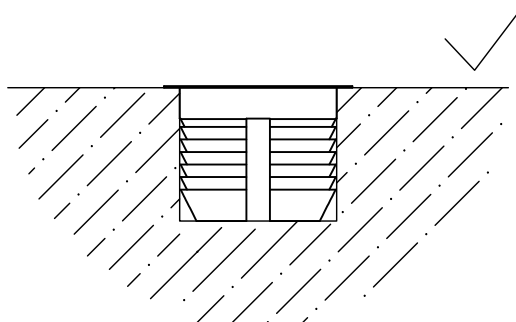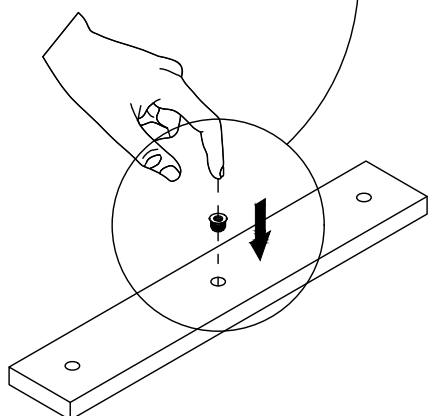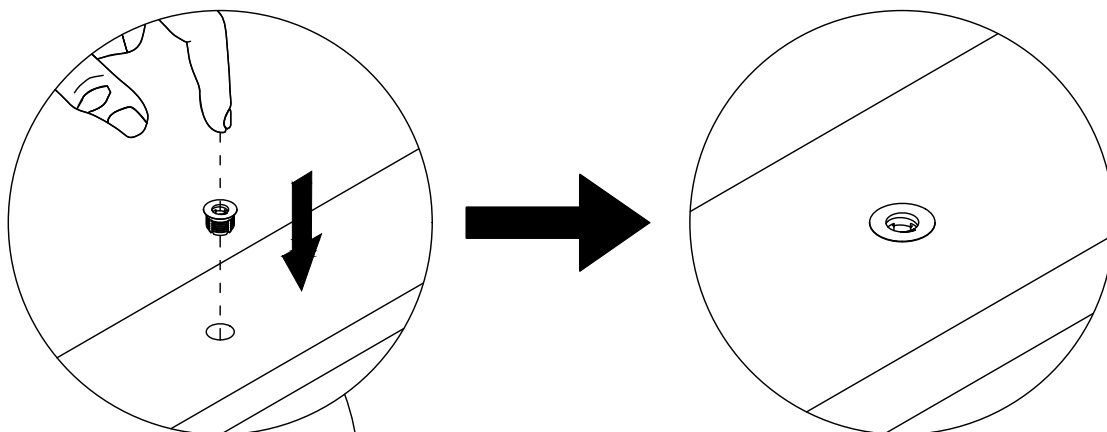




1

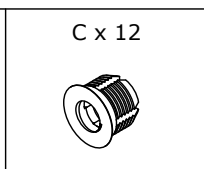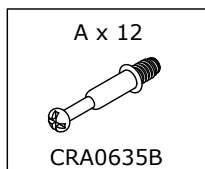   

     
First, insert plug (C) to panels 1 and 2, then screw the self-tapping screw (A) into.

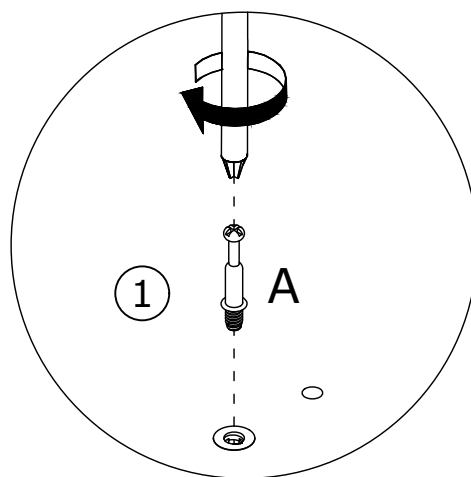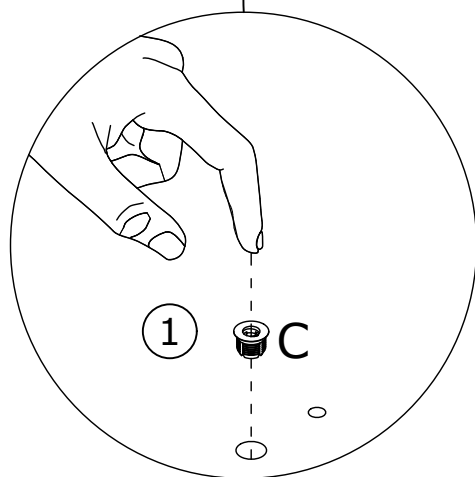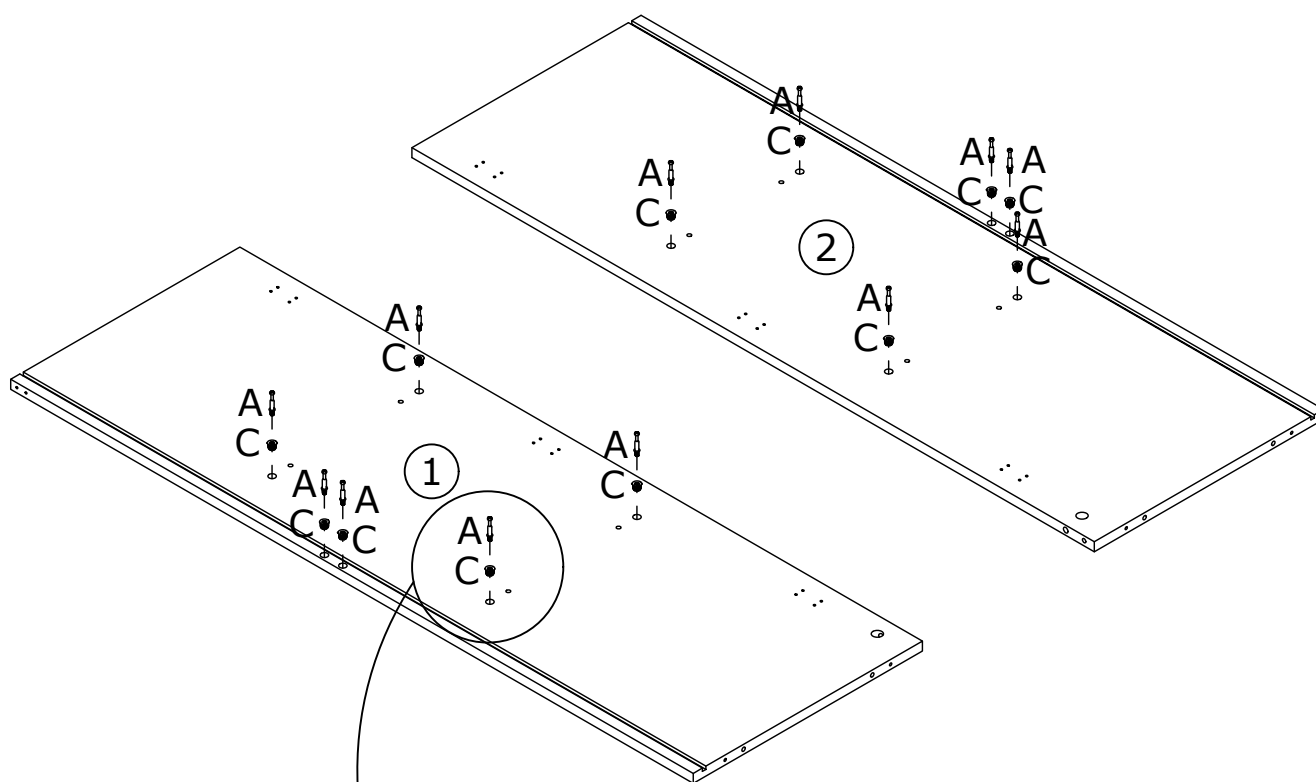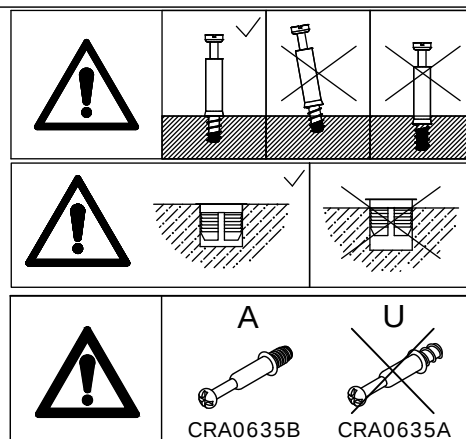





2

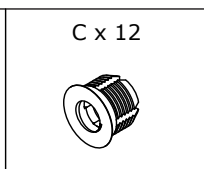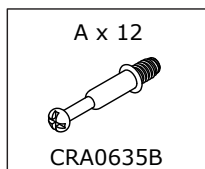   

 
First, insert plug (C) to **both sides of** panel 3, then screw the self-tapping screw (A) into.

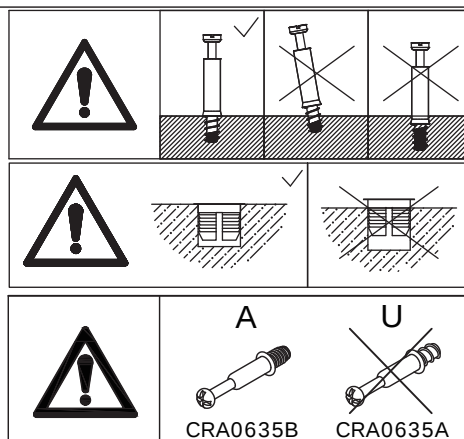


**Flip to back**

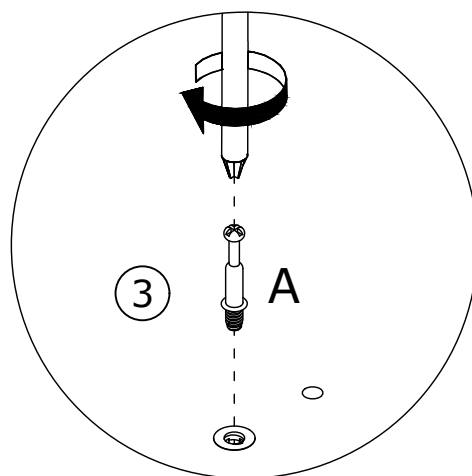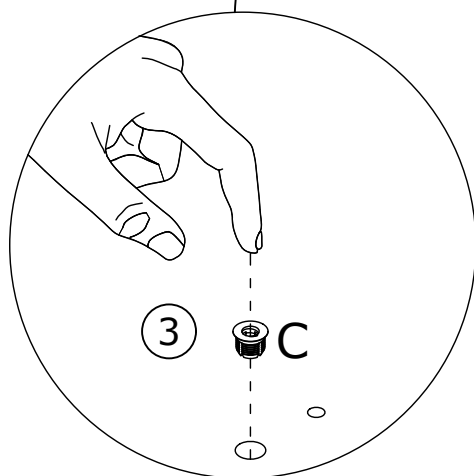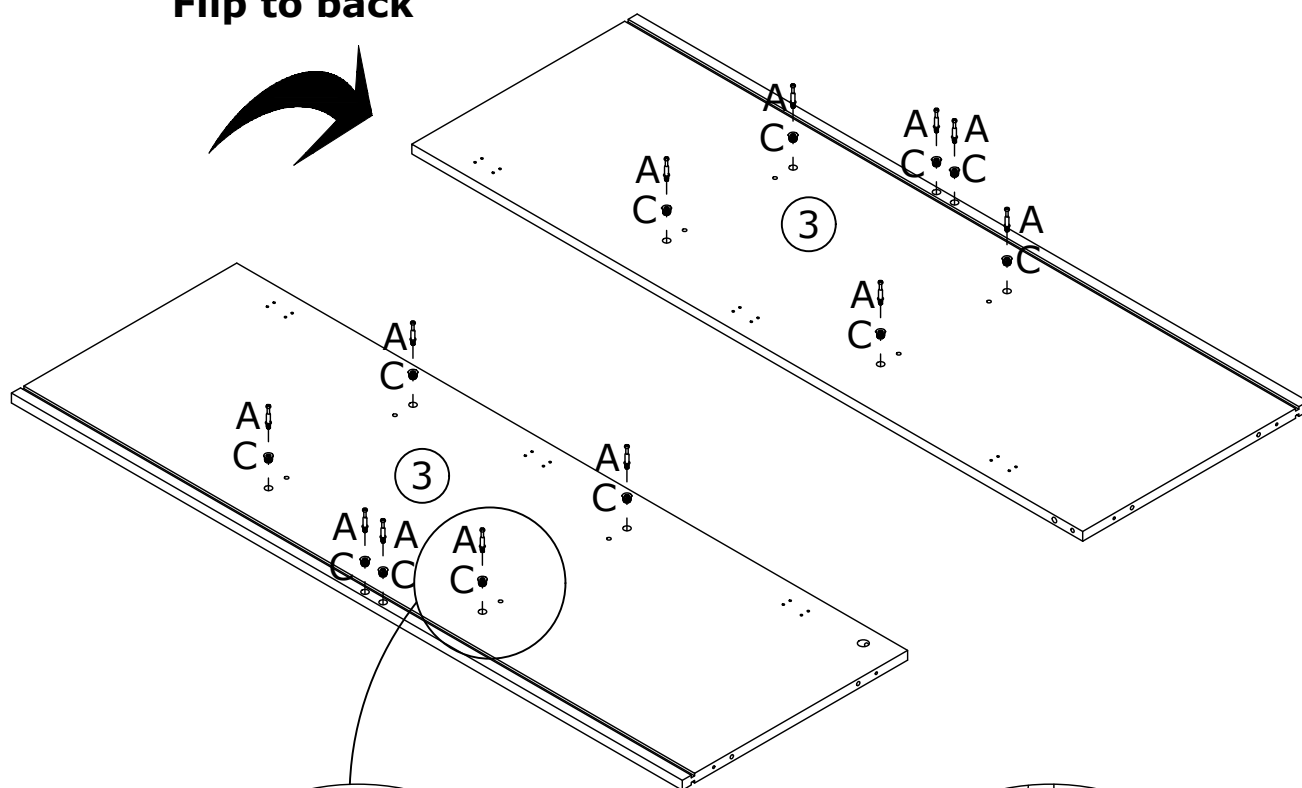    



3

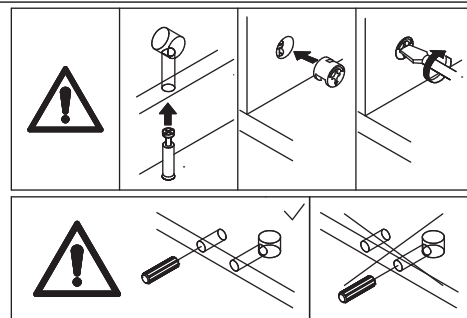 


 
Connect panel 6 to panel 1 using wooden dowel (D), then tighten by turning eccentric wheel (B) clockwise.

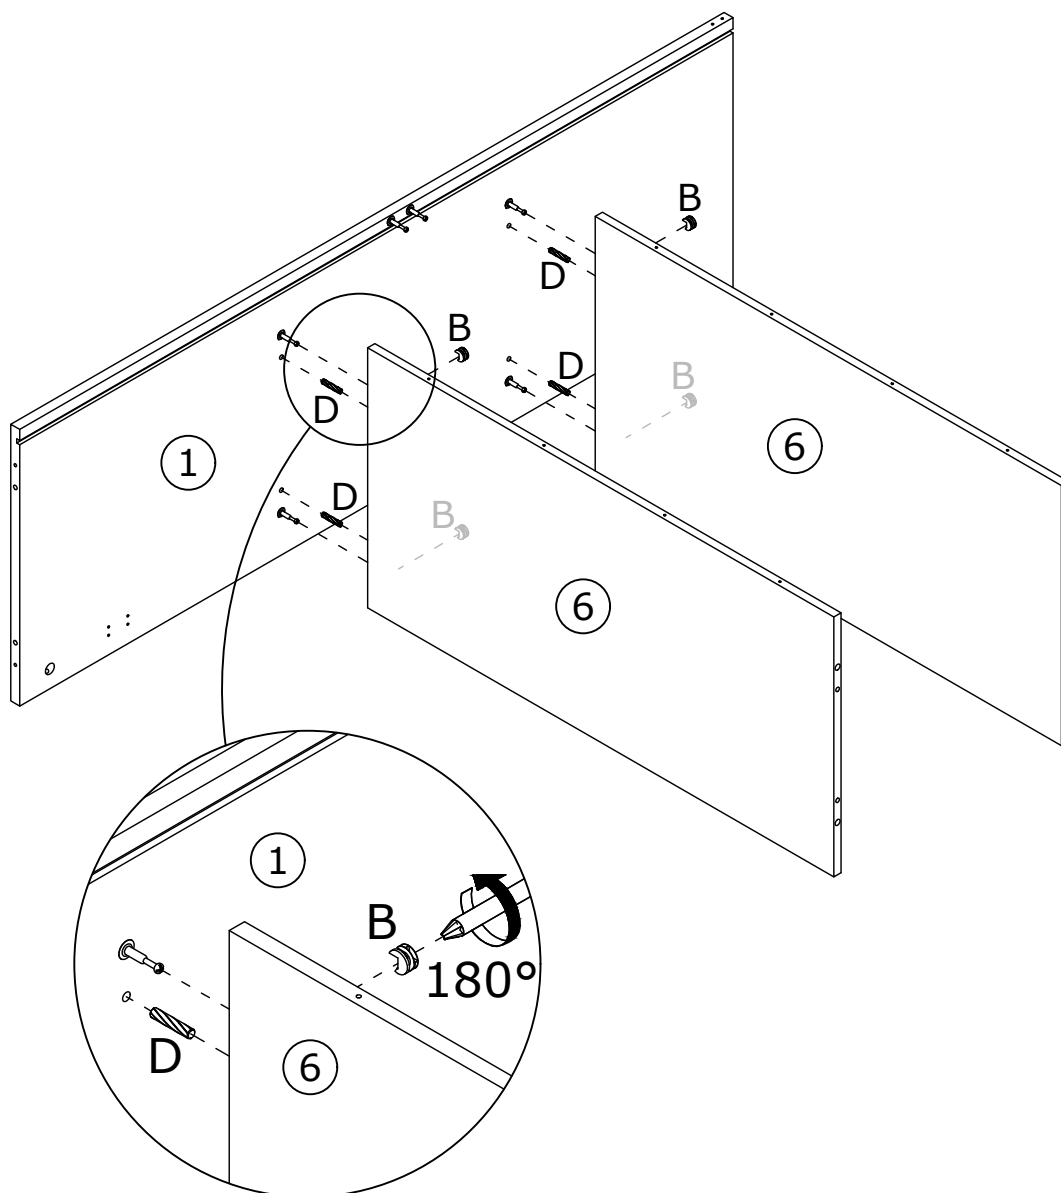



4
  
|                                                                                                                |                                                                                                                |                                                                                     |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>B x 8</p>  <p>CRB1595A</p> | <p>D x 4</p>  <p>CRF0630A</p> |  |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

 
 
Connect panel 3 to panel 6 using wooden dowel (D), and connect panel 7 to panels 1 and 3, then tighten by turning eccentric wheel (B) clockwise.

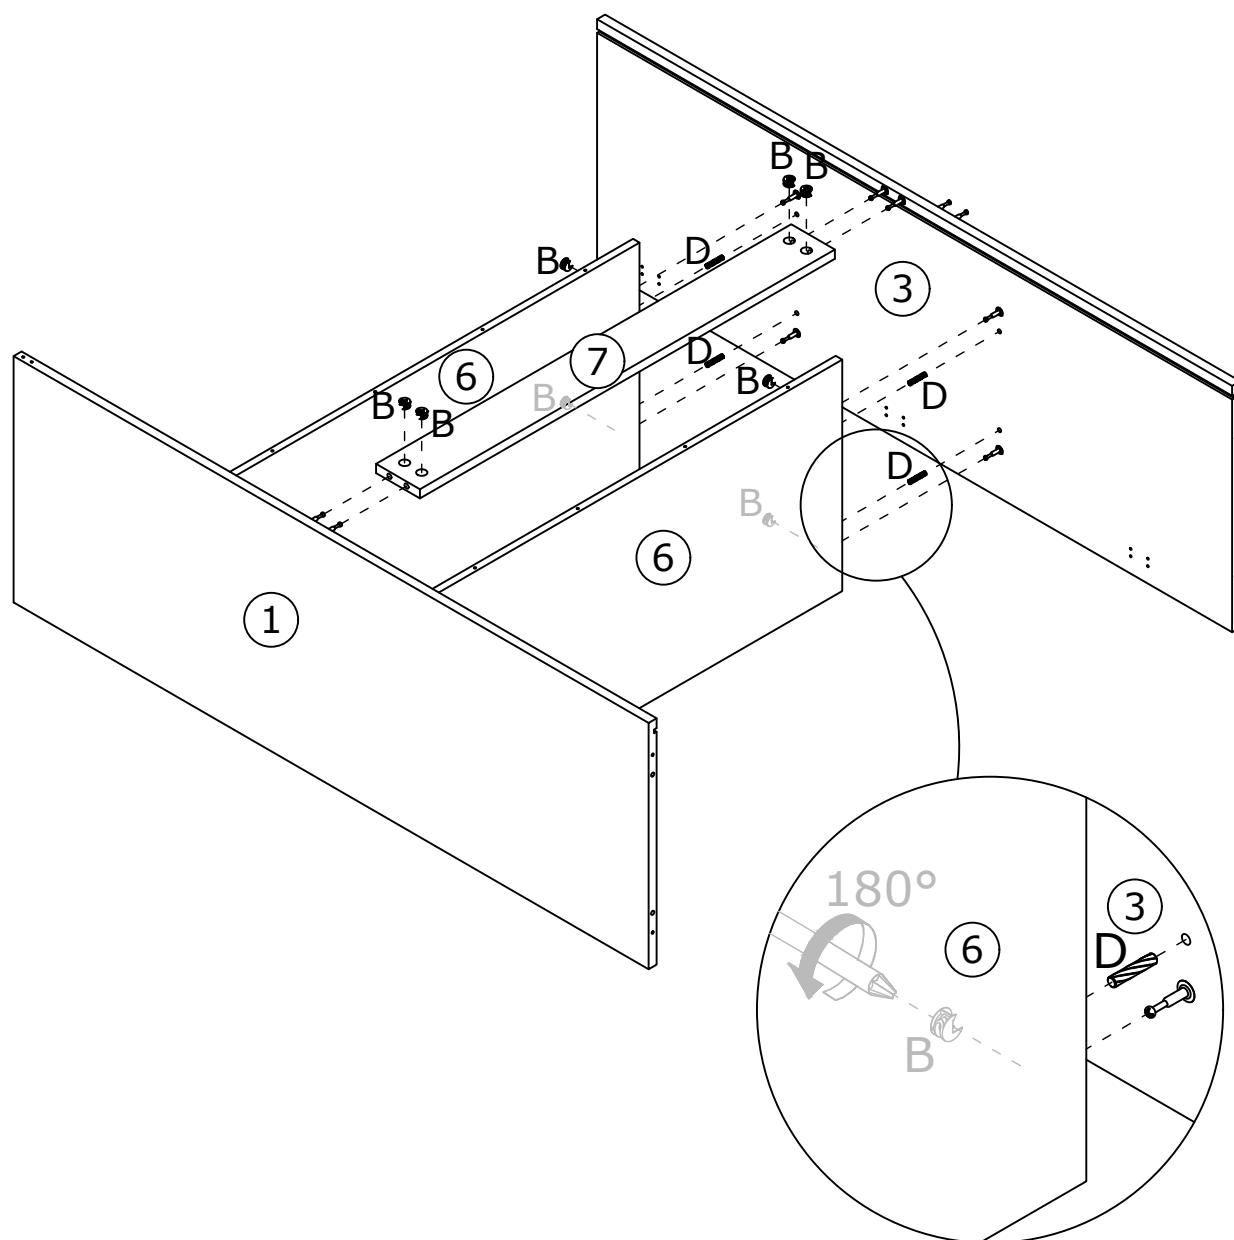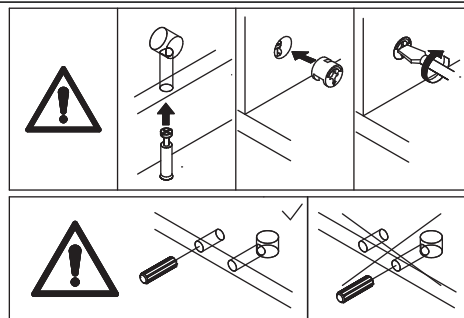

5
  
|                                                                                                                |                                                                                                                |                                                                                     |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>B x 4</p>  <p>CRB1595A</p> | <p>D x 4</p>  <p>CRF0630A</p> |  |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

  Connect panel 6 to panel 3 using wooden dowel (D), then tighten by turning eccentric wheel (B) clockwise.

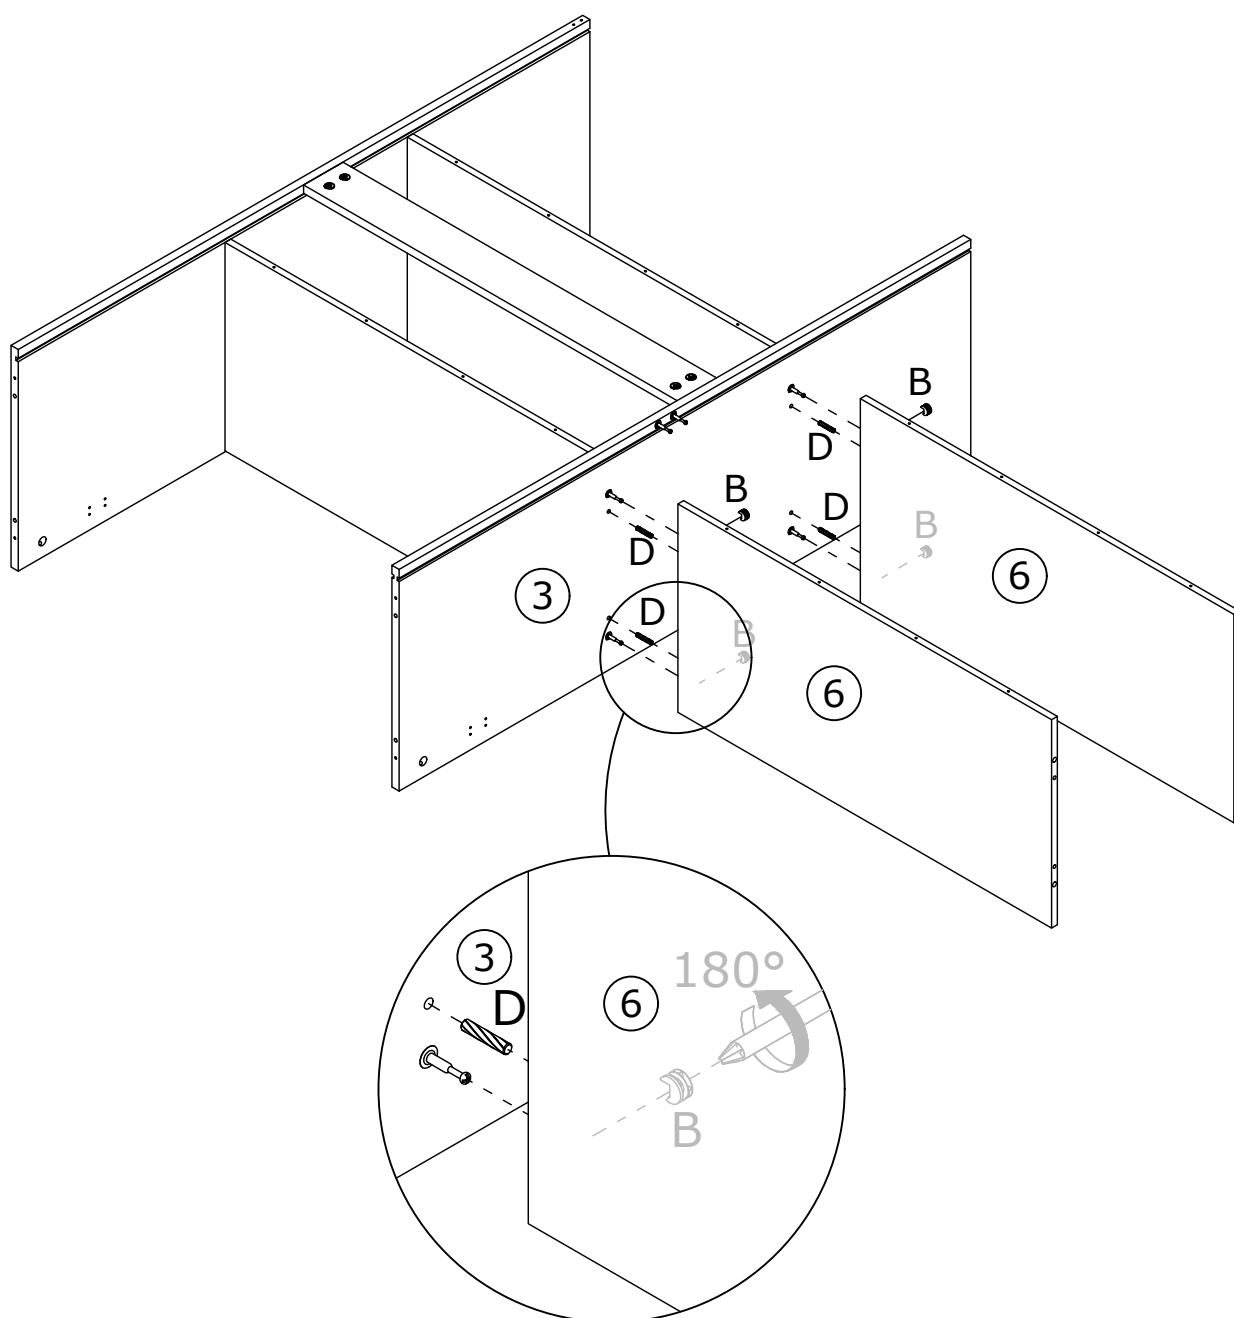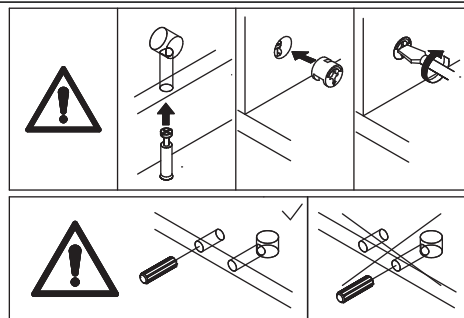


6

B x 8




CRB1595A


 
D x 4





CRF0630A

 

  
Connect panel 2 to panel 6 using wooden dowel (D), and connect panel 7 to panels 2 and 3, then tighten by turning eccentric wheel (B) clockwise.

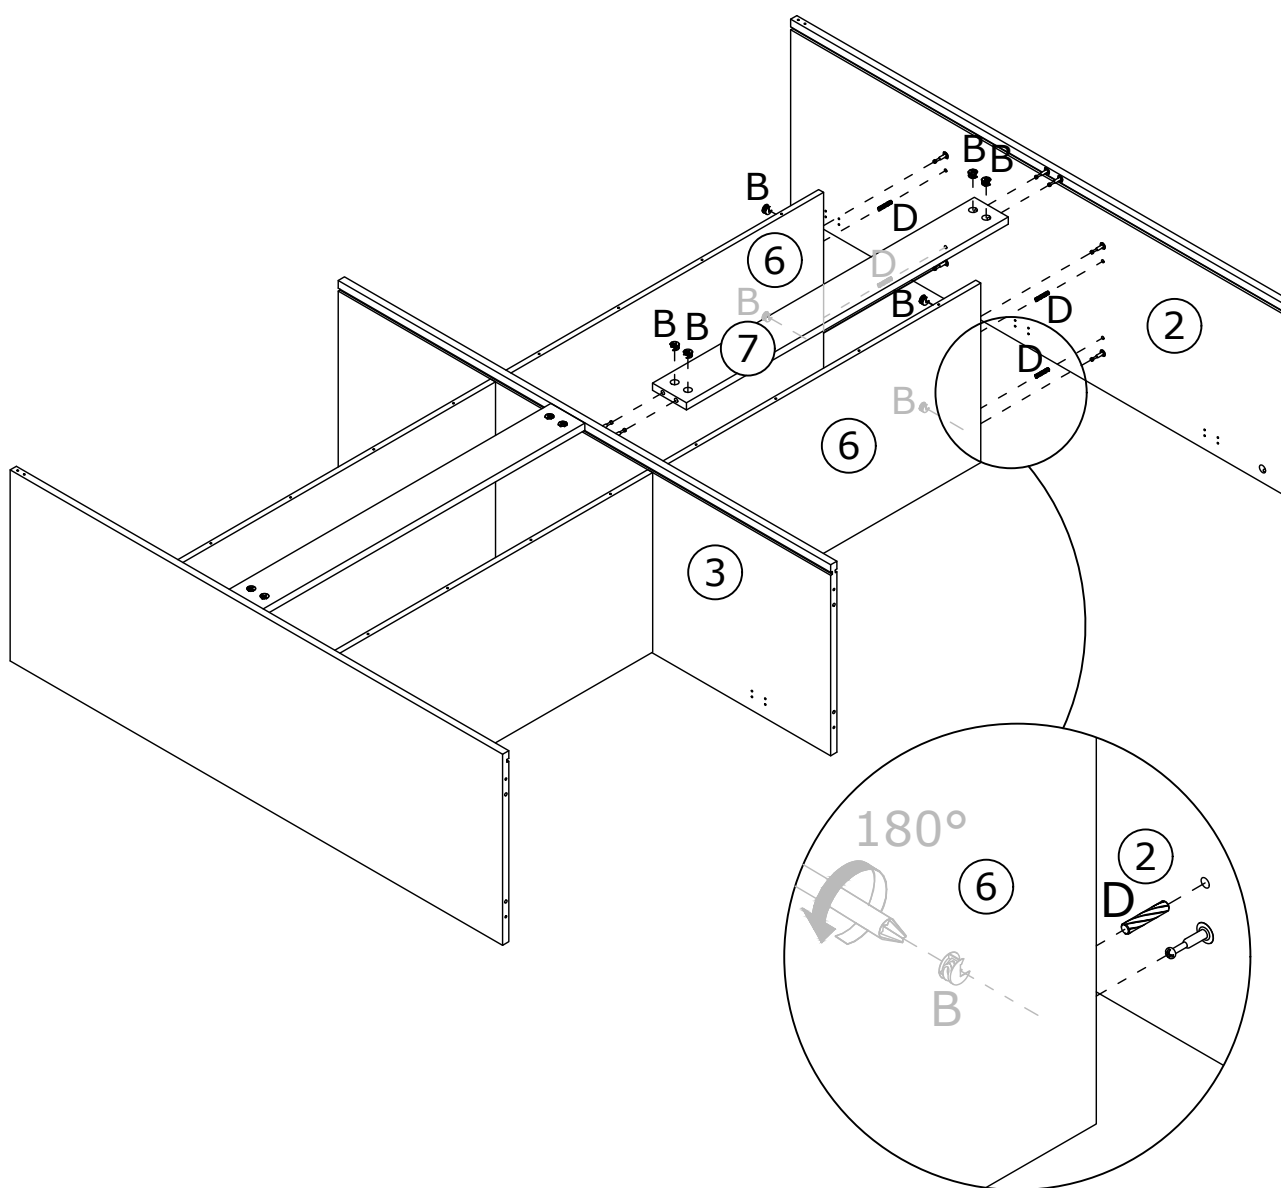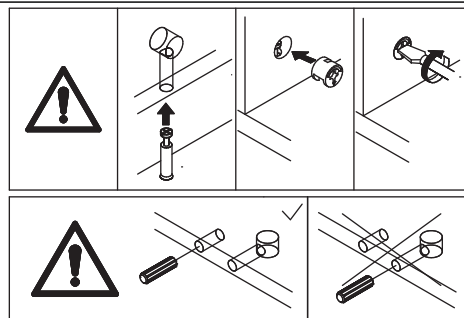



7

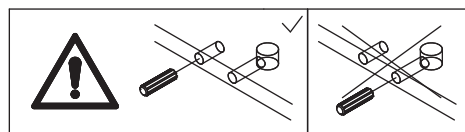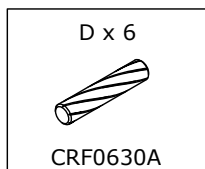  

 
Insert wooden dowel (D) to panels 1, 2, and 3.

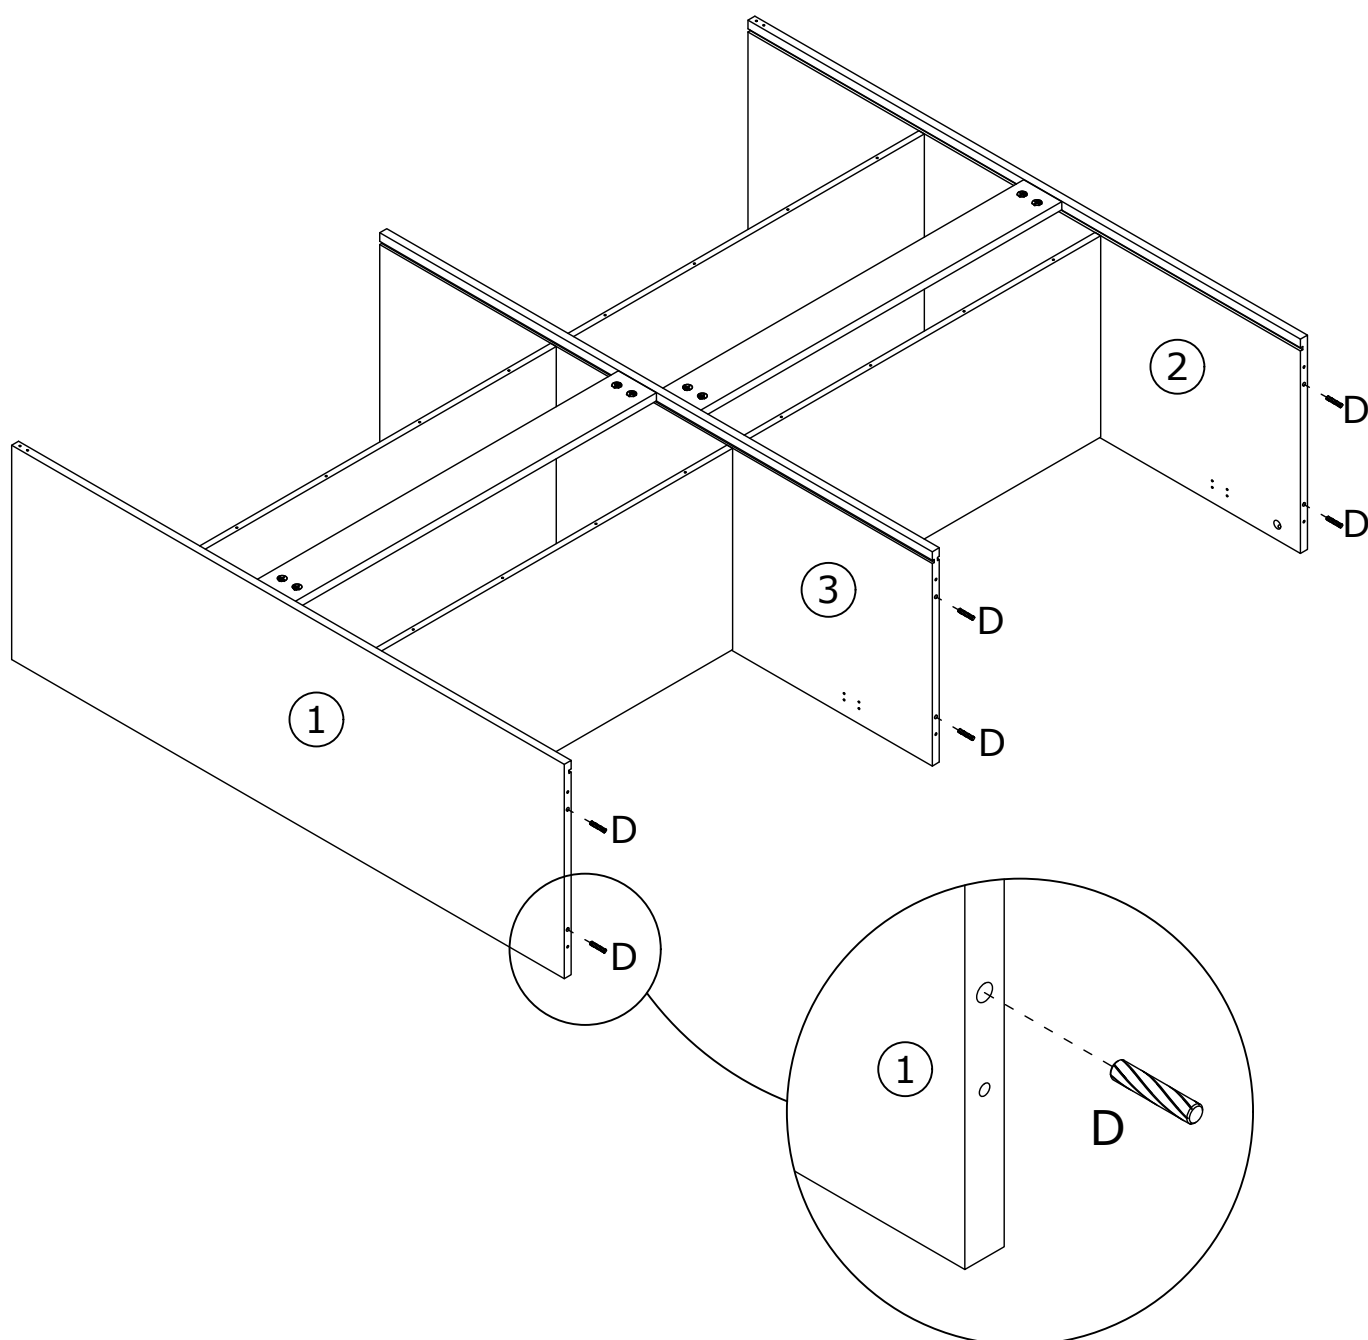

8

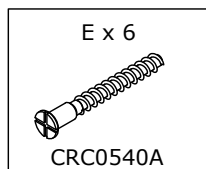  


 Connect panel 5 to panels 1, 2, and 3, and secure them with screw (E).

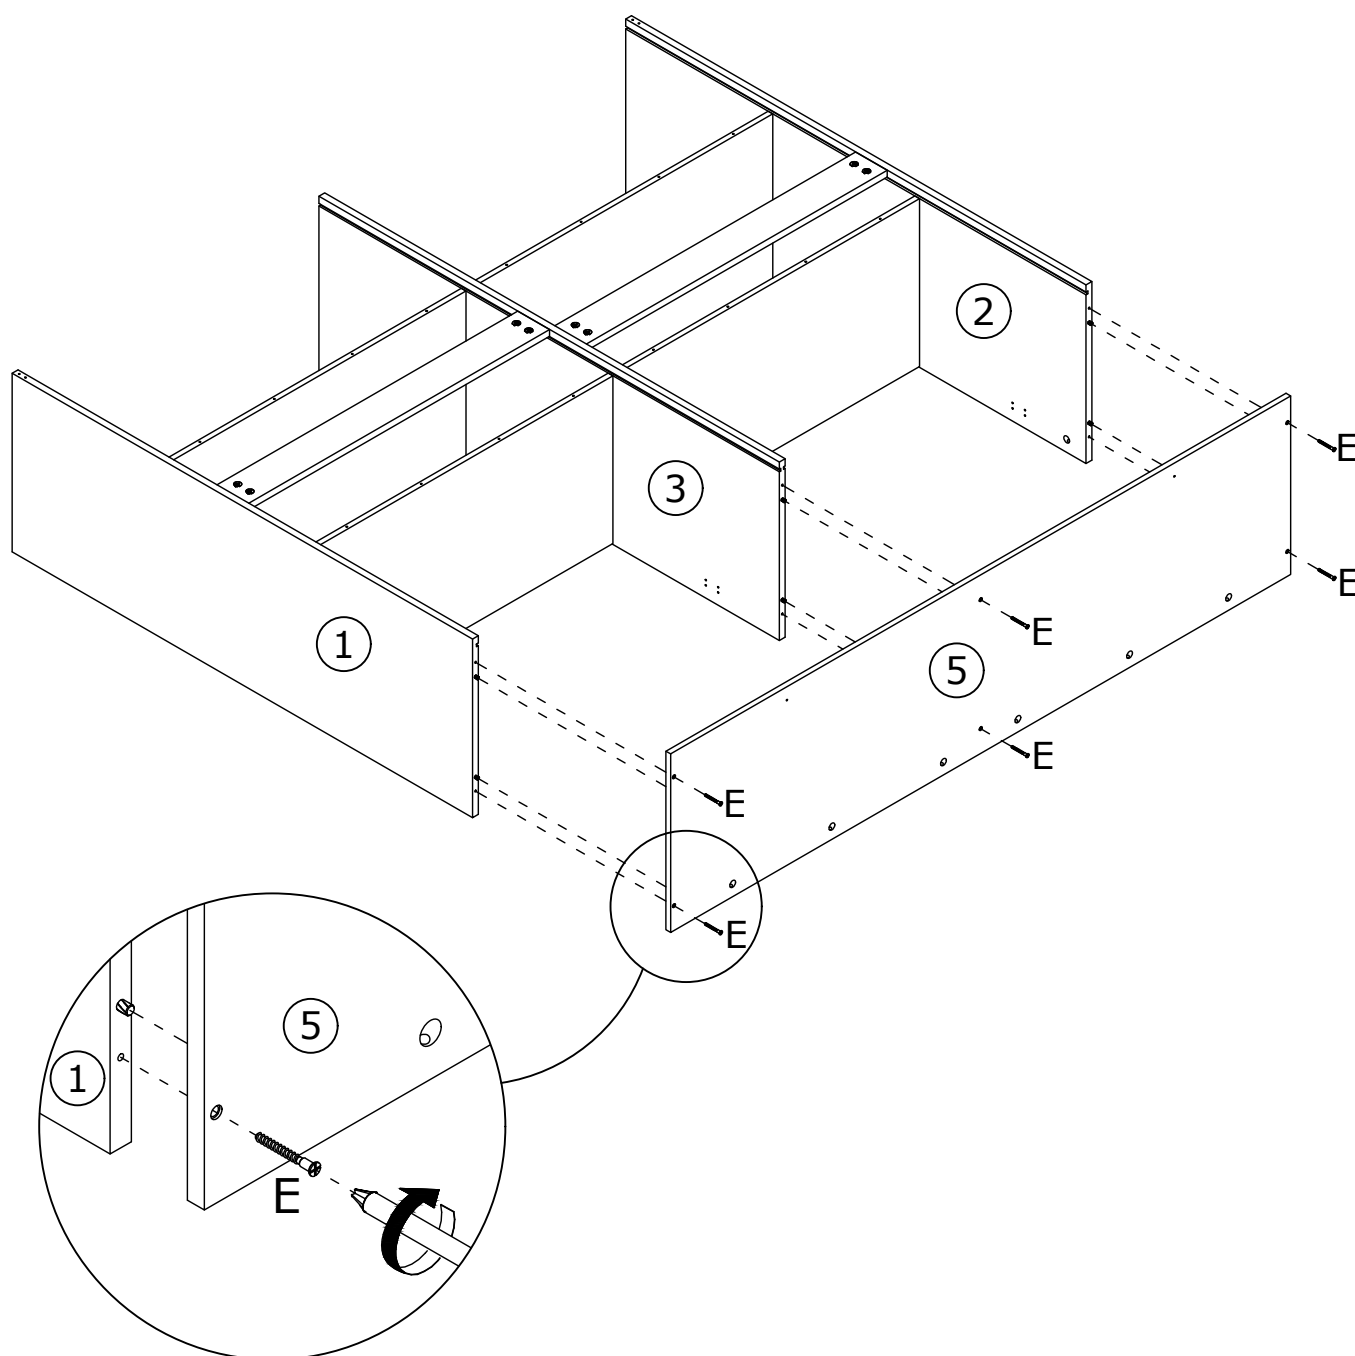

9


 
Turn the cabinet upside down and insert panel 4 and strip (S) along the available slots.

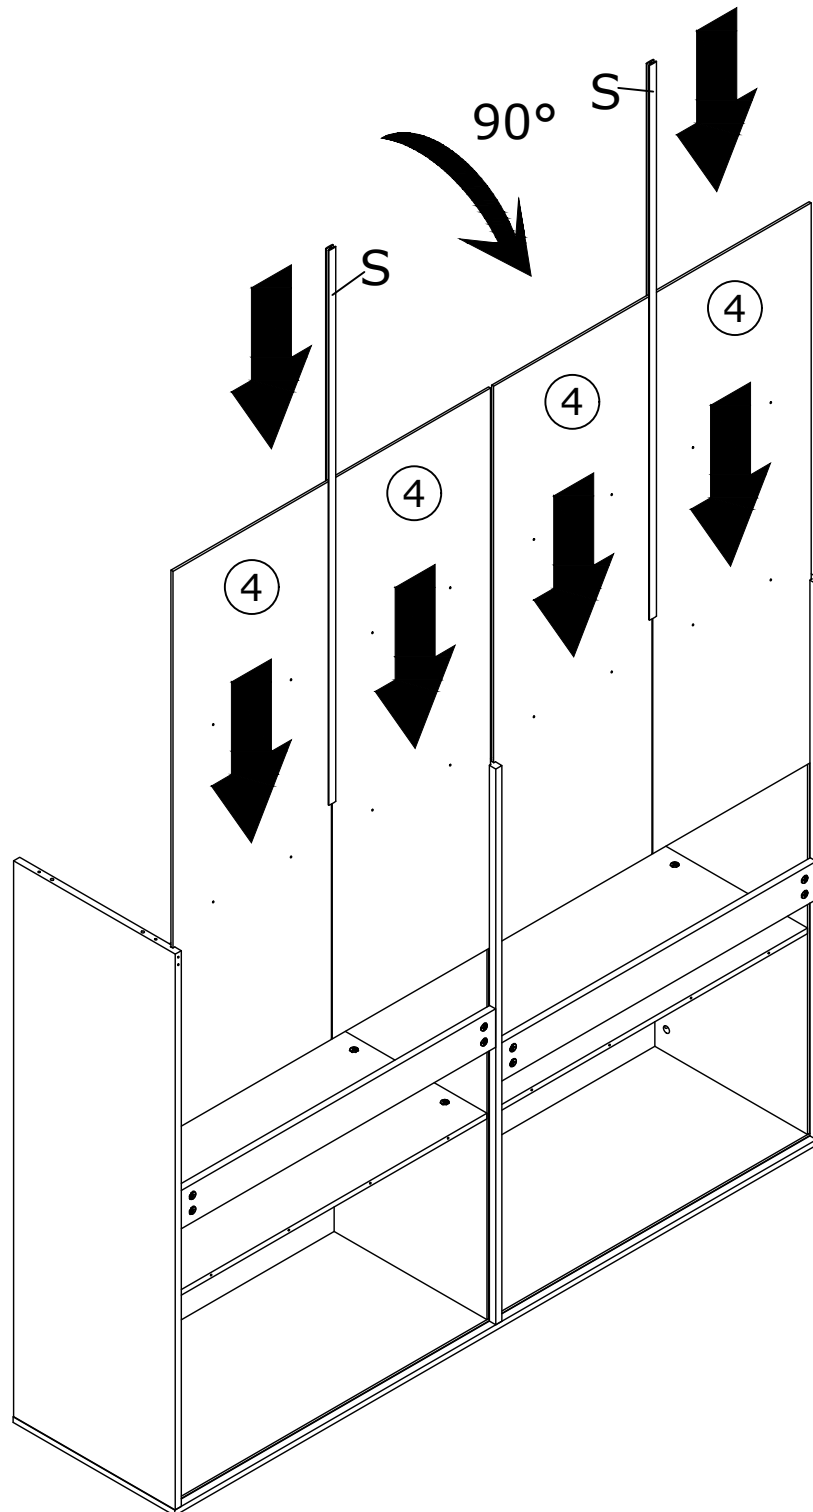



# 10



  
First, insert plug (C) to panel 9, then screw the self-tapping screw (A) into.

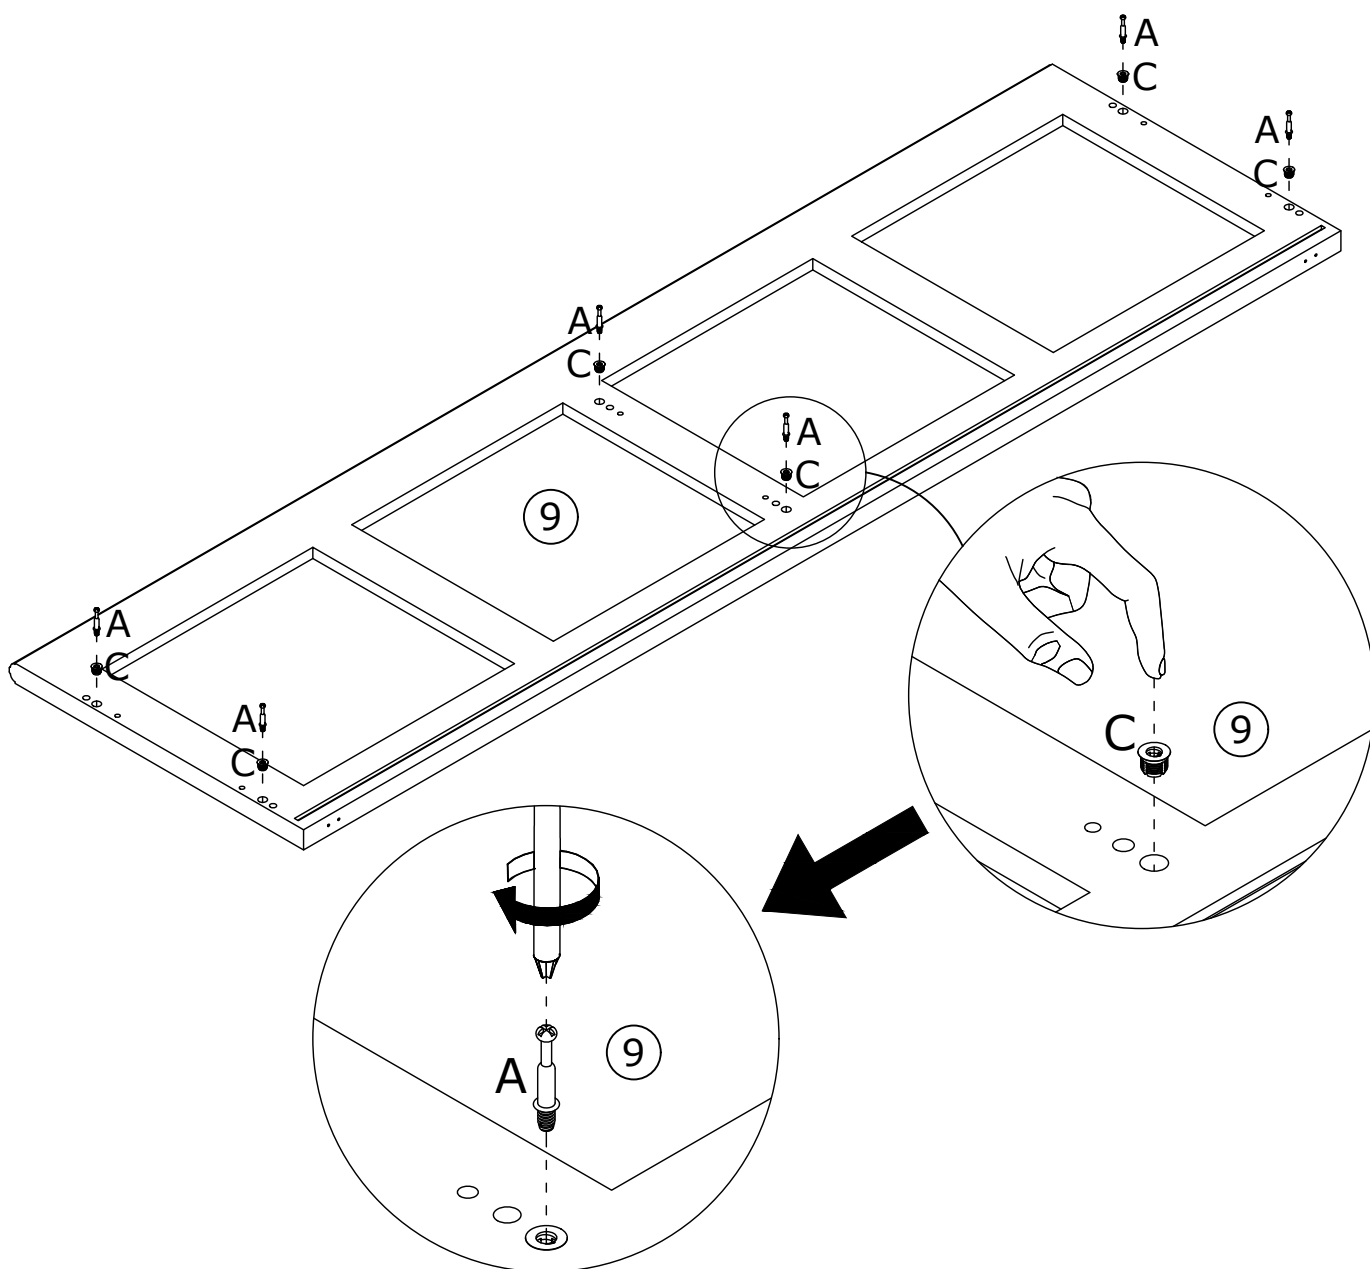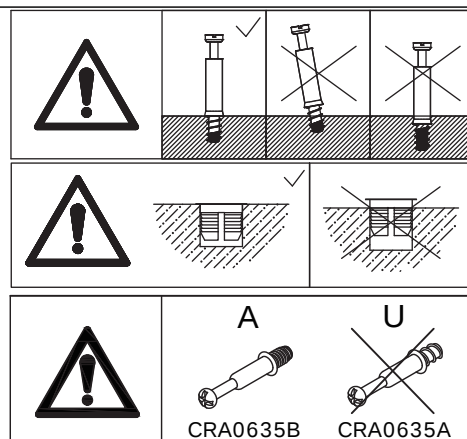



# 11

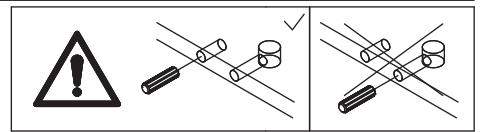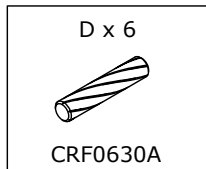  

 
Insert wooden dowel (D) to panels 1, 2, and 3.

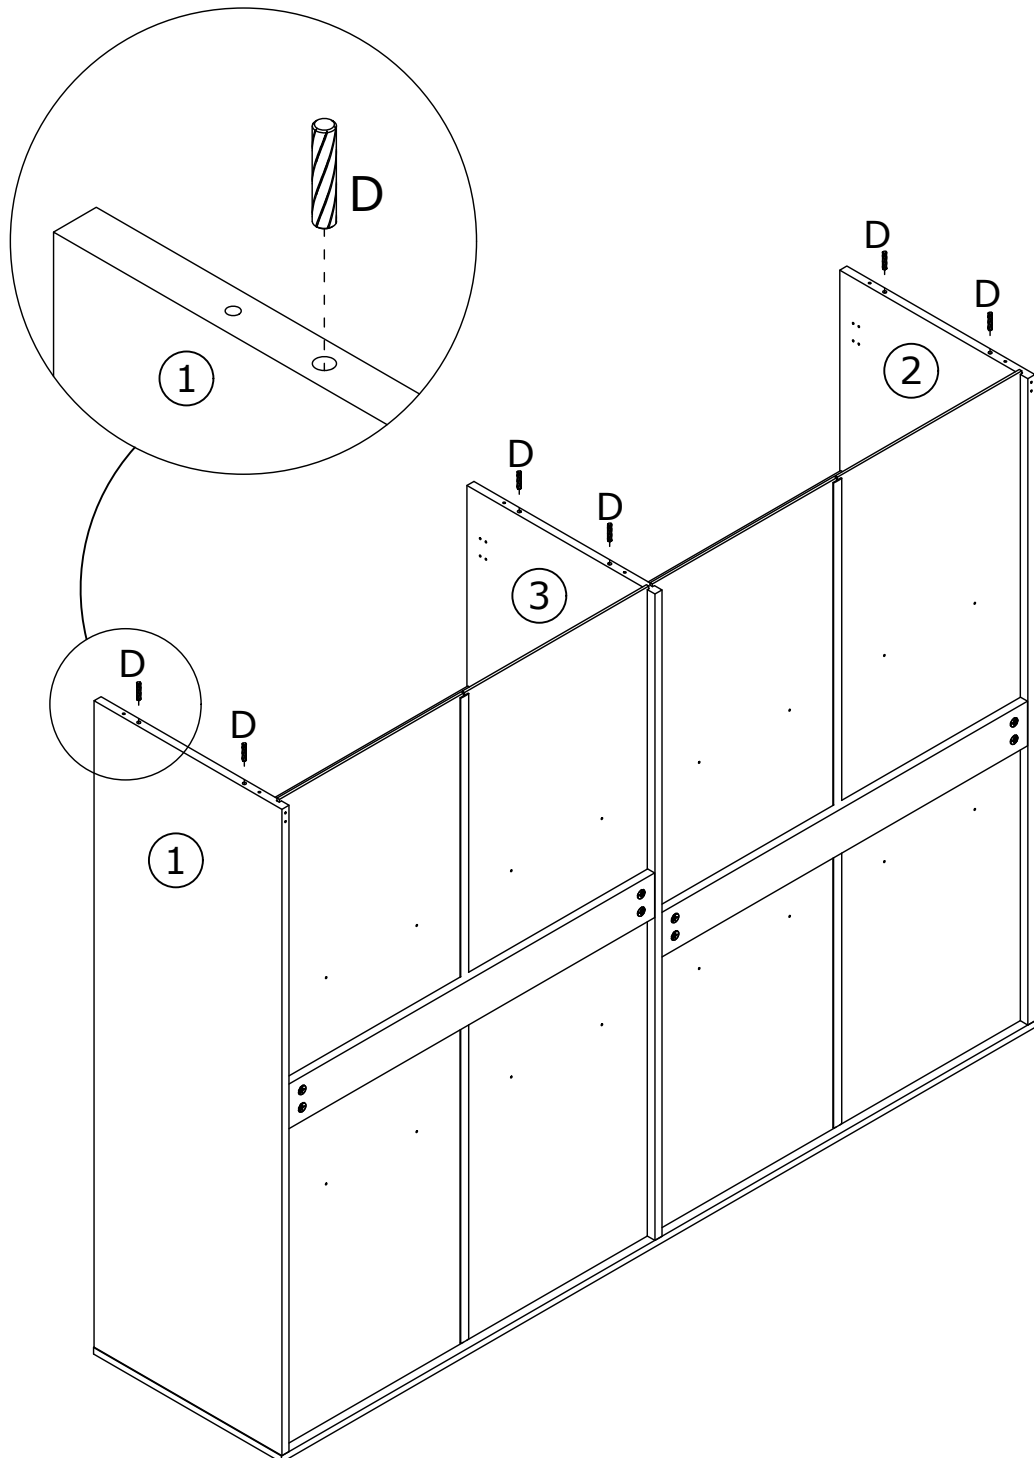

# 12

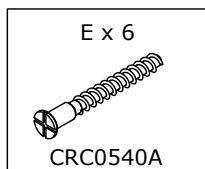  


 Connect panel 9 to panels 1, 2, and 3, and secure them with screw (E).

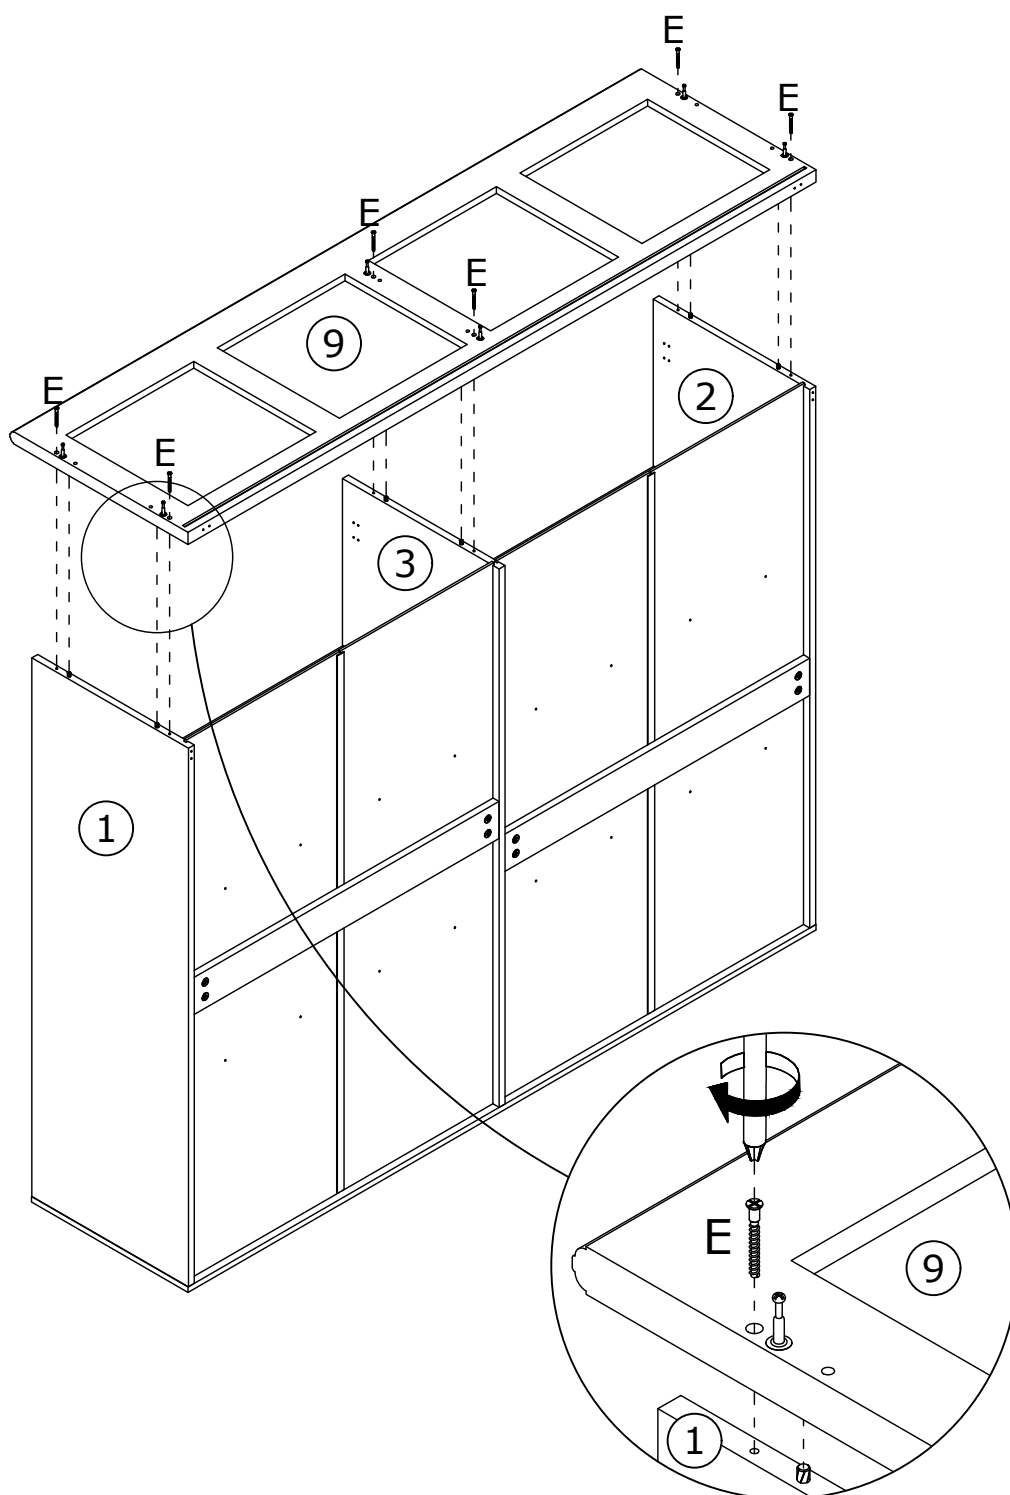


# 13

 
R x 16






CRD3520A

 

 
Secure panel 4 to panel 6 using screw (R).

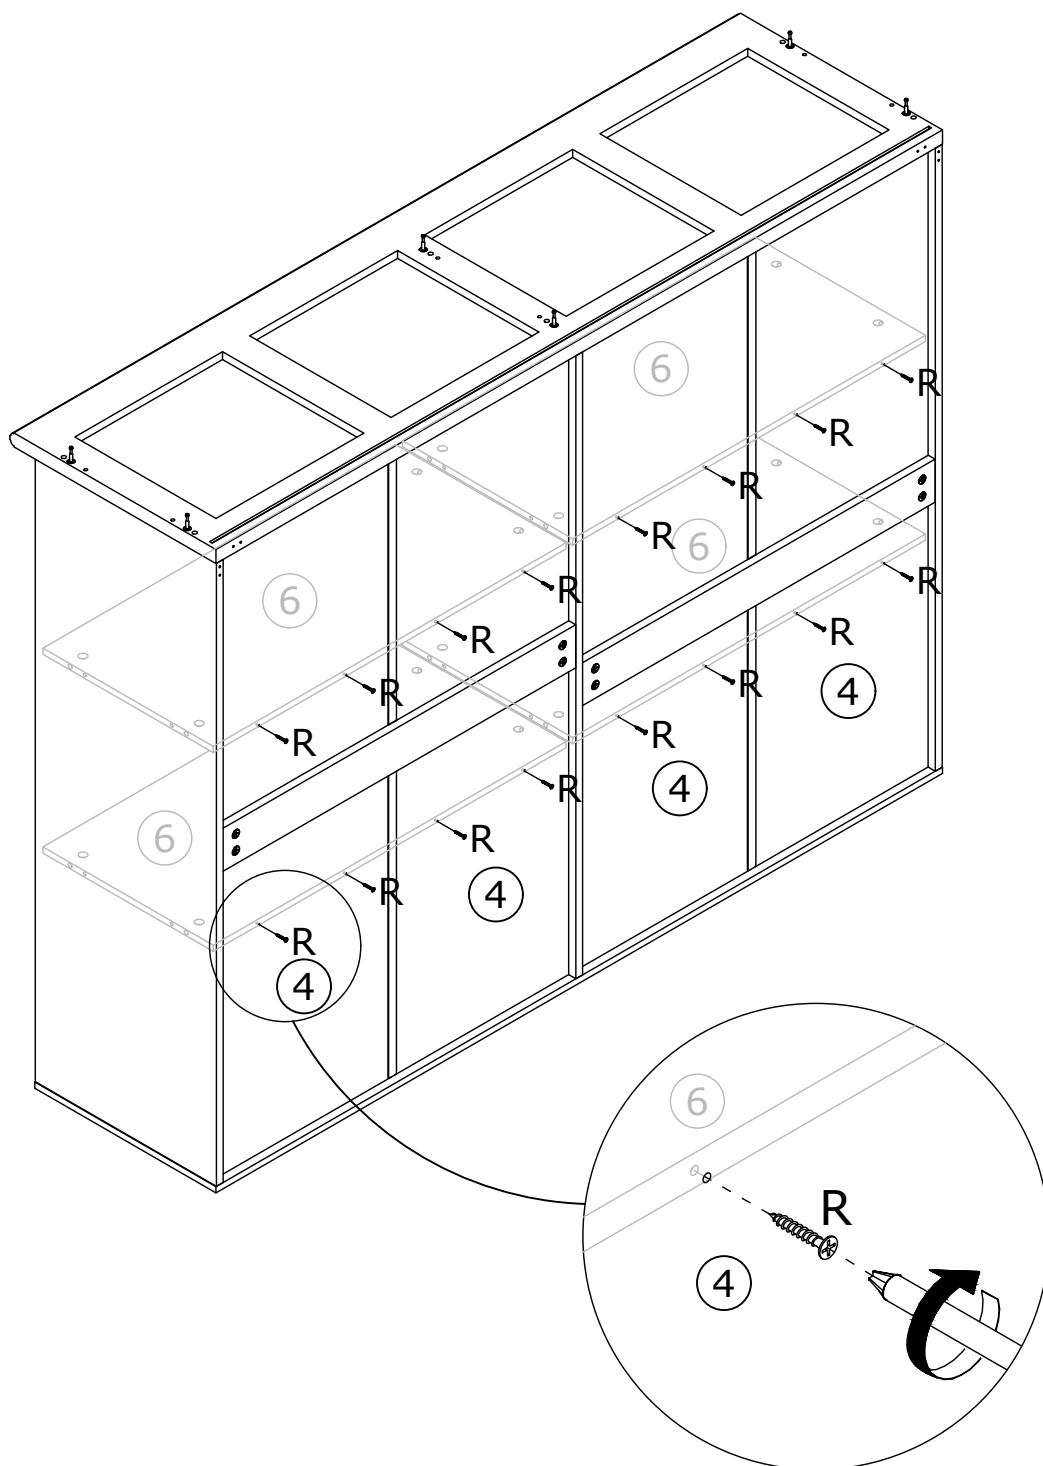



14

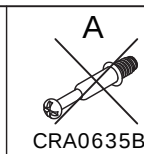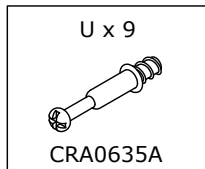   

 
Screw the self-tapping screw (U) into panel 8.

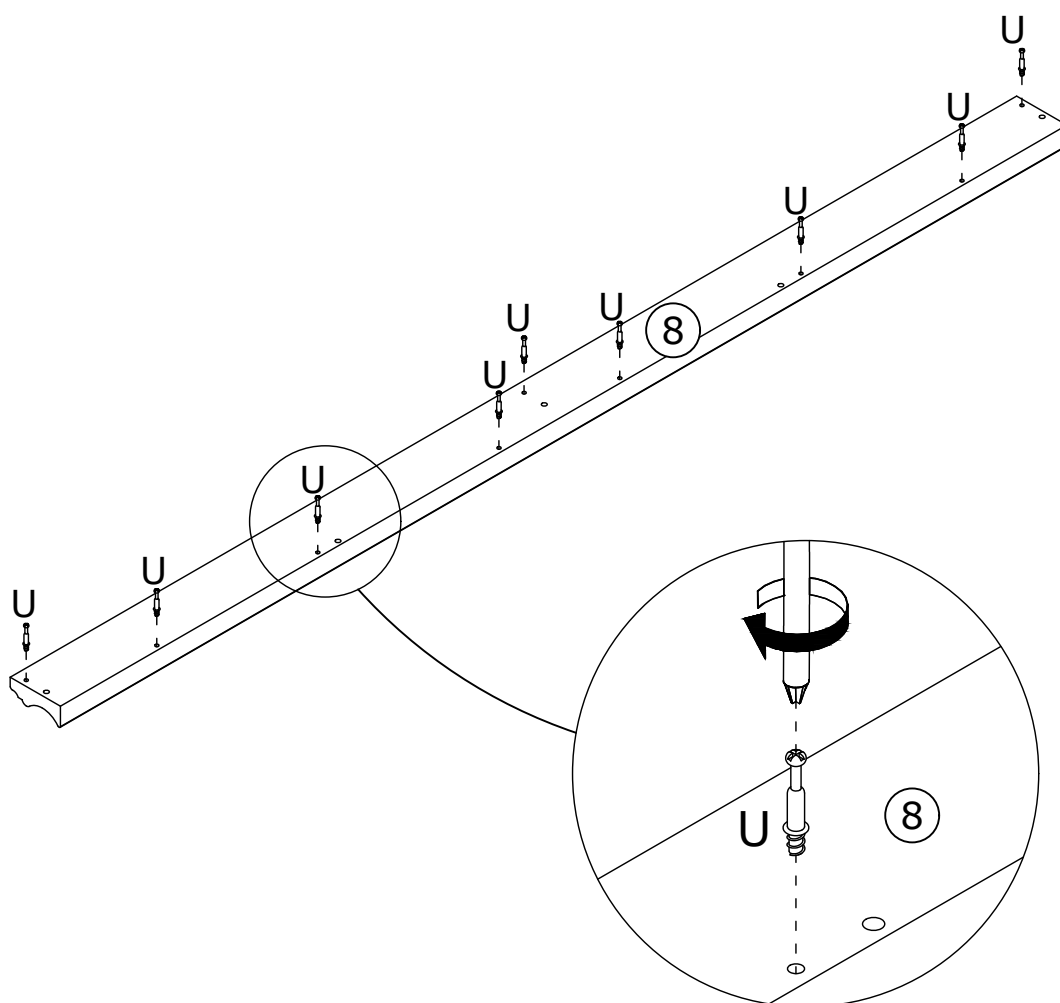

# 15

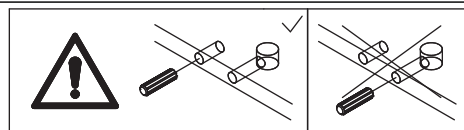 
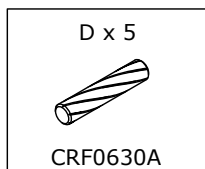 


 Turn the cabinet upside down. Insert wooden dowel (D) to panels 1, 2, 3, and 5.

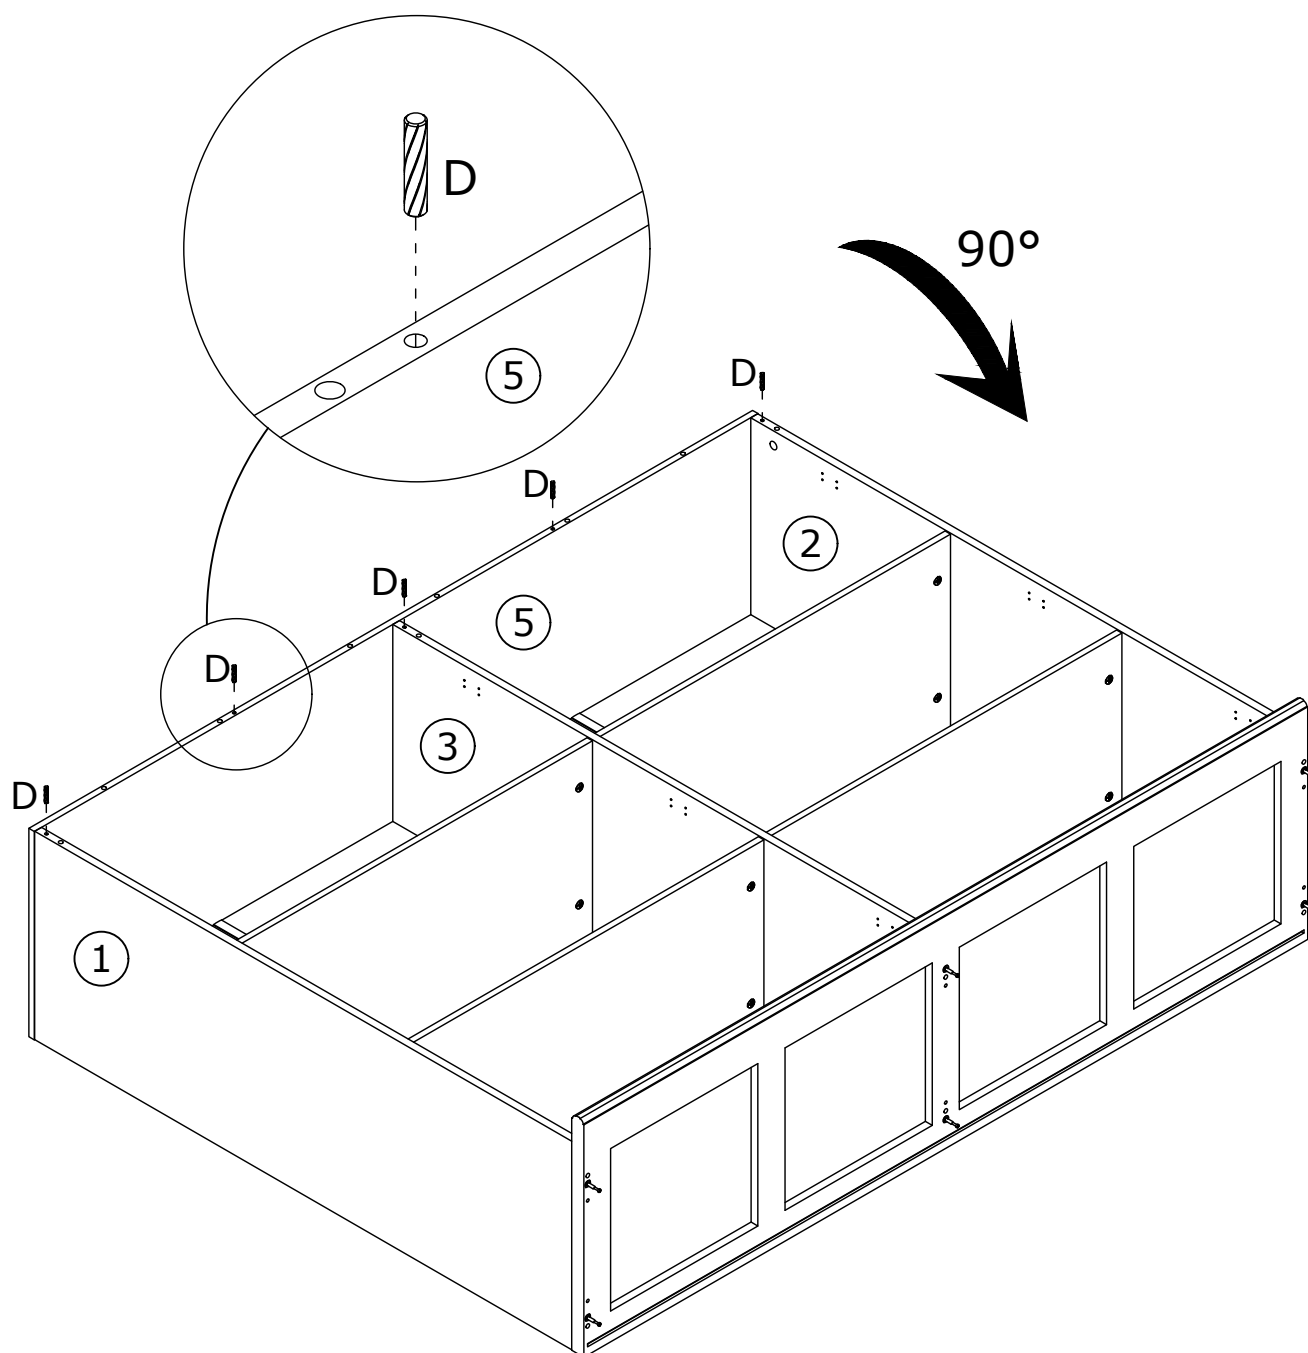


# 16

  B x 9  
CRB1595A

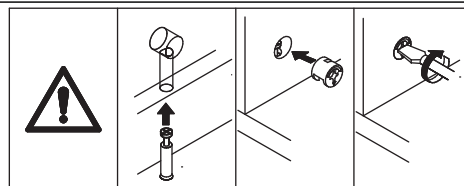

 
Connect panel 8 to panels 1, 2, 3, and 5, then tighten by turning eccentric wheel (B) clockwise.

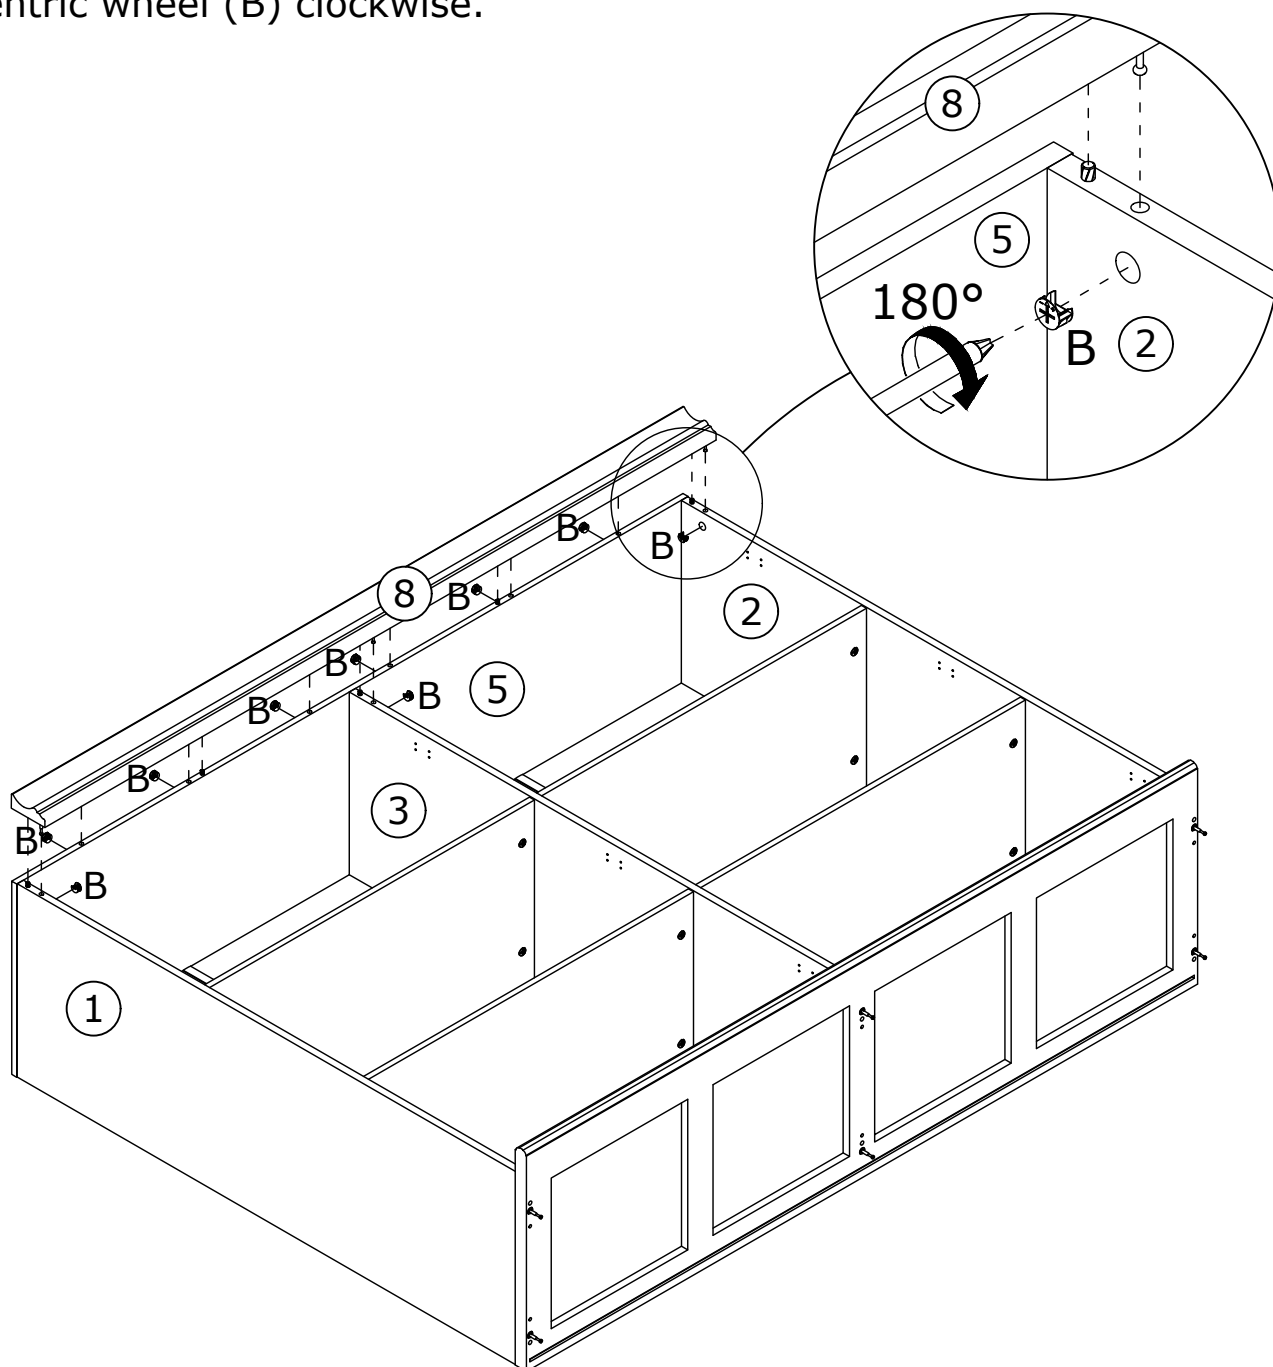

# 17

J x 3  
CL  
CR  
WX1014A

 
K x 12  
CRD3512A




Secure slide rail (J-CL) and (J-CR) to panels 10 and 11 using screw (K).



 H K Q  
CRD3514A CRD3512A CRD0314A

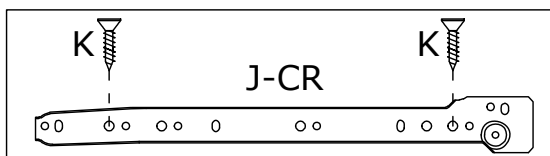


 - Please note that the hole positions of the screws on these two slide rails are different.

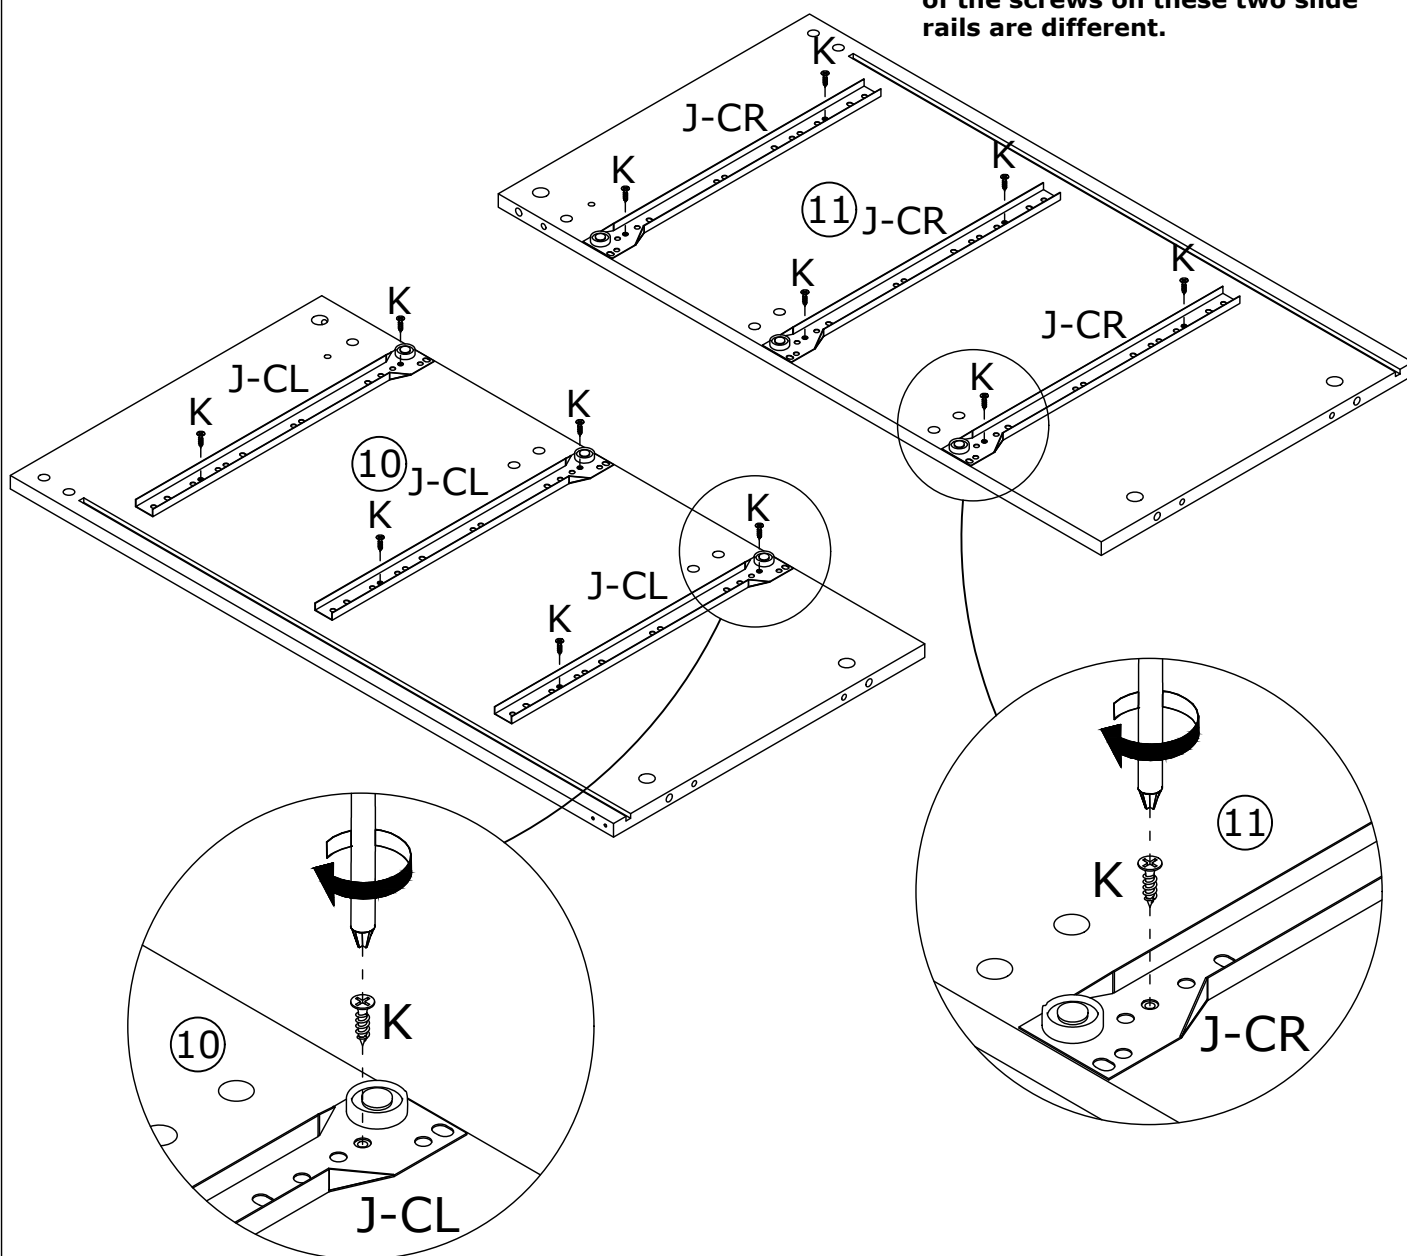


# 18

 A x 14








CRA0635B

 C x 14



     First, insert plug (C) to panels 10 and 11,  
then screw the self-tapping screw (A) into.

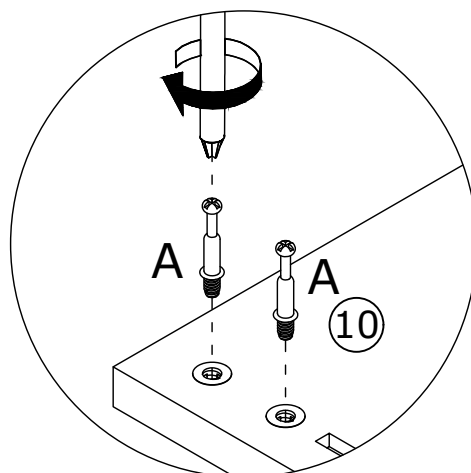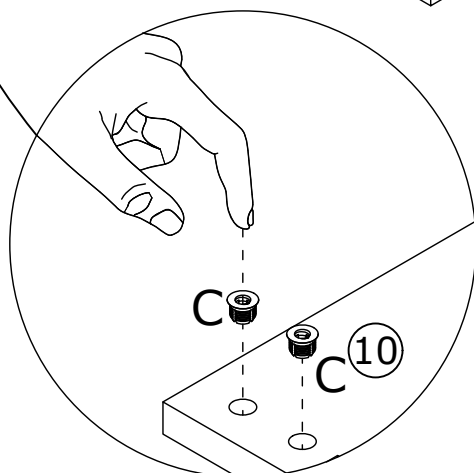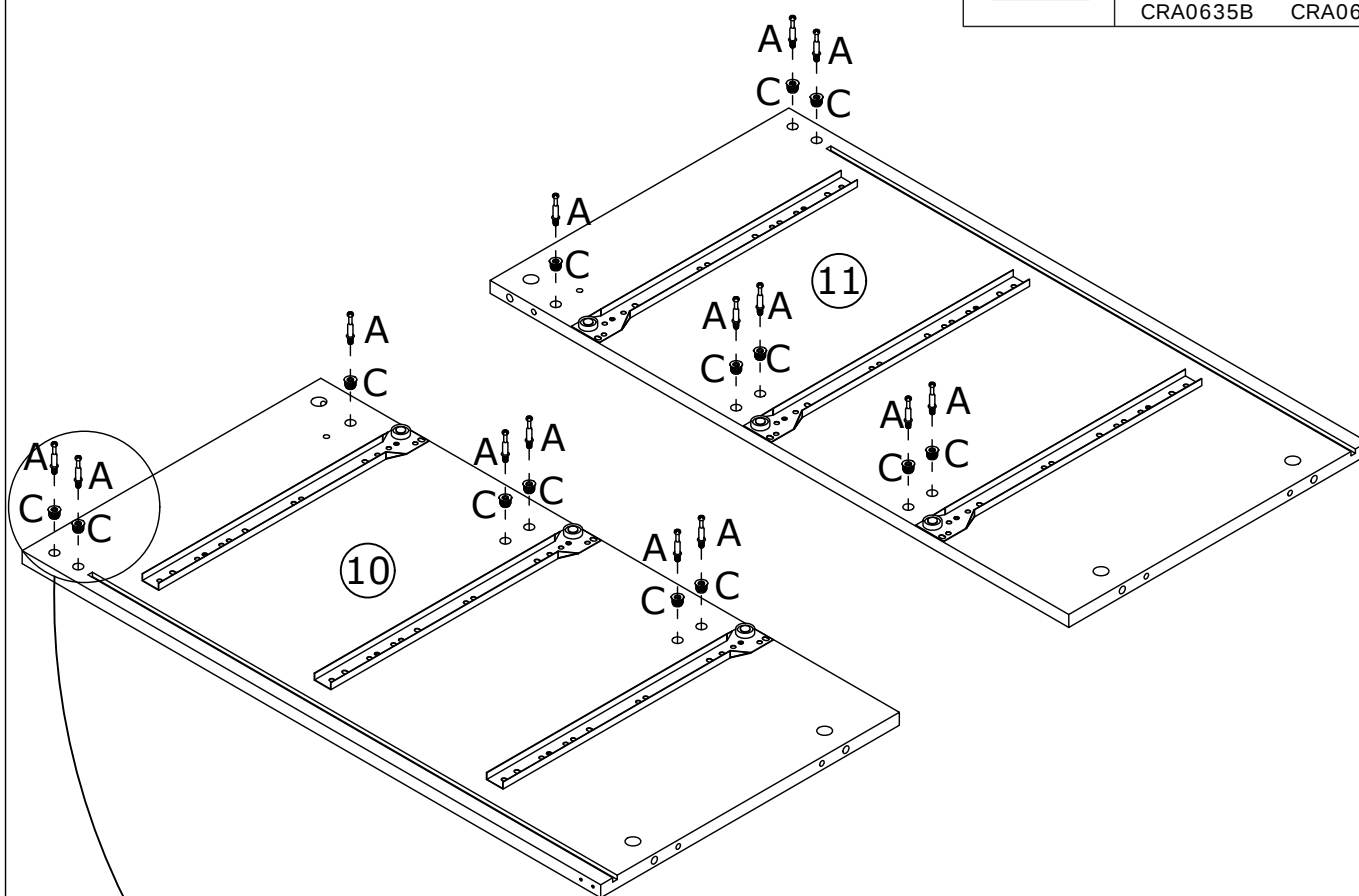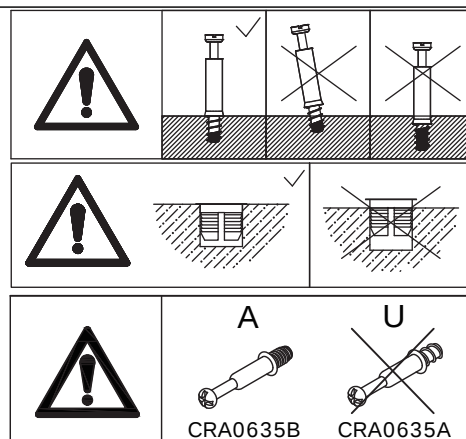


# 19

C x 5



 
J x 3

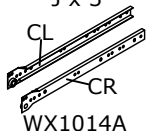


K x 12



 CRD3512A



 Insert plug (C) to **both sides of** panel 12.  
Secure slide rail (J-CL) and (J-CR) to panel 12 using screw (K).



H

K

Q

CRD3514A


CRD3512A

CRD0314A

K

J-CL

 K







K

J-CR

K



   
 
- Please note that the hole positions of the screws on these two slide rails are different.

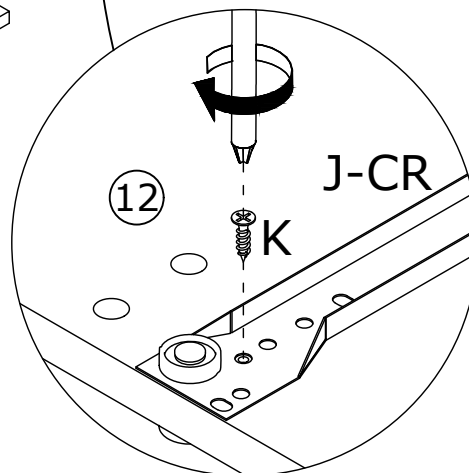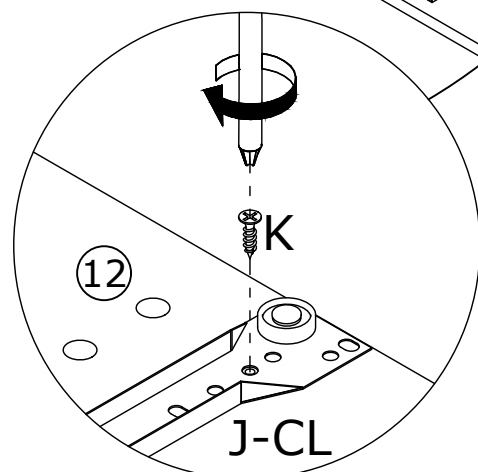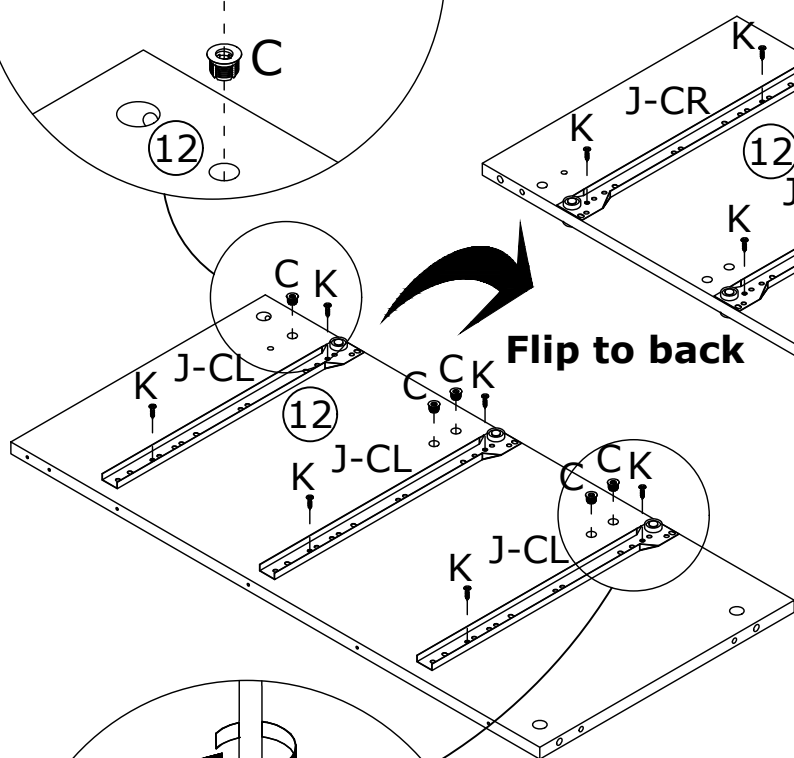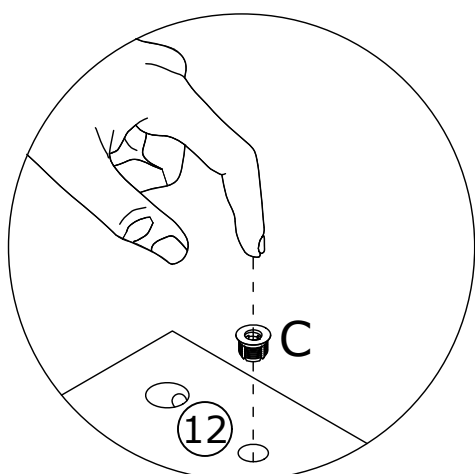


# 20




  First, insert plug (C) to panel 12, then screw the self-tapping screw (A) into.

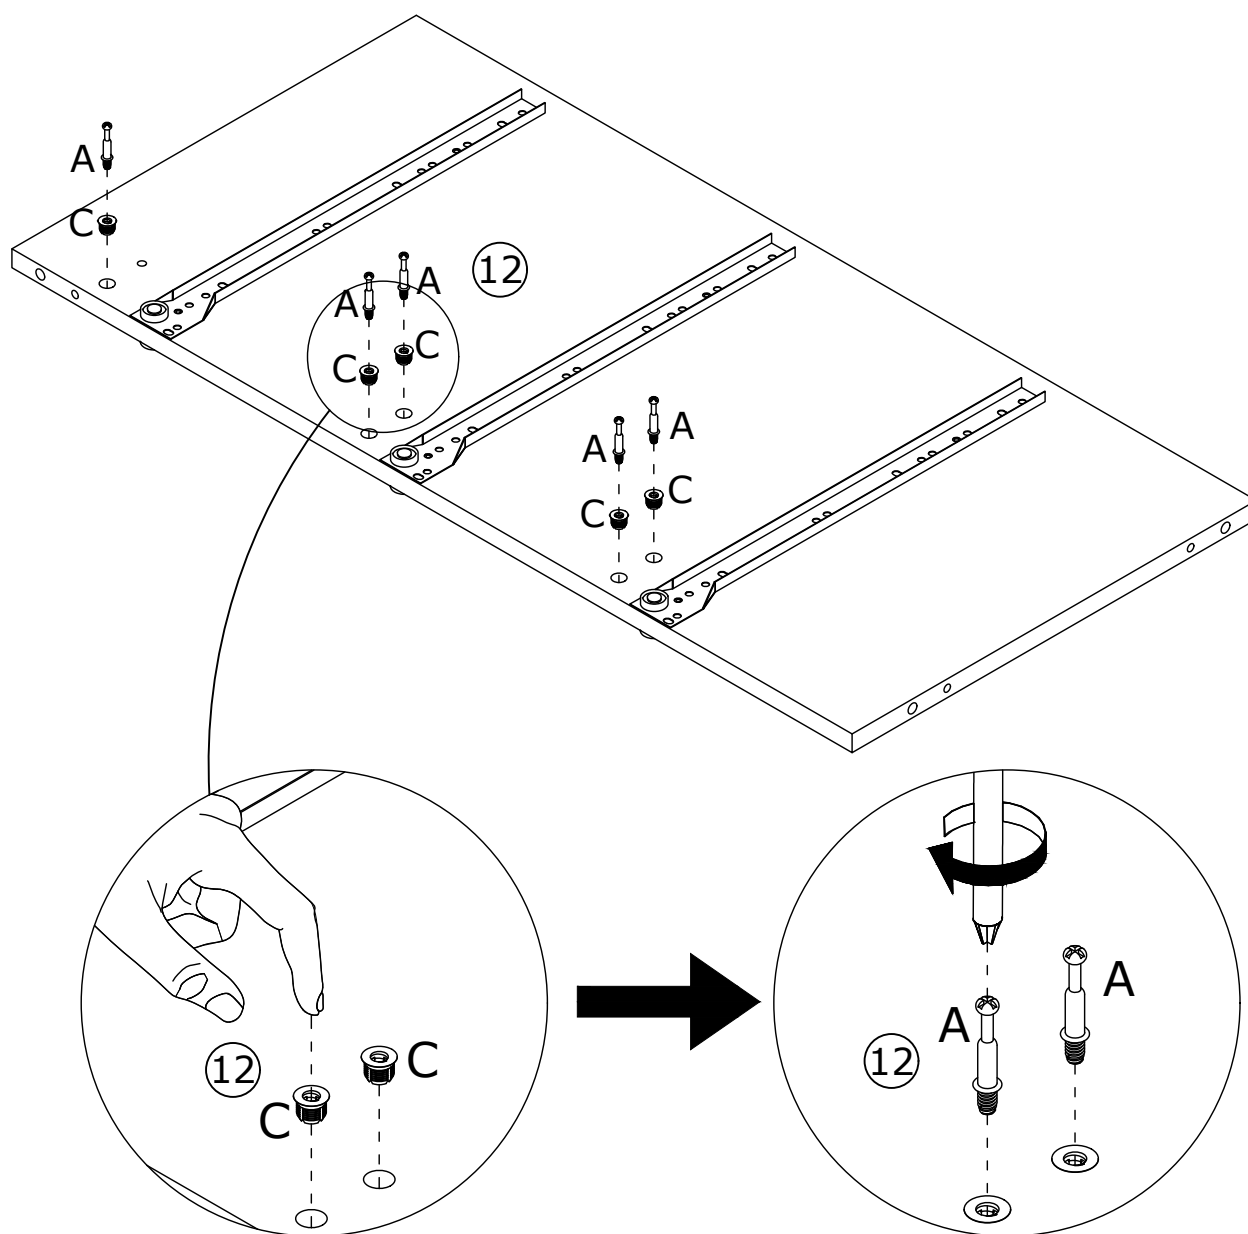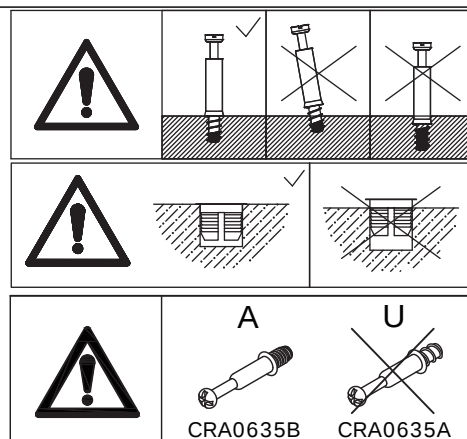


# 21


 
|                                                                                                                |                                                                                                                |                                                                                     |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>B x 5</p>  <p>CRB1595A</p> | <p>D x 1</p>  <p>CRF0630A</p> |  |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

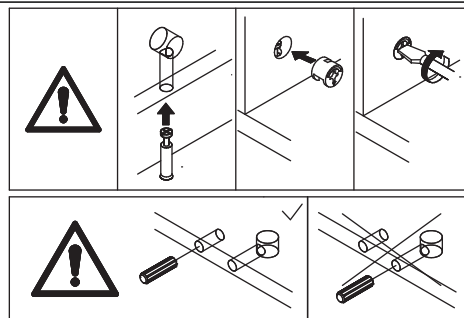 

 
Connect panel 16 to panel 12 using wooden dowel (D), connect panel 17 to panel 12, then tighten by turning eccentric wheel (B) clockwise.

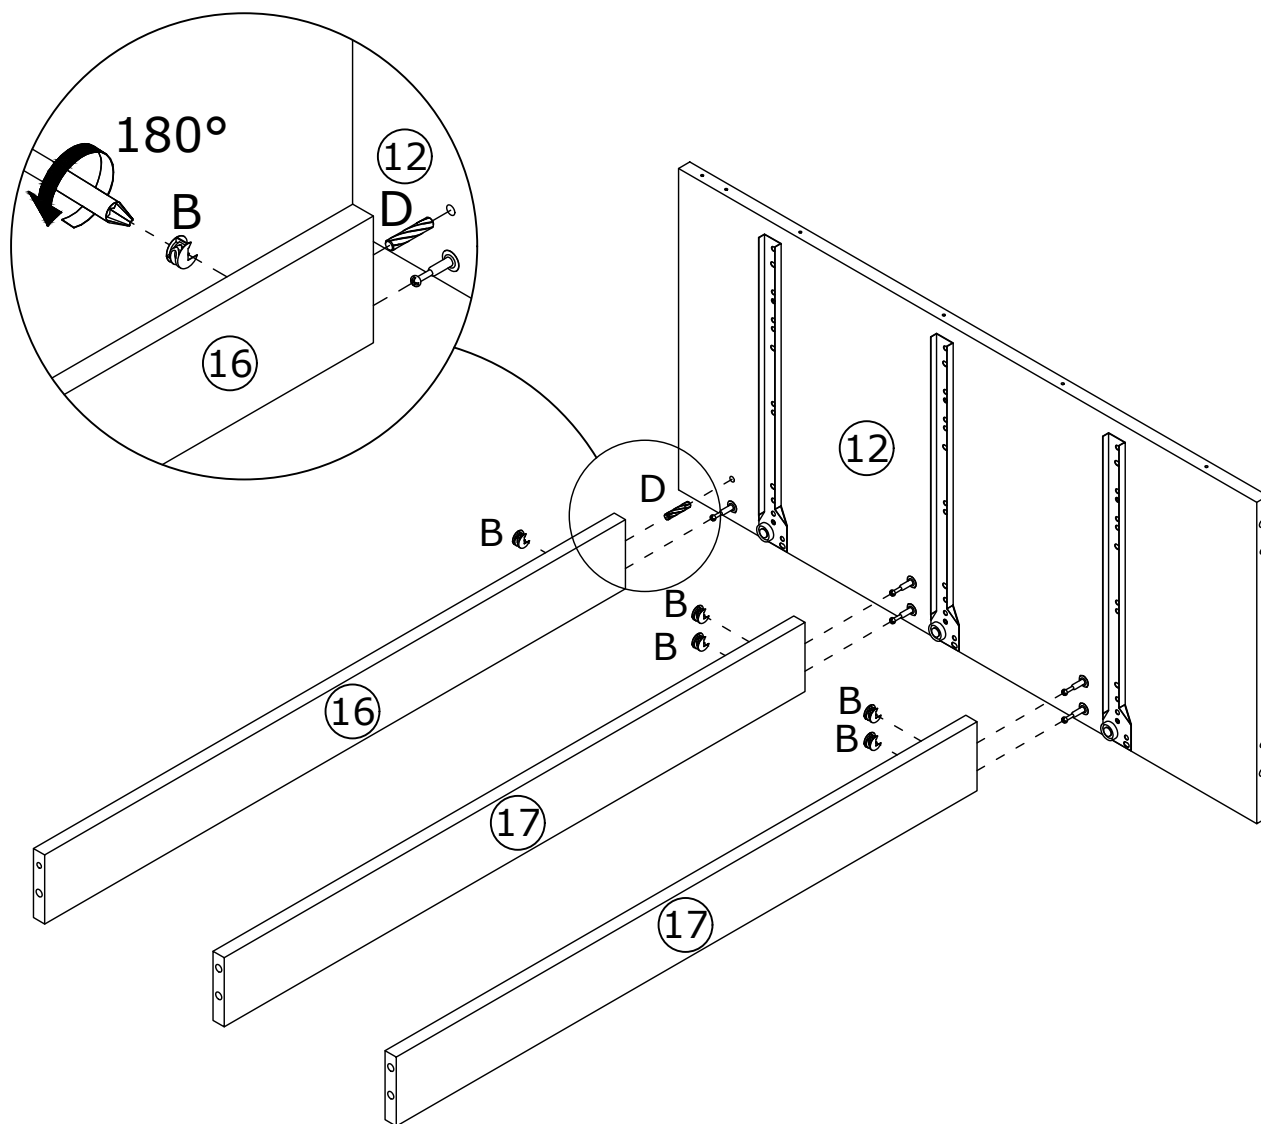



22

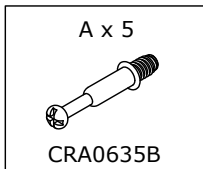  


 Screw the self-tapping screw (A) into panel 12.

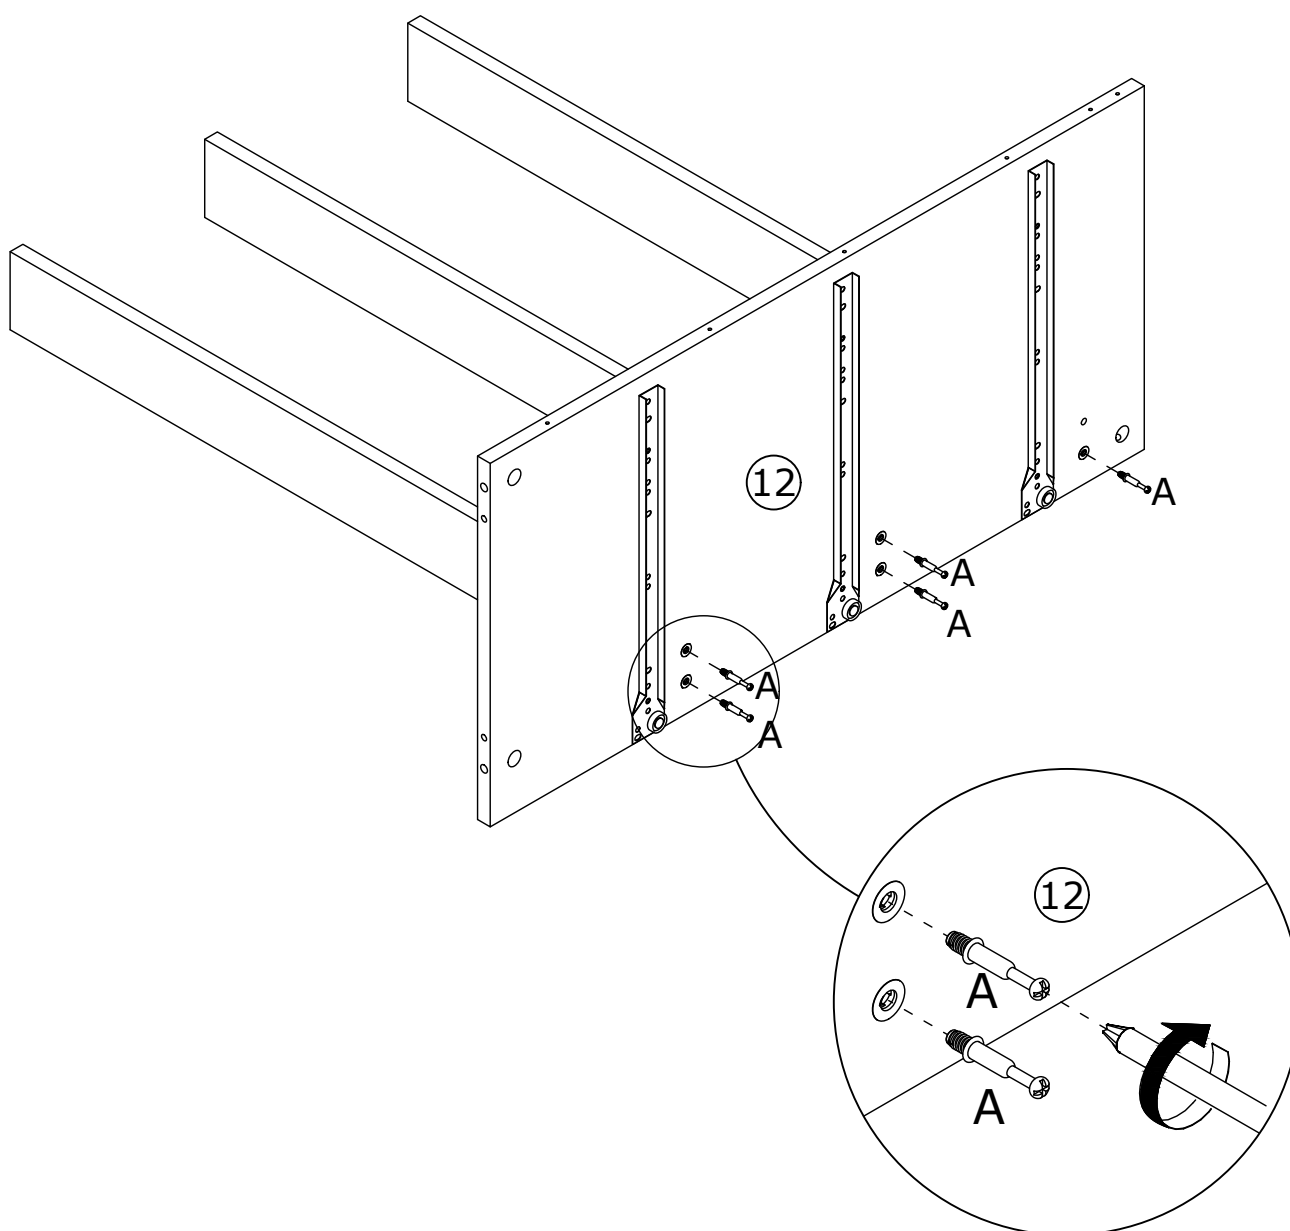


# 23
  
|                                                                                                                |                                                                                                                |                                                                                     |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>B x 5</p>  <p>CRB1595A</p> | <p>D x 1</p>  <p>CRF0630A</p> |  |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

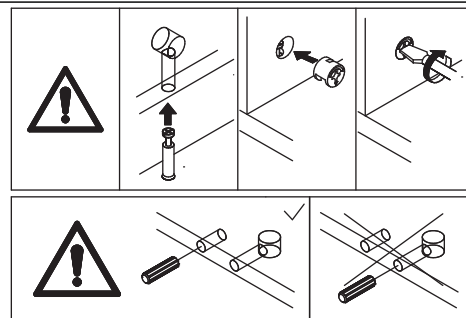 

 Connect panel 16 to panel 12 using wooden dowel (D), connect panel 17 to panel 12, then tighten by turning eccentric wheel (B) clockwise.

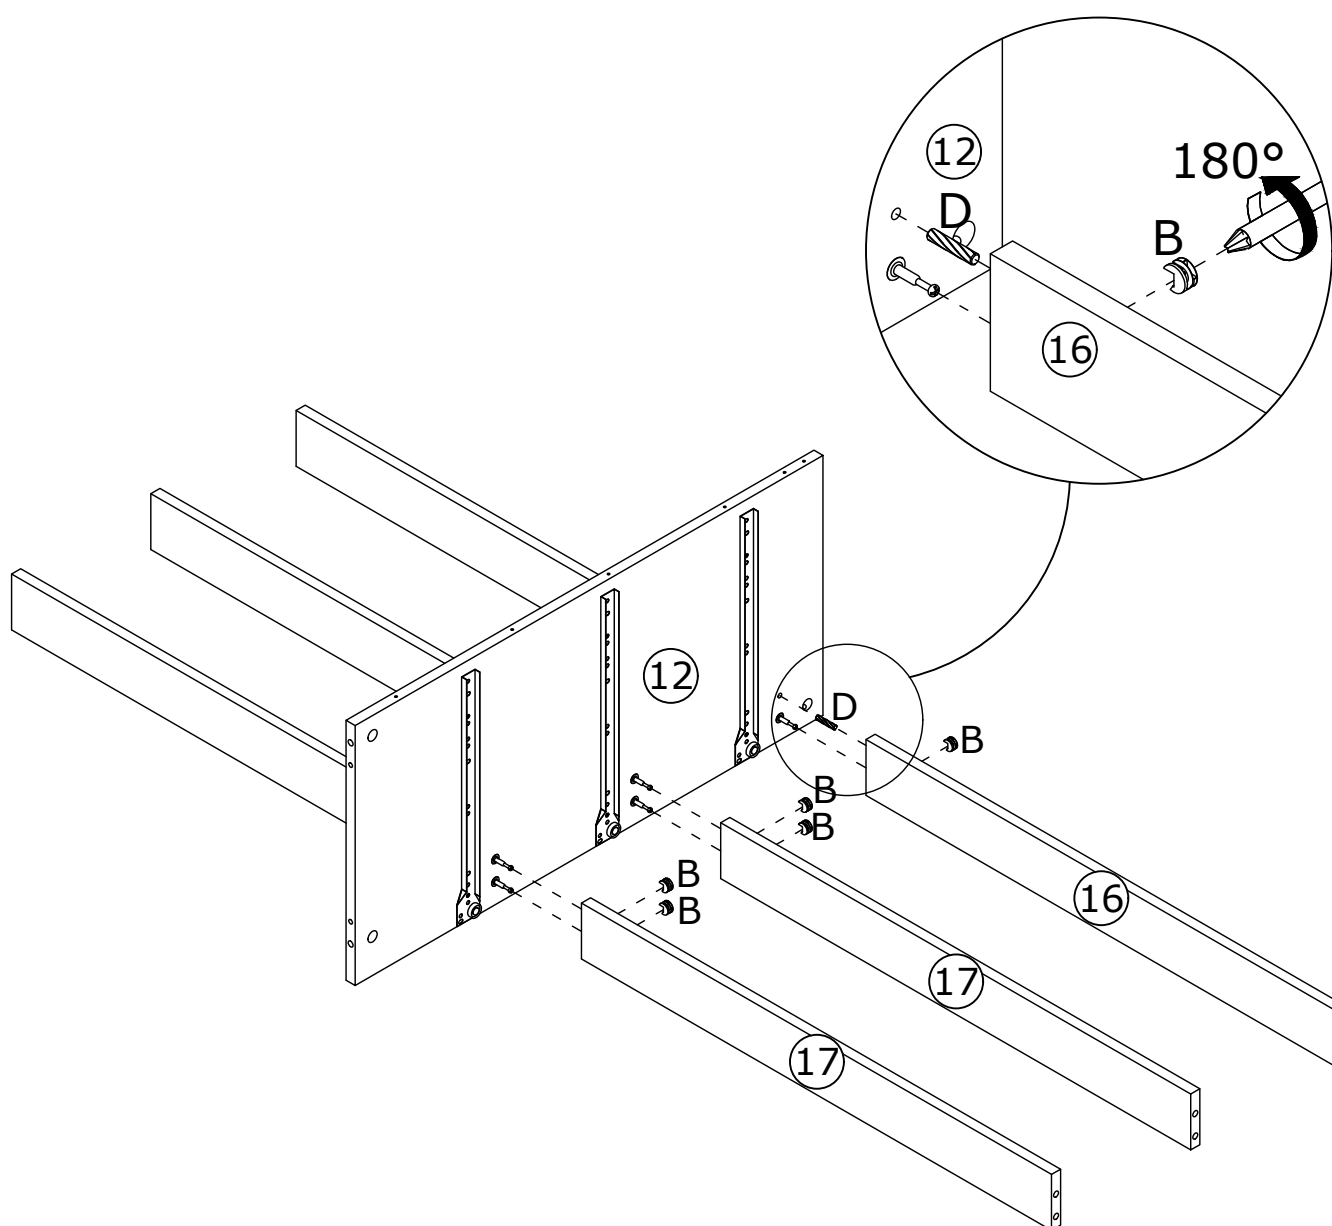


24

M x 2




 CRD3535A




Note: Support panel 15 to prevent the panel from tilting and causing the holes to crack.

 Secure panel 15 to panel 12 using screw (M).


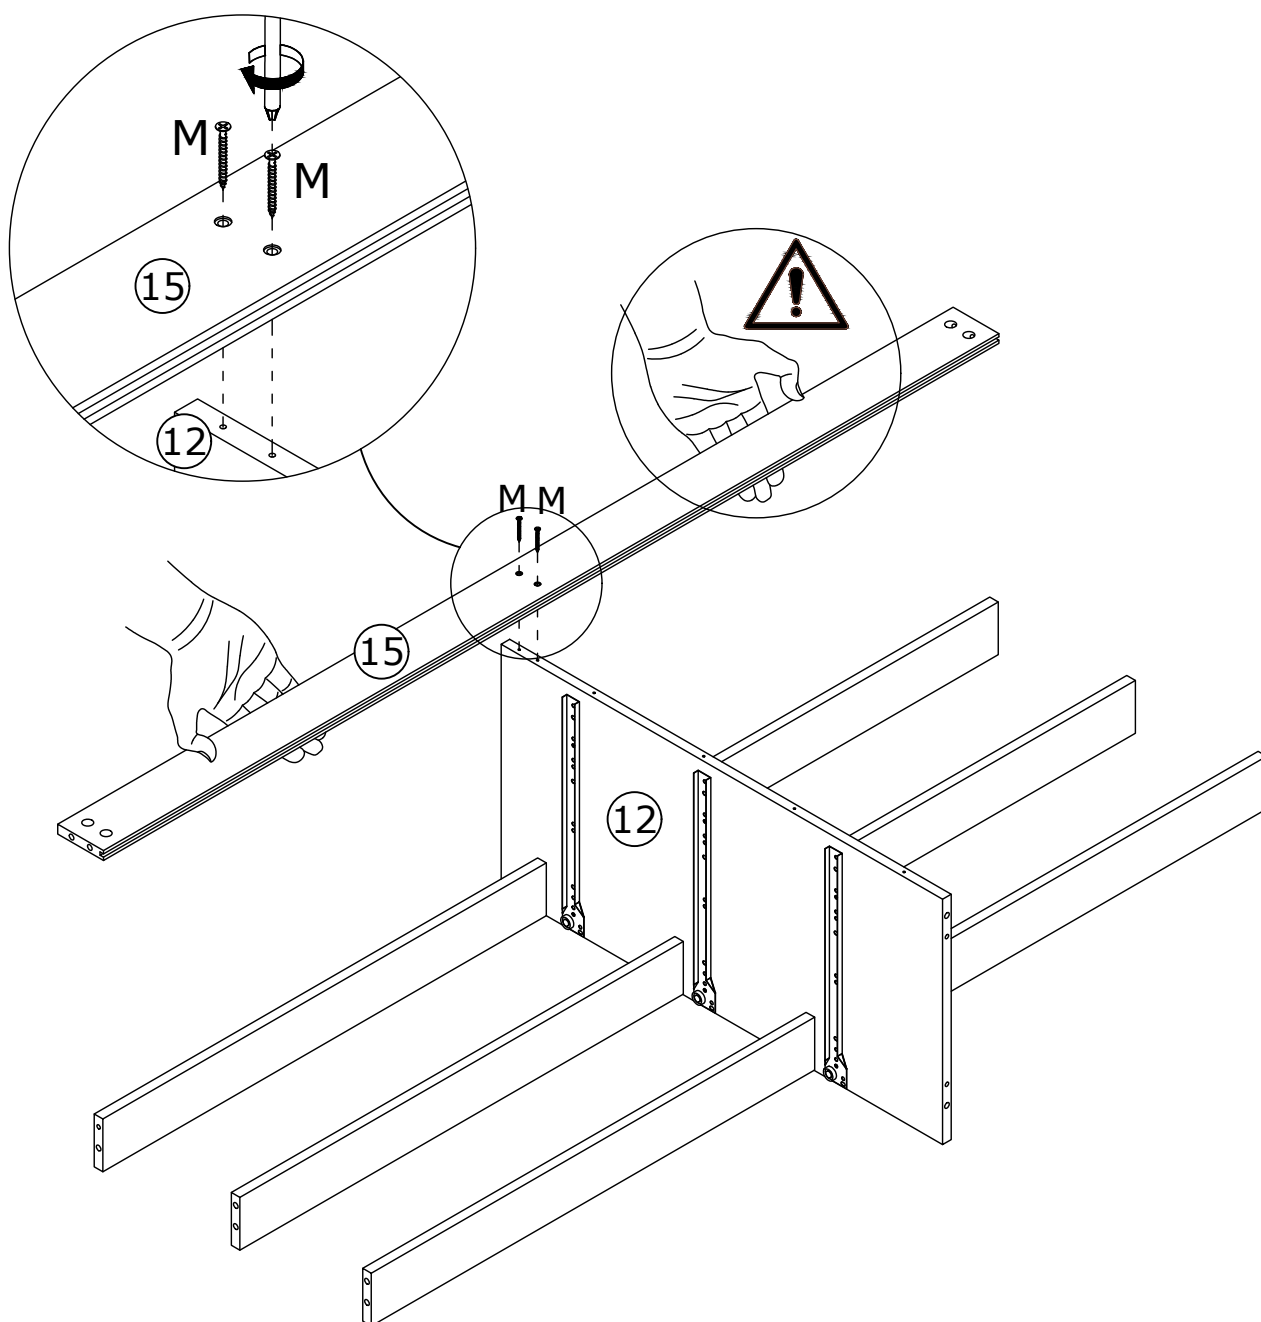


# 25
 
|                                                                                                                |                                                                                                                |                                                                                     |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>B x 7</p>  <p>CRB1595A</p> | <p>D x 1</p>  <p>CRF0630A</p> |  |
|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

Note: Support panel 15 to prevent the panel from tilting and causing the holes to crack.

  Connect panel 16 to panel 10 using wooden dowel (D), connect panels 17 and 15 to panel 10, then tighten by turning eccentric wheel (B) clockwise.

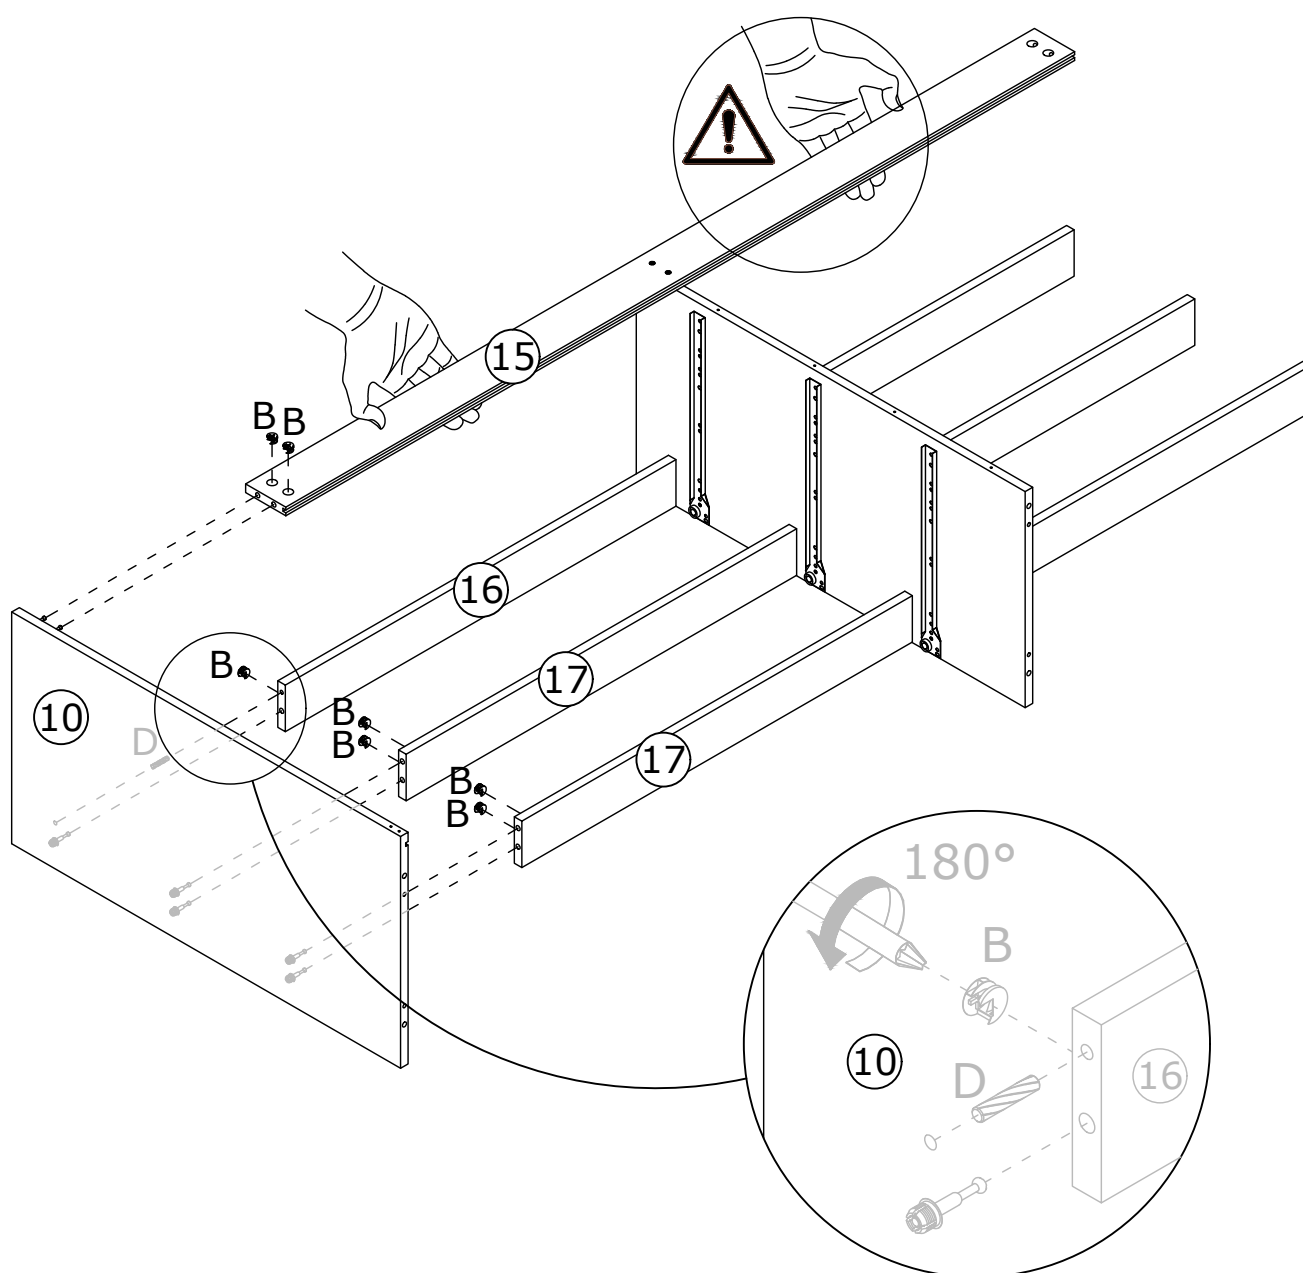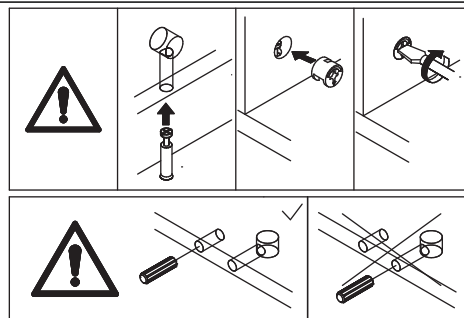


# 26

B x 7




CRB1595A


 
D x 1





CRF0630A

 

  
Connect panel 16 to panel 11 using wooden dowel (D), connect panels 17 and 15 to panel 11, then tighten by turning eccentric wheel (B) clockwise.

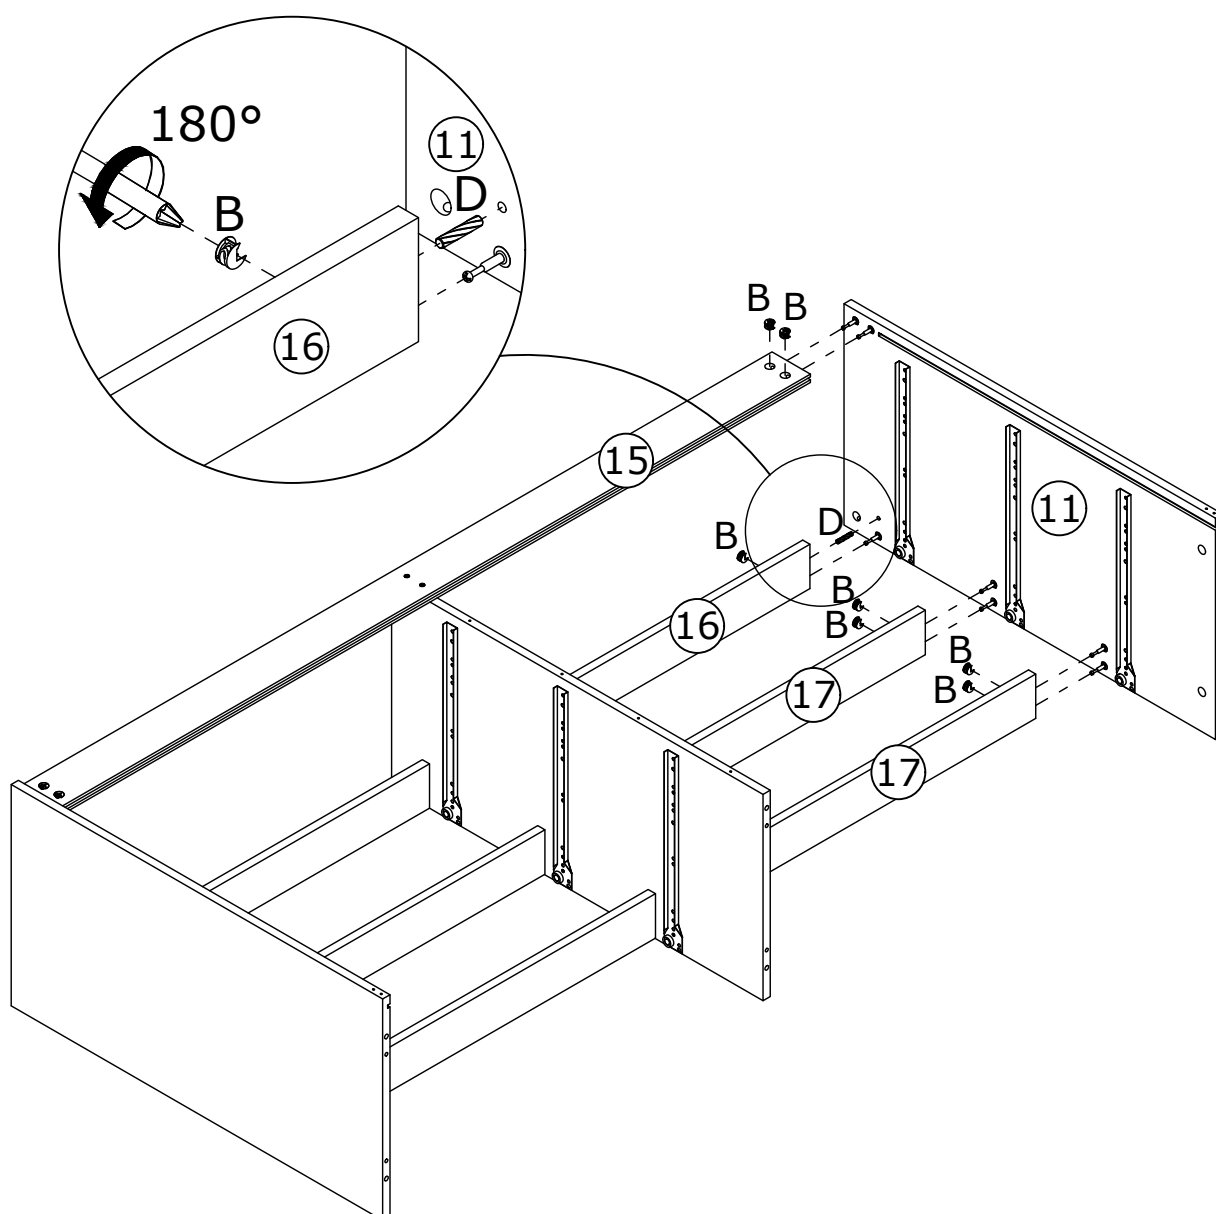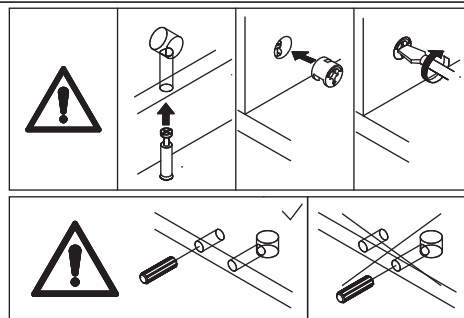


27

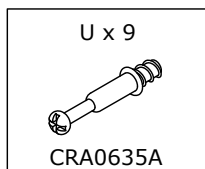  

 
Screw the self-tapping screw (U) into panel 14.

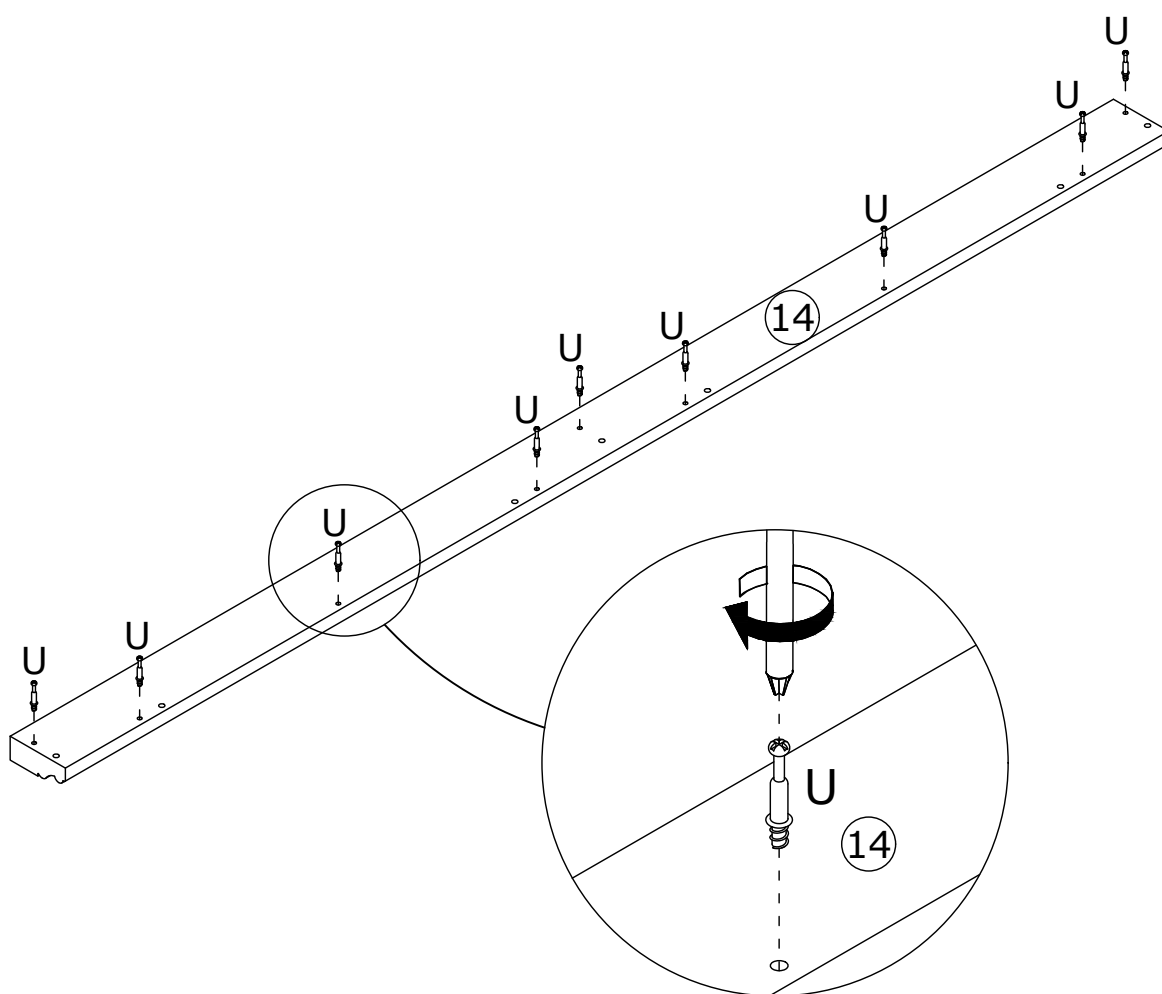

28

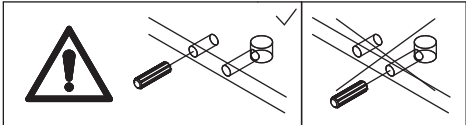 

 Turn the cabinet upside down. Insert wooden dowel (D) to panels 10, 11, 12, and 16.


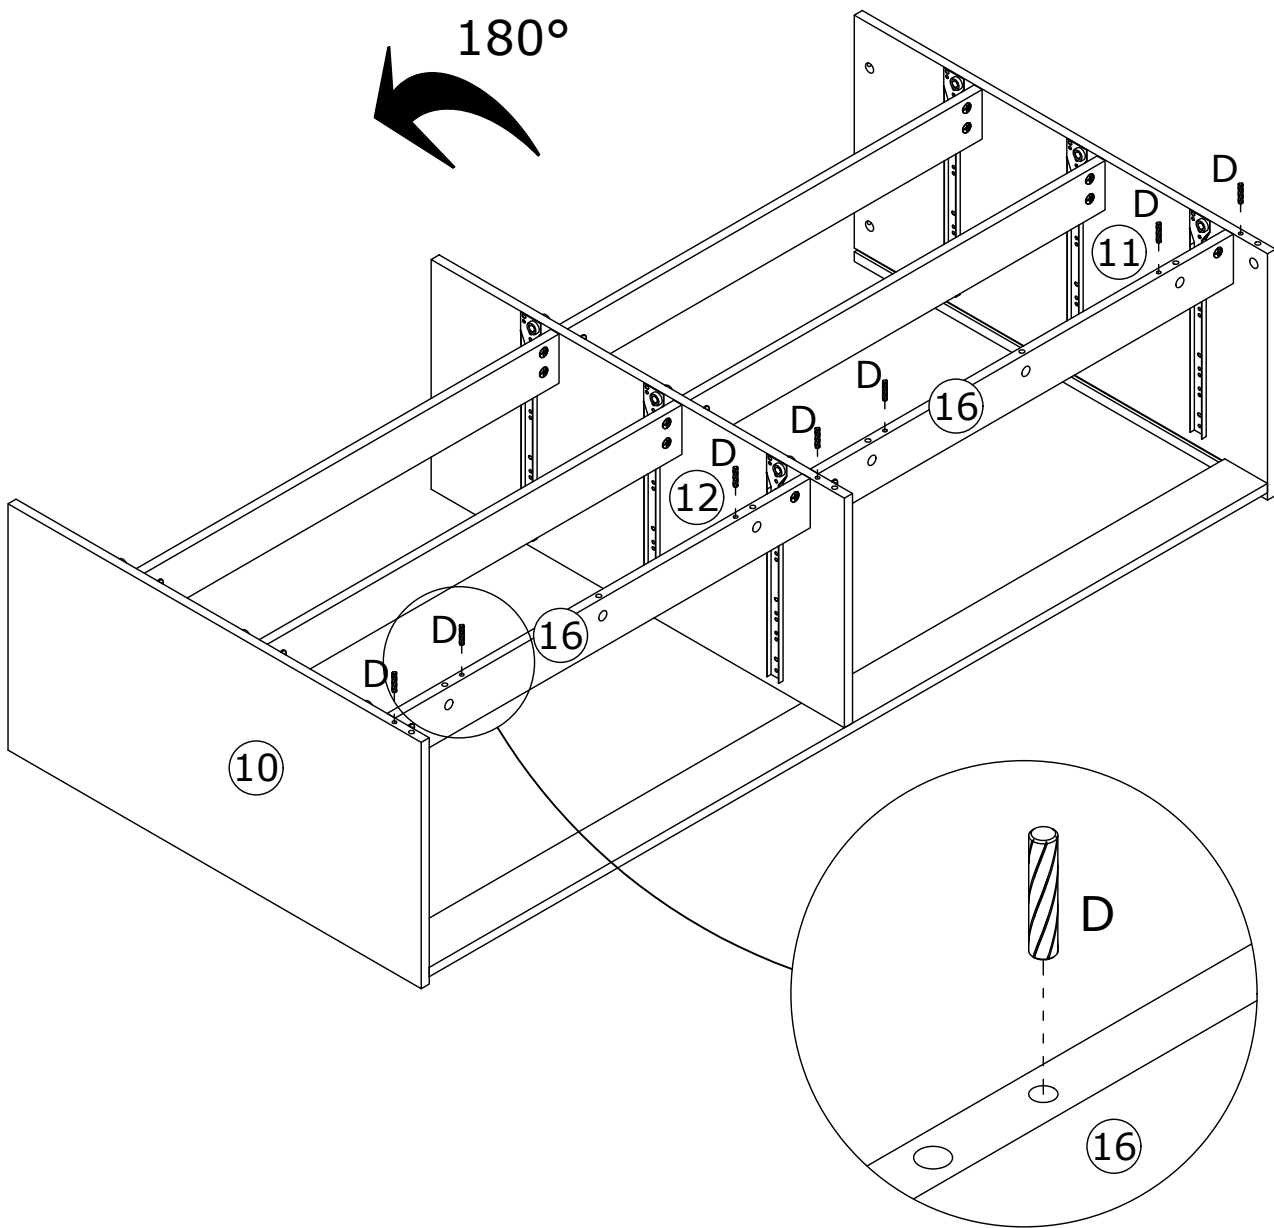


# 29


B x 9



  CRB1595A

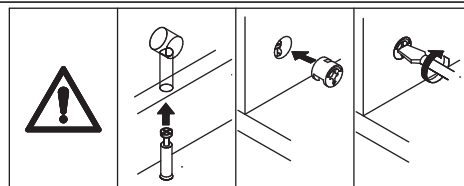


 Connect panel 14 to panels 10, 11, 12, and 16, then tighten by turning eccentric wheel (B) clockwise.

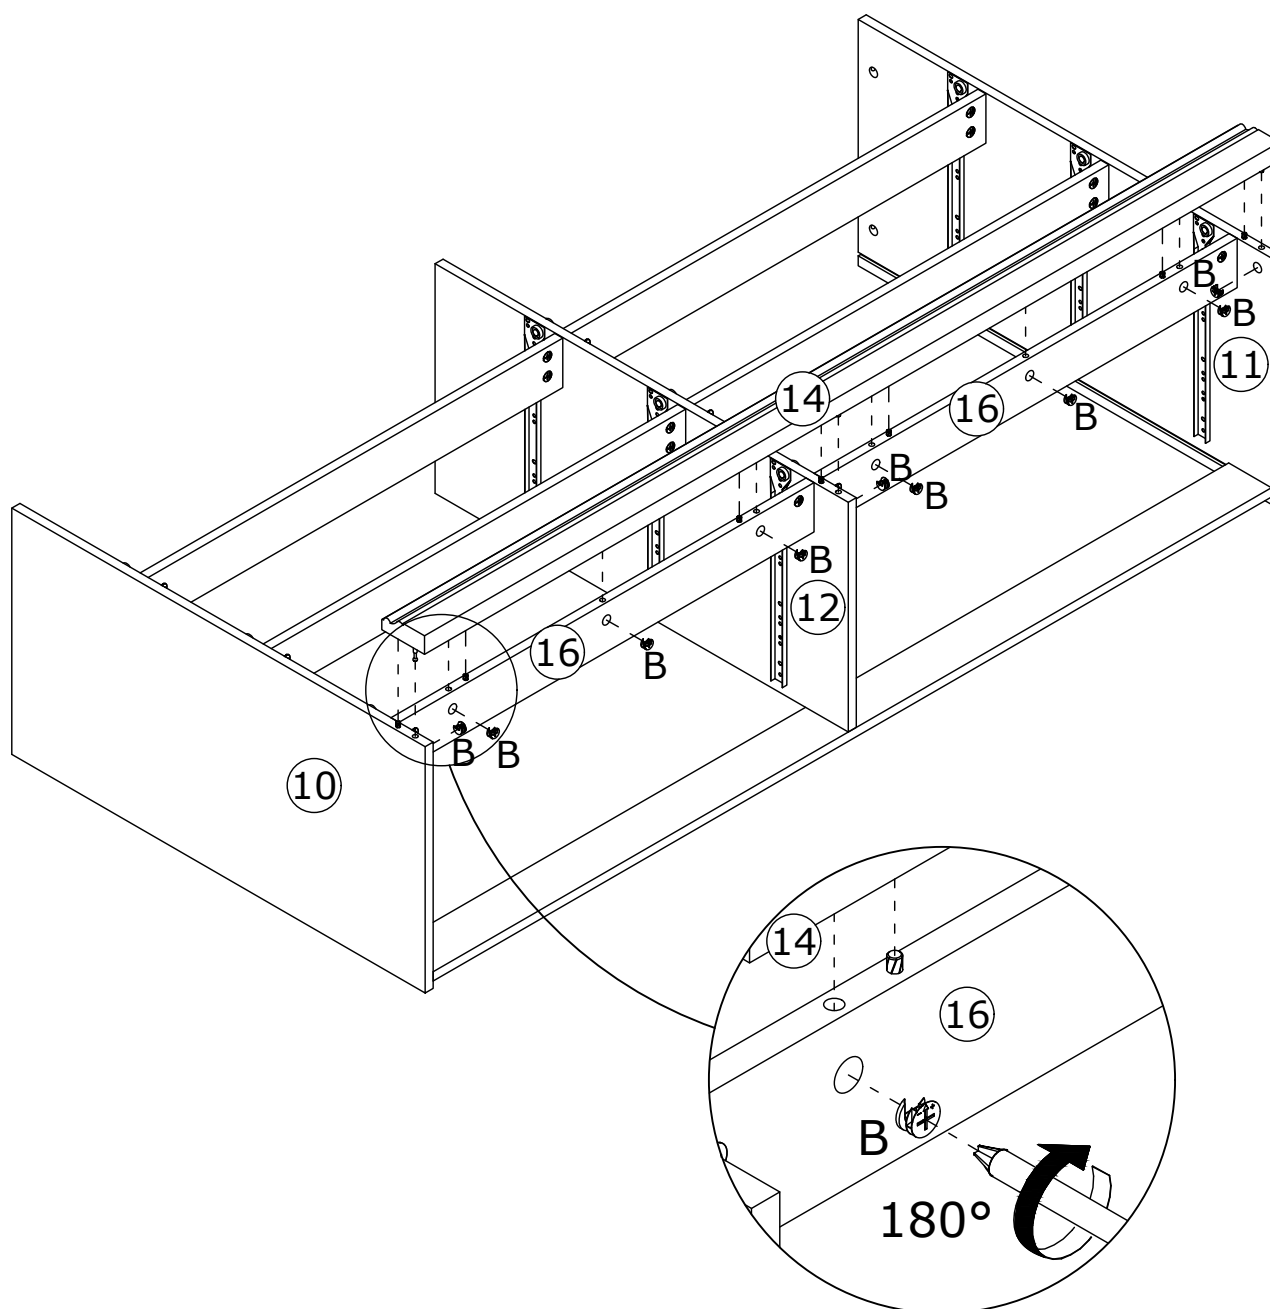


# 30

 
Turn the cabinet upside down, insert panel 13 along the available slots.

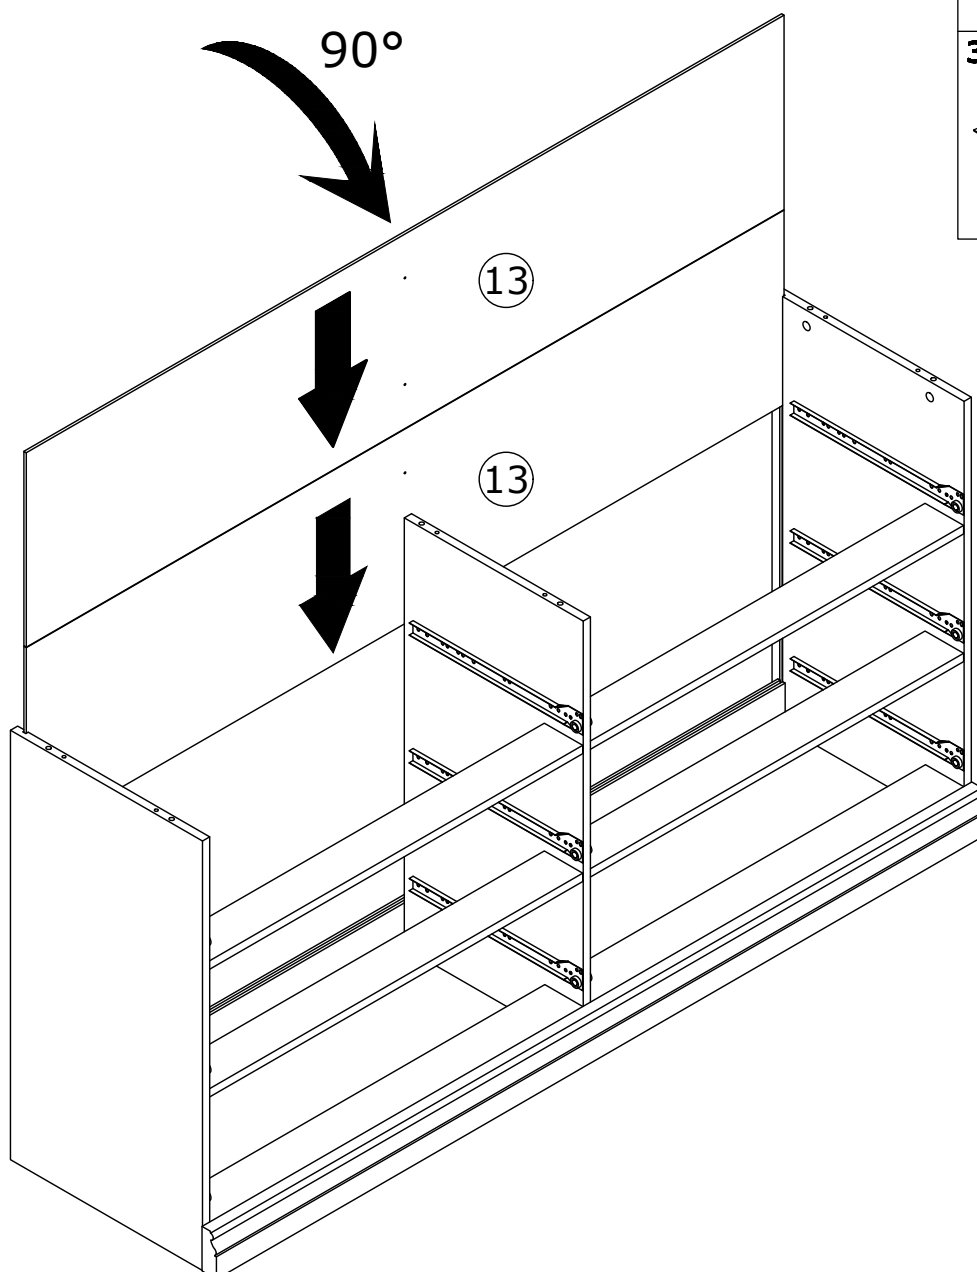

 
1.

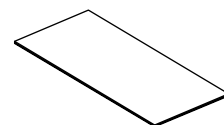

 2.

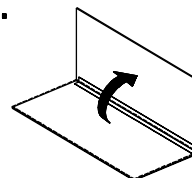


 3.


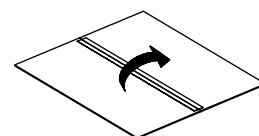


# 31

 
D x 6



CRF0630A

  

 Insert wooden dowel (D) into panels 10, 11, and 12.

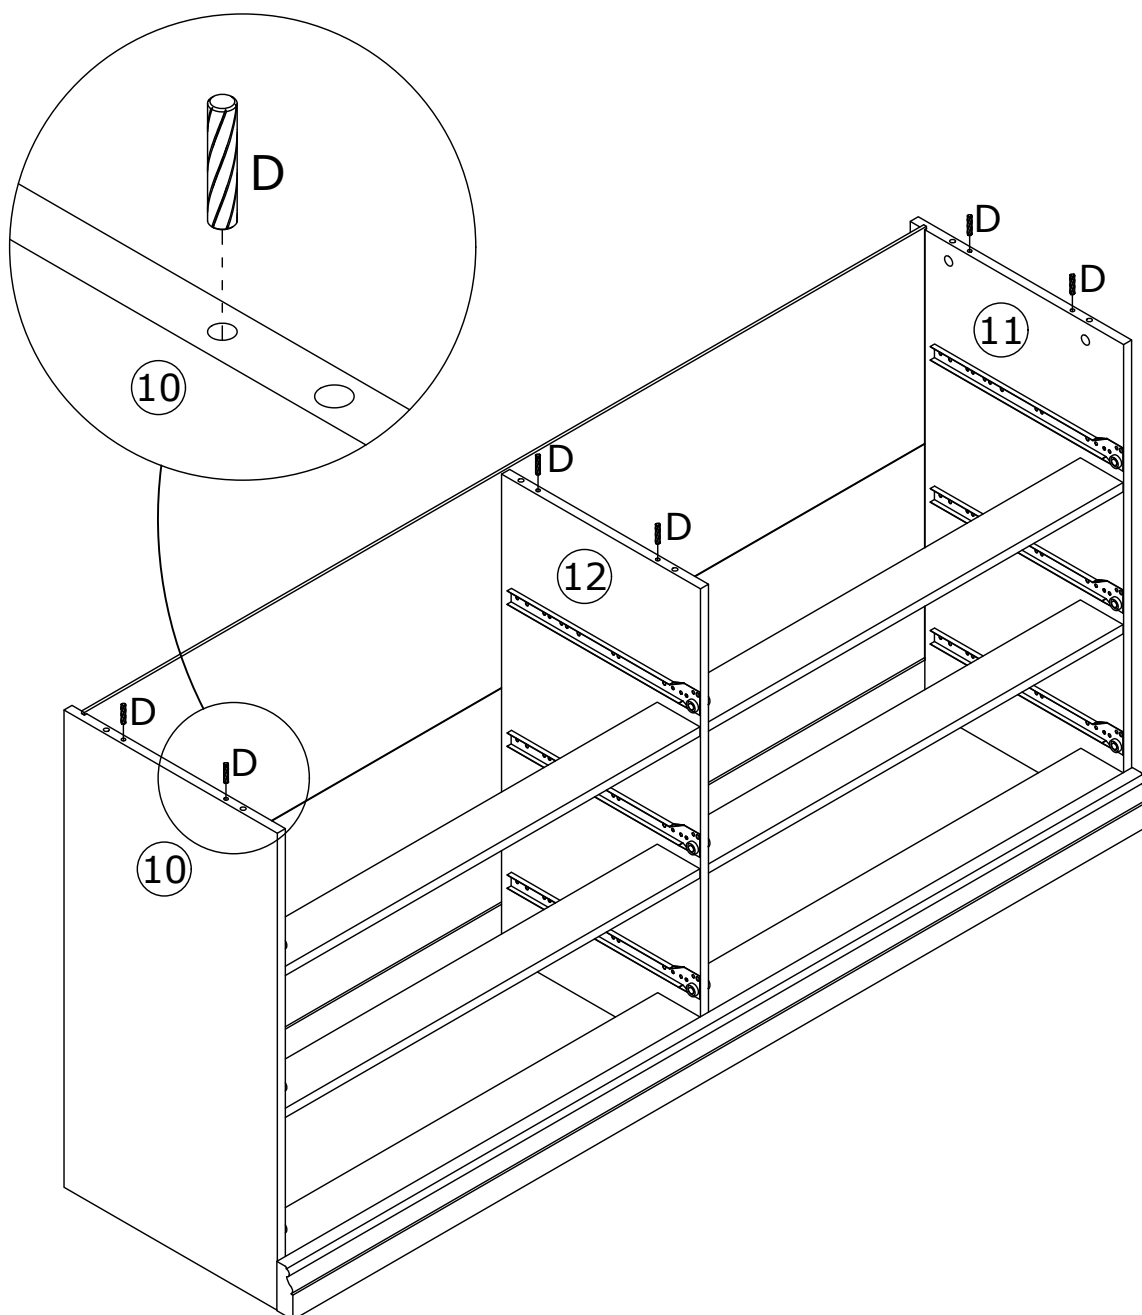


# 32


B x 6



 
CRB1595A



 
Connect panel 9 to the mounting unit, then tighten by turning eccentric wheel (B) clockwise.

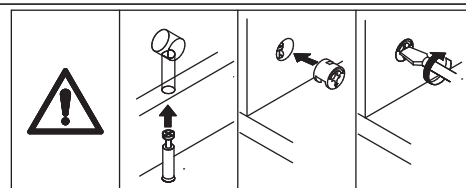


**Caution: Be careful not to pinch your fingers.**

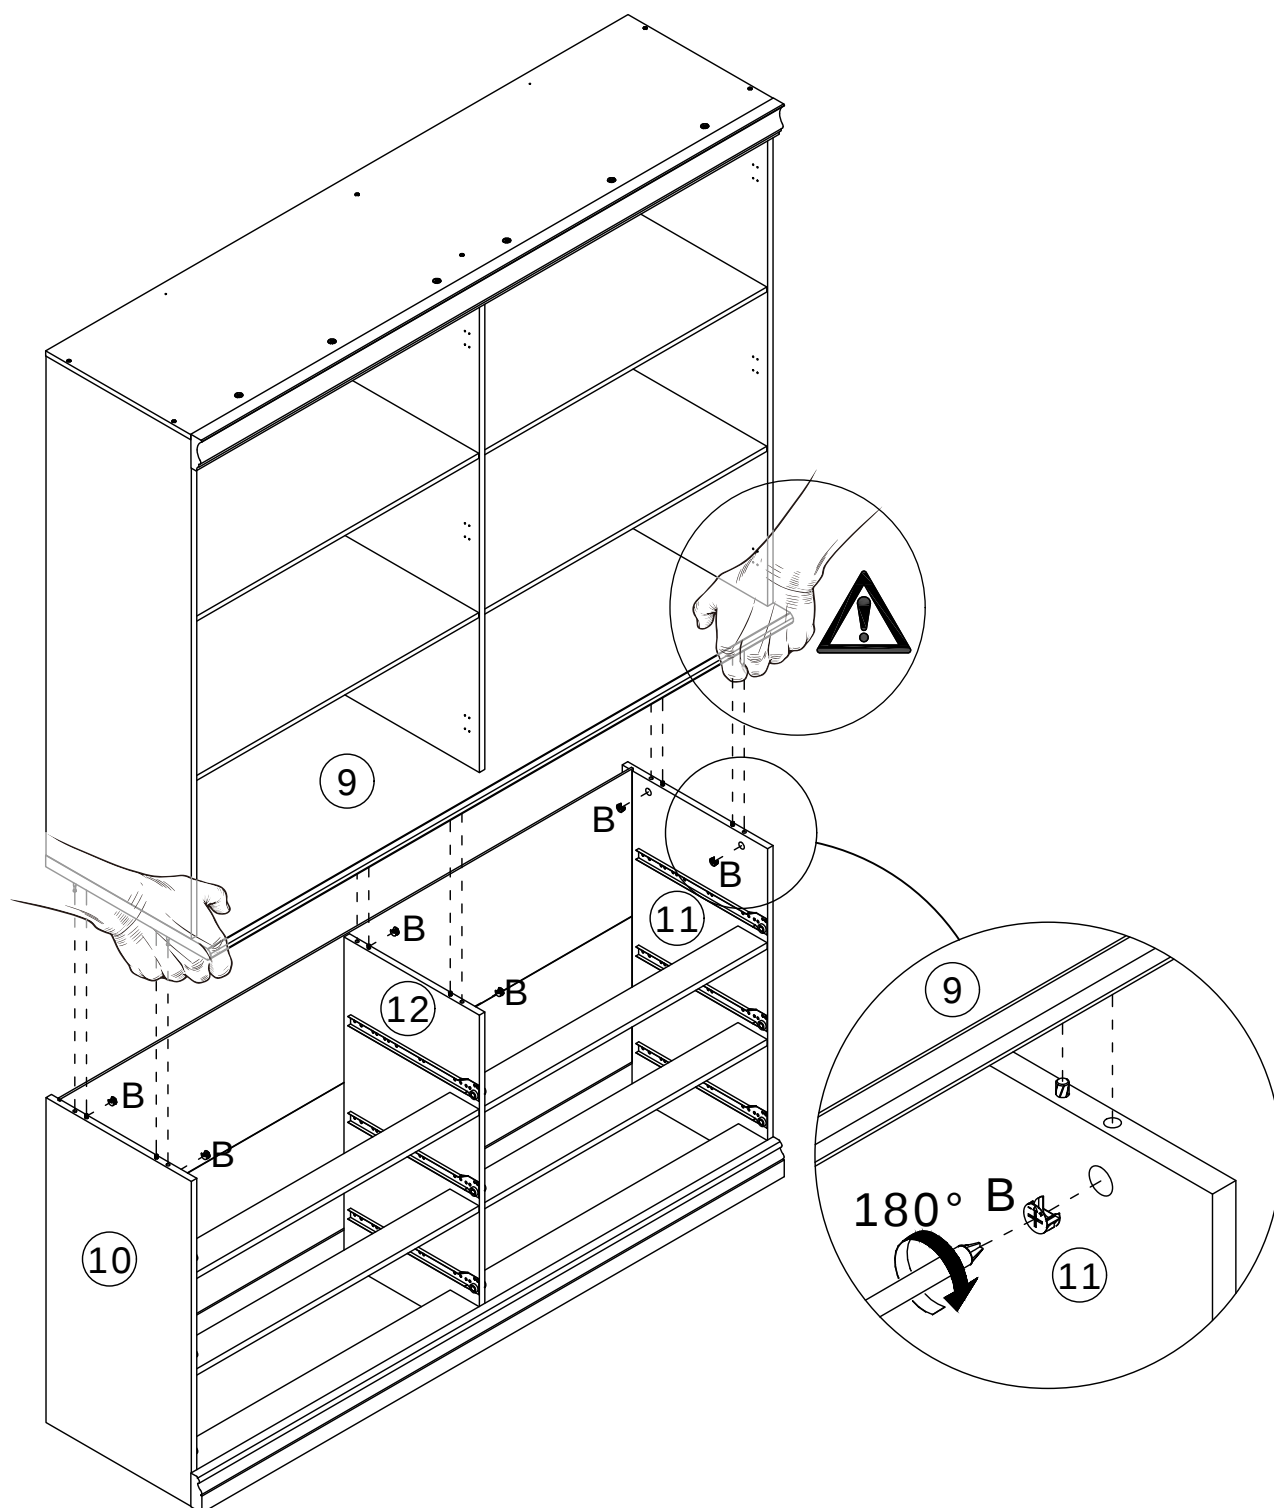 



# 33

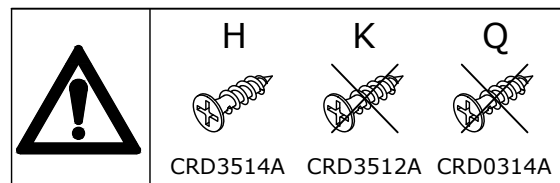 

 
Secure part (V) to the mounting unit using screw (H).

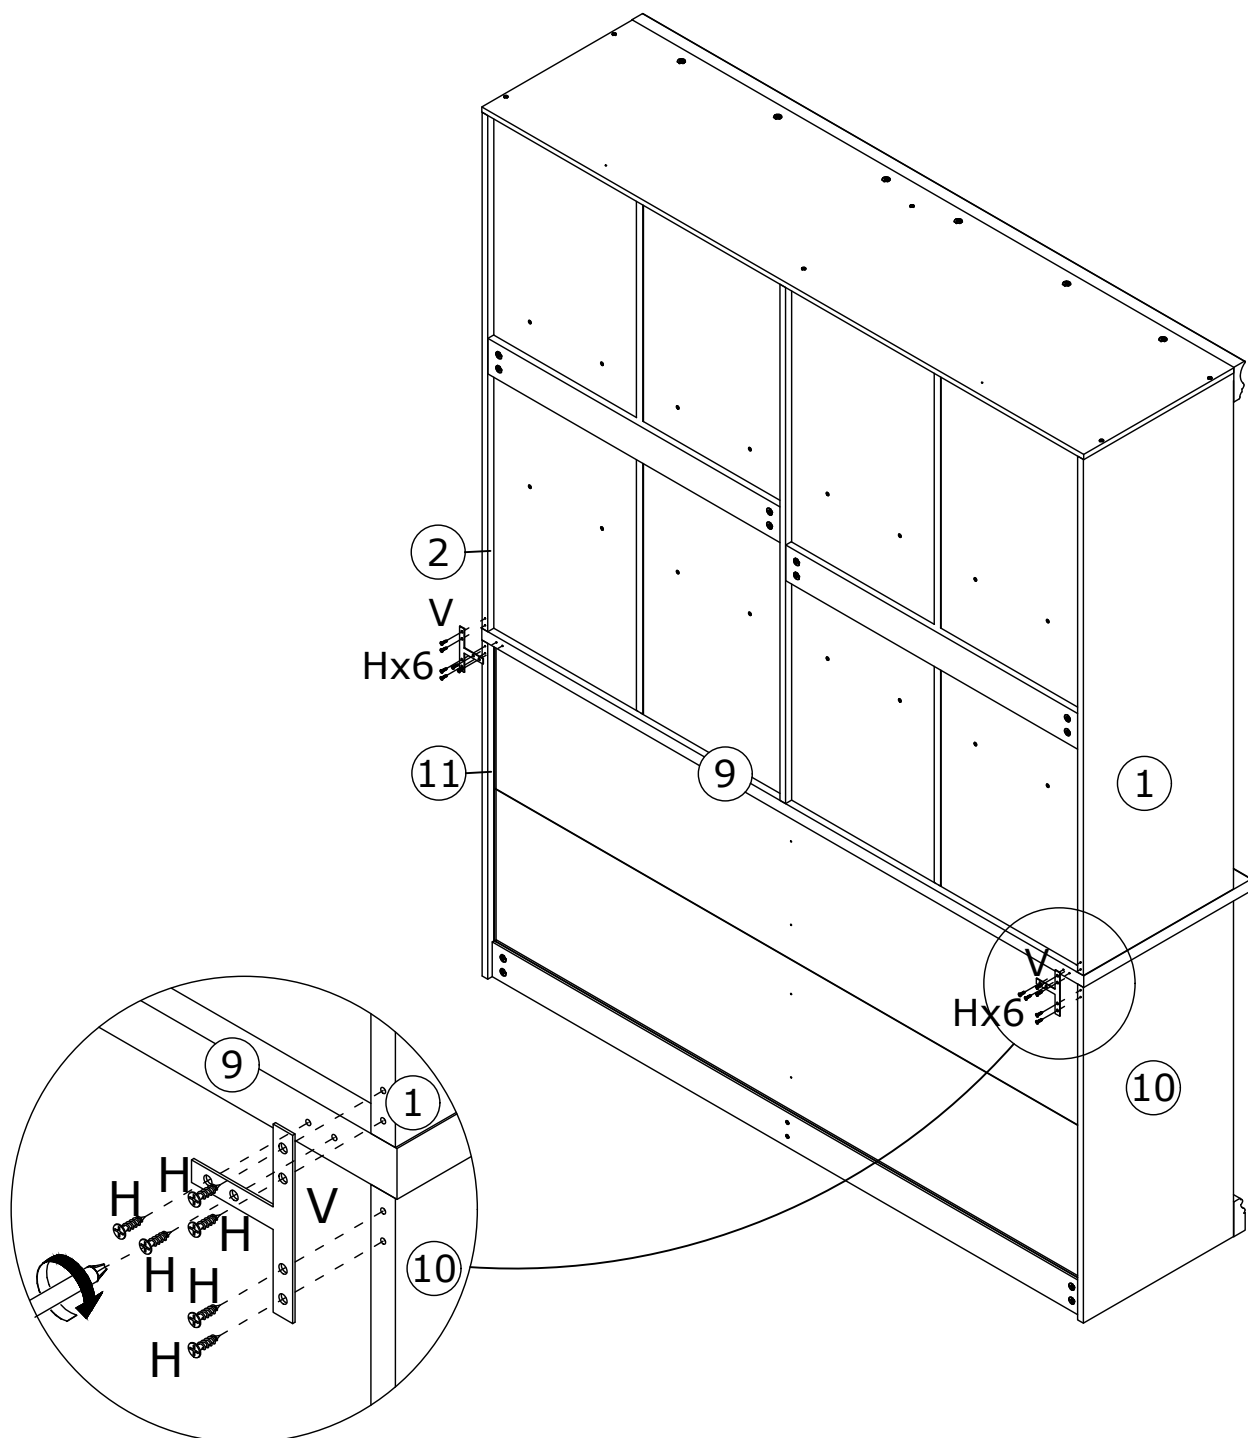


34

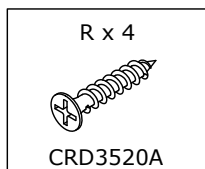  

 
 
Secure panel 13 to panel 12 using screw (R).

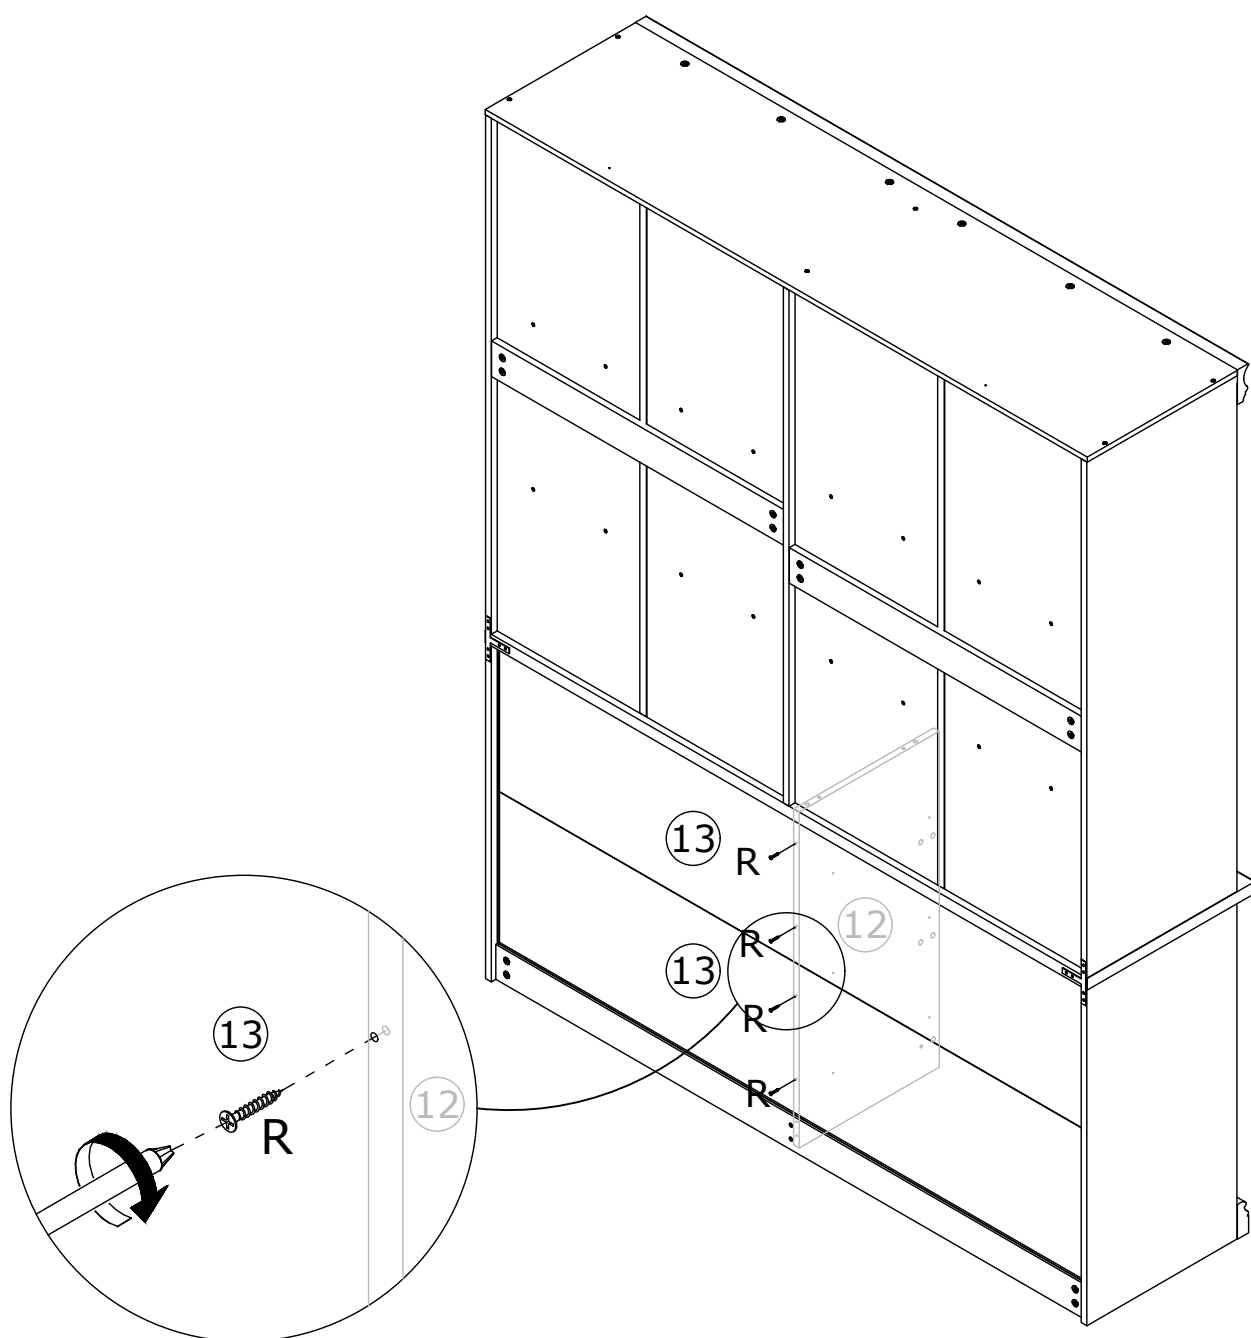




Pay attention to the difference between the middle parts of the two types of door hinges.




 
 
- ▣ The door hinges(G) are used on the outermost door plates.
- ▣ And the door hinges(F) are used on the middle door plates.

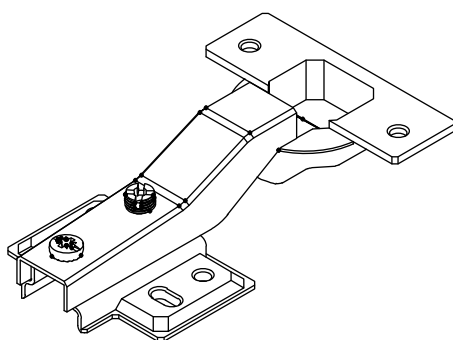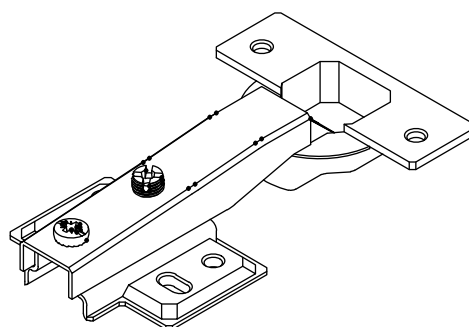**F****G**

# 36

 

     Secure hinge (G) to panels 27 and 30 using screw (H).

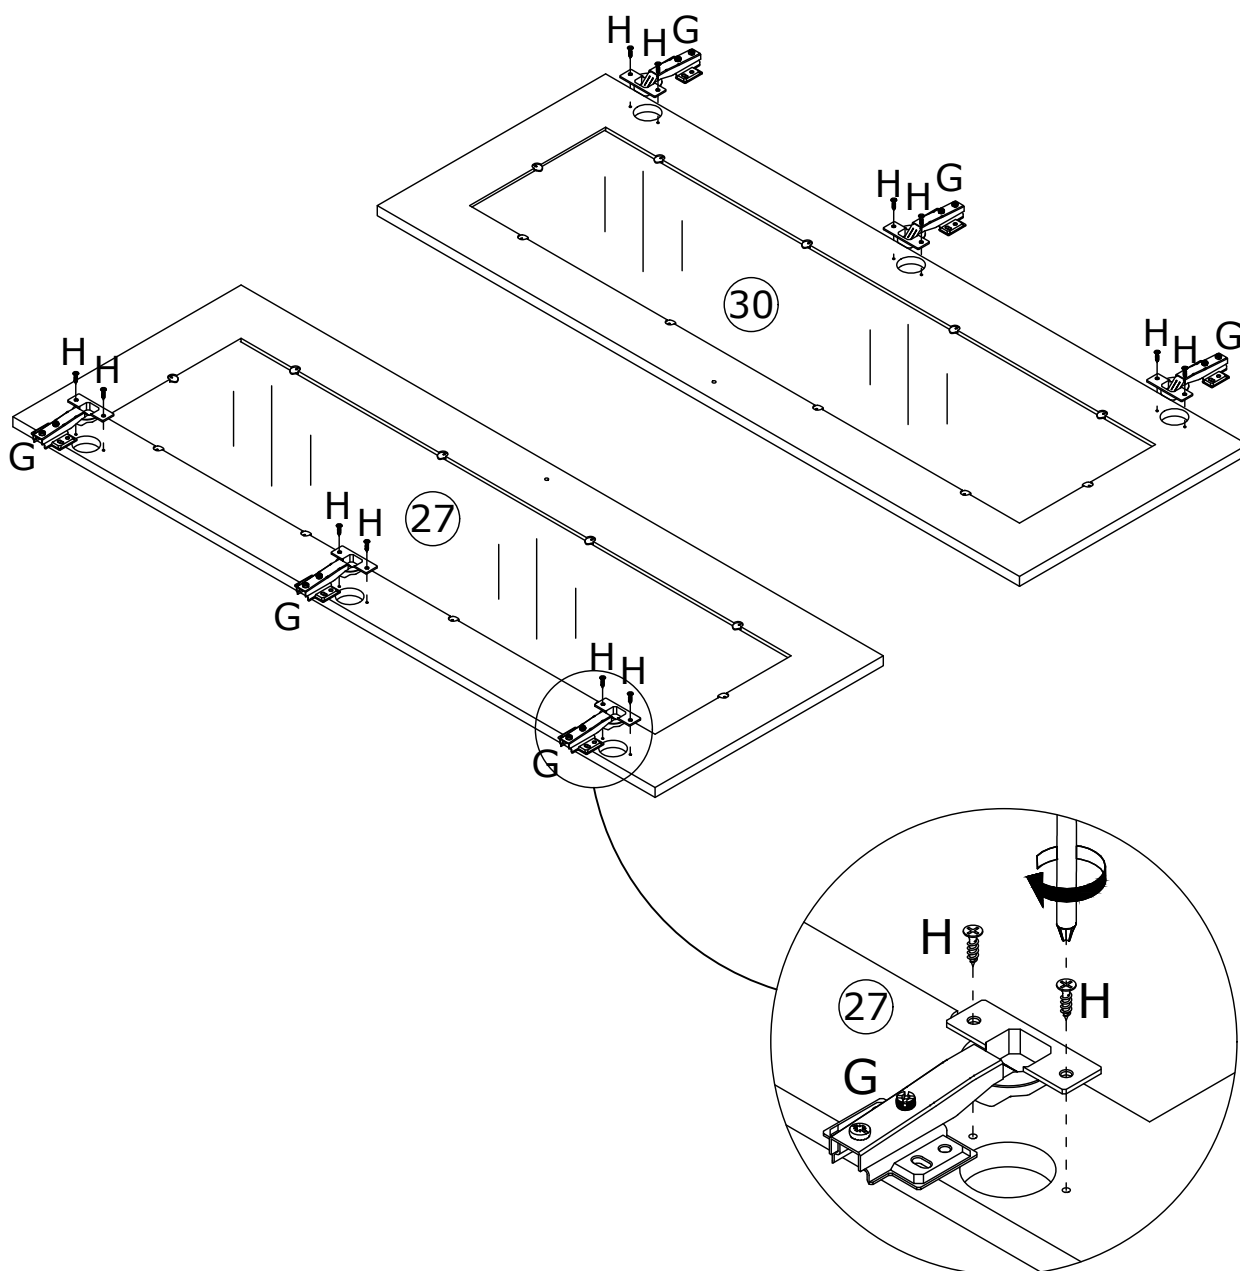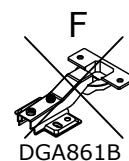


# 37

H x 24



 CRD3514A



H



CRD3514A

K





CRD3512A

Q



CRD0314A

  
Connect panels 27 and 30 to panels 1 and 2 by securing hinges using screw (H).

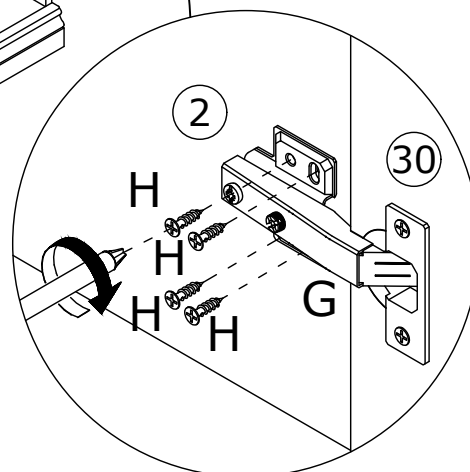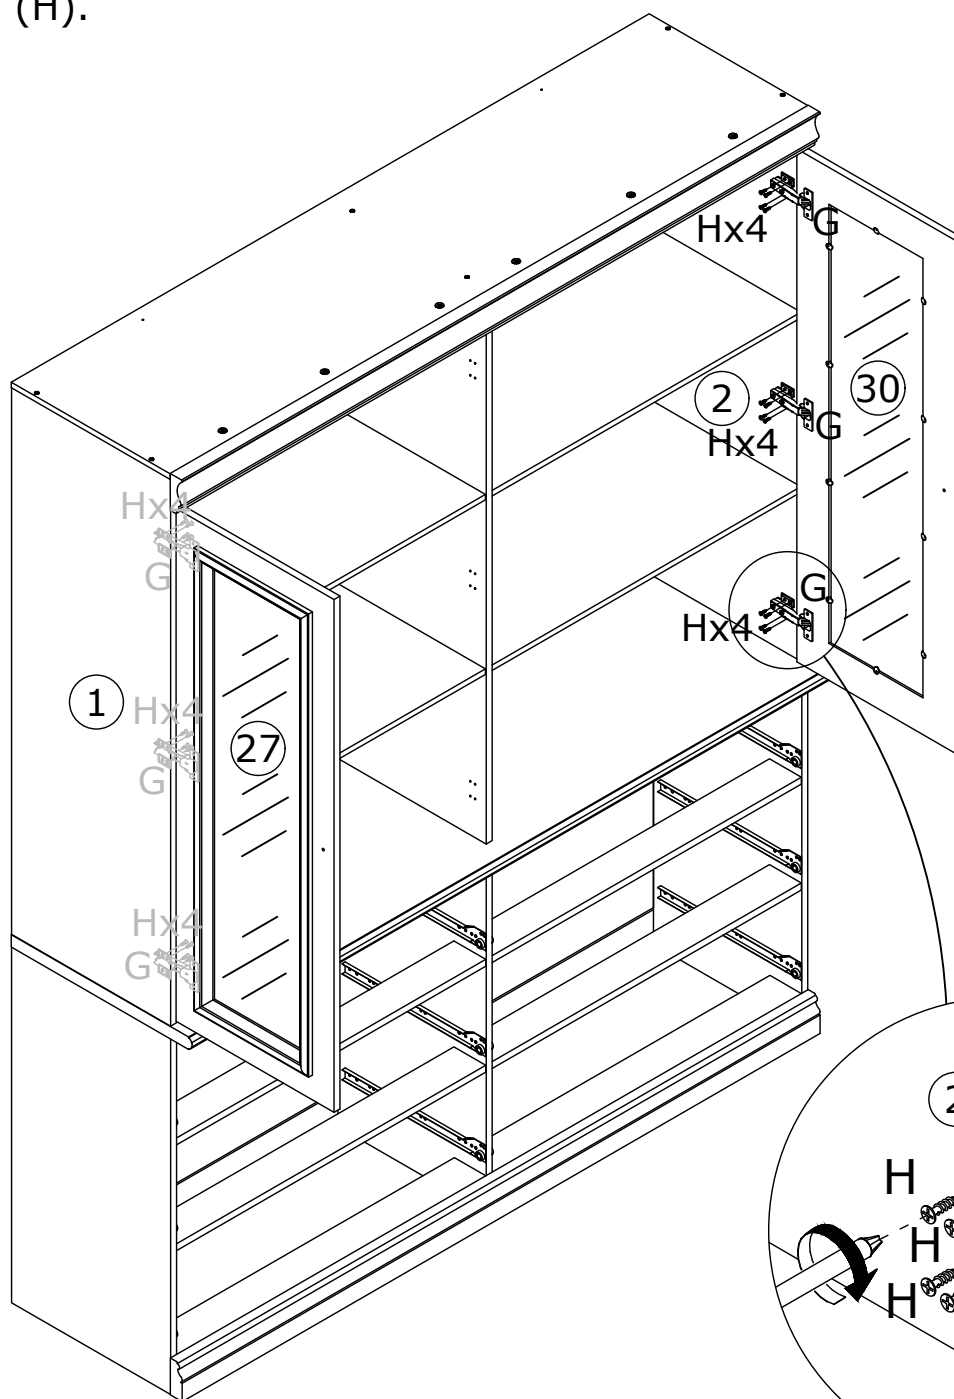



38




 
Secure knob (W) to panels 27 and 30 using screw (X).

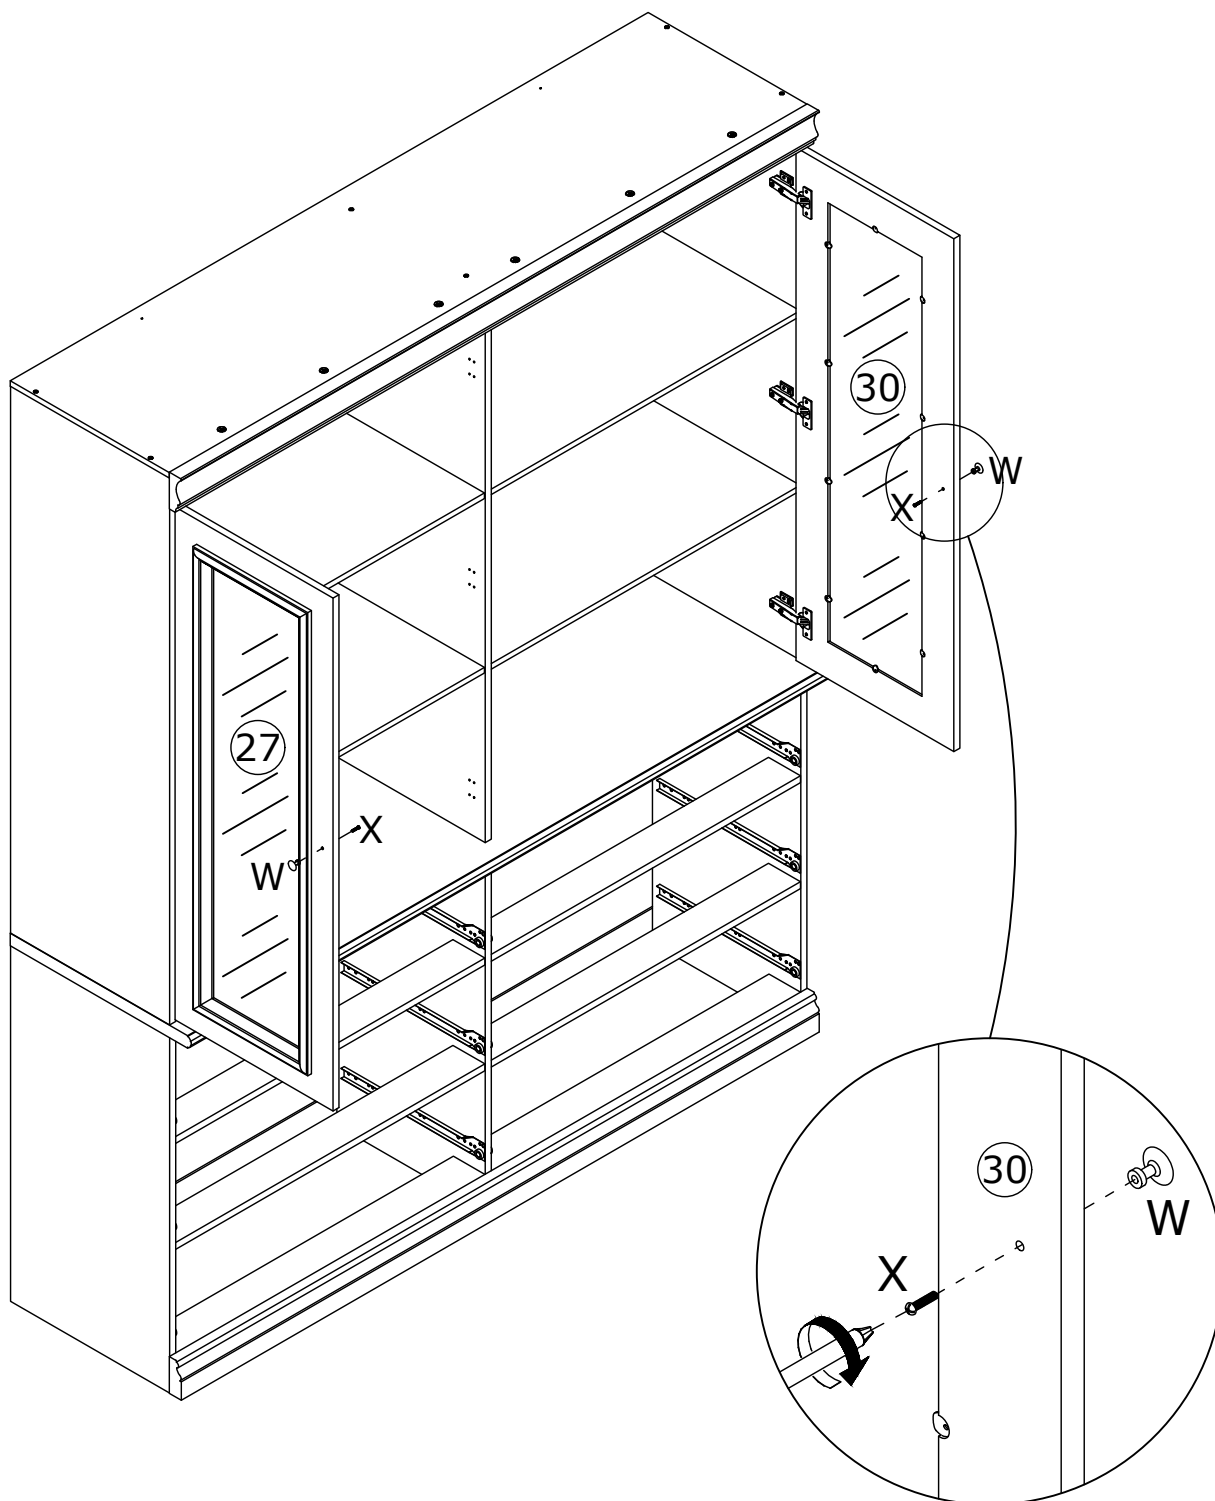


# 39
  
|                                                                                                               |                                                                                                                |                                                                                     |
|---------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>F x 3</p>  <p>DGA861B</p> | <p>H x 6</p>  <p>CRD3514A</p> |  |
|---------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

  Secure hinge (F) to panel 28 using screw (H).

|                                                                                    |                                                                                                              |                                                                                                              |                                                                                                              |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
|  | <p>F</p>  <p>DGA861B</p>  | <p>G</p>  <p>DGA861A</p>  |                                                                                                              |
|  | <p>H</p>  <p>CRD3514A</p> | <p>K</p>  <p>CRD3512A</p> | <p>Q</p>  <p>CRD0314A</p> |

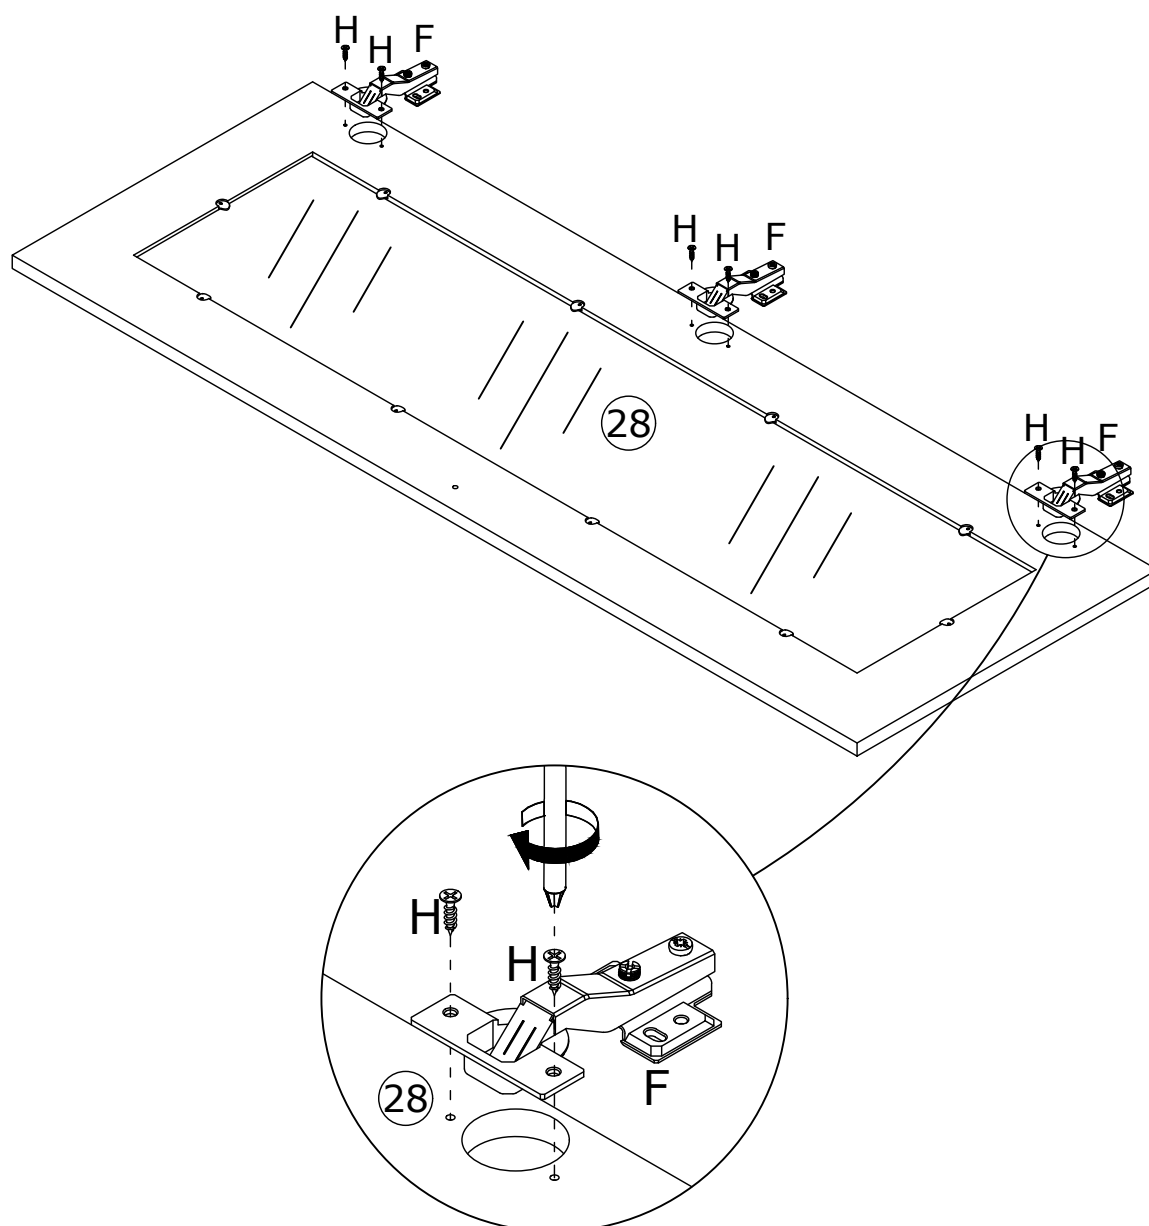 


40

H x 12



 CRD3514A



H



CRD3514A

K





CRD3512A

Q



CRD0314A

  Connect panel 15 to panel 3 by securing hinges using screw (H).

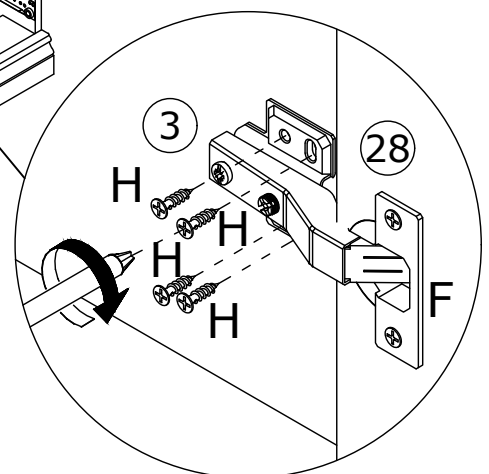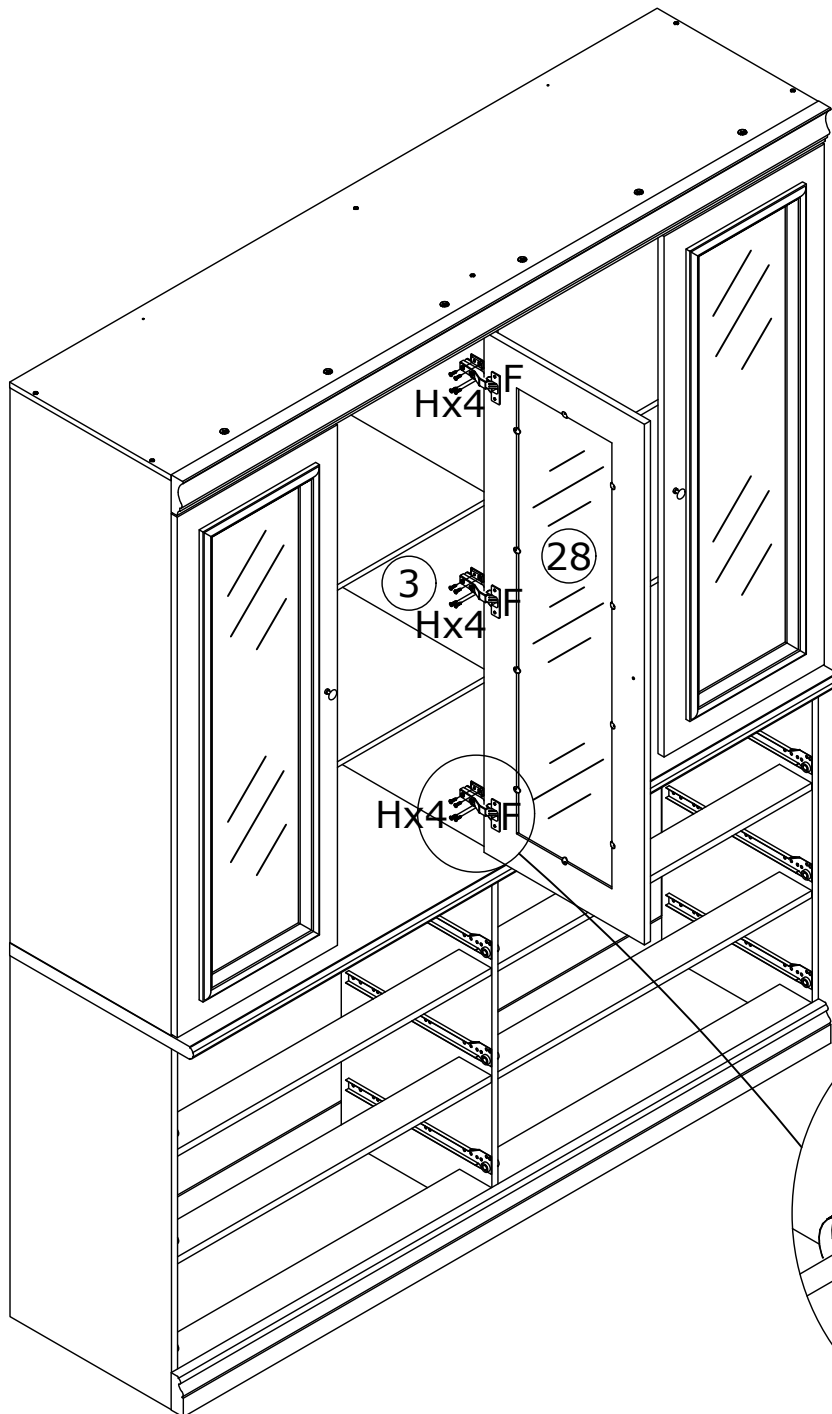


# 41


W x 1




 
X x 1









CRE0418A

 

  
Secure knob (W) to panel 28 using screw (X).

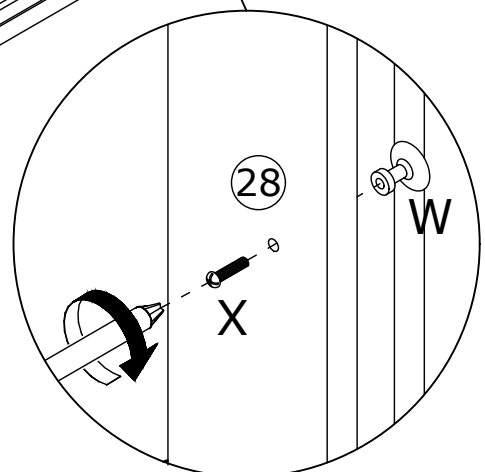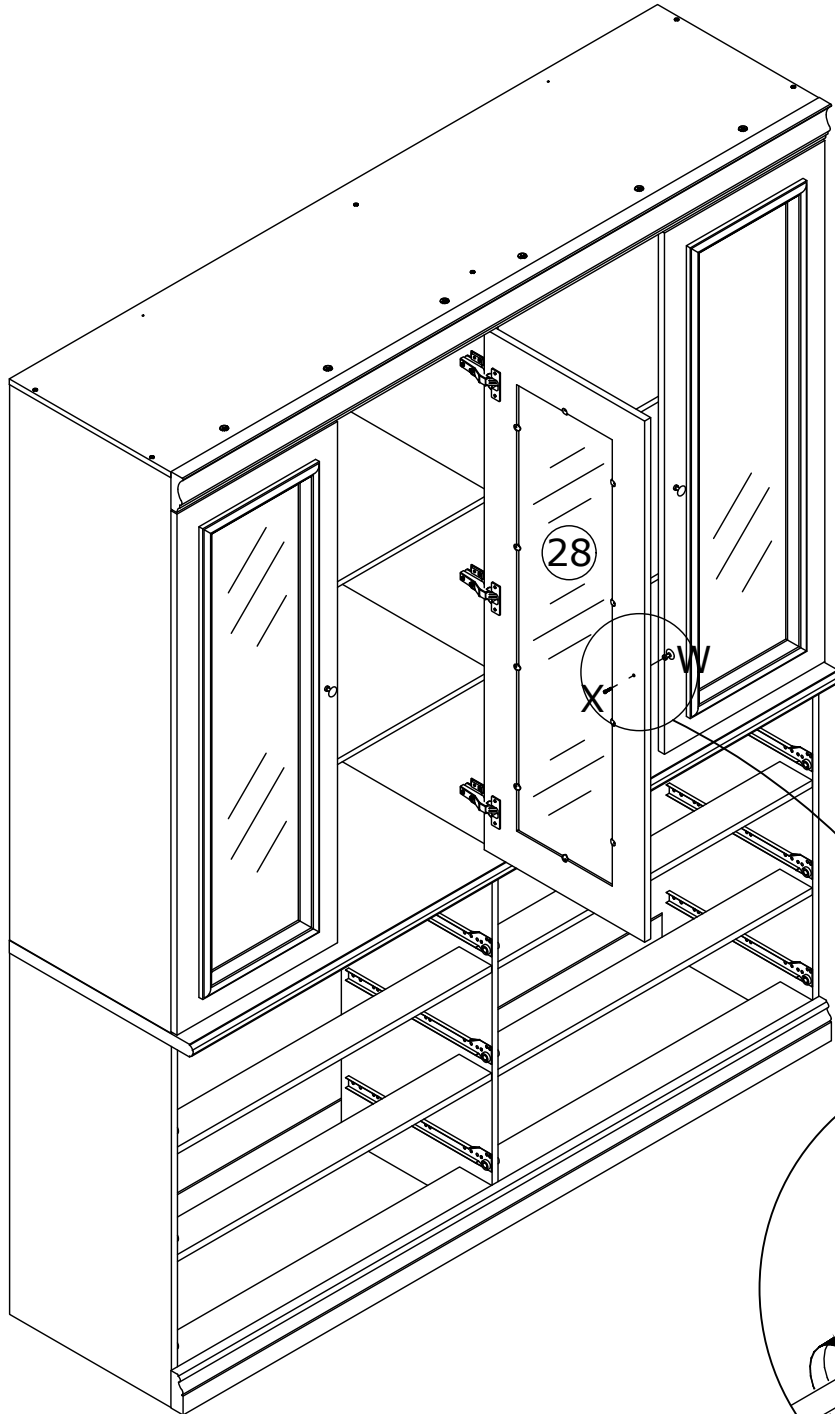

42

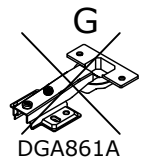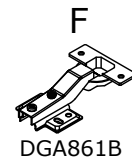      

 Secure hinge (F) to panel 29 using screw (H).

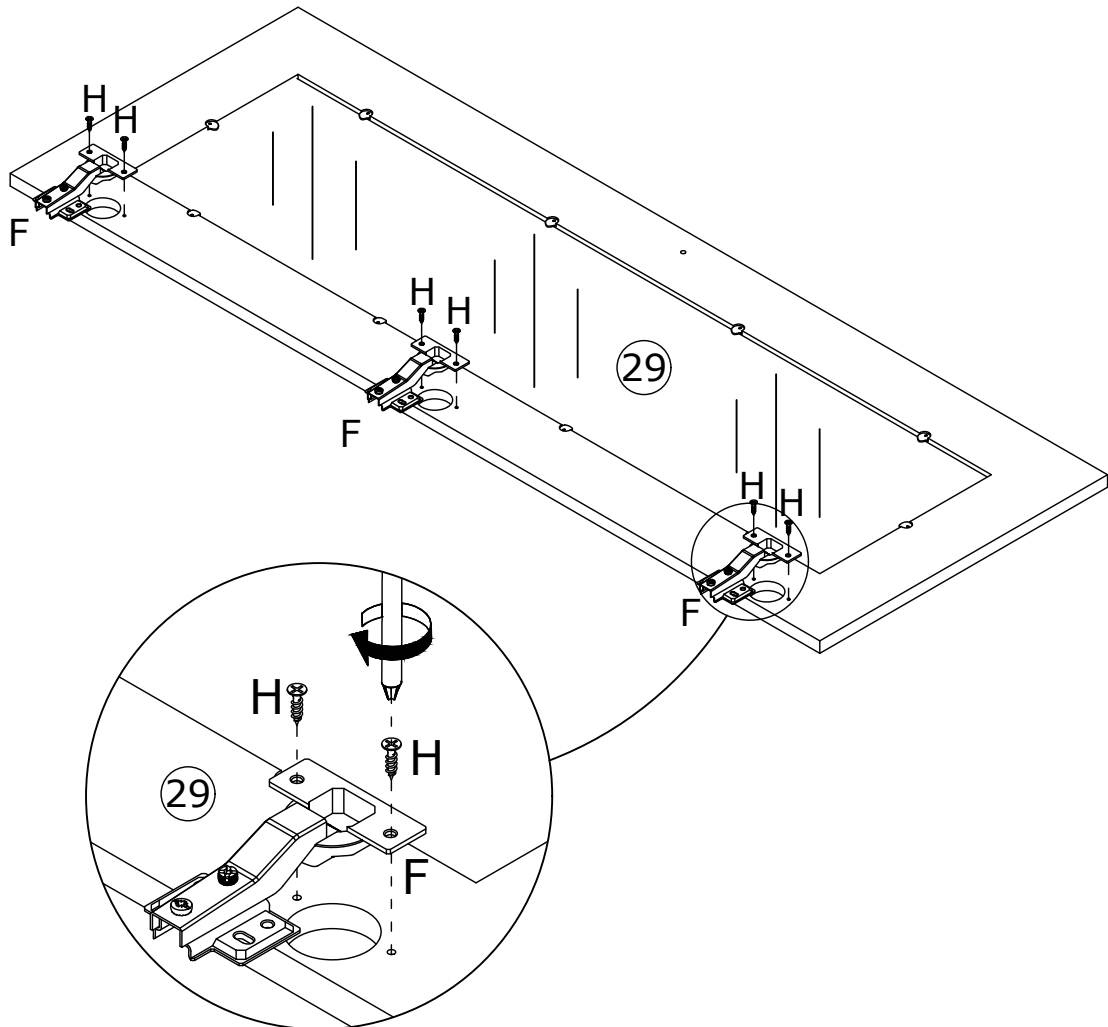


# 43

H x 12



 CRD3514A



H



CRD3514A

K





CRD3512A

Q



CRD0314A

  Connect panel 29 to panel 3 by securing hinges using screw (H).

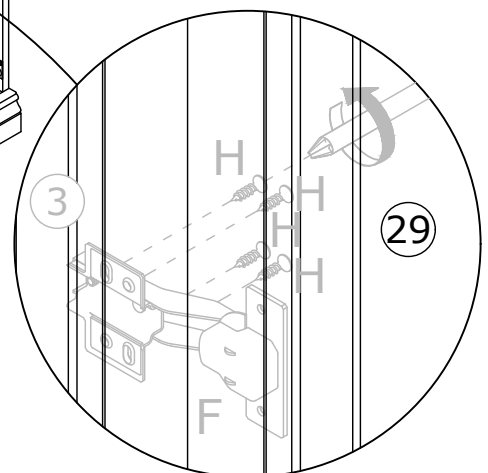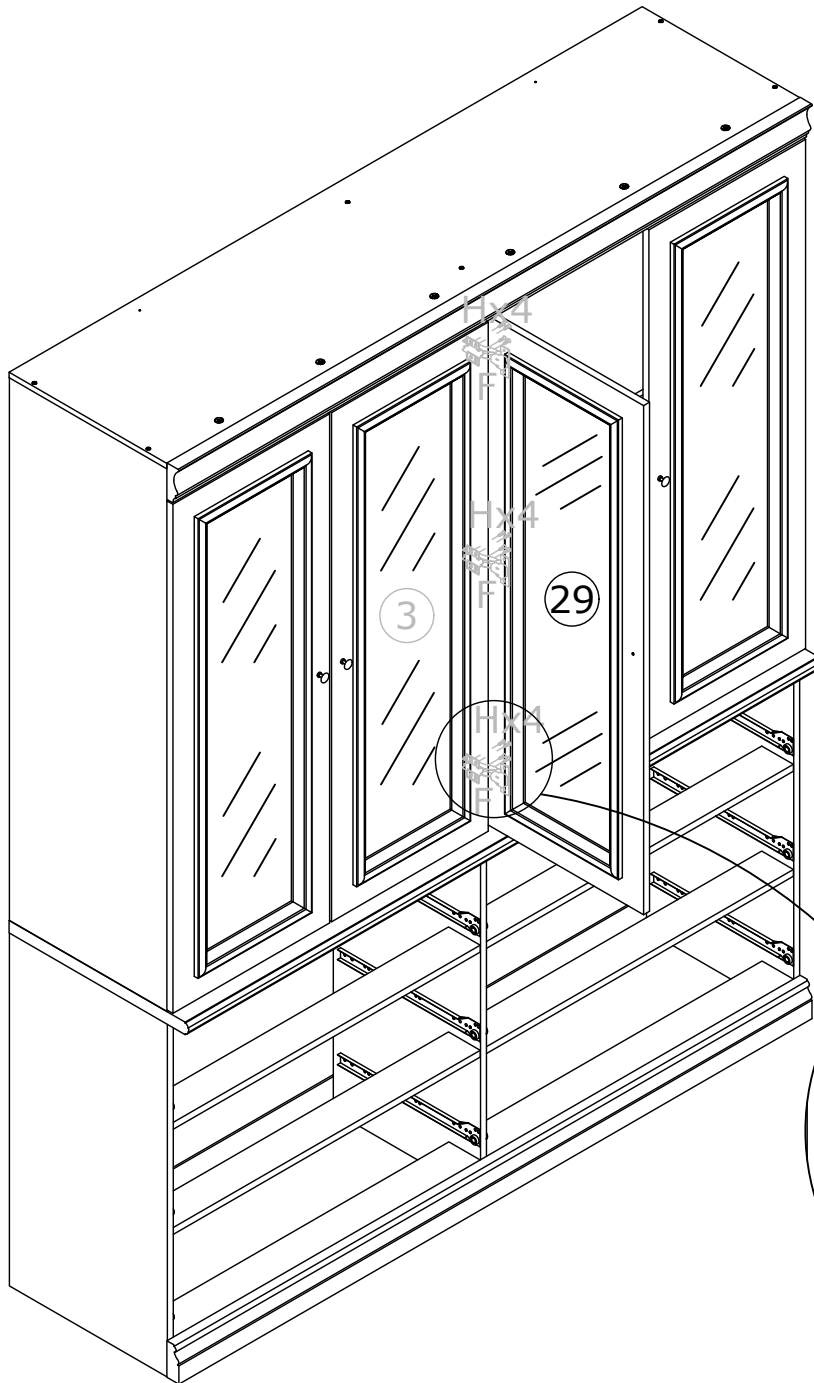


44


W x 1




 
X x 1



CRE0418A

 

  Secure knob (W) to panel 29 using screw (X).

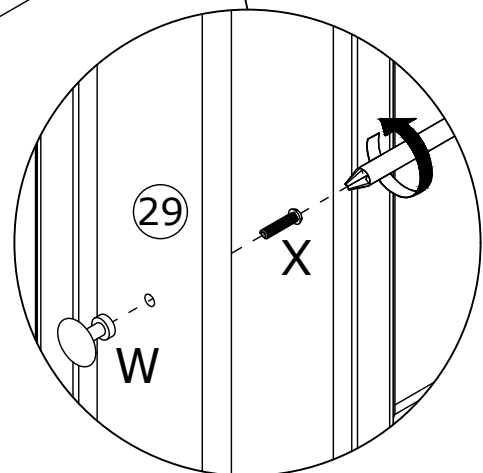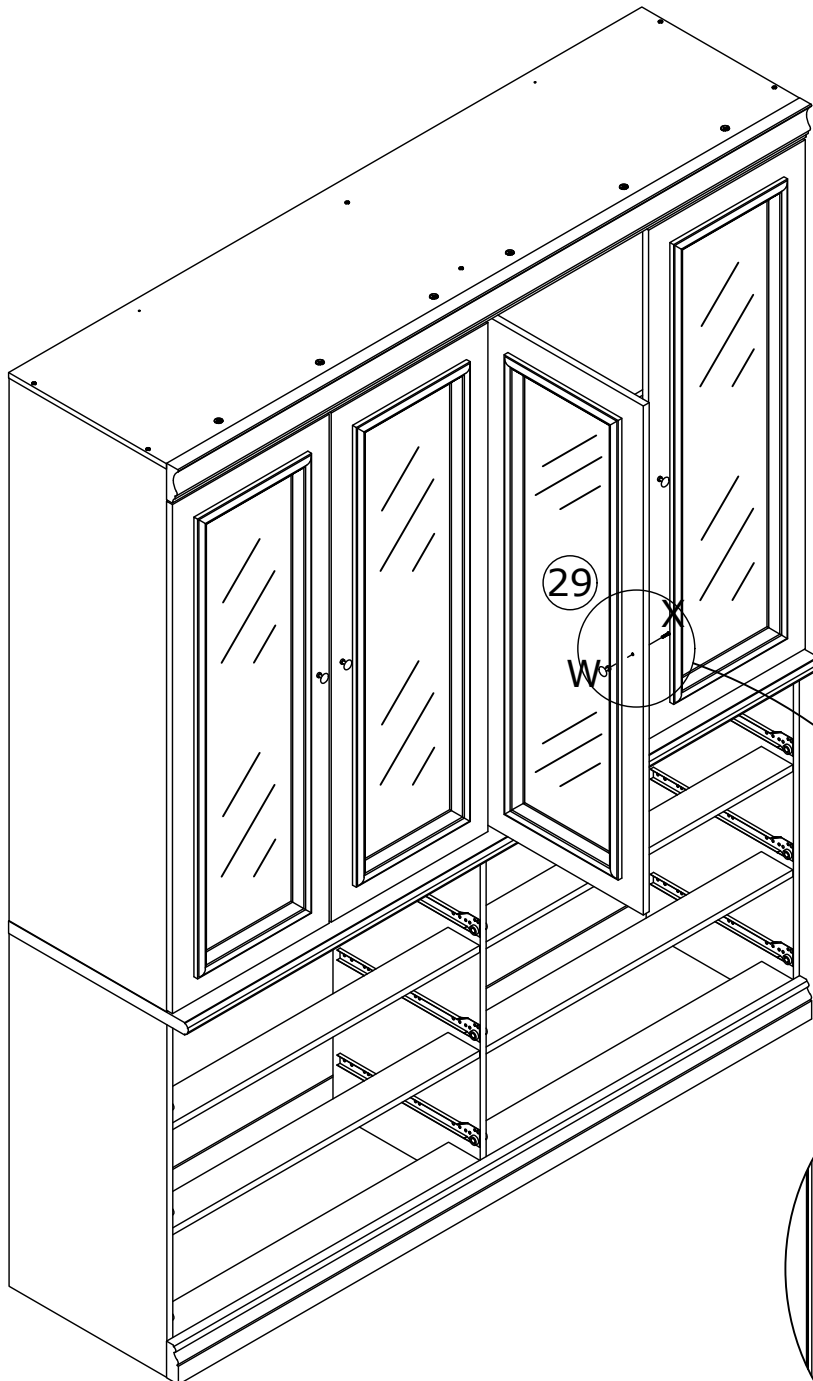

# 45


P x 48



Q x 48



 CRD0314A



Insert clip (P) into the back slots, then secure them with screw (Q).



H



CRD3514A

K






CRD3512A

Q



   CRD0314A

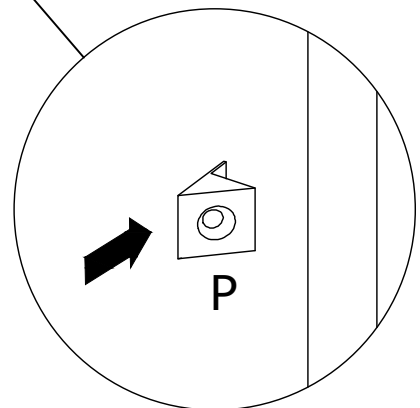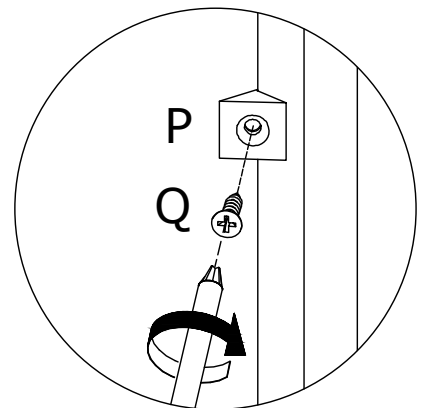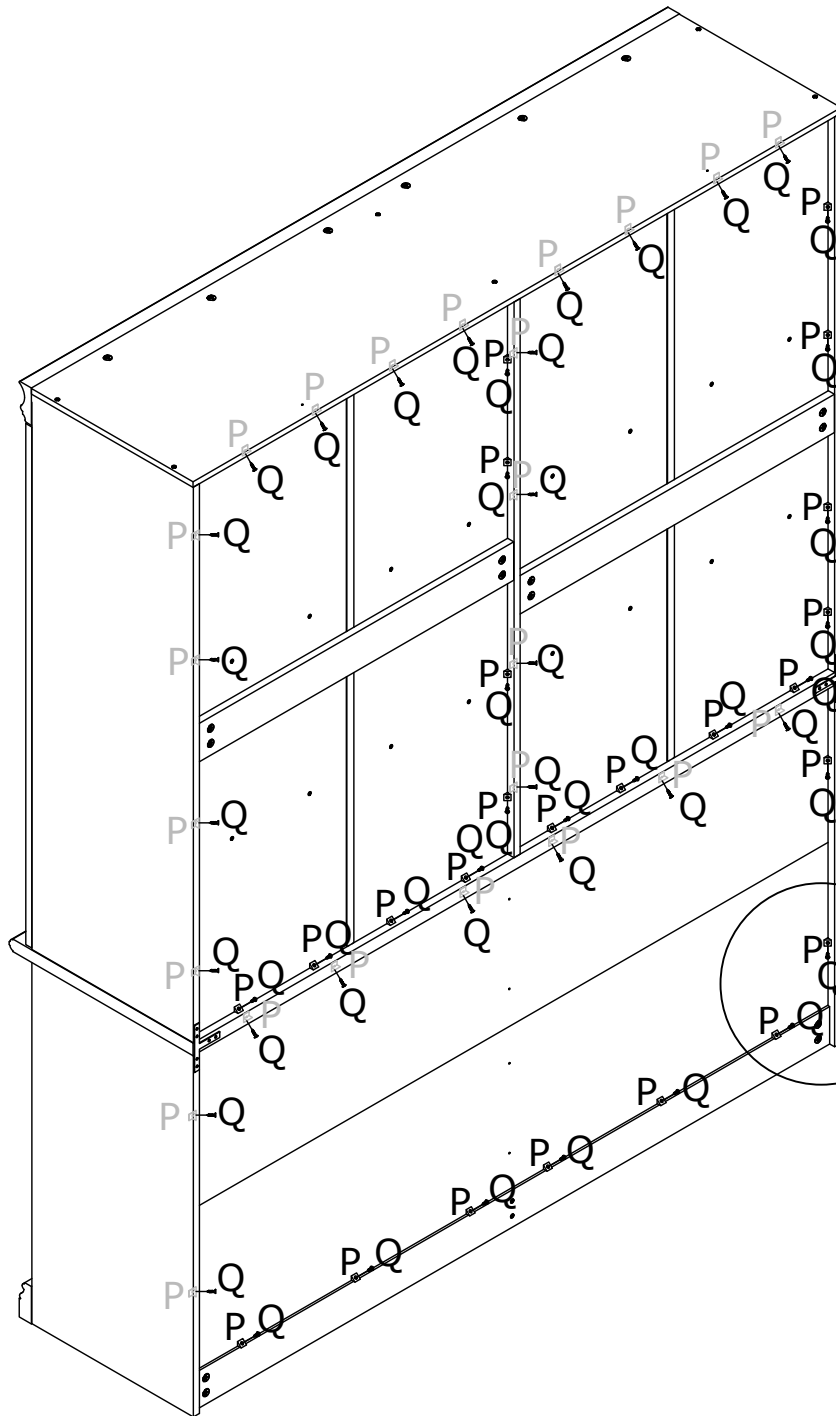



# 46

H x 2



CRD3514A

  L x 2



H



CRD3514A

K





CRD3512A

Q




  CRD0314A


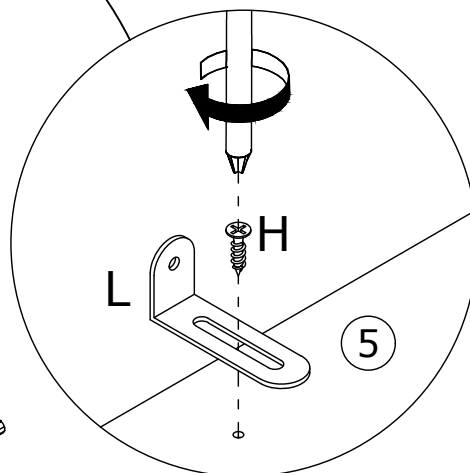
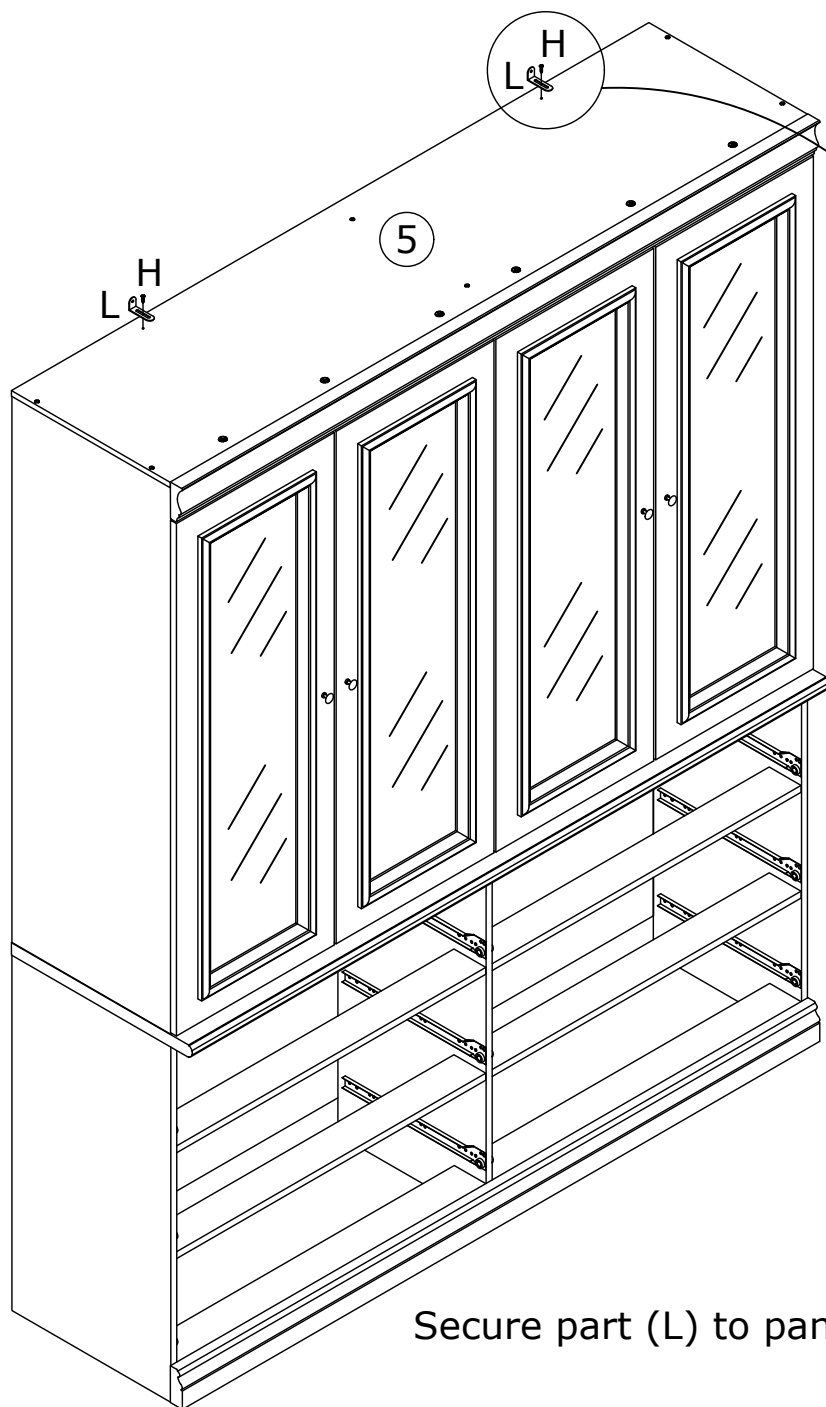


Secure part (L) to panel 5 using screw (H).

 47

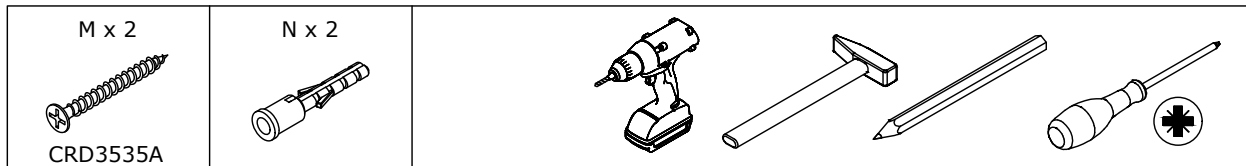


Install the anti-tip device.

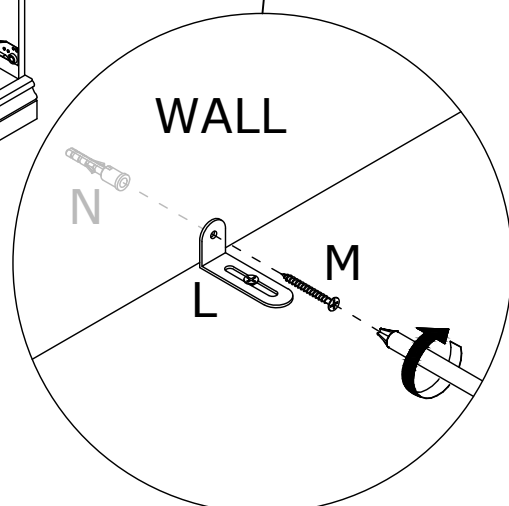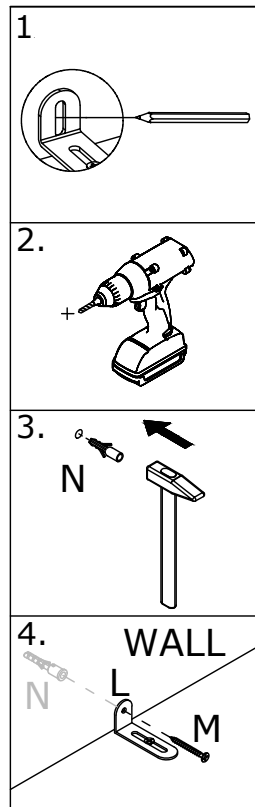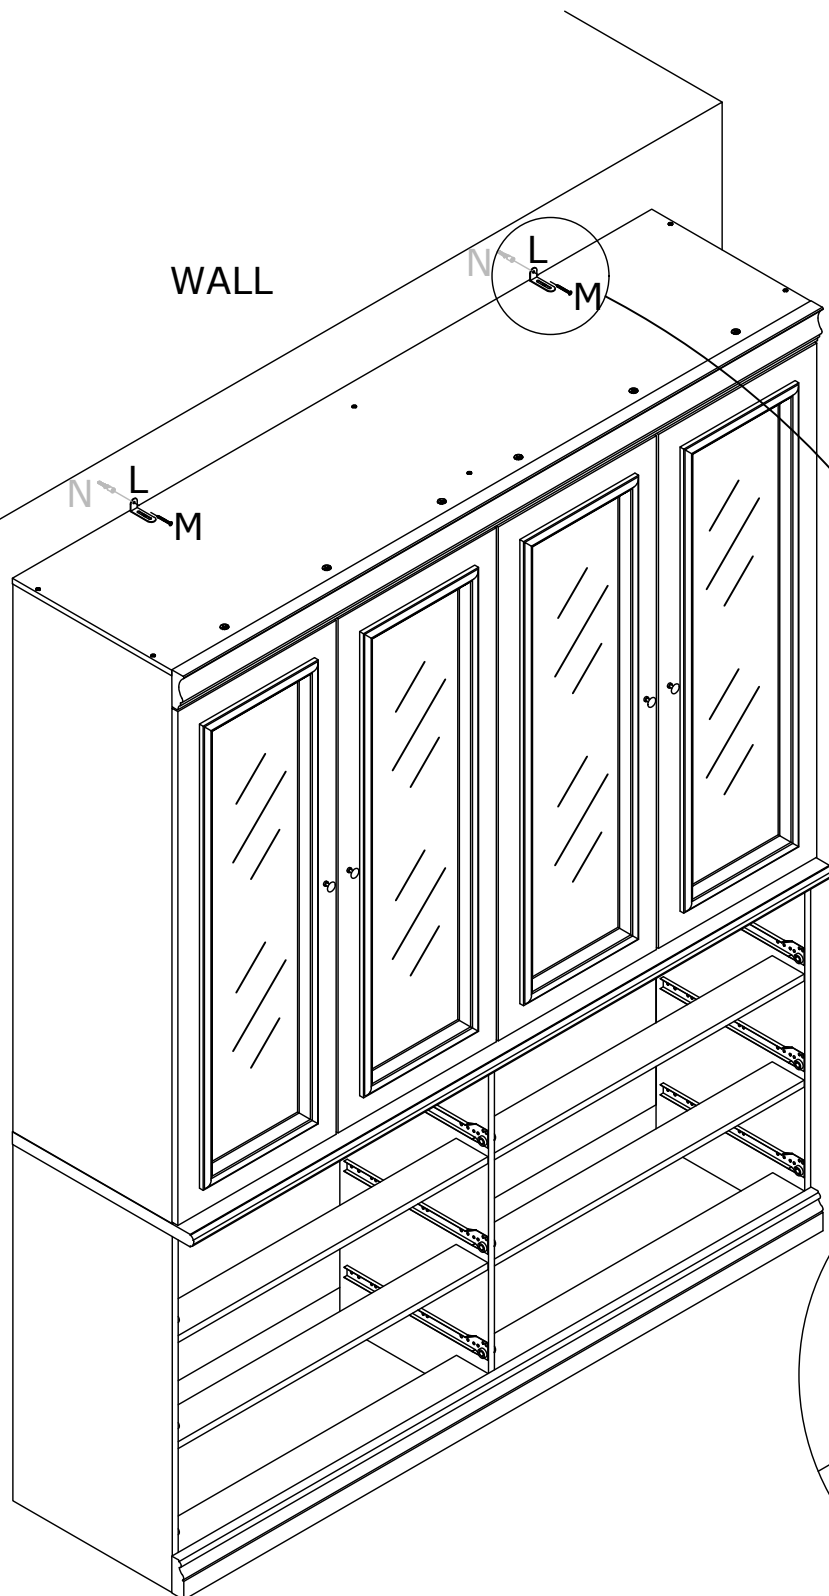   


# 48

 A x 30





CRA0635B

 C x 30



  First, insert plug(C) to panels 18 and 19,  
then screw the self-tapping screw (A)  
into.


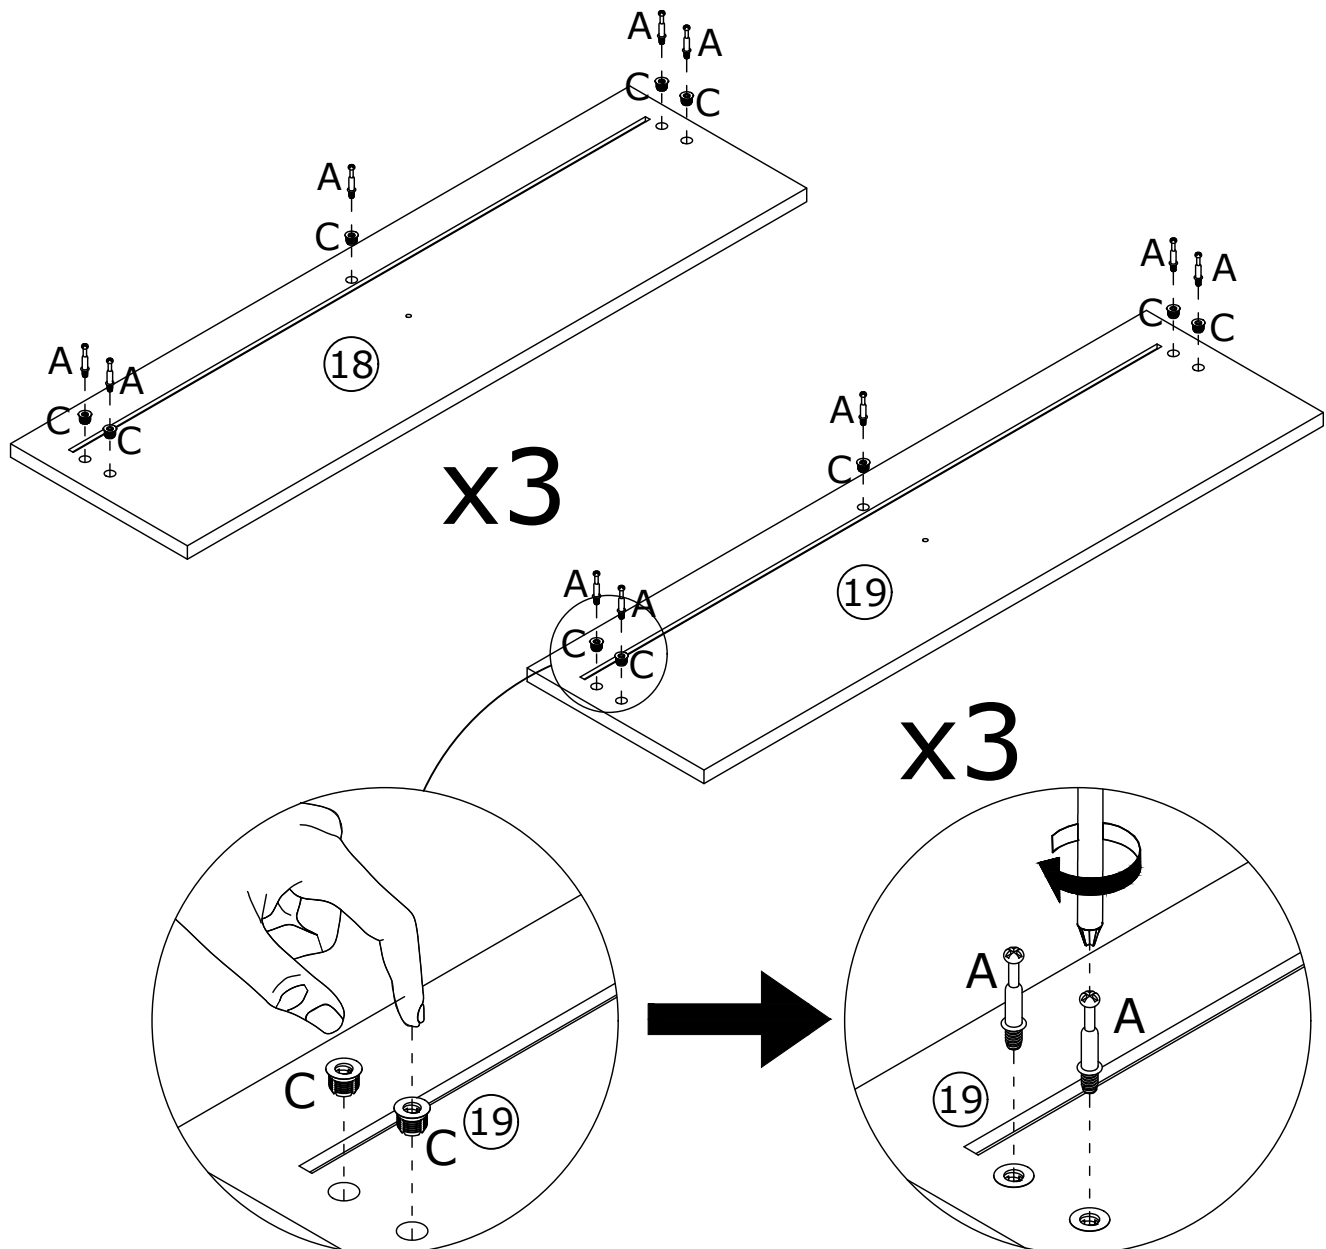
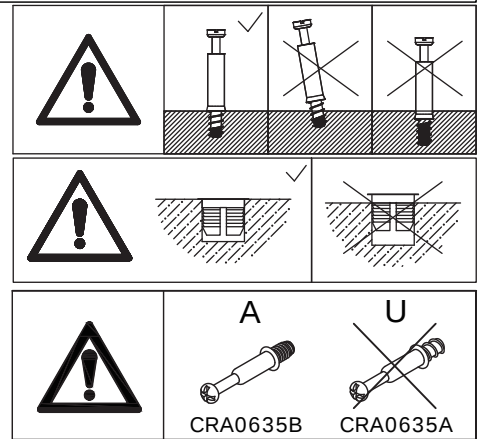


# 49


B x 30



   CRB1595A





 Connect panels 21, 22, and 26 to panels 18 and 19 respectively, then tighten by turning eccentric wheel (B) clockwise.

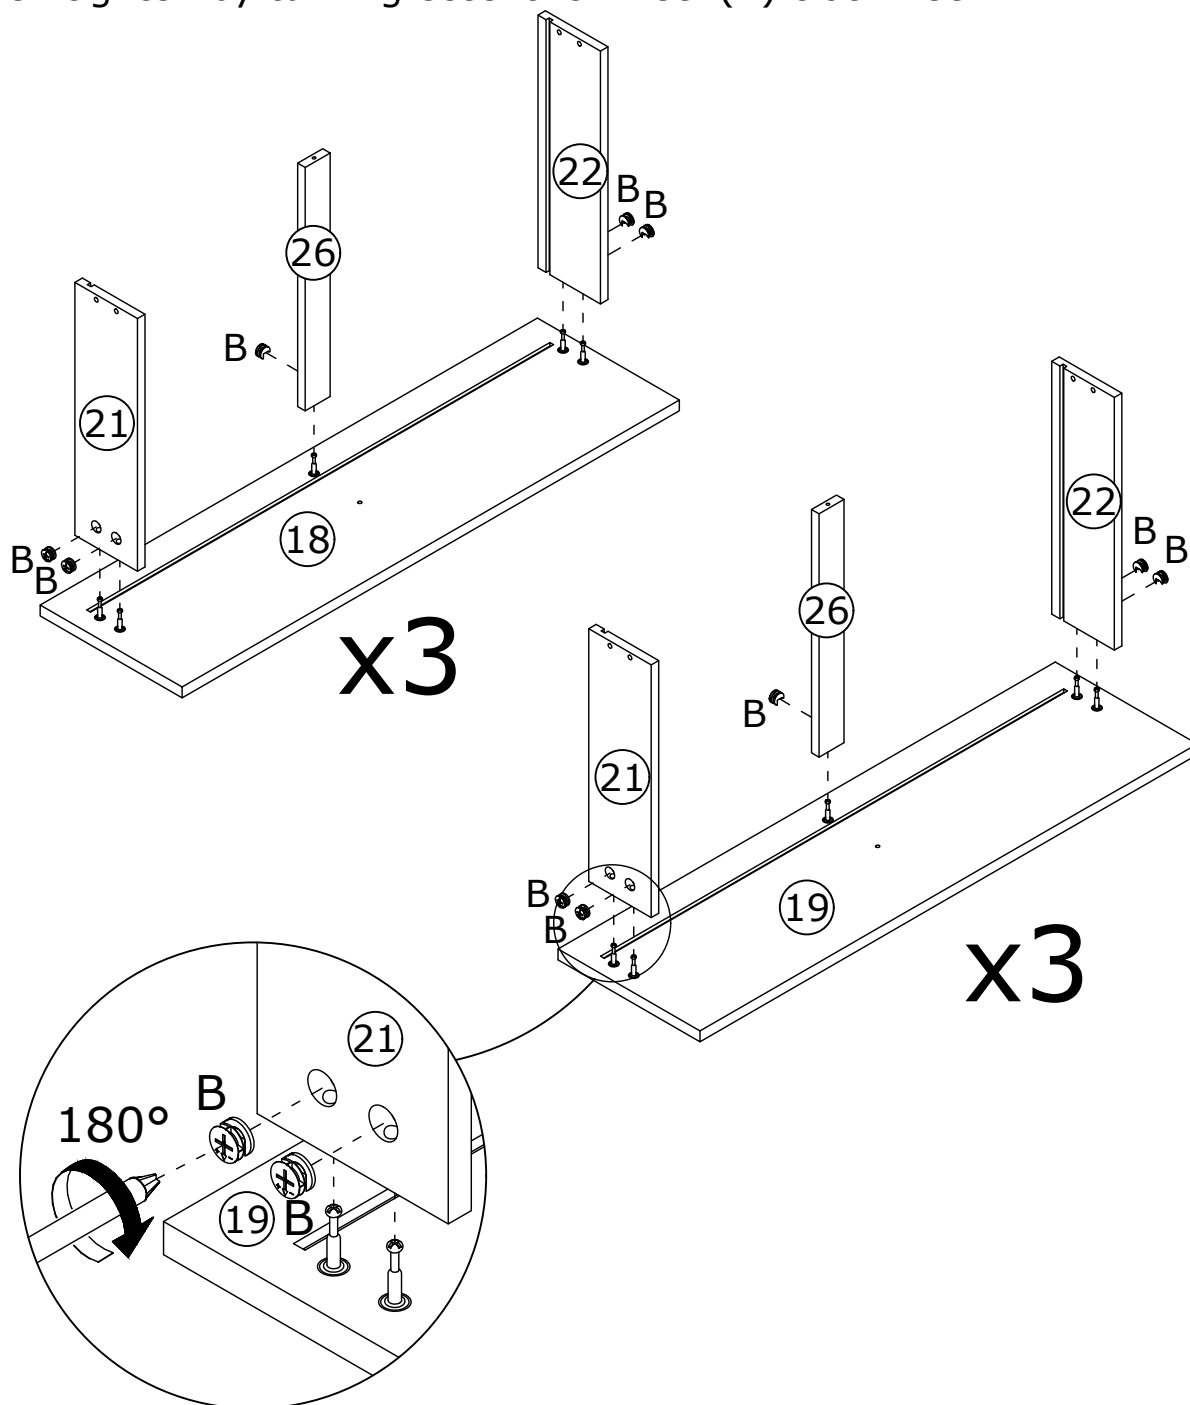


50

  Insert panel 25 along the available slots.

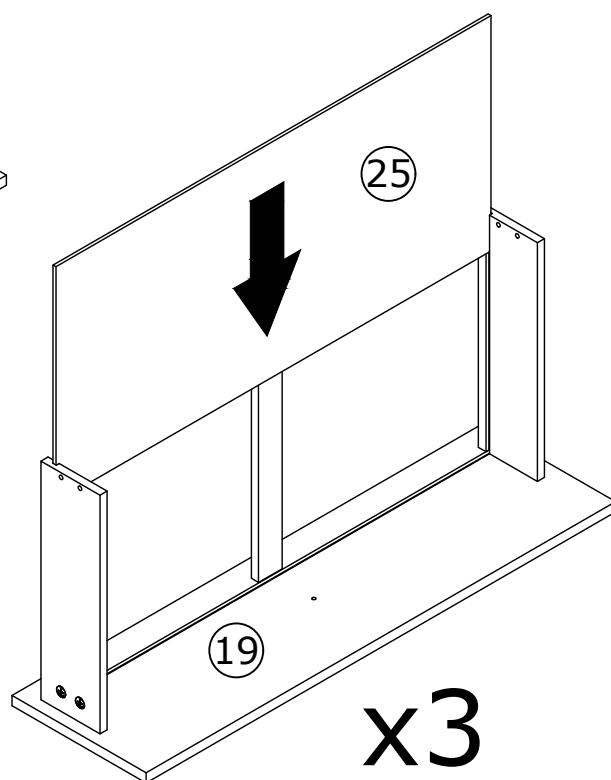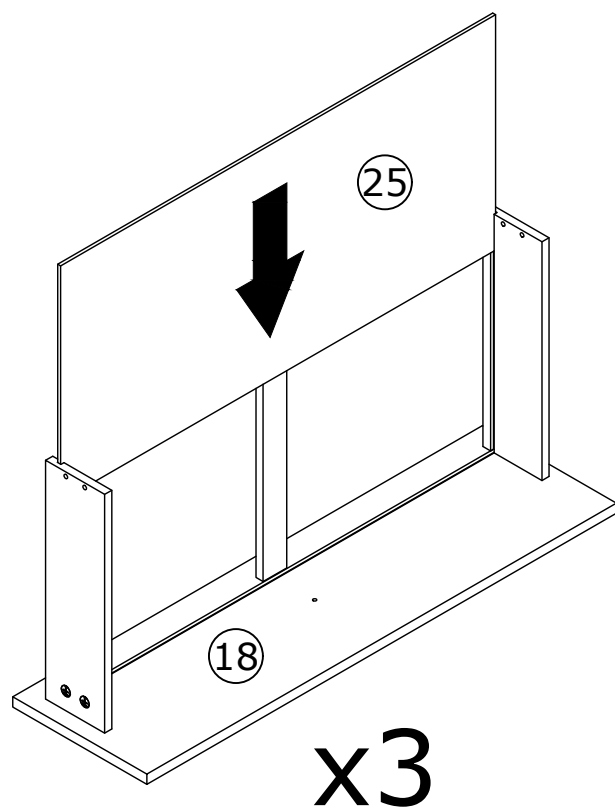


# 51

 
E x 30





CRC0540A

 




 
Secure panels 21, 22, and 26 to panel 23 using screw (E).

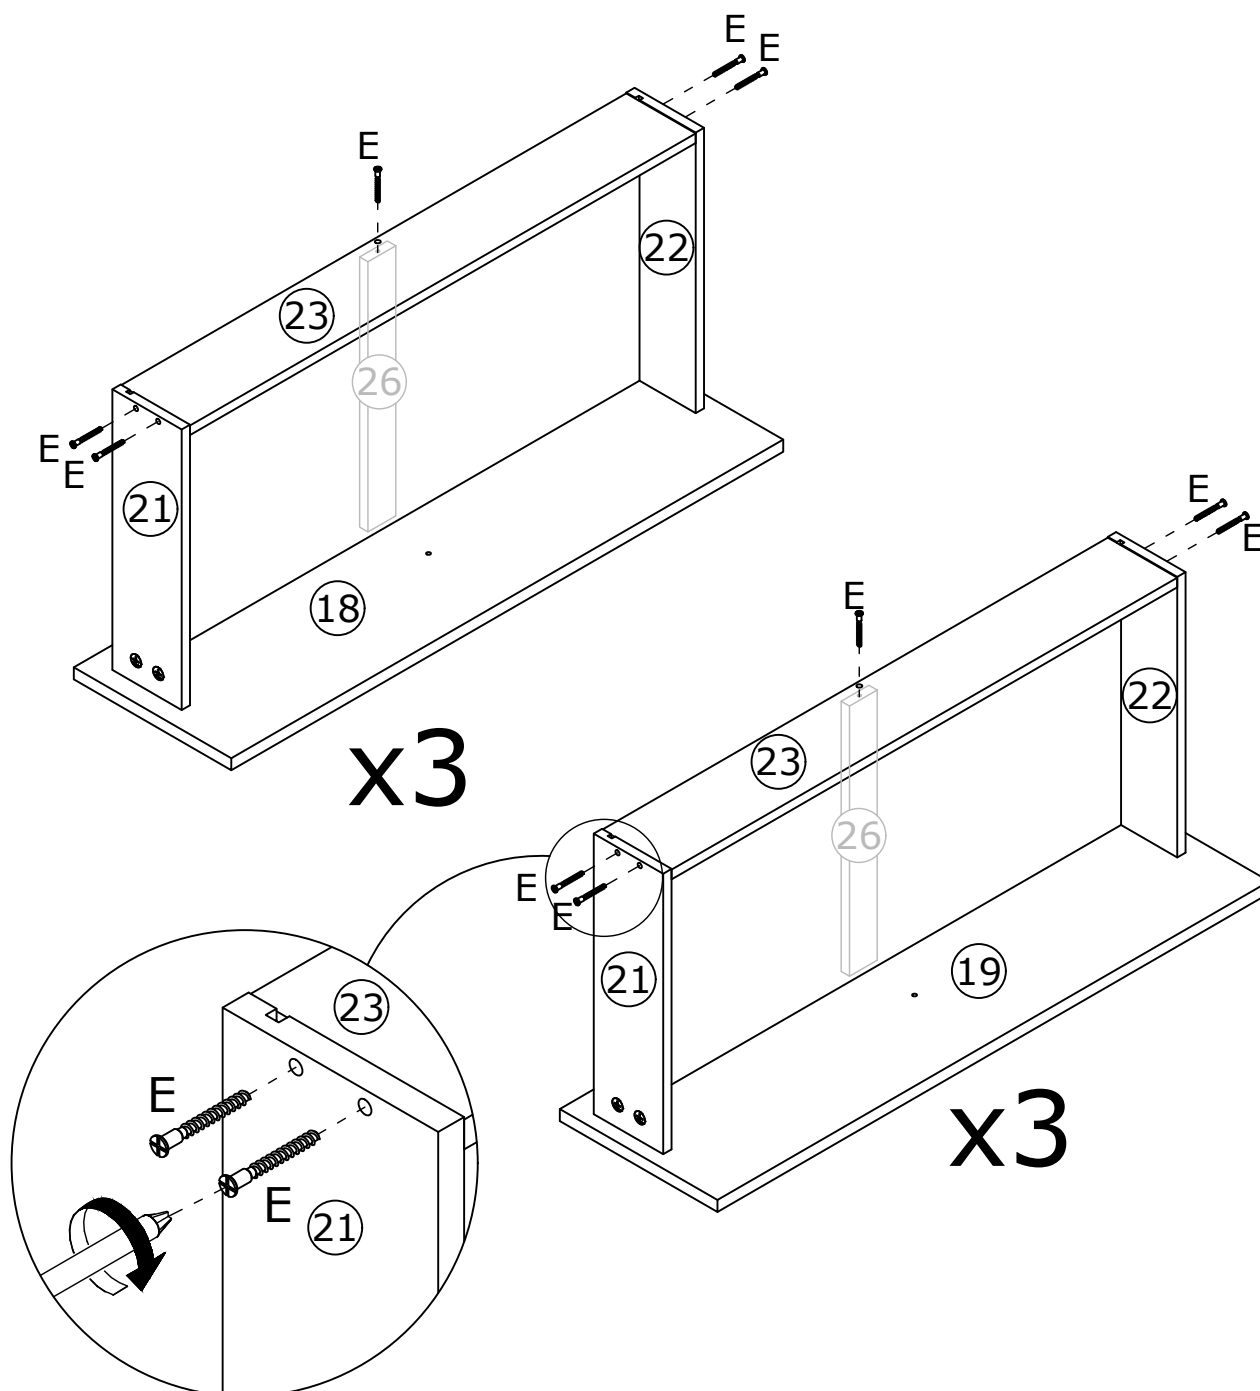


# 52

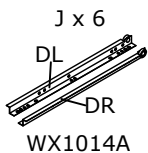  

    
Secure slide rail (J-DL) and (J-DR) to panels 21 and 22 using screw (K).

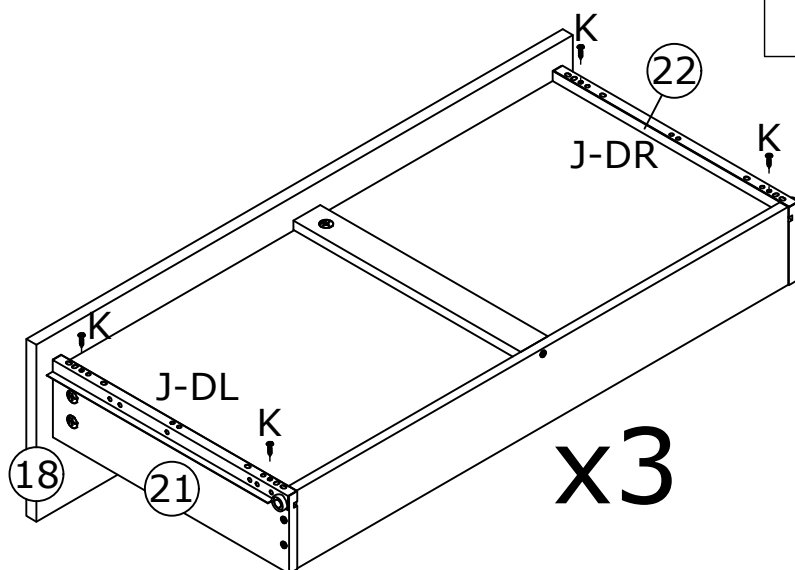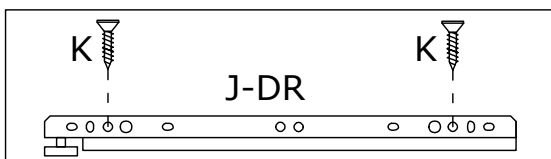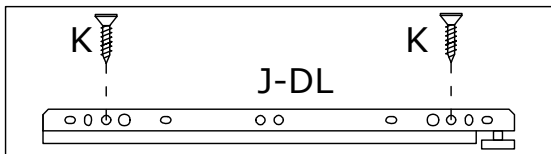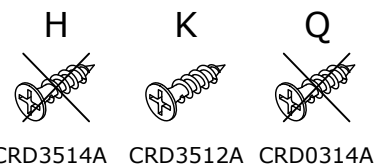

x3

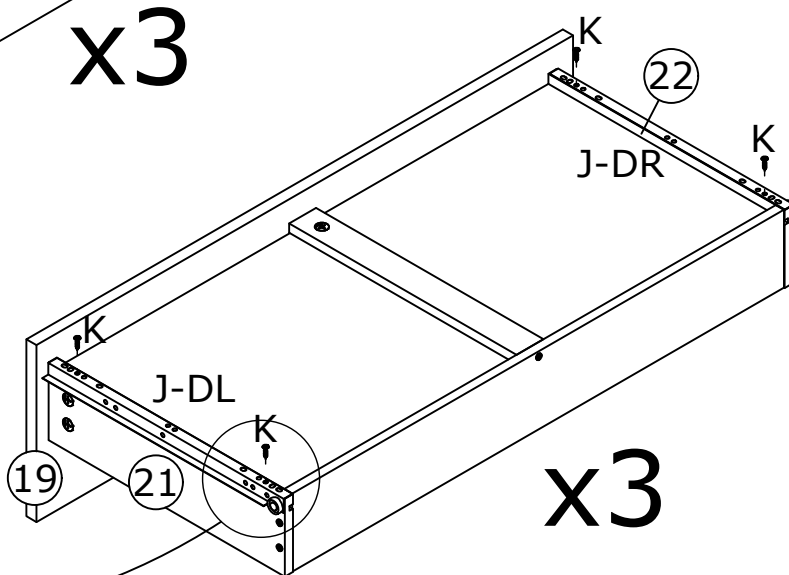 


x3

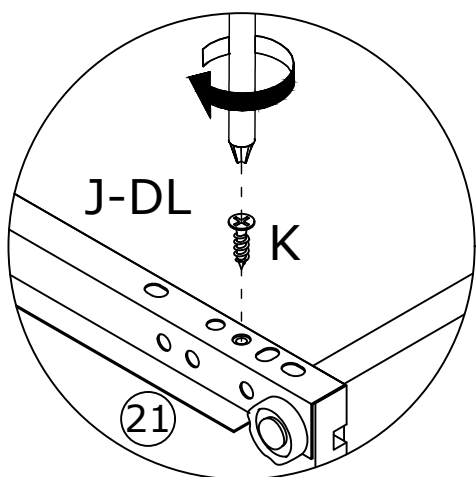 


53




 Secure knob (W) to panels 18 and 19 using screw (X).

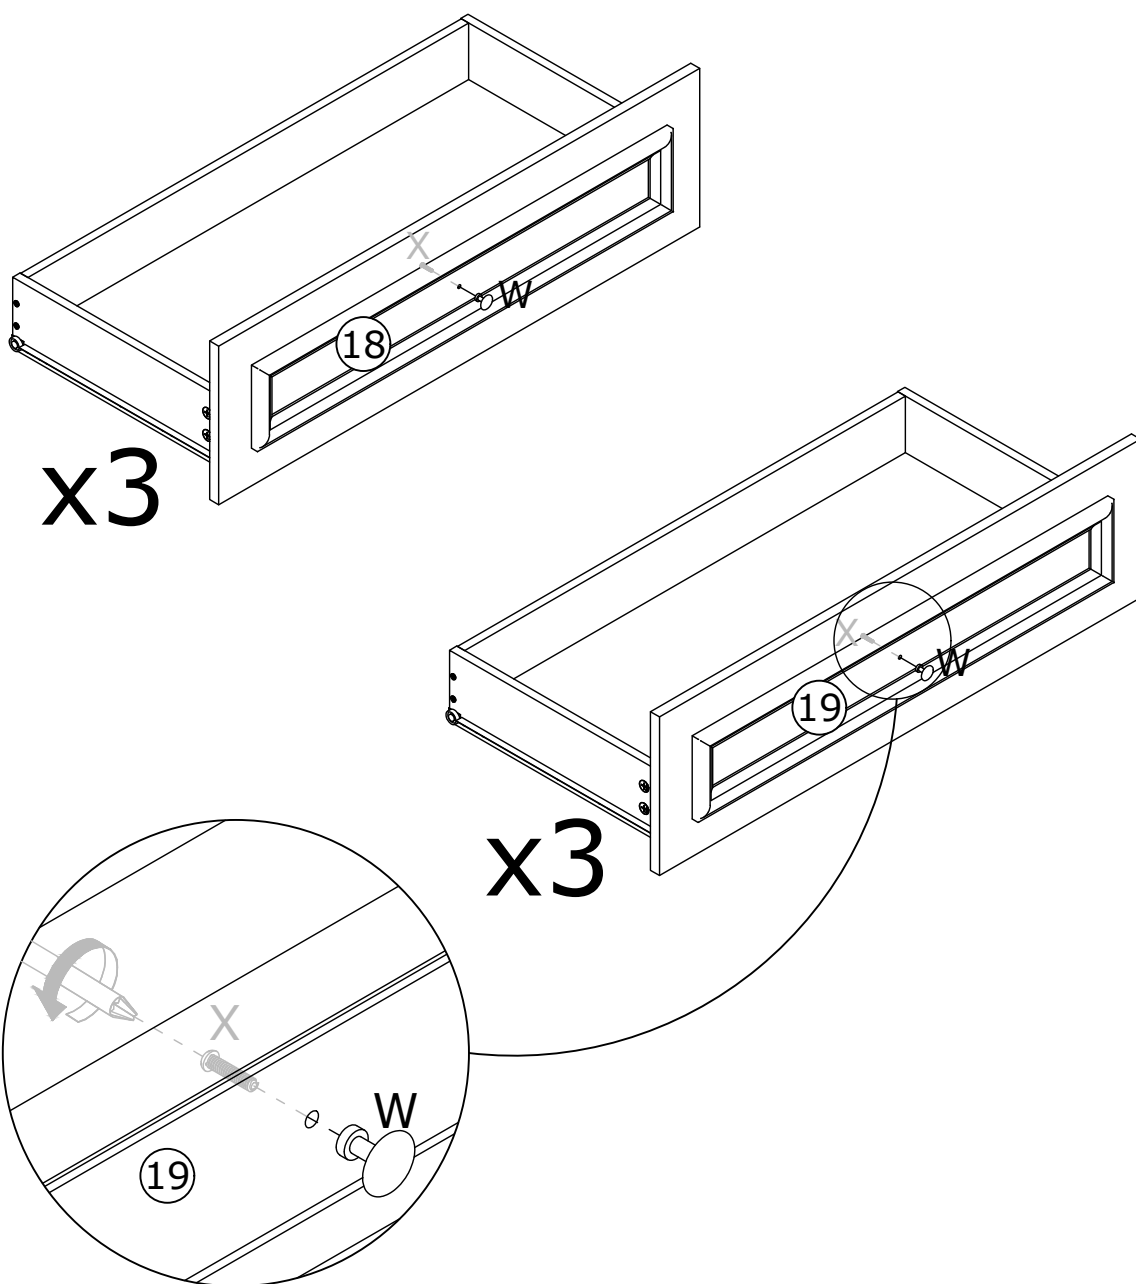

Insert the drawers to the main body.


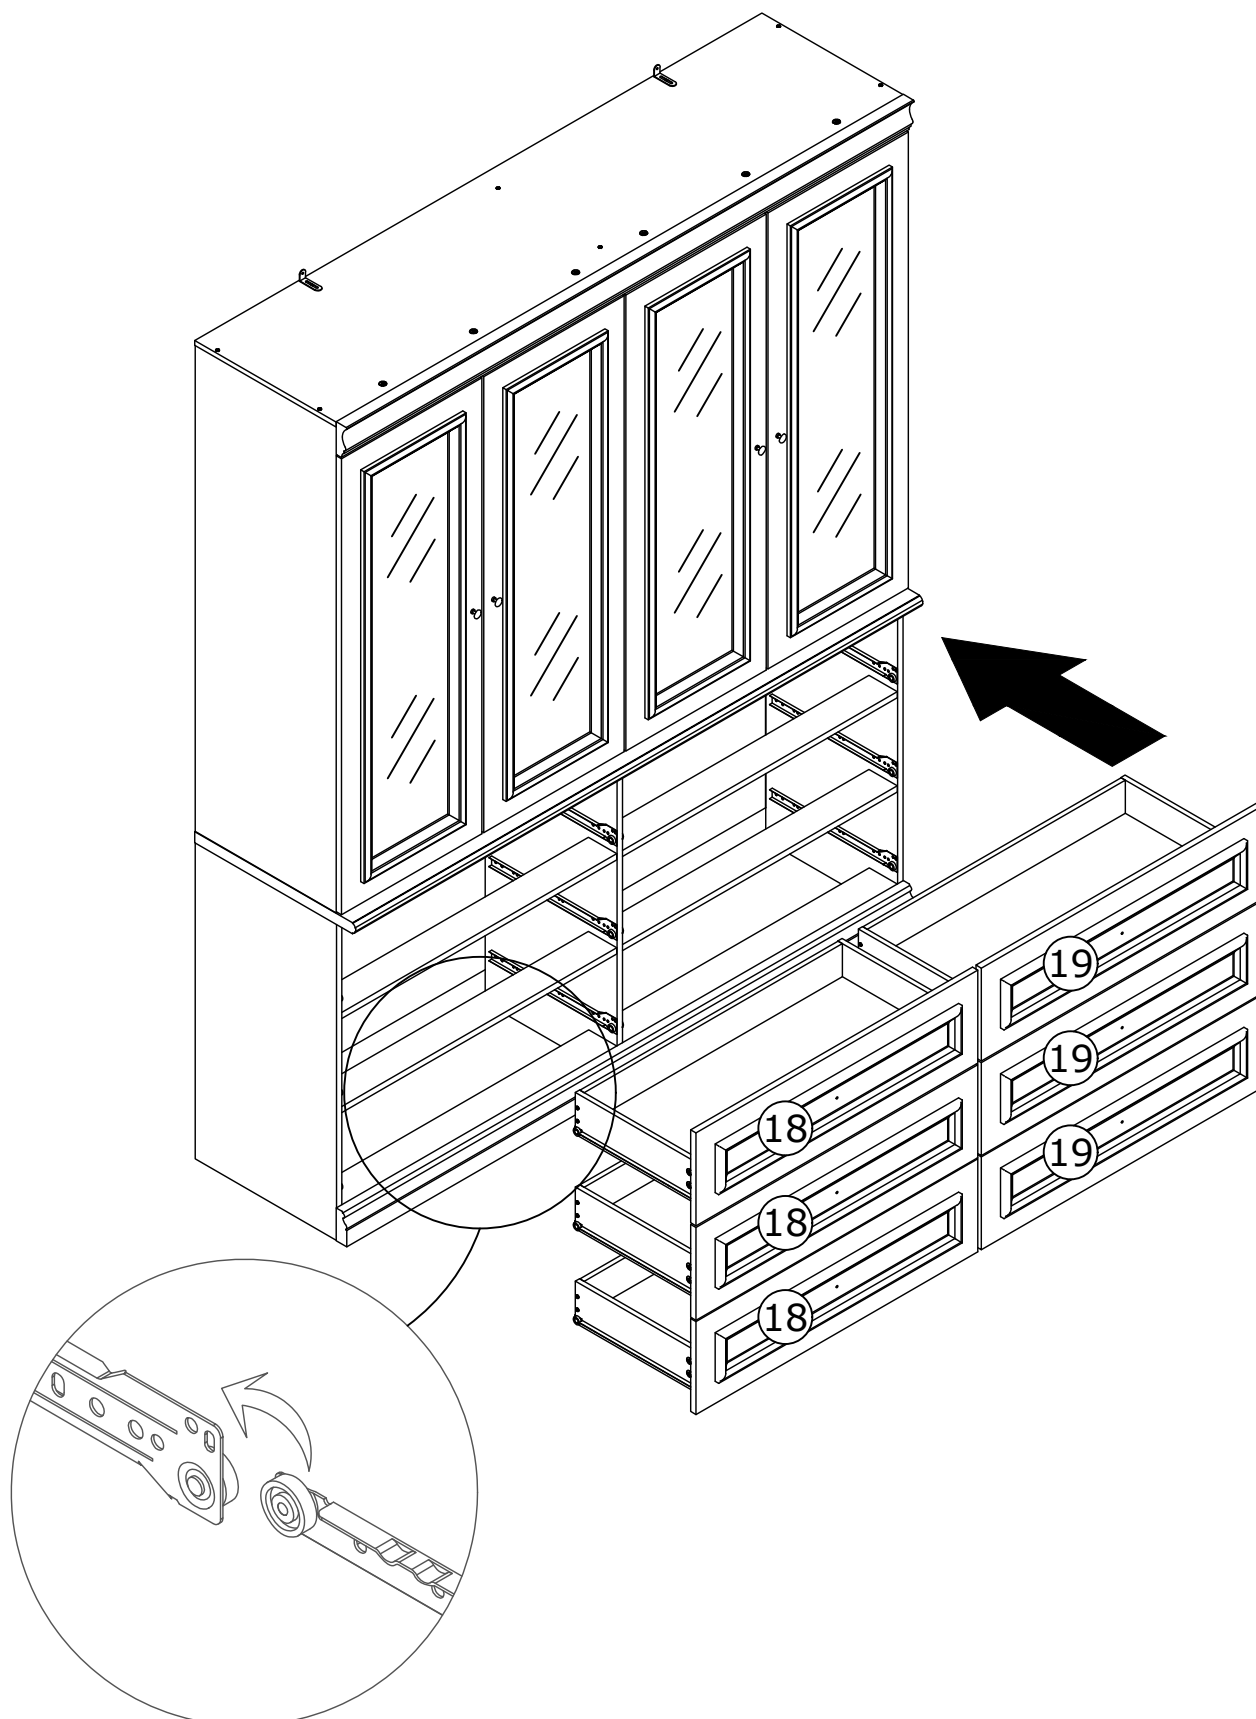 


 


If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

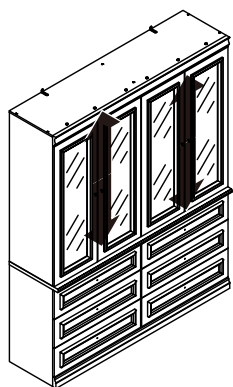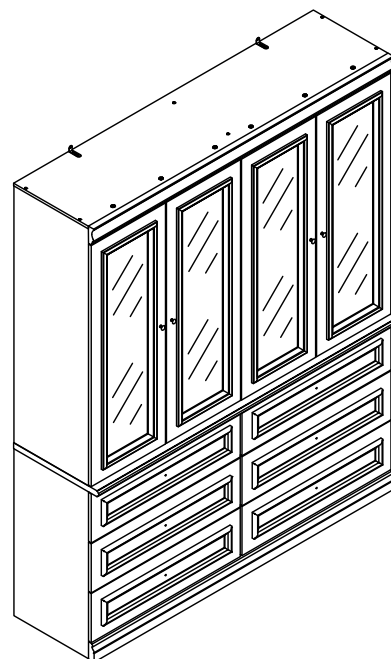



I

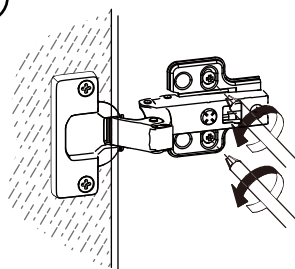 


II

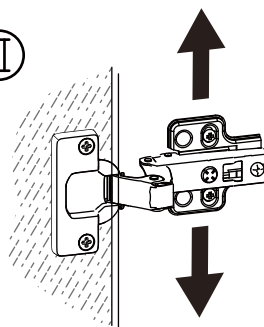 


III

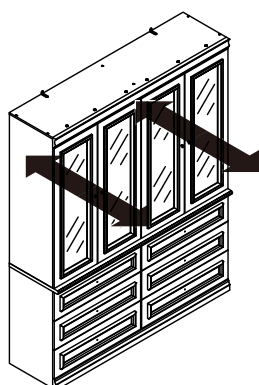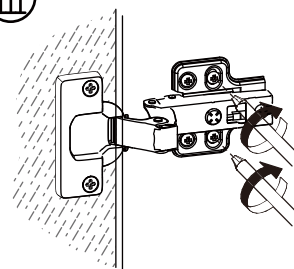  



I

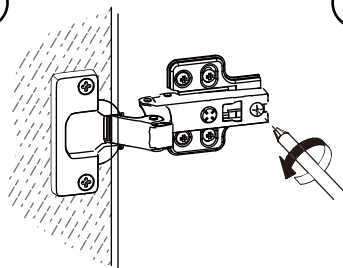 


II

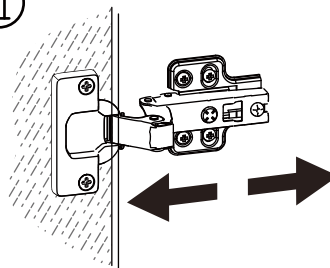 


III

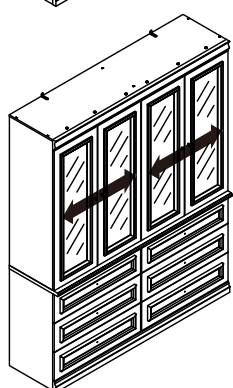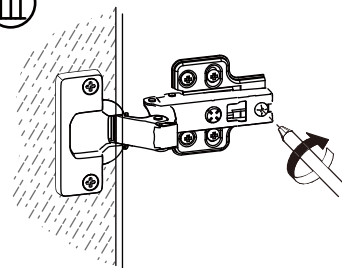  

I

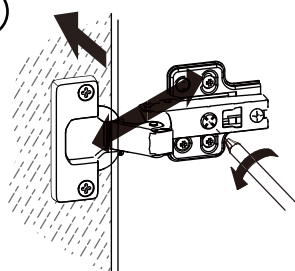 

II

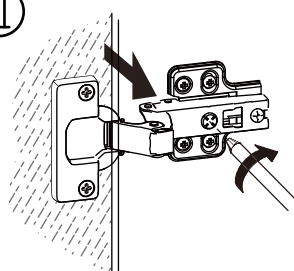 

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

### AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068