 


INSTRUCTION MANUAL

MASSAGR CHAIR

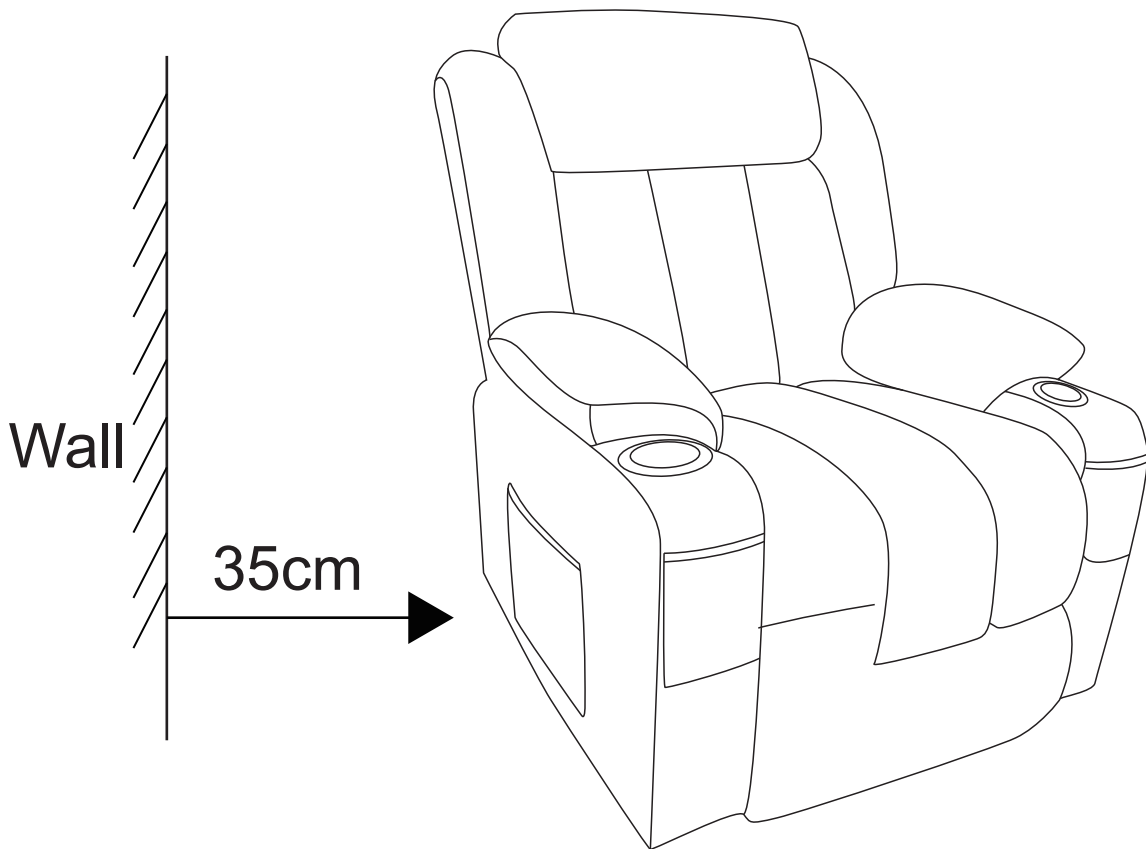

- Please position it at least 35 cm away from the wall to ensure sufficient space for reclining angle adjustments.

✉ Customer Service Email: **homelifeservice@hotmail.com**

- ⓘ Please don't worry about the after-sale service, you can contact us at any time for any issue. You will receive multiple boxes, parcels usually arrive on the same day. If not, it will arrive within 1-2 days.

Package list

Note: The Recliner Chair comes with multiple boxes
Please make sure all parts are included.
If not, email us: homelifeservice@hotmail.com

Part	Item	Qty
A	 Chair base	1PC
B	 Left and right armrest	Left: 1 Right: 1
C	 Middle backrest	1PC
D	 Left and right backrest	Left: 1 Right: 1
E	 Power cord-1	1PC
F	 Power cord-2	1PC
G	 Massage remote control	1PC
H	 Recline remote control	1PC

After unpacking, if you do not find a **small box of accessories**, please check the box and the bottom of the sofa.

If not, please contact us ASAP. Thank you!

Before Assembly

Note: Due to large size, The Recliner Chair comes with multiple boxes, another parcel arrives on the same day. If not, it will arrive within 1-2 days. Please wait patiently or contact us at any time. email us: homelifeservice@hotmail.com

1. Keep this instruction manual for future reference
2. It is important to only use this product on a firm, level surface
3. Keep all small parts out of reach of children and animals
4. Make sure you have all the components, as listed in this instruction manual, if not, email us: homelifeservice@hotmail.com
5. Remove all packaging and place the components on top of the empty box or on a clean floor to prevent them from becoming scratched
6. Make sure you have the right tools and a clean, dry and spacious area for assembly
7. Assemble on a flat/firm surface to avoid damage.
8. Assemble in the room you intend to use the chair or as close as possible to that room
9. Carefully follow each assembly step in the correct order to prevent incorrect assembly
10. Before use, ensure that the product is fully assembled and only then should the screws and bolts be fully tightened but not over tightened.
11. Do not discard any packaging until the product is fully assembled. This will avoid disposing of any parts
12. Do not use or attempt to assemble this product if parts are missing, damaged or worn. Please email us: homelifeservice@hotmail.com

Important Safety Instructions

If you have any concerns regarding your health, consult your doctor before using this product. Individuals with pacemakers should not use this product.

If you experience pain in a muscle or joint for a prolonged period of time. Discontinue use and consult your doctor.

Persistent pain could be a symptom of a more serious condition.

When using an electrical appliance, basic precautions should always be followed, including the following:

1. This product is for use on a 12V circuit. Make sure that the product is connected to an outlet having the same configuration as the plug.
2. Always unplug the massager from the power source after use, and before cleaning.
3. Do not reach for massager if it has fallen into water. Unplug immediately.
4. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.
5. Do not use outdoors.
6. Do not carry this appliance by supplied cord as a handle.
7. Keep the cord away from heated surfaces.
8. Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
9. This unit is not a toy. Children should not use it or play with it.
10. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Do not use near eyes or other highly sensitive areas.
12. Keep cord away from heated surfaces.
13. Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.

To store

1. Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit.
2. Do not hang the unit by power cord.

To clean

1. Insure the unit is unplugged from the power source, and allow to cool before cleaning.
2. Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
3. Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 120 °C to clean the unit.
4. To clean the unit, make sure the massager is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.


Product Assembly

Step 1




For easier and better assembly, 2 or more adults are required.

Place the part B armrest onto part A seat and insert the two metal pegs on the seat into the clips on the backrest with a click.

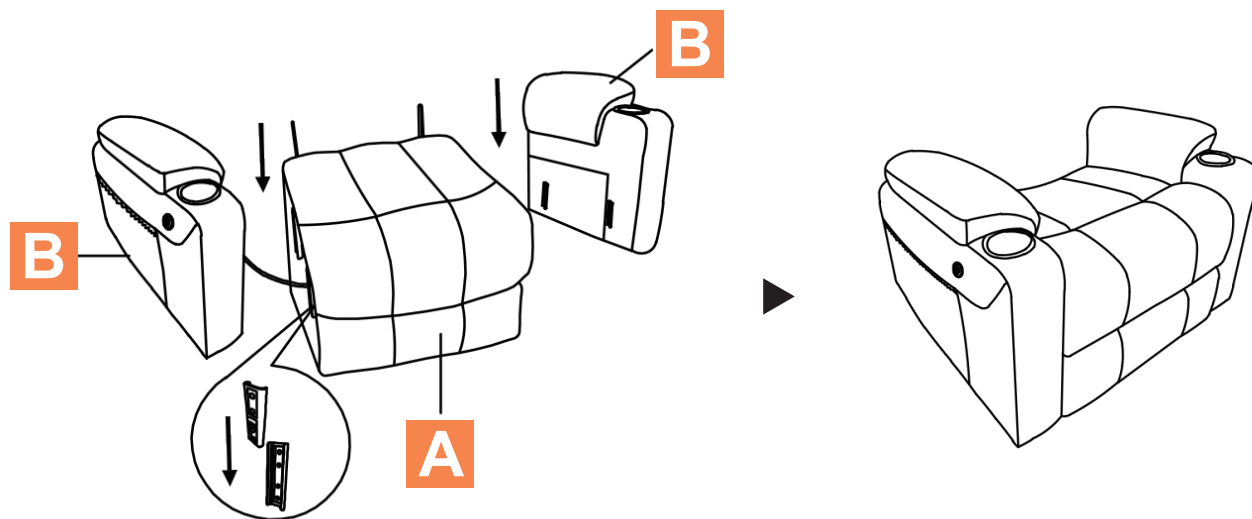


Step 2

Place the part C backrest onto part A seat and insert the two metal pegs on the seat into the clips on the backrest with a click.

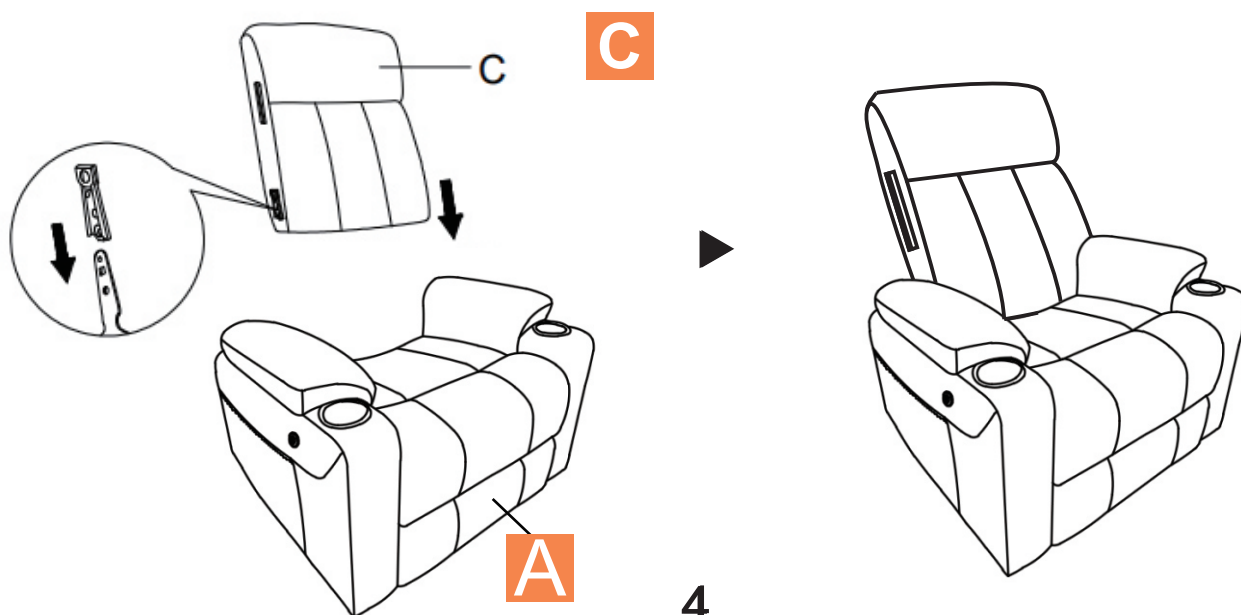

Step 3

Place the part D backrest onto part A seat and insert the two metal pegs on the seat into the clips on the backrest with a click.

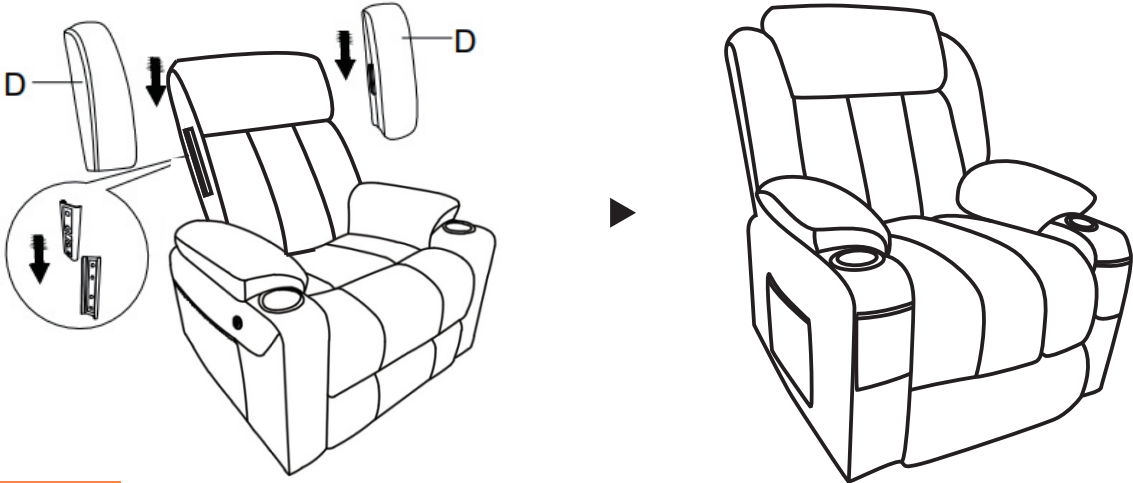

Step 4


Join the wires from the backrest to the corresponding wires on the seat.


Make sure that the corresponding sizes and colors match (white with white & red with red)

Locate the part E power adaptor and attach to its corresponding receiver on the backrest.

Locate the part F motor adapter and attach to its corresponding receiver on the base of the chair


Locate the part G/H remote to and attach to its corresponding receiver on the backrest.

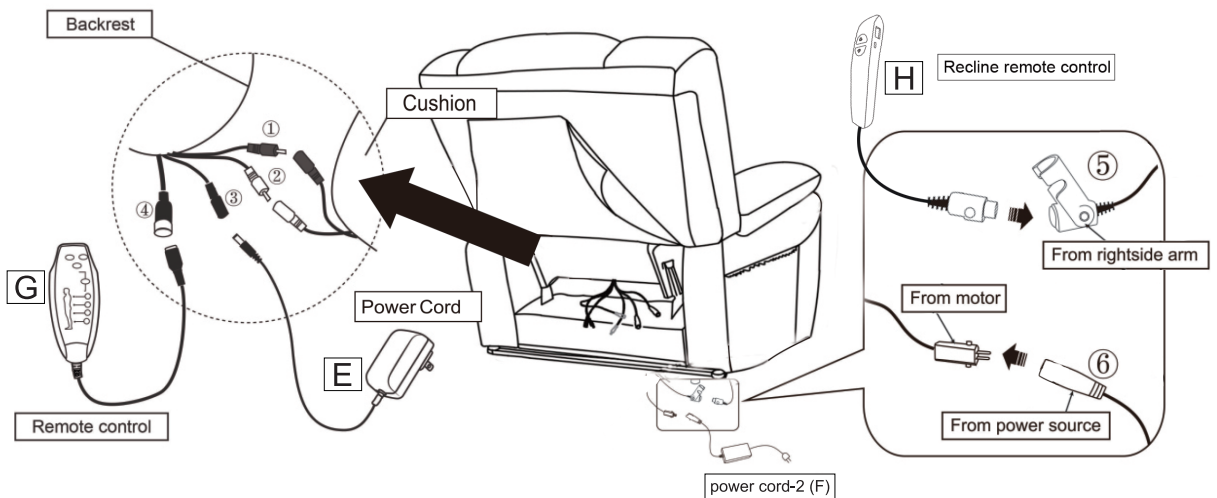

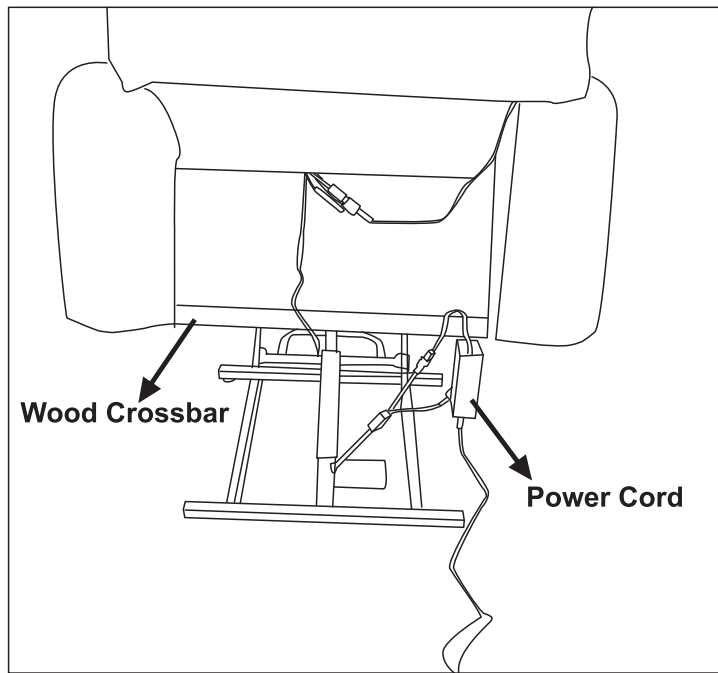

⚠ Caution:

Please organize cables after wiring to prevent power cords from hanging on the rising wood crossbar during sofa lifting, which may cause wire damage.

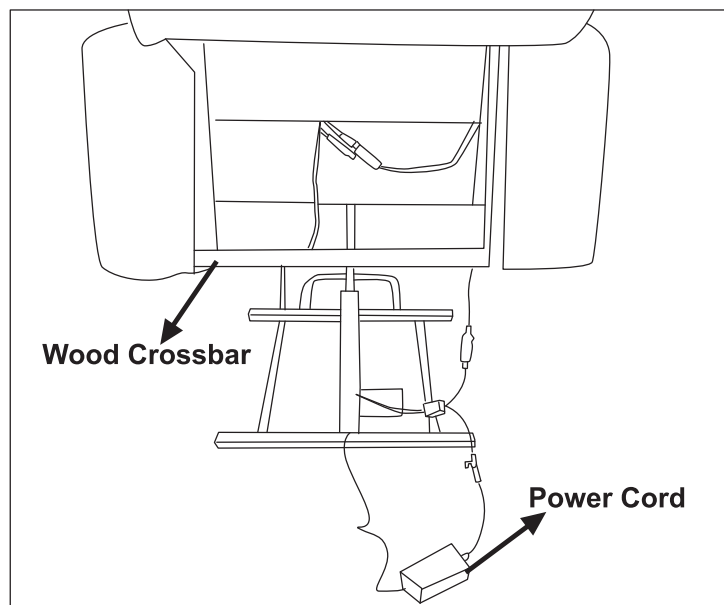


! NOTE:

Make sure all bolts and screws are fully tightened before using chair.
Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed

AWARNING:


To ensure proper assembly, follow all steps and use all part.
Failure to follow this warning can result in serious injury to yourself or others

 Step 4

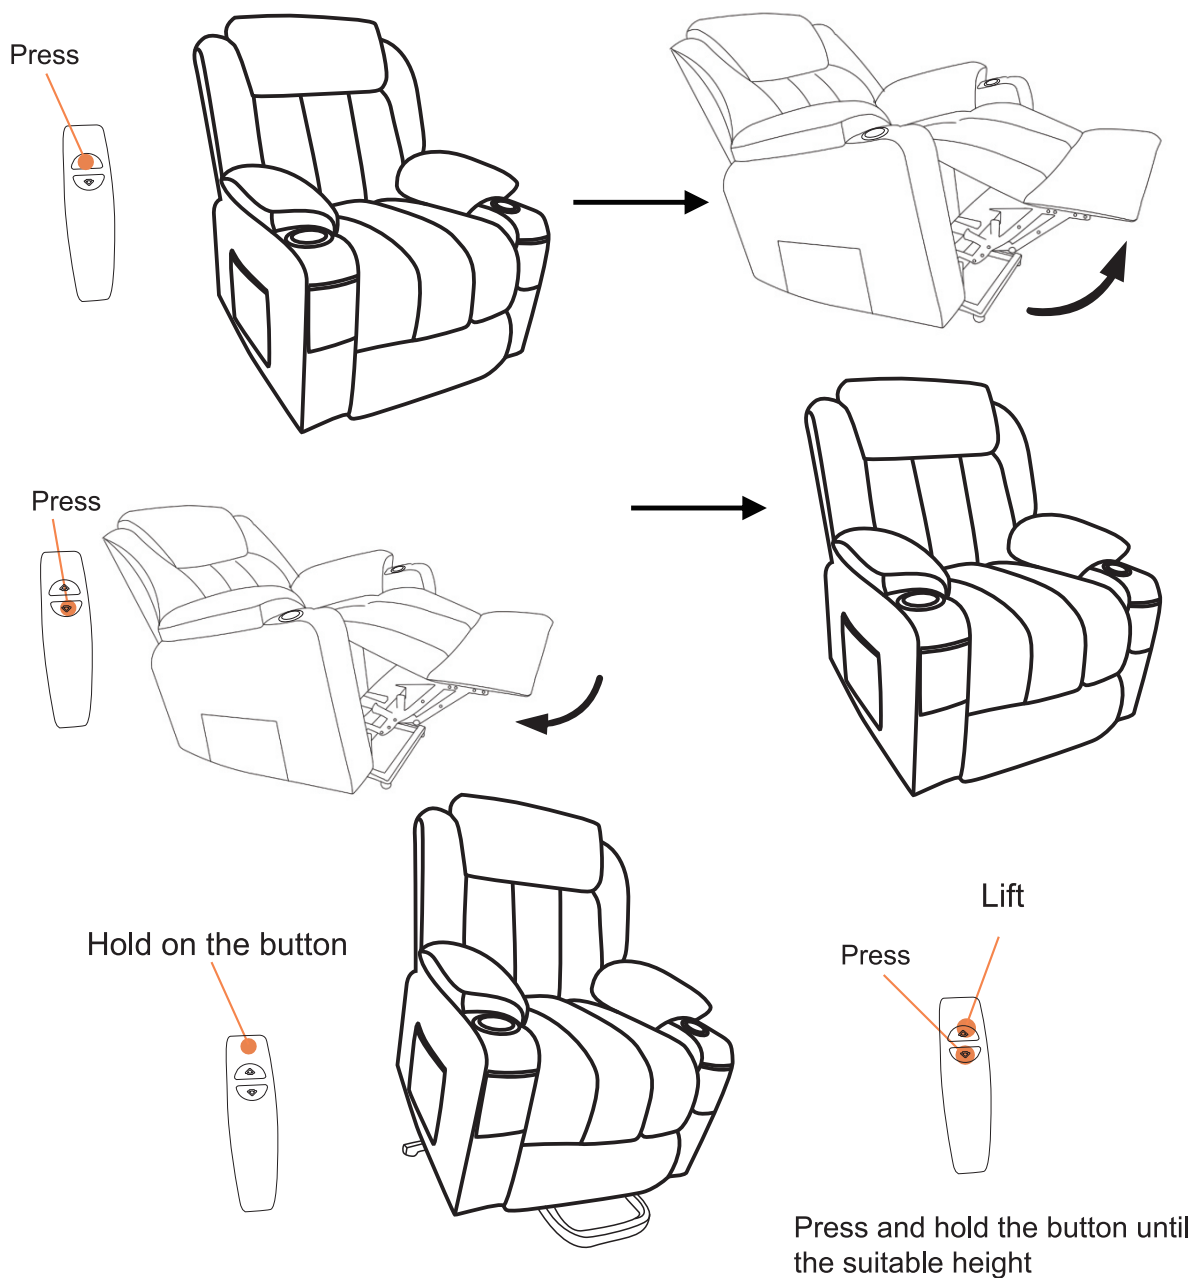



Remote

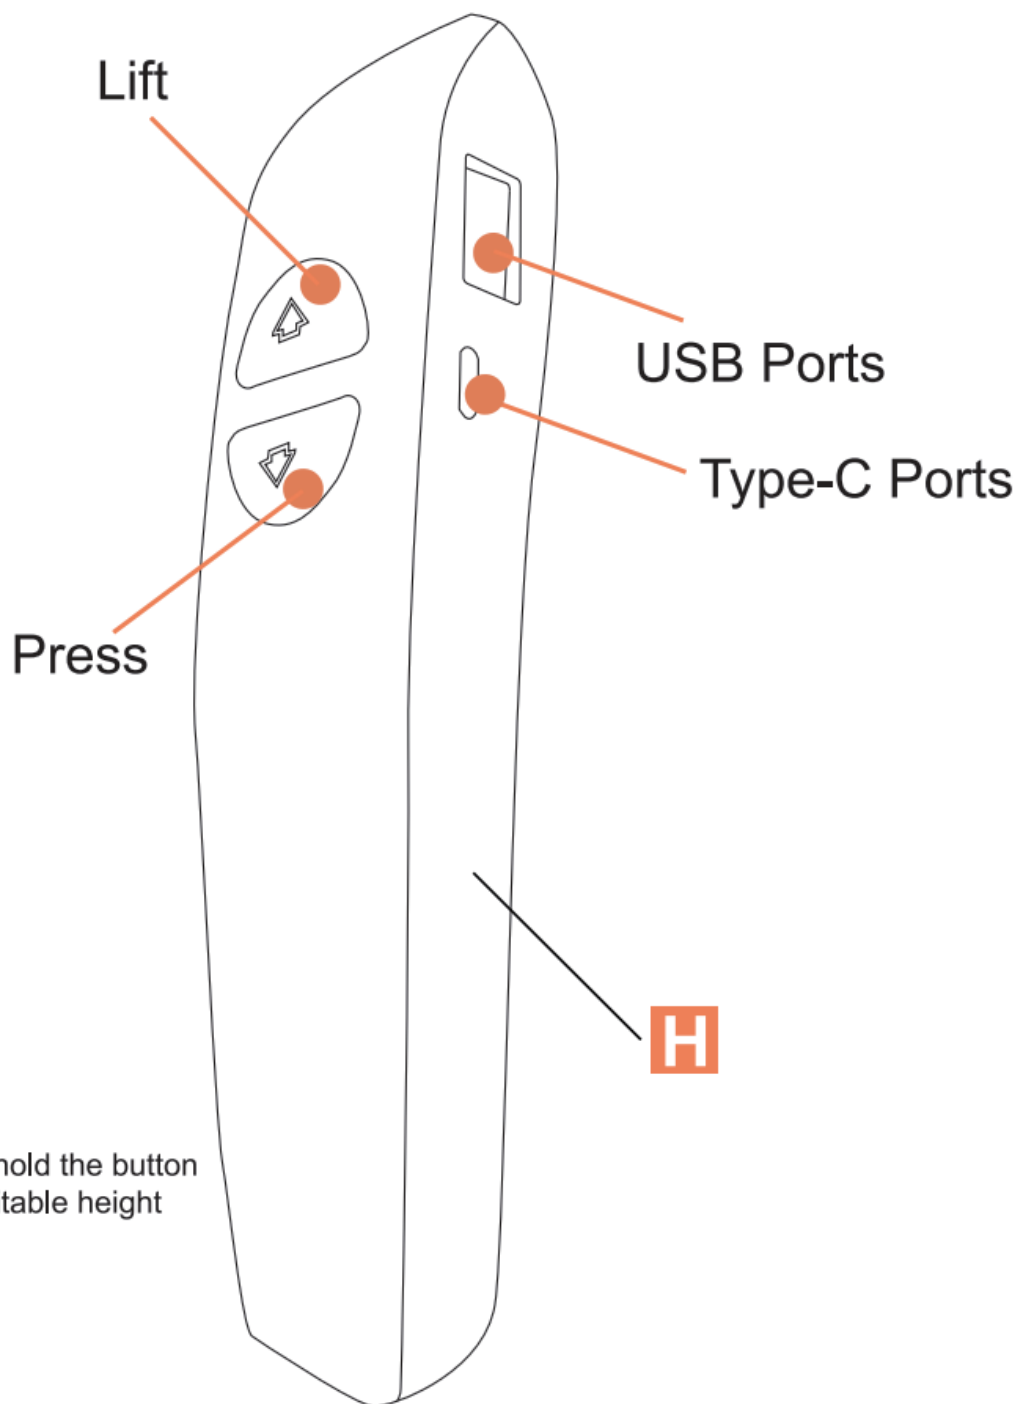 


Press and hold the button
until the suitable height

Note: The USB ports ONLY for Low-Power devices, such as Phone, iPad or Headset.



 Remote

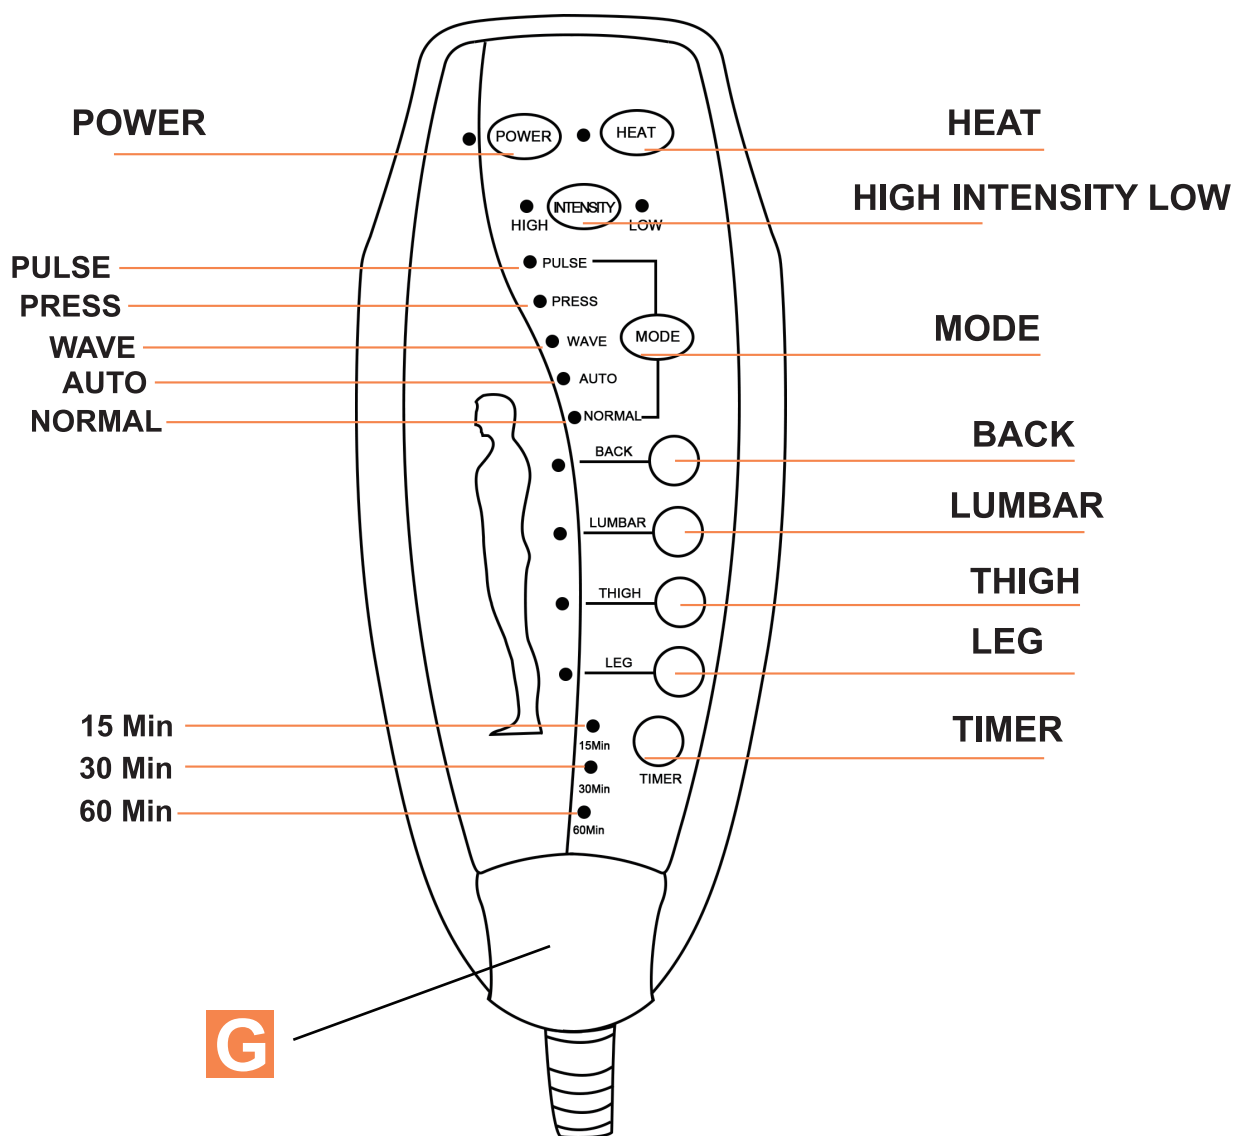

- **INTENSITY:** Switch between HIGH/LOW intensity massage.
- **MODE:** Select 5 types of massages, PULSE, PRESS, WAVE, AUTO or NORMAL.
- **BACK, LUMBAR, THIGHS, and LEGS:** Target massages to specific areas.
- **TIMER:** The default timing is 15-30-60 min selection,

⚠ NOTE:

- 1: When the time you choose is reached, it will automatically stop working.
- 2: DO NOT use for more than 60 minutes of continuous use.
- 3: When the heat reaches 60 °C, it will automatically stop working.



Product Feature

 
- Heating massage
- 8 Vibration Motors
- 5 Massaging modes
- 2 Massaging intensity
- 4 massage zones, each zone can be operated individually
- The default timing is 15-30-60 min the selection



How to use

- 1、 Insert adapter jack into the socket found on back of the massage chair, then plug the adapter into a wall outlet.

(see Figure A)

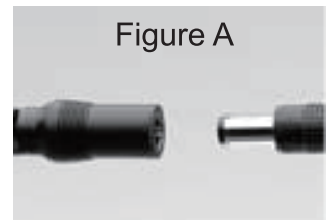

- 2、 Turn the unit ON by pressing the POWER button once, The LED will illuminate when power is on.
- 3、 Turn on the massage in each zone by pressing the BACK, LUMBAR, THINGS or LEGS buttons. LEDS will illuminate when each zone is activated.
To turn off a zone, press the button again.
- 4、 To choose a desired massage mode, press the MODE button. To change modes, press MODE button until LED for desired mode illuminates.
PULSE-for deep tapping massage
PRESS-provides rapid tapping massage
WAVE-for a gradual, side-to-side vibrating massage
AUTO-automatic selection of different massages
NORMAL-gentle percussive massage
- 5、 To change the massage intensity press the INTENSITY button. The LED for HIGH or LOW intensities will illuminate when chosen.
NOTE: Discontinue use immediately if you feel any discomfort or pain.
- 6、 **NOTE:** for your benefit, the massage chair is equipped with an auto shut-off feature
- 7、 DO NOT use for more than 60 minutes of continuous use.

Frequently Asked Questions

1.What if my power lift recliner does not operate at all?

A:Ensure the external transformer is plugged into a properly wired electrical outlet.

A:Check the circuit breaker box connected to the electrical outlet to ensure the outlet is receiving power.

2.What is weight limit?

A: 350LBS/159KG

3.Where can I get a replacement remote?

A:Please email us:homelifeservice@hotmail.com

4.I received only the top of the chair today. How soon will the bottom be shipped?

A:The chair comes with multiple boxes and we ship them on the same day, but the carrier may deliver them to your door on different days.

if not,Please email us:homelifeservice@hotmail.com

5.Stopped working!

A:When the time you choose is reached, it will automatically stop working.

A:When the heat reaches 60 degrees, it will automatically stop working.

A:Ensure the external transformer is plugged into a properly wired electrical outlet.

A:Check the circuit breaker box connected to the electrical outlet to ensure the outlet is receiving power.

6. If the sofa can't recline or lift ?

A:Ensure the external transformer is plugged into a properly wired electrical outlet.


A:Check the circuit breaker box connected to the electrical outlet to ensure the outlet is receiving power

UK	REP
----	-----

Sea&Mew Accounting Ltd
Electric Avenue Vision 25, London,
Enfield EN3 7GD
Billy Han
+44 7399648608
Email: info@seamew.net



 Made in China

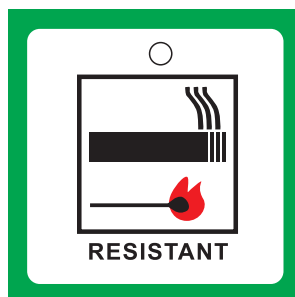

Filling material(s) and covering fabric(s) meet the requirements for resistance to cigarette and match ignition in the Furniture and Furnishings (Fire) (Safety) Regulations 1988

**CARELESSNESS
CAUSES FIRE**