

PLEASE DO NOT RETURN TO STORE

User Manual
ASSEMBLY INSTRUCTION

 
LBZ-2142

Left corner from inside
78.7L*62.9W*29.9H Inch




Please do not return this product to the retailer!
We are able to assist you in ANY way!

If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.

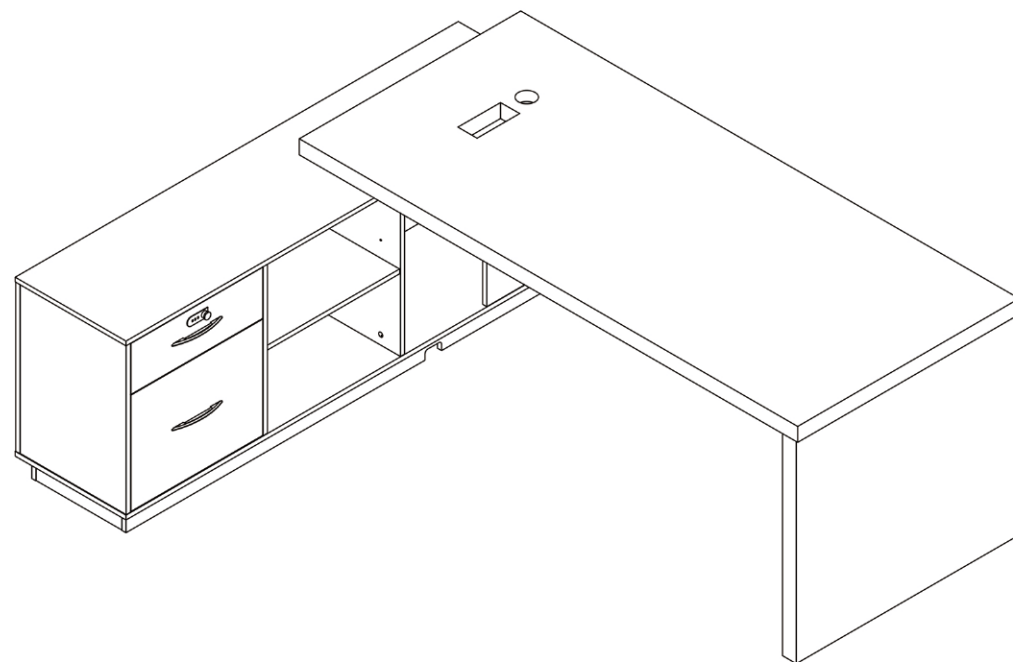

GENERAL ASSMEBLY DETAILS:

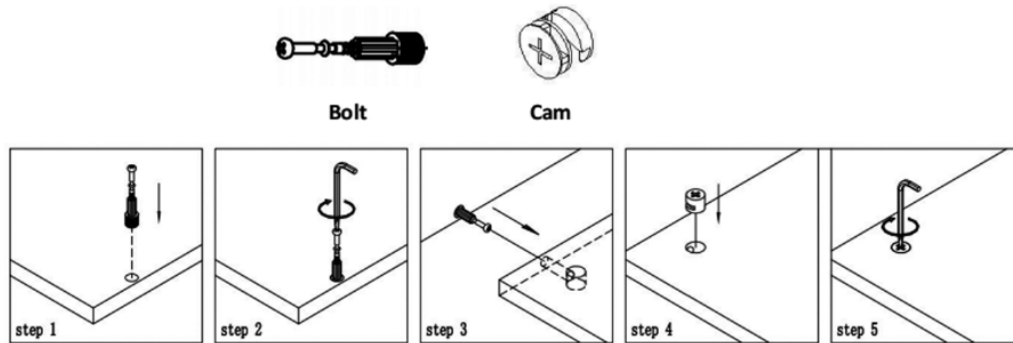 

Cam lock fasteners are used to join two pieces boards together.

1. Using a screw driver or cordless drill, do not over tighten Bolts.
2. Use a flathead screwdriver to turn and tighten the Cam lock in a clockwise direction until the head of the pin is tightly secured.
DO NOT USE A CORDLESS DRILL

FINAL NOTE:

Please read on for important information regarding your furniture.

1. Dust frequently with a clean damp, lint-free cloth.
2. Do not place hot objects on any furniture surface.
3. Avoid exposing your furniture to strong sunlight
4. Do not expose your furniture to any liquids.
5. When moving furniture, do not drag it across the floor.

How to set the password of the combination lock?



1. Initial password: "000"



2. With the lock open, find the lift lever from the back



 
3. Move the lever from point A to point B



4. Set new password, for example, "333"




5. Reset the lever to the initial position

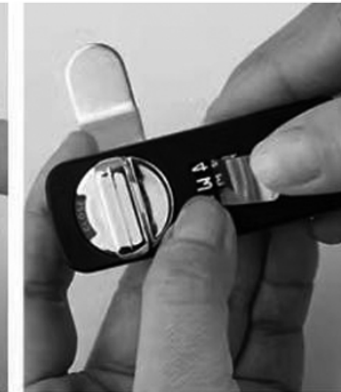

6. Complete Password Modification

How to separate drawer sliders?

 1. The drawer slide I1 & I2 may be connected.
2. Carefully pull out slide part I2 and press the plastic clip/lever to unlock to fully separate the two parts of the runner.

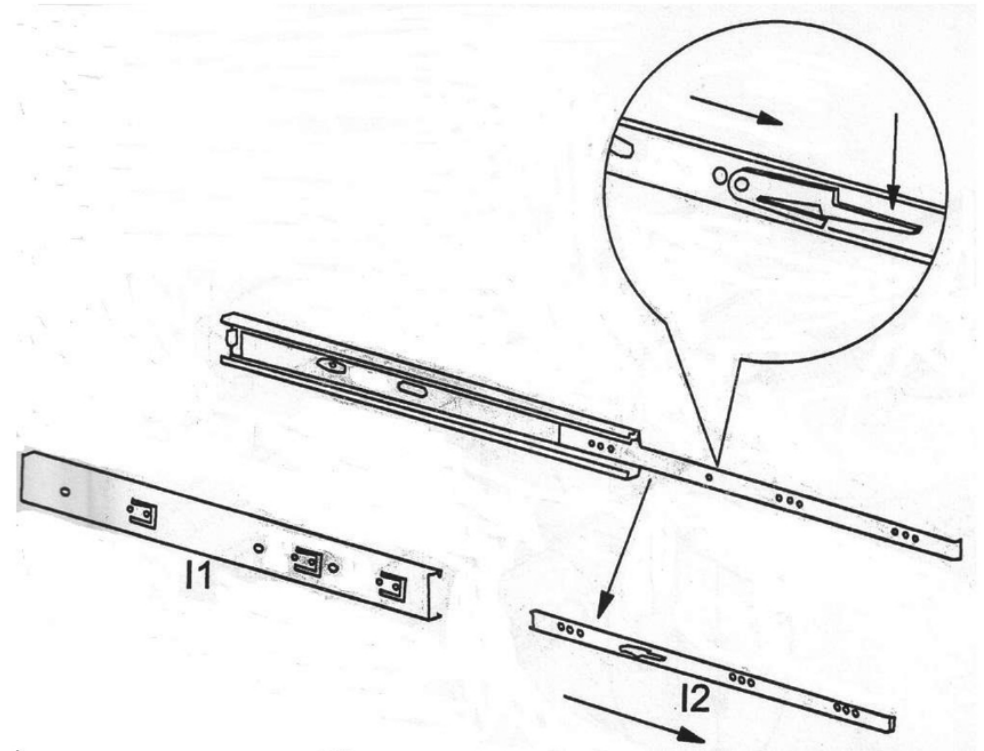



Scan the QR code to watch the product
installation video

Parts List


NO.	Drawing	Dimension	QTY
1		1800*800*50mm	*1
2		700*790*50mm	*1
3		1541*600*15mm	*1
4		1541*140*45mm	*1
5		700*500*25mm	*1
6		1600*400*15mm	*1
7		530*383*15mm	*1
8		530*383*15mm	*1
9		530*383*15mm	*1
10		530*366*15mm	*1
11		530*295*15mm	*1
12		478*380*15mm	*1
13		1598*530*15mm	*1
14		1600*400*15mm	*1

NO.	Drawing	Dimension	QTY
15		476*160*15mm	*1
16		476*364*15mm	*1
17		350*118*15mm	*1
18		350*118*15mm	*1
19		425*118*15mm	*1
20		435*344*4mm	*2
21		622*70*15mm	*2
22		150*70*15*15mm	*2
23		1540*70*15mm	*2
24		310*70*15mm	*3
25		335*180*15mm	*1
26		335*180*15mm	*1
27		455*280*15mm	*1


Hardware Fitting

NO.	Drawing	QTY
A		*95
B		*95
C	 8*40mm	*2
D		*2
E	 3.5*35mm	*8
F	 3.5*14mm	*28
G		*2


NO.	Drawing	QTY
H	 4*18mm	*4
I	 6*25mm	*2
J	 4mm	*1
K		*1
L		*4
M		*2

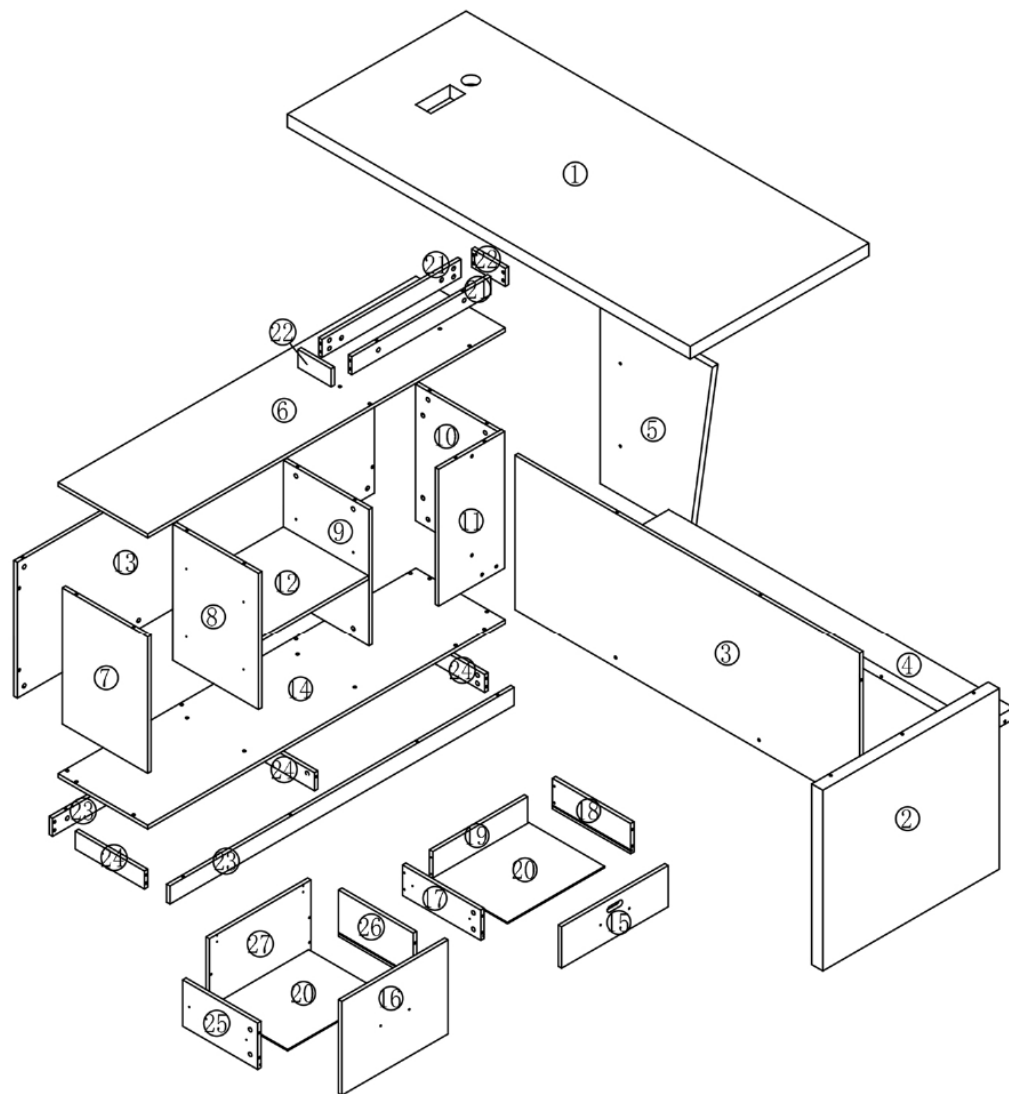 


Cam Coupling Using Methods

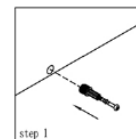 

 
Step1.
Connect the cam coupling A as directed in the assembly instructions using hand.

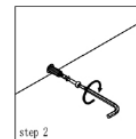

 
Step2.
Screw the cam coupling A as directed in the assembly instructions.

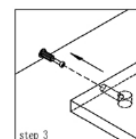

 
Step3.
Push the cam coupling A into the entry hole.

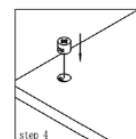

 
Step4.
Insert the cam coupling B as shown in the instructions.

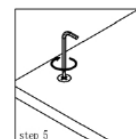

 Step5.
Turn the cam coupling B clockwise with a screwdriver

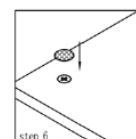

 Step6.
Put on Beutycam.

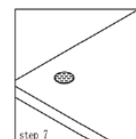

Step7.
Finished.

You should feel a click when the camlock is locked in place.
The joint is now secure.