

Assembly Instructions for Model HL229834570

Package Contents



STEP 1

Assemble the fan blades, blade brackets, and blade covers.



STEP 2

Unscrew the screws inside the motor.



STEP 3

Install the fan blades one by one, tighten the screws. Be sure to handle the fan blades gently to prevent slight deformation and shaking.



STEP 4

Install the light fixture. The four screws on the side here are used to secure the light fixture.



STEP 5

Thread the power cord through the assembled downrod and canopy.



Insert the approximately four-centimeter fixed bolt into the downrod hole and secure it with an R pin.




The two screws at a 90-degree angle are very important, be sure to secure them to prevent shaking.




STEP 6

On one side of the receiver, there are three wires corresponding in color to the three wires on the motor, connect them accordingly.

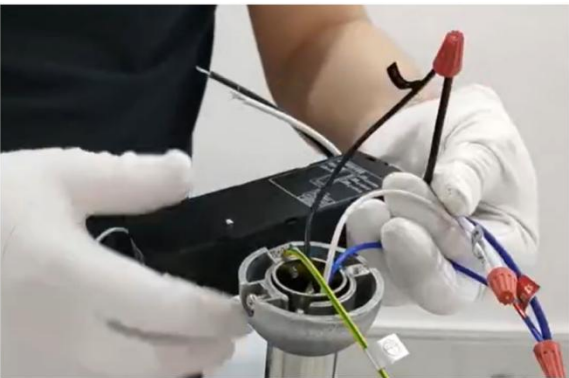

STEP 7

Secure the hanger to the ceiling. If it is a concrete ceiling, use the middle long screw hole for the expansion screws.

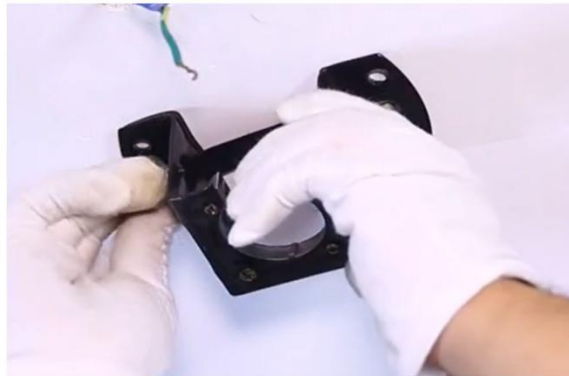

Secure the hanger to the ceiling. If it is a wooden ceiling, use self-tapping screws on the four screw holes on the sides, ensuring the ceiling can bear a weight of over 50 kilograms.



STEP 8

Both the half-round ceiling ball and the black bracket have a protrusion, make sure to align them, otherwise shaking may occur.

The other end of the receiver's two wires can be connected one-to-one to the household power supply line, without distinguishing colors.




Arrange the wires neatly and insert the receiver flat into the slot. If it cannot be inserted, it means the slot is not aligned or the wires are too messy.

The two diagonal screws on the black fixed bracket are used to secure the canopy.



STEP 9

The two wires on the light source correspond one-to-one to the two main wires at the bottom of the motor (without distinguishing between neutral and live wires).

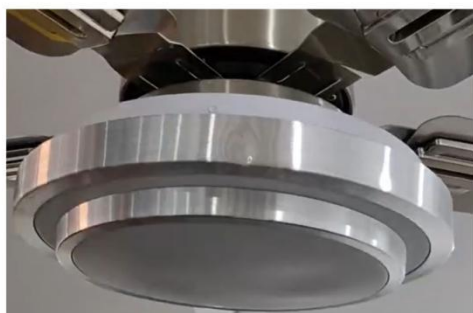

Your fixture is now assembled and ready to use.