


Manual Instructions

For your recliner chair

LS2754

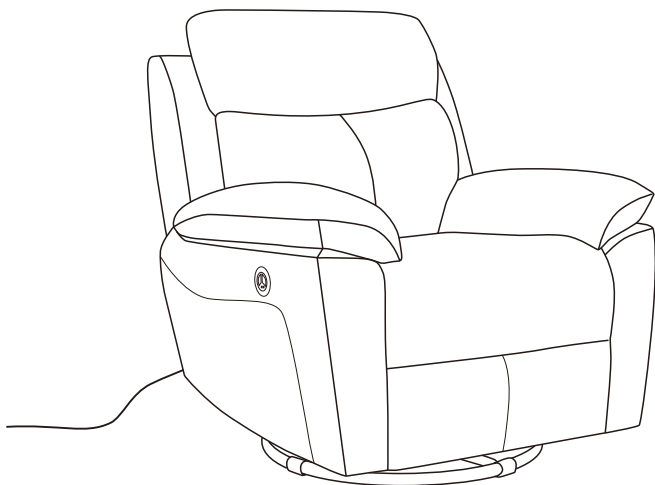

Congratulations! This product will provide many years of service if you adhere to the following guidelines for assemble, operation , care and maintenance.

Please read all instructions carefully before assembling and using this recliner chair.

Improper assembly can result in damage to your chair or cause harm to your child. Proper assembly is critical to ensure a safe and comfortable end result.

CONTENTS

| | |
|--|-------------|
| ● <u>Warning before Assembling</u> | <u>2</u> |
| ● <u>Important Safety Instructions</u> | <u>3</u> |
| ● <u>Parts List</u> | <u>4</u> |
| ● <u>Assembly Steps</u> | <u>5-7</u> |
| ● <u>Recliner Functions Instructions</u> | <u>8-10</u> |
| ● <u>Disassembly Instruction</u> | <u>11</u> |
| ● <u>Fabric Care & Proper Usage</u> | <u>12</u> |
| ● <u>One Year Limited Warranty</u> | <u>13</u> |
| ● <u>Contact information</u> | <u>14</u> |



WARNING

Read before assembling and using

- Failure to follow these warnings and the assembly instructions could result in serious injury or death.
- Keep instruction manual for future use.
- Proper assembly of this item requires 2 people.
- Do not throw away packaging material until assembly is complete.
- To prevent suffocation keep plastic bags away from children.
- This product has many moving parts, serious injury can occur if not used properly. Keep hands, fingers and body parts away from the mechanism. To reduce the risk of head entrapment and other injuries, keep children and pets away from openings and moving parts in and around the recliner chair.
- Check this product for damaged hardware, loose joints, missing parts or sharp edges before and after assembly and frequently during use. DO NOT use this product if any parts are missing, damaged or broken. Contact your retailer for replacement parts and instructional literature if needed. DO NOT substitute parts.
- Indoor dry location use only.
- DO NOT operate the unit until the back is installed and locked.
- Maximum Weight Capacity:300 pounds (136kgs)

Important Safety Instructions



WARNING

-To reduce the risk of electric shock, serious injury or death:



- We do not recommend the use of throws or additional loose covers on or near the moving mechanisms.
- Plug the power lead directly into an wall electric socket.
Do not use an extension cord, adapter or surge protector.
- To avoid over heating do not cover the transformer.
- Disconnect the electrical plug from outlet before cleaning, moving, servicing or when not in use for an extended period of time.
- Do not use this product if it is wet, in water, around water or any liquid.
Do not handle the plug or remote control with wet hands.
- Keep cord out of reach of children, and do not use where it may be a trip hazard.
- Closely supervise children and disabled persons using this product.
- Check the condition of the power supplies, electrical cords, plugs, and connectors often. Keep the power supplies and electrical cords away from heat sources. Never operate the unit with a damaged power supply, electrical cord, plug, or connector.
- Do not allow electrical cord to be pinched between moving parts or between the frame and the floor. Do not place cord under carpet or in a location where it could become worn.
- Do not attempt to disconnect the power plug by pulling the power cord.
Always hold the power plug and pull it out.
- Never operate the unit except when it is on its base in the upright position.
- Always keep open flame and lit cigarettes away from upholstered furniture.

Sighting

After unpacking, please check your chair for any damages that may have occurred during transport. Report any complaints immediately after delivery.

To prevent suffocation keep plastic bags away from children.

Parts List
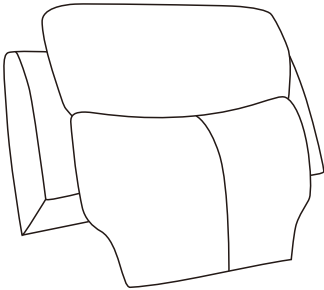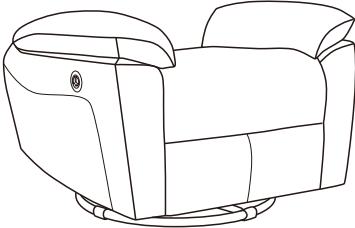
| <i>Ref.</i> | <i>Parts</i> | <i>Description</i> | <i>QTY</i> <i>(PCS)</i> |
|-------------|--|--------------------|----------------------------|
| A |  | Backrest | 1 |
| B |  | Seat Base | 1 |




Make sure you have all the components and fittings listed above.
DO NOT use this product if any parts are missing, damaged or broken.
Contact your retailer for replacement parts and instructions if needed.

Assembly Steps

Step 1

Take out the binding power adapter

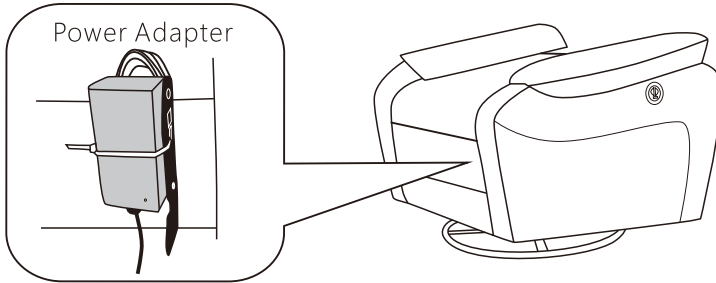


⚠ WARNING

-To reduce the risk of electric shock, serious injury or death:





DO NOT PLUG IN
UNTIL CHAIR ASSEMBLED

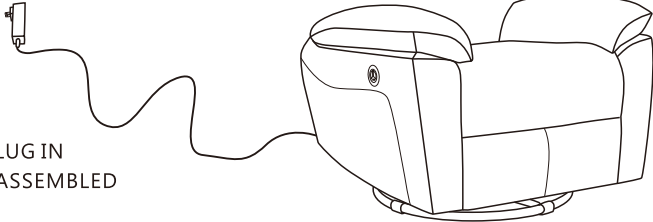

⚠ CAUTION


-To reduce the risk of damaging the cord:
DO NOT put the cord under the metal base

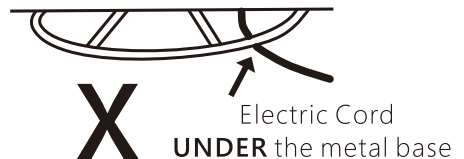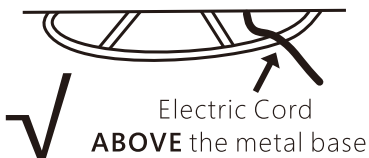

Assembly Steps


Step 2

Attach the Backrest to the Seat Base

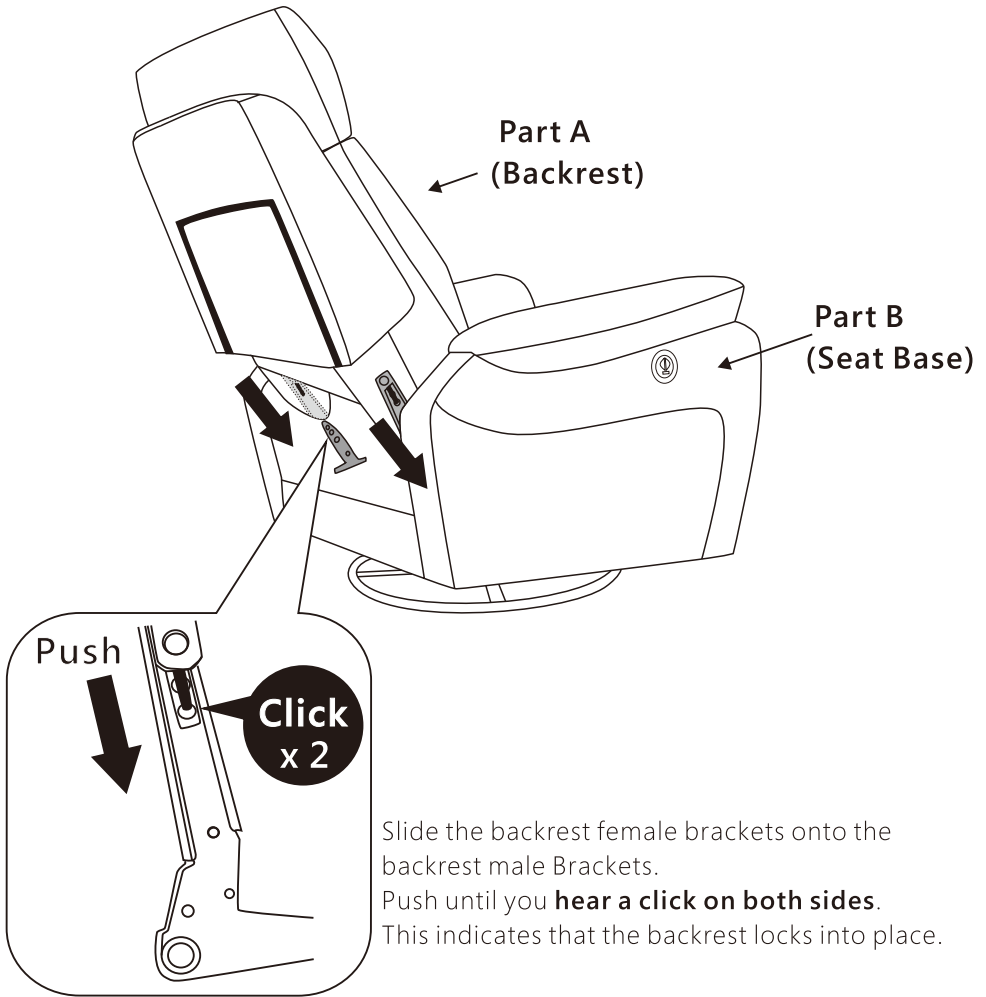

Slide the backrest female brackets onto the backrest male Brackets.
Push until you **hear a click on both sides**.
This indicates that the backrest locks into place.

Assemble finished

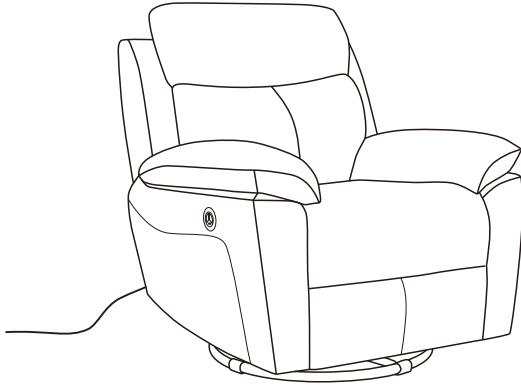


Beating and Aligning

Your recliner chair just went on a long trip. During storage and transport, some upholstered parts may have been pushed in and stitching lines may have been moved.


Take a couple of minutes to straighten and beat the upholstered parts.

If you followed all steps correctly, your chair is now perfectly set up.


Please read all further instructions on your chair's functions and cover maintenance.

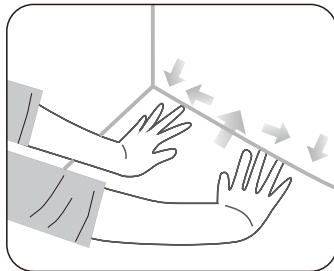


Connect the power adapter with a wall outlet

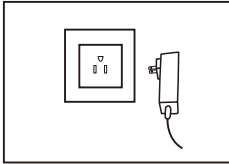

Plug in the power adapter to a wall outlet

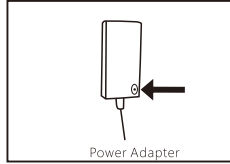


Power Adapter
Green LED light indicates that the power is on

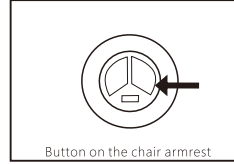


Button on the chair armrest
Blue LED light on the button indicates that the power is on

Note: If your chair is not functioning after following these steps, please check the cord underneath the chair is fully plugged into the chair motor.


Comfort Functions

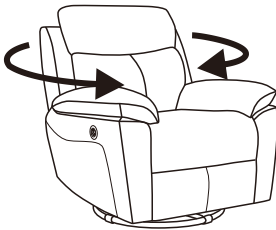


Swivel 260°

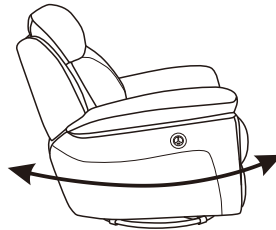

Glider/Rocking

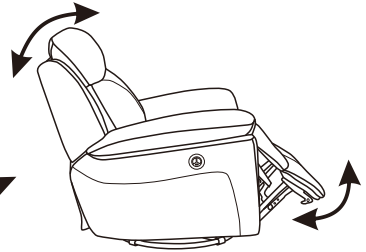

Reclining

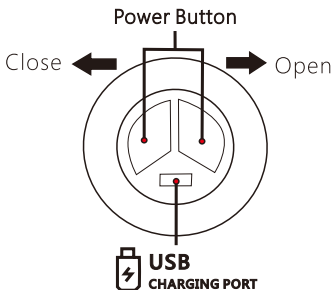



CAUTION

When using this USB port to charge your phone or other electronic device, please DO NOT sit too close to the USB port, or touch/press the CABLE / USB with your body, otherwise, the USB port will be damaged easily.

Power Recliner Instruction

From Chair to Recliner

When sitting on the chair, simply press the button located at the outside right armrest, the chair will be made to recliner.

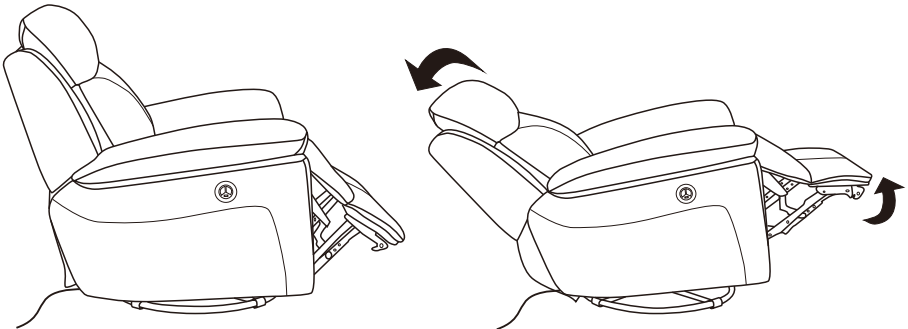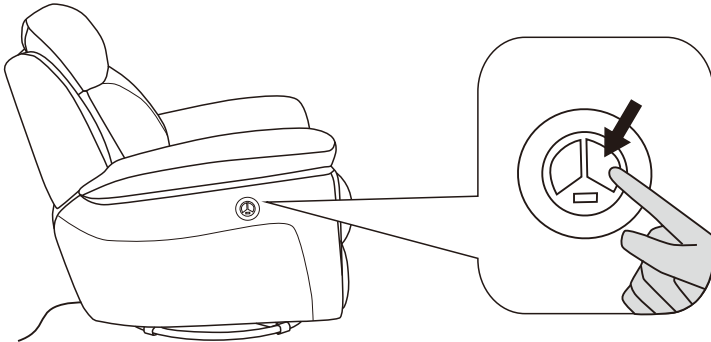


Note:

Before first use, the chair should be tested to ensure that all functions are working correctly.

Power Recliner Instruction

From Recliner to Chair


Simply press the button, this moves your chair's footrest back under the seat and your chair is returned to the upright position.

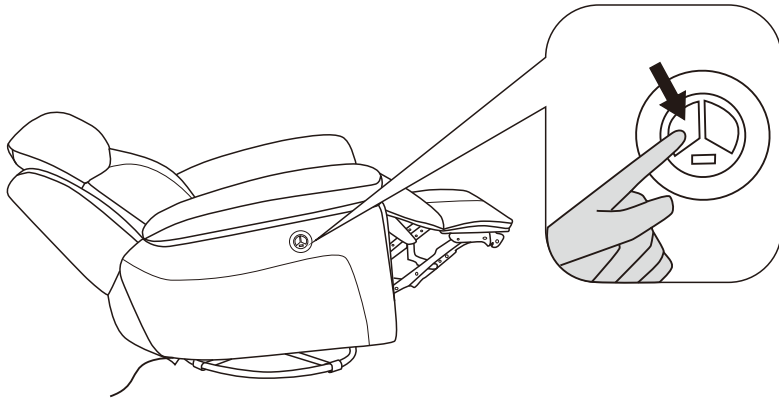


CAUTION

Before closing, make sure that there are no persons, pets or extremities in the way. Do not allow children to play on this chair or operate the mechanism. Always leave in an upright and closed position.

How to Disassemble

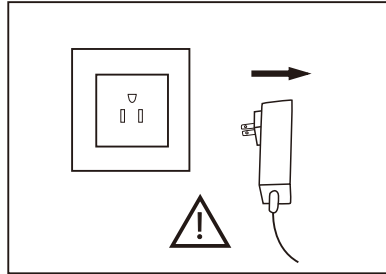

1. Unplug the power adapter

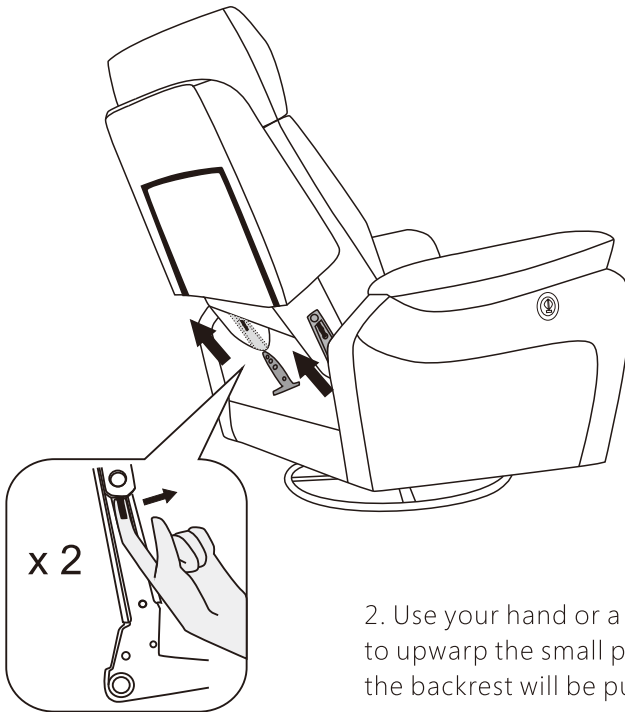

2. Use your hand or a strong tool (not included) to upwarp the small piece of metal grooves, then the backrest will be pulled out.

Anti-Splashing Fabric Care


If you accidentally spill oil, wine, coffee, or soft drinks on the chair, it is necessary to clean it up with a dry cloth or absorbent paper towel immediately without pressuring on the stain.



Note:

We do not give warranty for damages caused by improper basic cleaning.

Warning

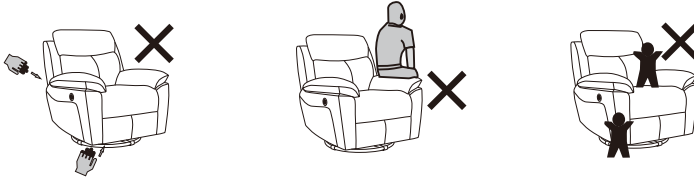


Take care when adjusting positions to avoid trapping or pinching of body parts.

DO NOT stand/sit on the edge of the seat, armrests, open footrest or on the backrest as this could make the recliner tip over.

To reduce the risk of head entrapment and other injuries, keep children and pets away from openings and moving parts in and around recliner.

DO NOT leave children unattended on or beside the recliner.

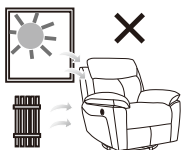

Note:

Do not expose your chair to direct sunlight. Keep an adequate distance to radiators. Extensive heat may also damage the chair.

ONE YEAR LIMITED WARRANTY

We will replace any missing parts at the time of purchase or any defective item within a one year period from the date of original purchase.

Please keep your receipt so that we may process your warranty request.

PLEASE DECLARE SUCH DAMAGES IMMEDIATELY AFTER DELIVERY.

This warranty only covers new units with original packaging and ownership, and is not transferable.

It does not cover any used, secondhand or demo models.

The specific legal rights of this warranty may vary from state to state.

Some states do not allow any exclusion or limitation of incidental damages.

Some states do not allow limitation on how long an implied warranty lasts.

Please bear in mind that warranty claims are **excluded** in the following cases:

- Damages caused by improper installation and assembly
- Damages caused by sharp or pointy objects or pets
- Staining caused by deficient maintenance
- Staining caused by other manufacturer's textiles that are not colorfast
- Damages caused by heat exposure (hot objects and liquids)
- Damages caused by improper cleaning or use of wrong maintenance products
- Inappropriate use
- normal wear and tear
- Improper use and load of comfort functions
- Damages occurring from inappropriate, negligent or incorrect repairs
- Willful damage