 
 


 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 




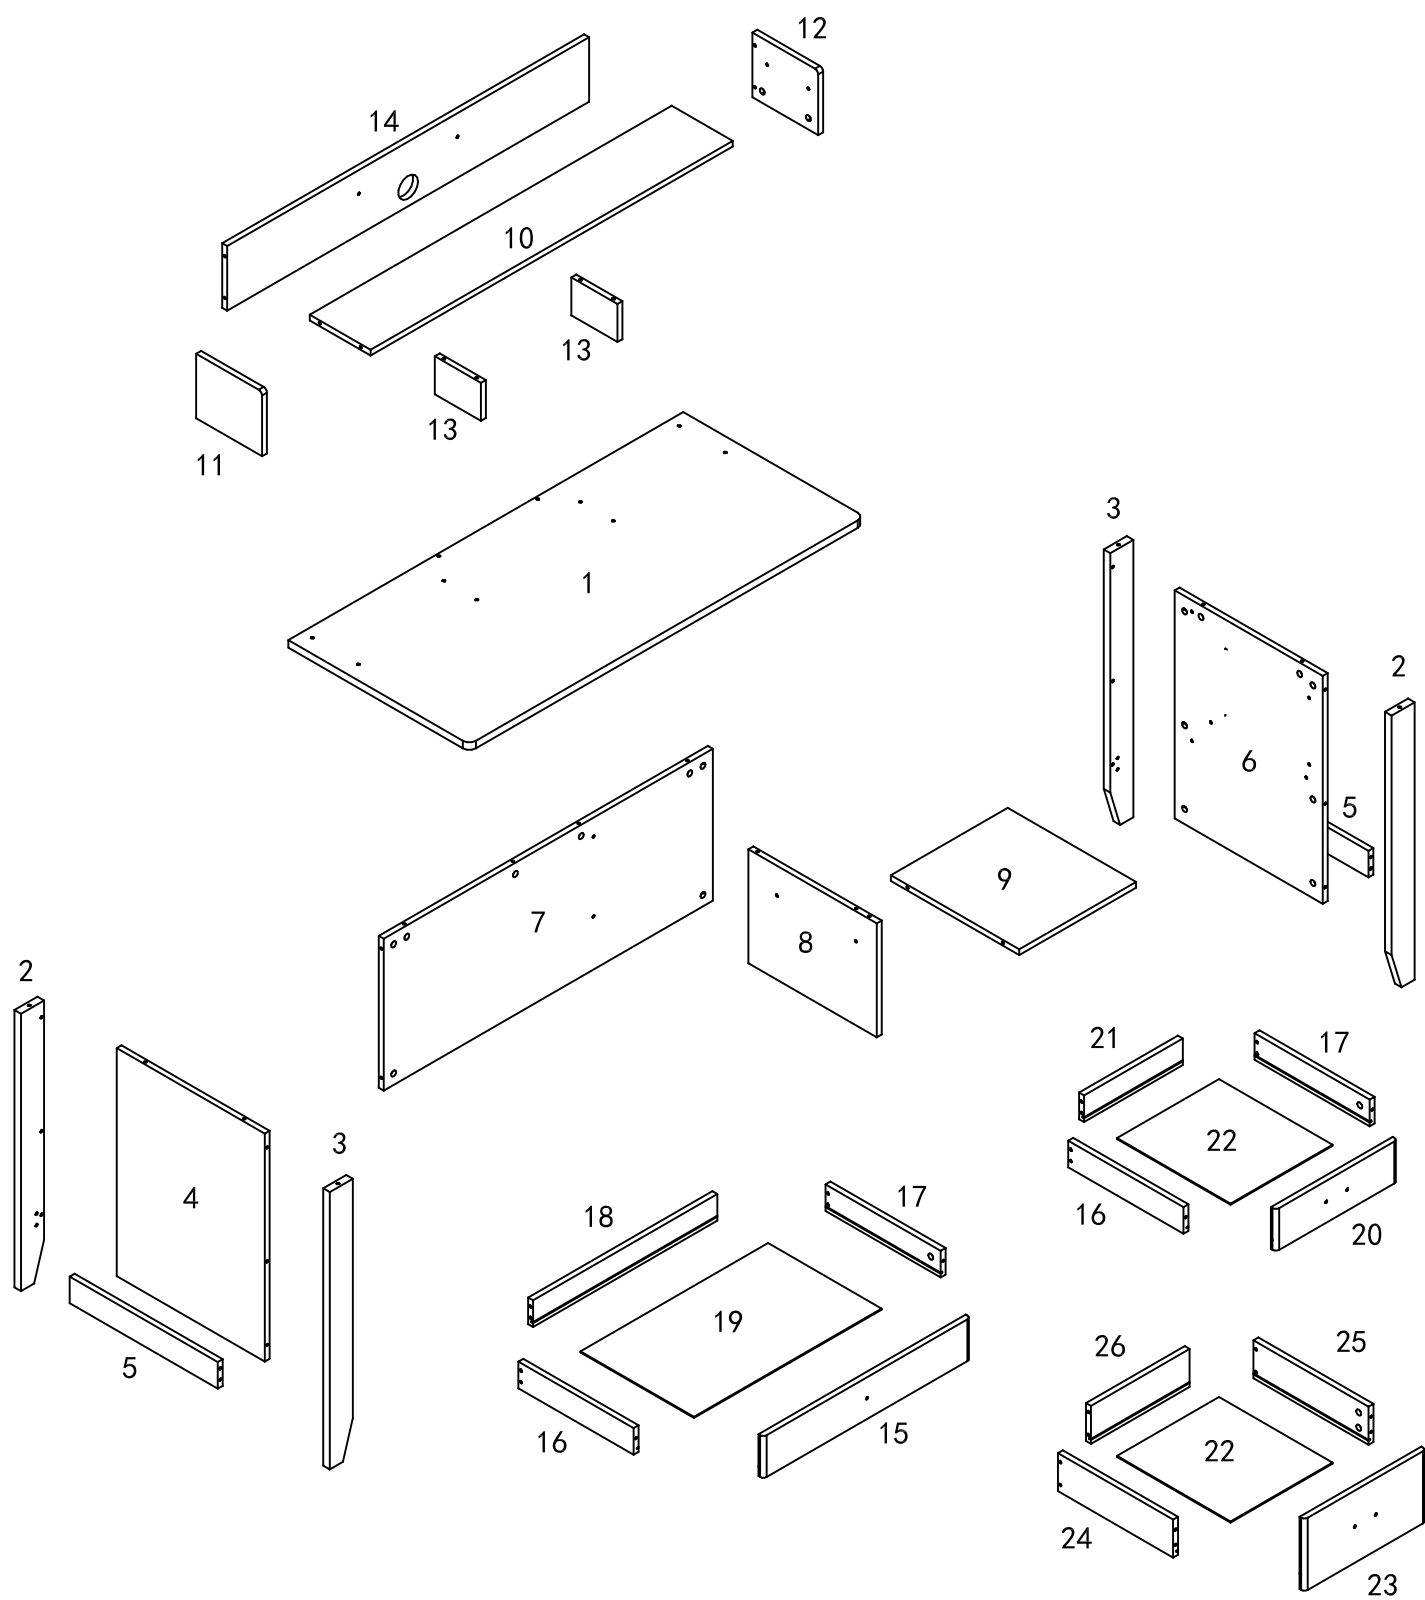


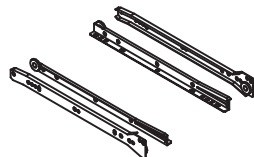 


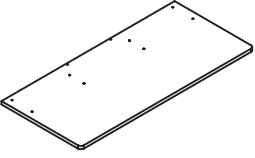

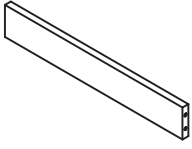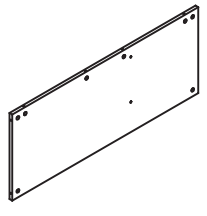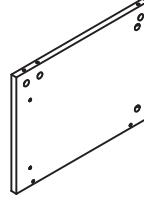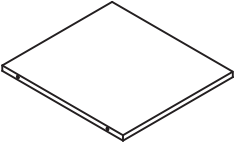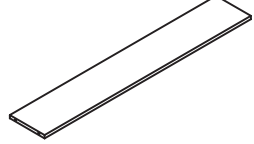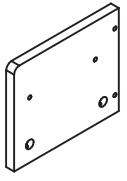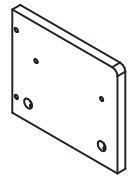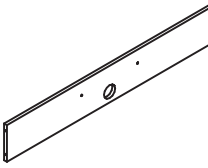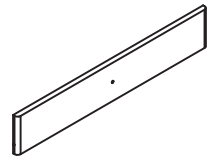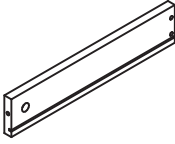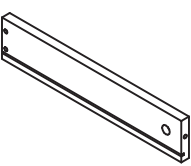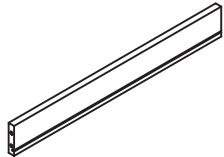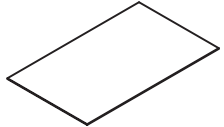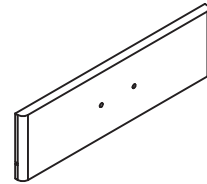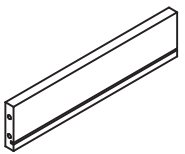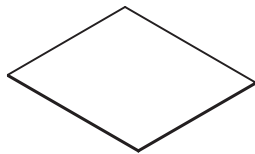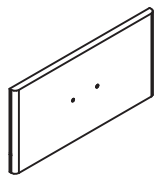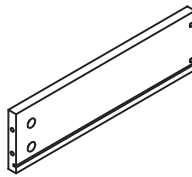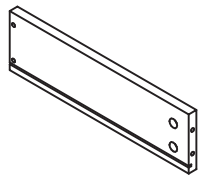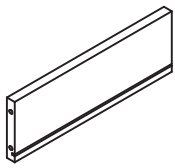


Please read these instructions and warranty information carefully before use and keep them properly for future reference.





OPERATING INSTRUCTIONS



 Assembling Instruction


1  X1	2  X2	3  X2	4  X1	5  X2
6  X1	7  X1	8  X1	9  X1	10  X1
11  X1	12  X1	13  X2	14  X1	15  X1
16  X2	17  X2	18  X1	19  X1	20  X1
21  X1	22  X2	23  X1	24  X1	25  X1
26  X1	A  X57	B  X57	C  M4X40 X12	D  M4X12 X24
E  M4X20 X1	F  M4X20 X4	G  M4 X4	H  M8X40 X20	I  X3
J  X1	K  X1	L  X2	M  X57	

    1

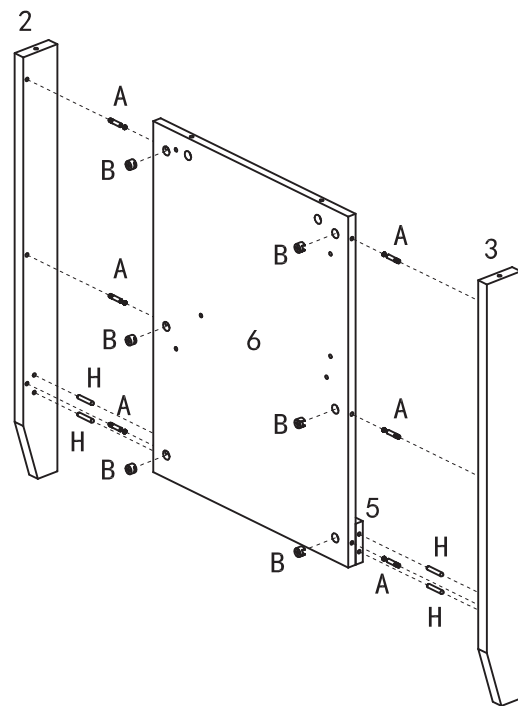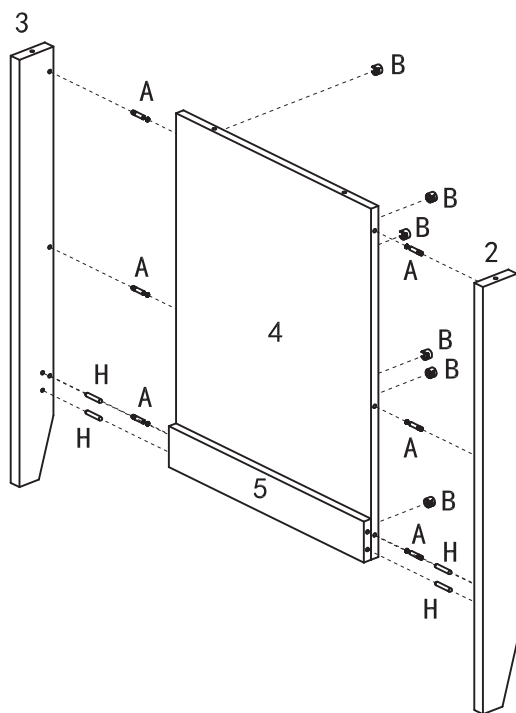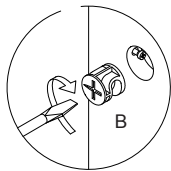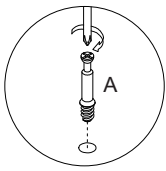


A	X12
B	X12
H	X8

 2

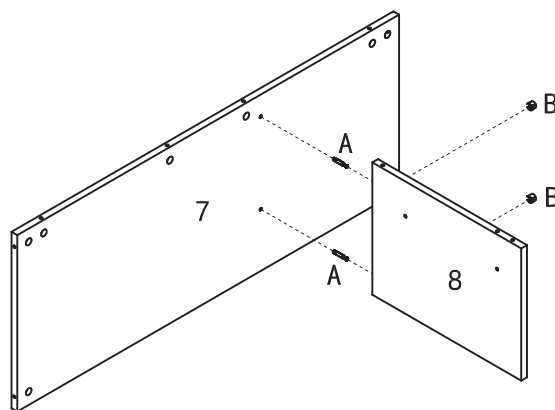


A	X2
B	X2

 3

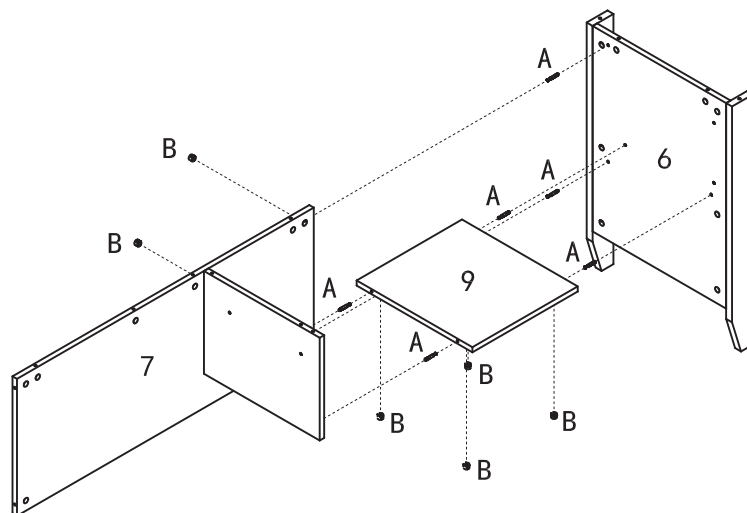


A	X6
B	X6

 4

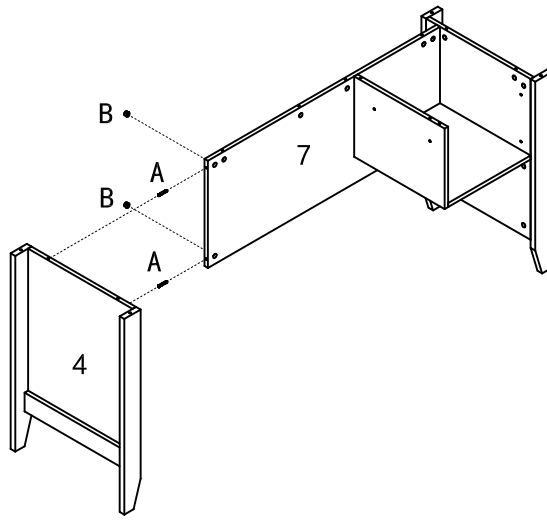


A	X2
B	X2

 5


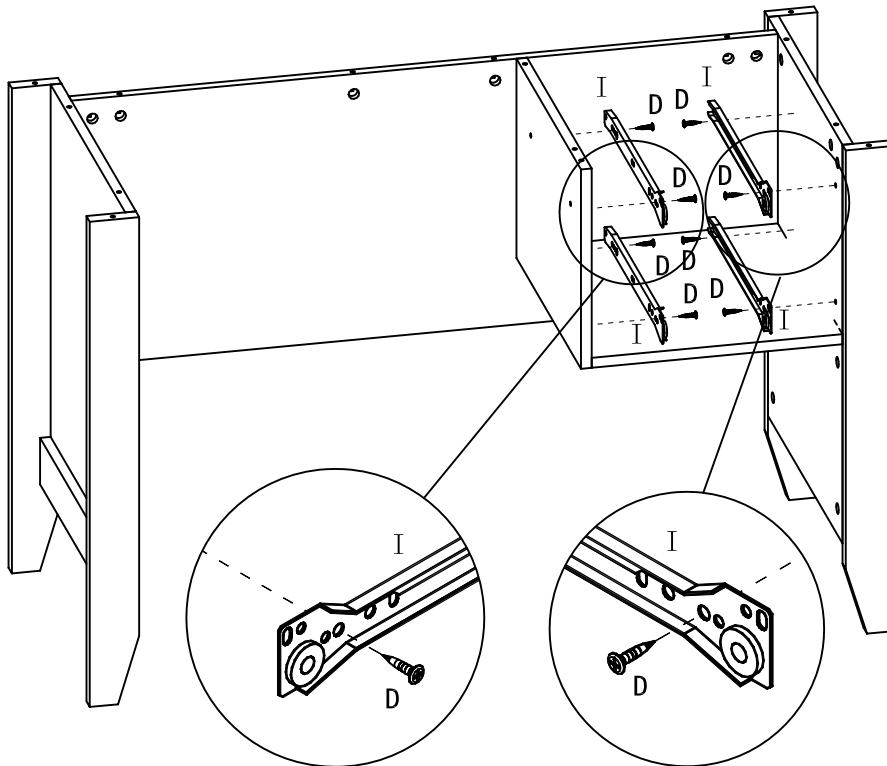


D	X8
I	X2

 
6

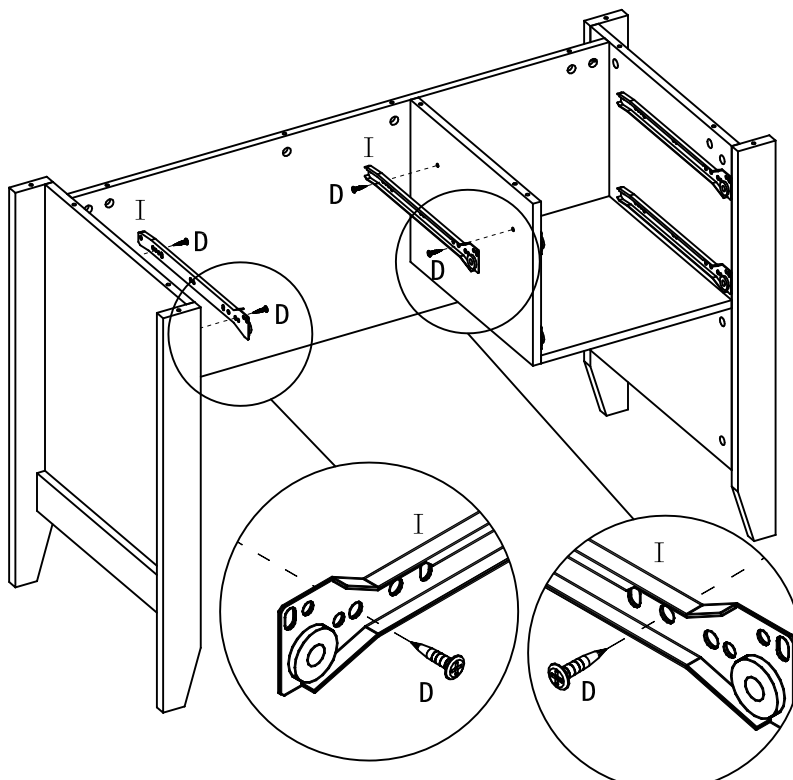

D	X4
I	X1

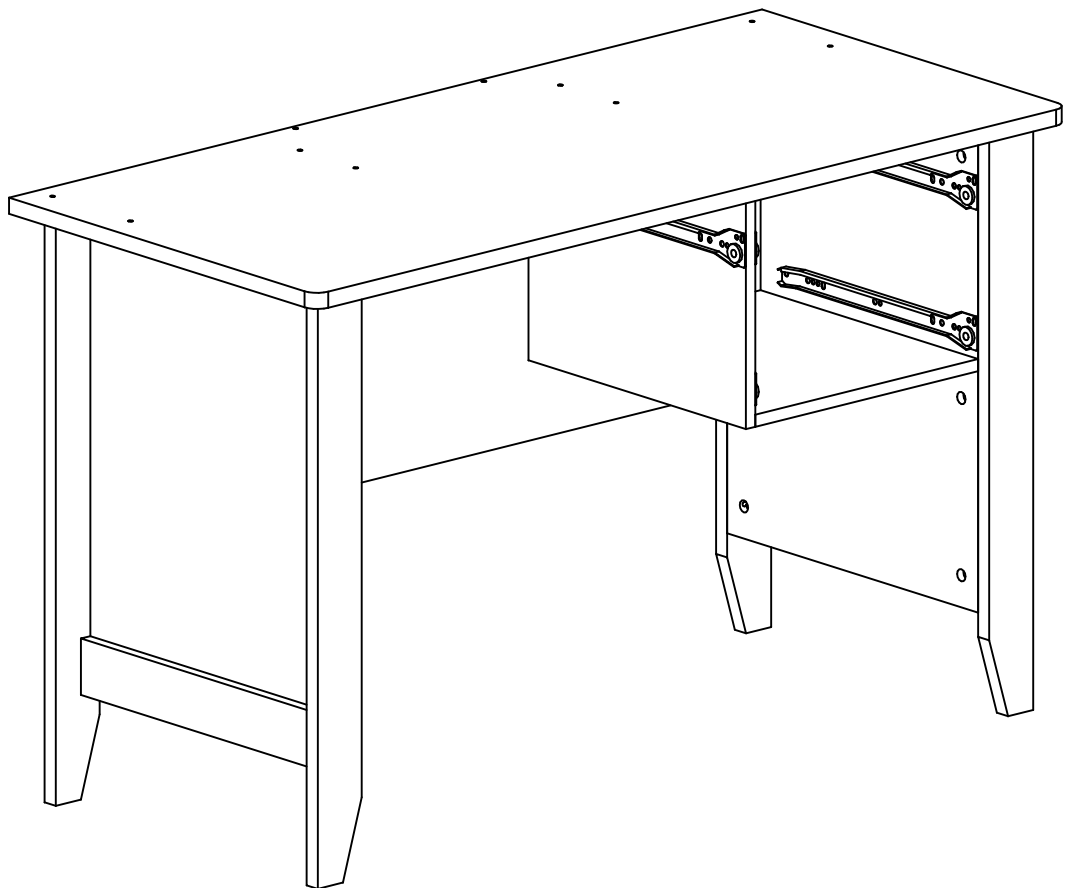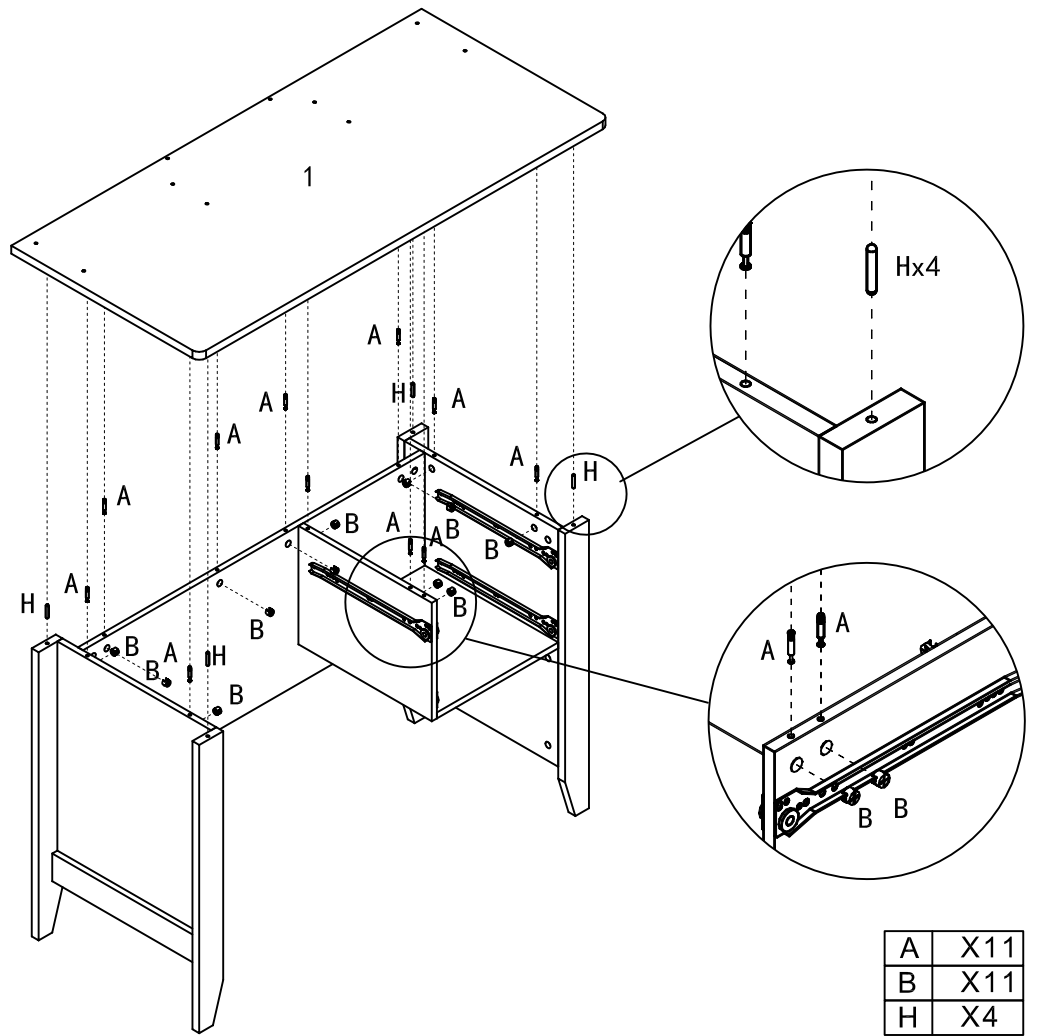  


8

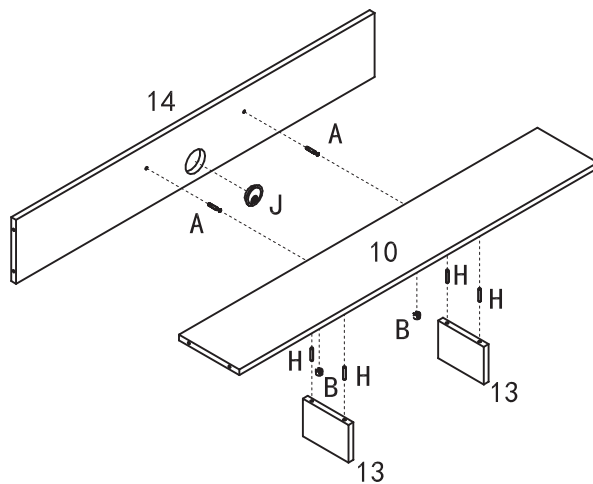 


A	X2
B	X2
H	X4
J	X1

 9

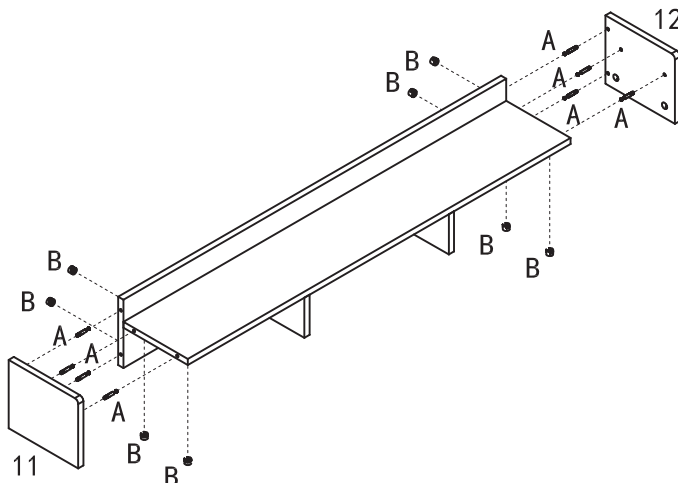


A	X8
B	X8

 10

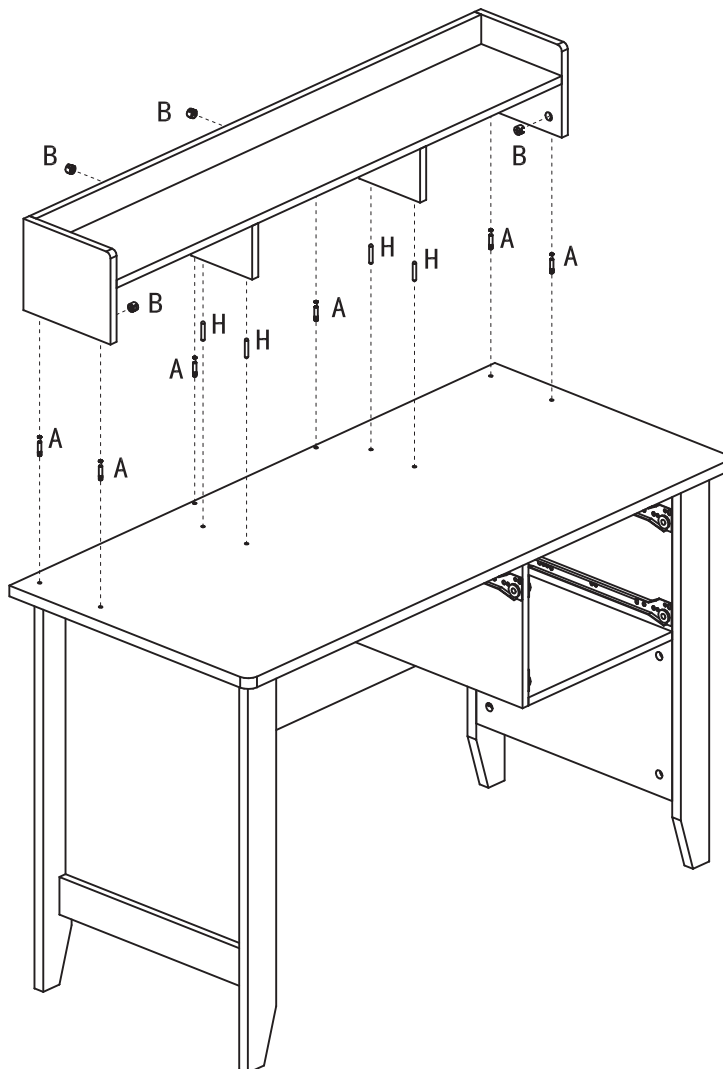


A	X6
B	X6
H	X4

 11

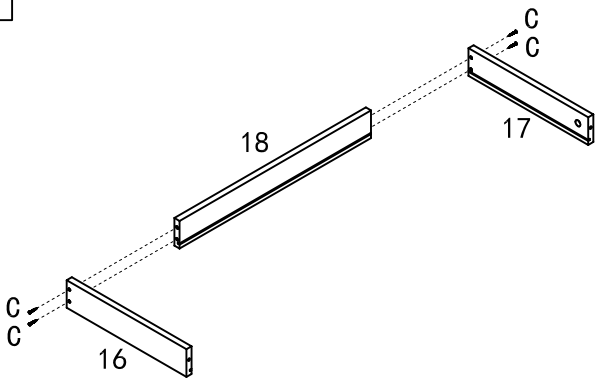


C X4

 12

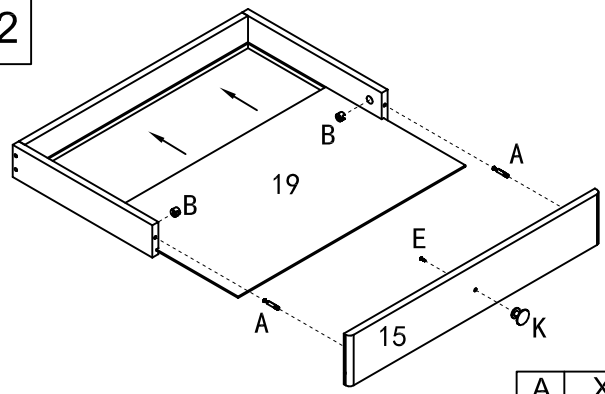


A	X2
B	X2
E	X1
K	X1

 13

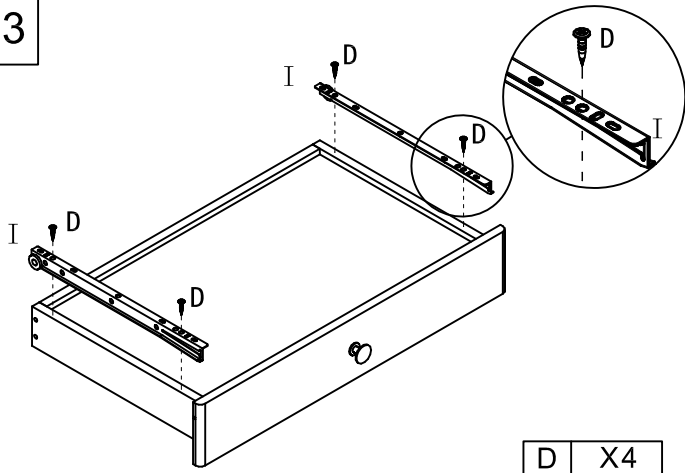


D	X4
I	X1

 14

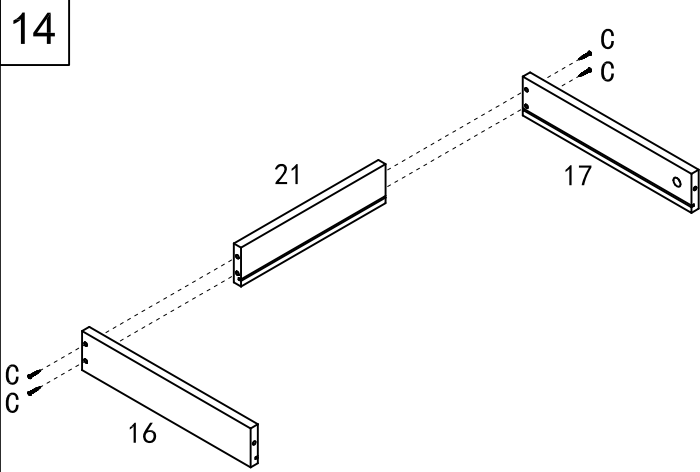


C X4

 15

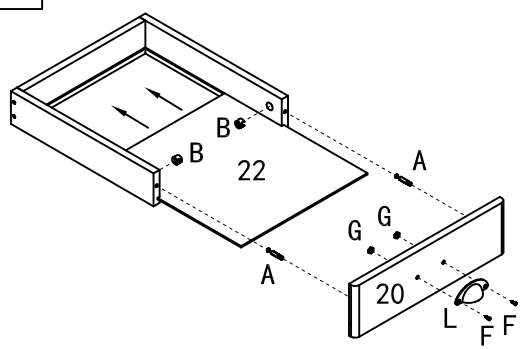


A	X2
B	X2
F	X2
G	X2
L	X1

 
16

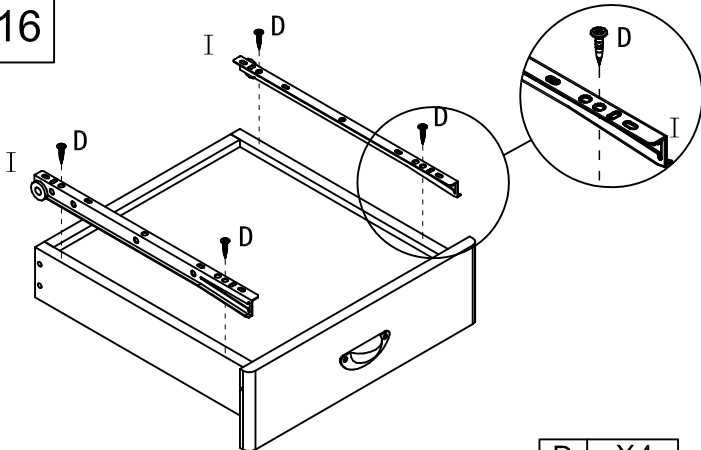

D	X4
I	X1

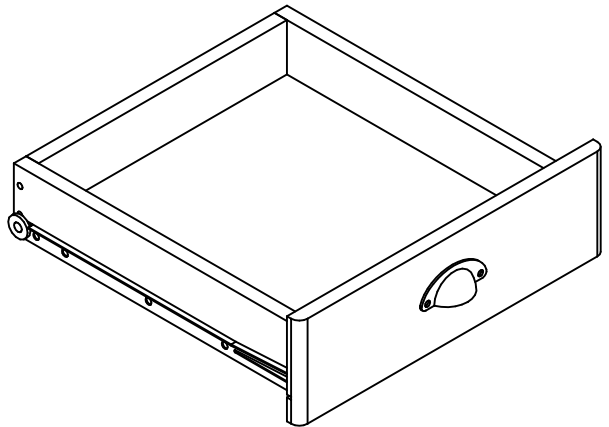 


17

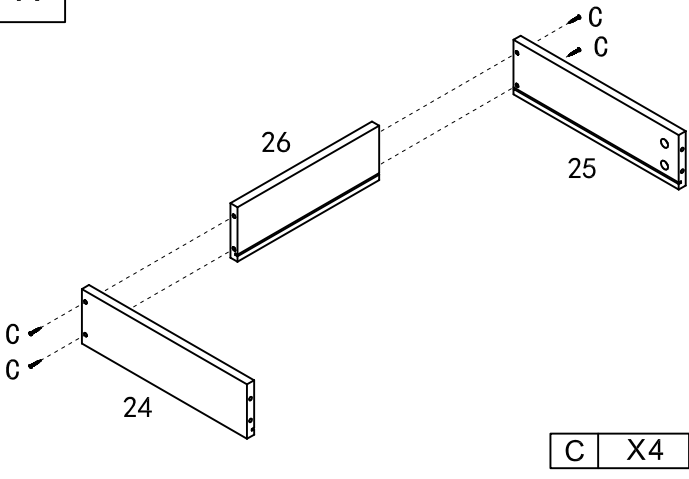 


C	X4
---	----

 18

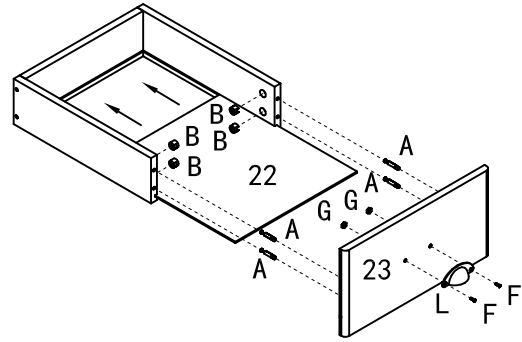


A	X4
B	X4
F	X2
G	X2
L	X1

 
19

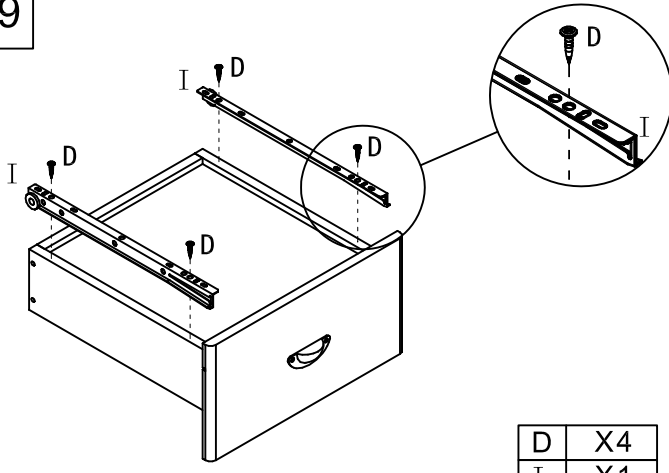


D	X4
I	X1

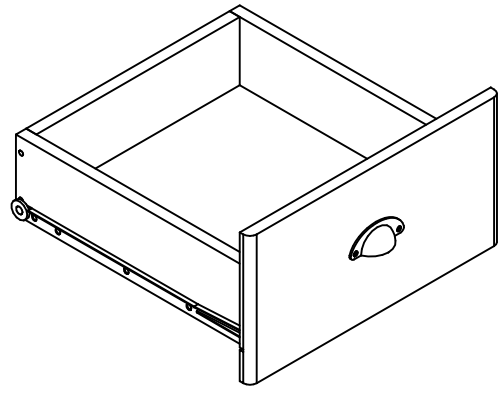 

20

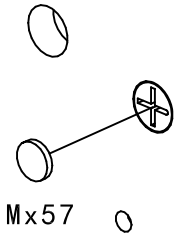 

M	X57
---	-----

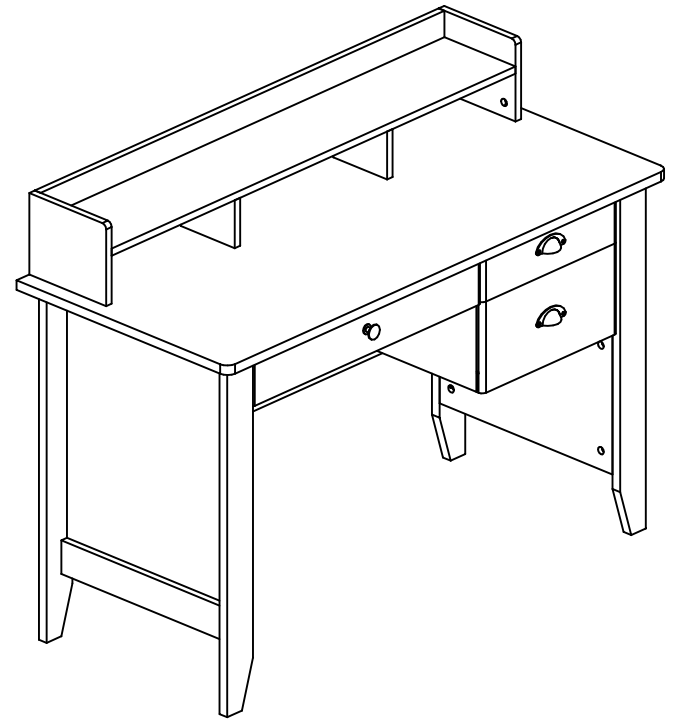 

21

