

**AQUA  
GALLERY**

# User's Manual






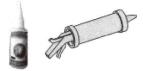

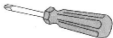


## BEFORE INSTALLATION


### ► Installation Environment

1. Before installation, confirm whether the inlet pipe and angle valve are correct. Make sure that the installation is completed, and the water has been flushed to ensure that there are no impurities in the water inlet pipe;
2. Water inlet pressure requirements:  $5\text{bar} \geq \text{inlet pressure} \geq 0.5\text{bar}$ , it is recommended to install a pressure reducing valve if it is greater than  $0.05\text{MPa}$ ;
3. When installing and using the faucet, please use normal torque to prevent the handle from breaking.
4. If the customer goes out for a long time or does not use the faucet for a long time, please close the faucet valve and turn on the faucet switch to release the pressure and water in the faucet.

### ► Installation Aids

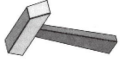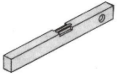
 Hammer	 Spirit level	 Adjustable wrench
 Glue (do not use glue containing acetic acid)	 Impact drill	 Screwdriver

### ► Dimension Diagram

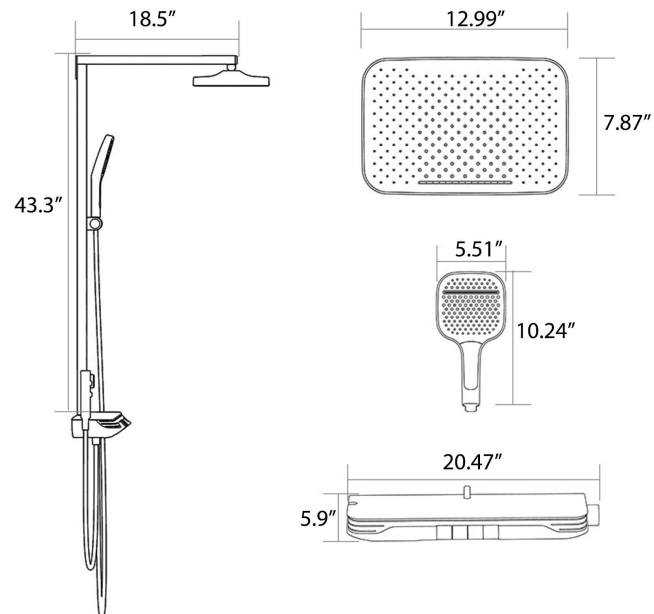


## INSTALLATION STEPS

 
This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.

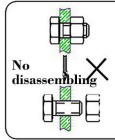

Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.

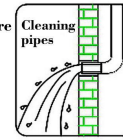


**Before installation, please confirm:**  
 a. If the water inlet fitting is higher than the wall surface by more than 2mm, it cannot be installed.  
 If the water inlet fitting is lower than the wall surface by 15mm, you need to purchase an extension fitting yourself.

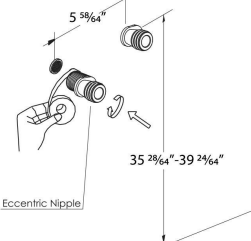

Eccentric Nipple


1

Apply pipe sealant to the threads of the eccentric nipples, then connect them to the inlet pipes. (The distance between the two water supply lines is 5.9 inches (150mm), and the distance from the floor surface to the water outlet is approximately 35.4-39.4 inches (900-1000mm).)

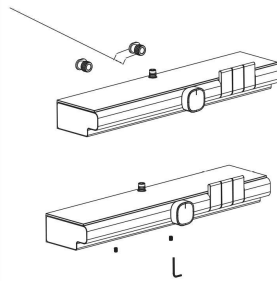


2

The fitting protrudes from the wall by 1.06 inches - 1.18 inches (27mm - 30mm). Insert the body into the fitting, push the body against the wall, and tighten the two screws below the body.

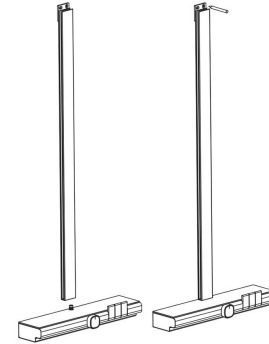


3

Insert the long shower pipe into the body fitting, mark the two fixing hole positions on the long shower pipe with a pen, and make sure the pipe is vertical.

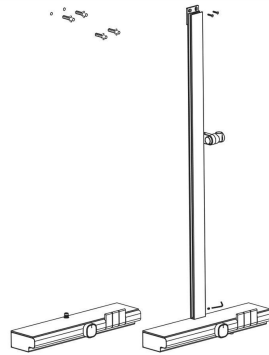


4

After drilling holes at the marked positions, insert the expansion bolts, and then insert the vertical pipe into the adjustable shower holder. Fix the long shower pipe with two self-tapping screws, and tighten the screws at the bottom of the vertical shower pipe.

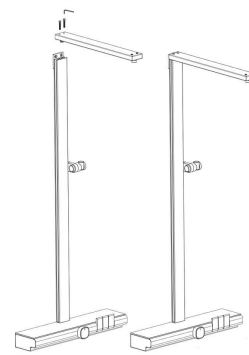

5

Insert the horizontal pipe connector into the straight pipe, and lock the two pipes with two screws.

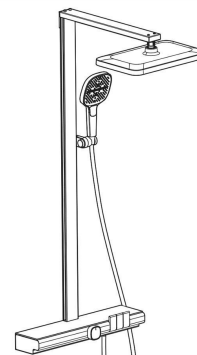


6

Install the hand shower hose, hand shower, and the overhead shower.

## INSTALLATION STEPS

### ● User Guide

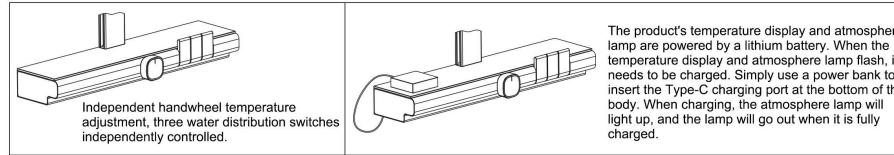

### ● Mixer Care and Maintenance Tips

#### a. Regular Cleaning:

For daily or regular cleaning, simply wash the mixer with clean water and wipe it dry with a soft cotton cloth.

Avoid using cleaning powder, polishing powder, abrasive detergents, or nylon brushes, as these can scratch and damage the surface.

Do not use acidic cleaning agents. If the mixer comes into contact with any harmful acids, rinse it immediately with clean water.

#### b. Deep Cleaning:

For deeper cleaning:

First, remove as much dirt and grime as possible with clean water and a soft cloth. Then, use one of the following cleaning agents:

- Mild liquid cleanser
- Colorless glass cleaner with no abrasives (ensure it completely dissolves according to instructions)
- Non-abrasive polish liquid

After cleaning, thoroughly rinse off all cleaning agent with clean water and wipe dry with a soft cotton cloth.



Please feel free to contact us if you have any questions. We will help to solve the issue together with you.



**AQUA  
GALLERY**