

4L Portable Air Cooler

REDNDY-CL2



2 year
guarantee

Instruction Manual



British engineering &
innovation since 1928

THANK YOU

FOR CHOOSING



We hope you love your product for many years!



Register your purchase

www.rediffusion.uk/pages/register-my-warranty

Scan QR code using mobile device

In line with our commitment to quality, your appliance is granted with a 2-year warranty cover. To optimize the benefits of this warranty, we suggest registering your product post-purchase, ensuring you get the most out of its features.

Please note: Warranty MUST be registered within 30 days of purchase. Any warranty registered after 30 days will be void.

CONTENTS

TECHNICAL SPECIFICATION	1
IMPORTANT SAFEGUARDS	2 & 3
HOW TO USE	4 & 5
CLEANING & CARE	6
DISPOSING OF THE PRODUCT	7
CUSTOMER SUPPORT	8
GUARANTEE & WARRANTY	9

TECHNICAL SPECIFICATION

Power:	65W
Voltage/Frequency	220-240V~, 50-60Hz
Capacity	4L
Dimensions (CM):	56.5 (H) x 29 (W) x 24 (L)
Net Weight:	4.1 kg

This user manual can also be downloaded from our website.

www.rediffusion.uk

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using your product.
2. The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children or pets.
4. Children should not use or play with the appliance.
5. Use the appliance for intended use.
6. This product is intended for household use only and not for commercial or industrial use.
7. Unplug from the outlet when not in use, when moving the fan from one location to another, before putting on or taking off parts, and before cleaning.
8. The appliance must be placed on a stable level surface.
9. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
10. Do not let the cord hang over the table or counter or touch hot surfaces.
11. To disconnect, grip the plug and pull from the wall outlet. Never yank on the cord.
12. The appliance should only be stored indoors.
13. Ensure to switch off when not in use
14. Do not attempt to repair in case of a fault – refer repairs to a qualified electrician
15. Do not immerse in water.
16. Do not use it in bathrooms or areas with high humidity.
17. Use as per the rating voltage.
18. Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
19. Do not operate the appliance with wet hands, in order to avoid damage.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
21. When the appliance is not in use, switch it off and unplug it.
22. Do not insert things to air outlets and inlets, in order to avoid damage.
23. Do not use the appliance near explosive and combustible gas.
24. Do not use outdoors.
25. Please refrain from turning over the appliance. Disconnect the power supply if it gets tipped over and water enters the body. Ensure the body is dried completely before using it again.
26. Clean the appearance with a lightly damp cloth. It can be cleaned with neutral detergents. Do not rinse with water.
27. Do not knock or shake the body when in use.
28. The appliance must not be located immediately below a socket outlet.
29. The rating current of the socket should exceed 10A.
30. After finished using, release the water from the water tank.
31. Do not move the device when the water tank is filled with water

Important Safeguards

Power Cord Safety Tips

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
2. Never pull or yank on the cord or the appliance.
3. To insert the plug, grasp it firmly and guide it into the outlet.
4. To disconnect the appliance, grasp the plug and remove it from the outlet.
5. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the power cord replaced. Please return it to our Service Department or to an authorised service representative.
6. Never wrap the cord tightly around the appliance as this could cause the wire to fray and break.
7. Do not operate the appliance if the power cord shows any damage.


Battery Warning

1. Insert batteries into the remote correctly, paying attention to the polarities (+ and -) indicated on the batteries and on the device.
2. Batteries must not be short-circuited.
3. Do not charge the batteries.
4. **KEEP BATTERIES OUT OF THE REACH OF CHILDREN.** Ingestion can cause chemical burns, soft tissue perforation, and death. Serious burns can arise within 2 hours of ingestion. Consult a physician immediately.
5. Do not allow children to replace the batteries.
6. Do not force the discharge of the batteries. Do not mix new and used batteries or batteries of different types or from different manufacturers together.
7. Discharged batteries must be removed immediately from the device and disposed of according to the laws in force.
8. Do not heat the batteries or expose them to heat sources.
9. Do not directly solder the batteries.
10. Do not disassemble the batteries.
11. Do not deform the batteries.
12. Do not throw or dispose of batteries in a fire.
13. Do not put in contact with water or moisture, especially if the battery is damaged.
14. Do not encapsulate or modify batteries.
15. Store unused batteries in their original packaging away from metallic objects. If already removed from the packaging, do not mix or mix the batteries.
16. If you intend not to use the device for an extended period of time, remove the batteries.
17. Clean the battery contacts and those of the device before inserting the batteries.
18. In the event of battery leaks, avoid any contact with the leaked material; in case of contact, rinse the affected area with water and consult a doctor.

How To Use

Parts Description:

1. Plastic cover for top water tank
2. Control panel
3. Louvre for adjusting vertical wind (by hand)
4. Louvre for adjusting horizontal wind (inside)
5. Air outlet
6. Display window for water level
7. Wheels

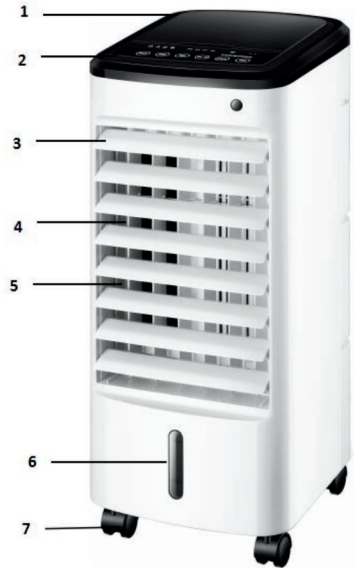


How to use:

1. Remove the appliance from the gift box and place it on a flat, stable surface, leaving a minimum of 10cm space around the unit.
2. Insert the four provided wheels into the bottom of the unit.
3. Plug the appliance into a 220-240V~ 50Hz power socket to activate standby mode.
4. Fill the water tank by rotating the lock lever to release it. Pull out the tank and add water, ensuring it is above the minimum level but below the maximum level indicator. Caution: Avoid overfilling to prevent permanent damage.
5. To enhance cooling, fill the Ice Bottles, replace the top, and freeze them in the freezer. Once frozen, place one ice bottle into the water tank to cool the water further.
6. Two ice bottles are supplied; use one in the top water tank while the other freezes. Swap them when the one in the water tank has defrosted.
7. The Ice box stores cool and absorbs heat from the water, lowering its temperature. Combined with frozen ice boxes, the air cooler can blow cooler wind.
8. Operate the appliance by pressing the button on the control panel or using the supplied remote control.

Note: Place the ice boxes gently to avoid any potential damage to the water recycling cooling system.

How To Use

Control Panel/ Remote control

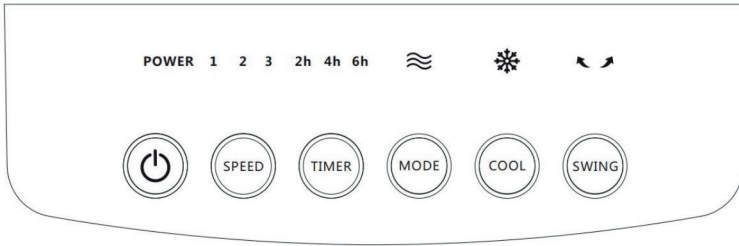

Power

Press the ON/OFF button to start the appliance; press it again to turn the appliance off.

Speed

While the appliance is operational, press the SPEED button to cycle through Low-Medium-High fan speeds. The corresponding fan speed indicator light will illuminate.

Timer

This appliance features a 12-hour timer. Press the TIMER button to set intervals of 2, 4, 6, 8, 10 (2+6), and 12 (2+4+6) hours. The light of the chosen time setting will be illuminated, and the appliance will automatically stop when the set time elapses.

Mode

Press the MODE button to choose between two wind modes: normal and natural mode.

Cool

After selecting the desired fan speed, press the COOL button to activate water circulation, initiating the cooling, humidifying, and air-purifying processes.

SWING

Press the SWING button to enable automatic oscillation for widespread air distribution. Press the SWING button again to stop the oscillation feature.

Note:

- You can operate the fan by remote control and control panel.
- The remote control uses 2x AAA batteries (not included).
- The remote control must be pointed toward the receiver on the unit
- Remove the battery during prolonged periods of inactivity.

Cleaning & Care

This appliance requires little maintenance and contains no user-serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

Cleaning

Before cleaning, turn off the unit and unplug it from the electrical outlet.

Cleaning the Unit

1. Before cleaning, power off and unplug the unit.
2. Wipe the unit housing with a neutral cleaner and a damp, soft cloth.
3. Use a dry cloth to ensure the unit is fully dry before use.

Water Tank Maintenance

1. Rotate the lock lever of the water tank to a horizontal position.
2. Gently extract the water tank.
3. Tilt the unit at various angles to ensure thorough water drainage.
4. After draining, carefully reinsert the water tank.
5. Rotate the lock lever of the water tank back to a vertical position.
6. Be cautious not to tilt the unit when it is full of water.



Cooling Pad Maintenance

1. Remove the cooling pad from the rear cover.
2. Wash the cooling pad in clean, fresh water, and delicately remove any debris using a soft brush.
3. Thoroughly dry the cooling pad before replacing it inside the rear cover.
4. Ensure the cooling pad is correctly oriented.
5. Replace the filter assembly into the rear of the unit.

Storage

1. Always store the unit in a dry place.
2. Never store the unit while it is still plugged in.
3. If the unit will not be used for an extended period, drain the condensate water.
4. Never wrap the cord tightly around the unit, and do not put any stress on the cord - This could cause the cord to fray and break.
5. In case of prolonged non-use, ensure to drain the condensate water from the unit.

Disposing Of The Product

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

Correct Disposal Of This Product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:

Please have your Model No. available. This can be found on the front cover of this manual and on the products rating label.

We're here to help!



01274 752624



customerservice@rediffusion.uk



www.rediffusion.uk

Happy with your new product?

We would love to hear your suggestions and feedback about your experience.



Guarantee & Warranty



Register your purchase

www.rediffusion.uk/pages/register-my-warranty

Scan QR code using mobile device



To make a warranty claim, do not return this appliance to the store.

Please call 01274 752624 or email customerservice@rediffusion.uk. For faster service, locate the model number on the rating label on your appliance. Alternatively, please scan the QR code above to be directed to our warranty registration page.

This product is covered by a 2 year warranty, please read the guarantee and service carefully and keep for future use.

Please Note: To maintain the validity of the warranty, it is imperative to register it within the initial 30 days of purchase. Any registration made beyond this time frame will result in the warranty being deemed void.

This warranty is valid for products purchased and used in the UK and serves as the sole express warranty for the product, replacing any other warranty or condition. The product is guaranteed to be free from defects in material and workmanship for a specified period from the original purchase date. The warranty covers the repair or replacement of defective components, with the responsibility for return shipping costs falling on the customer. If the original product or component is unavailable, a replacement of equal or greater value will be provided.

Exclusions to this warranty include glass, filters, normal wear, improper use, accidents, alterations, abuse, or misuse. The warranty is applicable only to the original consumer purchaser or gift recipient, requiring proof of purchase for warranty claims. It becomes void if the product is used for purposes other than single-family household use or operated outside specified voltage and waveform requirements. The warranty disclaims all claims for special, incidental, and consequential damages, limiting liability to the purchase price. Every implied warranty, except where prohibited by law, is disclaimed, and any statutory warranty or condition is limited to the duration of this written warranty.



Capture, tag, and win with
#Rediffusionfamily



@Rediffusionuk

Tag us with **#Rediffusionfamily** on social media. We love seeing your amazing home transformations so much that we regularly feature our favourites and even host exclusive giveaways to show our online family some extra love!

Rediffusion

Belfry House, Roydsdale Way,
Bradford, BD4 6SU
01274 752624
www.rediffusion.uk

Illustrations may differ from actual product. We are consistently striving to improve our products, therefore all specifications contained herein are subject to change without notice.