

Care and Maintenance Guide



Microwave Safe: Our product is microwave safe. You can heat up food directly in your pottery without concerns.



Oven Safe: It can be used in the oven up to 480 degrees Fahrenheit. Always place the pottery into a cold oven and allow it to heat up with the oven to prevent thermal shock.



Dishwasher Safe: It is dishwasher safe. Use your normal dishwasher settings without worry.



Freezer Safe: You can store our product in the freezer. Make sure the pottery is at room temperature before placing it in the freezer to avoid thermal shock.



To prevent cracking, do not subject your pottery to sudden temperature changes (e.g., from freezer directly to oven).



Cleaning: For stubborn stains, soak in warm, soapy water before cleaning. There's no need for abrasive cleaners or pads that can scratch the surface.



Use: While extremely durable, our product can chip if knocked or dropped. Handle with care, especially around harder surfaces.



Storage: When stacking your pottery, it's wise to place a soft cloth or napkin between pieces to prevent scratching.



Follow these simple care instructions to keep your product a stunning and functional treasure in your home for years to come.