 


ASSEMBLY INSTRUCTION

48" TV Stand

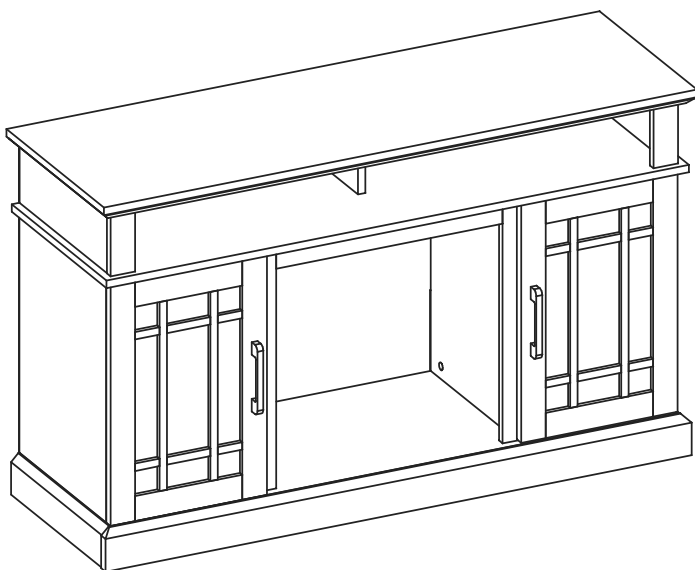 


THIS INSTRUCTION BOOKLET IS IMPORTANT. PLEASE READ CAREFULLY.
AND KEEP FOR FUTURE REFERENCE.




Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

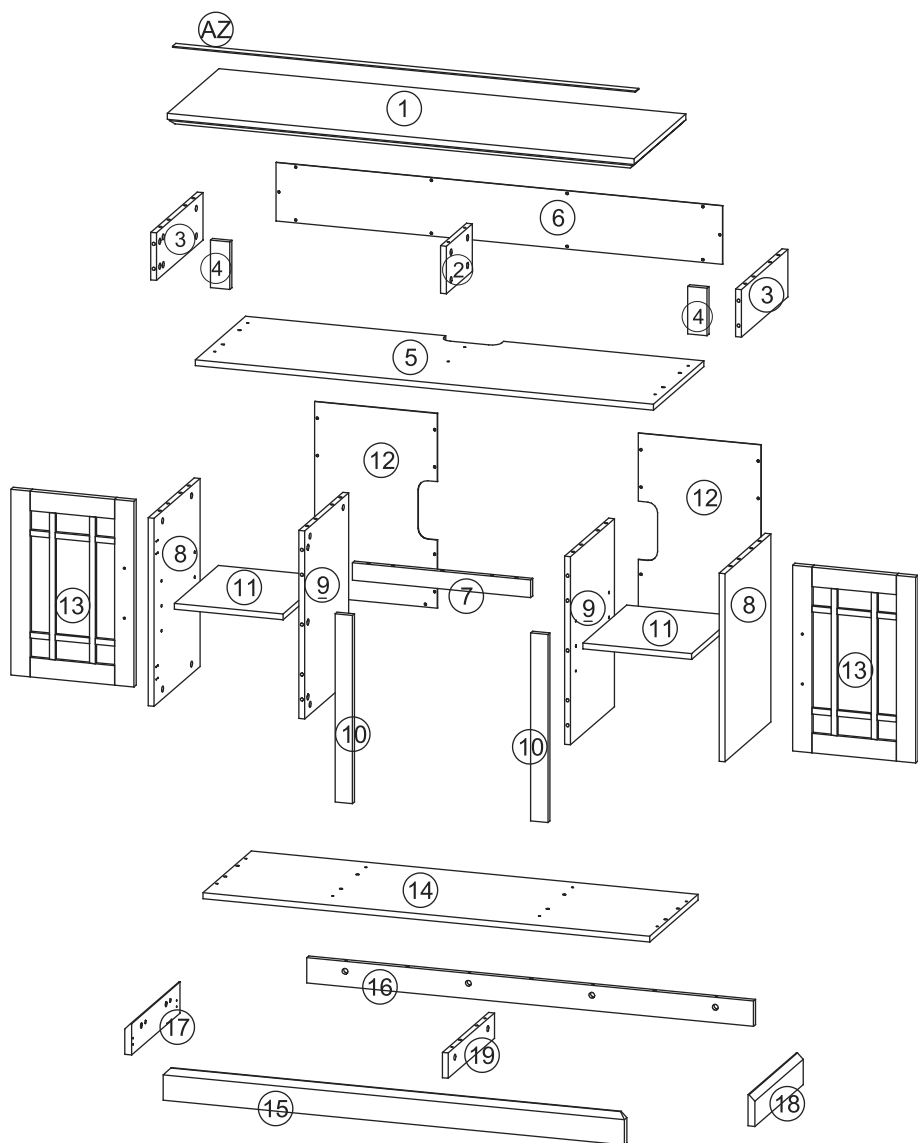


PACKAGE CONTENT (A)		
CODE	DESCRIPTION	QTY
1	Countertop Board	1
2	Middle Partition	1
3	Upper Lateral Plate	2
4	Top Vertical	2
5	Laminate	1
6	Upper Back Panel	1
7	Middle Rung	1
8	Side Plate	2
9	Middle Side Plate	2
10	Middle Front Block	2
11	Movable Shelf	2
12	Side Backplane	2
13	Door Plank	2
14	Bottom Board	1
15	Bottom Front Plank	1
16	Bottom Back Plank	1
17	Bottom Side Plate	1
18	Bottom Right Plate	1
19	Bottom Middle Partition	1

 

(A) x47



 
(B) x35
Ø8x30mm




(C) x47
Ø15



 (D) x2



 
(E) x4
Ø5/32"×22mm



(F) x4



 
Silvery
(G) x24
Ø3.9×15mm



(H) x8



 
(I) x30
Ø3.5x16mm

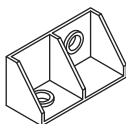

(J) x8
58*29*29



 
(K) x16
Ø1/4"×15mm



(L) x2



 (M) x4
Ø2.9x12mm



(N) x6
32*19*19mm



Black
(O) x24
Ø3.9×15mm



(P) x24

(Q)



x2

 


x4

(R)




x2




x2

 (AZ)




x1

 
STEP 1

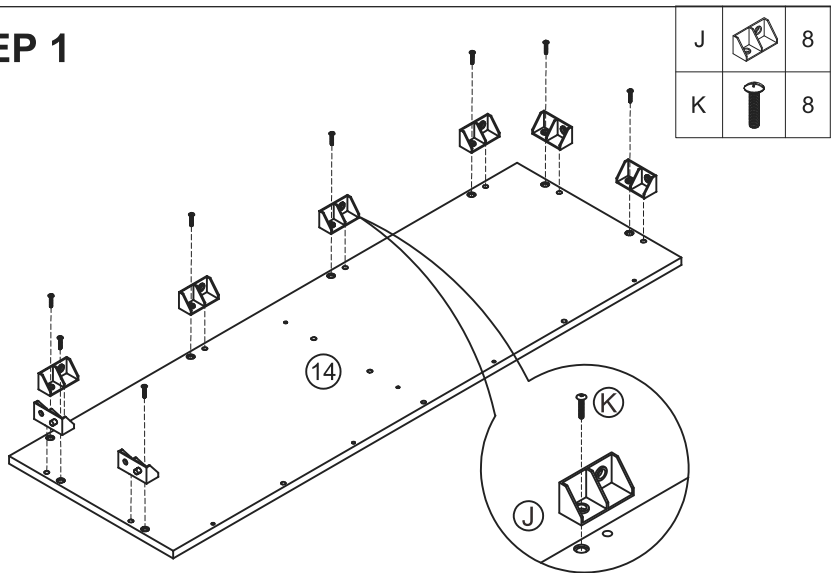

 
STEP 2

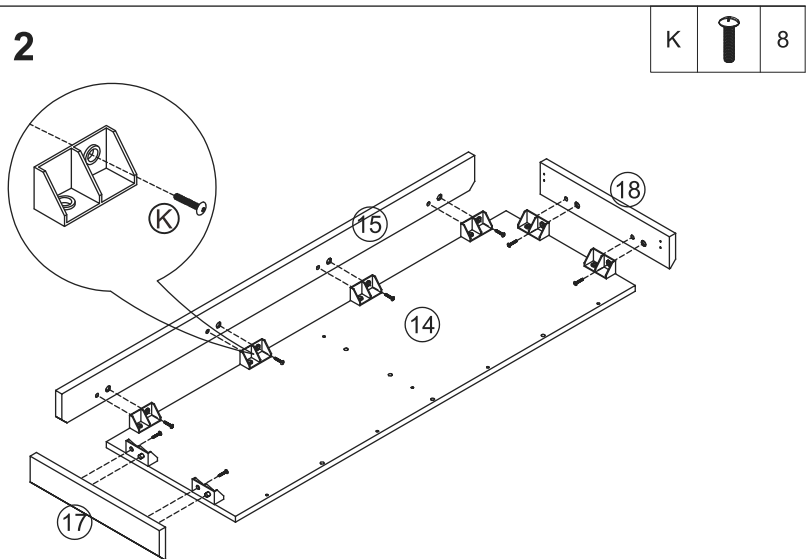

 STEP 3

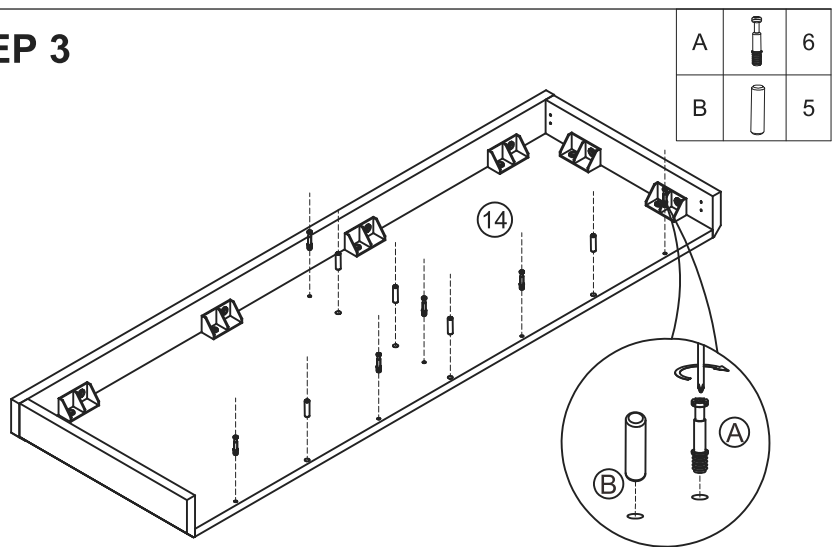


 STEP 4

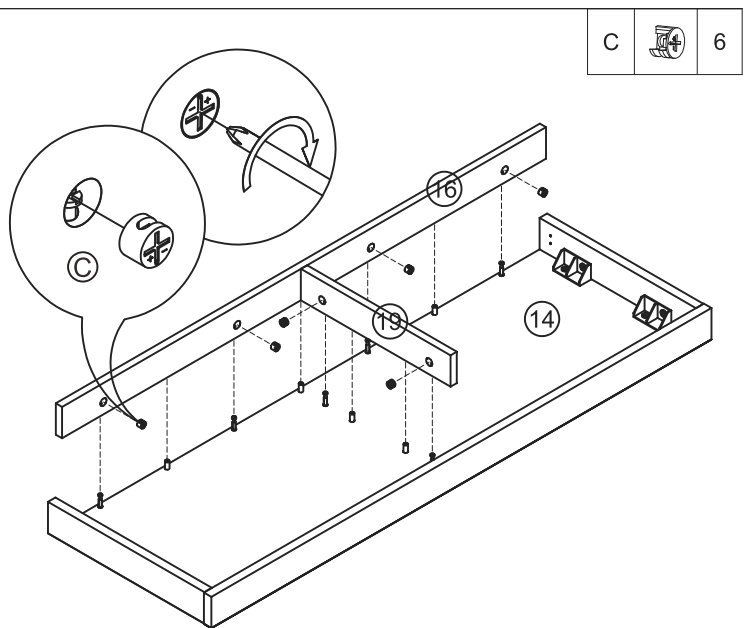


STEP 5

N		6
O		24

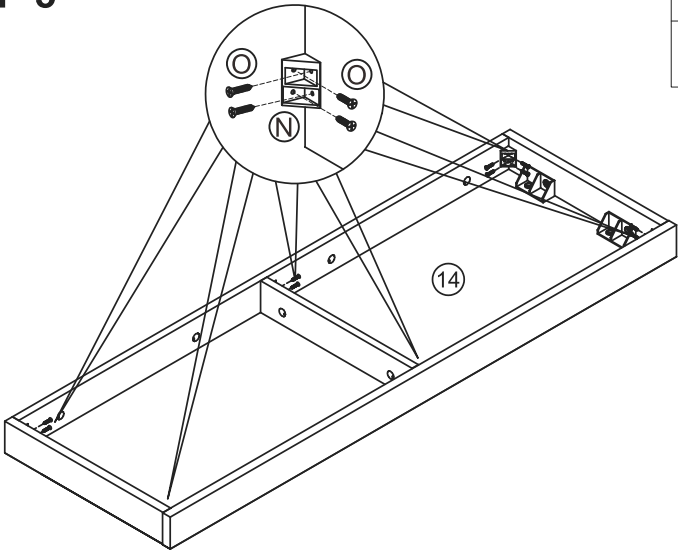 


STEP 6

A		8
B		8

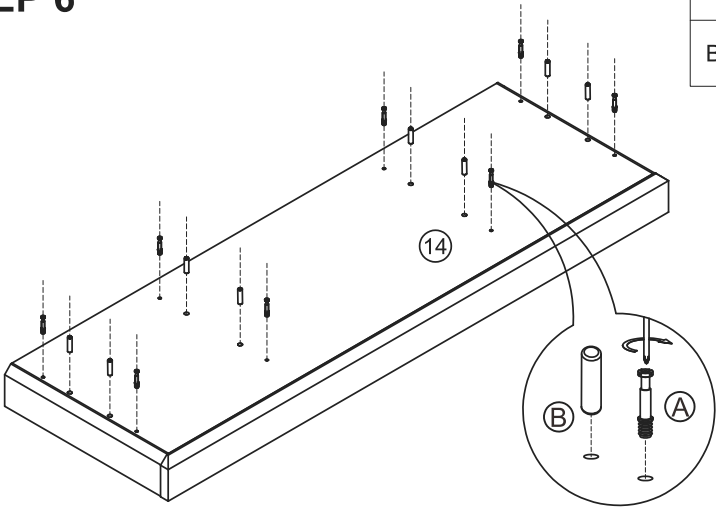 


STEP 7

A		6
B		4

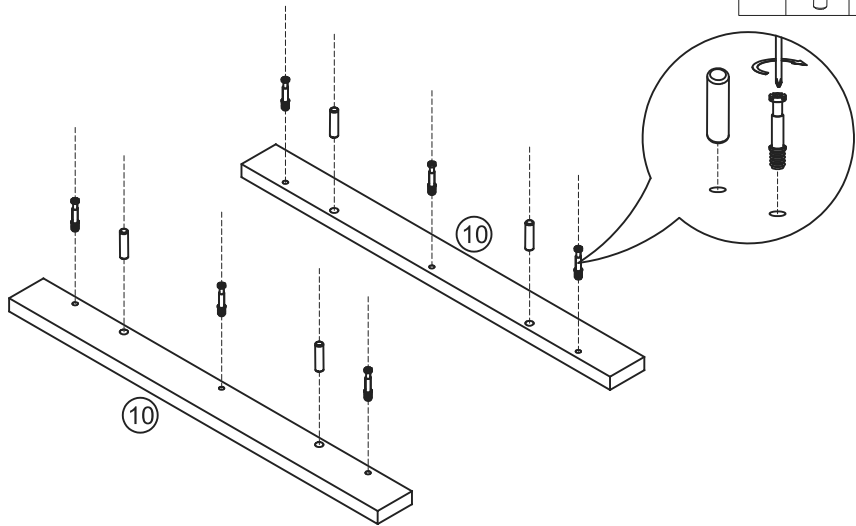 


STEP 8

C		6
---	---	---

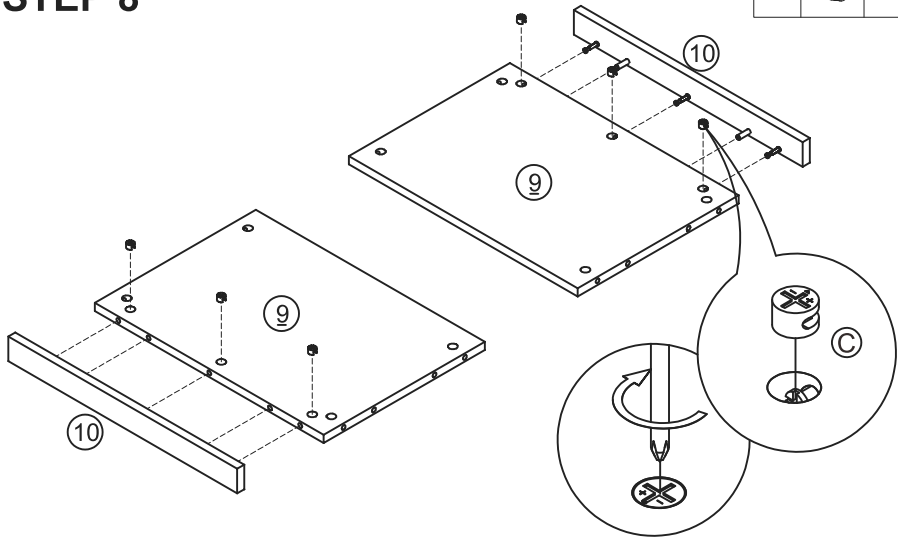 


STEP 9

C		8
---	--	---

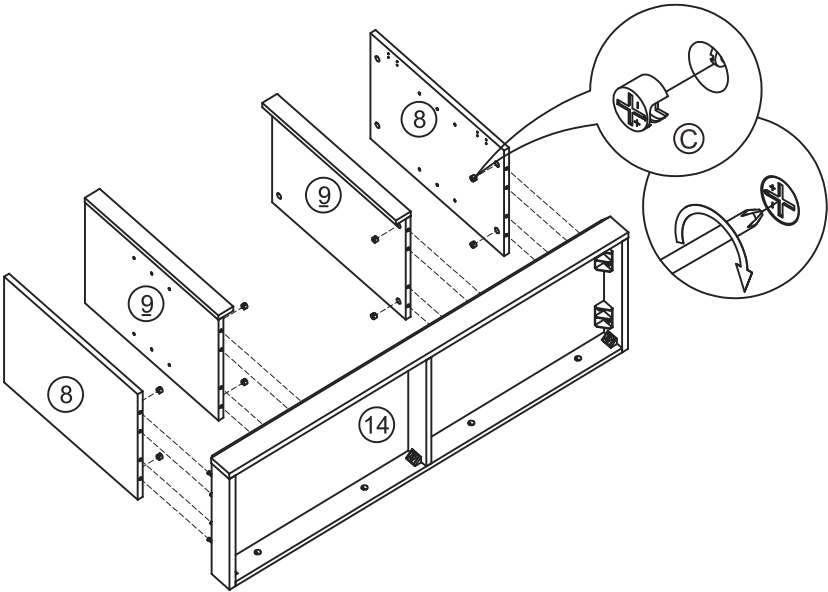 


STEP 10

A		11
---	---	----

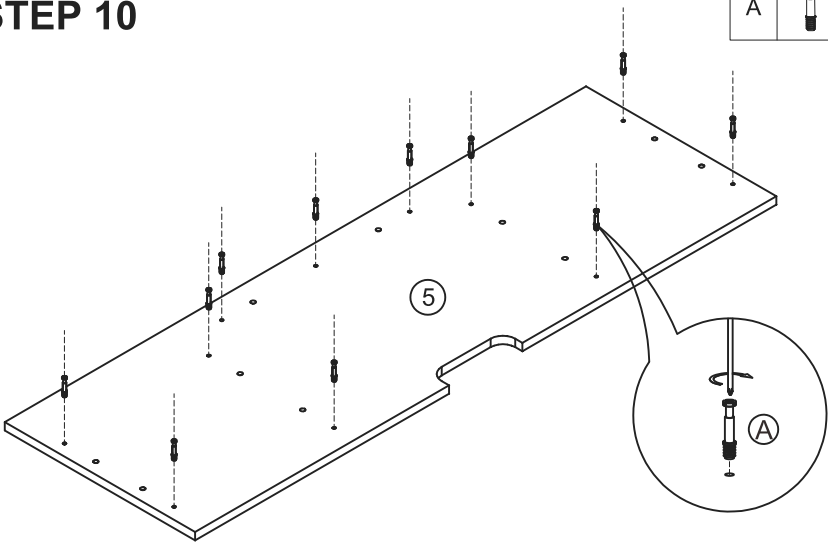 


STEP 11

B		2
C		3

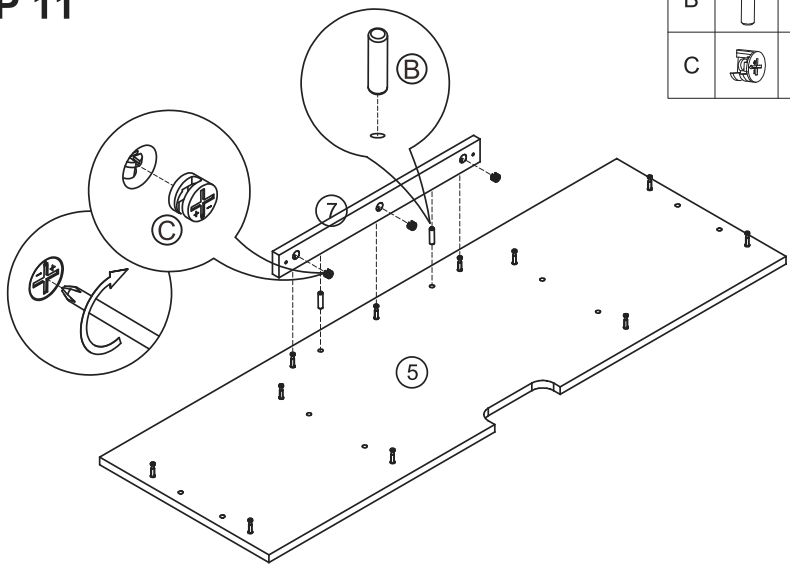 


STEP 12

B		8
C		8

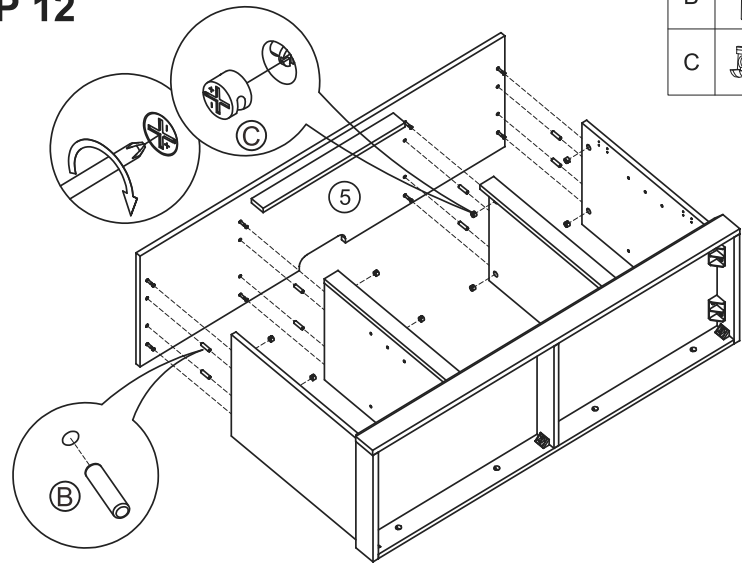 


STEP 13

M		4
L		2

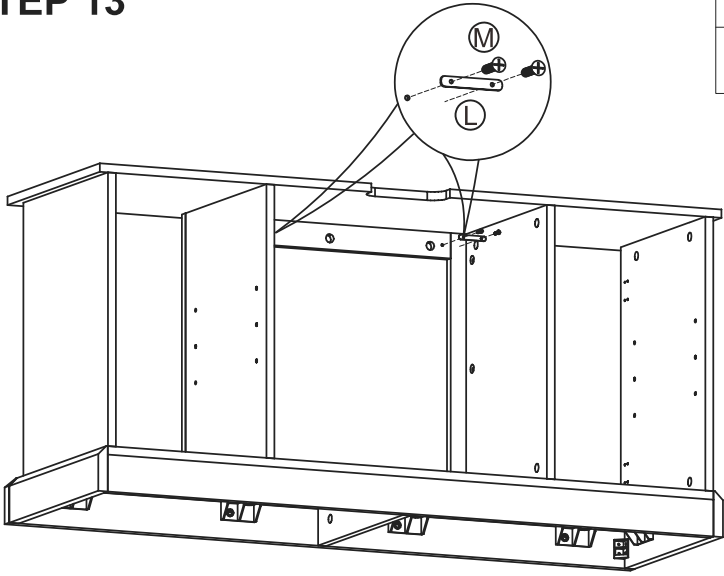 


STEP 14


A		4
C		4

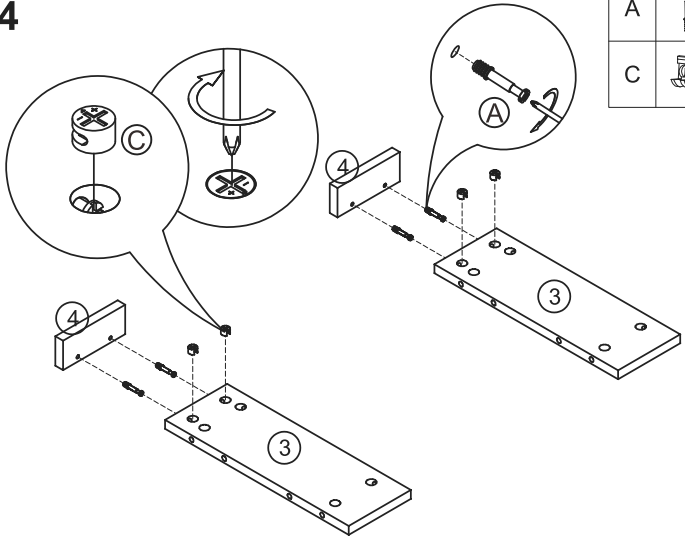 

 STEP 15

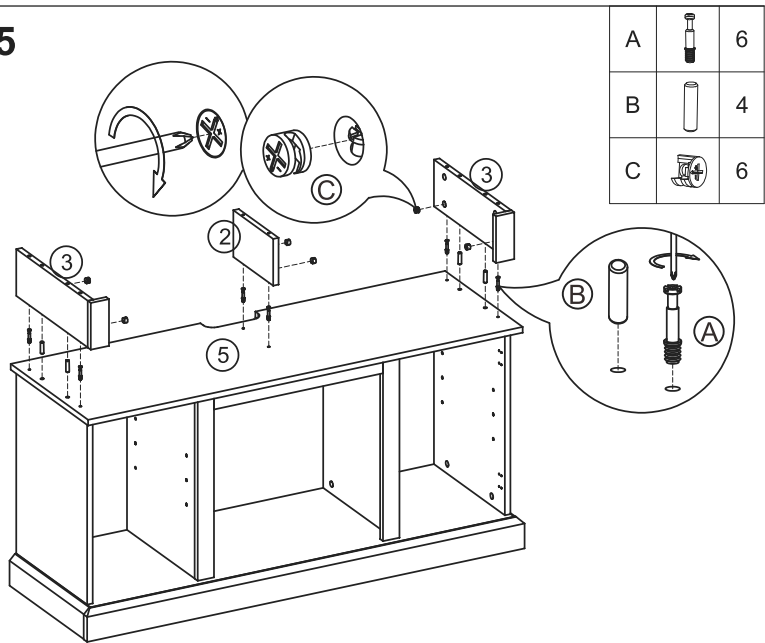


 STEP 16

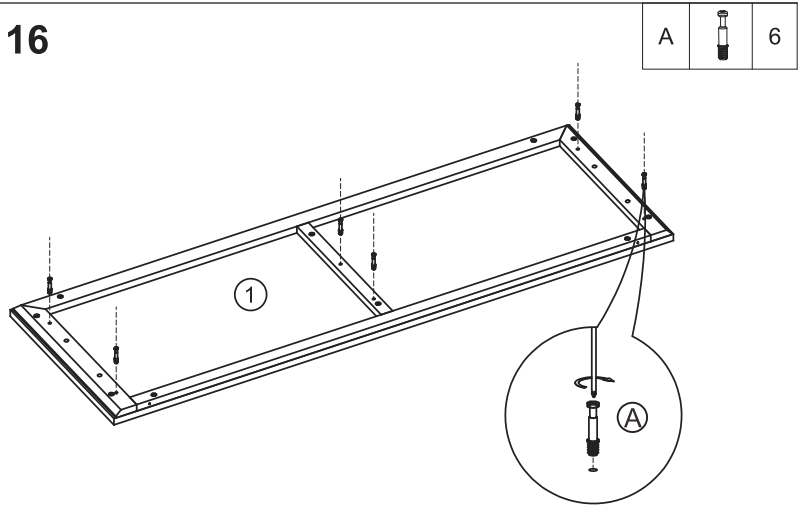


STEP 17

B		4
C		6

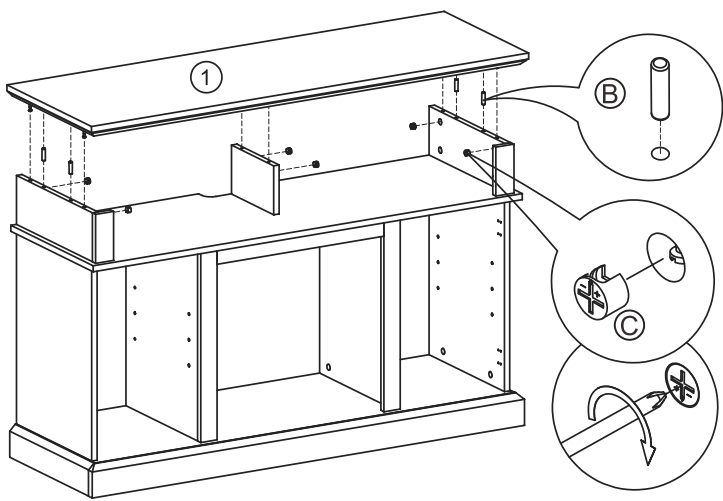 


STEP 18

H		8
P		24

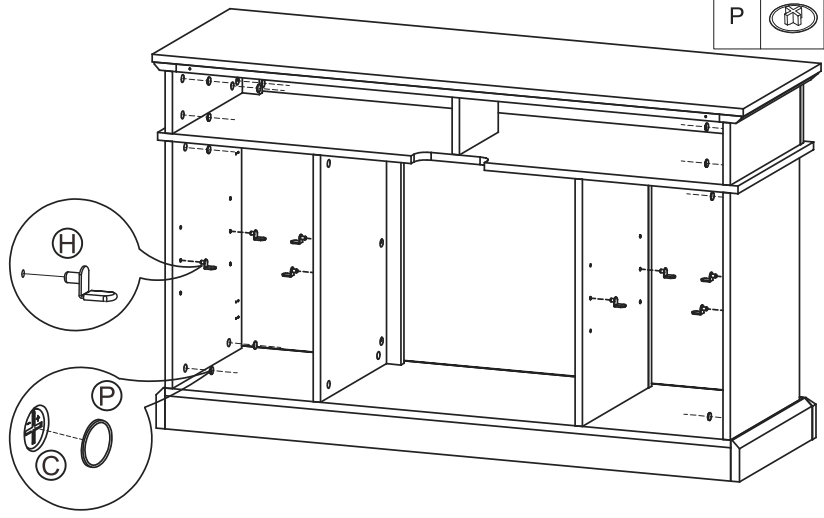 


Each cam lock (C) is equipped with a cover (P).

 STEP 19

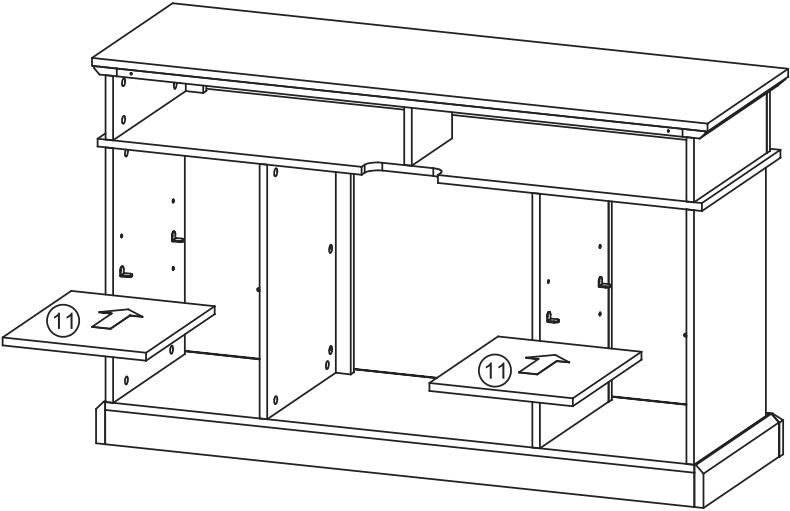


STEP 20

I		28
---	---	----

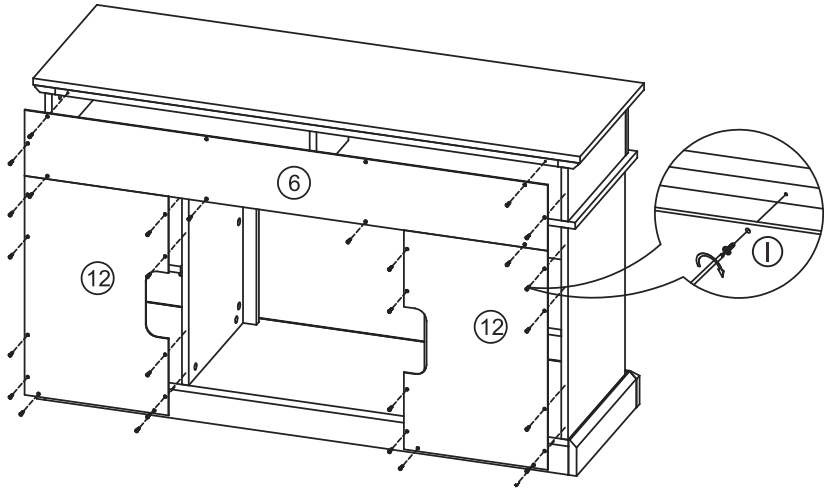 



STEP 21

D		2
E		4
G		8
F		4

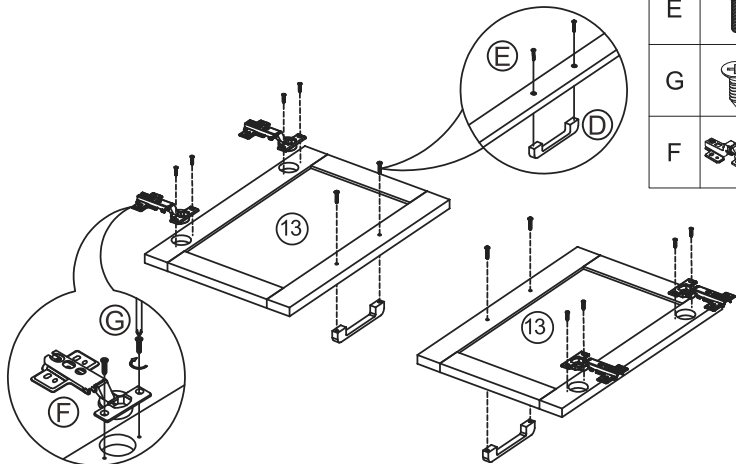 

STEP 22


G		16
---	---	----

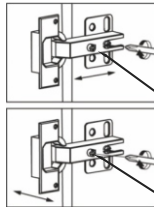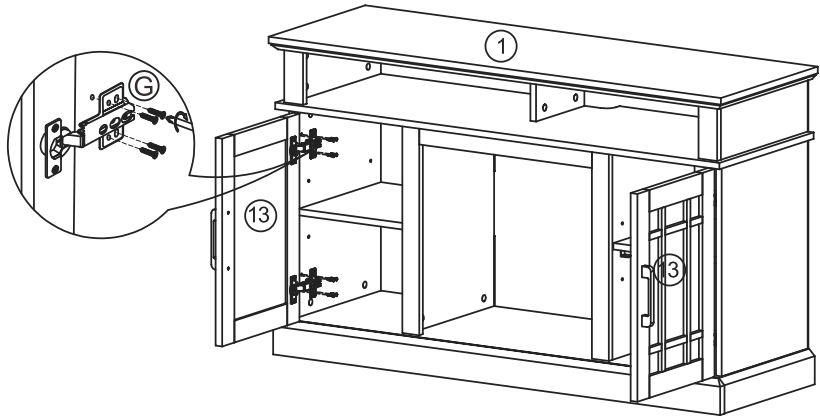  


Unscrew here for the depth adjustment of the door, then retighten.

Rotate here for the horizontal adjustment of the door.

 
STEP 23

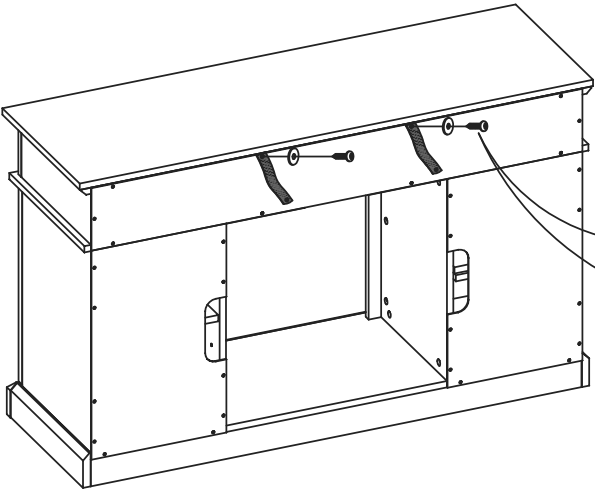




Q		2
I		2
Q		2

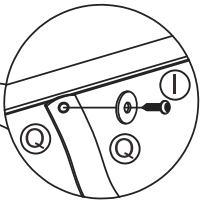 

 STEP 24

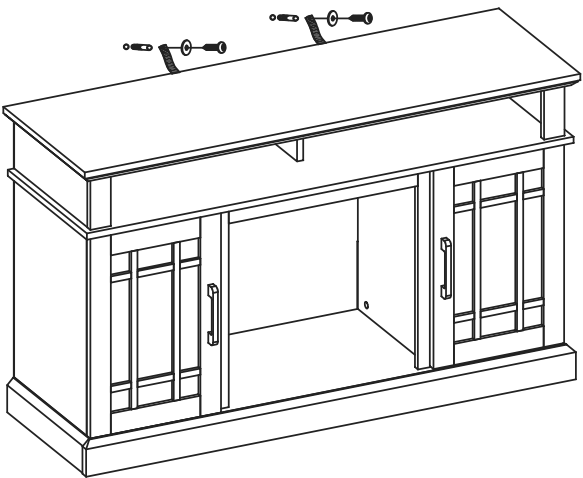

R		2
Q		2

   

STEP 25

AZ		1
----	--	---

